



SUBRTEX HOUSEWARE INC  
9935 BEVERLY BLVD UNIT 3 PICO RIVERACA 90660  
CUSTOMERSERVICE@SUBRTEX.COM







[www.subrtex.com](http://www.subrtex.com)

# SUBRTEX®





*Bring the best life to your home*




## PARTS LIST

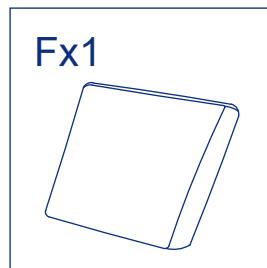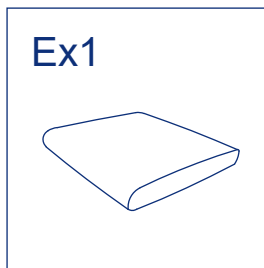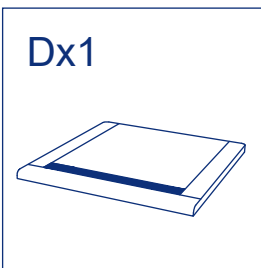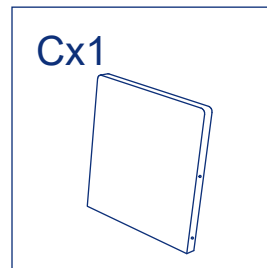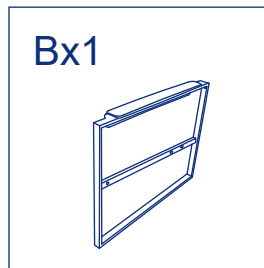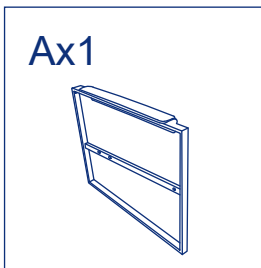


## HARDWARE LIST

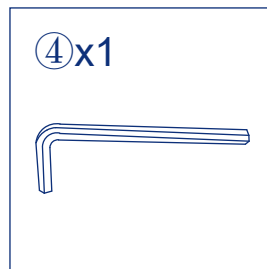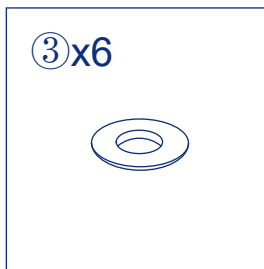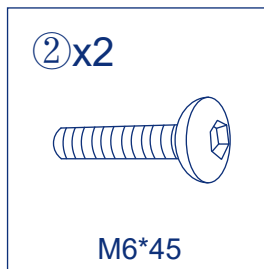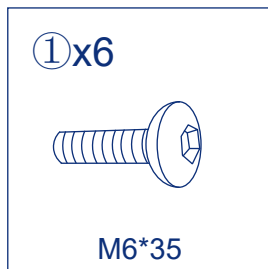

## STEP1

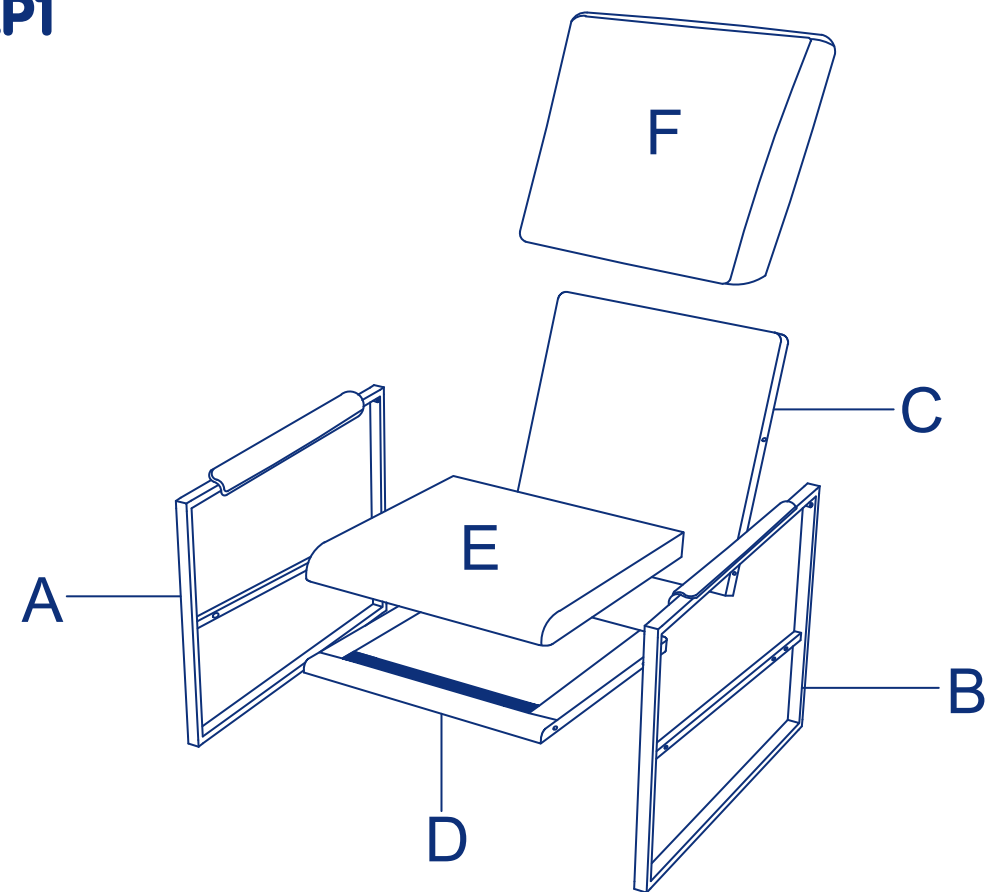


## STEP2

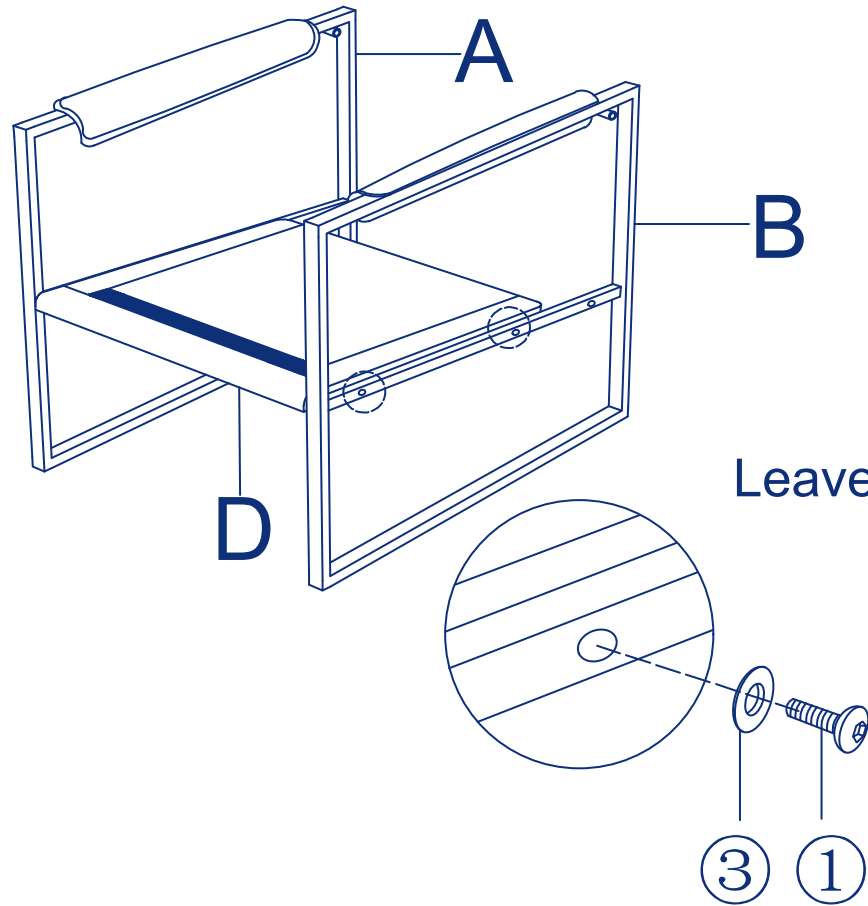


Leave bolts 80% tightened.

## STEP3

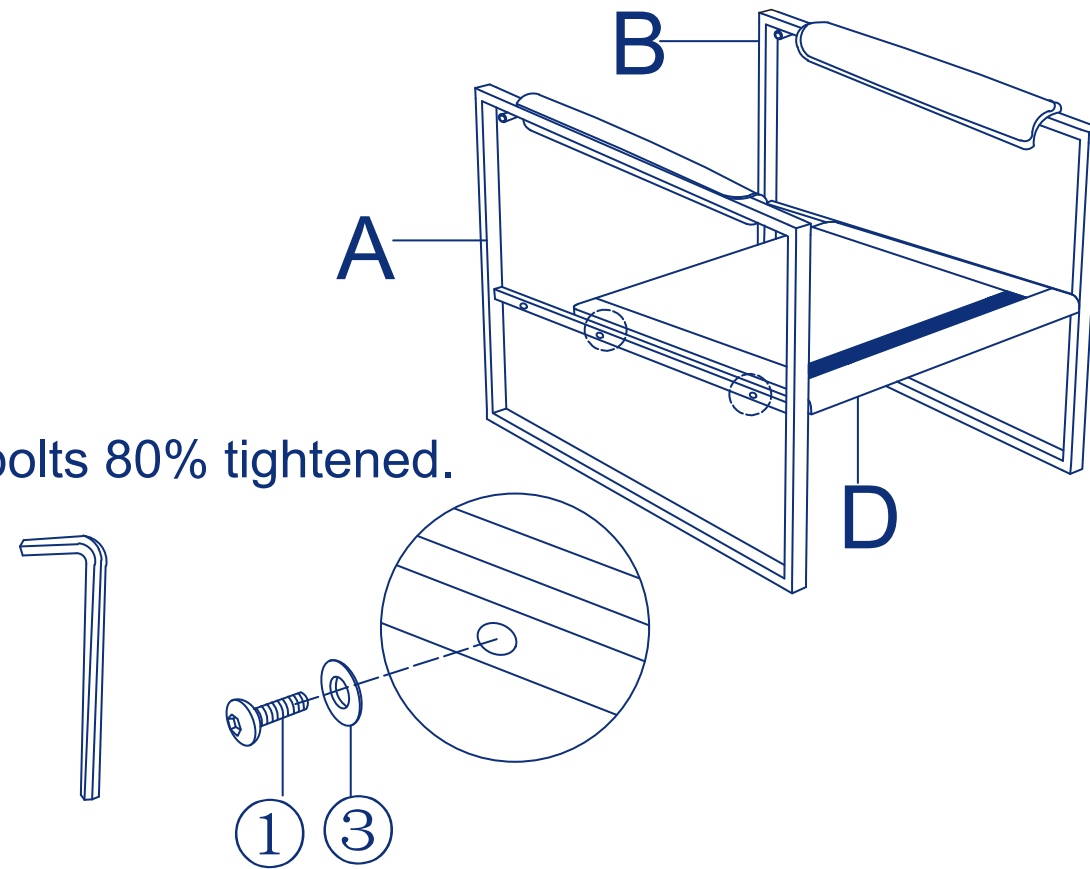


Leave bolts 80% tightened.

## STEP4

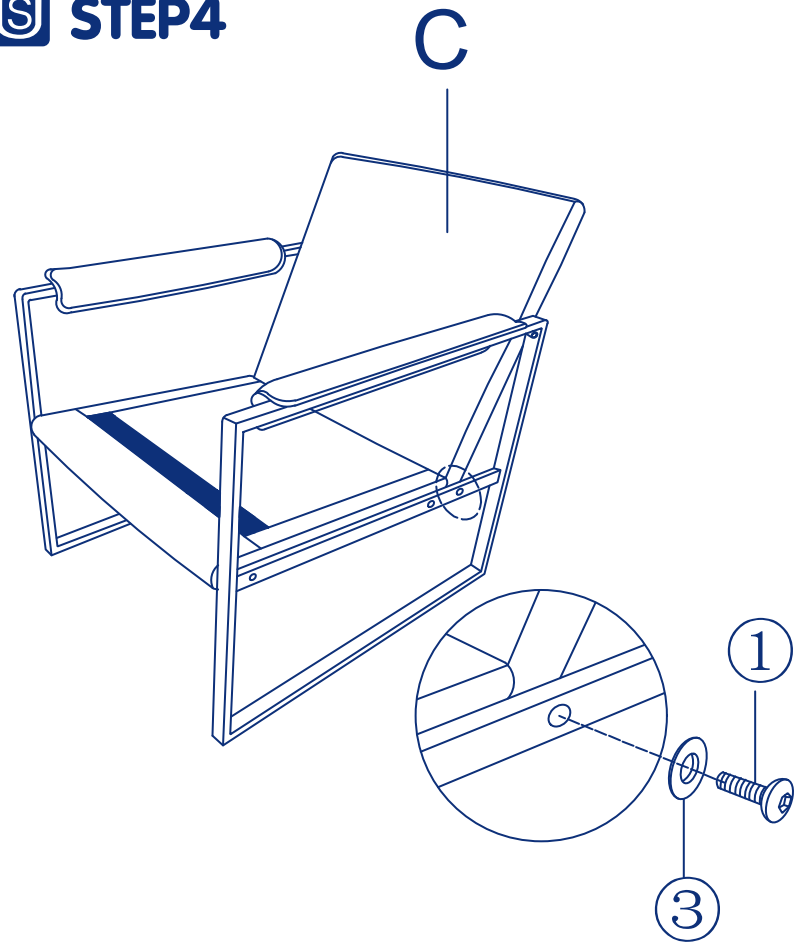

Leave bolts 80% tightened.

## STEP5

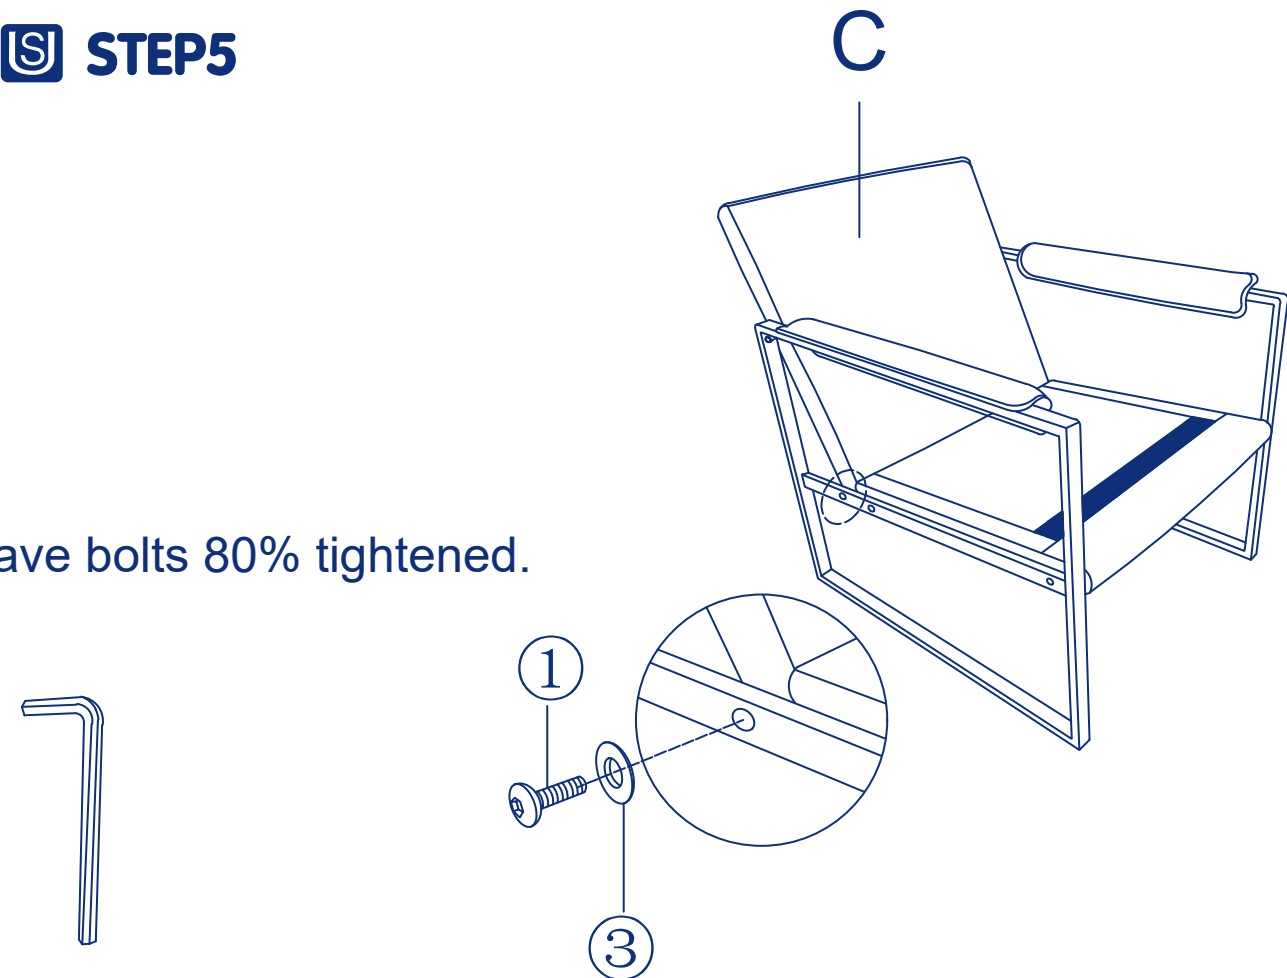

Leave bolts 80% tightened.


## STEP6





Leave bolts 80% tightened.

## STEP7

Leave bolts 80% tightened,  
tighten after all alignment,  
from step 1 to step 7.

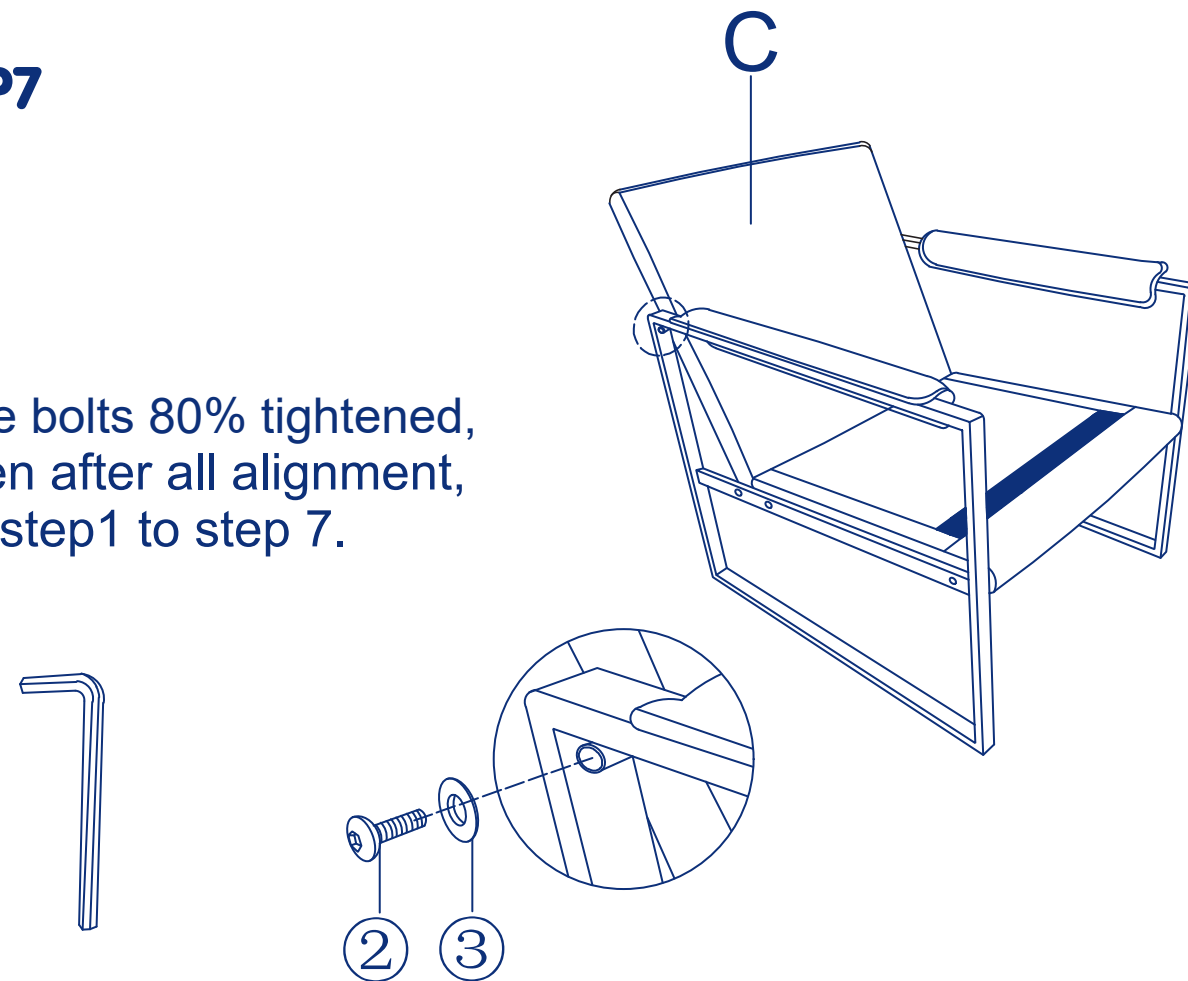

## STEP8

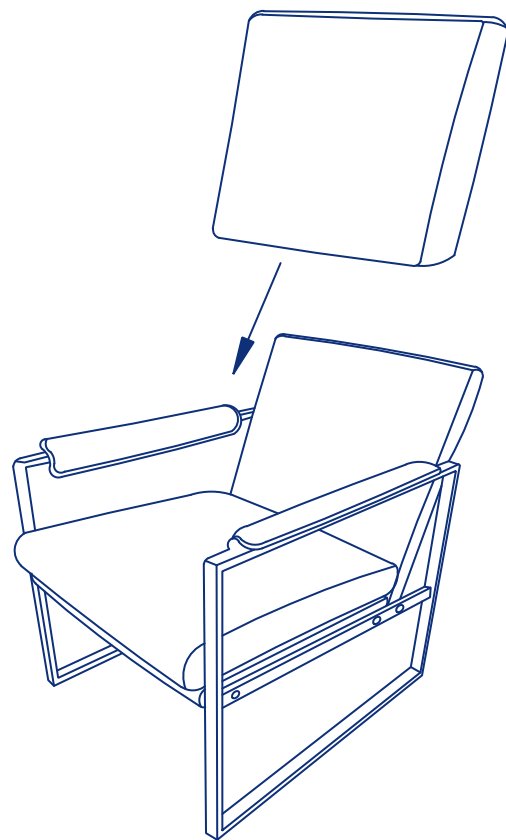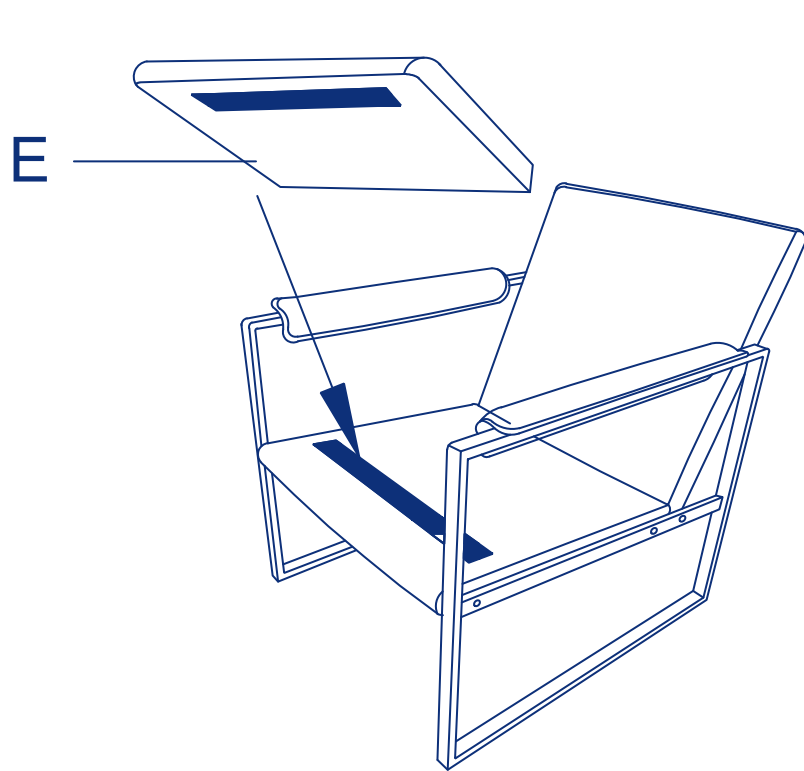

## STEP9

