


Assembly Instruction


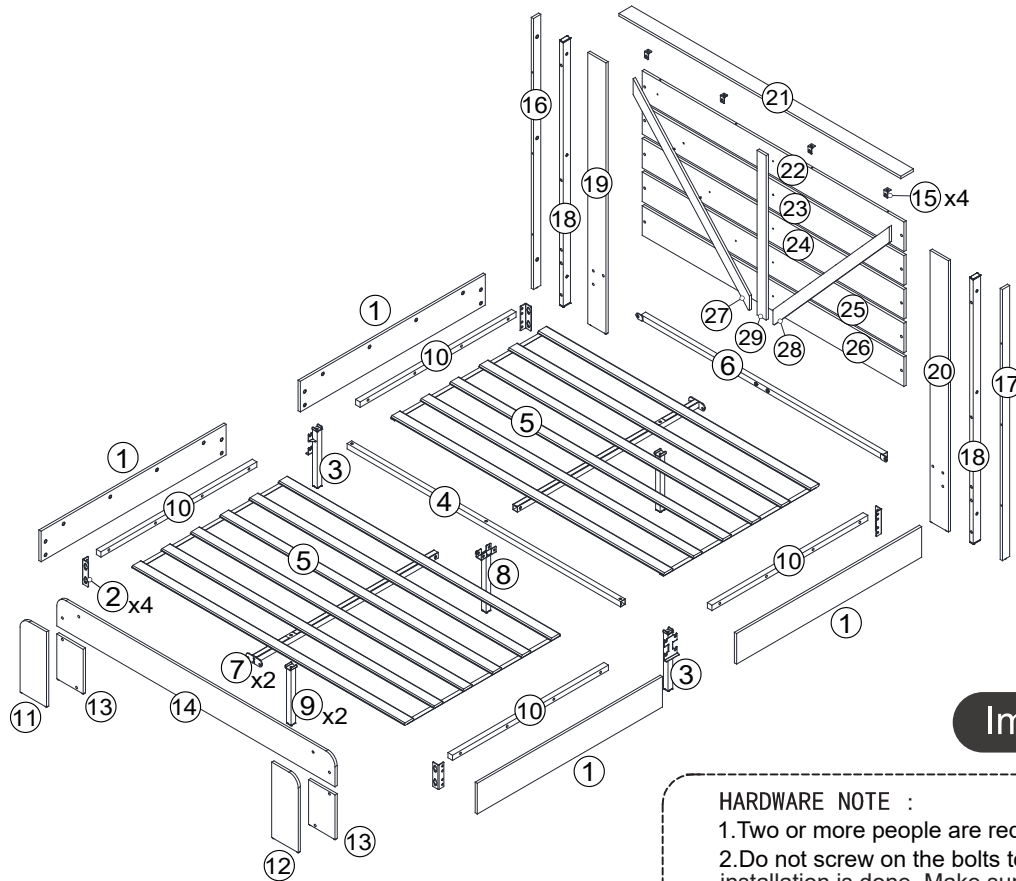






Important Note

HARDWARE NOTE :


1. Two or more people are required for assembly
2. Do not screw on the bolts too tight unless the installation is done. Make sure all bolts are tightly screwed before you use it.

Components

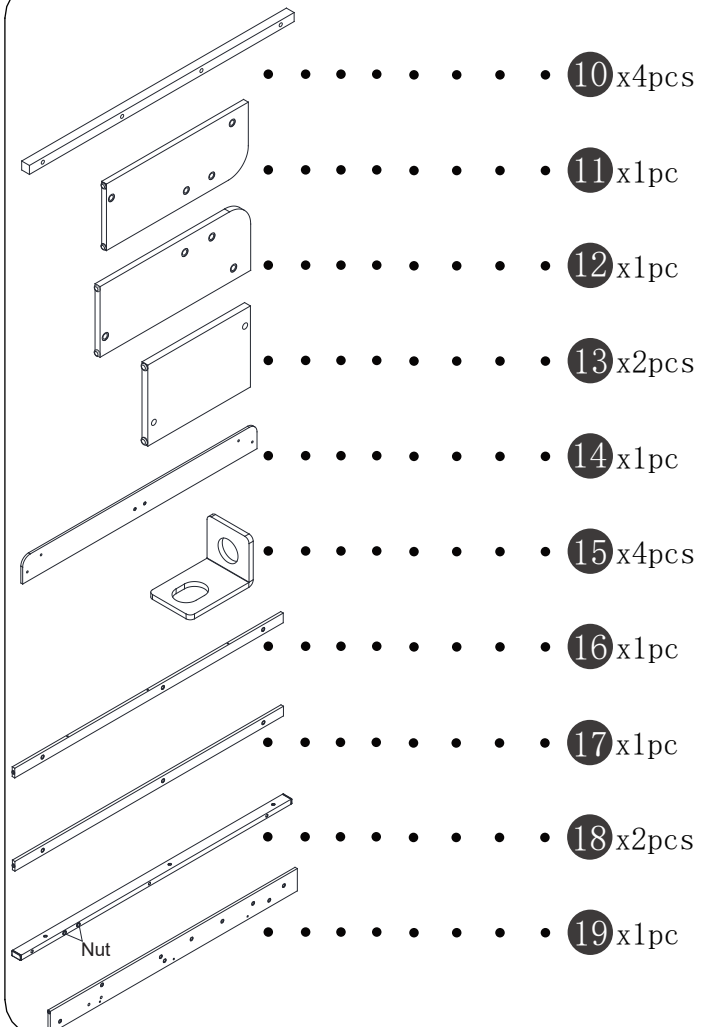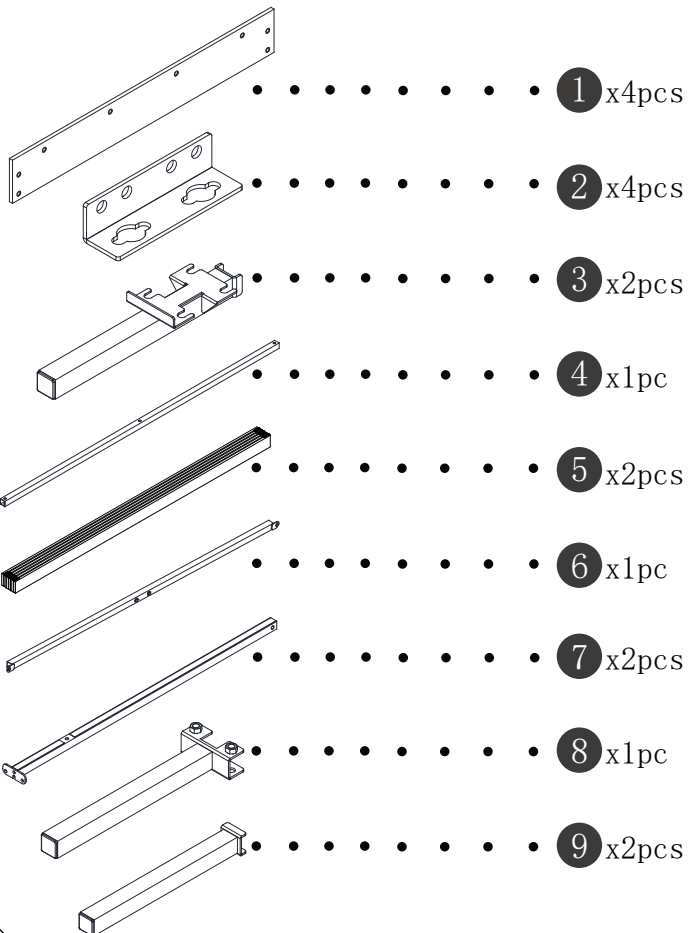

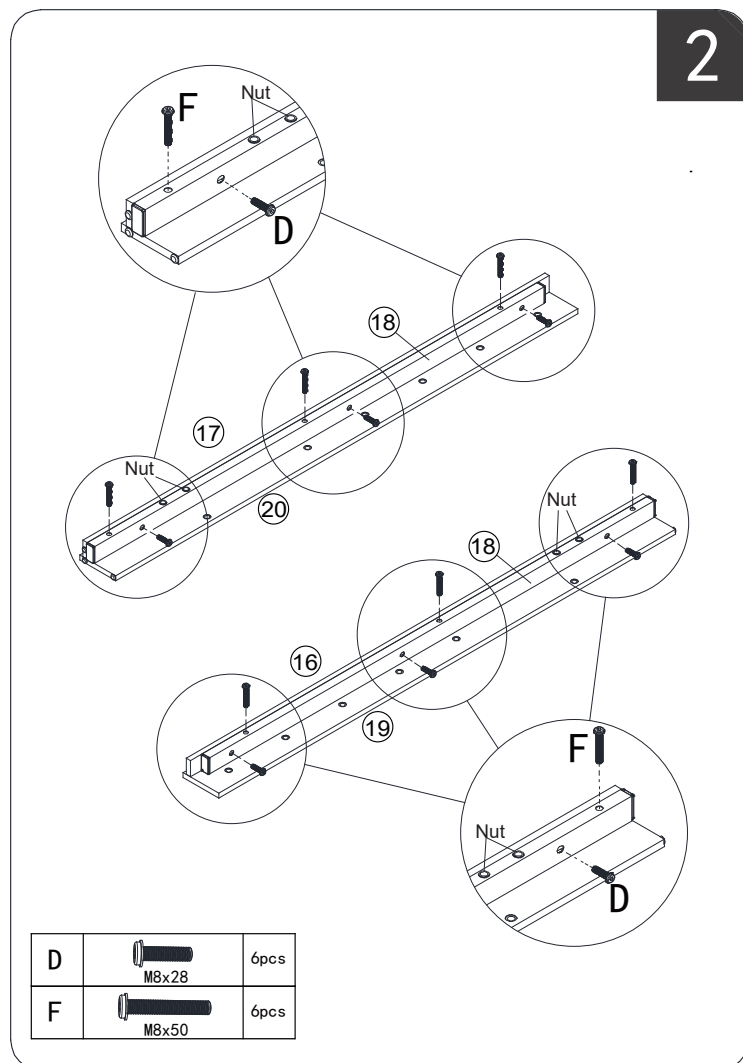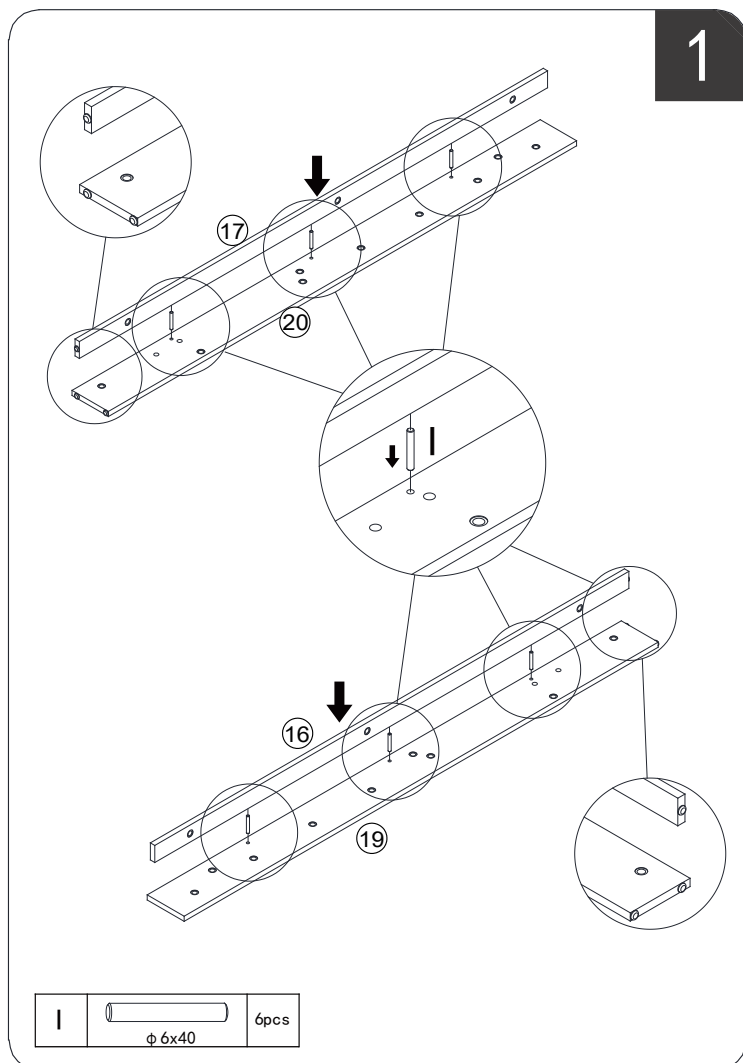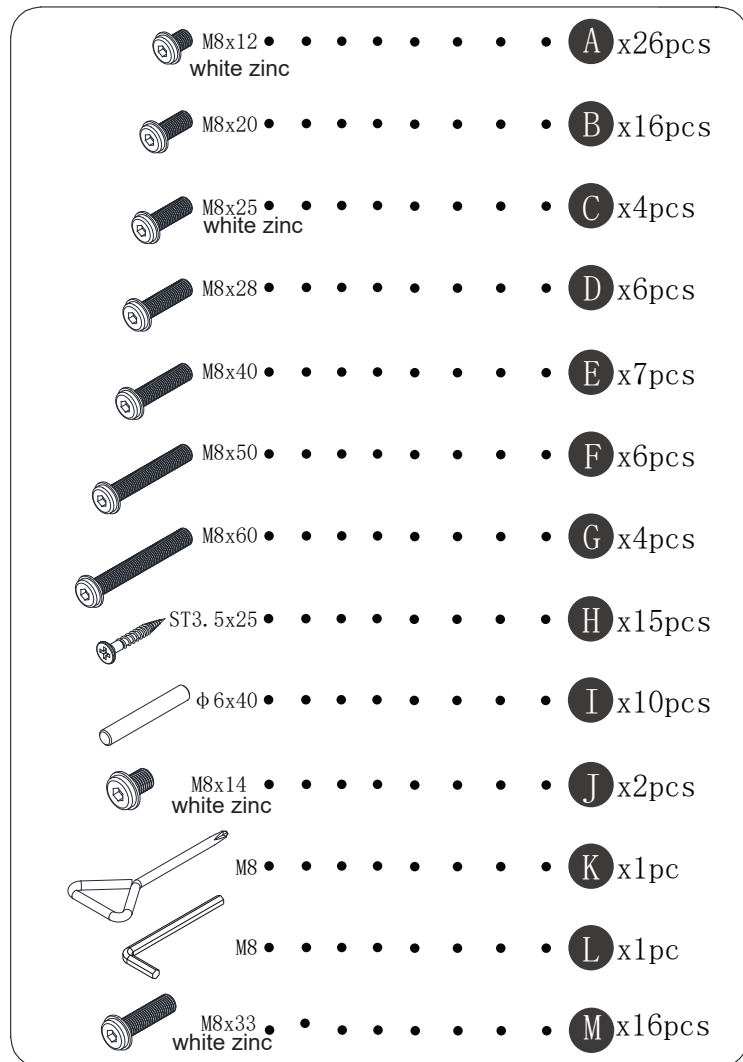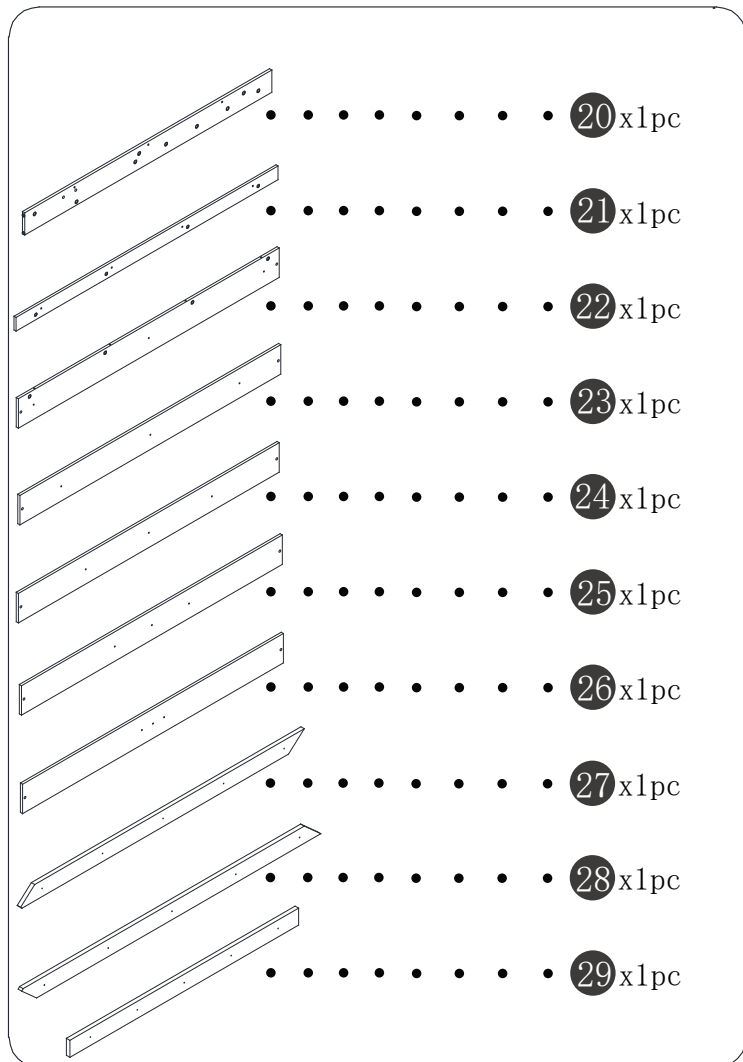


3

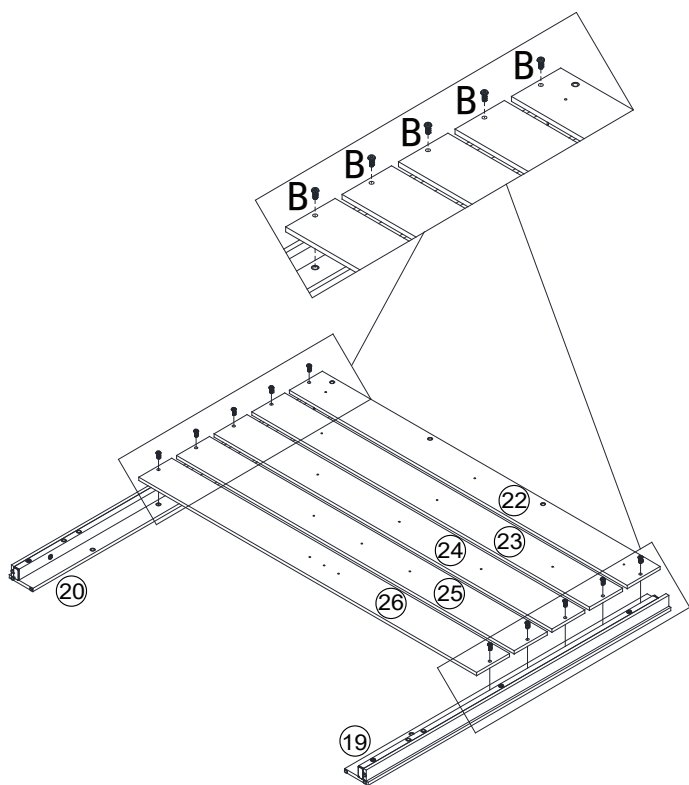

B		10pcs
---	---	-------

M8x20


4

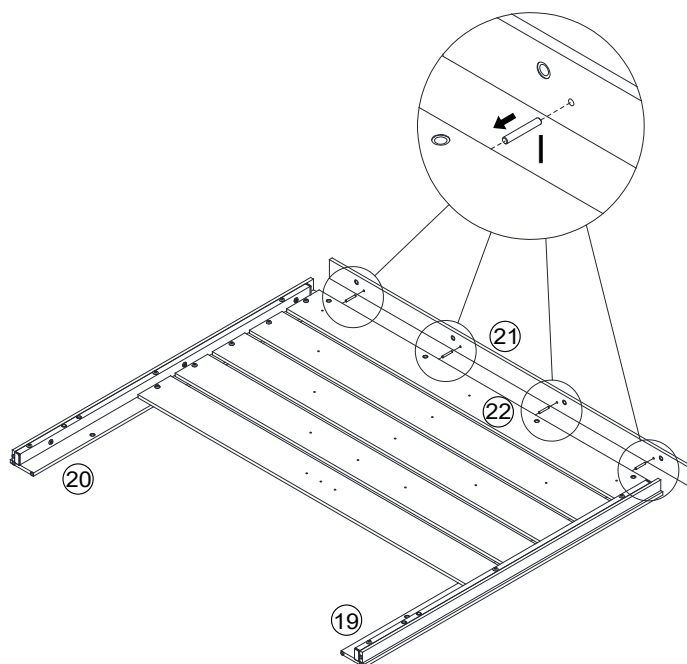

I		4pcs
---	---	------

φ 6x40

5

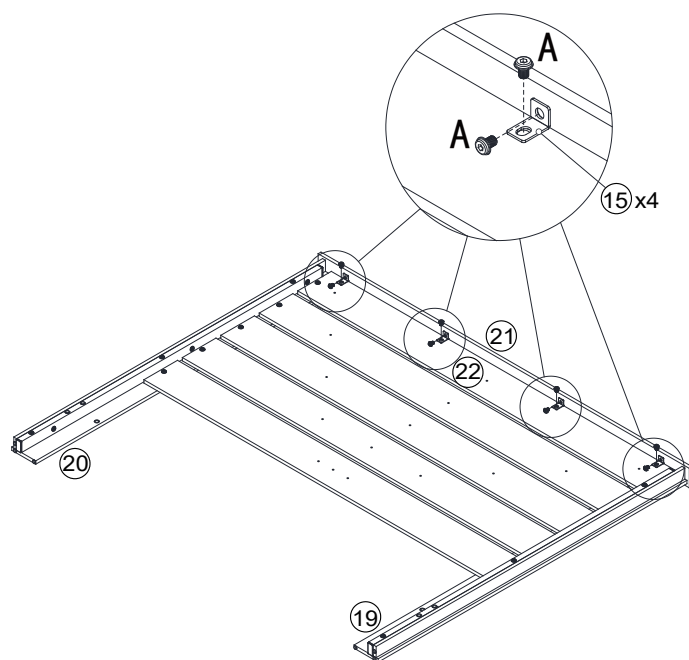


A		8pcs
---	---	------

M8x12

white zinc

6

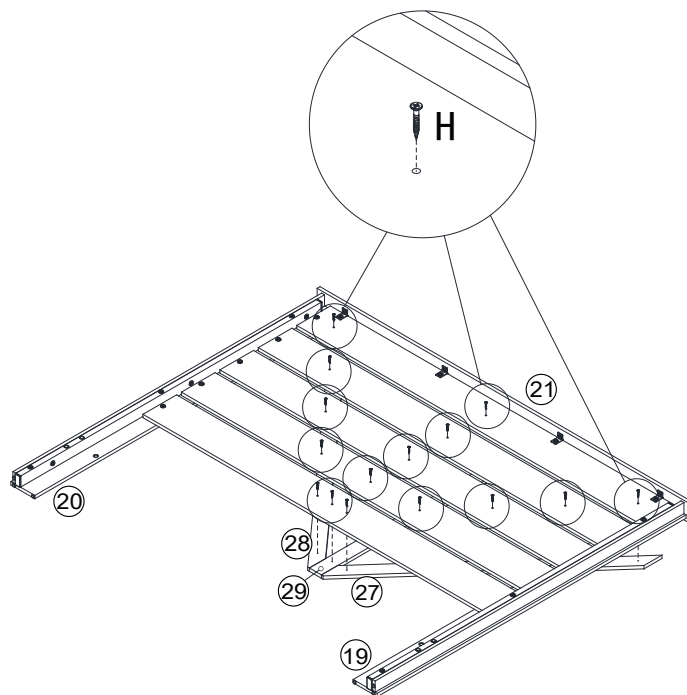


H		15pcs
---	---	-------

ST3. 5x25

Install part 29 first and then part 27 and part 28.


7

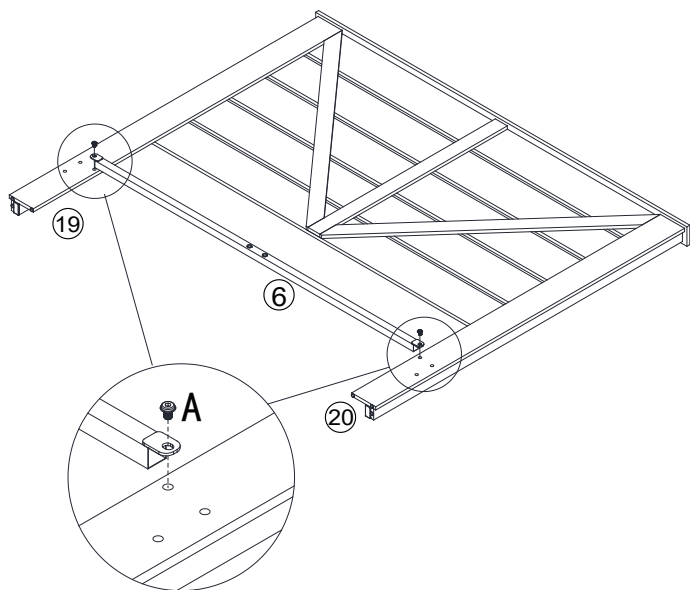

A		2pcs	white zinc
---	---	------	------------

8


x2

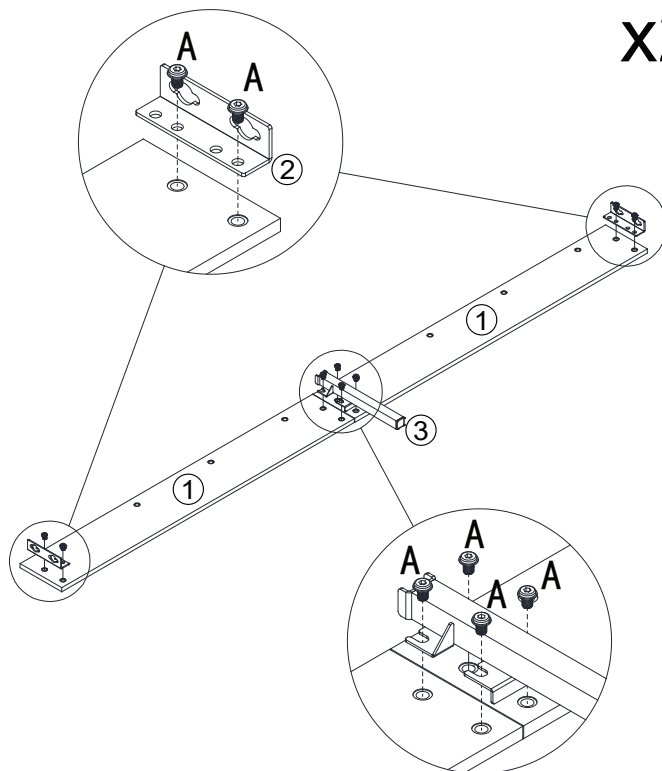

A		16pcs	white zinc
---	---	-------	------------


9

x2

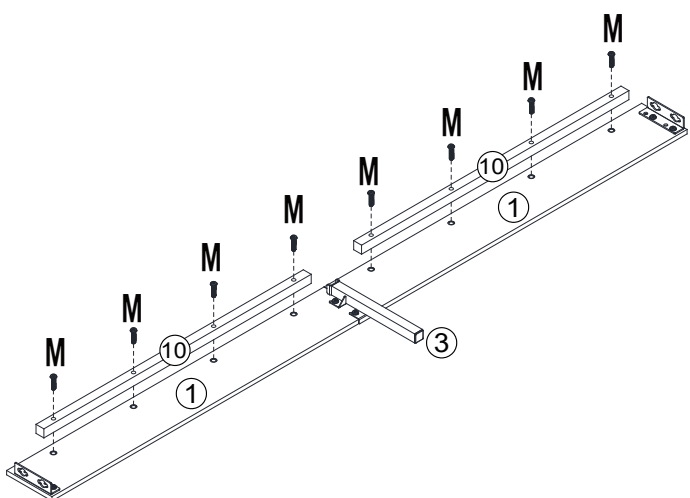

M		16pcs	white zinc
---	---	-------	------------


10

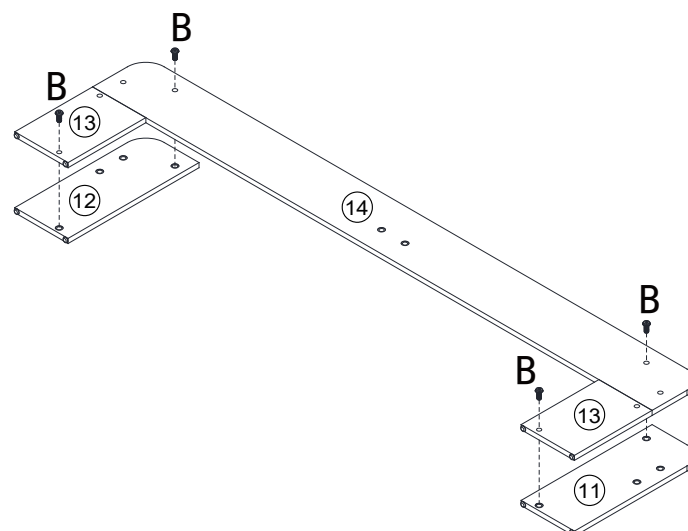

B		4pcs	
---	---	------	--

11


Tighten screws C

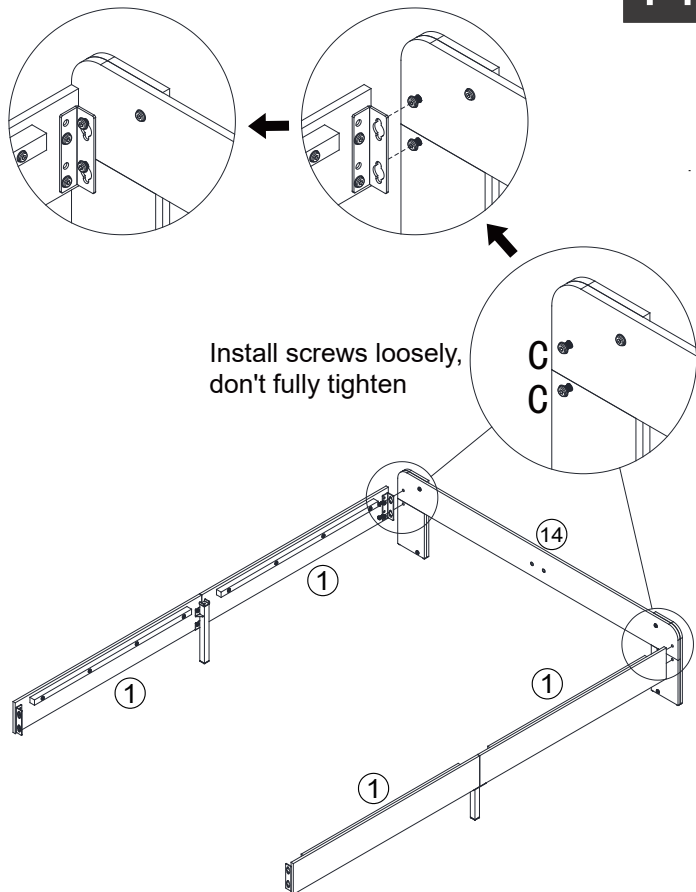

C		4pcs	white zinc
	M8x25		


12

Tighten screws G

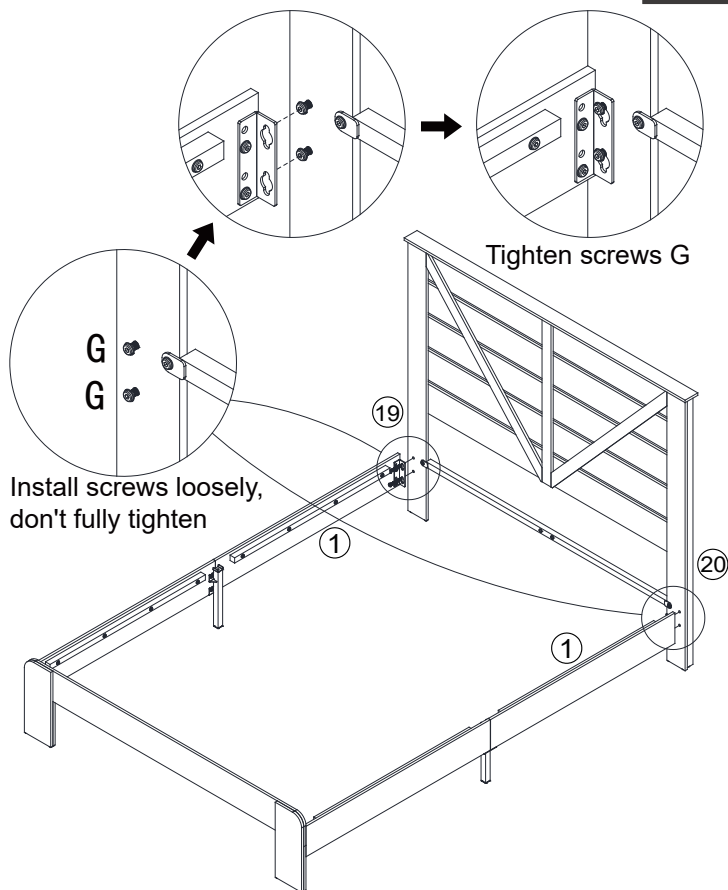

G		4pcs	
	M8x60		


13

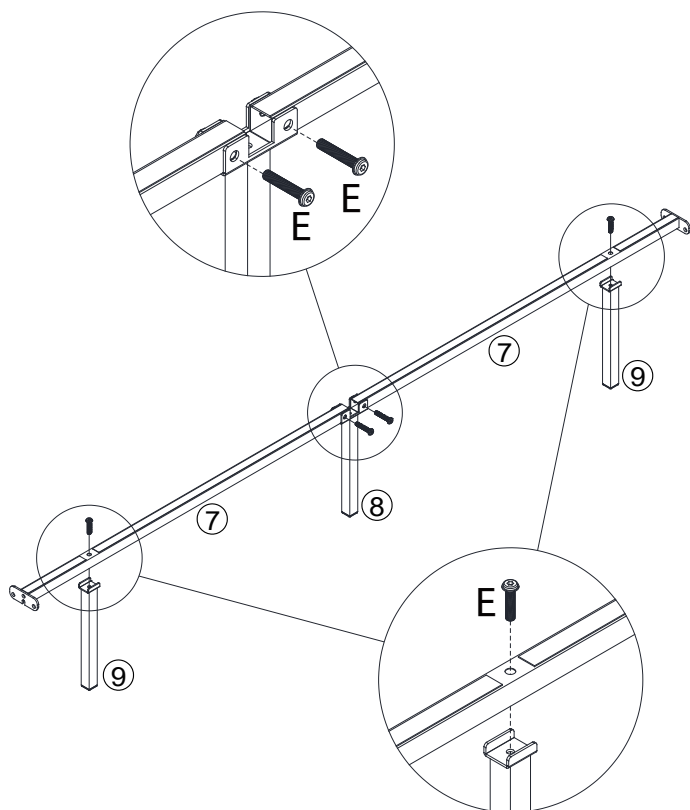

E		4pcs	
	M8x40		

14


Assemble second

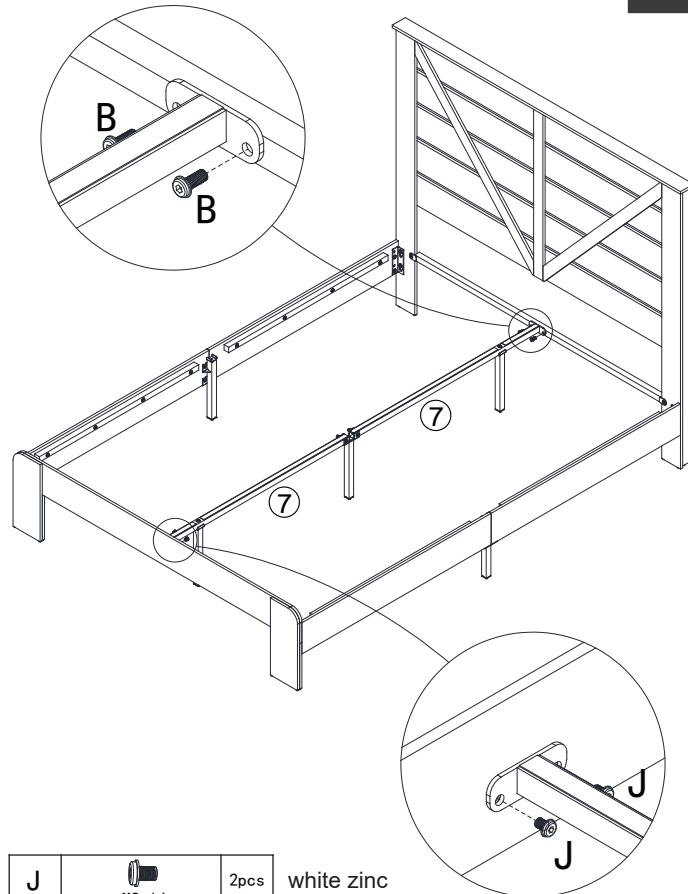

J		2pcs	white zinc
	M8x14		
B		2pcs	
	M8x20		


to Assemble first

15

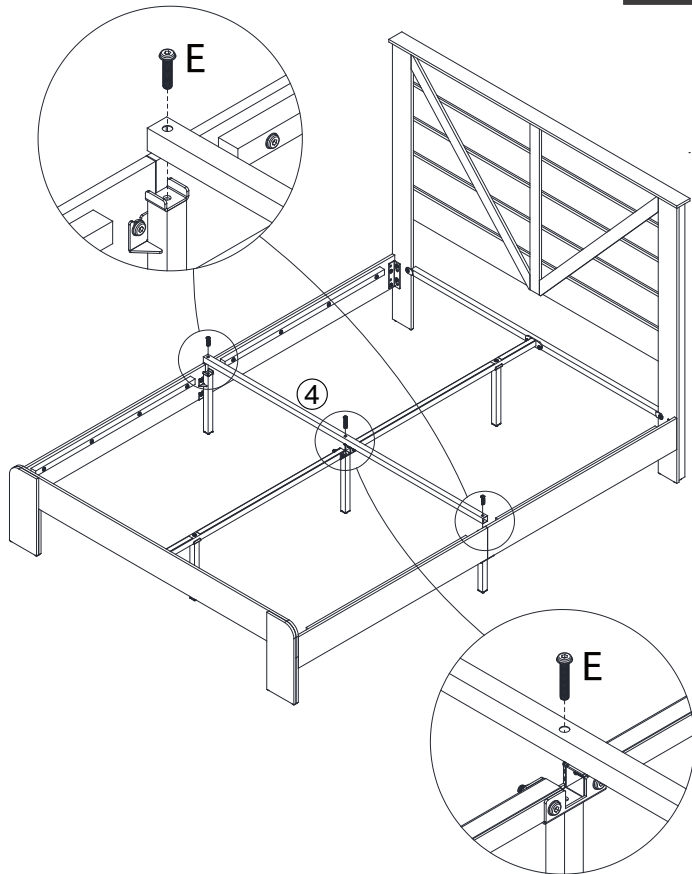


E		3pcs
M8x40		

16

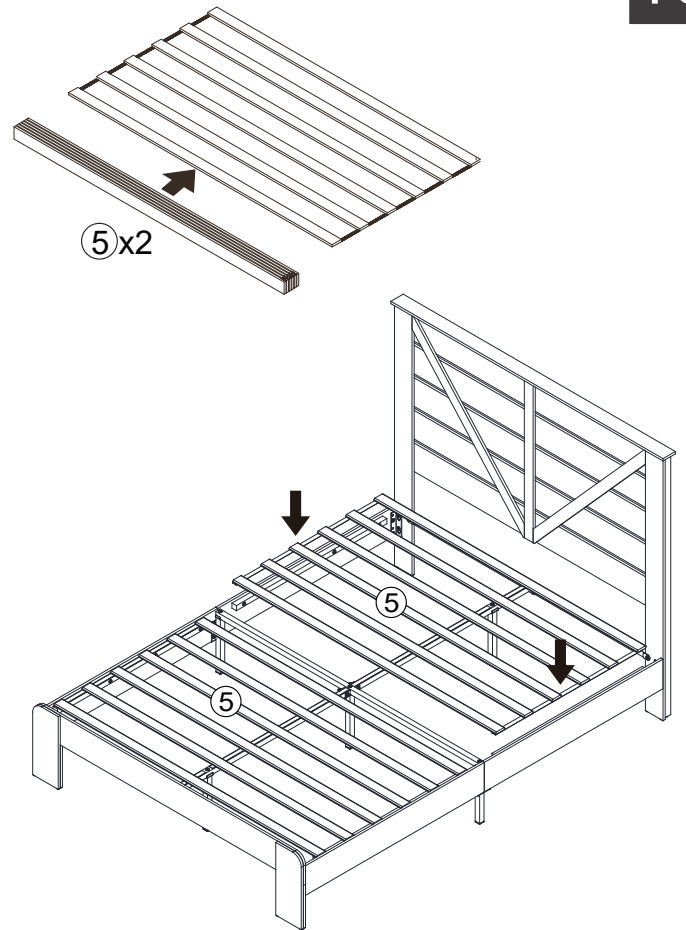

17

Finish

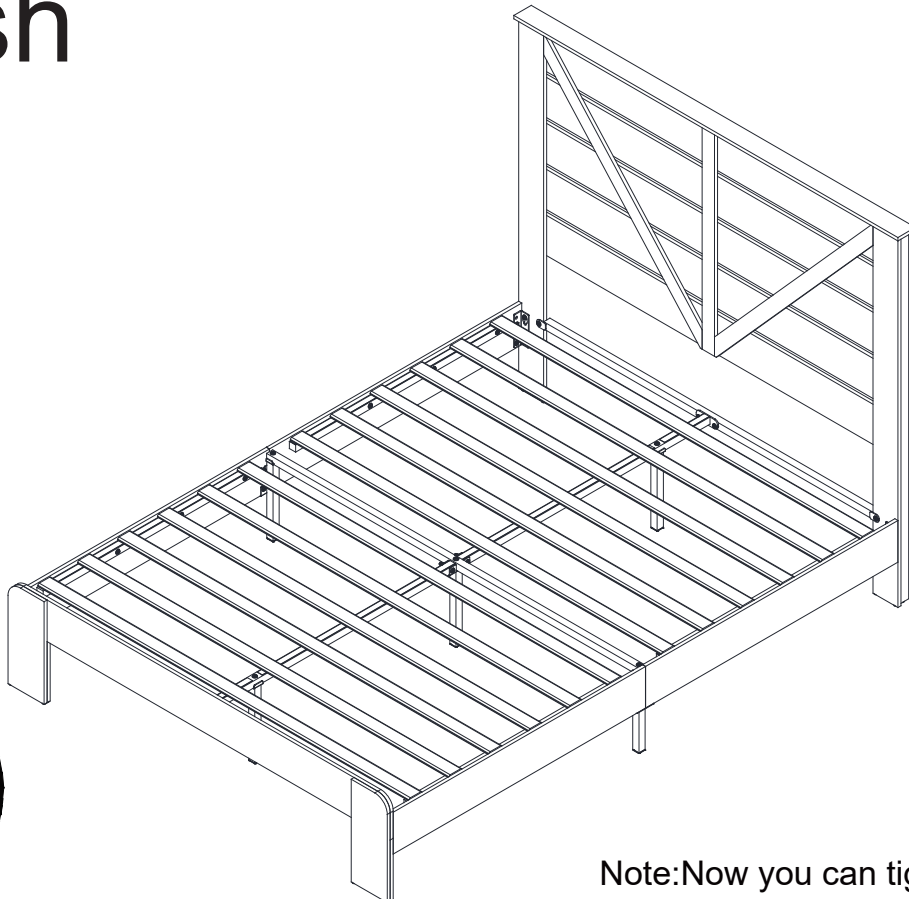

Note: Now you can tighten all the bolts