


ASSEMBLY INSTRUCTION

SKU CODE: WF 312107 / WF 312108

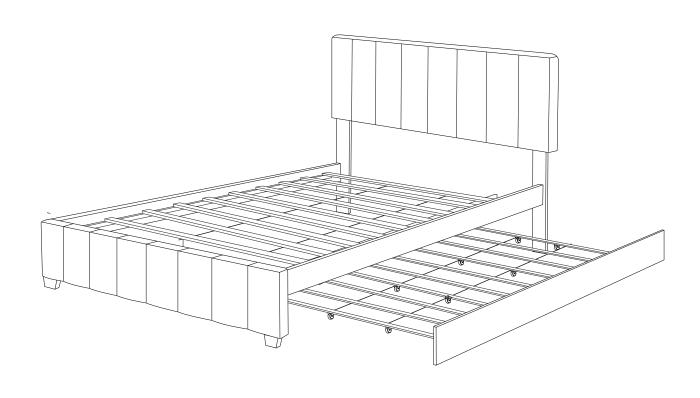

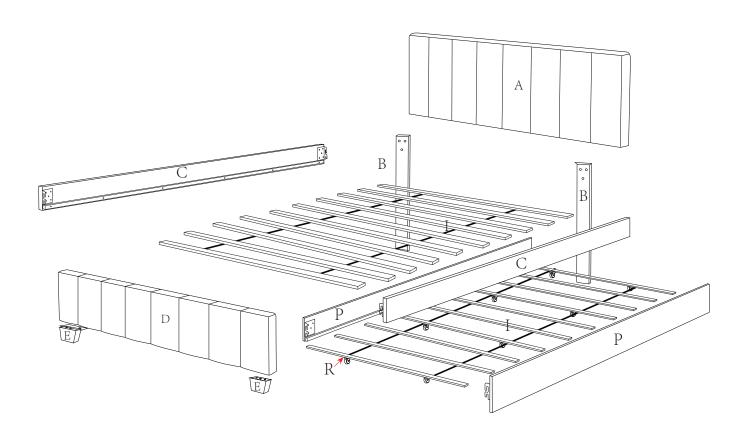

Bed Parts are shipped inside a compartment in the back of the headboard.



NO	PARTLIST (IN CARTON 1 OF 2: WF 312107)	QTY
A	Headboard	1 pc
В	Headboard Leg	2 pcs
Е	Bed Leg	2 pcs
I	Bed Slat	20 pcs
R	Trundle Slat Cube	8 pcs
D	Footboard	1 pc

	PARTLIST (IN CARTON 2 OF 2: WF 312108)	
С	Side Rail	2 pcs
Р	Trundle Long Panel	2 pcs


NO	HARDWARELIST (IN CARTON 1 OF 2: WF 312107)	QTY
1	JCBB M8 x 20mm	8 pcs
2	JCBC M6 x 70mm	2 pcs
3	JCBC M6 x 40mm	6 pcs
4	Flat Washer M6	6 pcs
5	Dowel M8	4 pcs
6	Wheel	8 pcs
7	CSK M4 x 32mm	16 pcs
8	CSK M3.5 x 16mm	32 pcs
9	CSK M4 x 30mm √annum (†)	40 pcs
10	Allen Key M4	1 pc
11	Allen Key M5	1 pc
12	Stopper	2 pcs
13	CSK M4 x 20mm	2 pcs

Read this instruction carefully. Remove all wrapping material, staples and straps from the carton. See hardware and furniture part list for guidance. Be sure you have all wooden furniture parts on a clean and flat surface, such as carpet or rug, to prevent from being scratched.


CAUTION:


- 1. Do not Full Tighten the nut or screw until all ready to assemble.
- 2. Do not Over Tighten the nut or screw to avoid causing damages to the thread.
- 3. Keep all hardware part out reach of children.



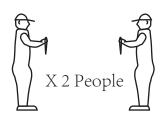





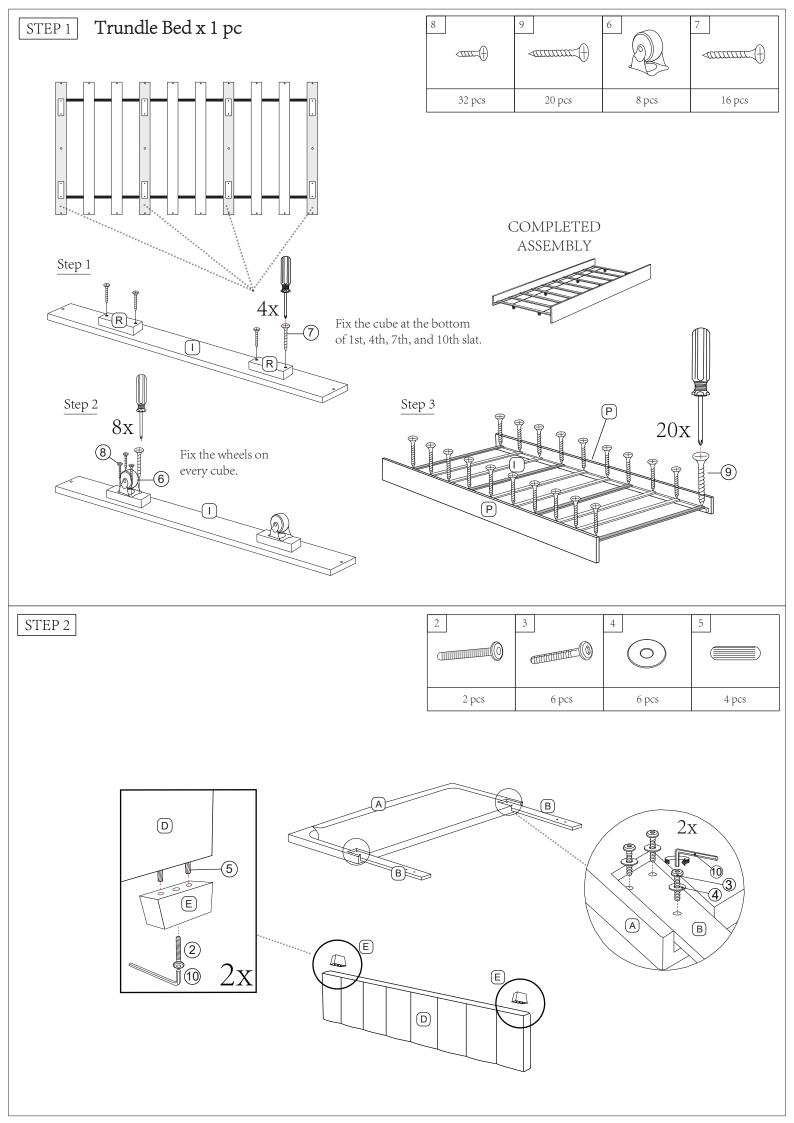

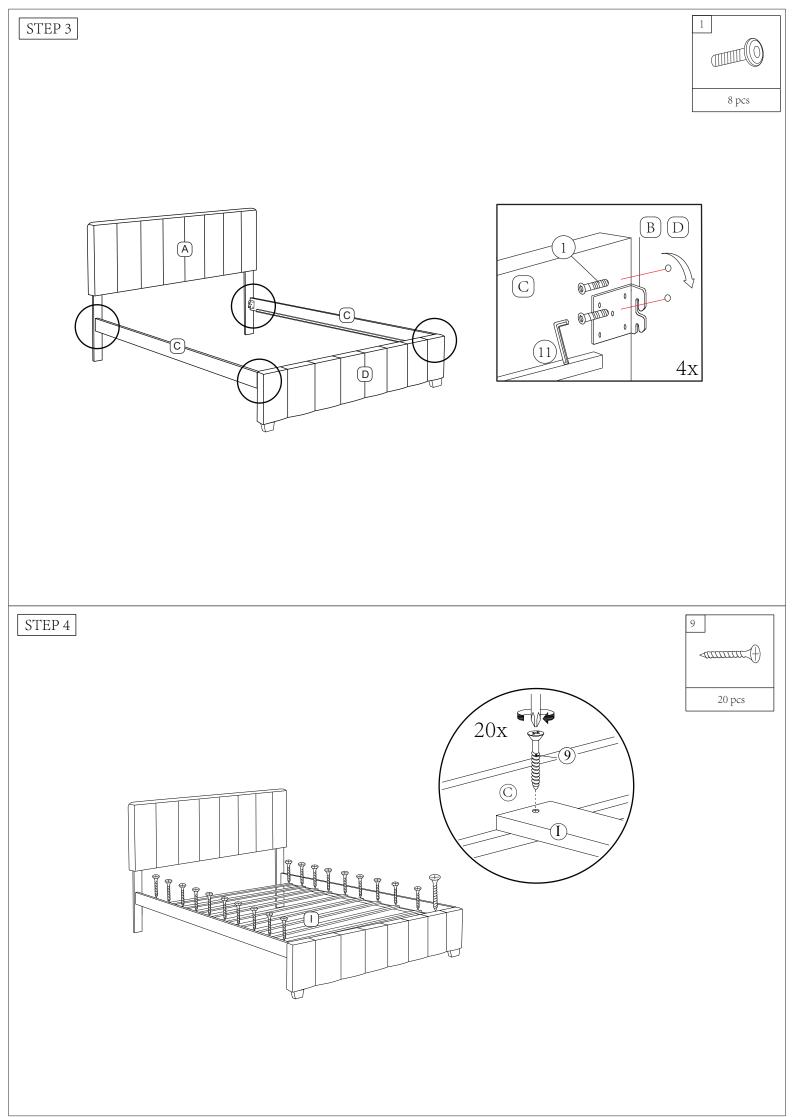





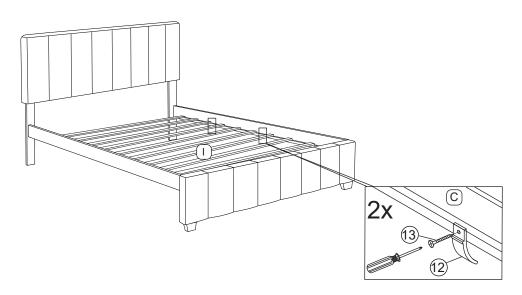

Optional: Add stopper at desired side.

Lastly, place the trundle bed inside.

