


Assembly Instruction


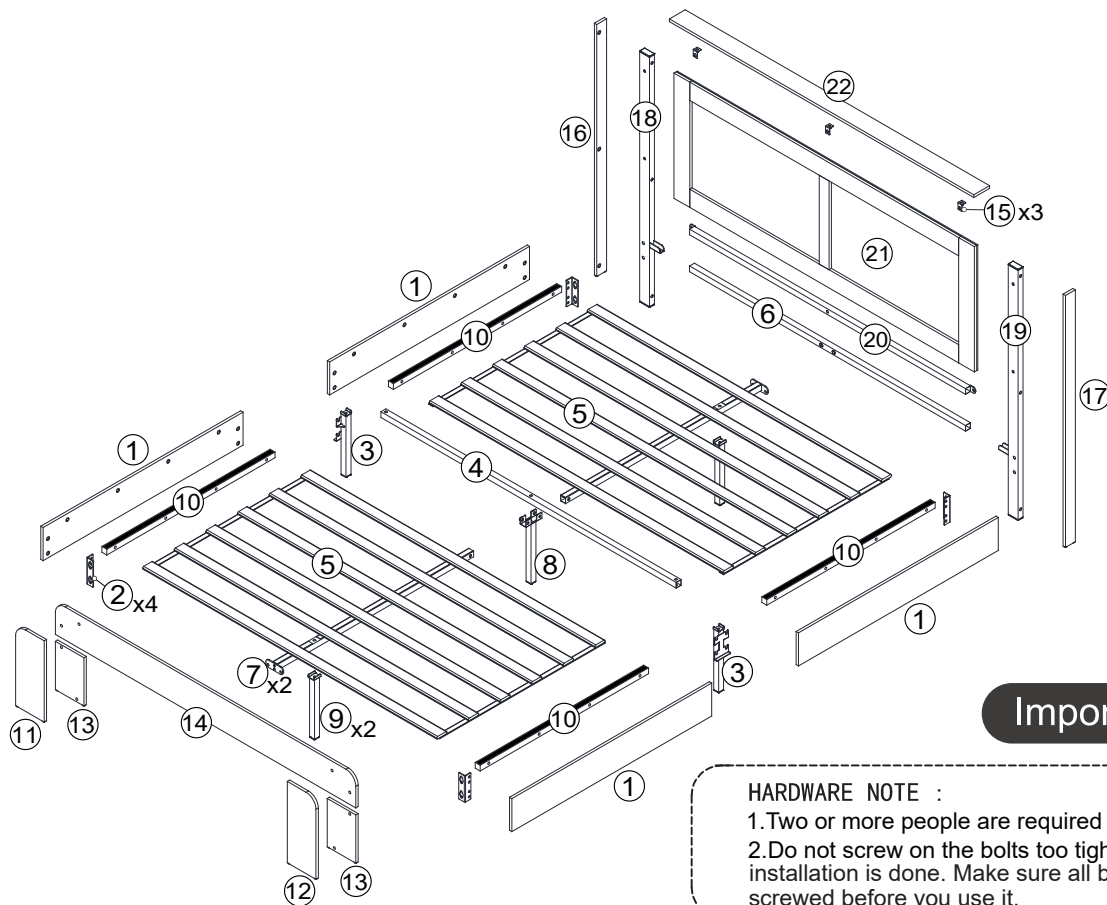


Important Note



HARDWARE NOTE :

1. Two or more people are required for assembly
2. Do not screw on the bolts too tight unless the installation is done. Make sure all bolts are tightly screwed before you use it.

Components

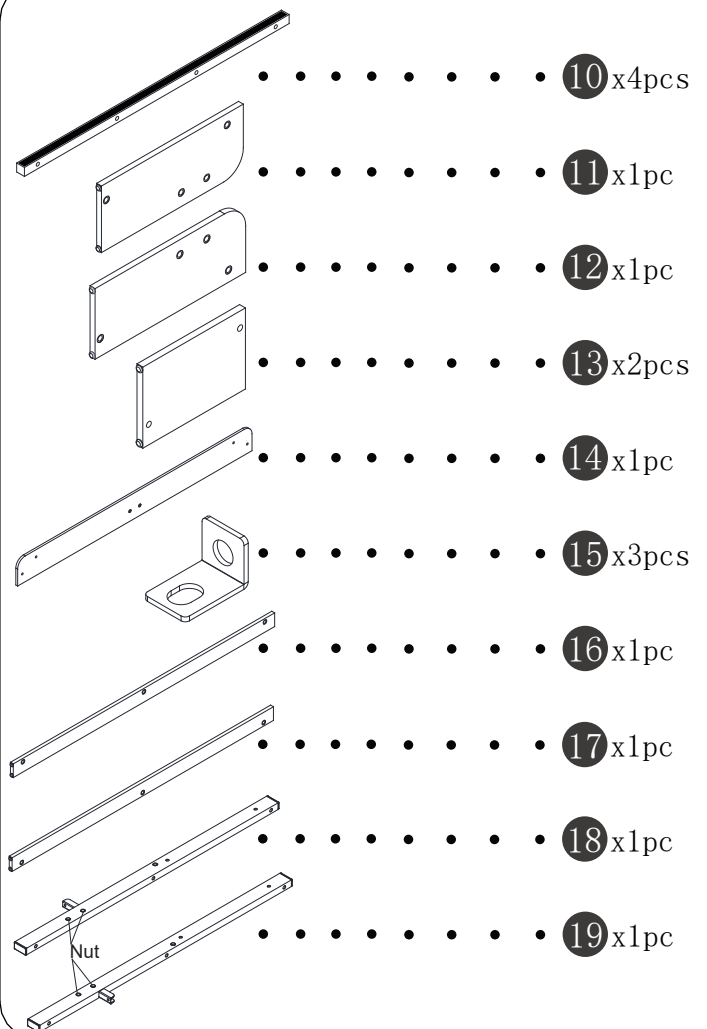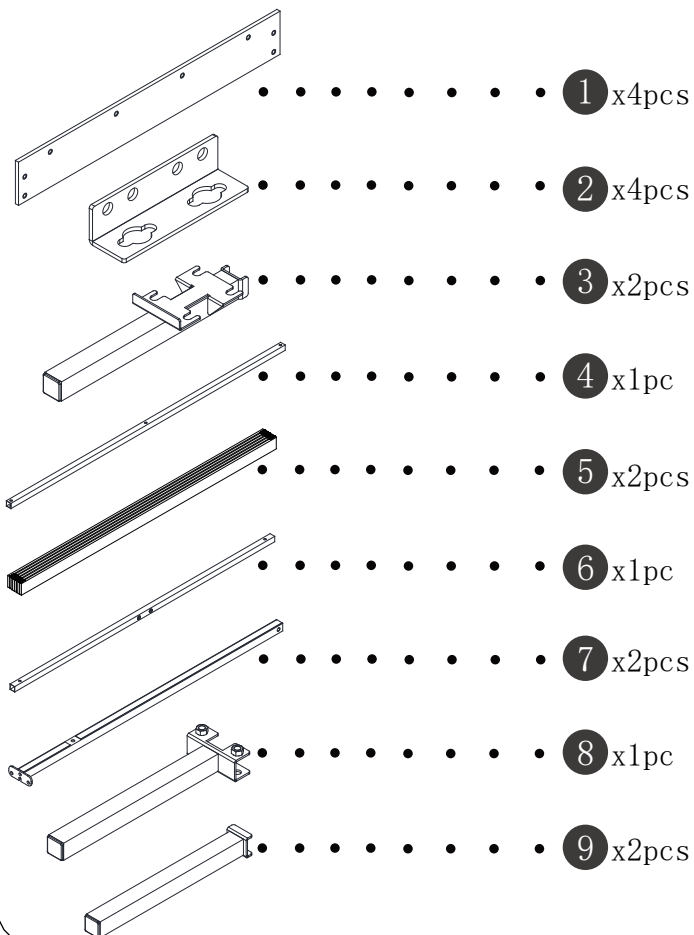


1

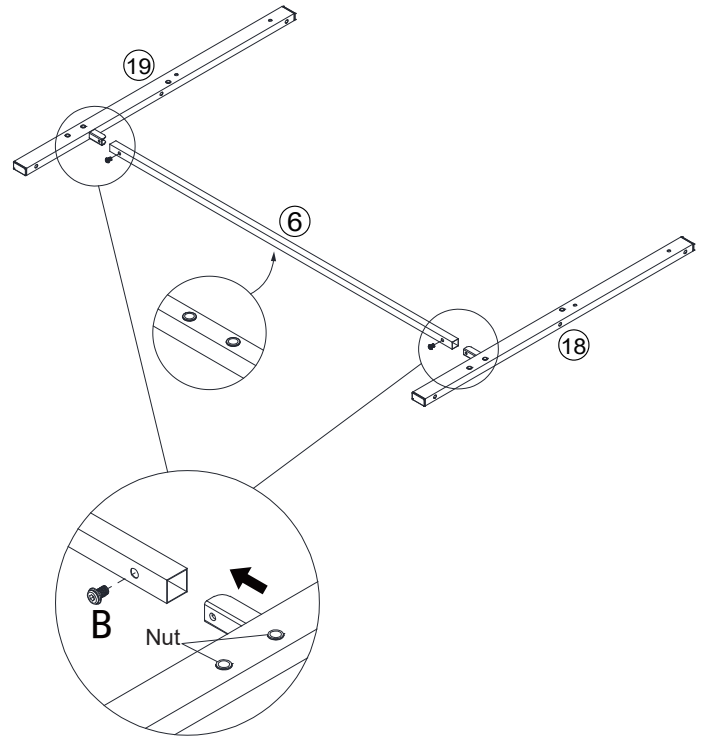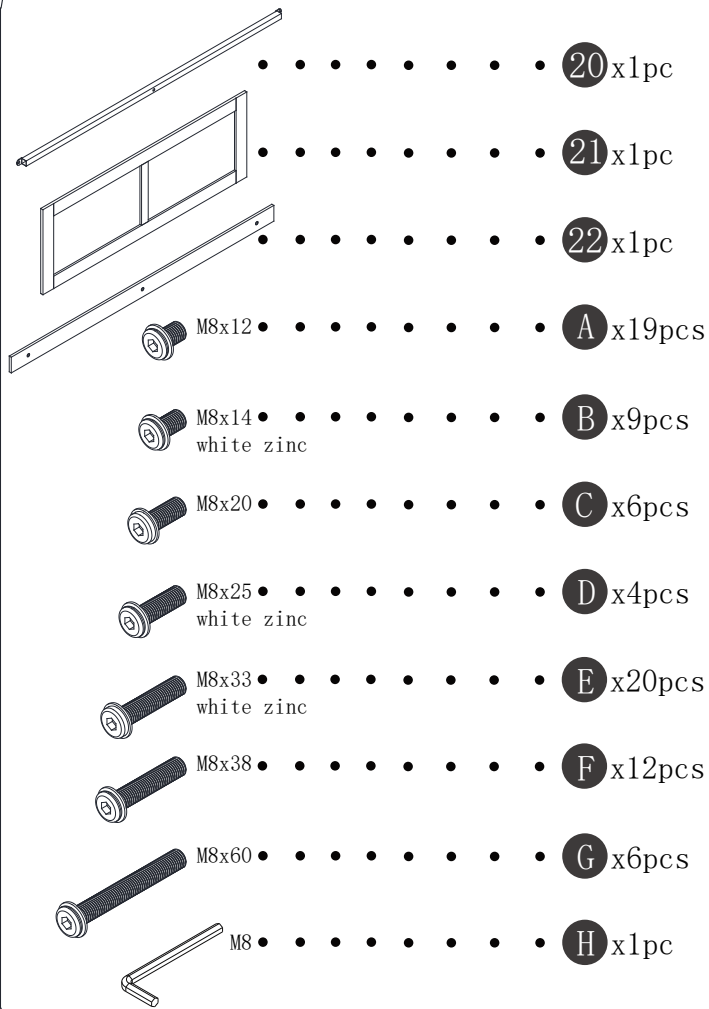


B		2pcs	white zinc
---	---	------	------------

2

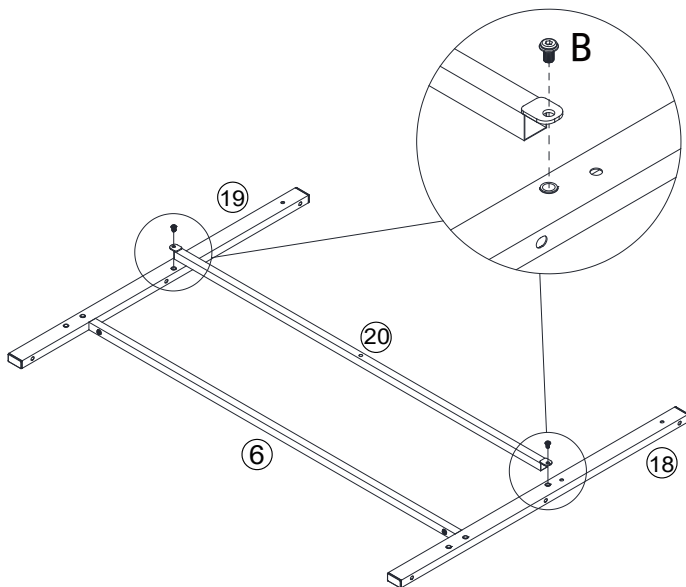


B		2pcs	white zinc
---	---	------	------------

3



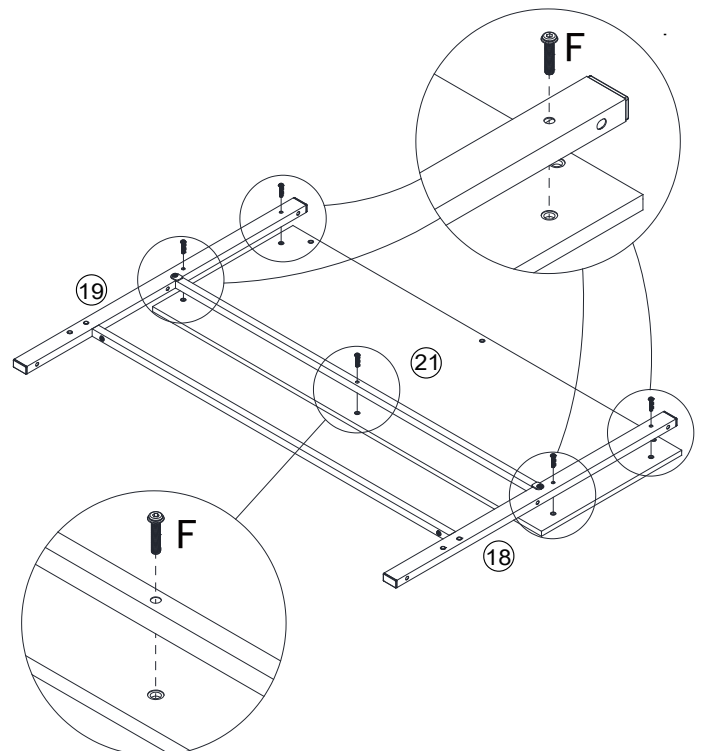


F		5pcs	
---	--	------	--


4

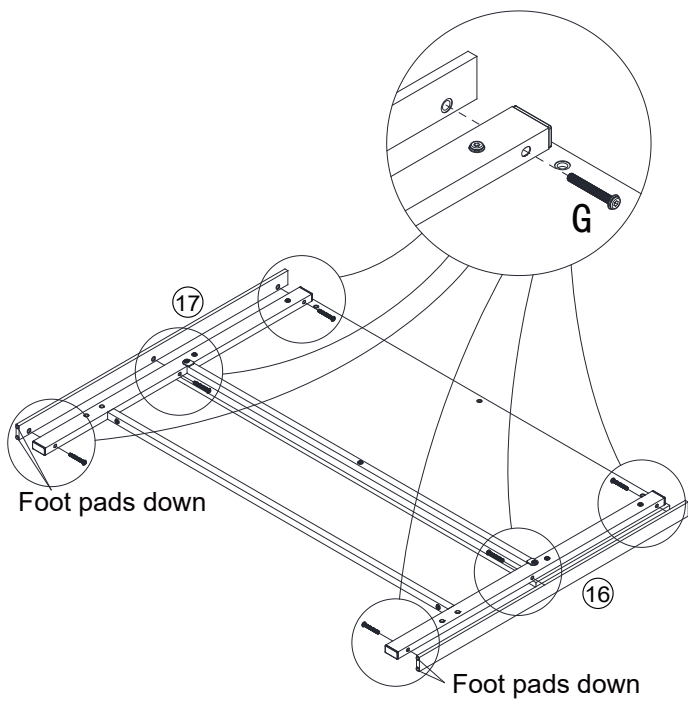

5

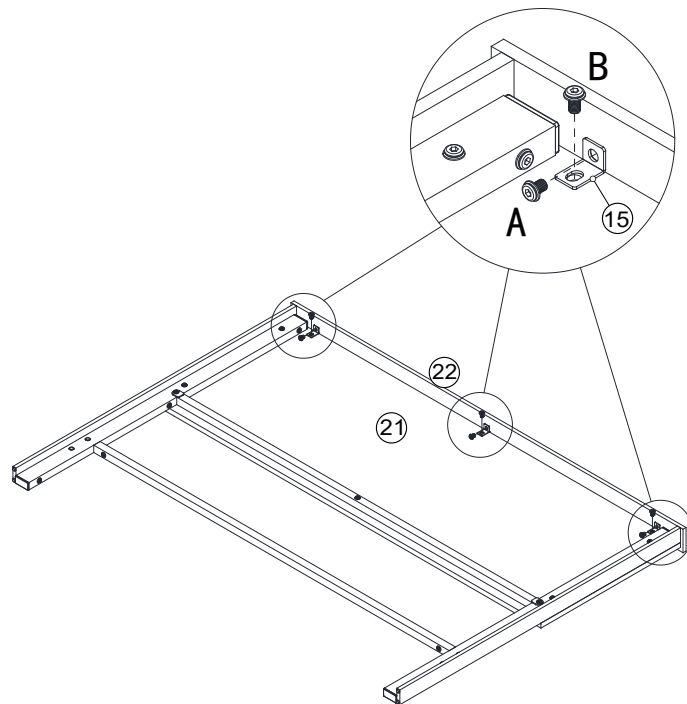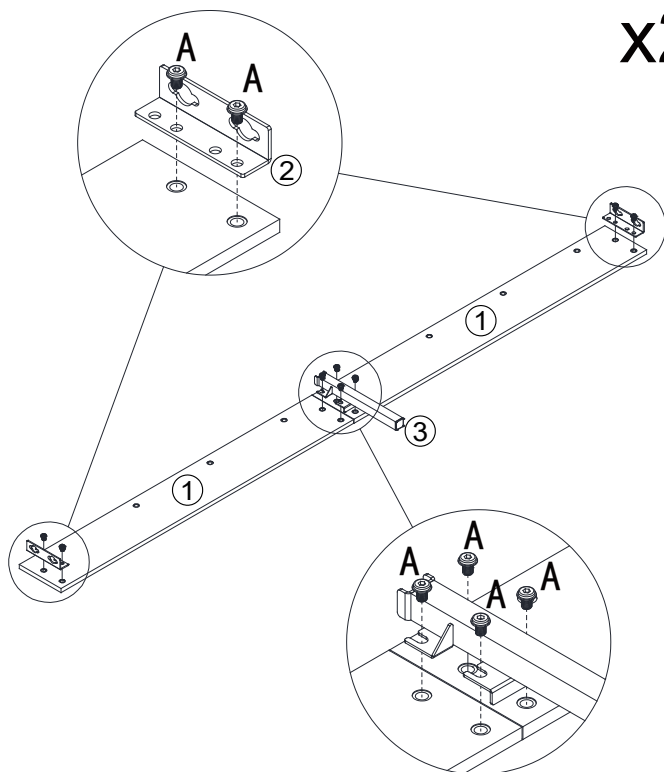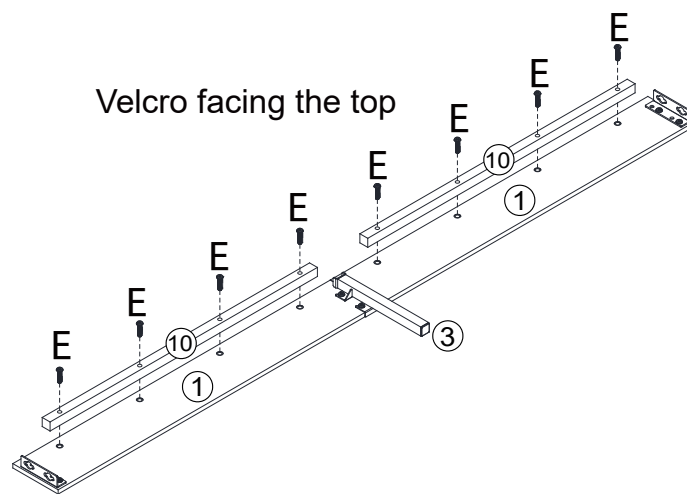6
x27
x2

8

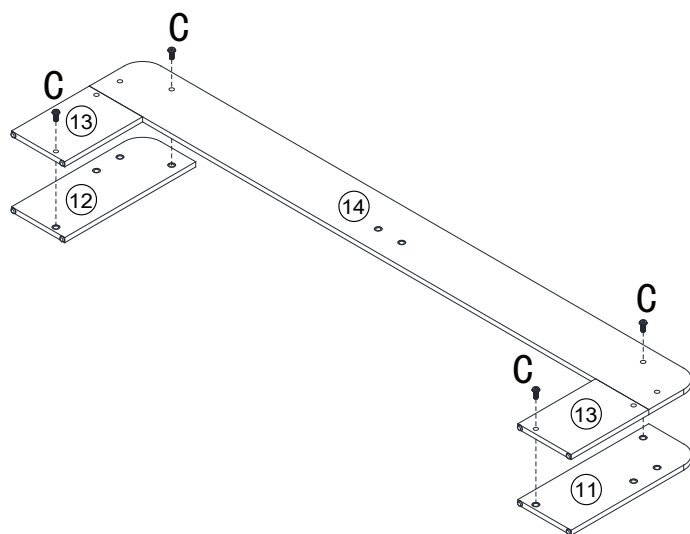


C		4pcs
---	---	------

M8x20

9

Tighten screws D

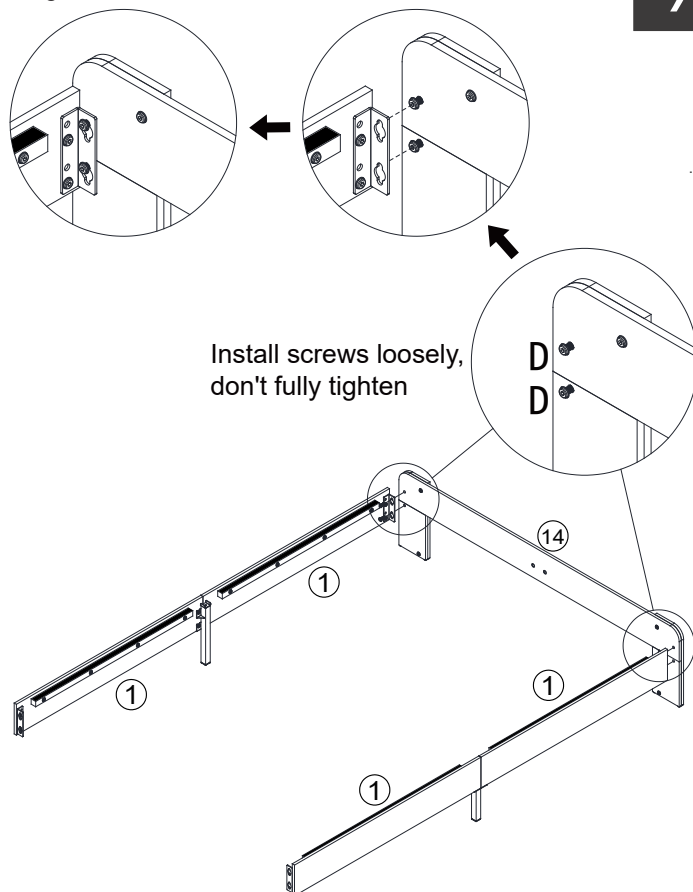
Install screws loosely,
don't fully tighten

D		4pcs
---	---	------

M8x25

white zinc

10

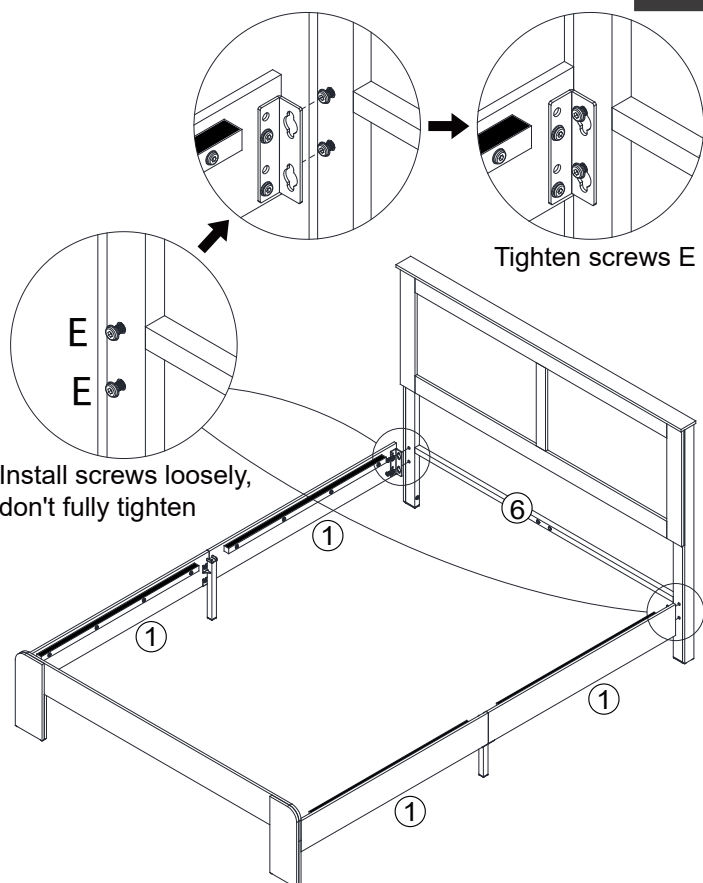

Tighten screws E


Install screws loosely,
don't fully tighten

E		4pcs
---	---	------

M8x33

white zinc

11

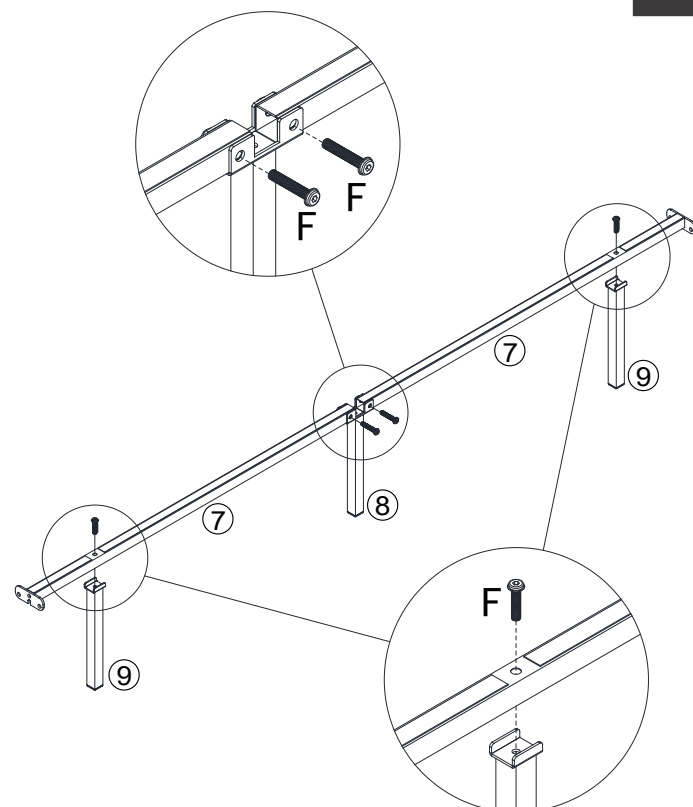


F		4pcs
---	---	------

M8x38

white zinc

Assemble second


12

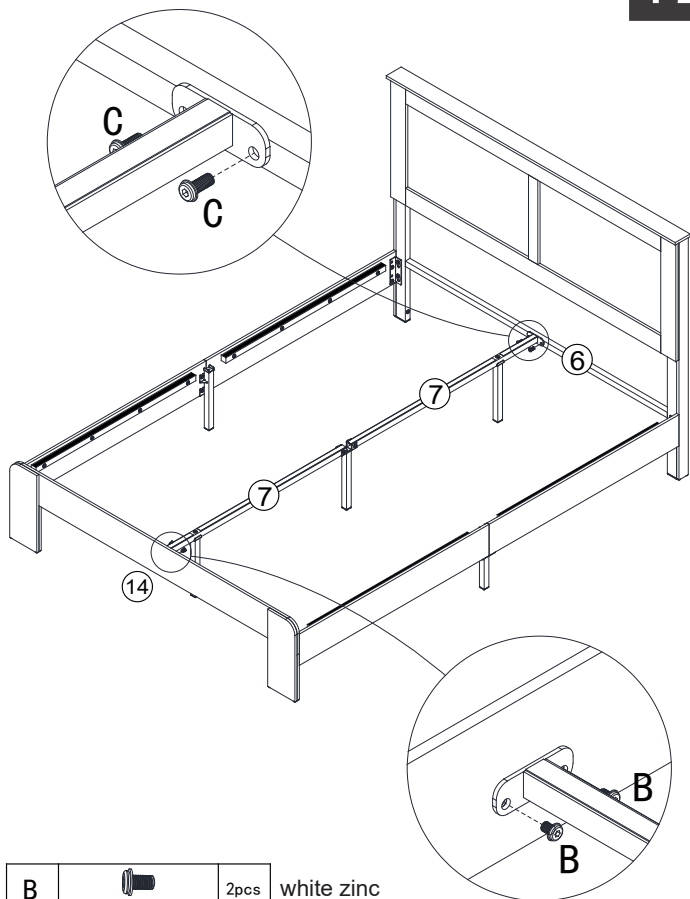

B	 M8x14	2pcs	white zinc
C	 M8x20	2pcs	



to Assemble first

13

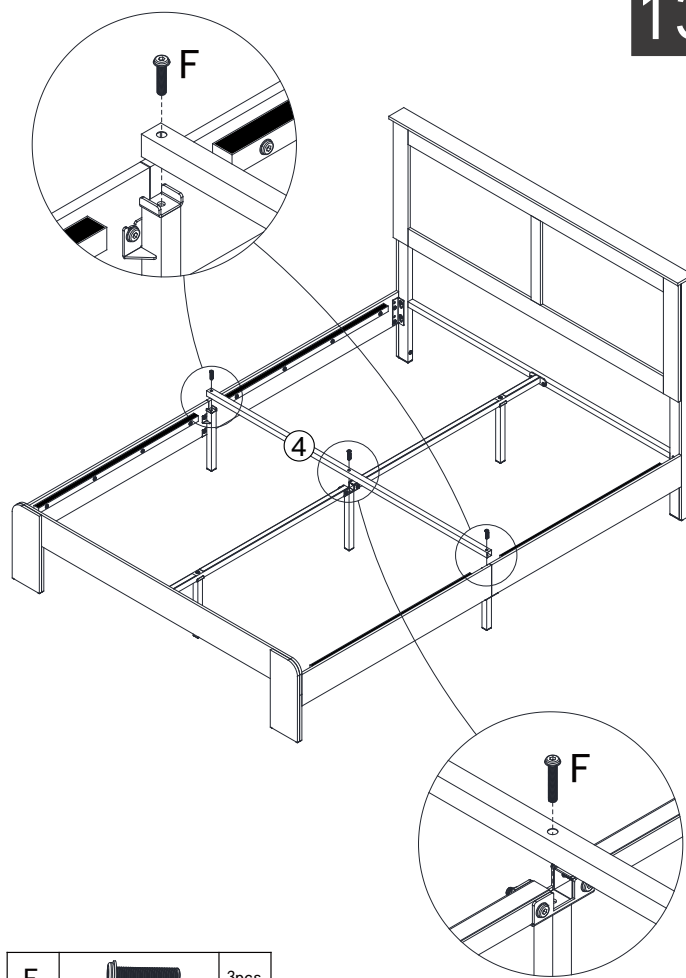

F	 M8x38	3pcs	
---	--	------	--

14

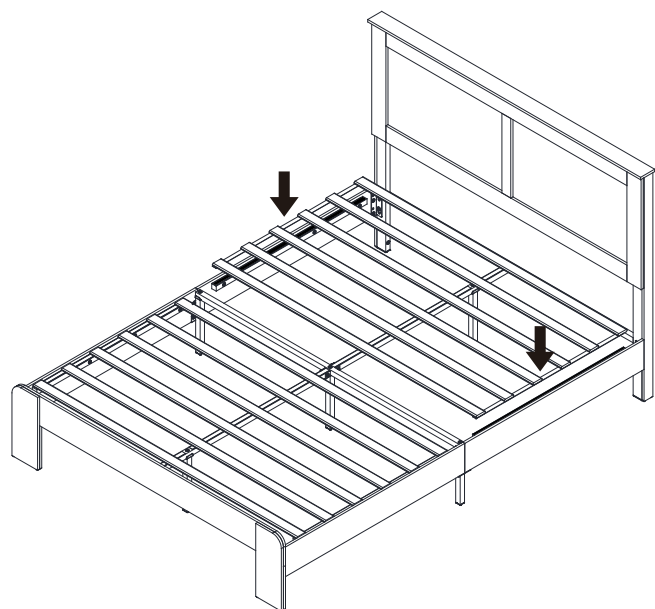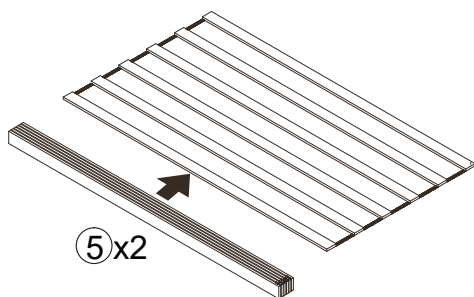

Finish

15

