



ASSEMBLY INSTRUCTIONS

FULL BED WITH 4 DRAWERS BOOKCASE HEADBOARD

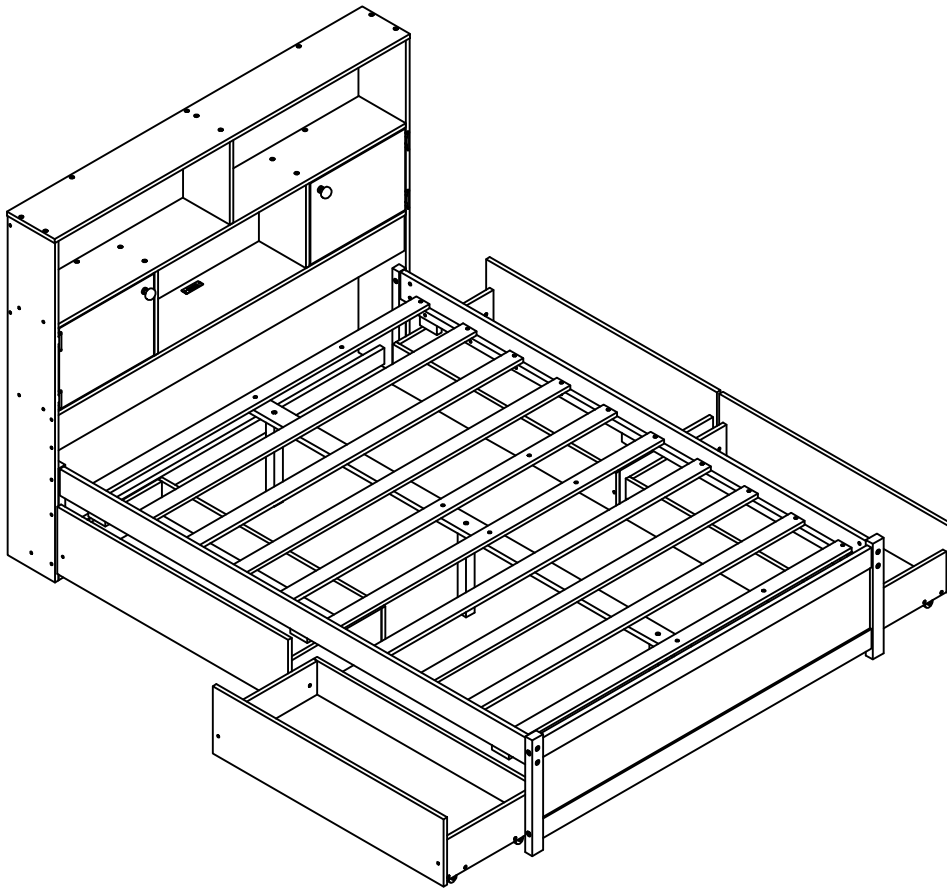











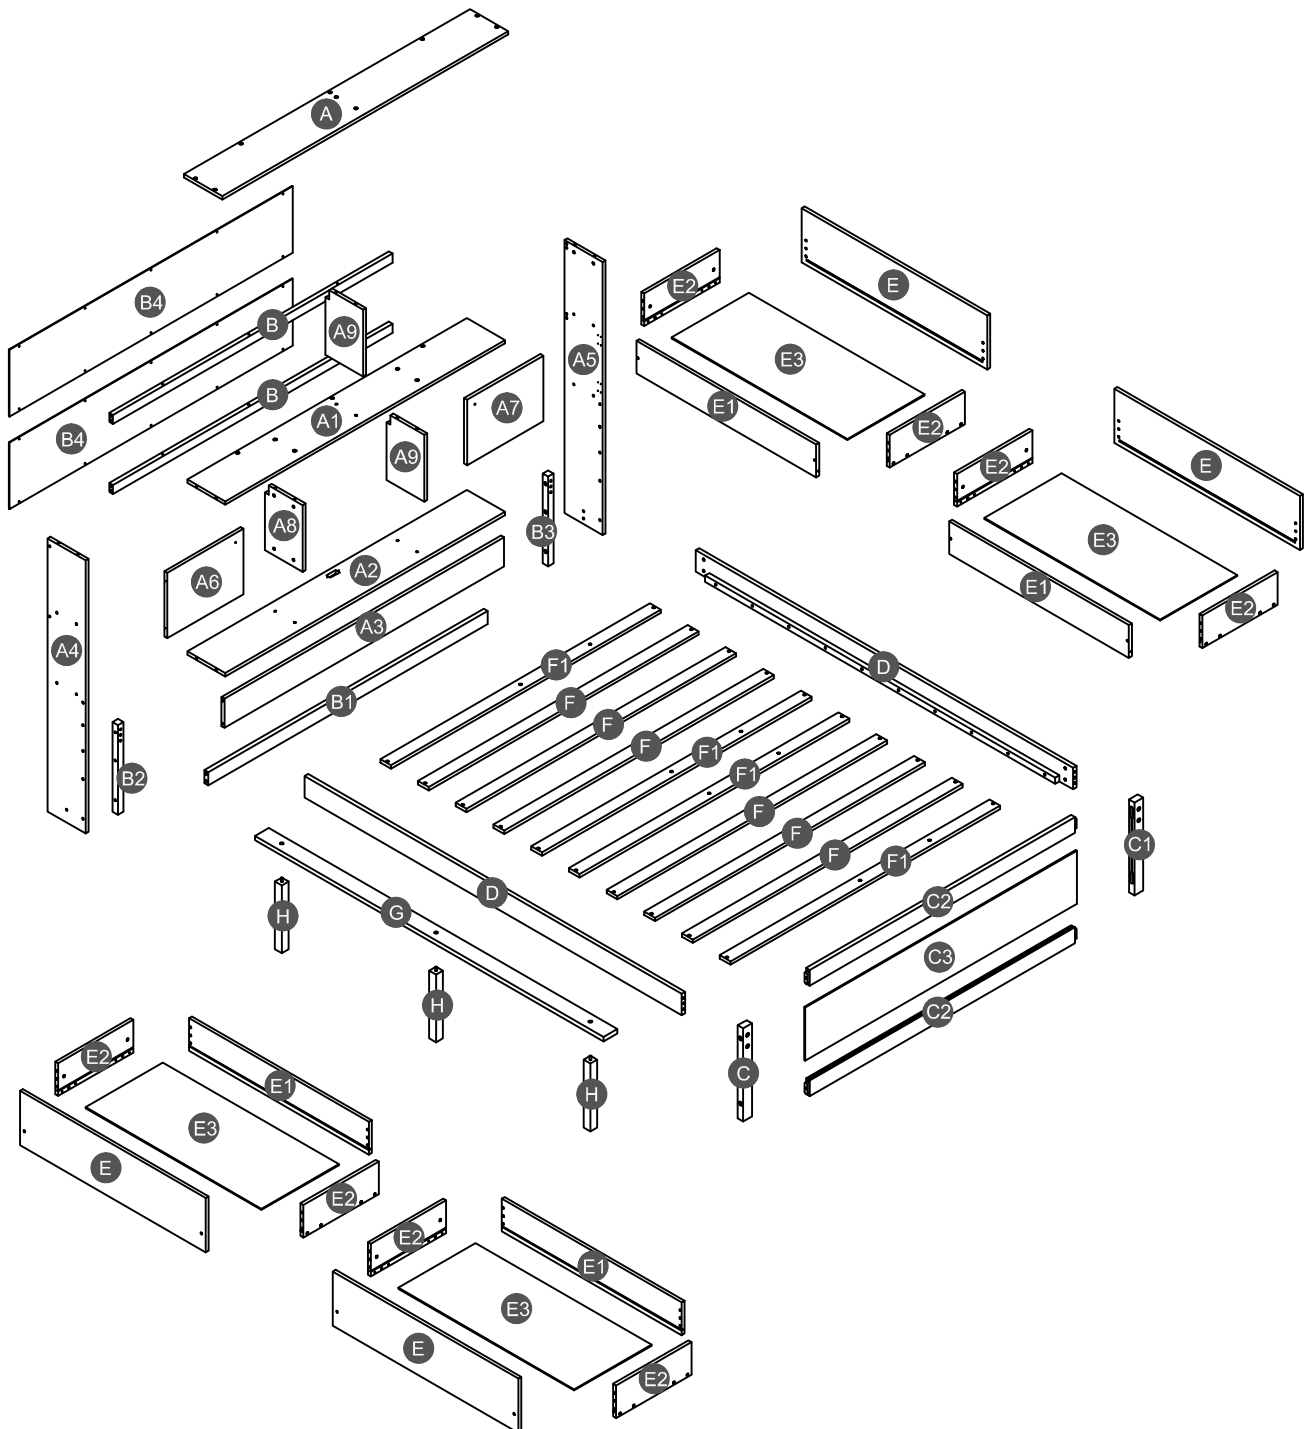





WF310896/WF310897

Detail View















Part List

WF310896




















B  Upper horizontal HB - 2pcs	B1  Lower horizontal HB - 1pc	B2  Support HB (left) - 1pc
B3  Support HB (right) - 1pc	B4  Back panel - 2pcs	C  Leg FB (left) - 1pc
C1  Leg FB (right) - 1pc	C2  Horizontal bar FB - 2pcs	C3  Side panel FB - 1pc
D  Side rail - 2pcs	E  Front drawer panel - 4pcs	E1  Back drawer panel - 4pcs
F  Slats - 6pcs	F1  Slats - 4pcs	G  Lower support slat - 1pc
H  Leg support - 3pcs		

Part List


WF310897 + Hardware inside

A  Top panel HB - 1pc	A1  Shelf panel HB - 1pc	A2  Bottom panel HB - 1pc
A3  Lower horizontal HB - 1pc	A4  Side panel (left) - 1pc	A5  Side panel (right) - 1pc
A6  Door (left) - 1pc	A7  Door (right) - 1pc	A8  Divider panel (left) - 1pc
A9  Divider panel (right) - 2pcs	E2  Left / right drawer panel - 8pcs	E3  Drawer bottom - 4pcs

Hardware List WF310897


1  Ø8*30mm Wood dowel (42pcs)	2  Ø10*20mm Wood dowel (16pcs)	3  (Ø15)1/4"*80mm Hex-Head bolts (12pcs)
4  (Ø12)1/4"*60mm Hex-Head bolts (50pcs)	5  (Ø12)1/4"*40mm Hex-Head bolts (6pcs)	6  1/4"*15 (9.5mm) Horizontal-Hole bolts(62pcs)
7  (1/4")4.5*58mm Allen key (1pc)	8  100*54*20 mm Wheels (16pcs)	9  Ø38*31mm Pine Knob (2pcs)
10  3/16"*25mm Ph zinc(Knob) (2pcs)	11  Ø3.5*15mm Wood screws (38pcs)	12  (Ø12)1/4"*40mm Wood screw bolts (6pcs)
13  Ø4*30mm Wood screws (68pcs)	14  Ø3.5*15mm Wood screws (20pcs)	15  70*37*28mm (135°) Metal bracket (4pcs)
16  42*12*1mm Metal magnet (2pcs)	17  45*17*13mm Door catch (2pcs)	18  1500*68*30*22mm USB port (1set)
19  70*35*19 mm Drawer stopper (6pcs)		

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)



PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

STEP 1:

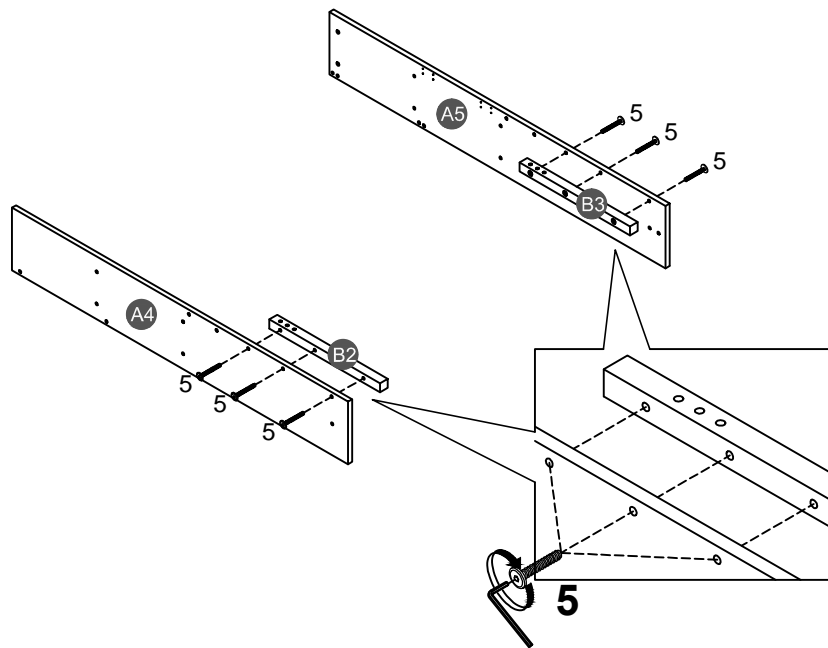


5



6PCS

STEP 2:

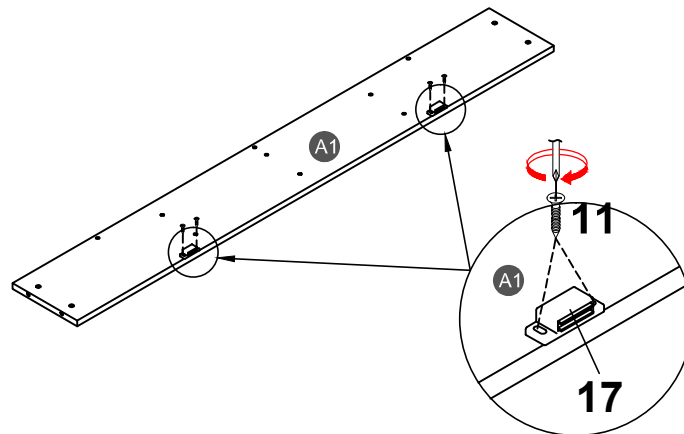

11




4PCS

17



2PCS

STEP 3:

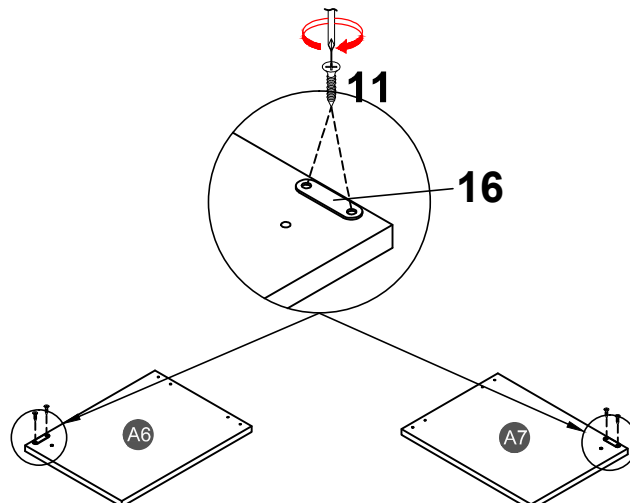

11




4PCS



16




2PCS

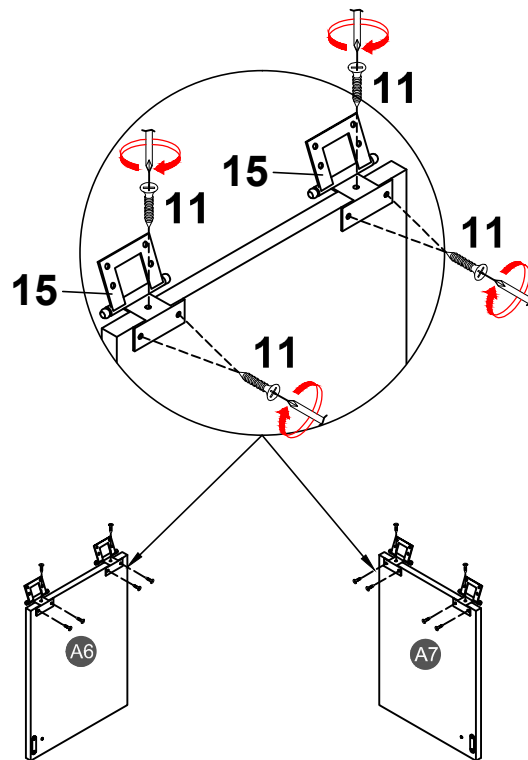

STEP 4:




11	15
	
12PCS	4PCS

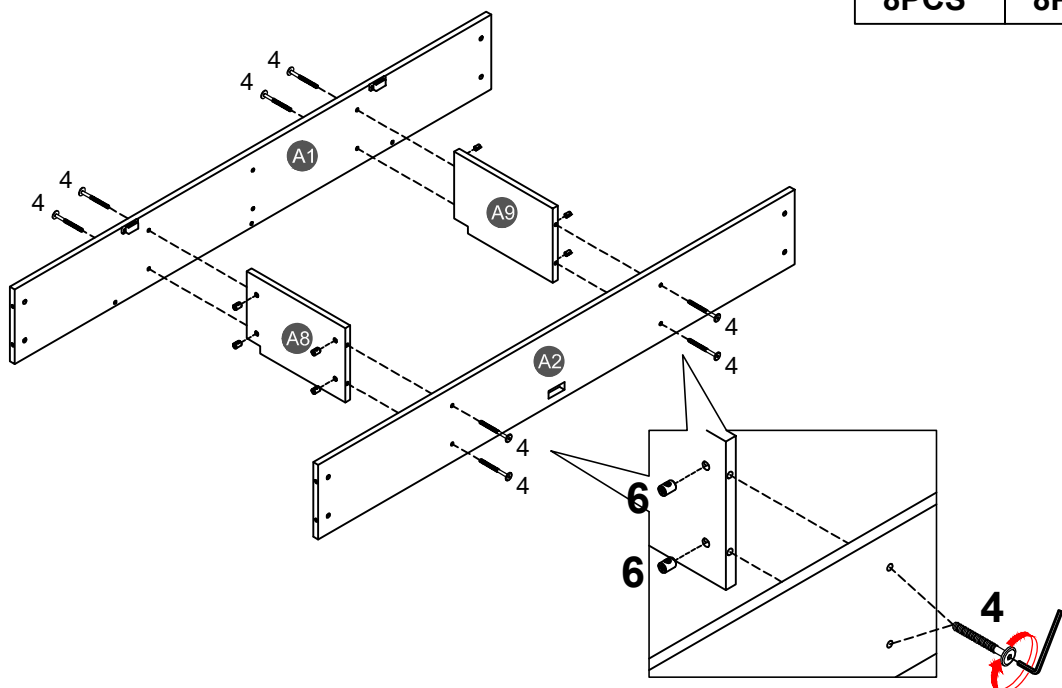STEP 5:





4	6
	
8PCS	8PCS


STEP 6:

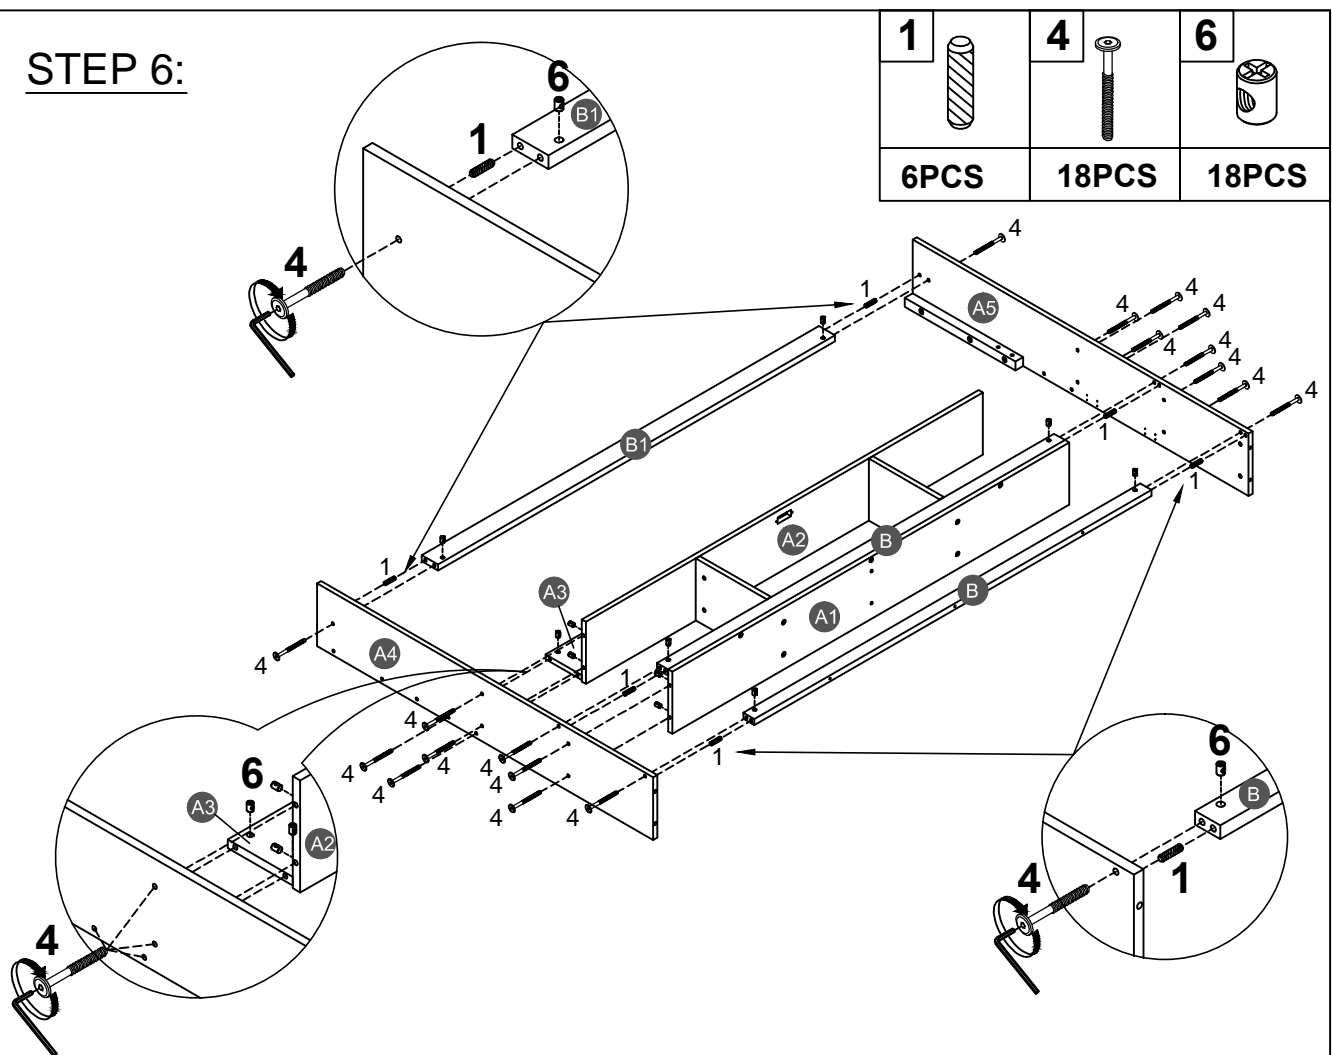

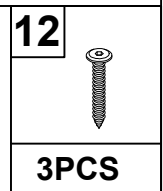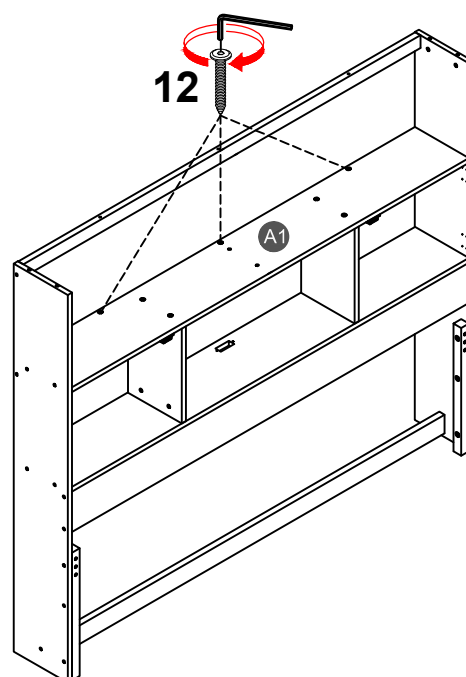


STEP 7:




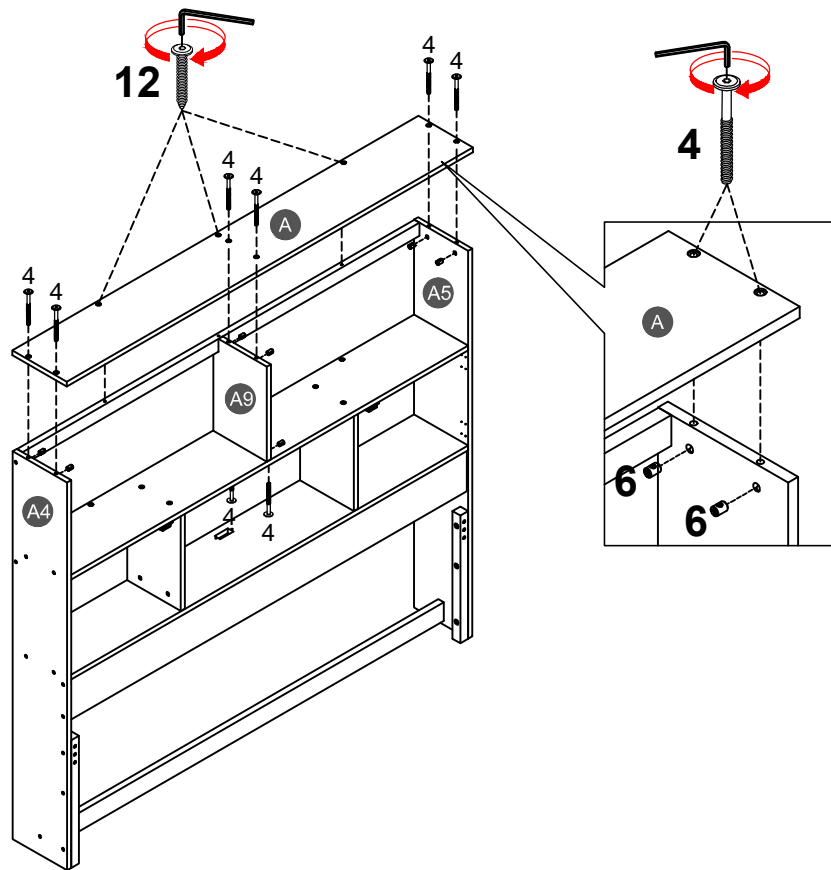


STEP 8:





4	
8PCS	
6	
8PCS	
12	
3PCS	

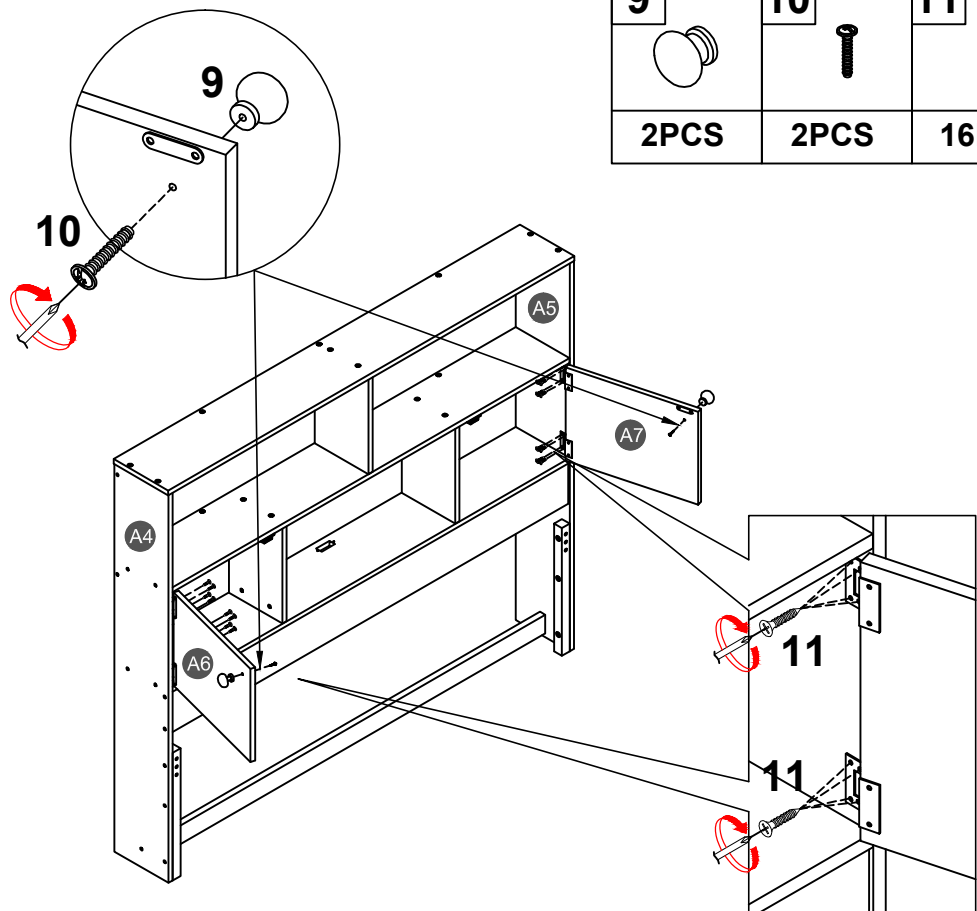
STEP 9:



9		10		11	
2PCS		2PCS		16PCS	

STEP 10:


11	18
	
2PCS	1SET

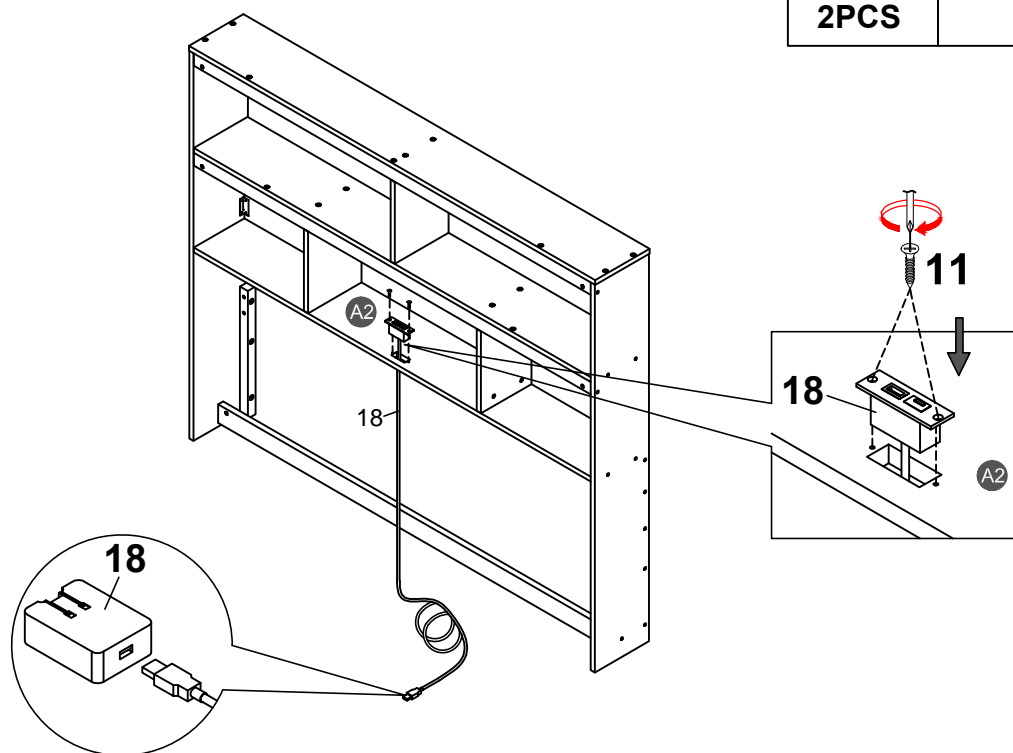


STEP 11:

14


20PCS

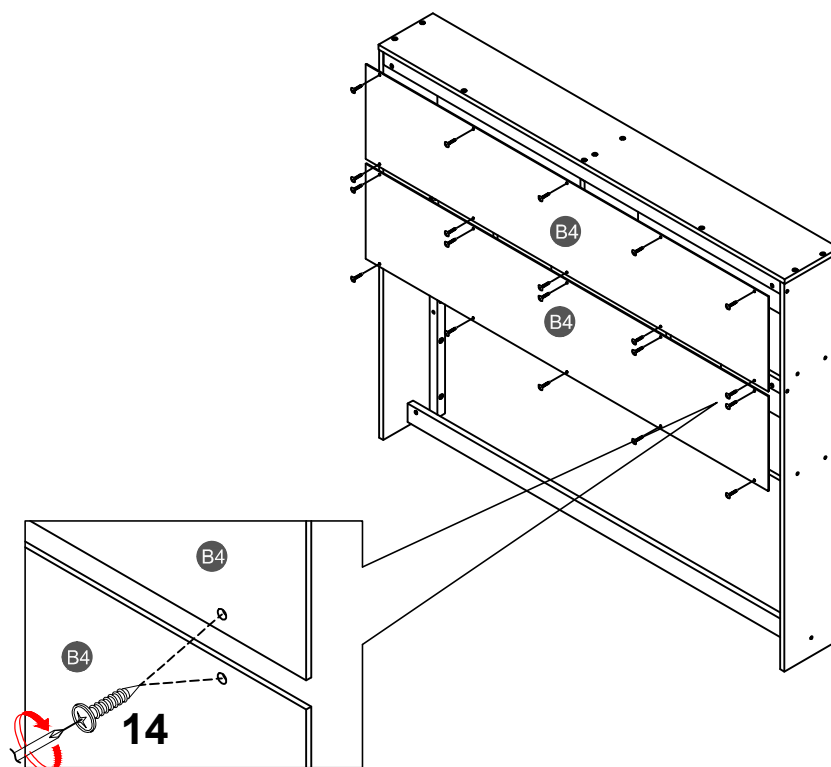

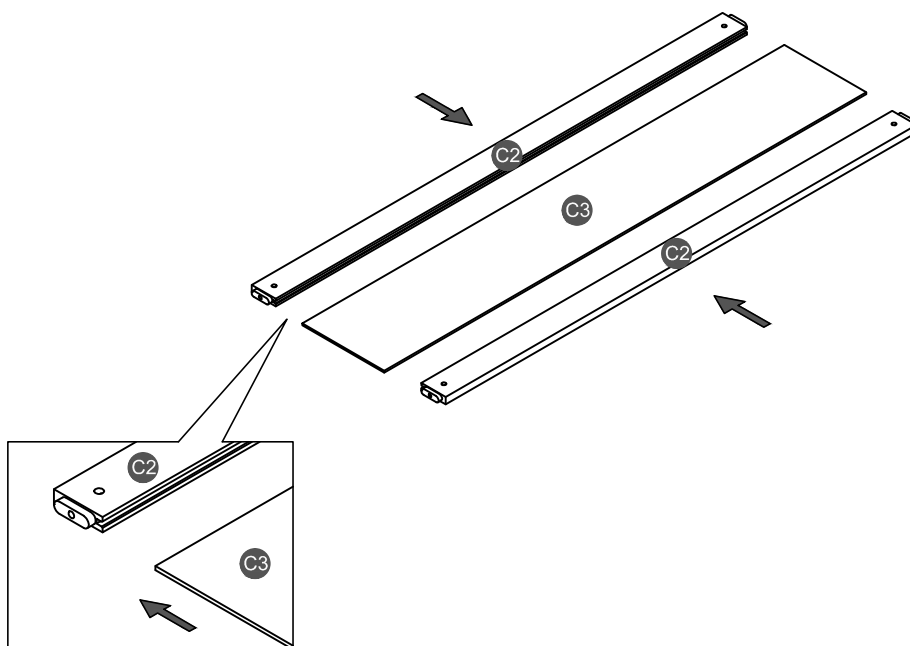

STEP 12:

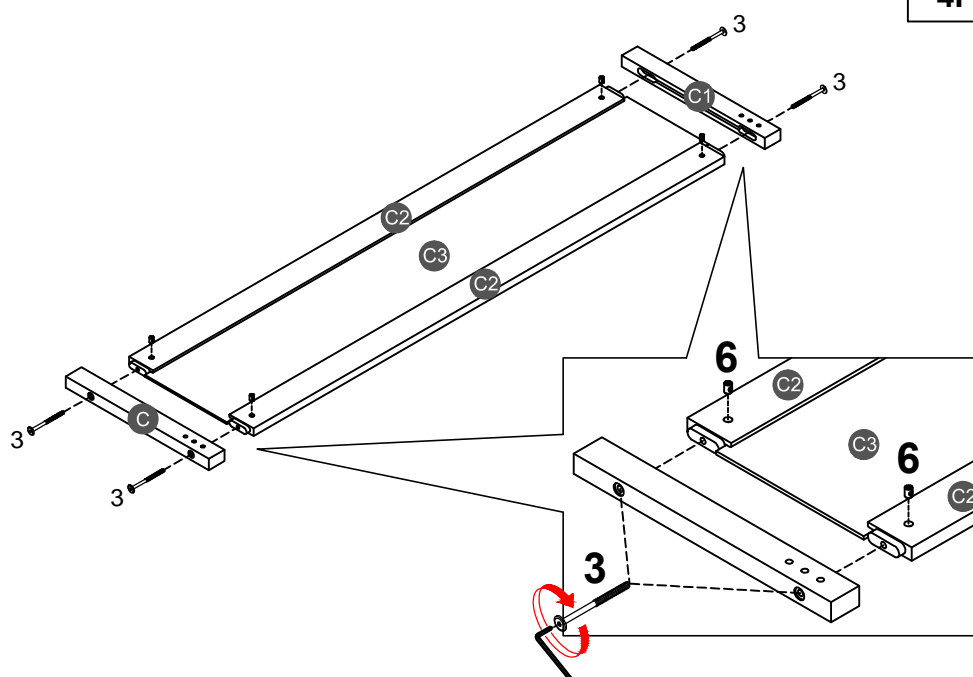


STEP 13:





3		6	
4PCS		4PCS	

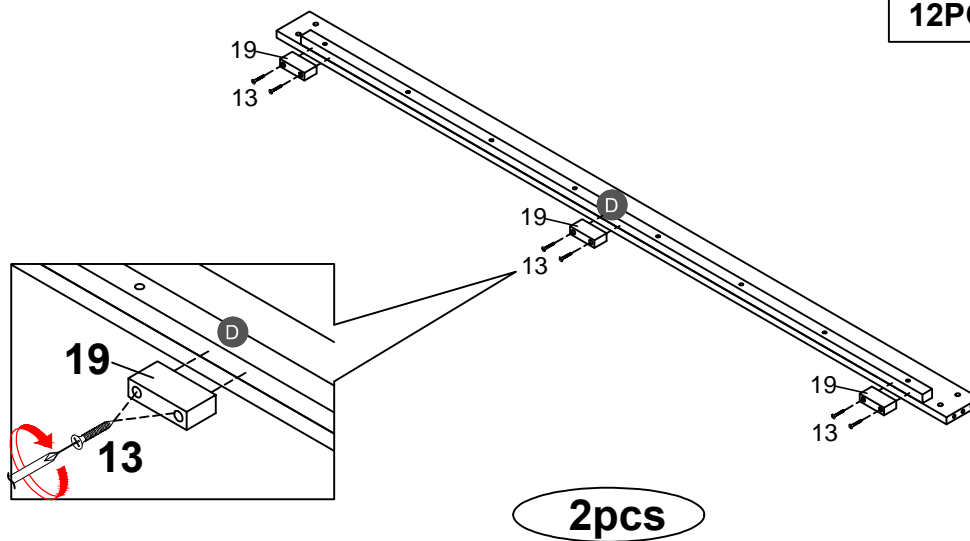
STEP 14:






Drawer stopper (19) with lower side rail (D) by using screw (13).


13		19	
12PCS		6PCS	

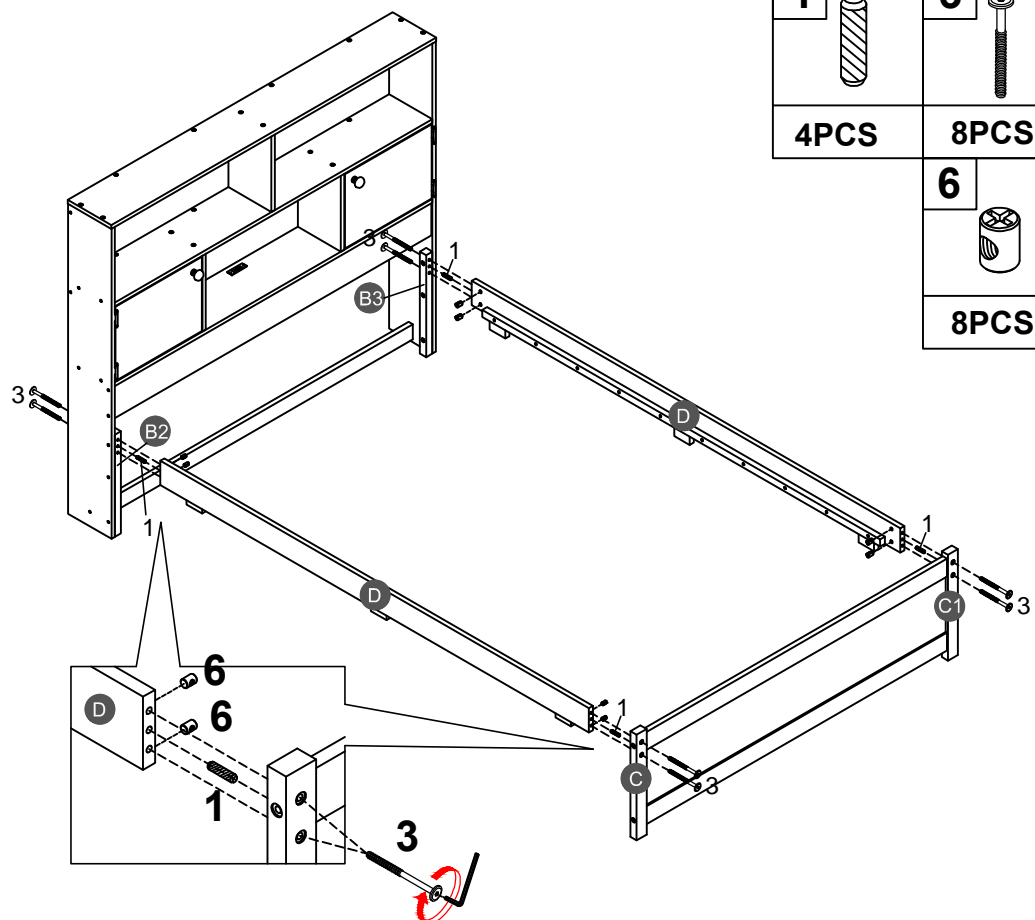STEP 15:




1		3	
4PCS		8PCS	
		6	
		8PCS	

STEP 16:

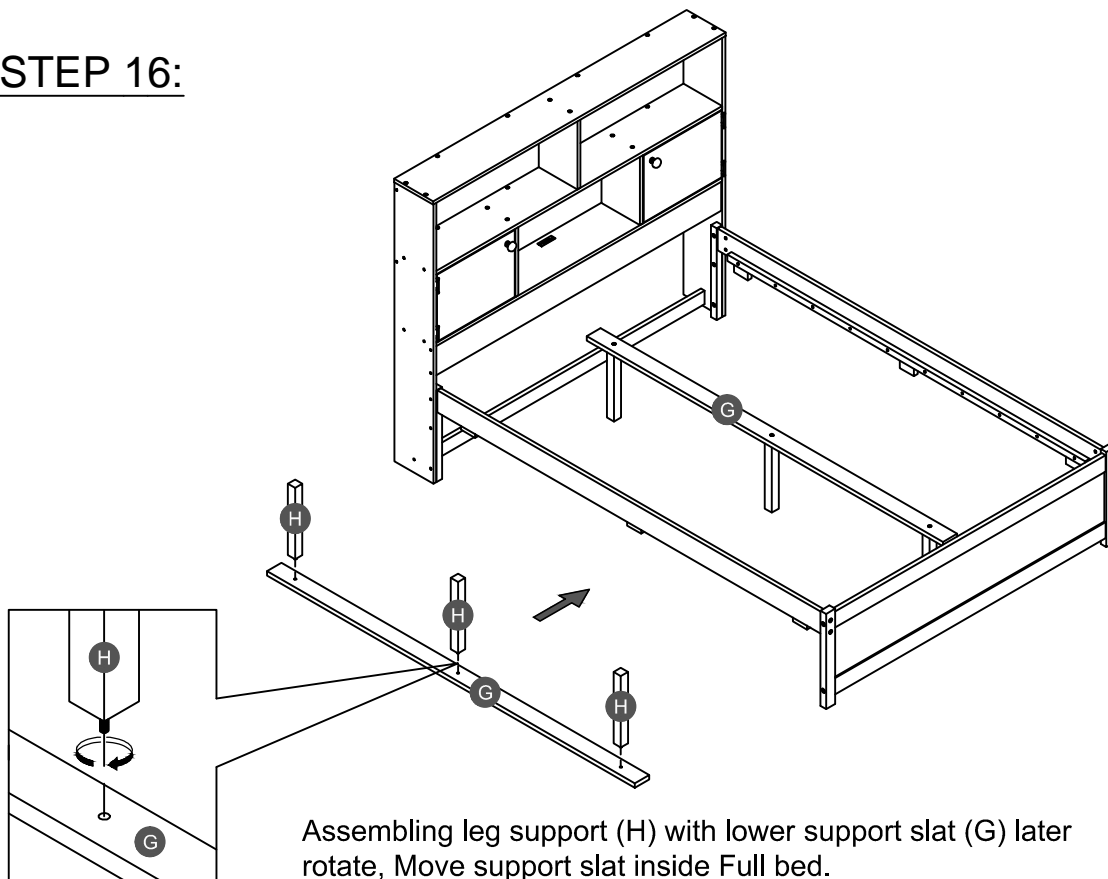


STEP 17:

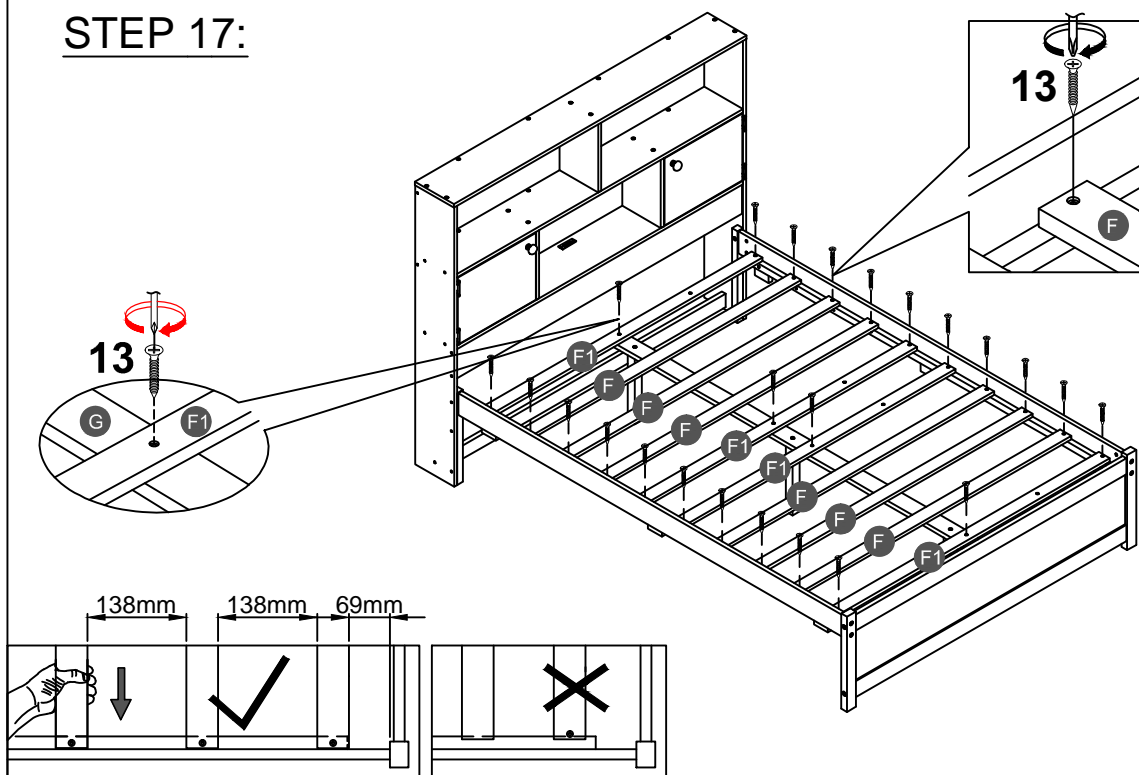




Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing, hold it in place with one hand, then lock the screw.

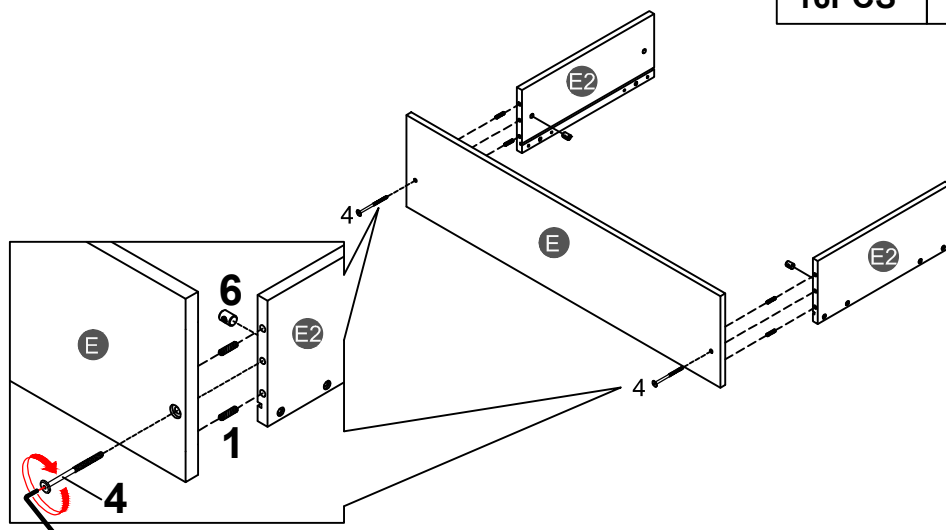
STEP 18:






x 4

1		4		6	
16PCS		8PCS		8PCS	

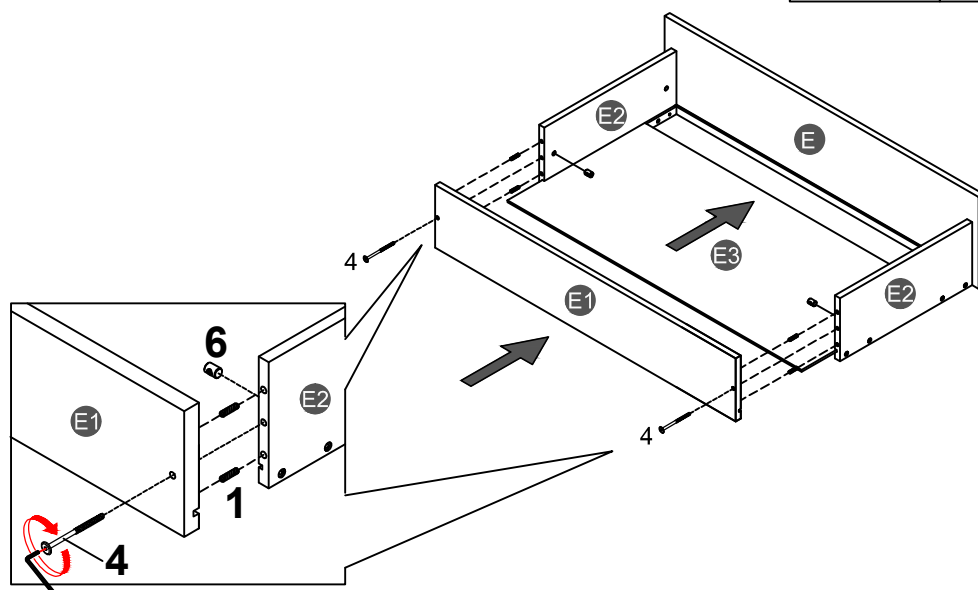


STEP 19:





x 4


1		4		6	
16PCS		8PCS		8PCS	

STEP 20:


2	8	13
		
16PCS	16PCS	32PCS

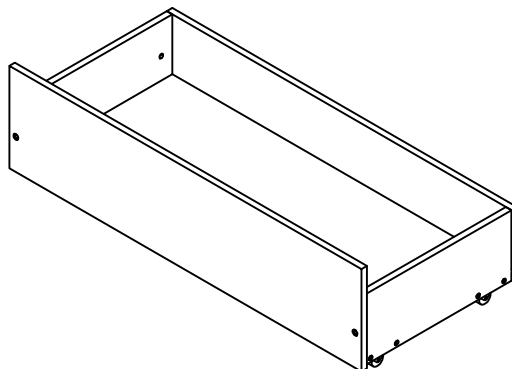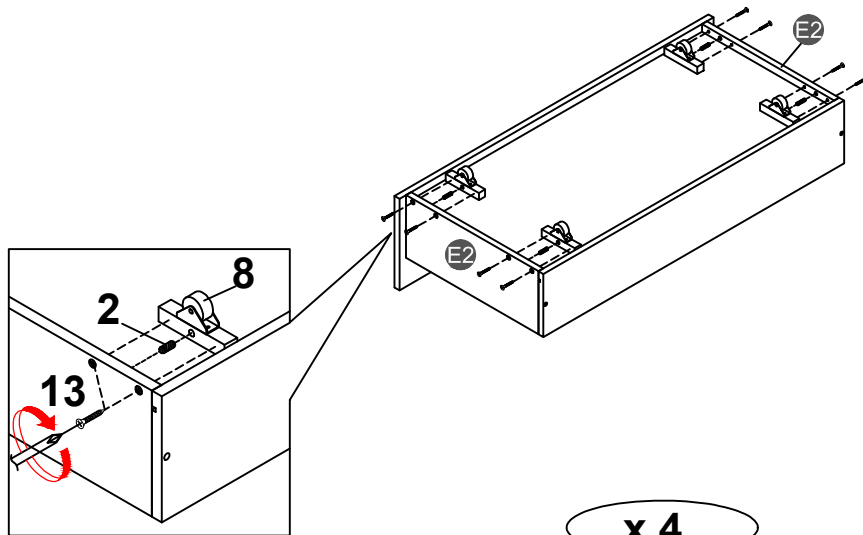

STEP 21:

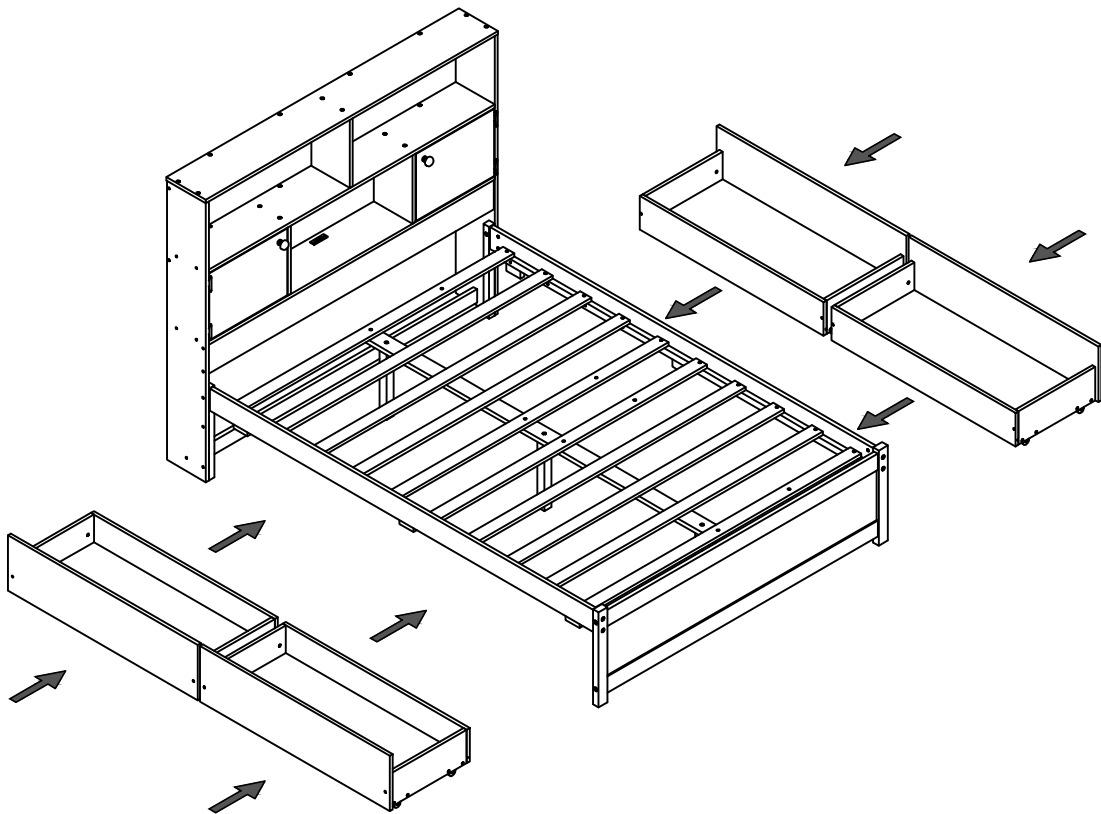

Push Drawer under the bottom of Bunk Bed.

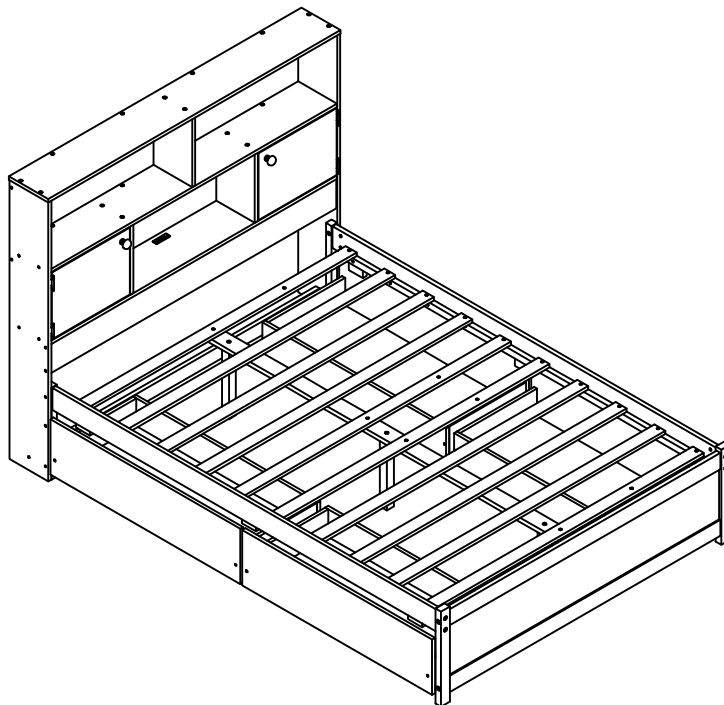

Make sure to tighten all the screws of the bed.