


ASSEMBLY INSTRUCTION ITEM NO: 191B1635DZ-1 QUEEN / FULL PLATFORM BED

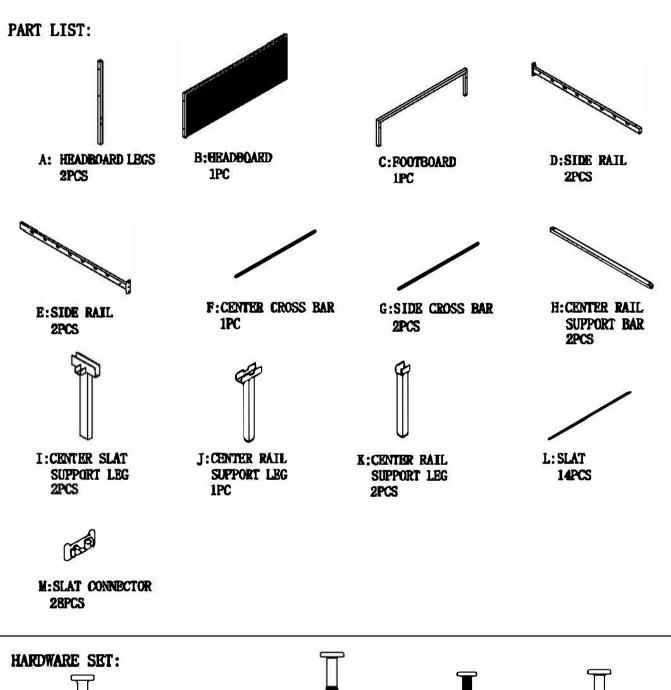

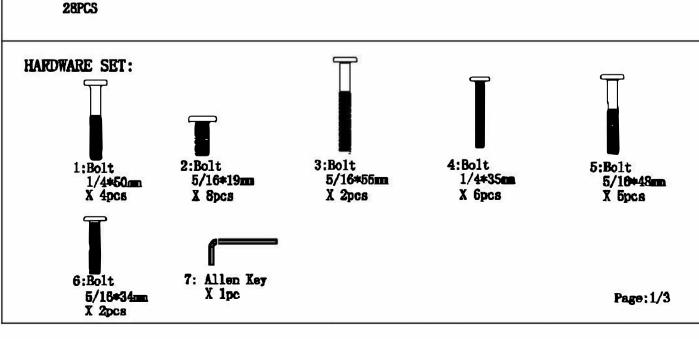


Note: Please do not tighten all bolts until the bed is assembled completely.

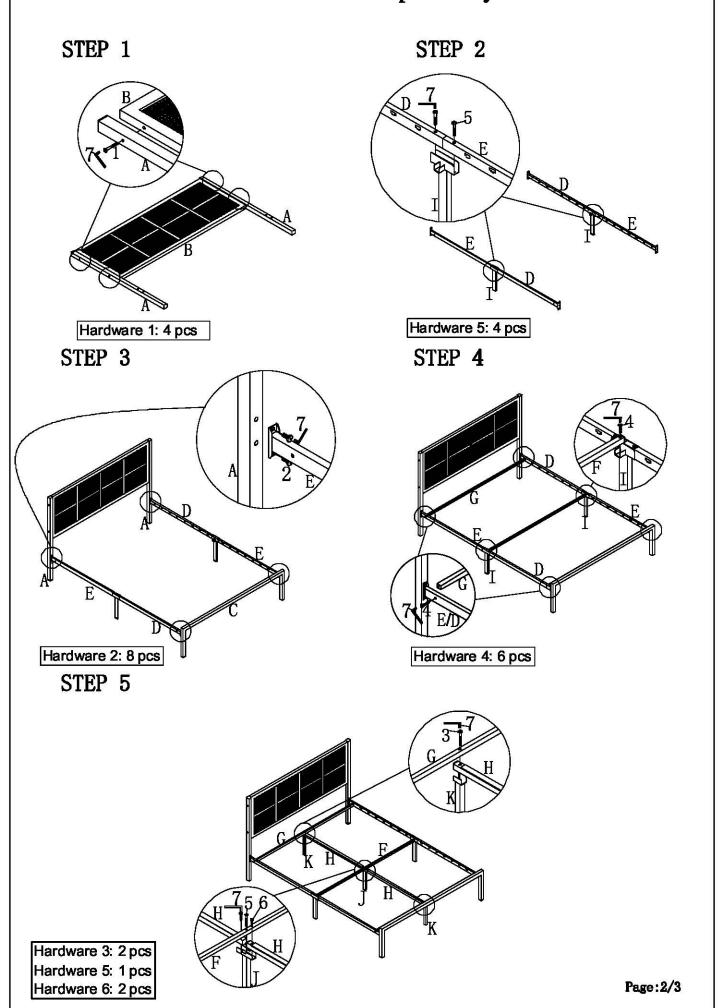


Note: Please do not tighten all bolts until the bed is assembled completely.

STEP 6

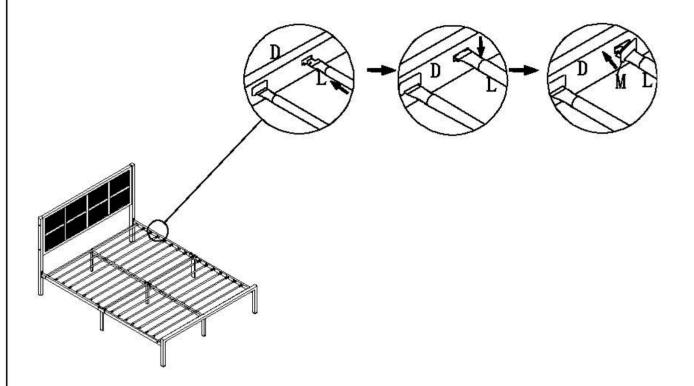

COMPLETED

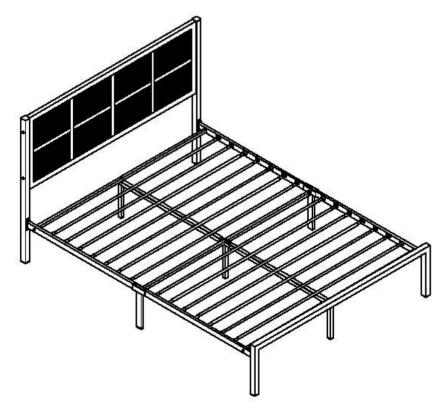

For items use on wooden floor, hard surfaces or carpets, it is recommended to Install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration.

Page: 3/3