




ASSEMBLY INSTRUCTIONS

1		1 PC
2		4 PCS



A	 Nut 5/16"*13mm	8 PCS
B	 Spring washer 5/16"*19mm	8 PCS
C	 Lock washer 5/16"*11mm	8 PCS
D	 Wrech 13*90mm	1 PC

ASSEMBLY INSTRUCTION

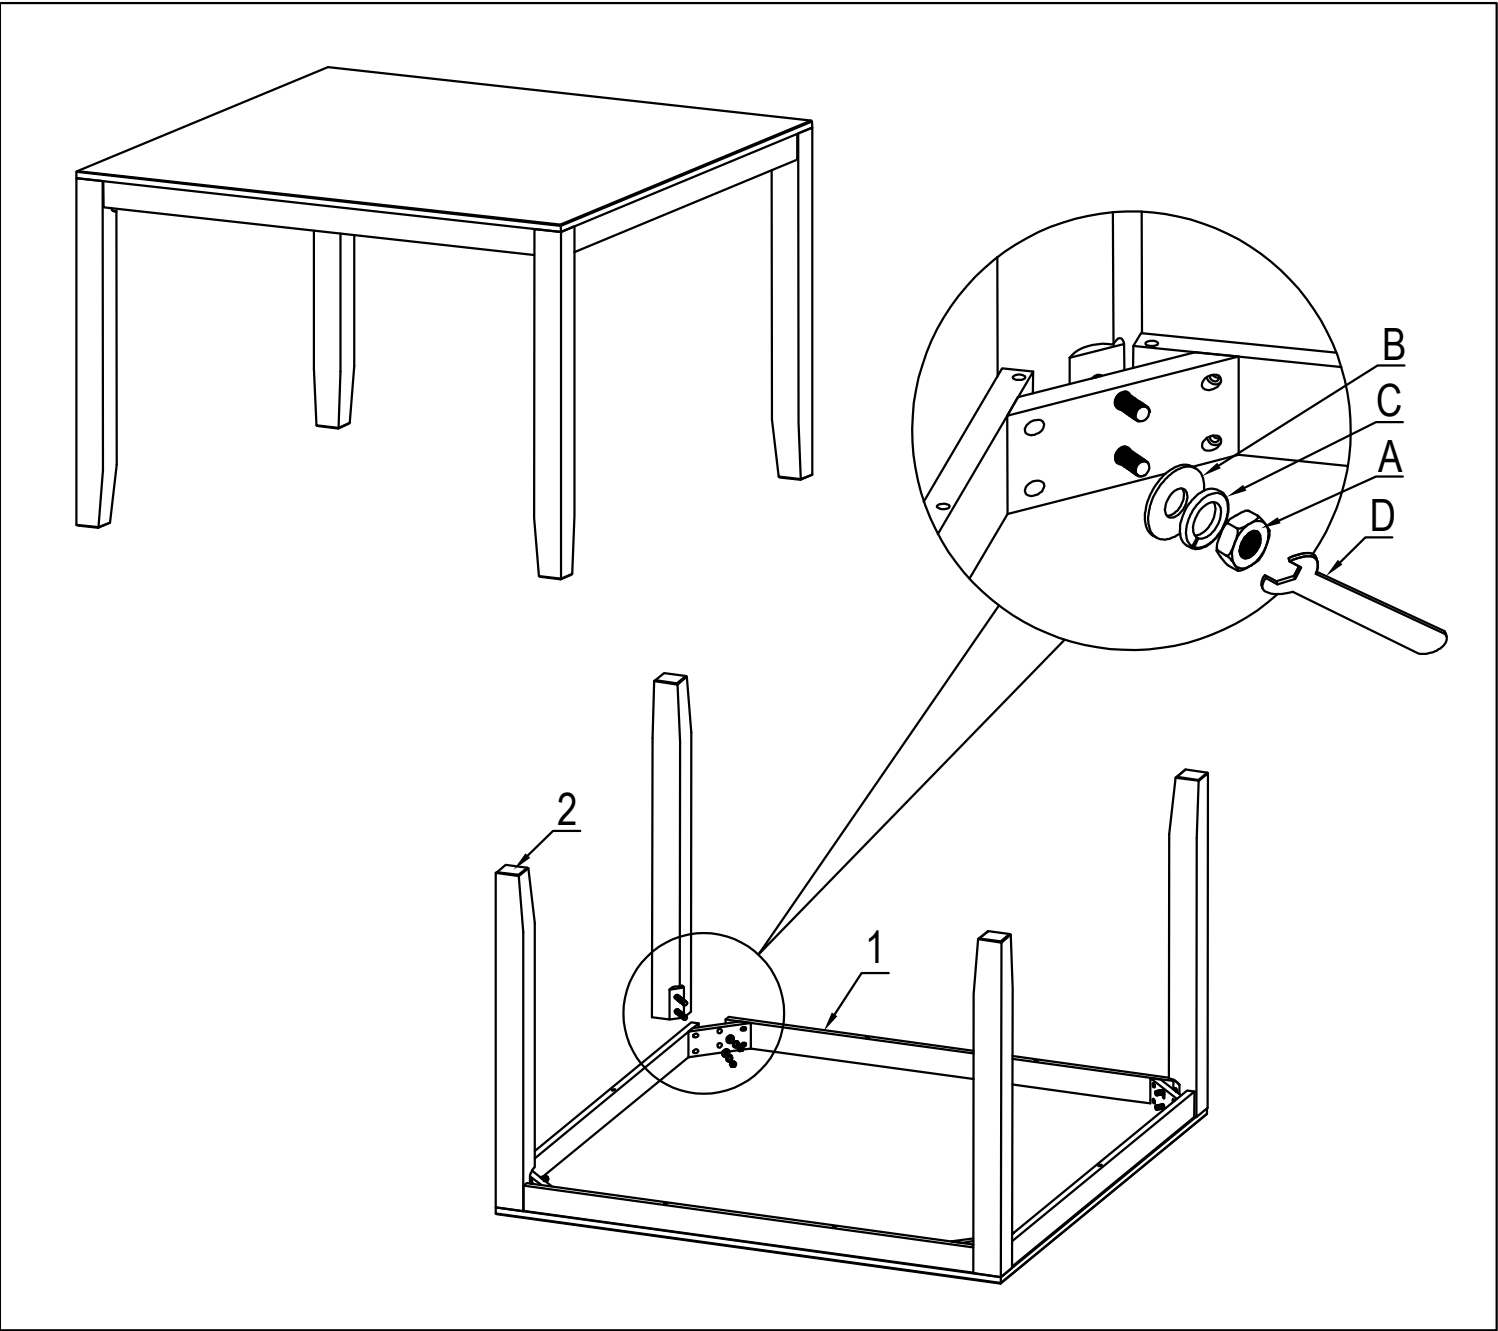

DO NOT TIGHTEN ALL BOLT UNTIL COMPLETELY ASSEMBLED.


ASSEMBLY INSTRUCTIONS

1		1 PC
2		1 PC
3		2 PCS


A	 Bolt 1/4"*20*3-1/4" (chair back leg corner)	4 PCS
B	 Bolt 1/4"*20*2-1/4" (front leg)	4 PCS
C	 Bolt 1/4"*20*1-3/4" (chair back center)	3 PCS/
D	 Allen key 4*60mm	1 PCS

ASSEMBLY INSTRUCTION


Step 1

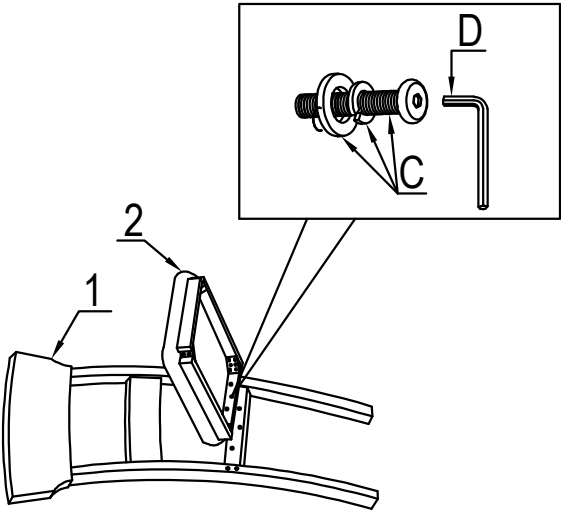


Step 2

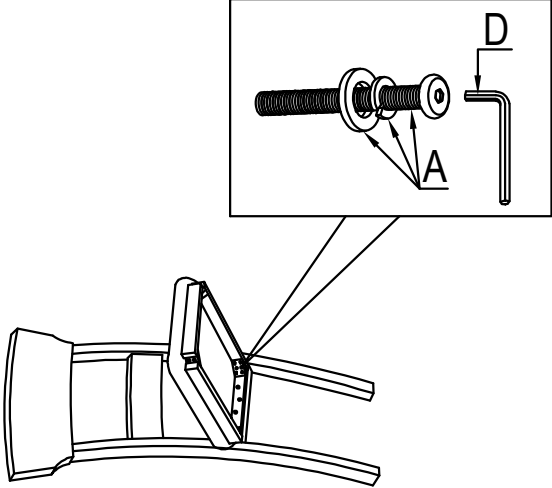

Step 3

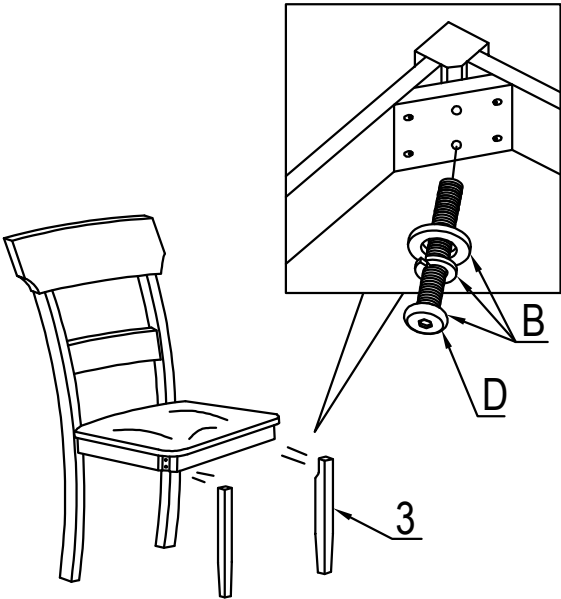

Step 4

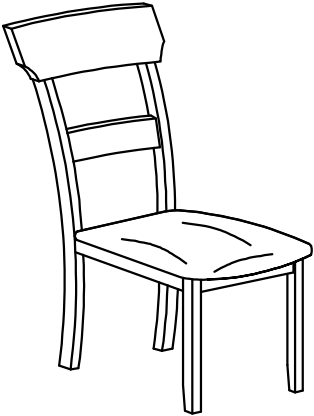

DO NOT TIGHTEN ALL BOLT UNTIL COMPLETELY ASSEMBLED.