



# ASSEMBLY INSTRUCTIONS

## TWIN LOFT BED WITH CHEST

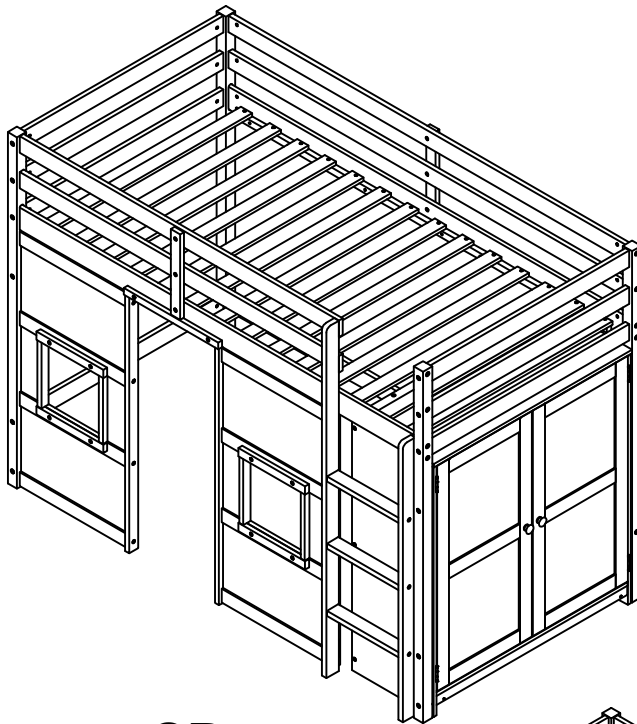

OR

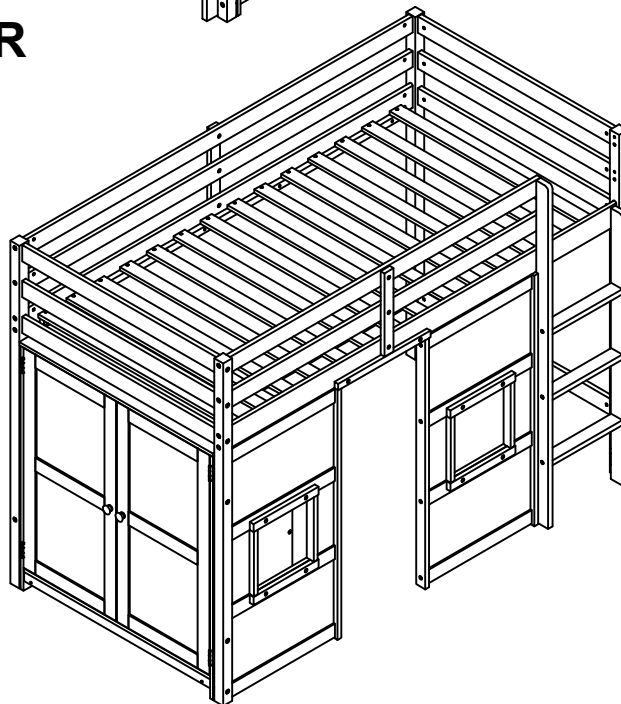

**WF310442/WF310443**

## SAFETY WARNINGS AND GENERAL NOTES:

Follow the information on the warnings on the loft bed end structure and on the carton. Do not remove the warning label from the bed. Always use the recommended size mattress on mattress support, or both, to help prevent the likelihood of entrapment or falls.

The top surface of the mattress must be at least 5\*inch (127mm) below the upper edge of the guardrail.

Do not allow children under 6 years of age to use the upper bunk.

Periodically check and ensure the guardrail, ladder and other components are in their proper position, free from damage, and all connectors are tight.

Do not allow horseplay on or under beds.

Always prohibit jumping on the bed.

Prohibit more than one person on upper bunk.

Always use the ladder for entering and leaving the upper bunk.

Do not use substitute parts. Contact the manufacturer or dealer for replacement parts.

Use of a night-light may provide added safety precaution for a child using the upper bunk.

Always use guardrails on both long sides of the upper bunk.

If the loft bed will be placed next to a wall, the guardrail that runs the full length of the bed should be placed against the wall to prevent entrapment between the bed and the wall.

The use of water or sleep flotation mattresses is prohibited.

**STRANGULATION HAZARD**-Never attach or hang items to any part of the loft bed that are not designed for use with the bed.

Keep these instructions for future reference.

We recommend assembling your loft bed on the shipping carton to protect your floor or carpet.

Be certain all staples are out of the box before beginning assembly on the shipping carton.


**USE ONLY MATTRESSES WHICH ARE 74"-75" LONG AND 38 1/2" WIDE ON UPPER. ENSURE THICKNESS OF MATTRESS DOES NOT EXCEED 6".**

**SURFACE OF MATTRESS MUST BE AT LEAST 5" (127MM) BELOW THE UPPER EDGE OF GUARDRAILS.**

Replacement Parts:




















Replacement Parts, including additional guardrails, may be obtained from any of our (GIGACLOUD TECHNOLOGY (USA) INC. 18961 ARENTH AVENUE, CITY OF INDUSTRY , CA, 91748.) dealers
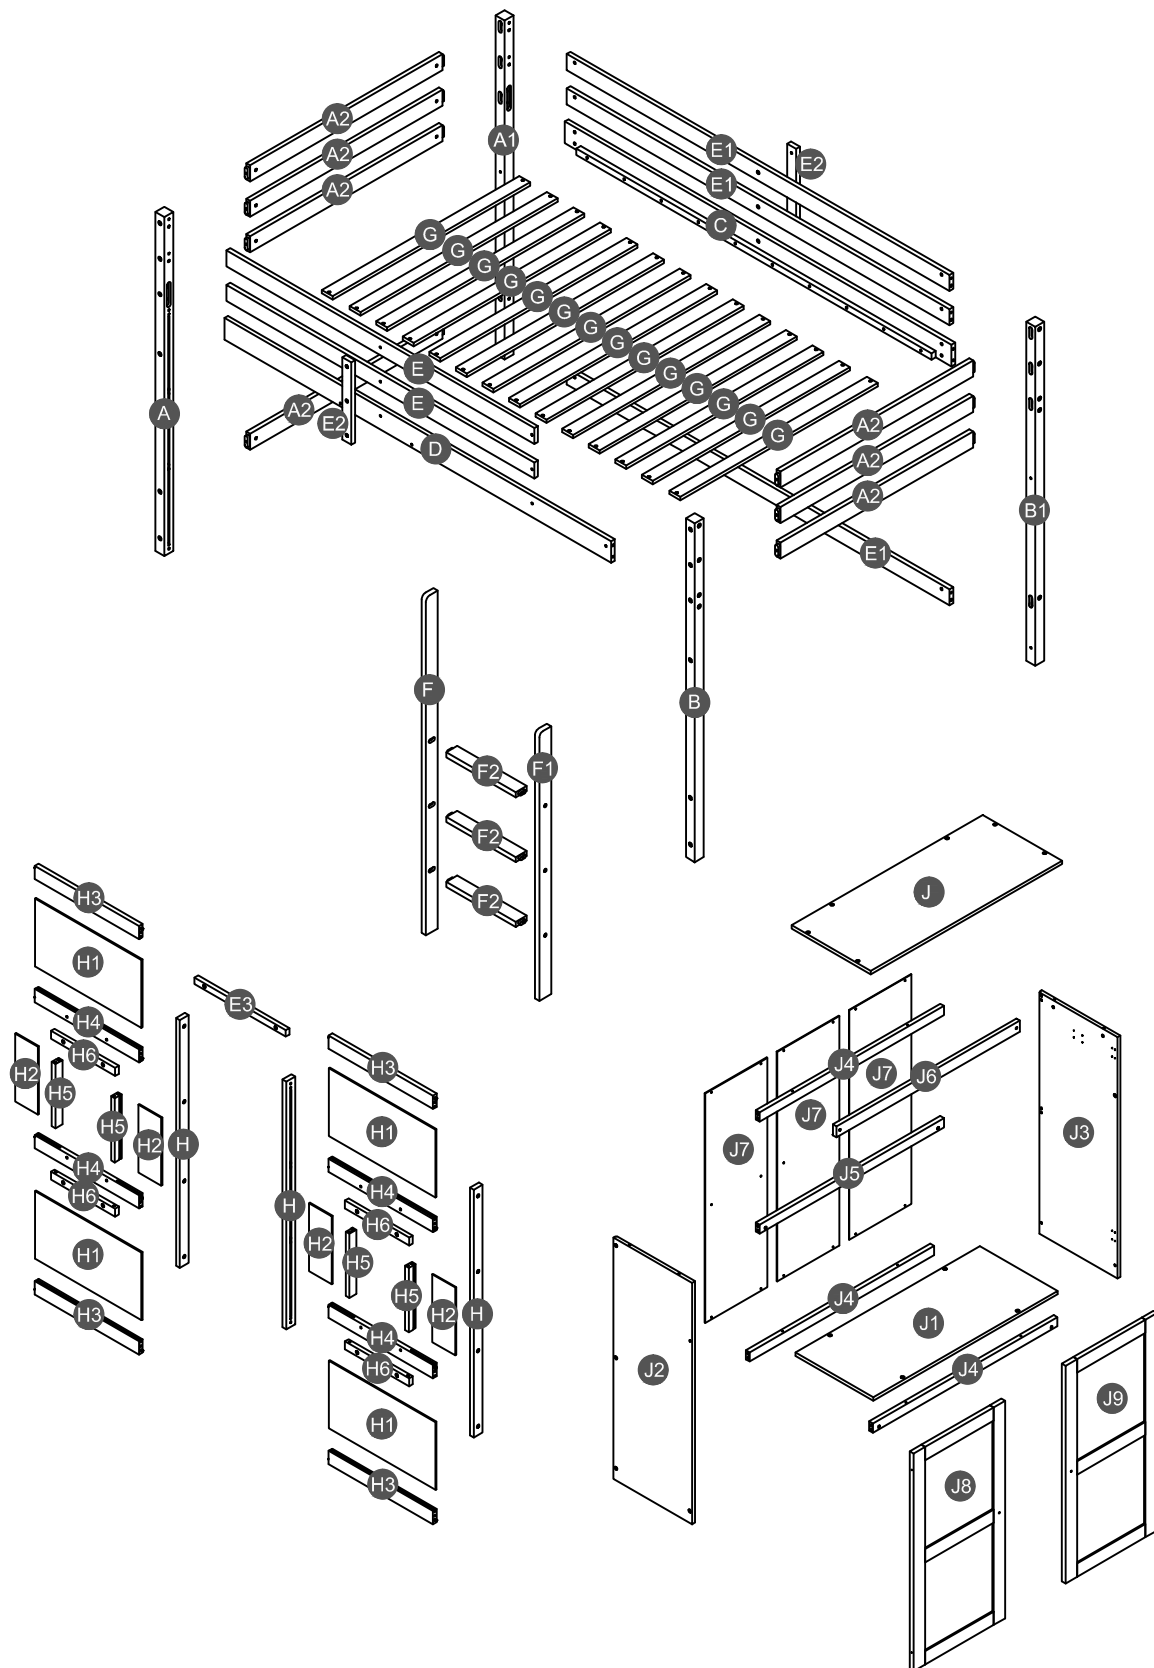
## Detail View















# Part List

## WF310442 + Hardware inside

<b>A</b>  Leg (Left Front) - 1pc	<b>A1</b>  Leg (Left Back) - 1pc	<b>A2</b>  Horizontal bar HB/FB - 7pcs
<b>B</b>  Leg (Right Front) - 1pc	<b>B1</b>  Leg (Right Back) - 1pc	<b>C</b>  Side rail (Back) - 1pc
<b>D</b>  Side rail (Front) - 1pc	<b>E</b>  Short guard rail (Front) - 2pcs	<b>E1</b>  Long guard rail (Back) - 2pcs
<b>E2</b>  Vertical guard rail - 2pcs	<b>F</b>  Long ladder (left) - 1pc	<b>F1</b>  Ladder (right) - 1pc
<b>F2</b>  Step ladder - 3pcs	<b>G</b>  Slat - 14pcs	<b>H5</b>  Vertical bar (Front) - 4pcs
<b>H6</b>  Horizontal bar (Front) - 4pcs	<b>J4</b>  Upper horizontal bar - 3pcs	<b>J5</b>  Lower horizontal bar - 1pc
<b>J6</b>  Horizontal bar - 1pc		

# Part List



**WF310443**



<b>H</b>  <p>Vertical bar (Front) - 3pcs</p>	<b>H1</b>  <p>Front panel - 4pcs</p>	<b>H2</b>  <p>Front panel - 4pcs</p>
<b>H3</b>  <p>Horizontal bar (Front) - 4pcs</p>	<b>H4</b>  <p>Horizontal bar (Front) - 4pcs</p>	<b>J</b>  <p>Top panel - 1pc</p>
<b>J1</b>  <p>Bottom panel - 1pc</p>	<b>J2</b>  <p>Side panel (Left) - 1pc</p>	<b>J3</b>  <p>Side panel (Right) - 1pc</p>
<b>J7</b>  <p>Back panel - 3pcs</p>	<b>J8</b>  <p>Door (Left) - 1pc</p>	<b>J9</b>  <p>Door (Right) - 1pc</p>

## Hardware List WF310442

<b>1</b>  Ø10*40mm Wood dowel (8pcs)	<b>2</b>  Ø8*30mm Wood dowel (20pcs)	<b>3</b>  (Ø15)1/4"*100mm Hex-Head bolts (18pcs)
<b>4</b>  (Ø15)1/4"*80mm Hex-Head bolts (18pcs)	<b>5</b>  (Ø12)1/4"*70mm Hex-Head bolts (12pcs)	<b>6</b>  (Ø12)1/4"*60mm Hex-Head bolts (18pcs)
<b>7</b>  (Ø12)1/4"*40mm Hex-Head bolts (4pcs)	<b>8</b>  (Ø12)1/4"*30mm Hex-Head bolts (16pcs)	<b>9</b>  (Ø12)1/4"*15mm Hex-Head bolts (2pcs)
<b>10</b>  1/4"*15 (9.5mm) Horizontal-Hole bolts (64pcs)	<b>11</b>  (Ø12)1/4"*40mm Wood screw bolts (6pcs)	<b>12</b>  (1/4")4.5*58mm Allen key (2pcs)
<b>13</b>  Ø4*30mm Wood screws (30pcs)	<b>14</b>  63*40*30mm Metal bracket (2pcs)	<b>15</b>  (Ø13)1/4"*14mm Connect bolt (2pcs)
<b>16</b>  Ø3.5*15mm Wood screws (18pcs)	<b>17</b>  Ø3.5*15mm Wood screws (60pcs)	<b>18</b>  Ø10*20mm Wood dowel (1pc)
<b>19</b>  40*17*17*1.6mm Metal bracket (4pcs)	<b>20</b>  70*37*28mm (135°) Metal bracket (4pcs)	<b>21</b>  42*12*1mm Metal magnet (2pcs)
<b>22</b>  140*32*19 mm Door stopper (1pc)	<b>23</b>  Ø38*31mm Pine Knob (2pcs)	<b>24</b>  3/16"*25mm Ph zinc(Knob) (2pcs)
<b>25</b>  50*24*24*2mm Metal bracket (1pc)	<div style="display: flex; align-items: center;">  <div> <p><b>ASSEMBLY TOOLS REQUIRED ( NOT INCLUDED )</b></p>  <p>PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !</p> </div> </div>	



## STEP 1:

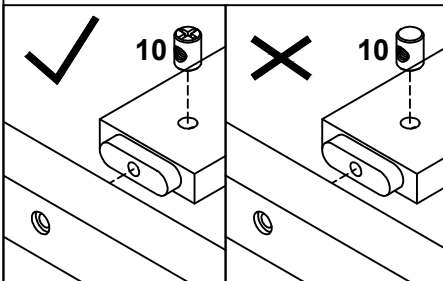
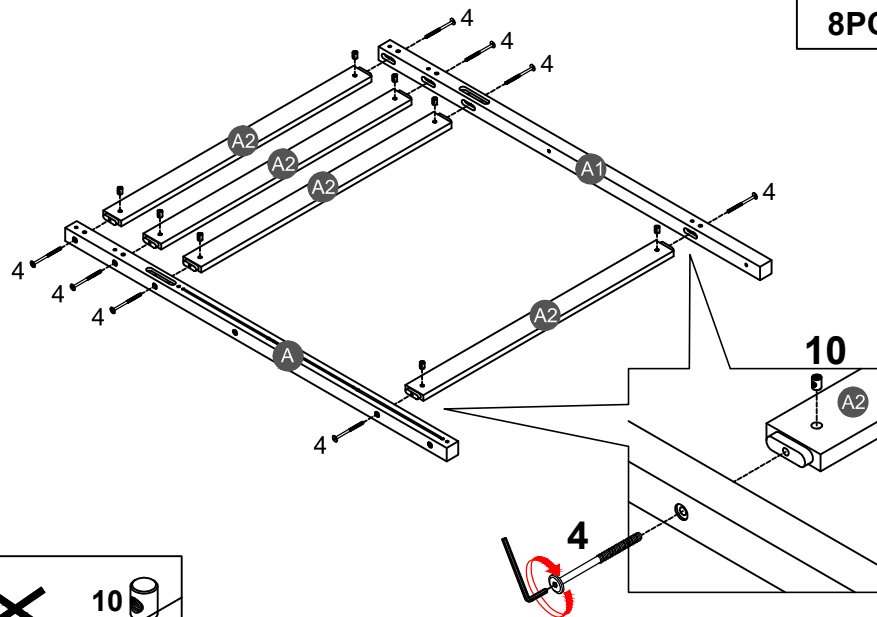
4		10	
8PCS		8PCS	



Note: Part 10 will face up with the "x" mark on it, otherwise it cannot be tightened


## STEP 2:

4		10	
6PCS		6PCS	

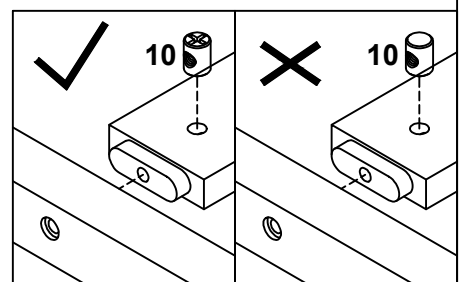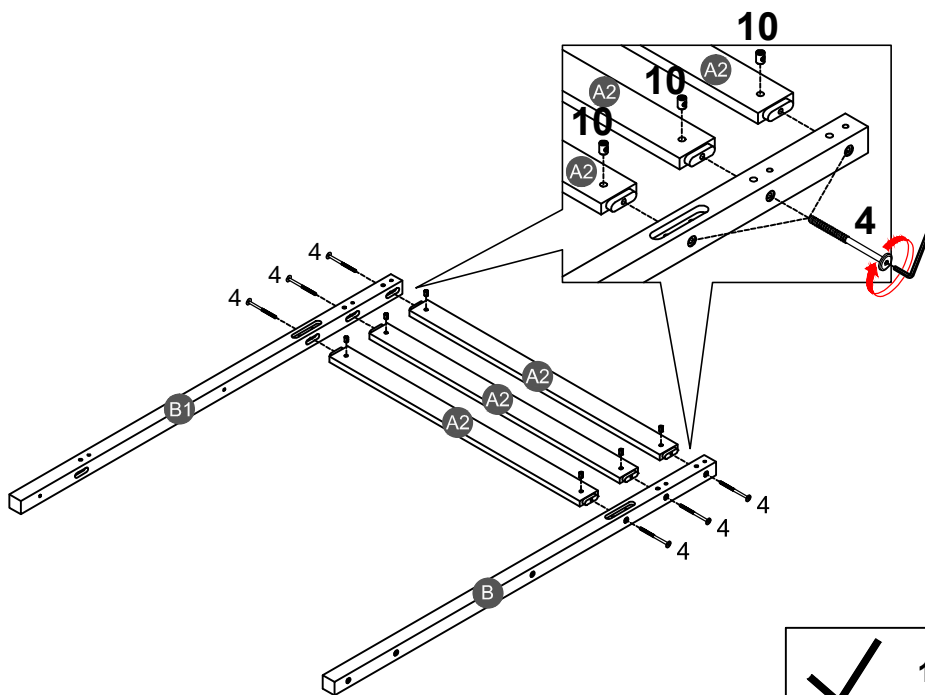


Note: Part 10 will face up with the "x" mark on it, otherwise it cannot be tightened

**STEP 3:**

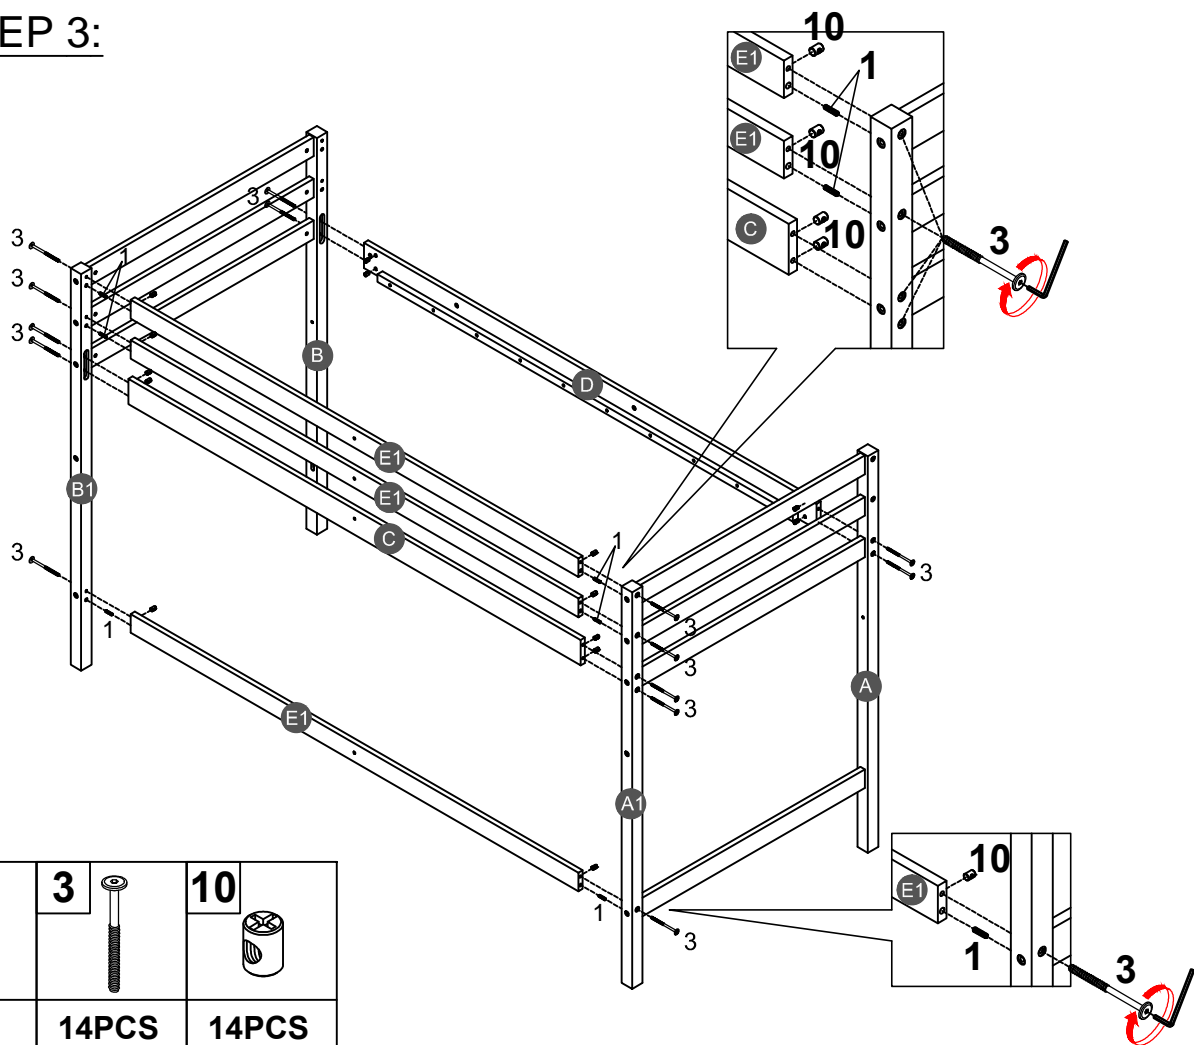


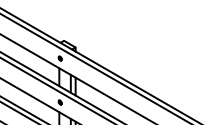



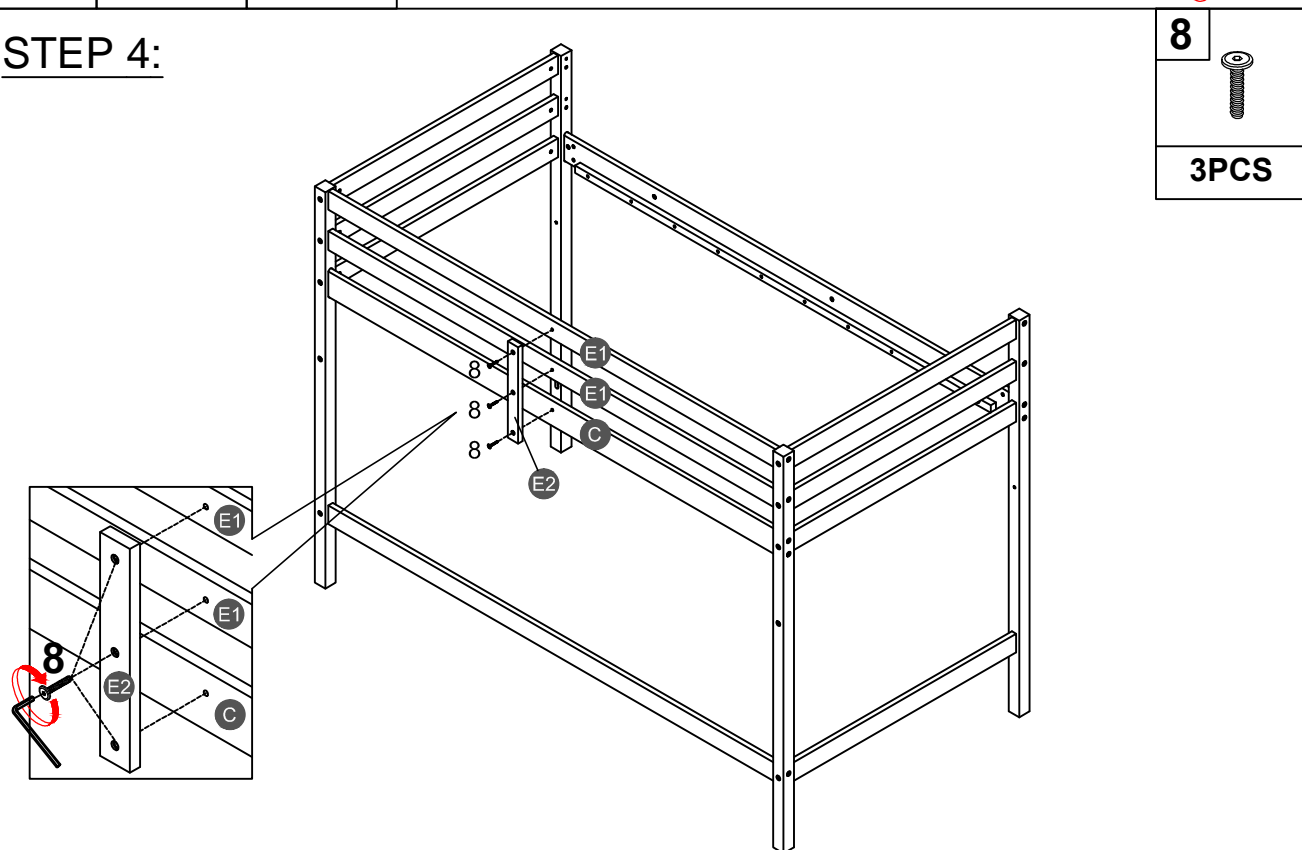
**STEP 4:**








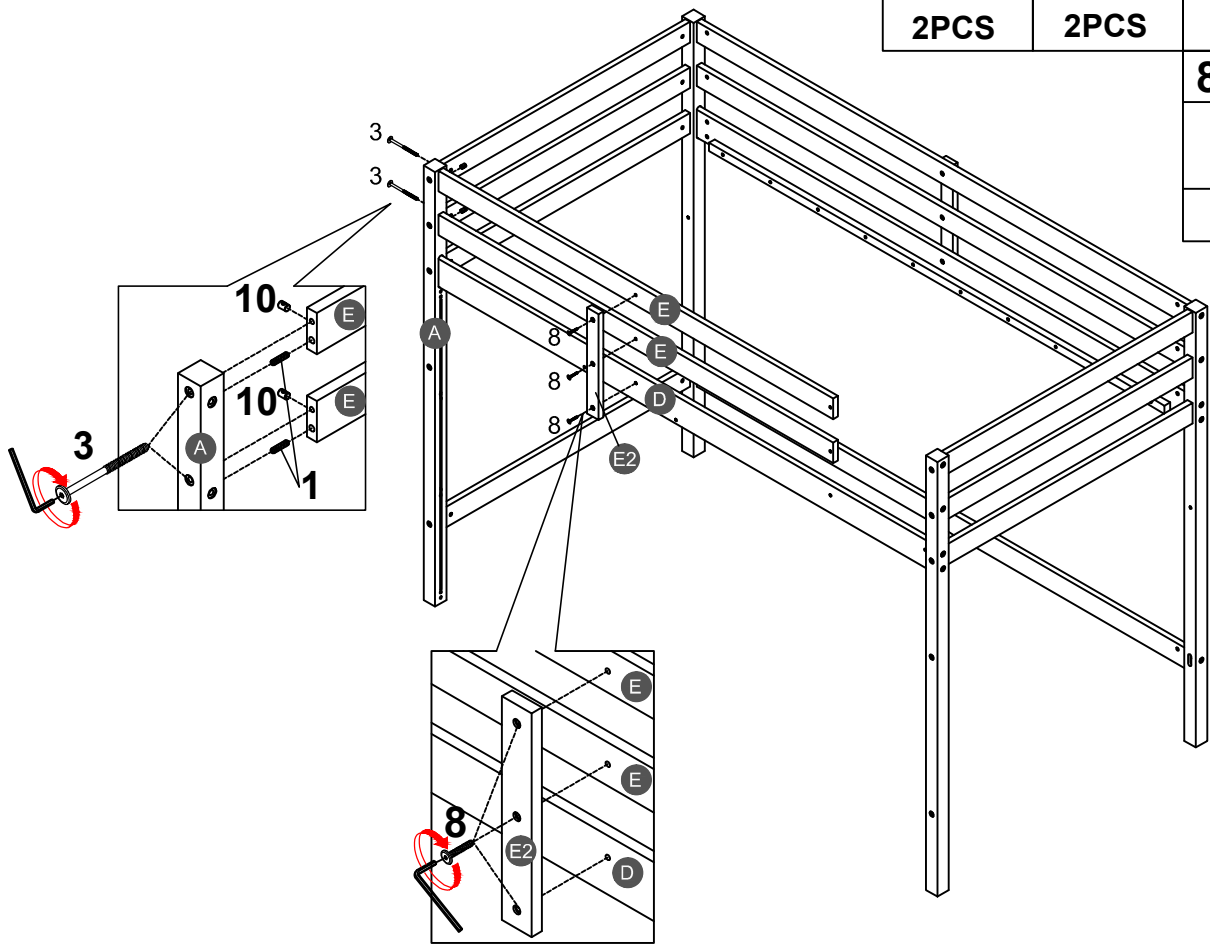



**STEP 5:**

<b>1</b>		<b>3</b>		<b>10</b>			
<b>2PCS</b>		<b>2PCS</b>		<b>2PCS</b>			
							
						<b>8</b>	
						<b>3PCS</b>	




**STEP 6:**

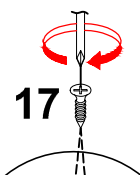
<b>17</b>		<b>6</b>		<b>10</b>		<b>19</b>	
<b>4PCS</b>		<b>6PCS</b>		<b>6PCS</b>		<b>1PC</b>	
							<b>25</b>
							
							<b>1PC</b>

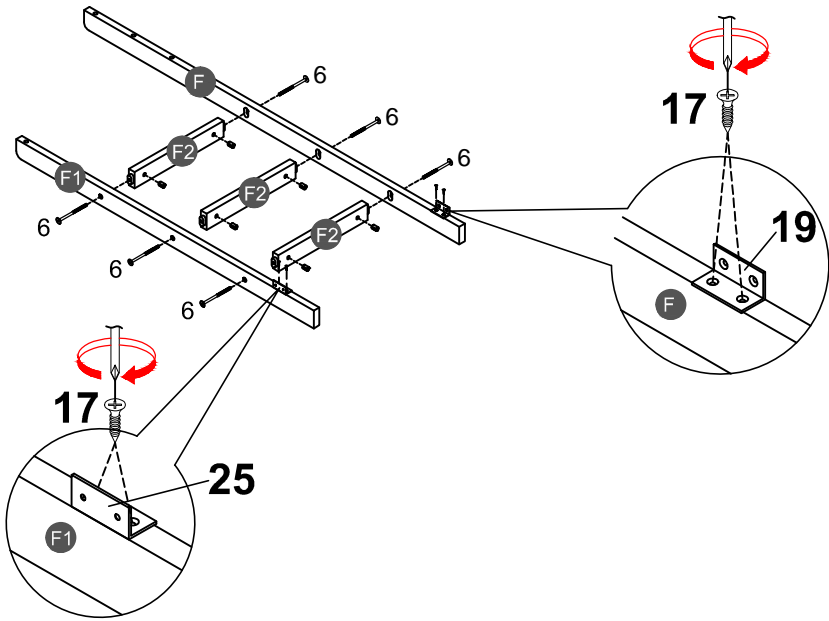

## STEP 7:

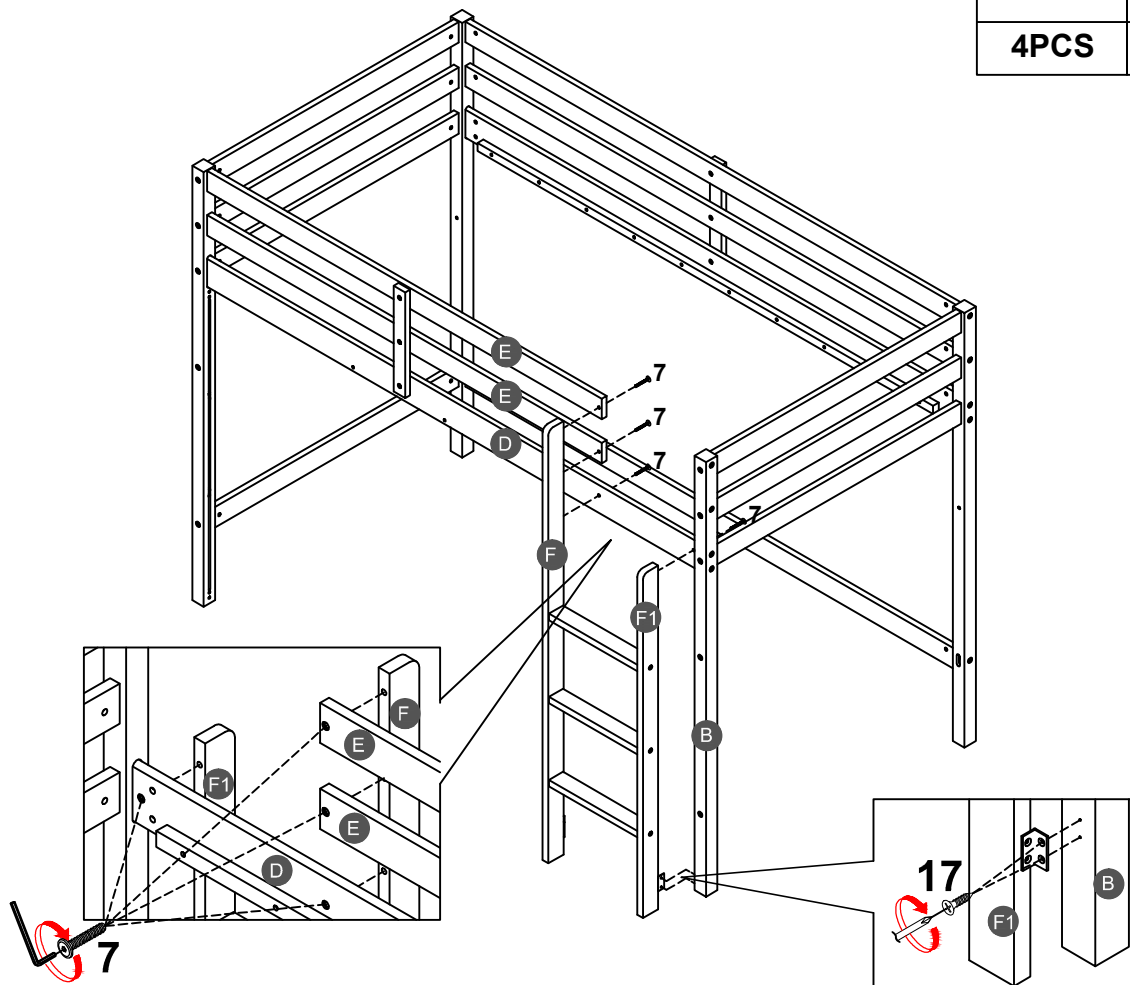

## STEP 8:

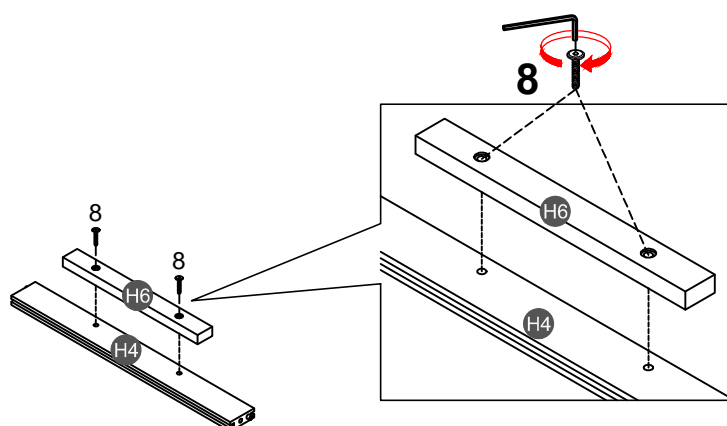


4pcs

STEP 9:


2




16PCS

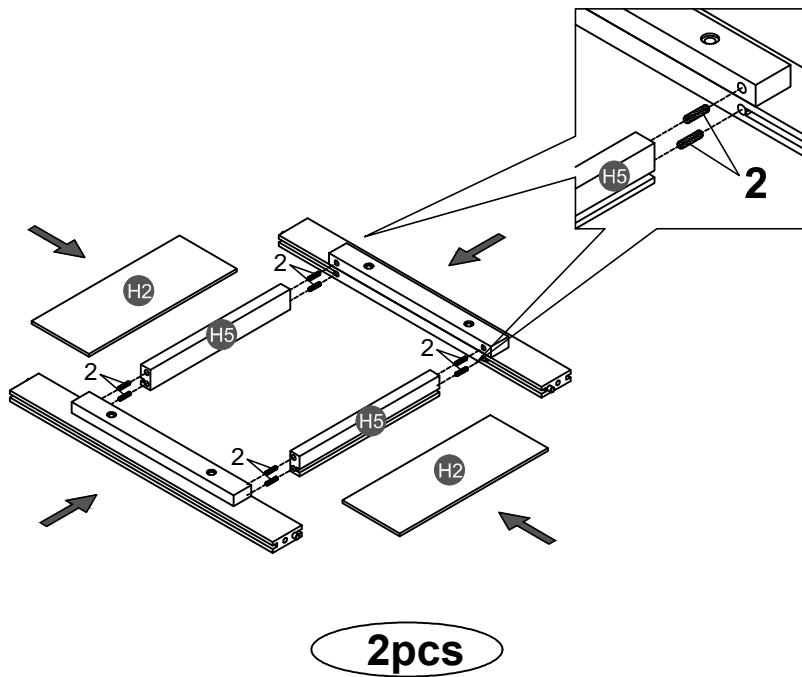

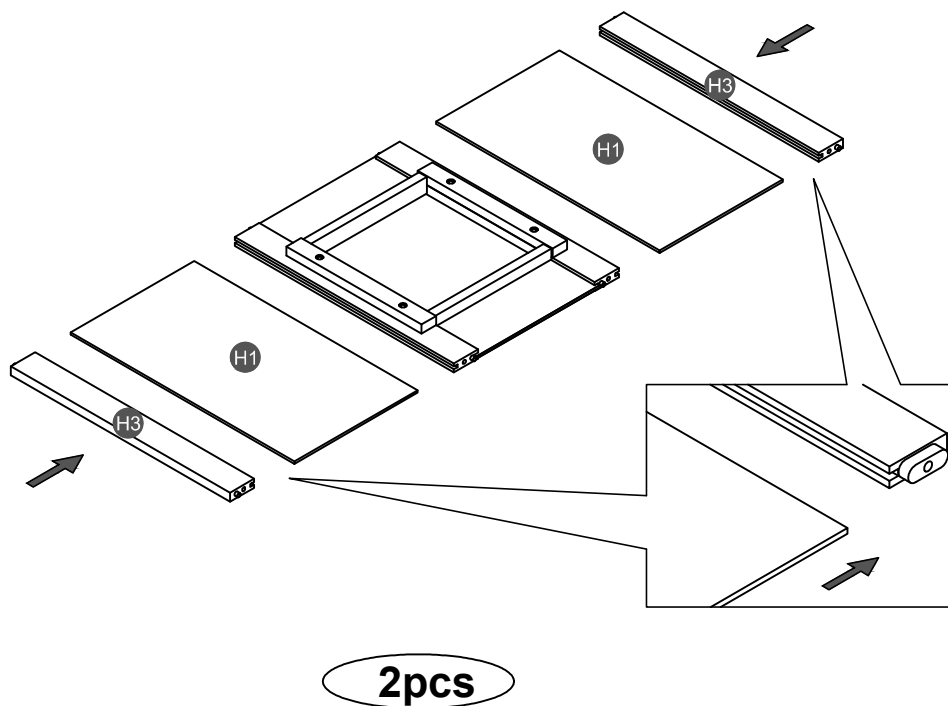


STEP 10:

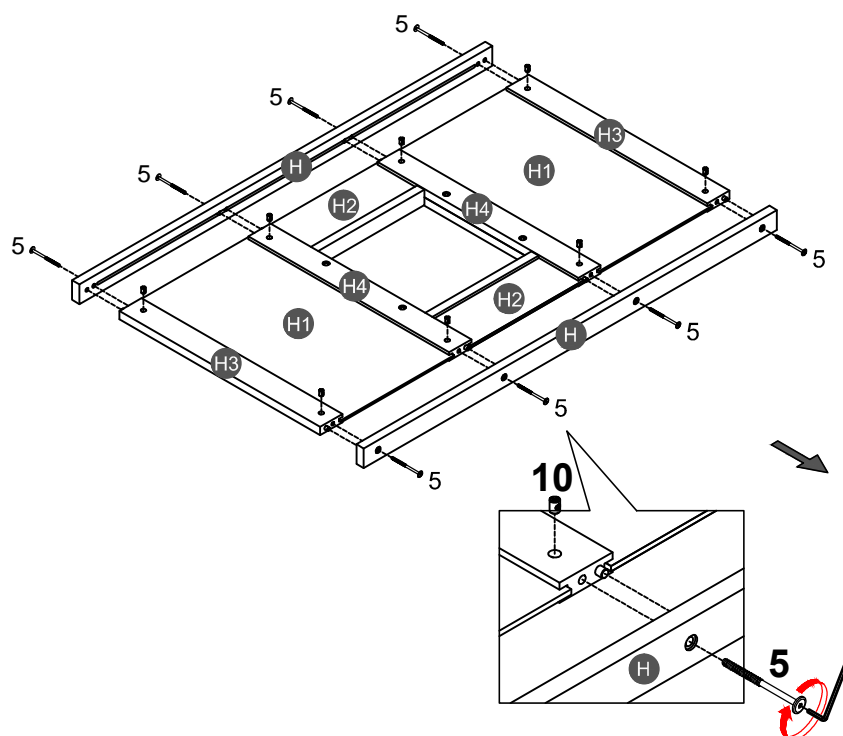


## STEP 11:



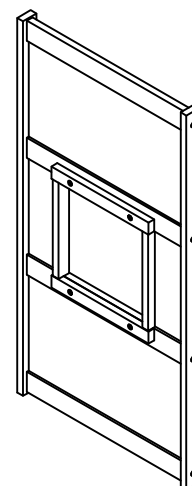


<b>5</b>		<b>10</b>	
<b>8PCS</b>		<b>8PCS</b>	

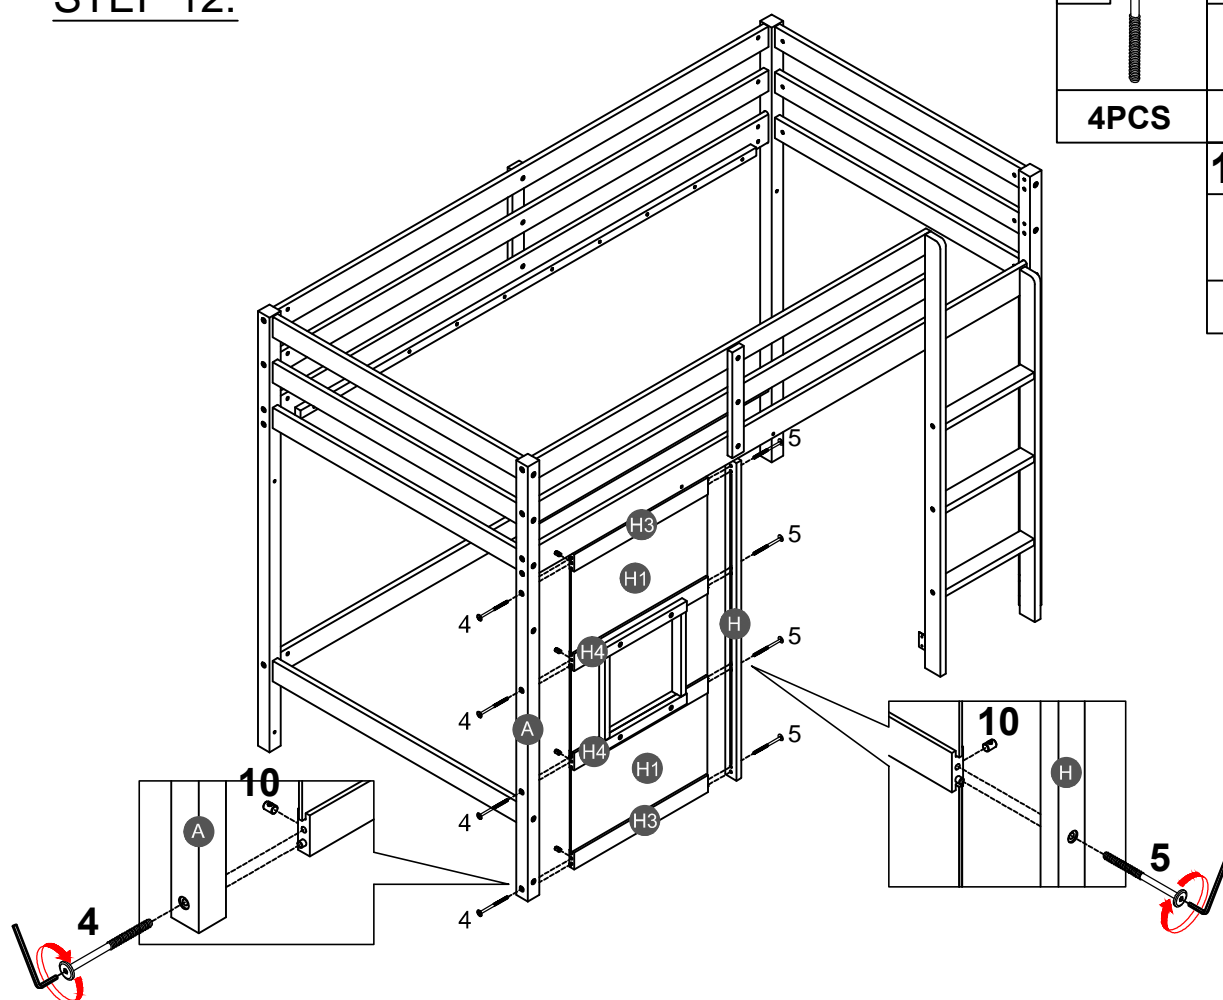


## STEP 12:



<b>4</b>		<b>5</b>	
<b>4PCS</b>		<b>4PCS</b>	
		<b>10</b>	
		<b>8PCS</b>	

## STEP 13:

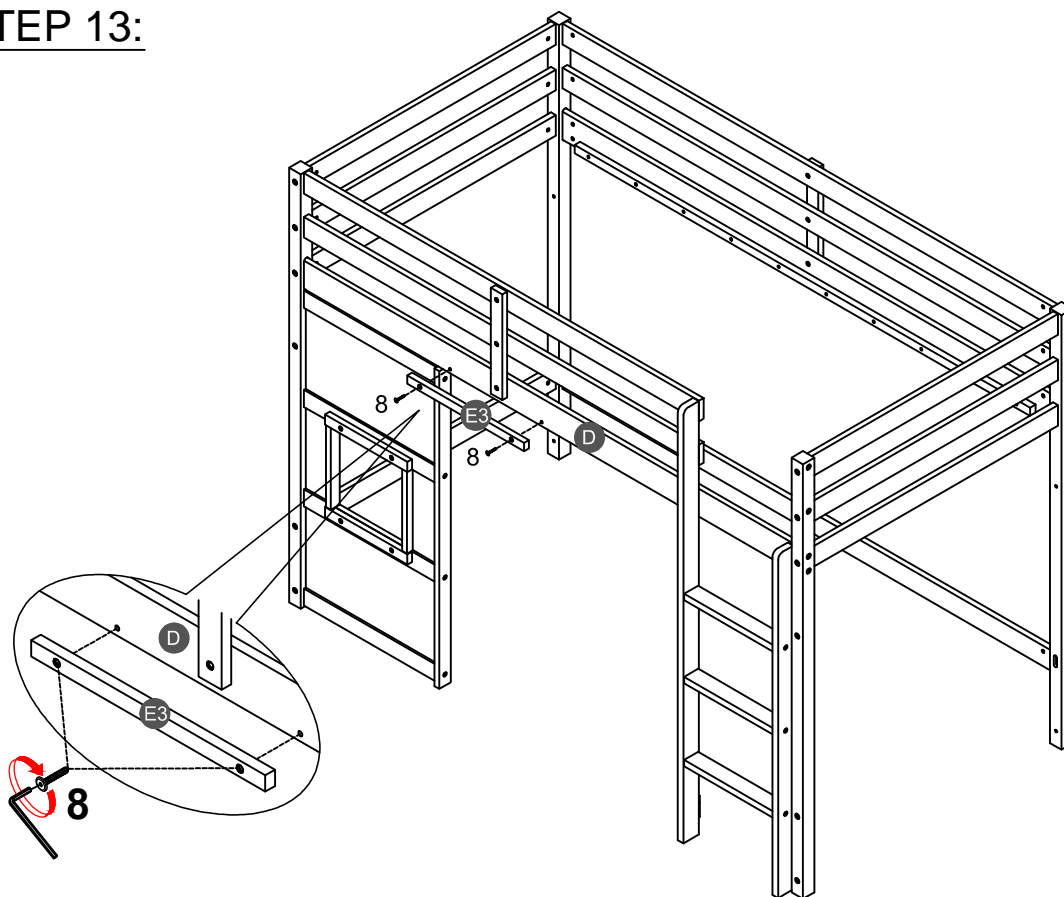


8



2PCS

## STEP 14:

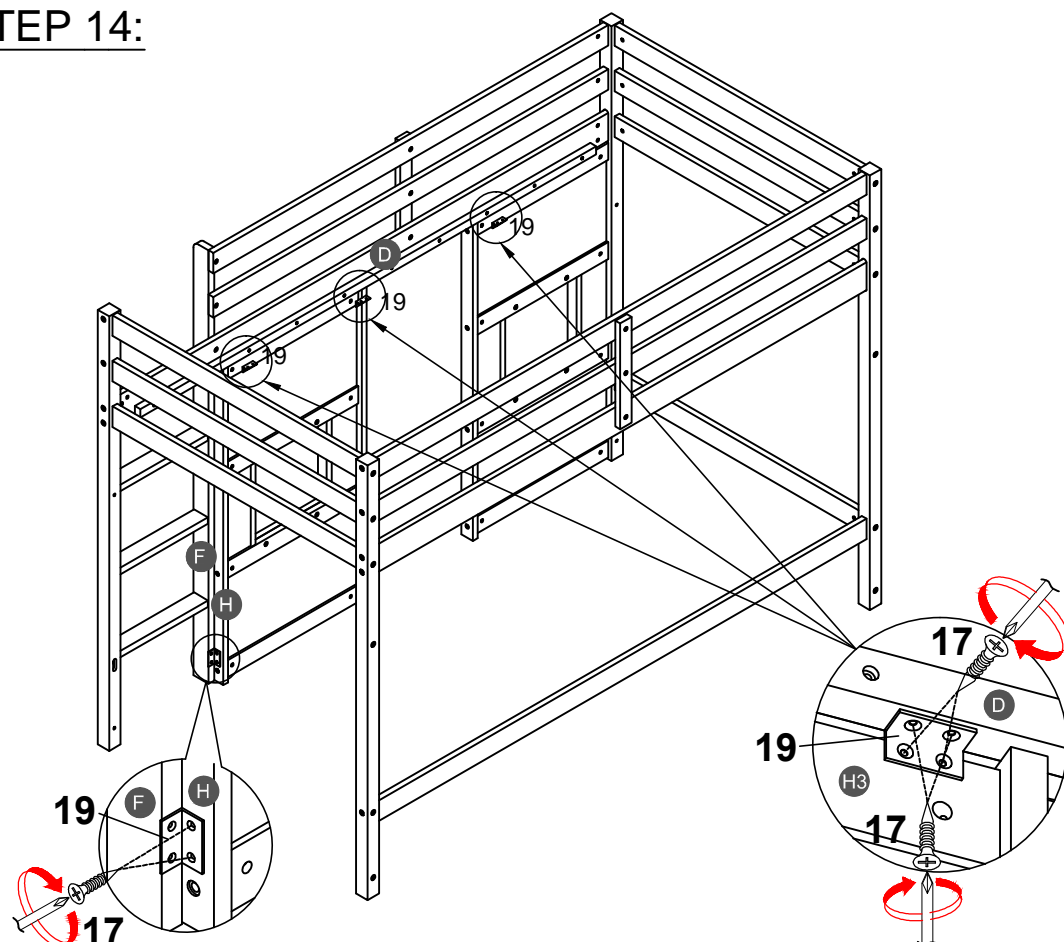

17






14PCS


19





3PCS


## STEP 15:
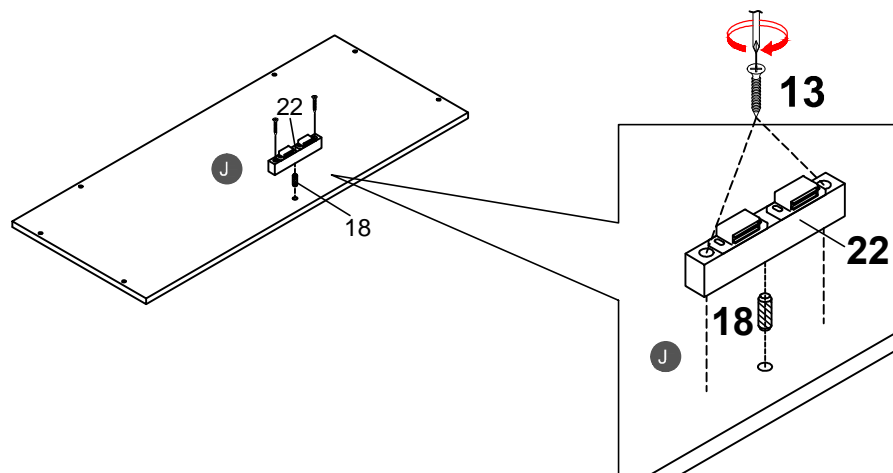
<b>13</b>		<b>18</b>		<b>22</b>	
<b>2PCS</b>		<b>1PC</b>		<b>1PC</b>	






## STEP 16:
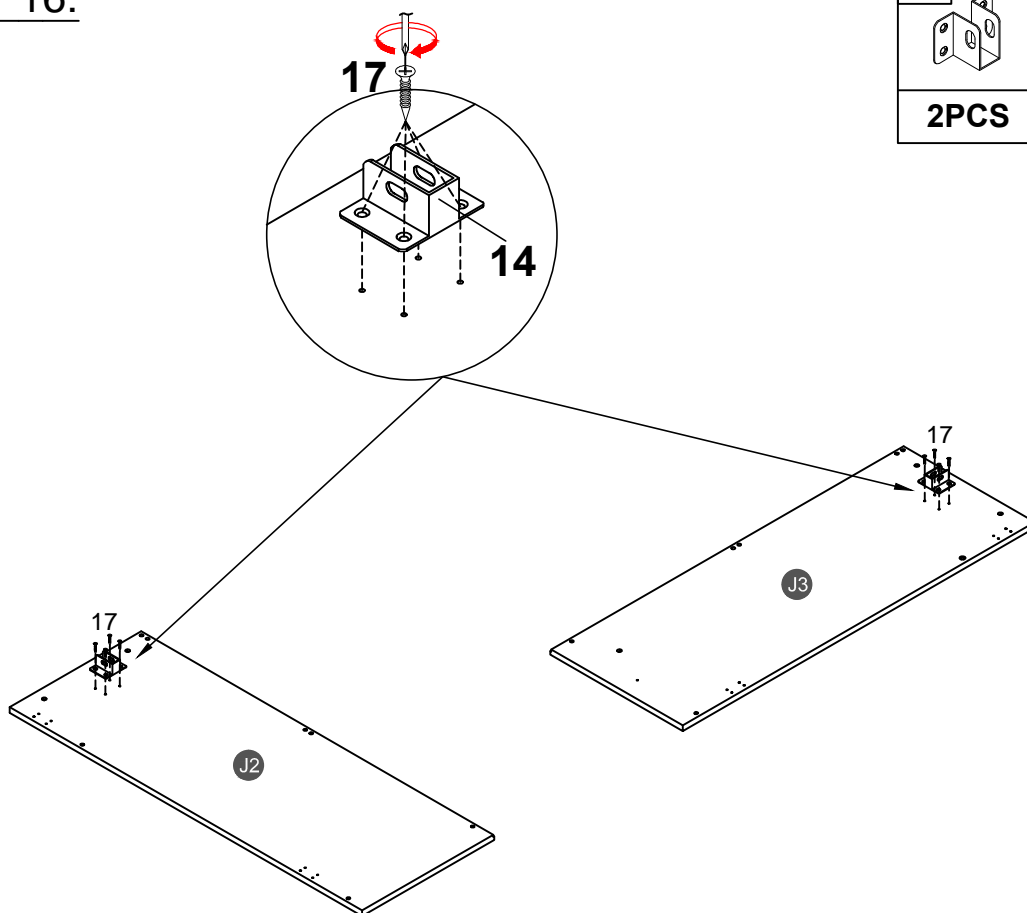
<b>14</b>		<b>17</b>	
<b>2PCS</b>		<b>8PCS</b>	




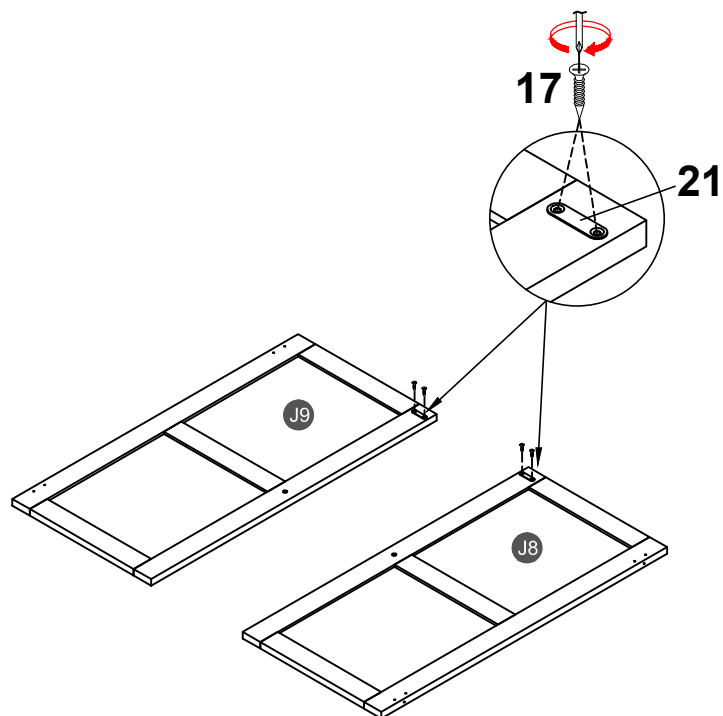

## STEP 17:




17	21
	
4PCS	2PCS

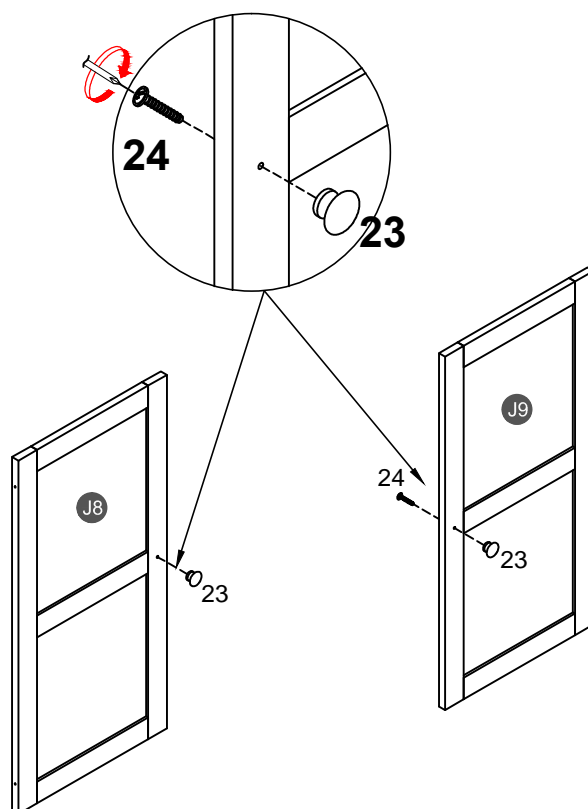

## STEP 18:




23	24
	
2PCS	2PCS

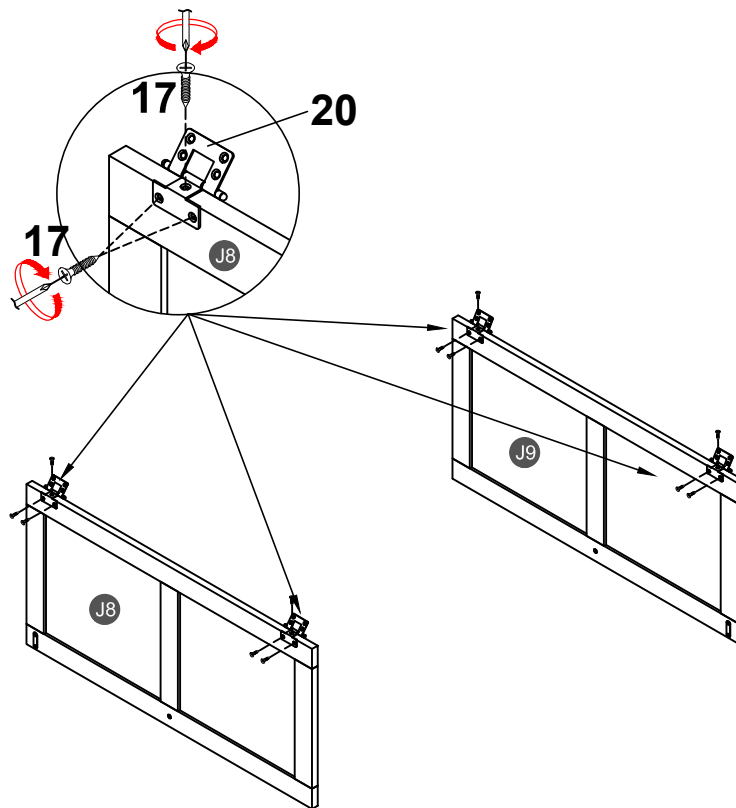


STEP 19:



17	20
	
12PCS	4PCS

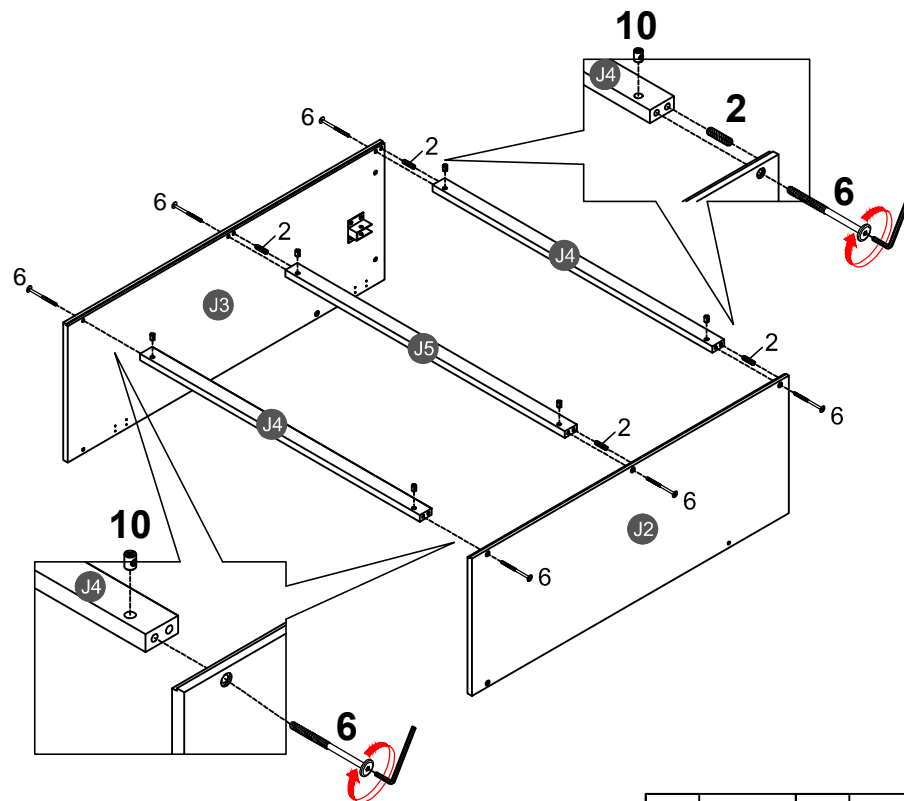
STEP 20:





2	6	10
		
8PCS	6PCS	6PCS




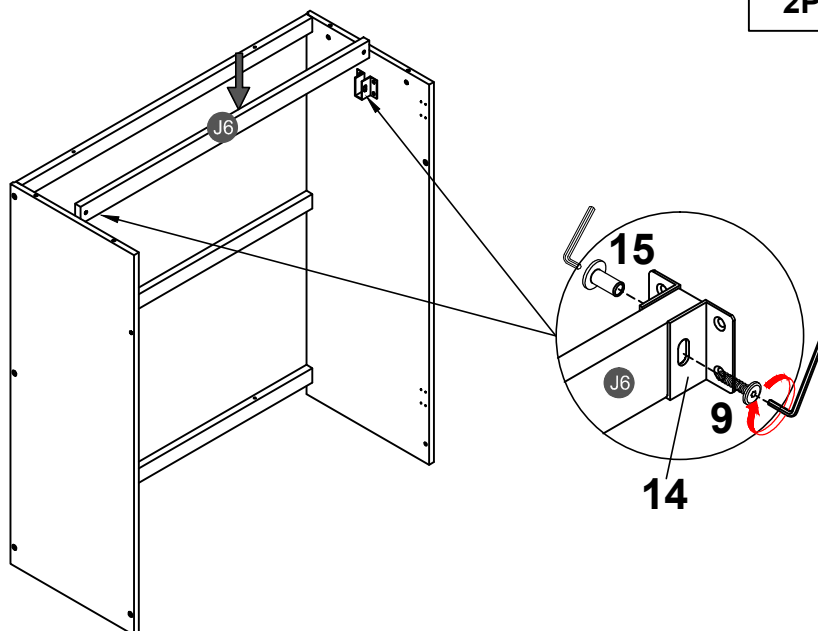


## STEP 21:



<b>9</b>		<b>15</b>	
<b>2PCS</b>		<b>2PCS</b>	
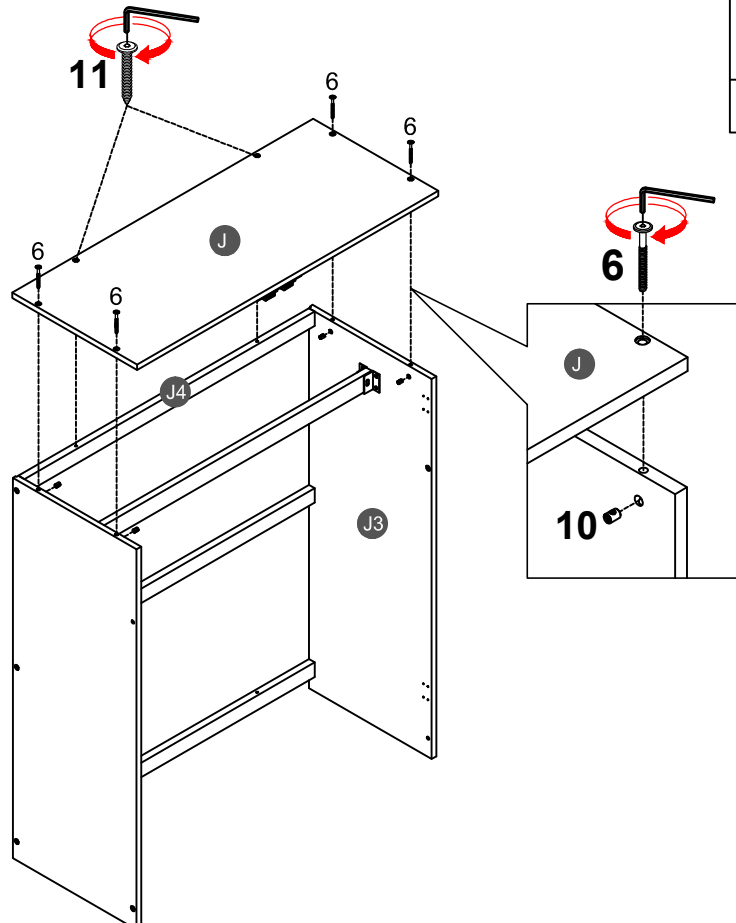
## STEP 22:




<b>6</b>		<b>10</b>	
<b>4PCS</b>		<b>4PCS</b>	
		<b>11</b>	
		<b>2PCS</b>	

## STEP 23:


16




18PCS

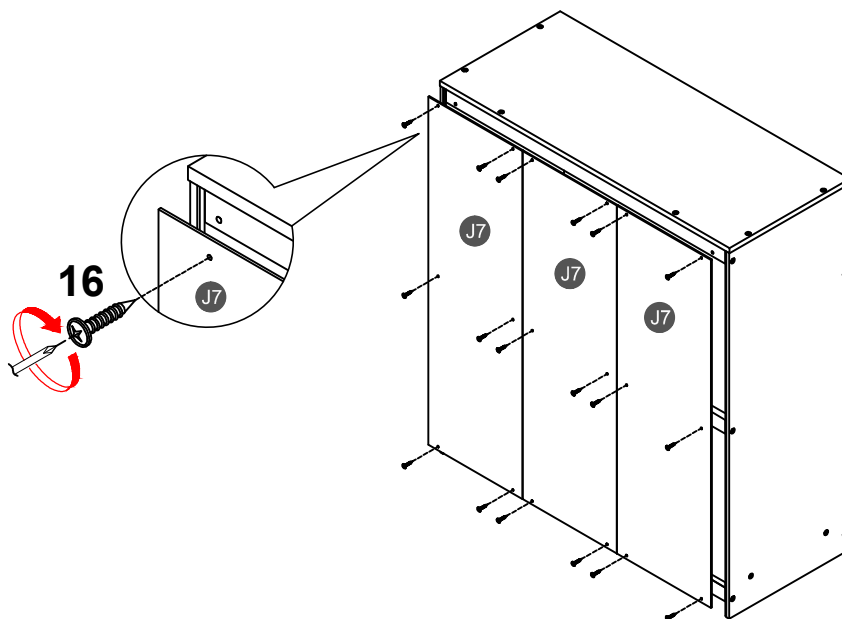


## STEP 24:

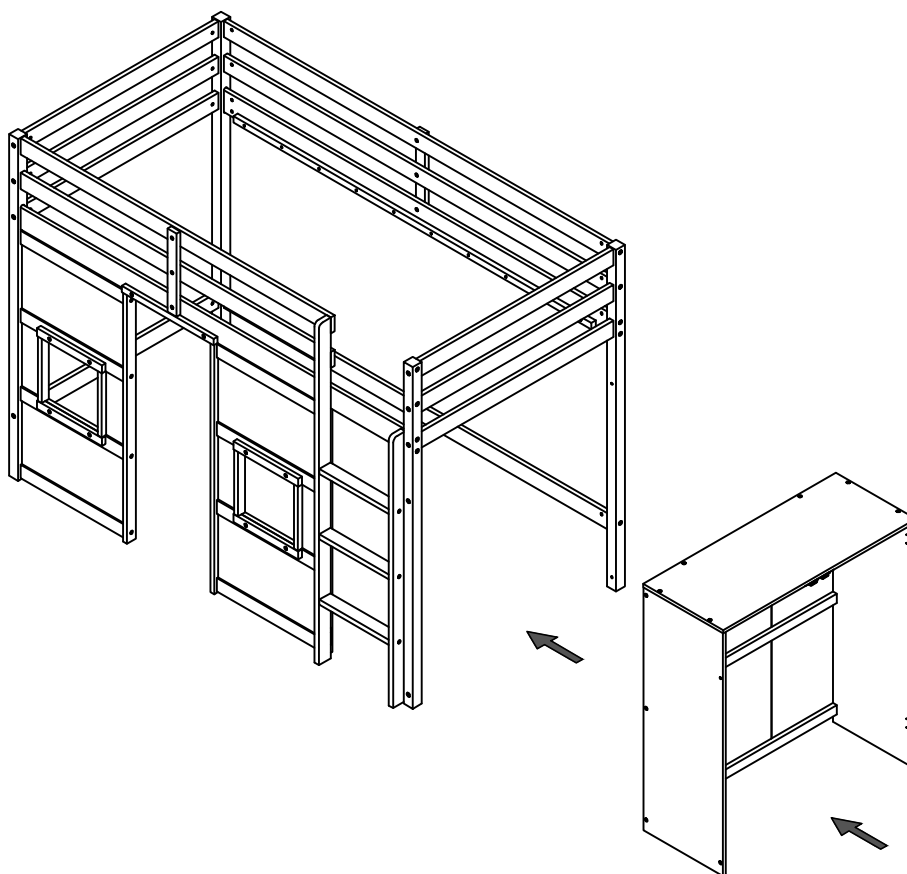

## STEP 25:

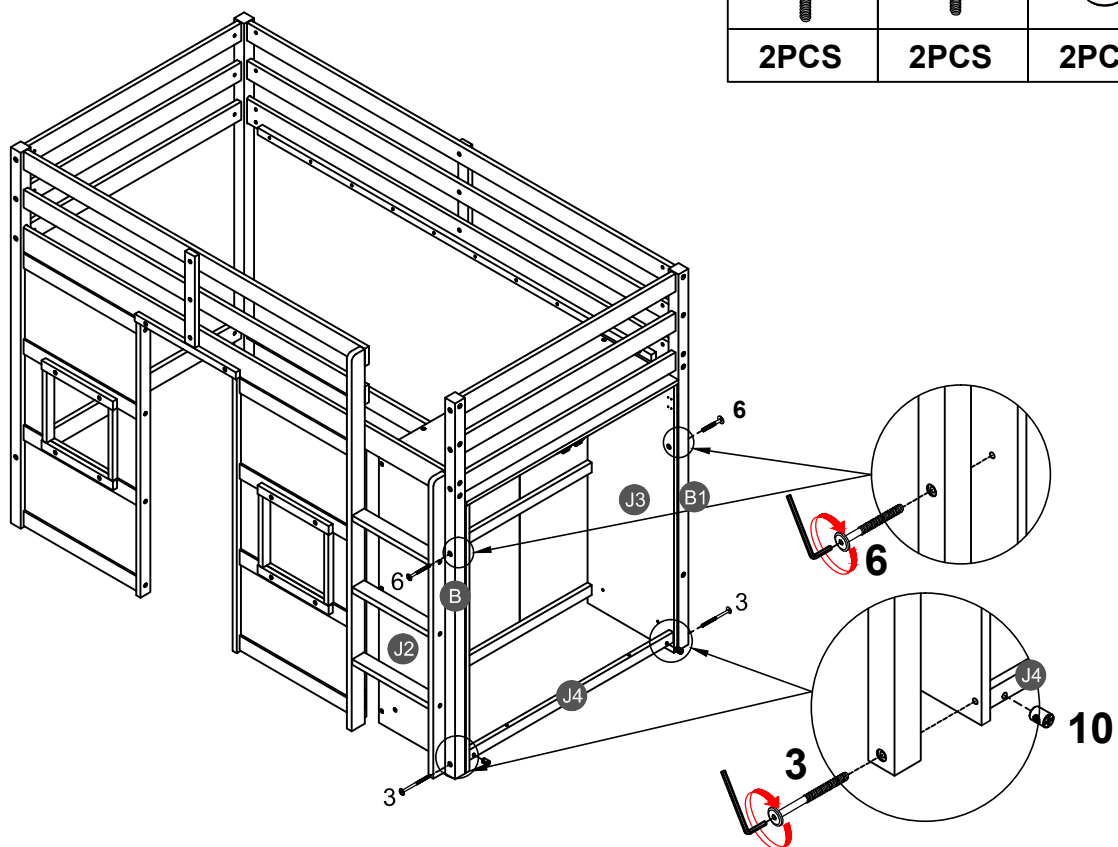

## STEP 26:

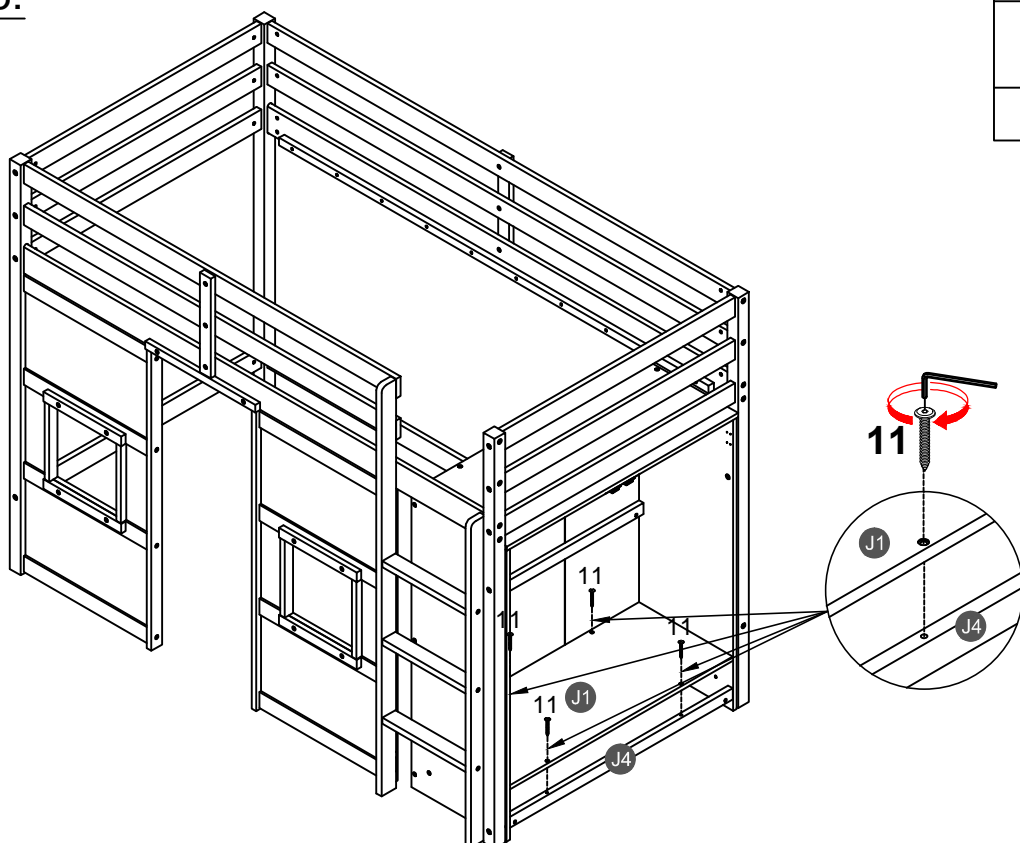


## STEP 27:


17



16PCS

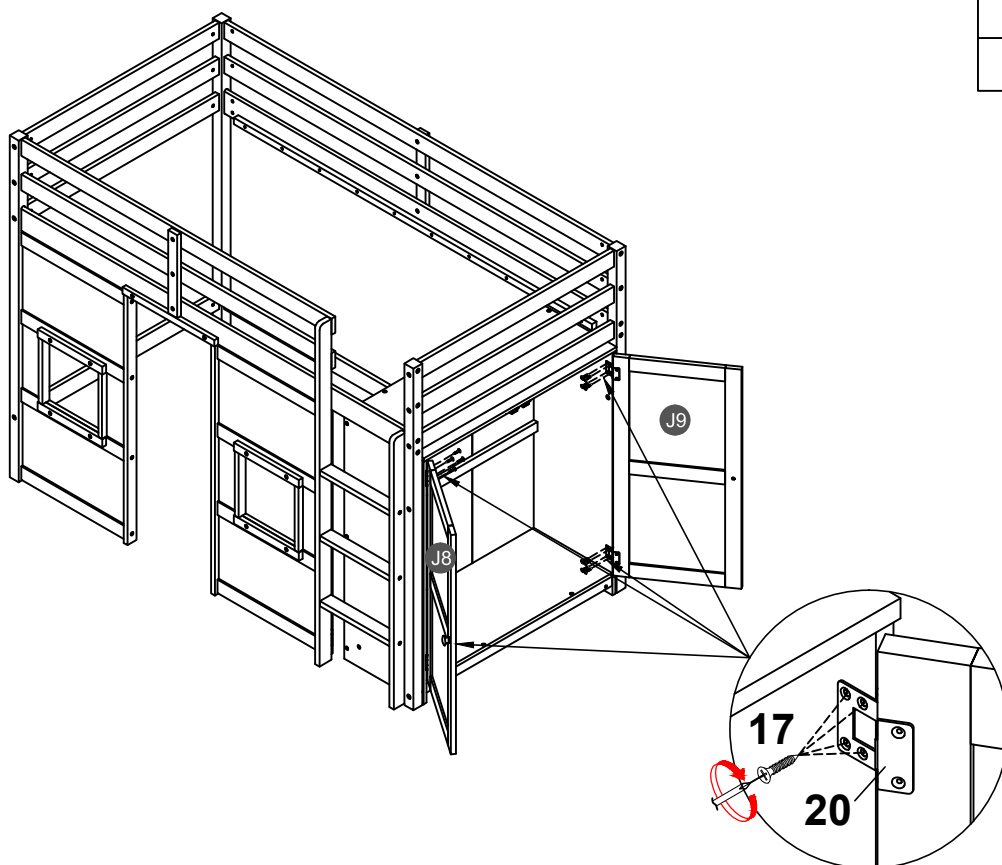

**Note: This product is only suitable for hanging children's clothing**



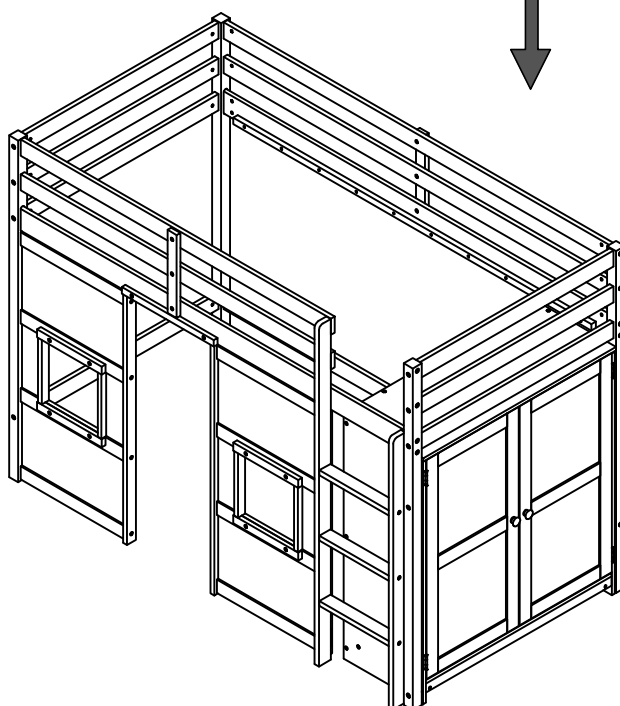


## STEP 28:


13



28PCS

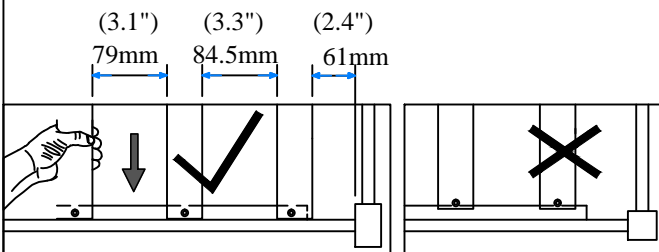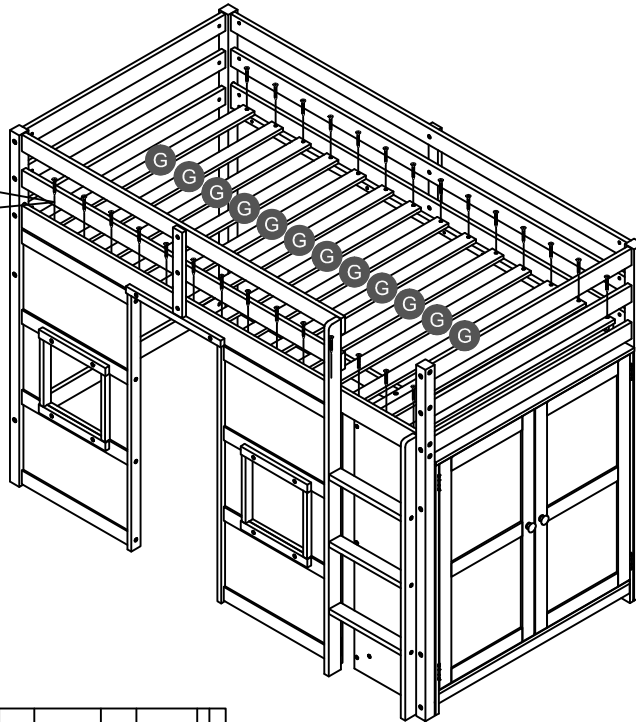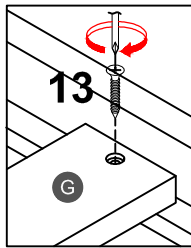

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing , hold it in place with one hand, then lock the screw.

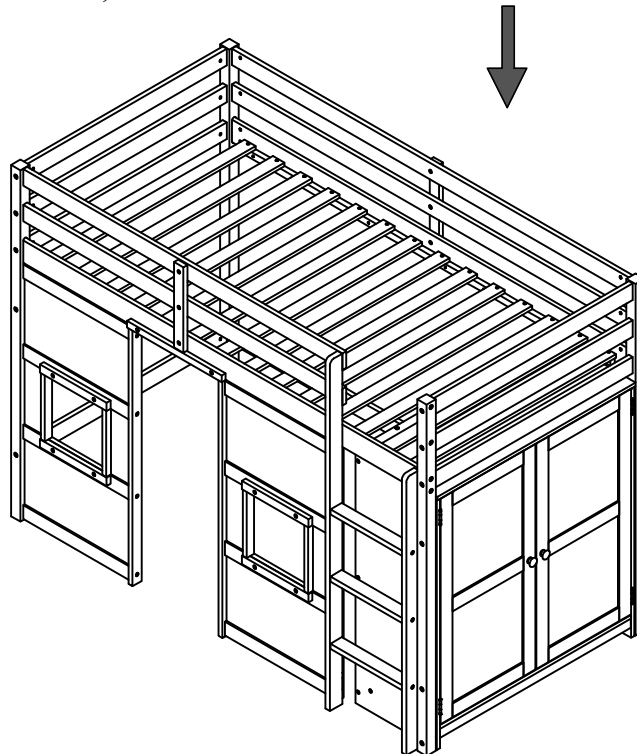

**Make sure to tighten all the screws of the bed.**