



# ASSEMBLY INSTRUCTIONS

## FULL SIZE FLOOR PLATFORM BED

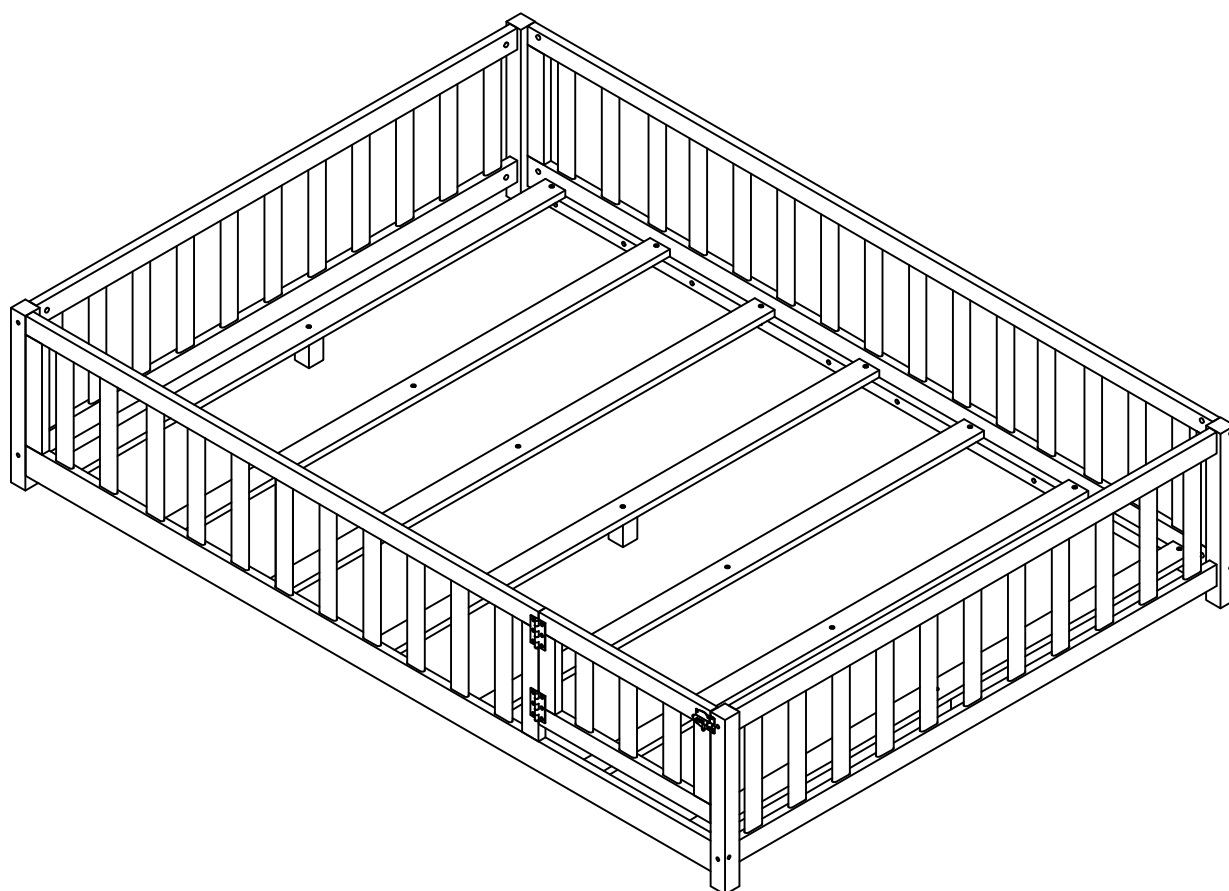









JBSP0822003/JBSP0822004/JBSP0822005

# ASSEMBLY INSTRUCTIONS

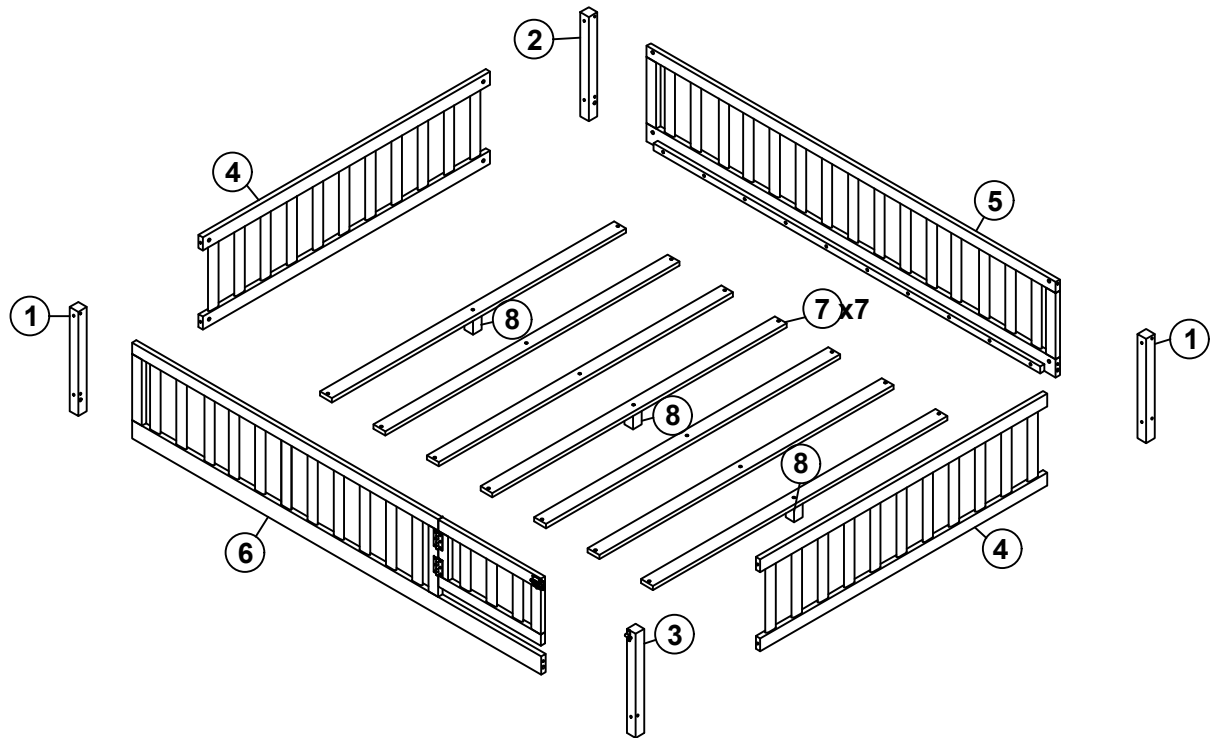






## PARTS LIST

JBSP0822003/JBSP0822004/JBSP0822005


<b>1</b>	 Legs of the front left & rear right	2pcs	<b>5</b>	 Guard rails	1pc
<b>2</b>	 Legs of the back left	1pc	<b>6</b>	 Guard rails	1pc
<b>3</b>	 Legs of the front right	1pc	<b>7</b>	 Slats	7pcs
<b>4</b>	 Headboard frame	2pcs	<b>8</b>	 Center rails support legs	3pcs

## HARDWARE LIST (JBSP0822003/JBSP0822004/JBSP0822005)

<b>A</b>	1/4x90 	15PCS	<b>D</b>	4x58 	1PC
<b>B</b>	Ø4x30 	17PCS		Phillip head screw Not include 	
<b>C</b>	Ø10x40 	4PCS			


# ASSEMBLY INSTRUCTIONS

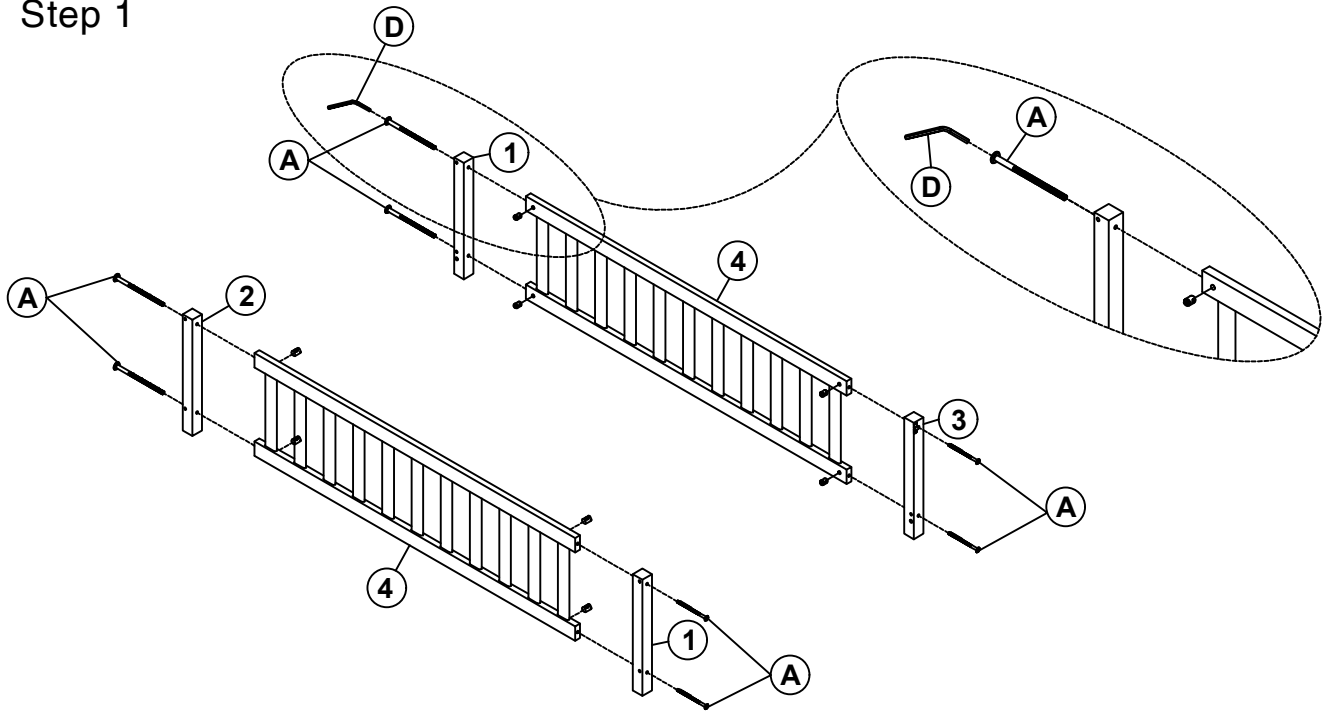


## Step 1



<b>A</b>	1/4x90		8PCS	<b>D</b>	4x58		1PC
----------	--------	--	------	----------	------	--	-----
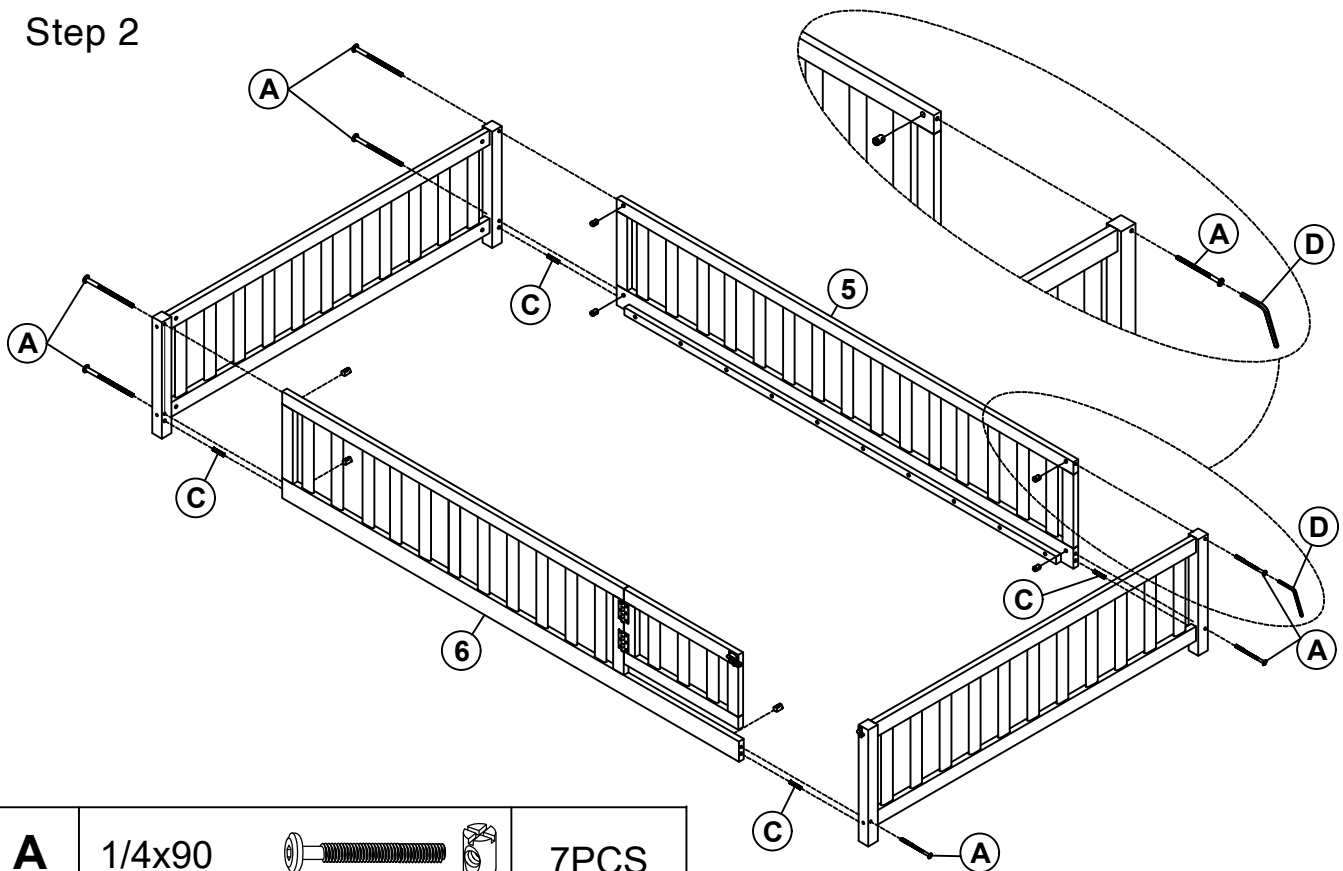
## Step 2




<b>A</b>	1/4x90		7PCS	<b>C</b>	Ø10x40		4PCS	<b>D</b>	4x58		1PC
----------	--------	---	------	----------	--------	---	------	----------	------	---	-----

# ASSEMBLY INSTRUCTIONS

## Step 3

First attach 2pcs part 7 to the front and end of the frame, between side rails.  
Then attach the remaining part 7 equidistantly between side rails.

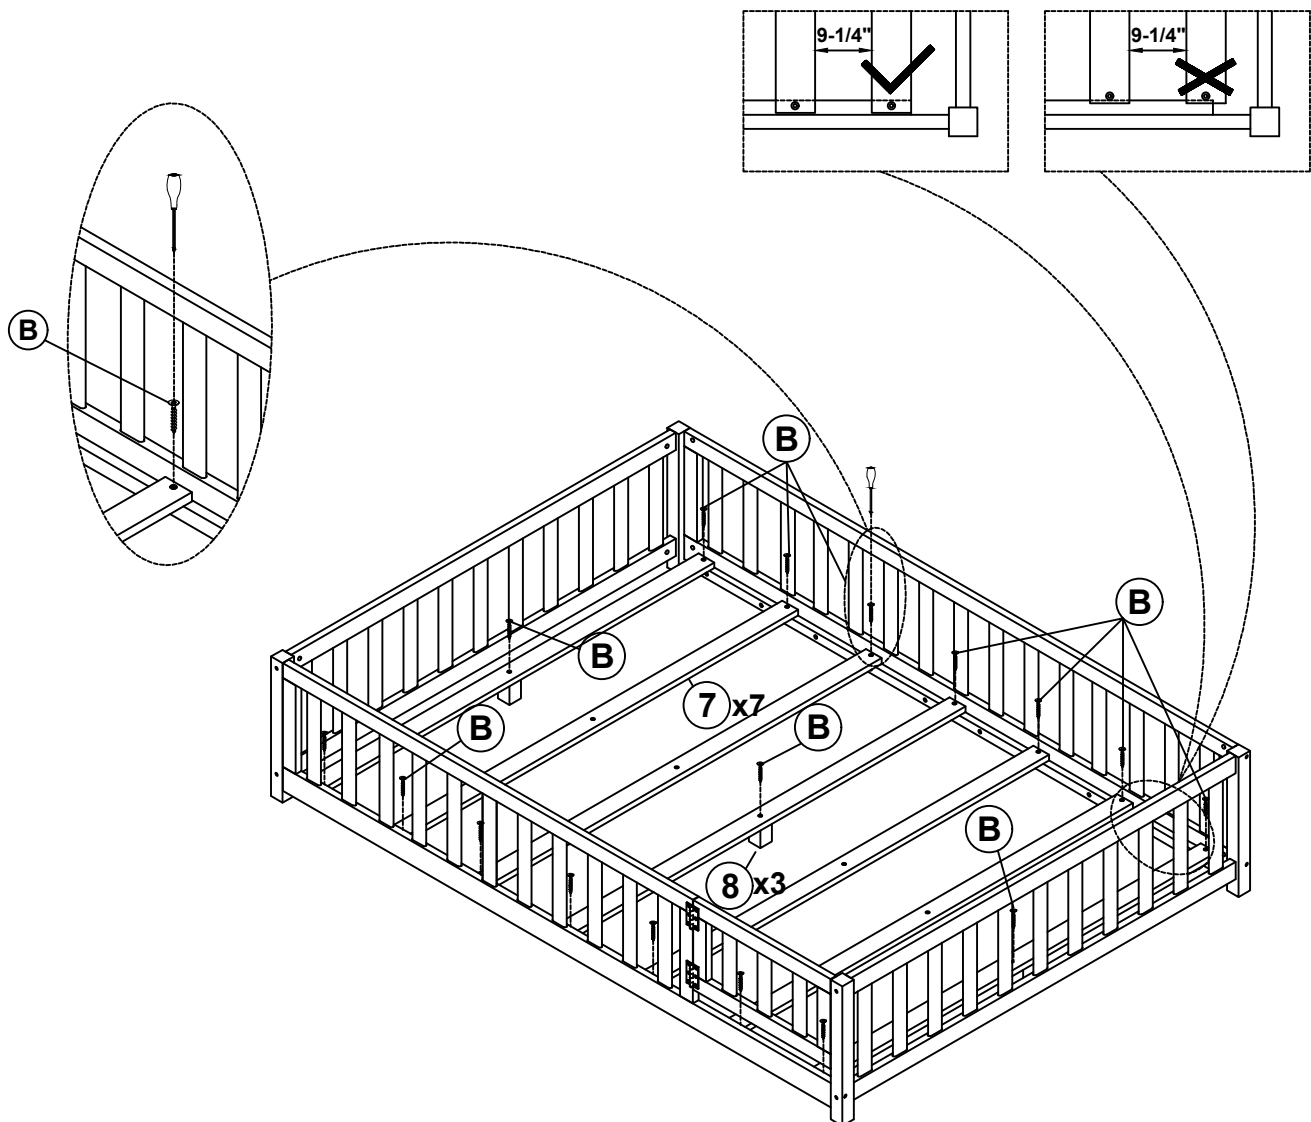

**B**


Ø4x30



17PCS

# ASSEMBLY INSTRUCTIONS

## Step 4

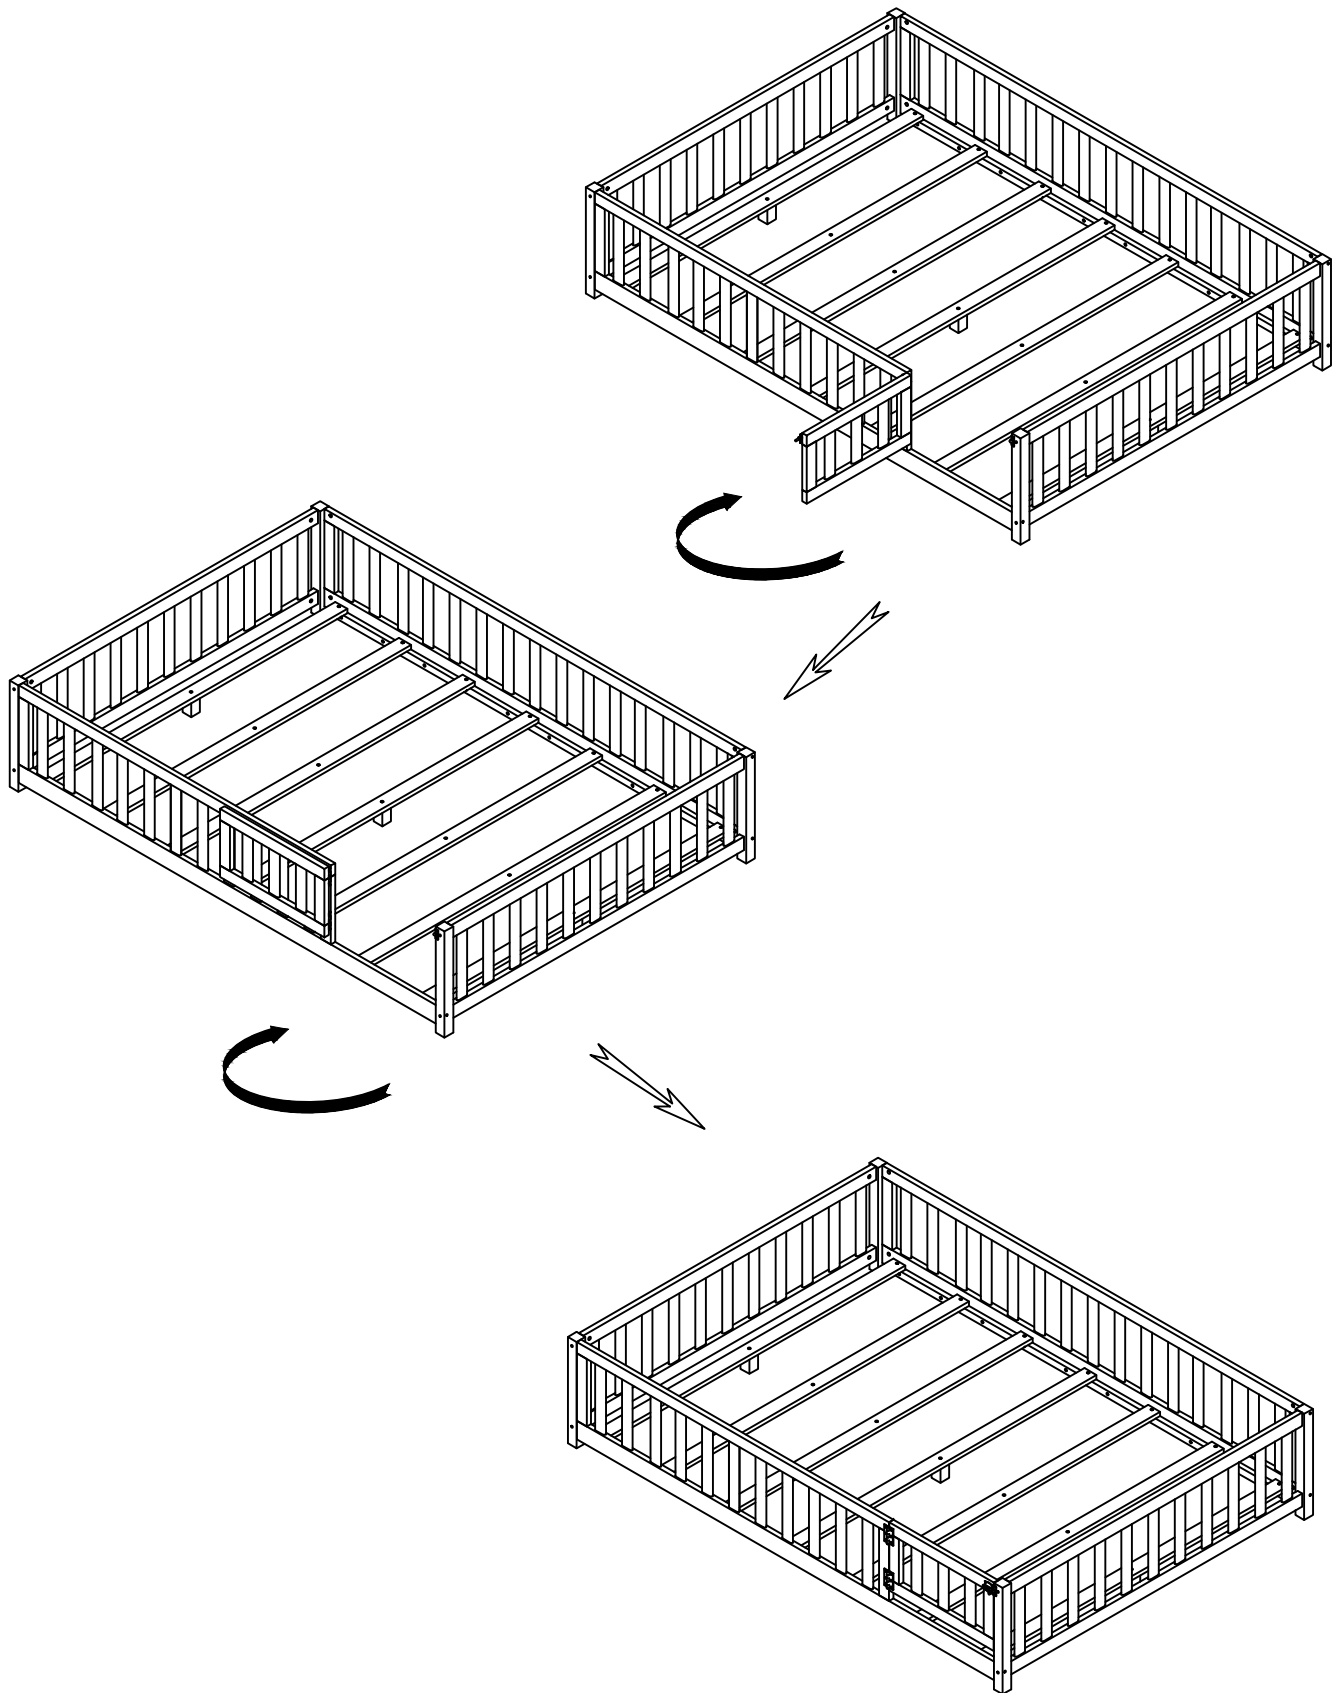

Please note: Make sure to lock all screws.