

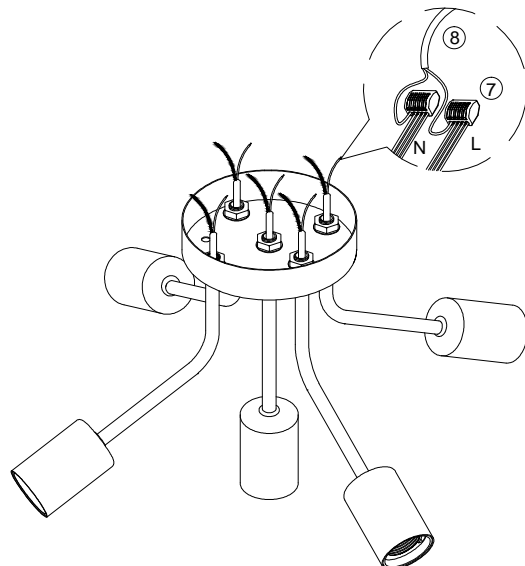


1. Install the bent arms ③ and straight arm ④ to the canopy ⑤ with lock nut ① and teeth lock washer ②, adjust the arms ③ to suitable position.

1. Pull the orange operating handle A to open the inlet hole, insert the wire B.
2. Press the operating handle A to finish wiring.
(Note: one inlet hole can put 2 or 3 wires inside)

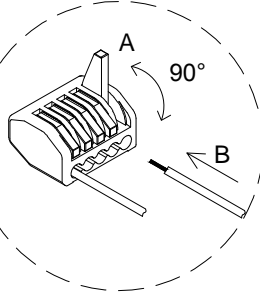

2. Connect the wires with main wire ⑧ by parallel with connector ⑦ (all live line-L use one connector, and neutral Line-N use another connector).

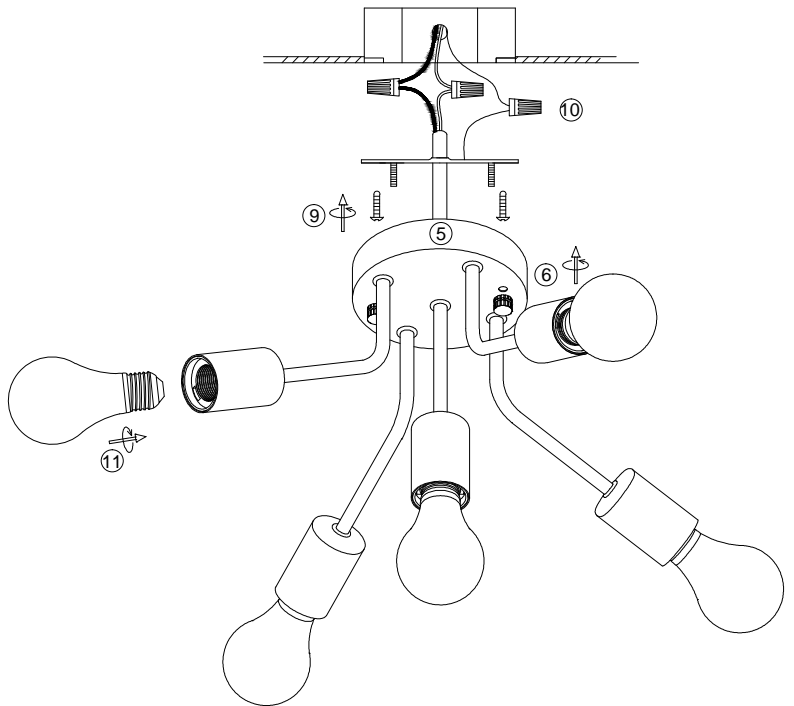

3. Install the bracket to the ceiling junction box with screw ⑨.
4. Connect the wire to your home line.
5. Install the fixture ⑤ to the bracket with cap nut ⑥.
6. Install the bulb ⑪.

X0112-5

Please read carefully before installation!!!

Note : Please make sure that the electricity is powered off during installation !

Only a professional electrician should install this kind of product !