




2.Let all wires go through the two heads threat rod ③, install the threat rod ③ on the middle tube, after that wire go through the hanging tube ⑤ and single head threat rod ⑥, connect the hanging tube and the single head threat rod with the fixture.

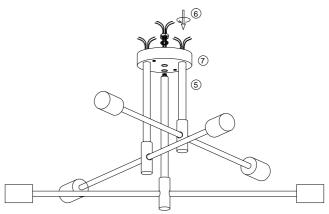

3.Install the hanging tube fixture 5 on the canopy 4 with screwing locknuts 6.

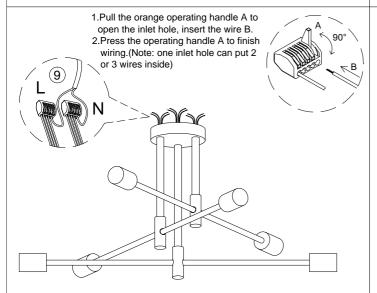

4.Connect all the wires by parallel with connectors <sup>(9)</sup> (all live line-L use one connector, and neutral Line-N use another connector).

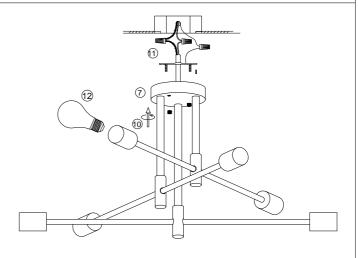

5.Install the bracket on the junction box with screw (11).

6.Connect the wire ① to your home line.

7.Install the fixture to the bracket with locknuts 8.

8.Install the bulbs 12

## X0084-6

Please read carefully before installation!!!

Note: Please make sure that the electricity is powered off during installation!

Only a professional electrician should install this kind of product!