



ASSEMBLY INSTRUCTIONS

High gloss full bed with trundle and 2 drawers

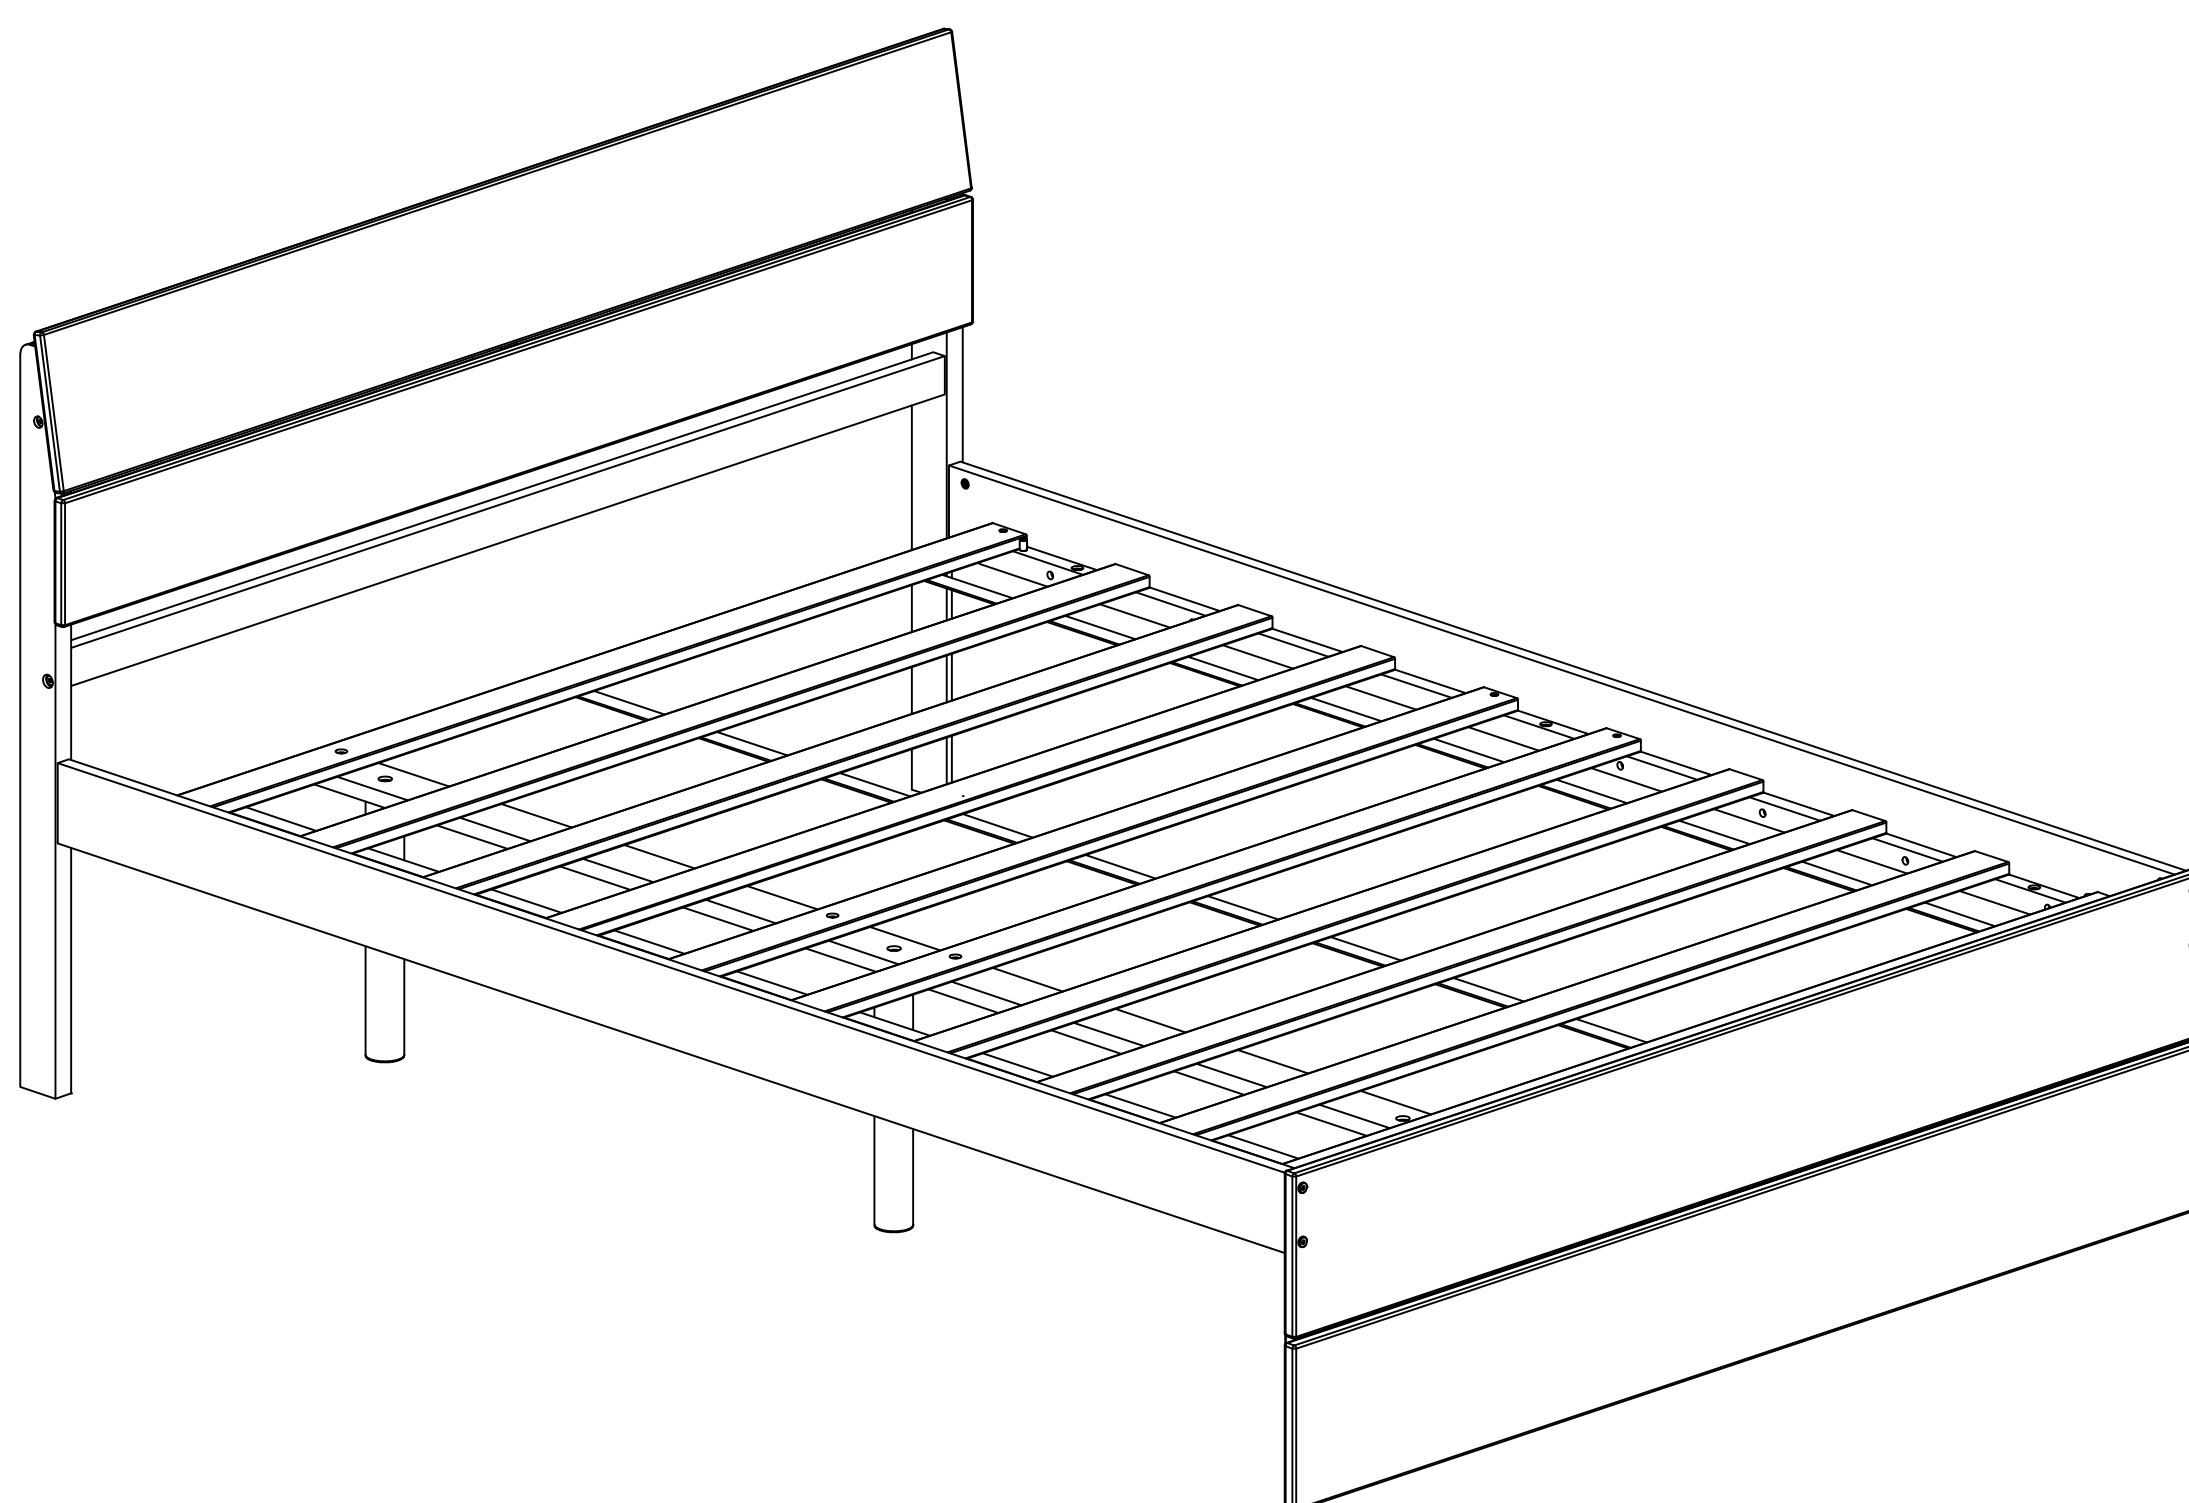











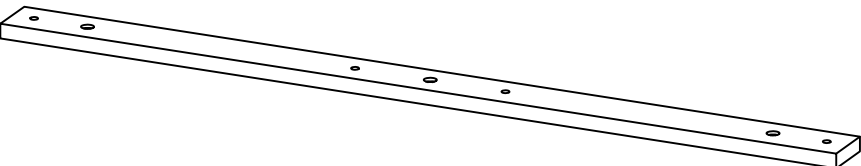
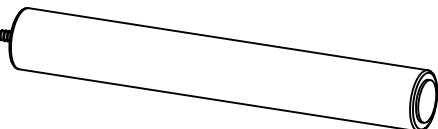
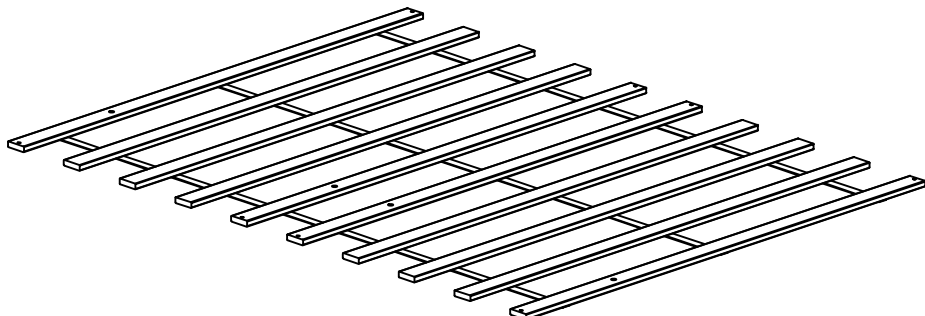
YX7111-1

Detail View








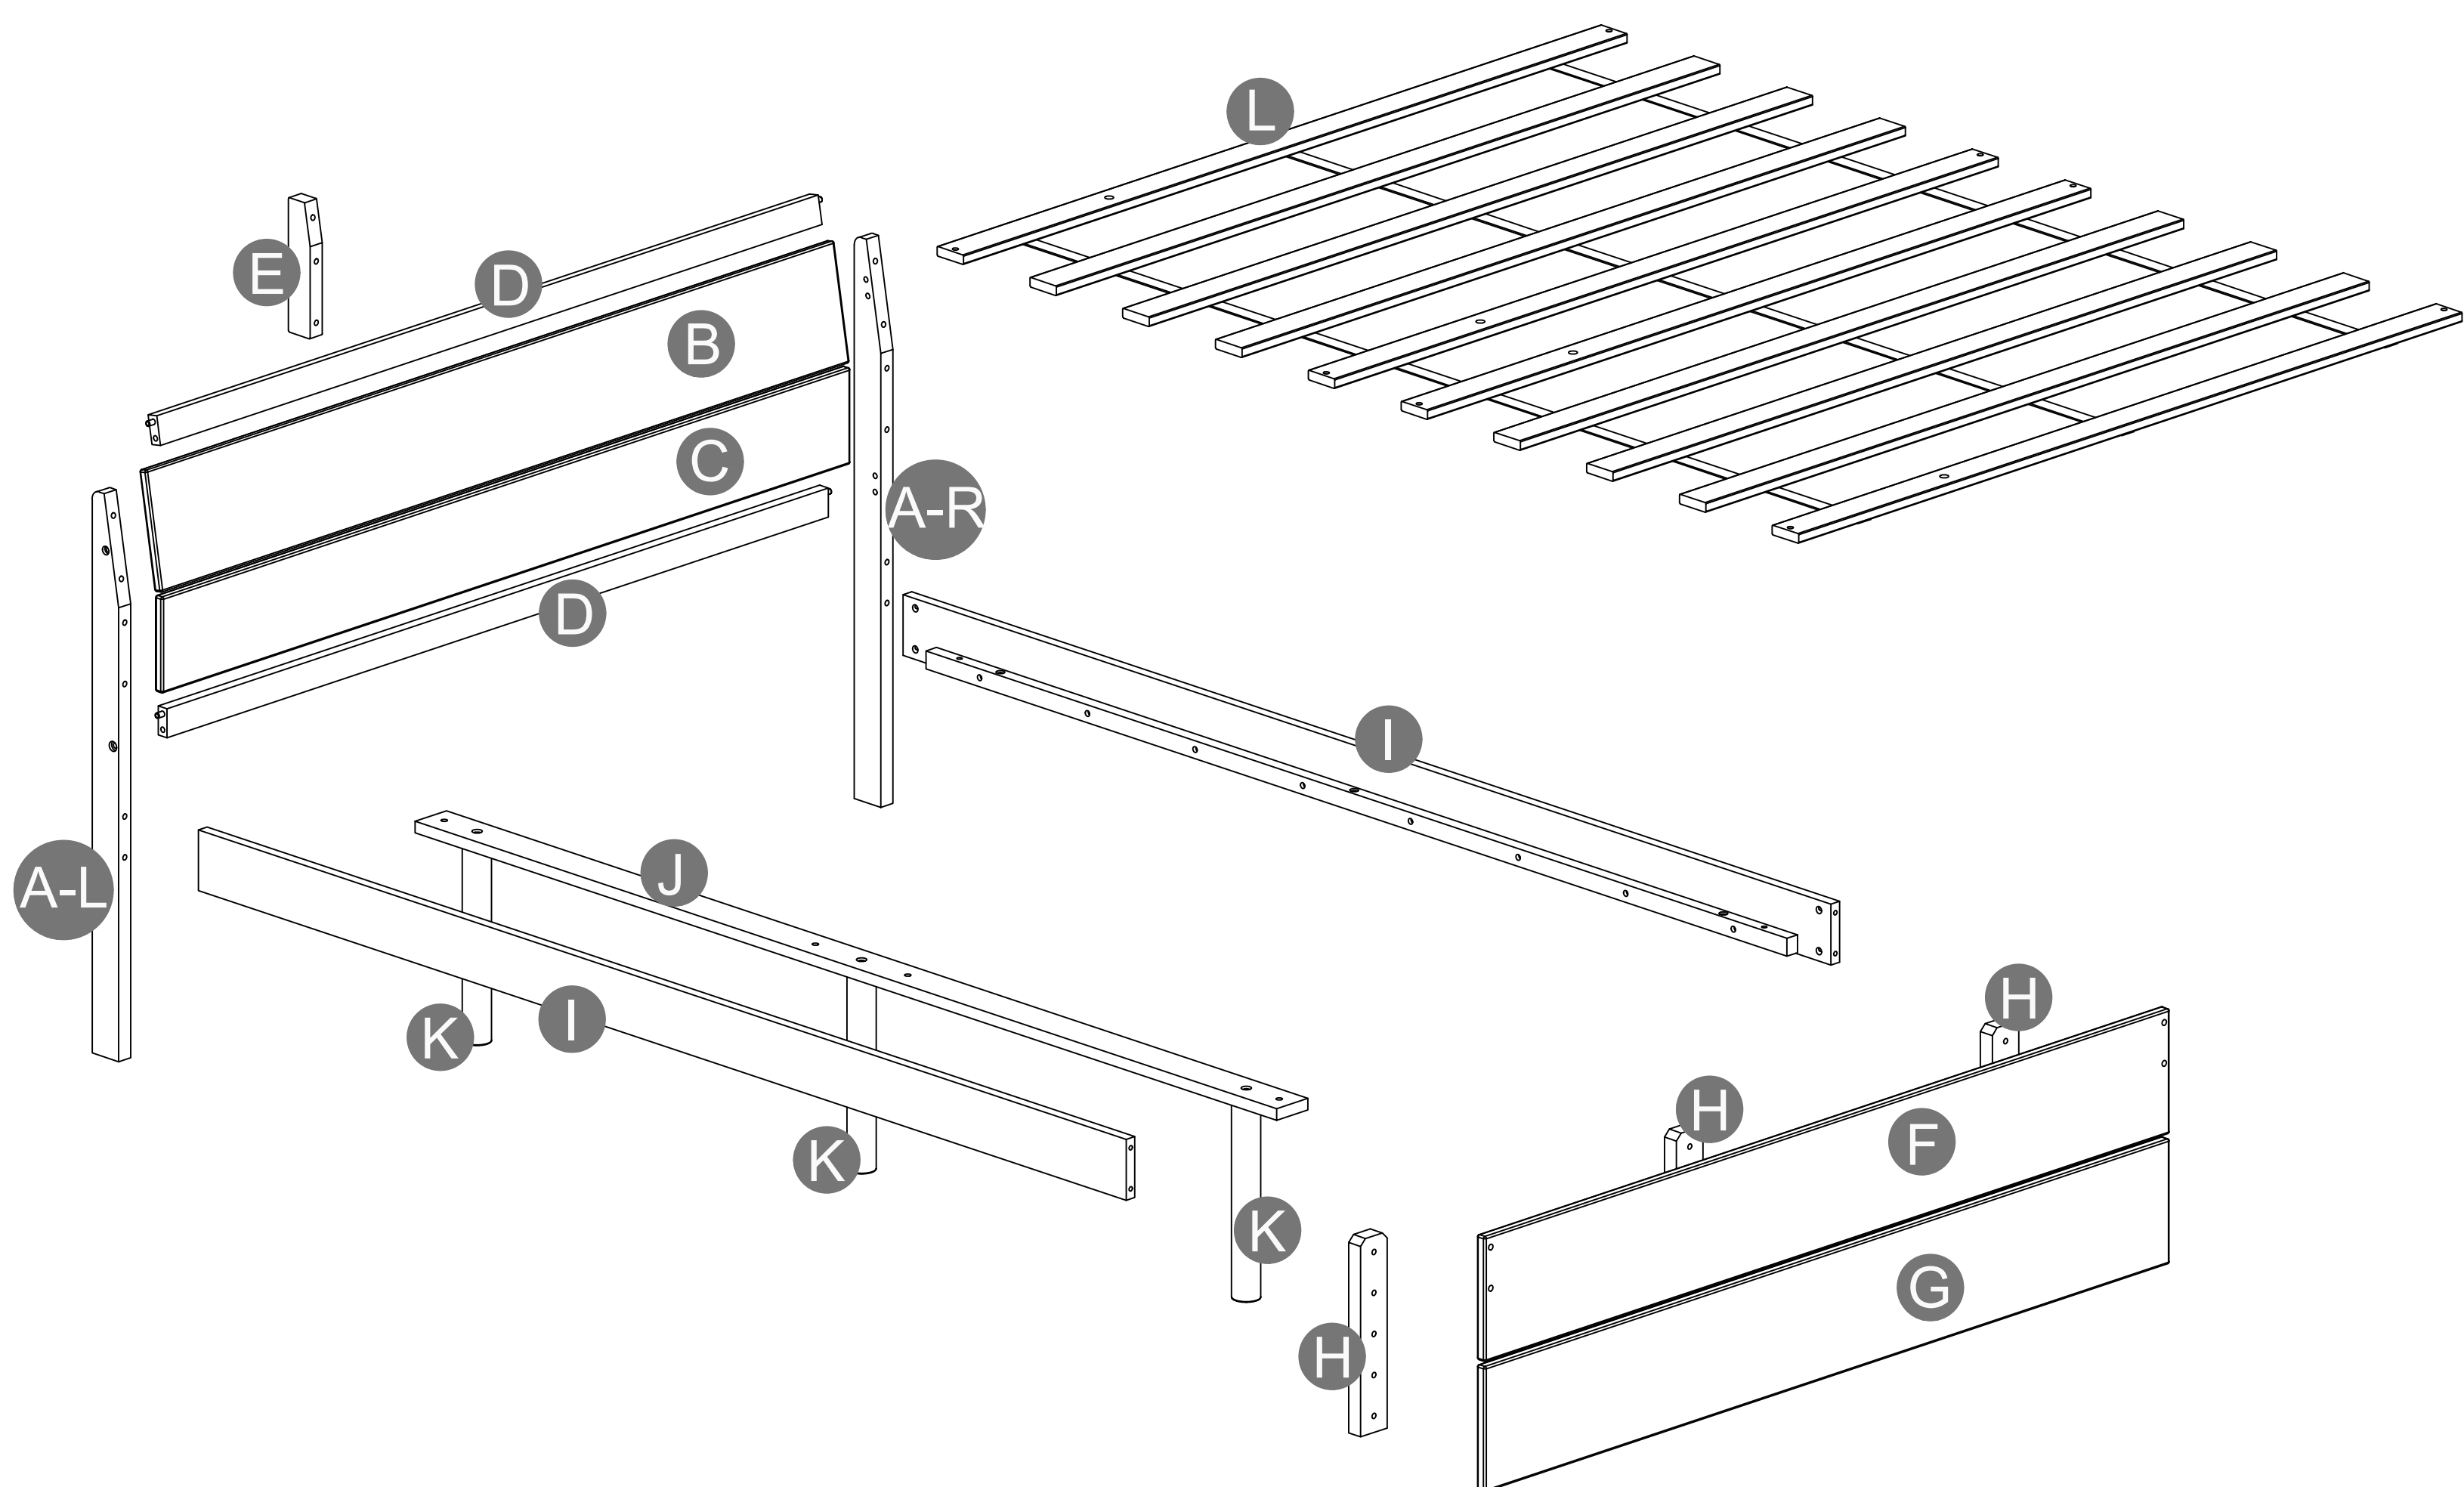


YX7111-1



Part List

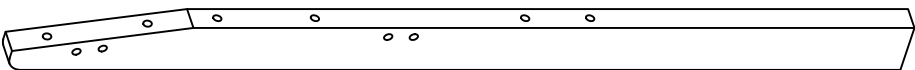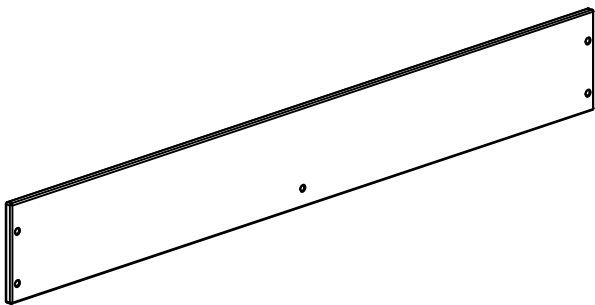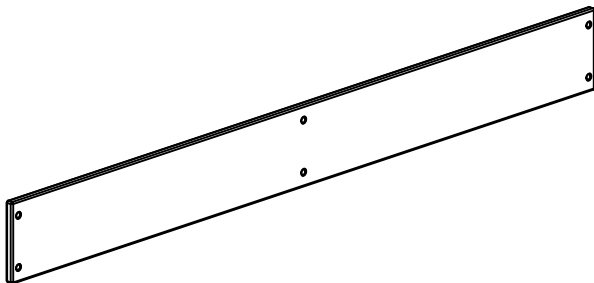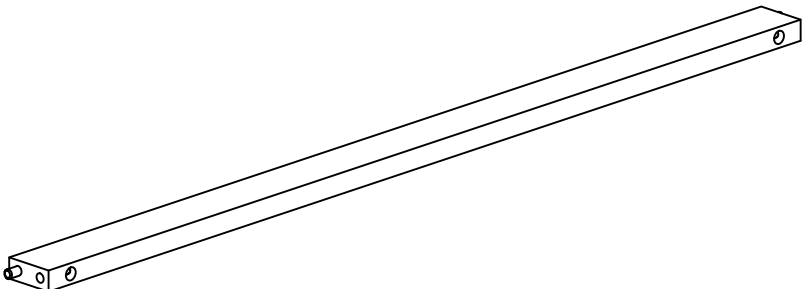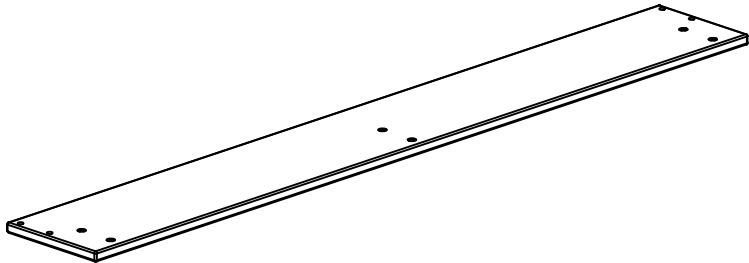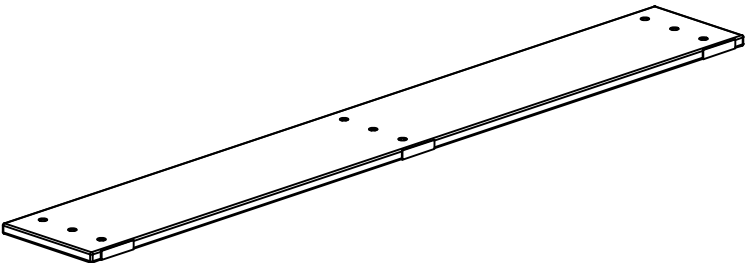A-L  Headboard leg (Left)-1pc	A-R  Headboard leg (Right)-1pc	B  Horizontal upper Panel HB-1pc
C  Horizontal bottom Panel HB-1pc	D  Horizontal bar HB-2pcs	E  Vertical support bar HB-1pc
F  Horizontal upper Panel FB-1pc	G  Horizontal bottom Panel FB-1pc	H  Vertical support bar FB-3pcs
I  Side rail-2pcs	J  Support bar Round legs -1pc	K  Round legs -3pcs
L  Slat-10pcs		

Hardware List

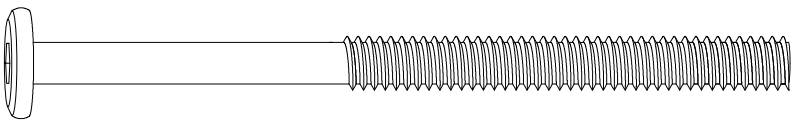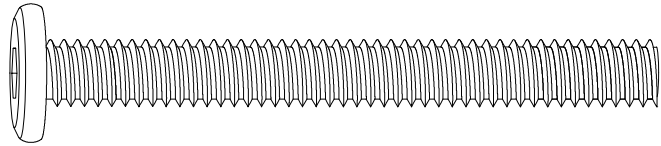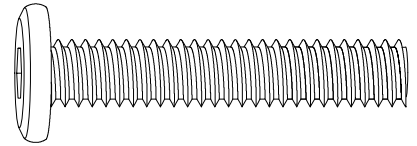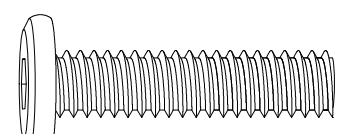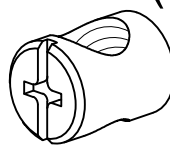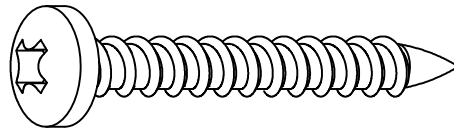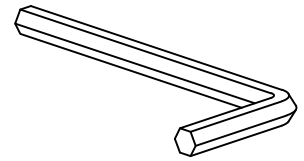1	 (Ø12)1/4"*85mm	2	(Spare Hardware-1pc)  (Ø12)1/4"*55mm	3	(Spare Hardware-2pcs)  (Ø12)1/4"*32mm
Hex-Head bolts (4pcs)		Hex-Head bolts (9pcs)		Hex-Head bolts (28pcs)	
4	 (Ø12)1/4"*25mm	5	(Spare Hardware-1pc)  1/4"*15mm	6	 Ø8*25mm
Hex-Head bolts (4pcs)		Horizontal-Hole bolts(13pcs)		Wood dowel (4pcs)	
7	(Spare Hardware-1pc)  Ø4*25mm	8	 (1/4")4*60mm		
Wood screws (9 pcs)		Allen key (1pc)			

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)

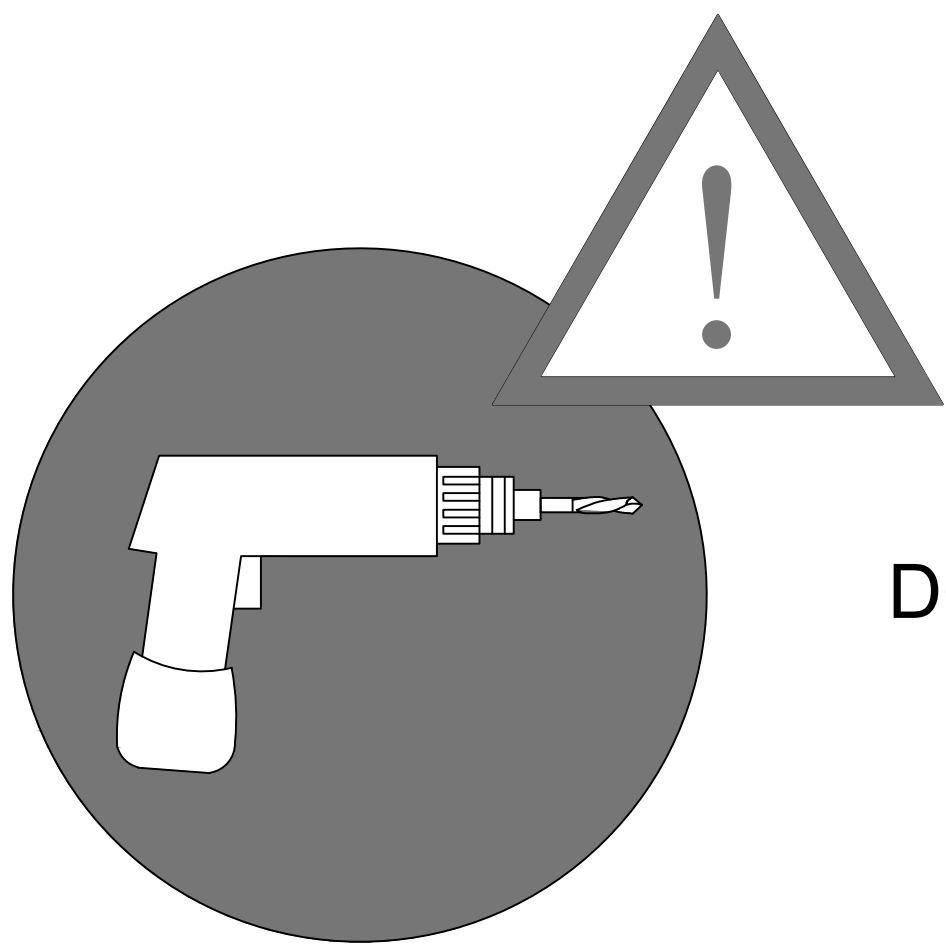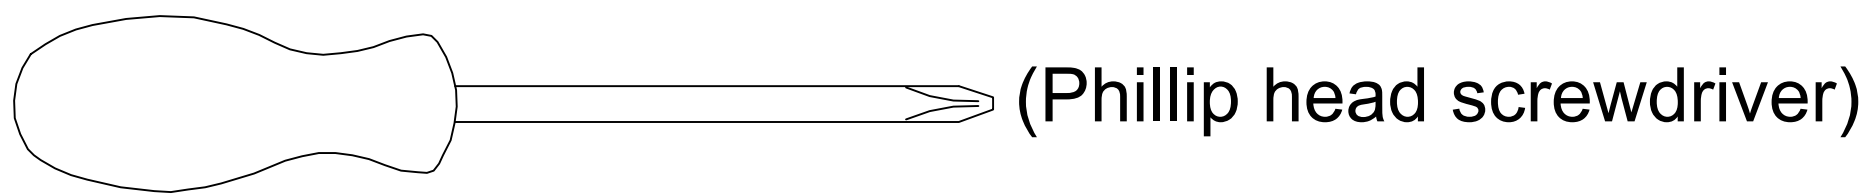


DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT !

Remark: We recommend you assemble your bed in the flat ground.


STEP 1:

2



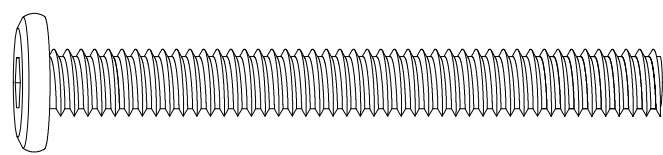


4pcs

5

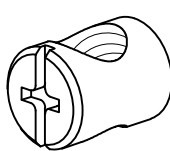


4pcs

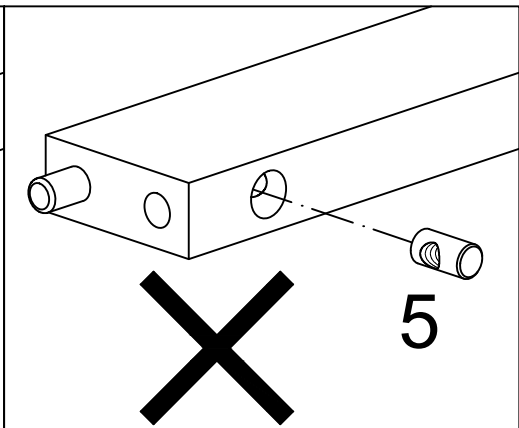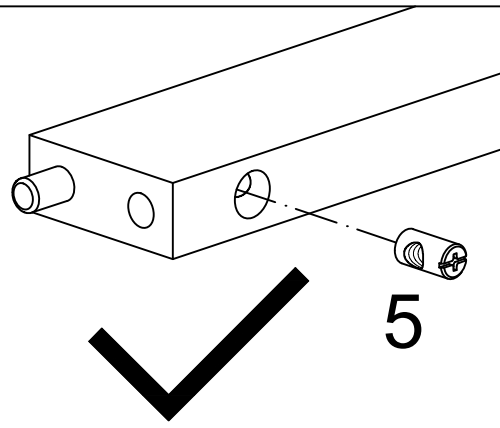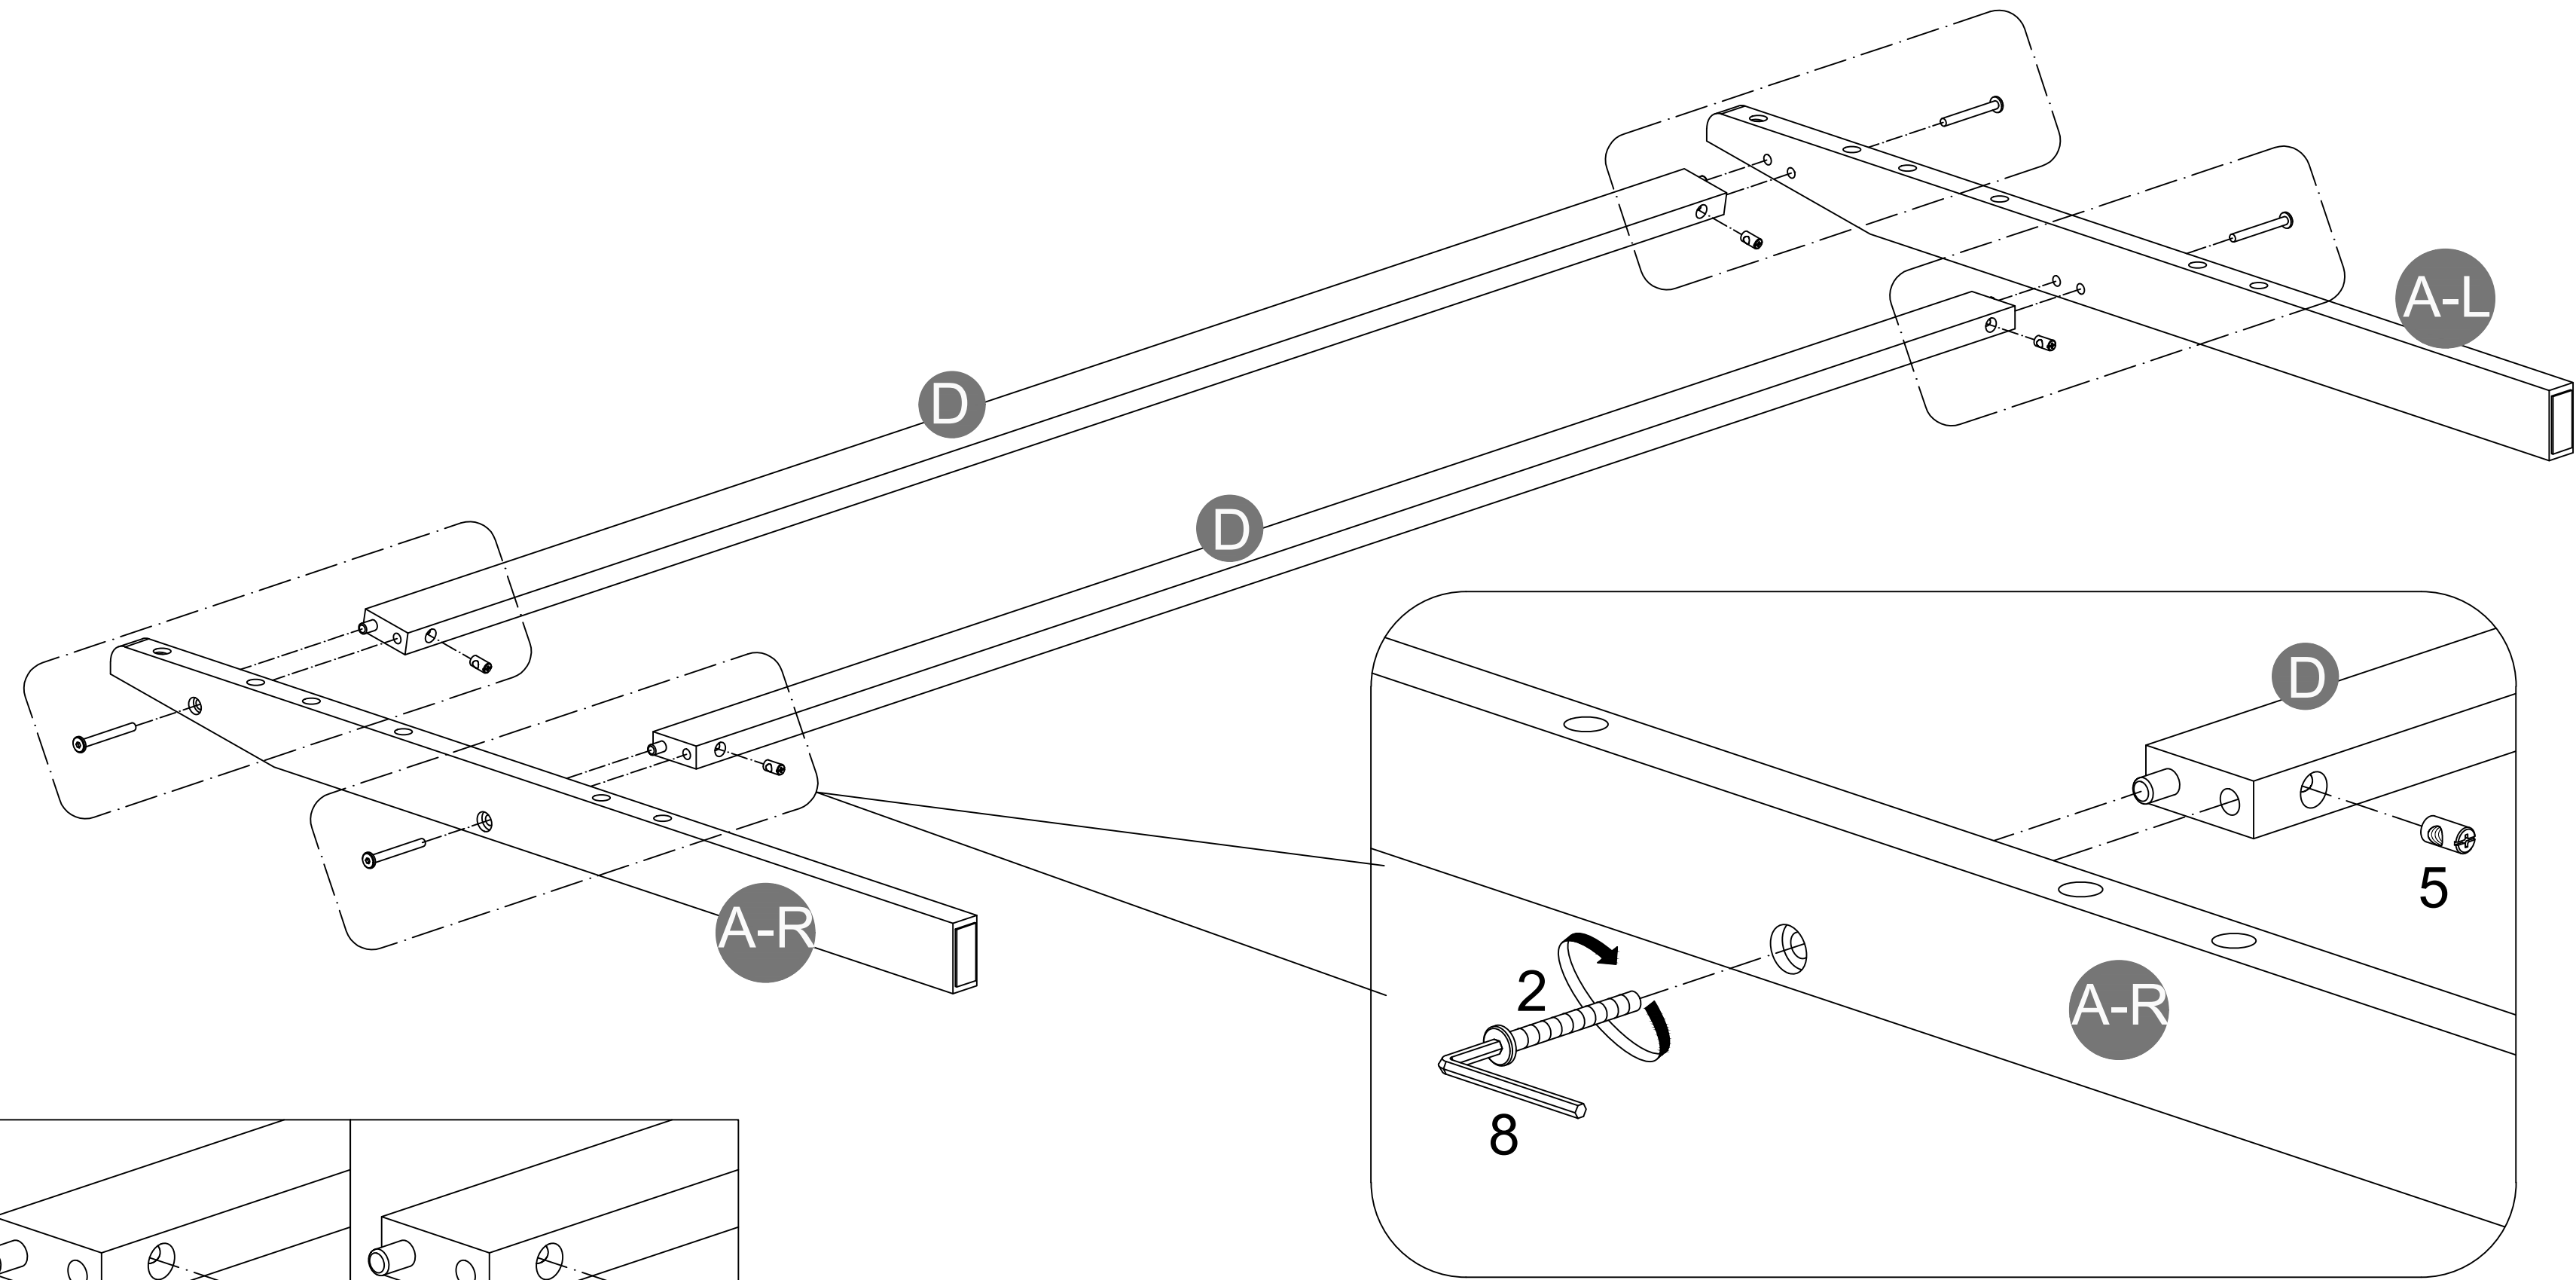


Note:Part 5 will face up with the "x" mark on it, otherwise it cannot be tightened

STEP 2:


3

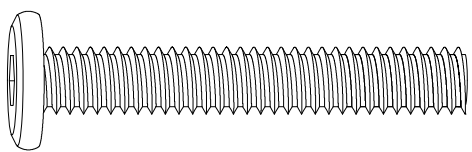


11pcs

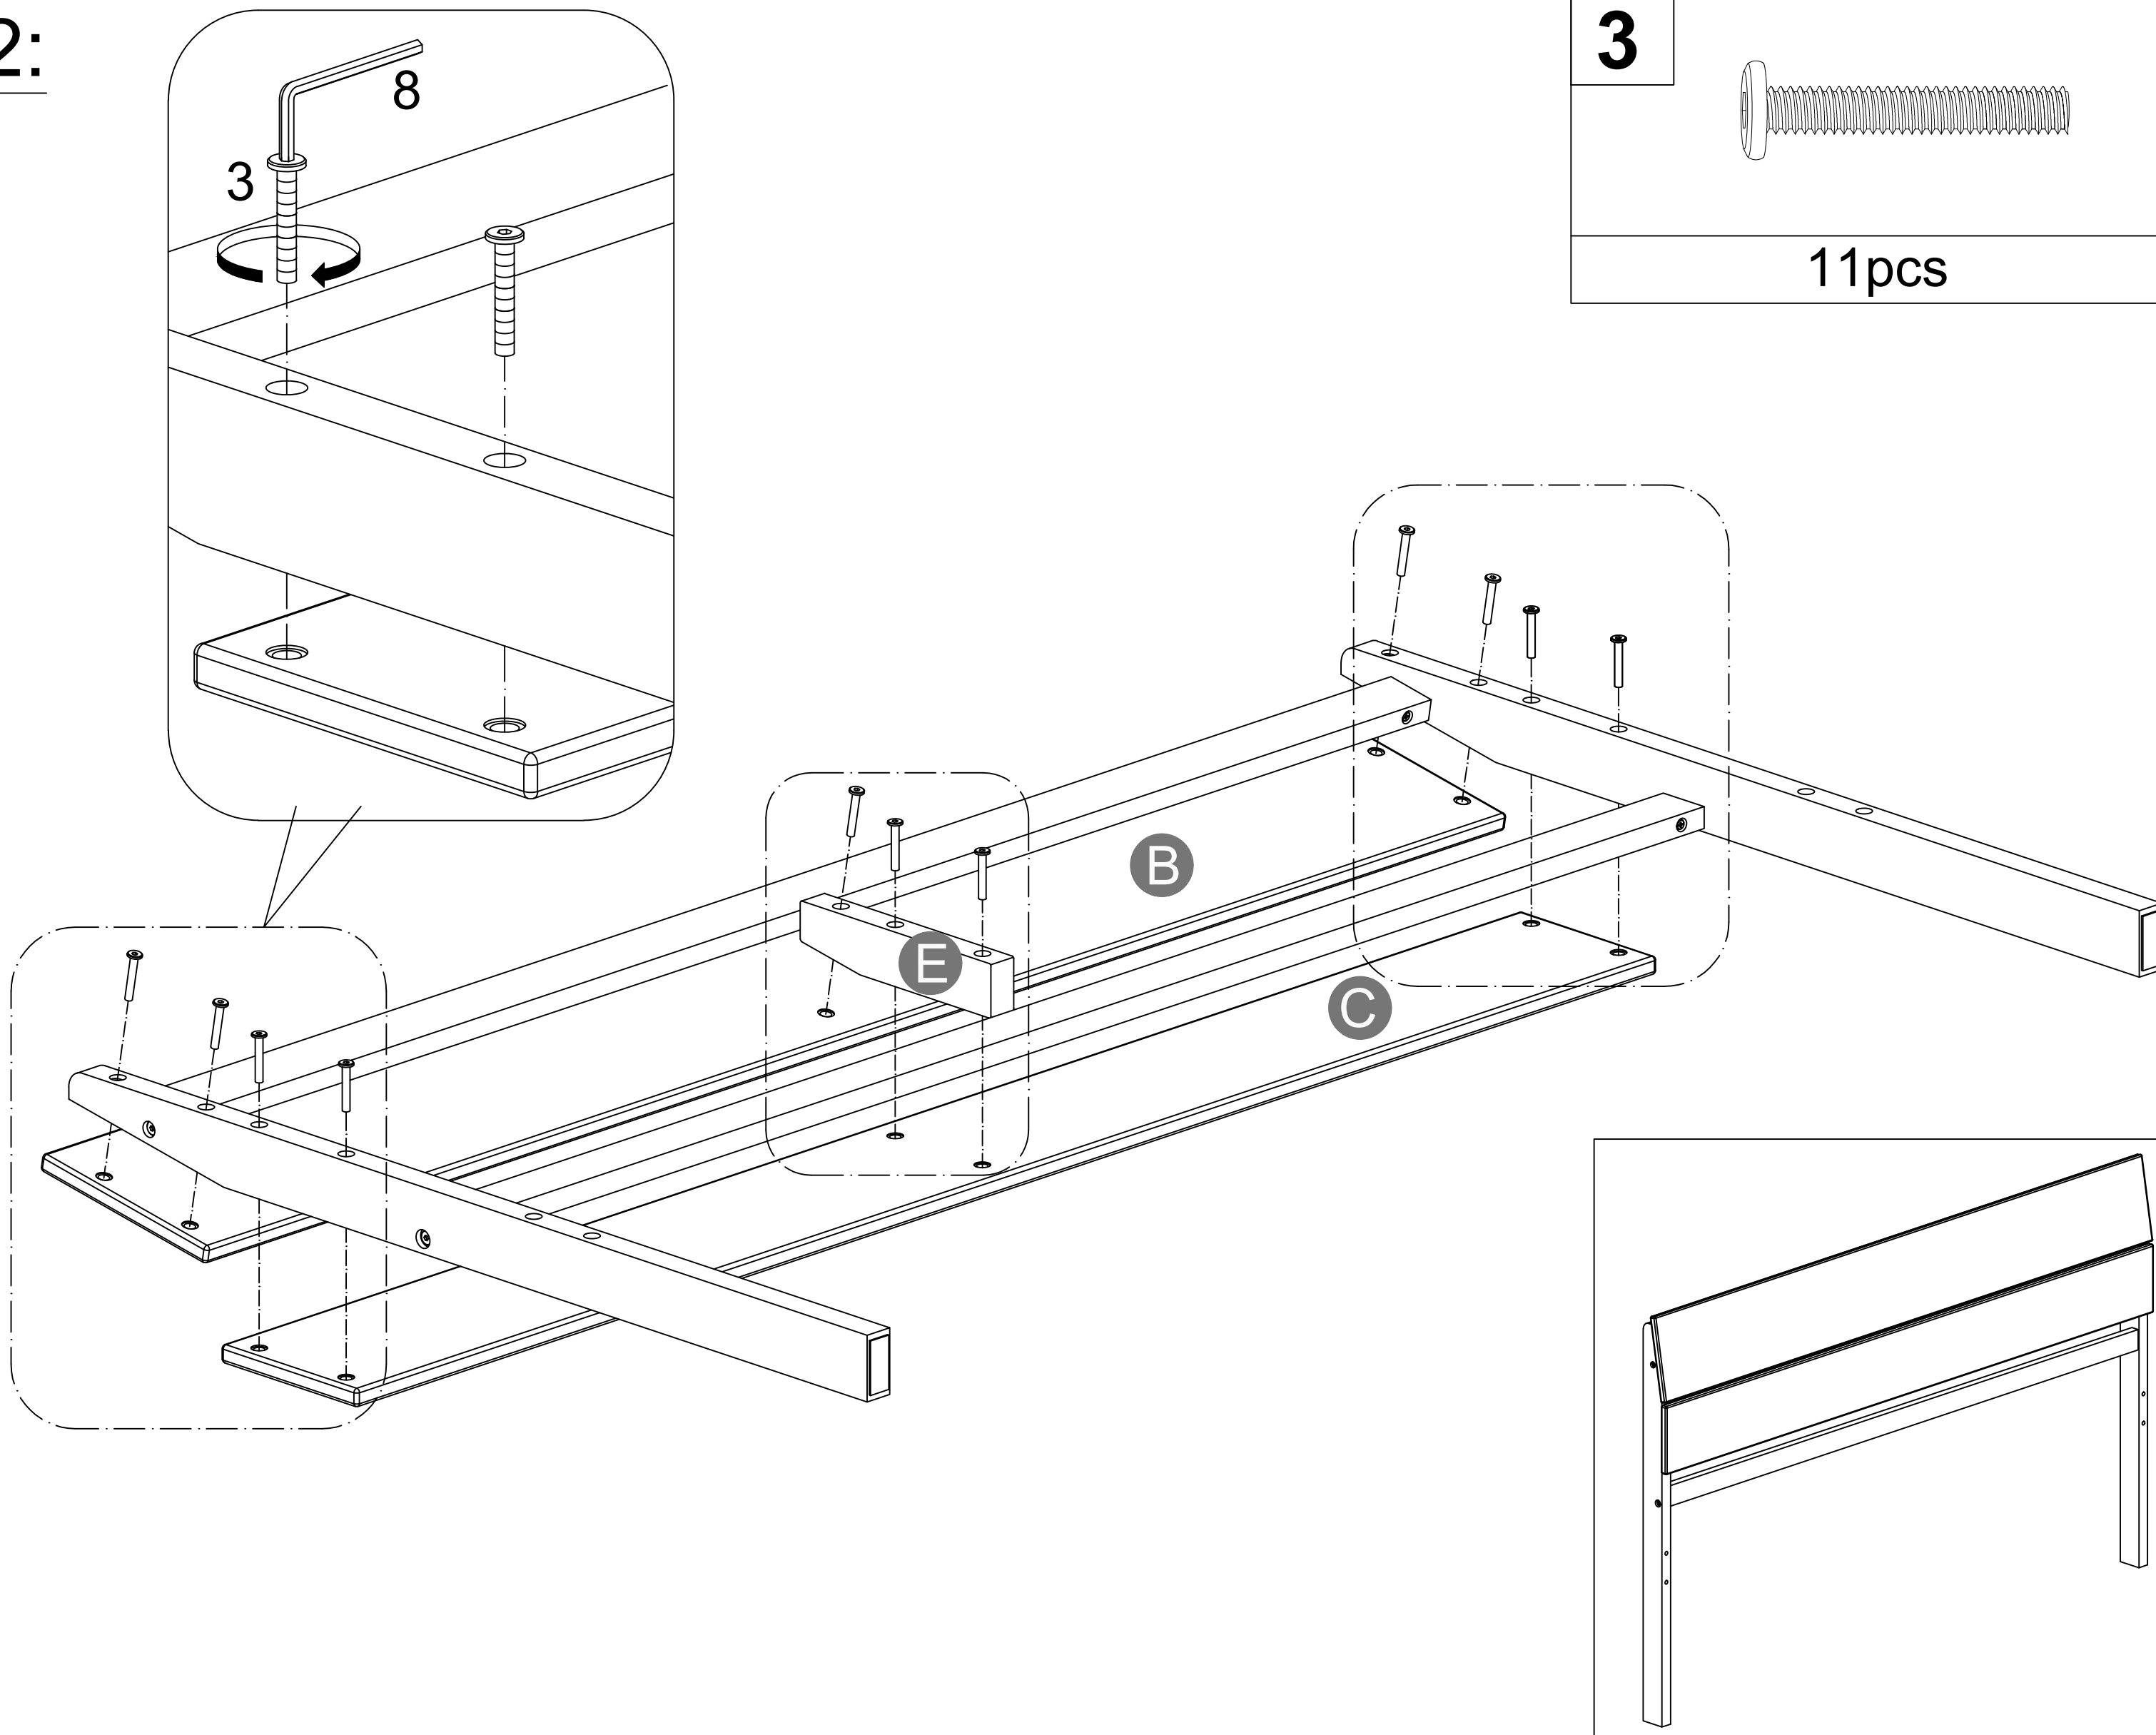


STEP 3:

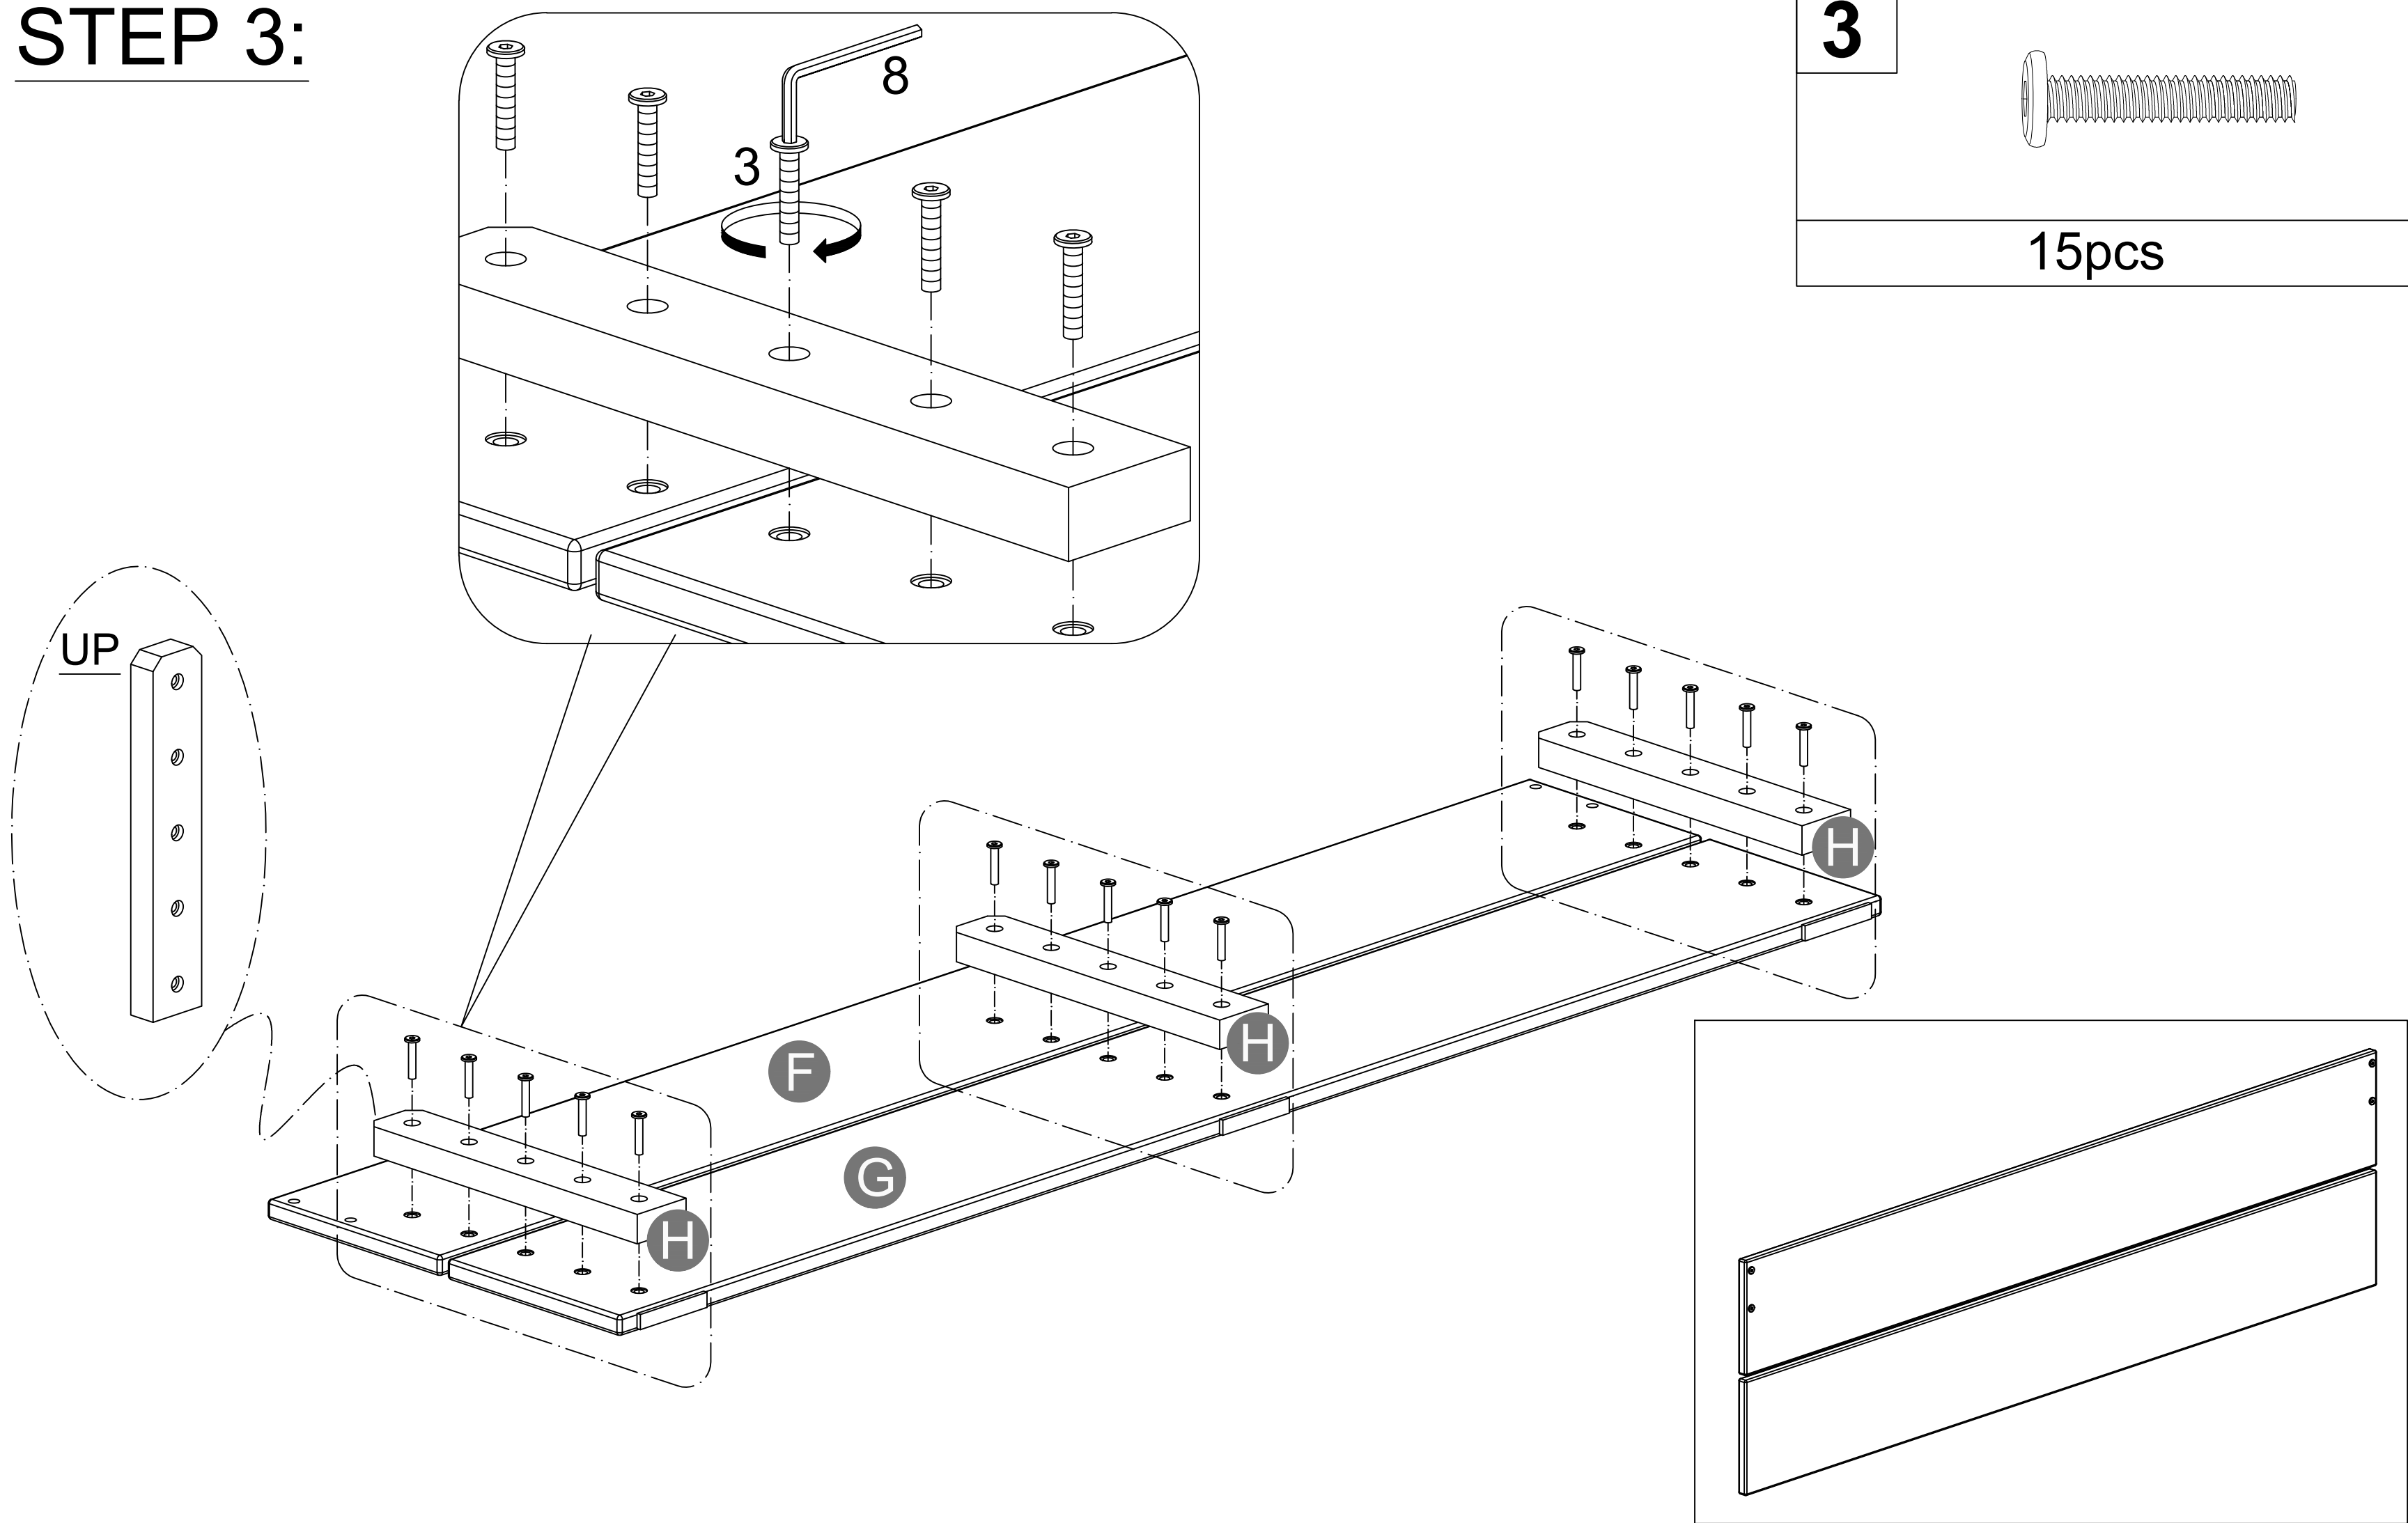


STEP 4:

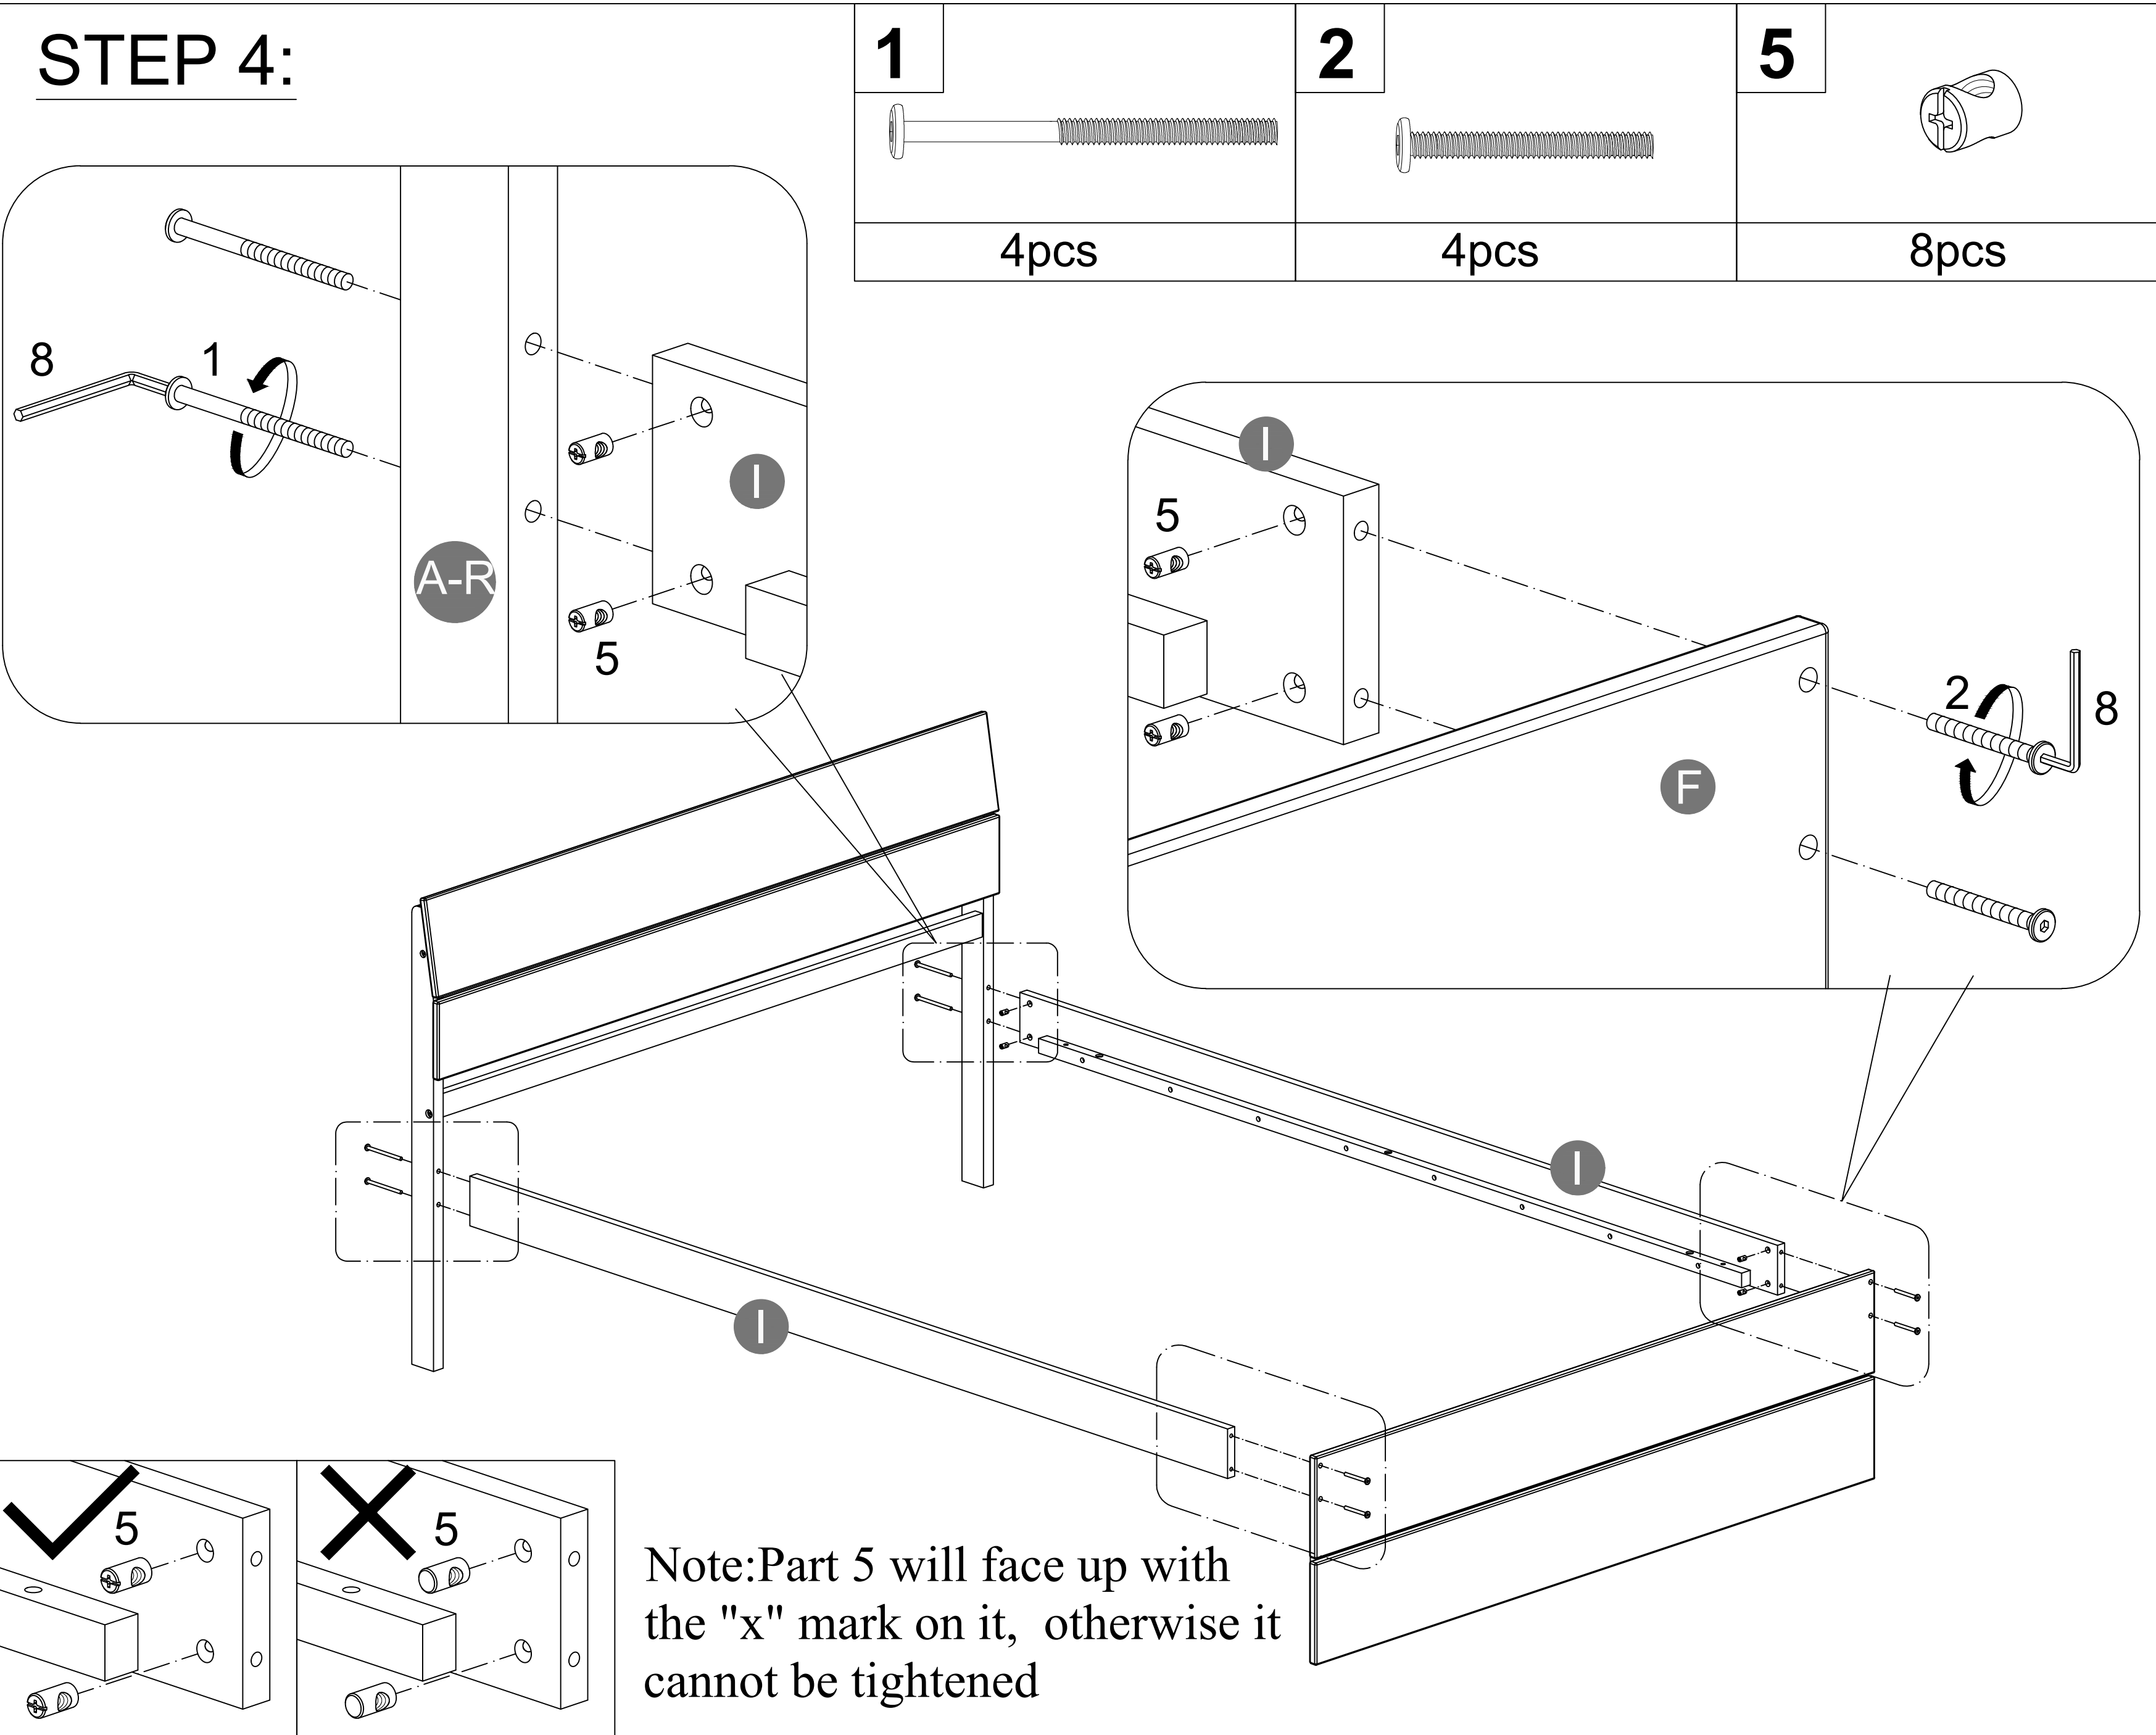



STEP 5:



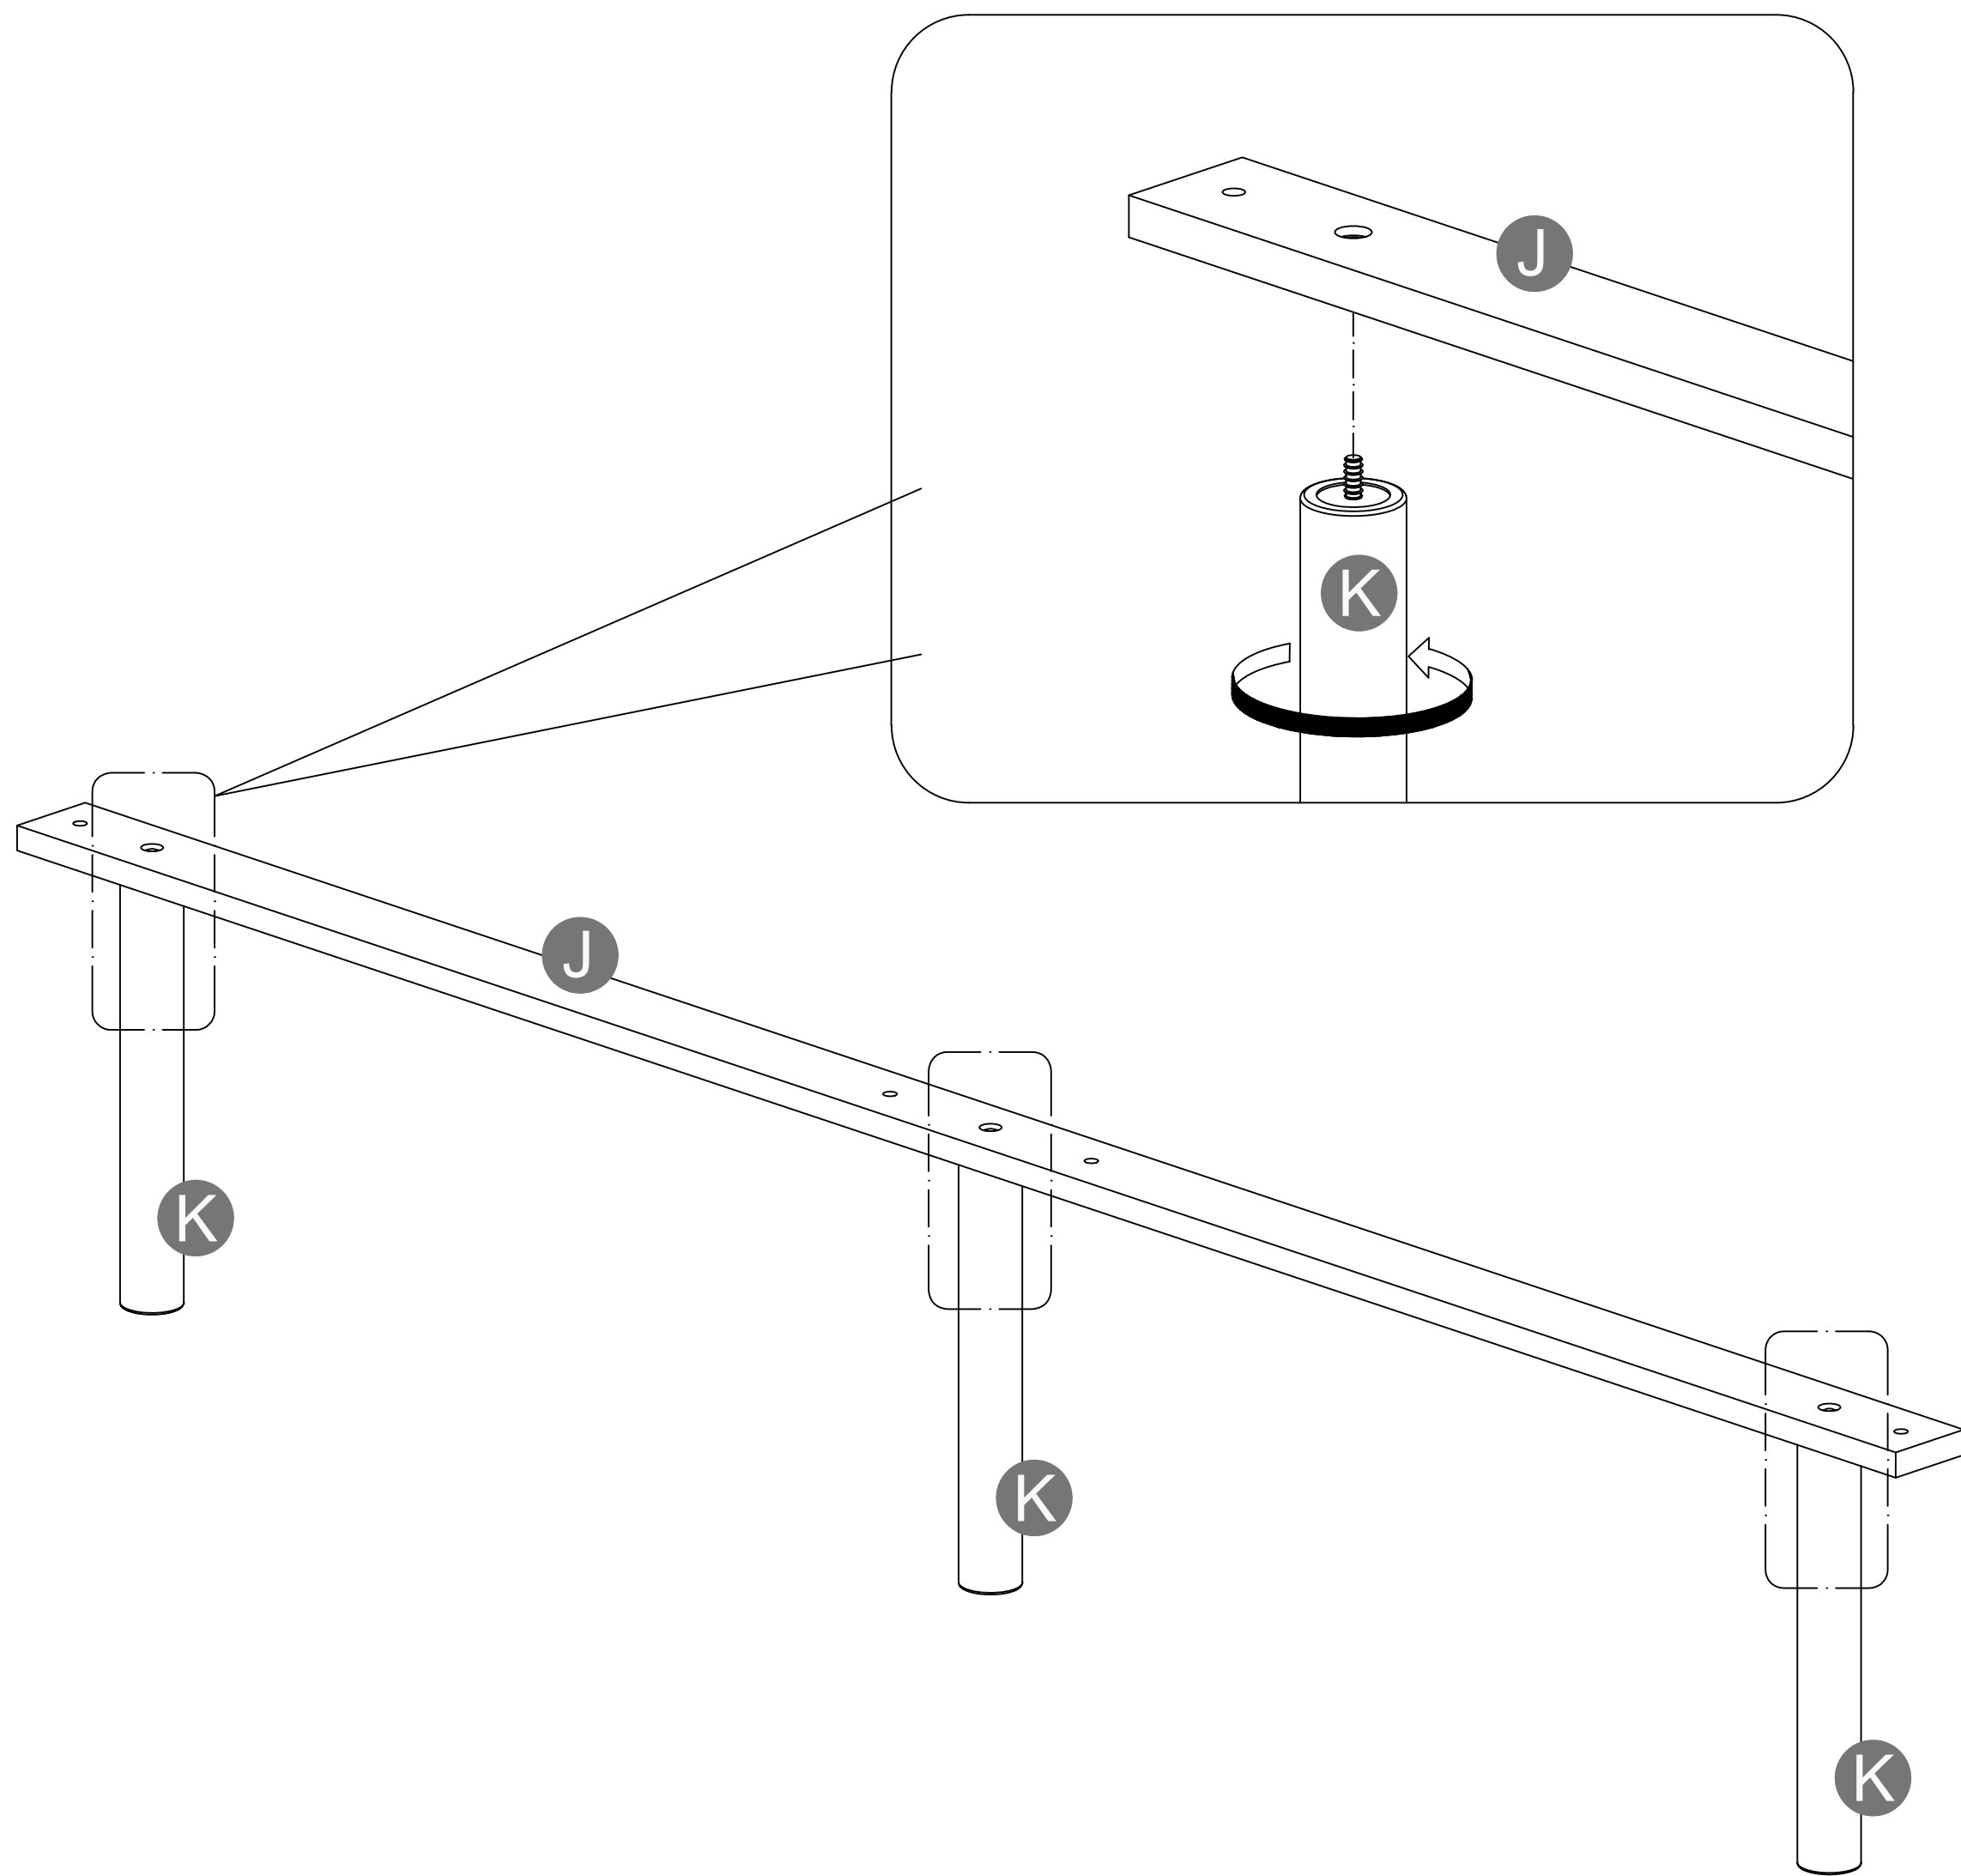


STEP 6:


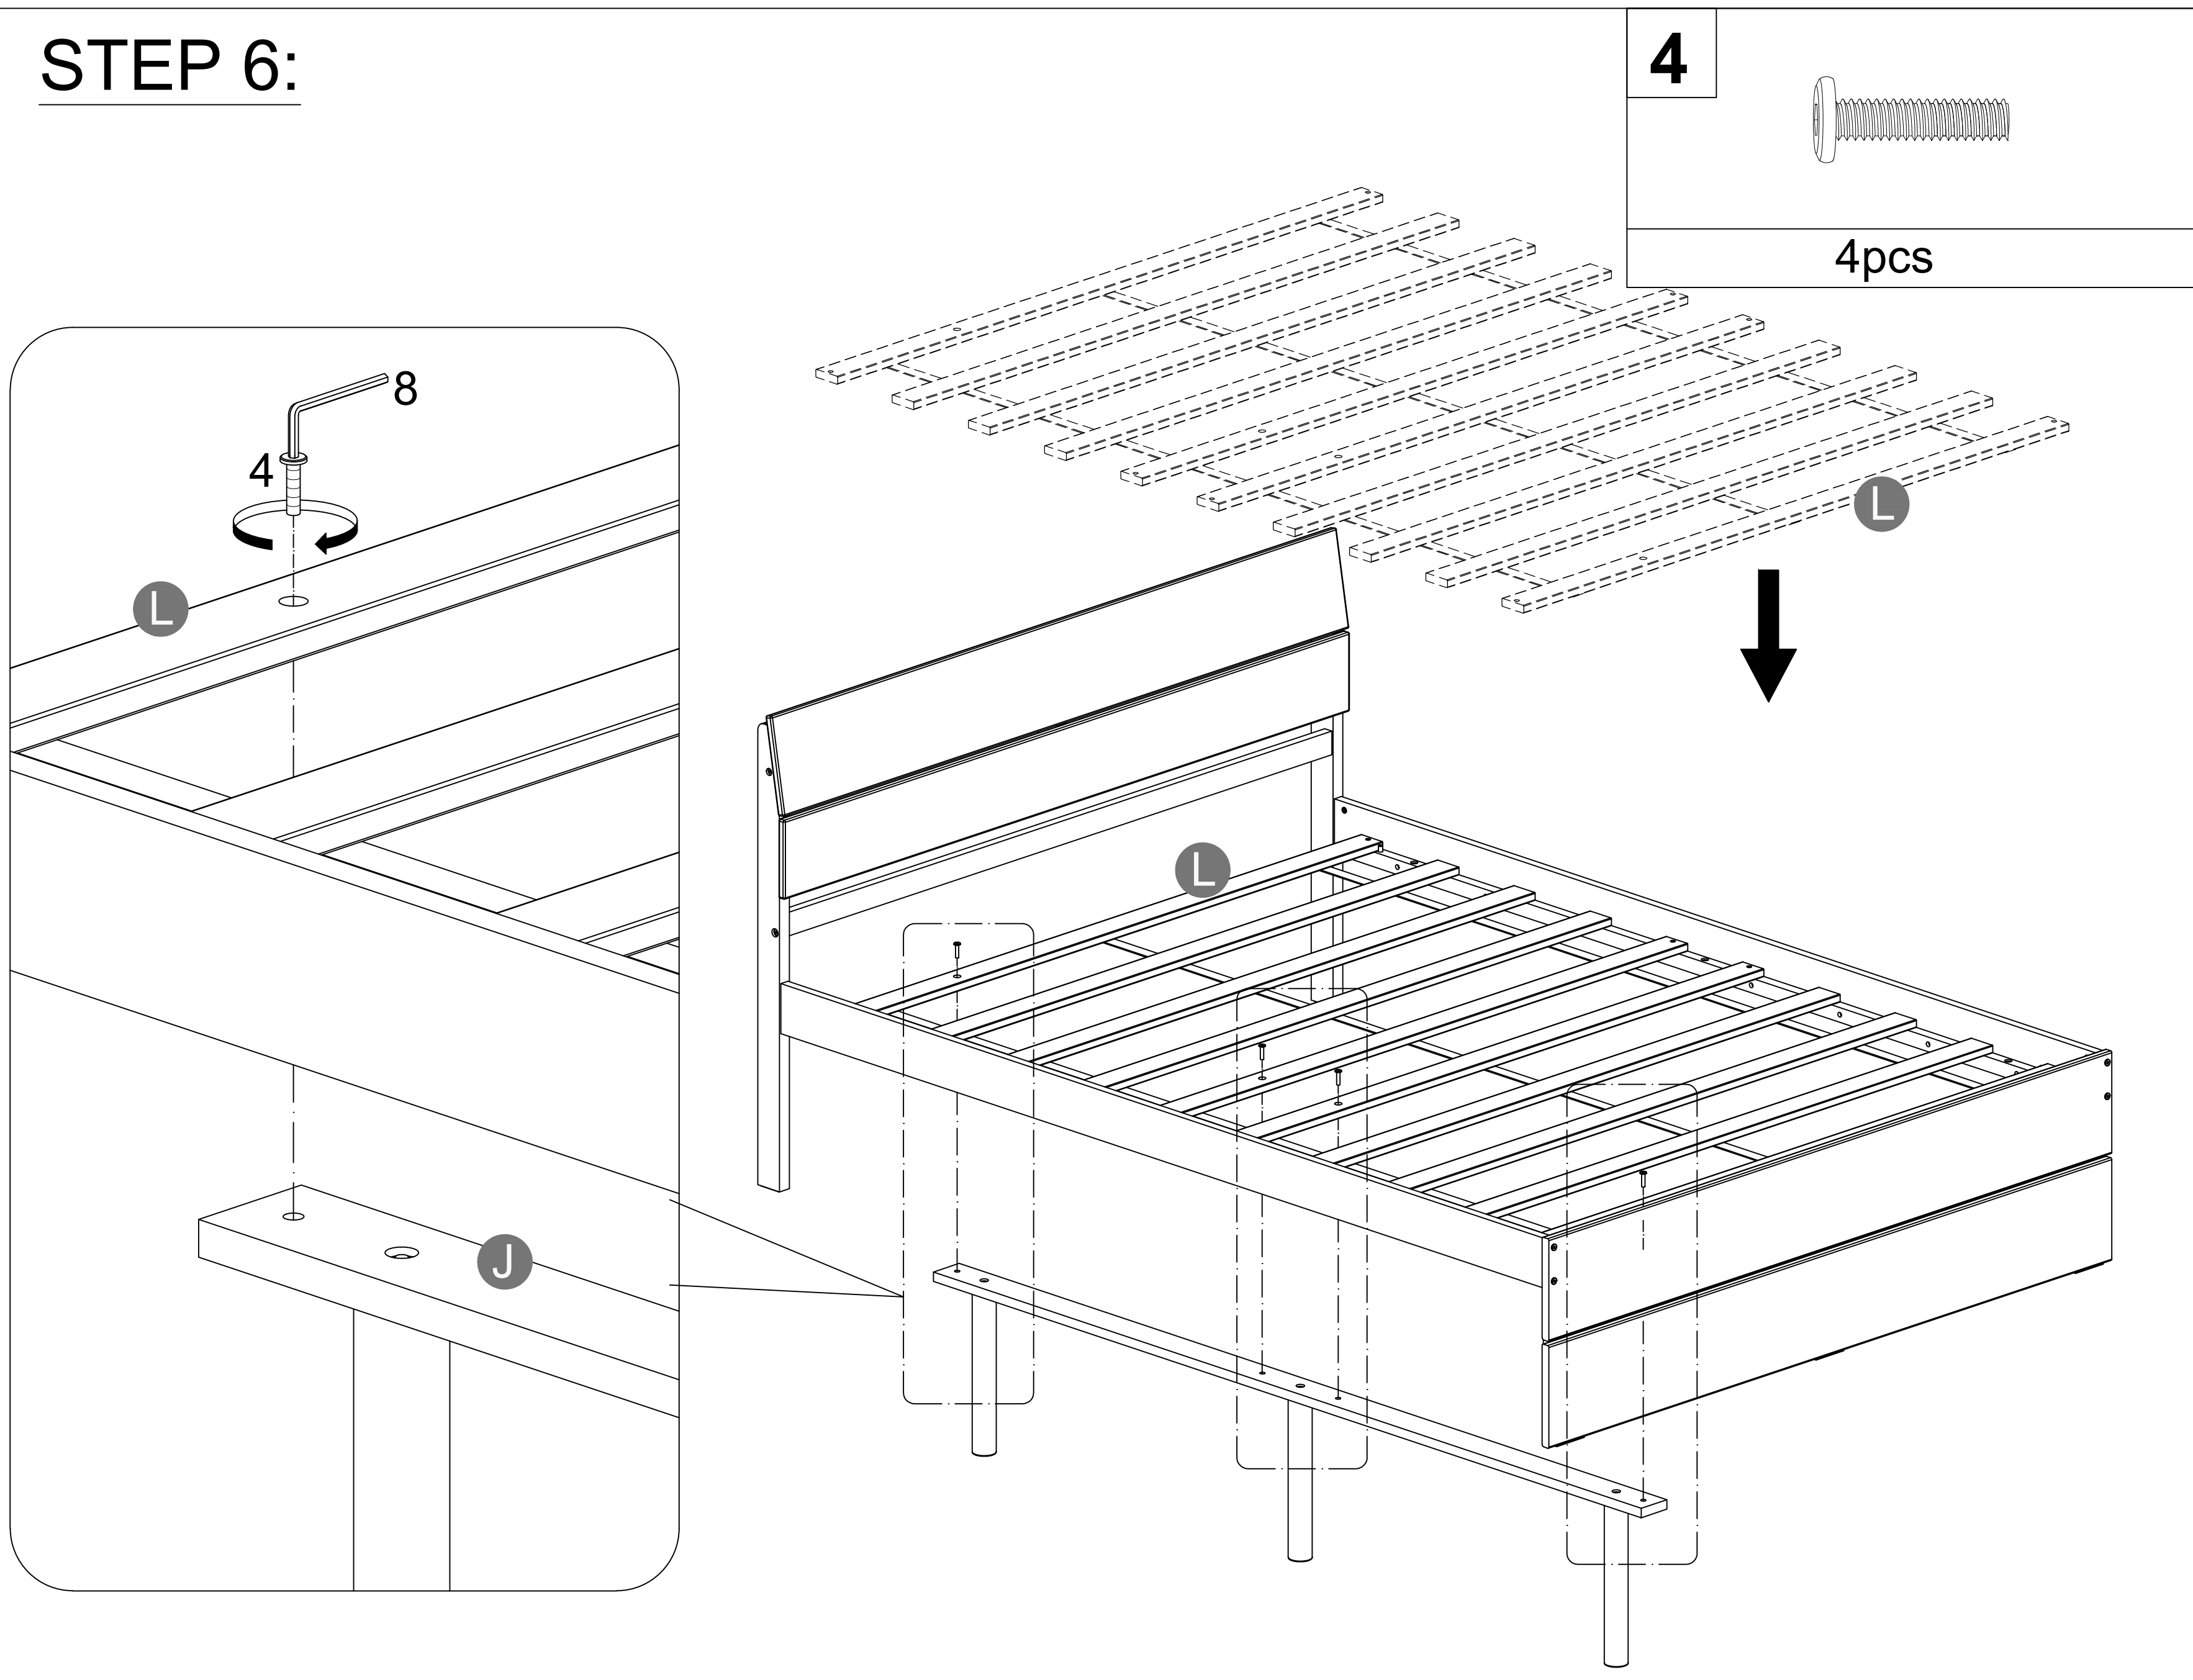


STEP 7:

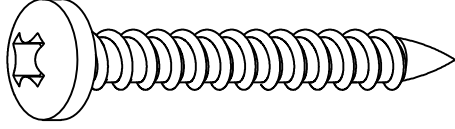6	7
	
4pcs	8 pcs

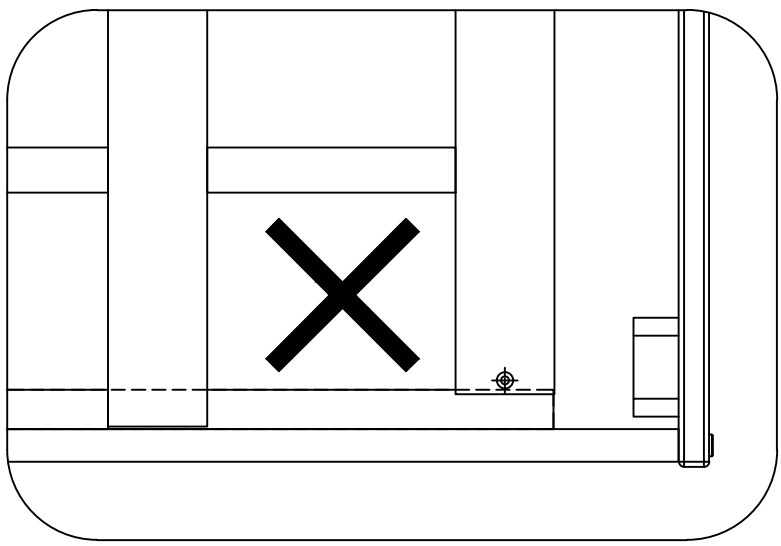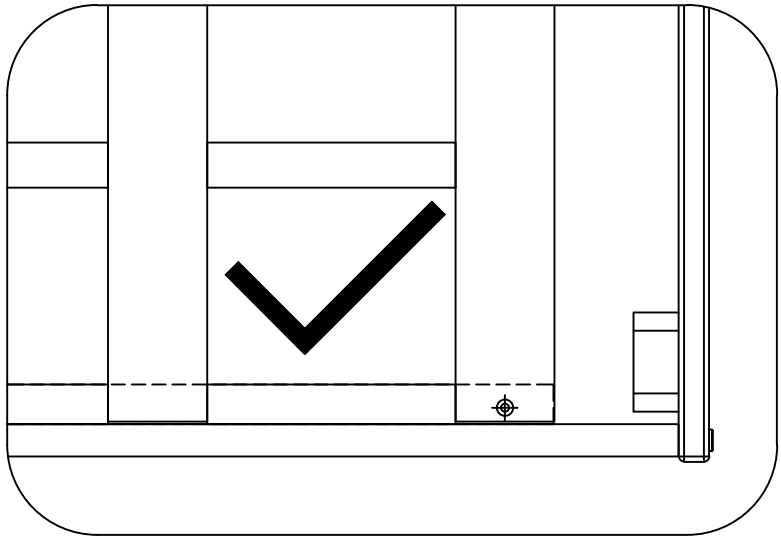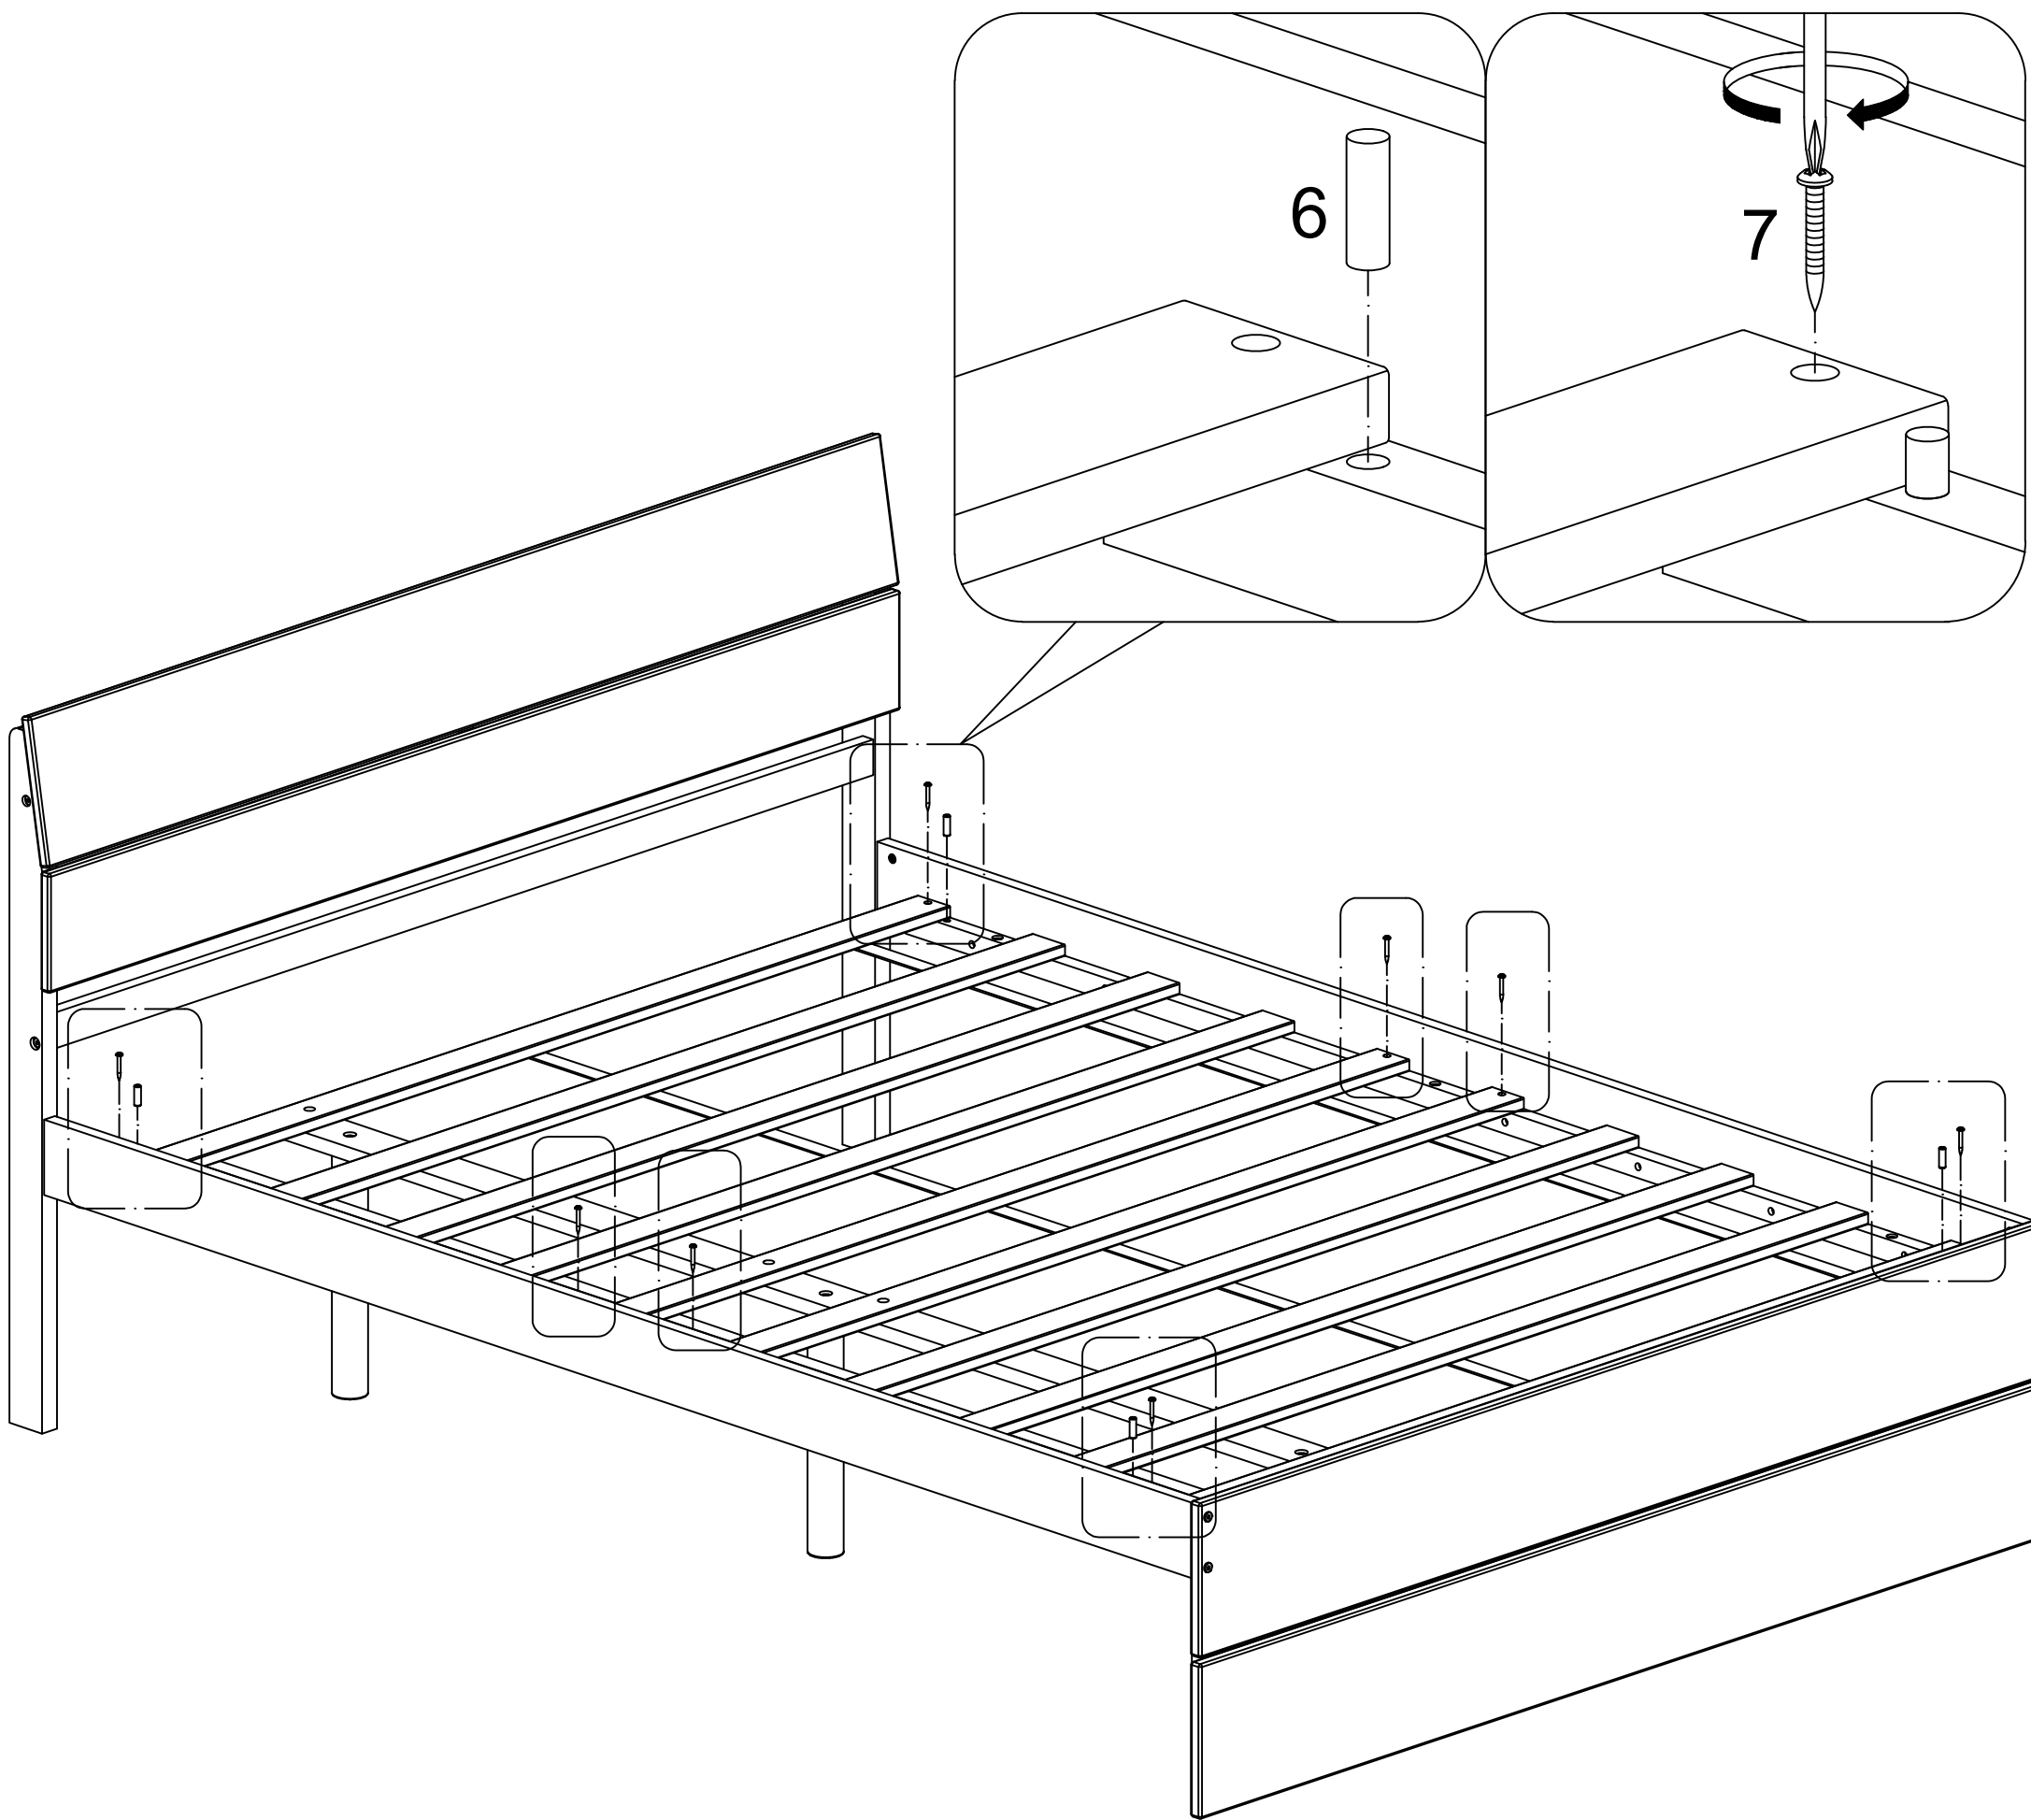


Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing , hold it in place with one hand, then lock the screw.

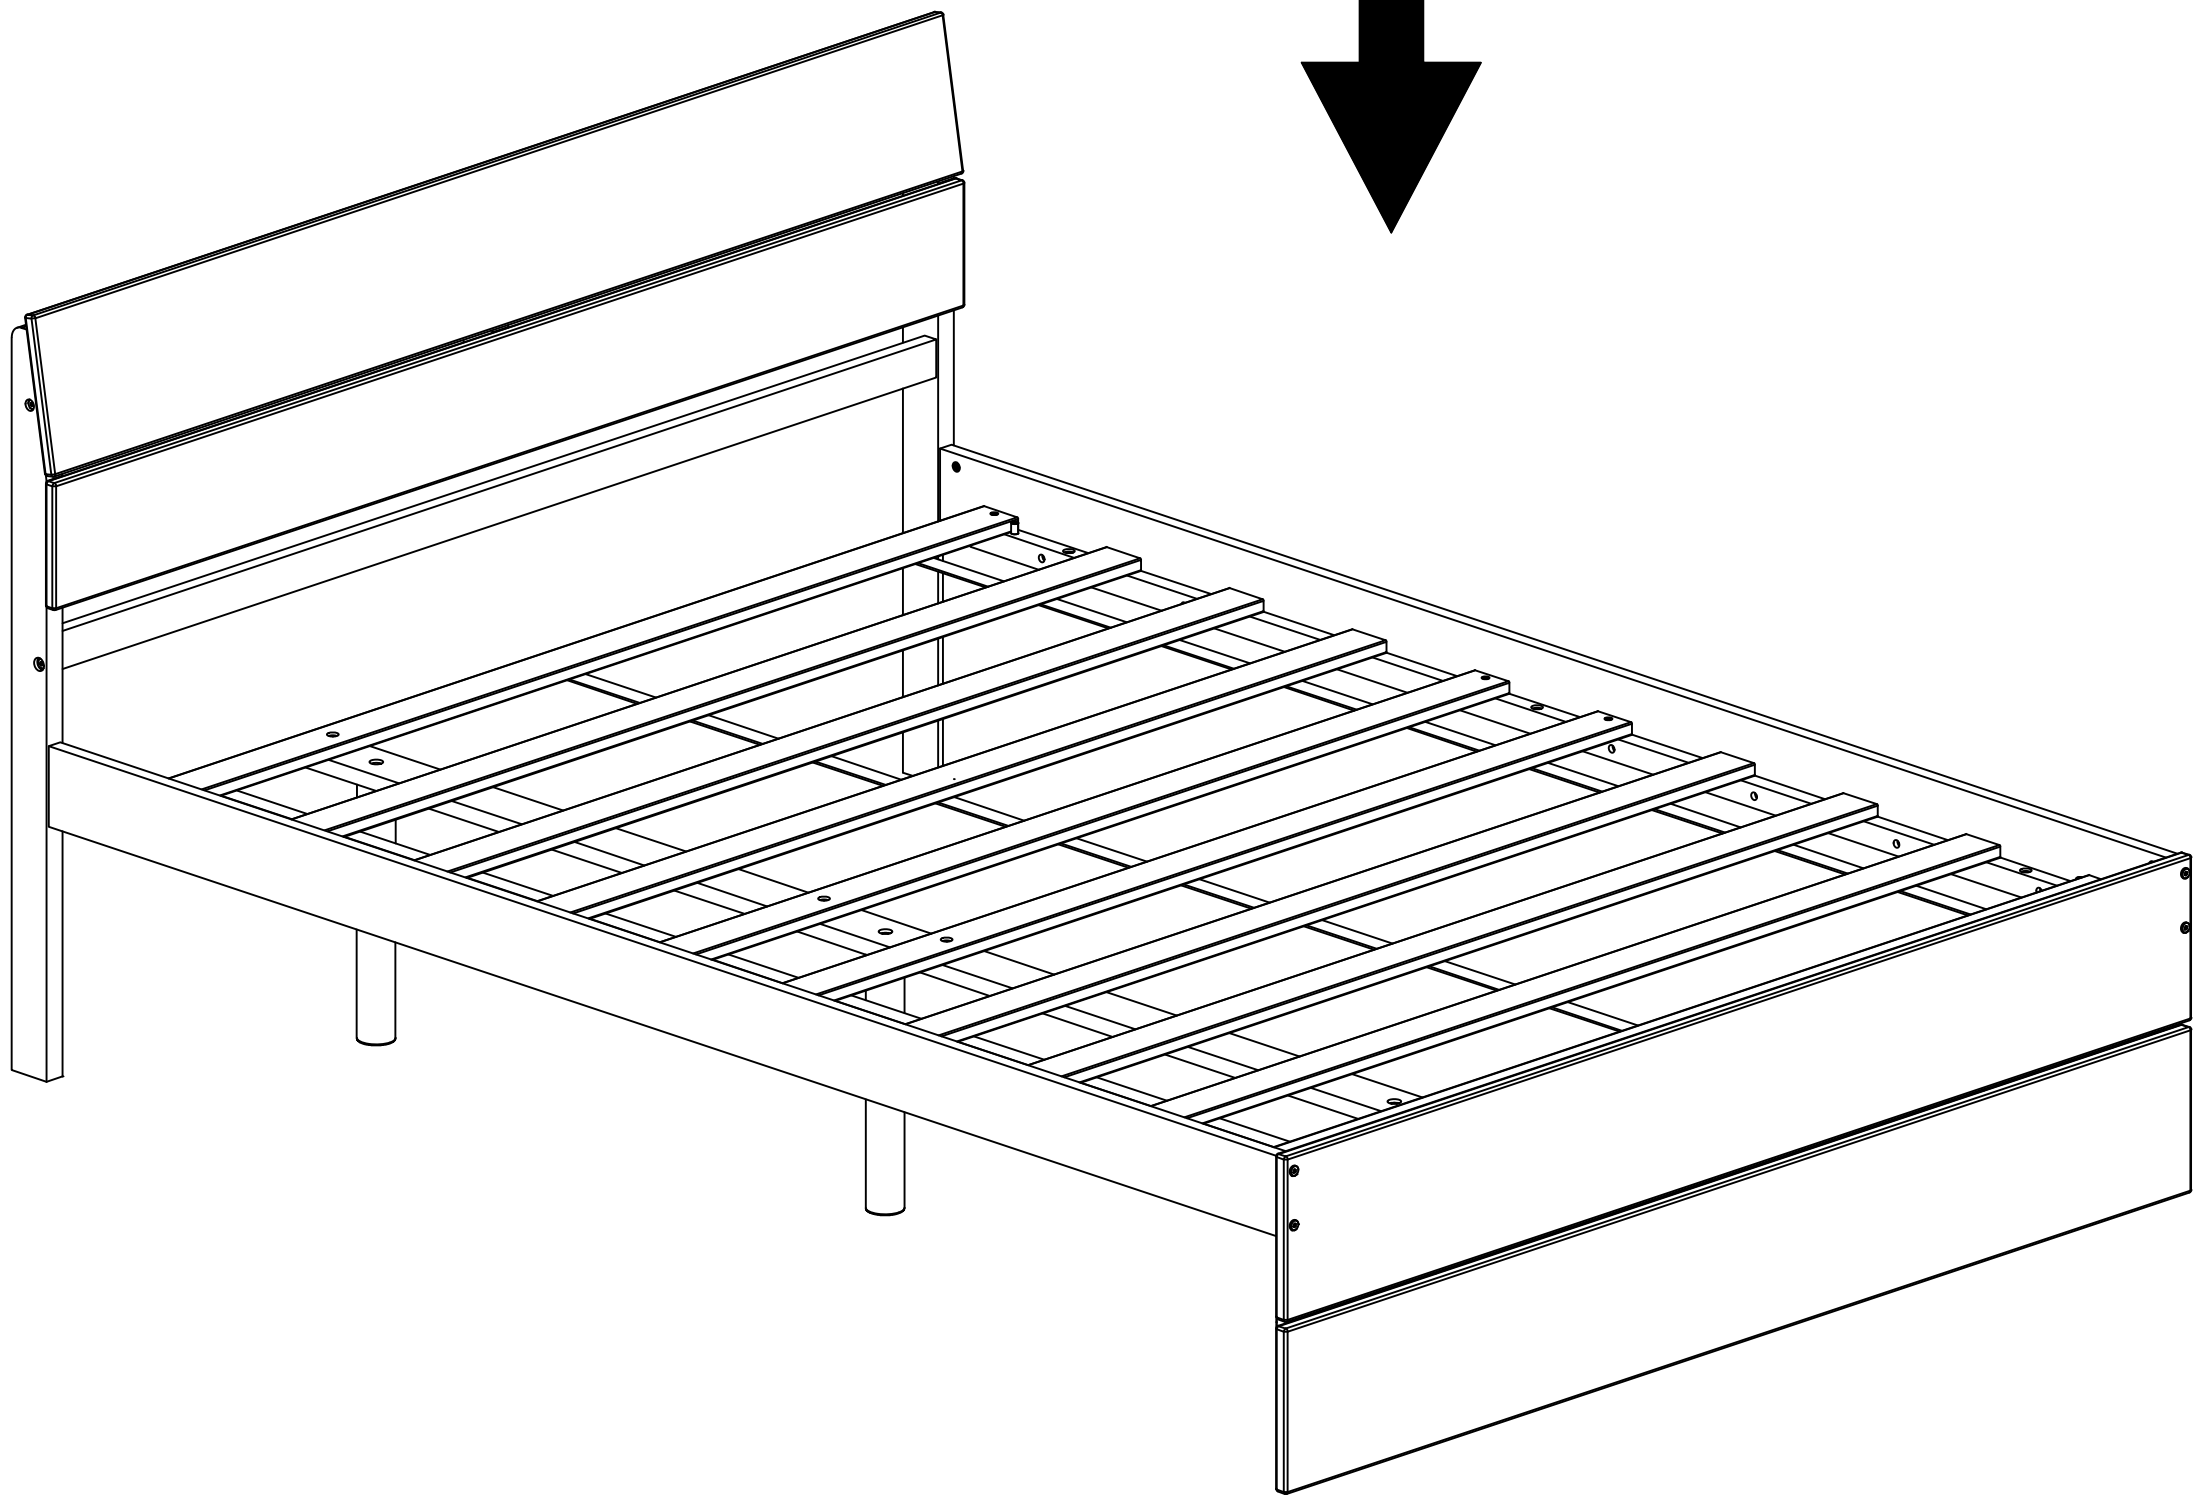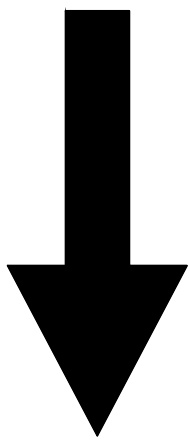

Make sure to tighten all the screws of the bed.

ASSEMBLY INSTRUCTIONS

High gloss full bed with trundle and 2 drawers

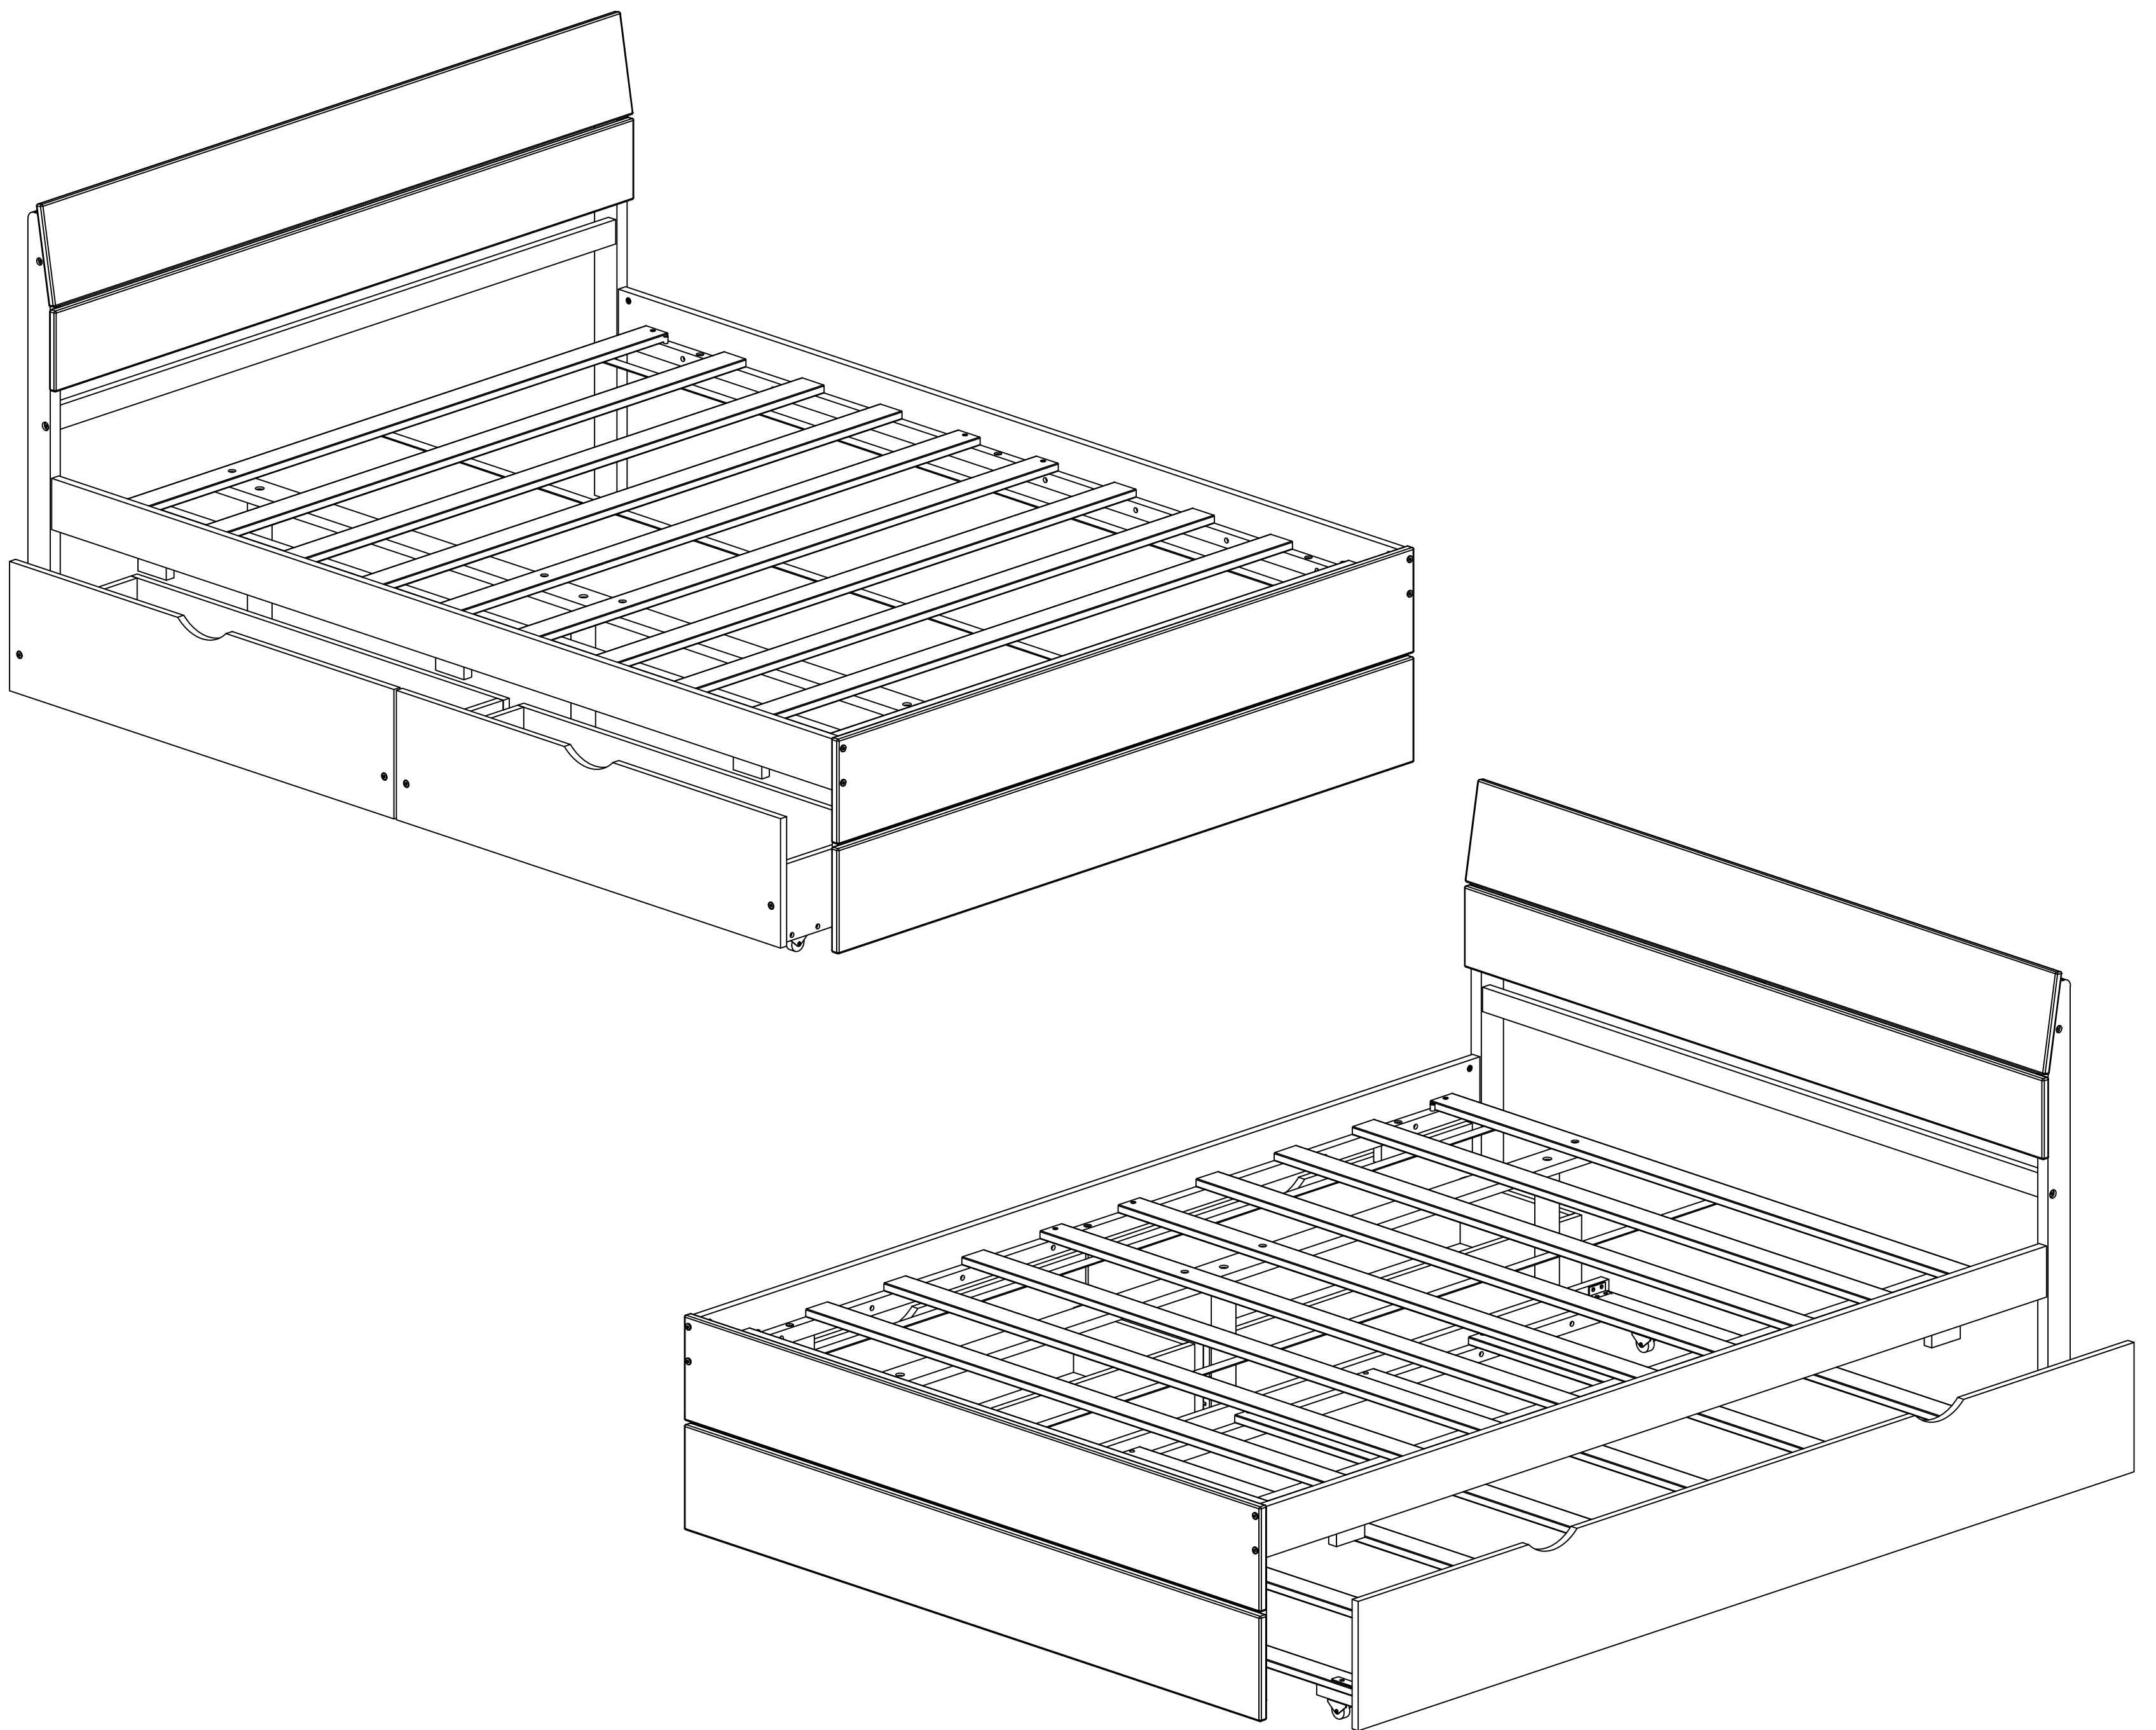

This set is included 2 boxes if don't receive full 2 boxes please contact our customer service team.

YX7111-1/YX7111-2