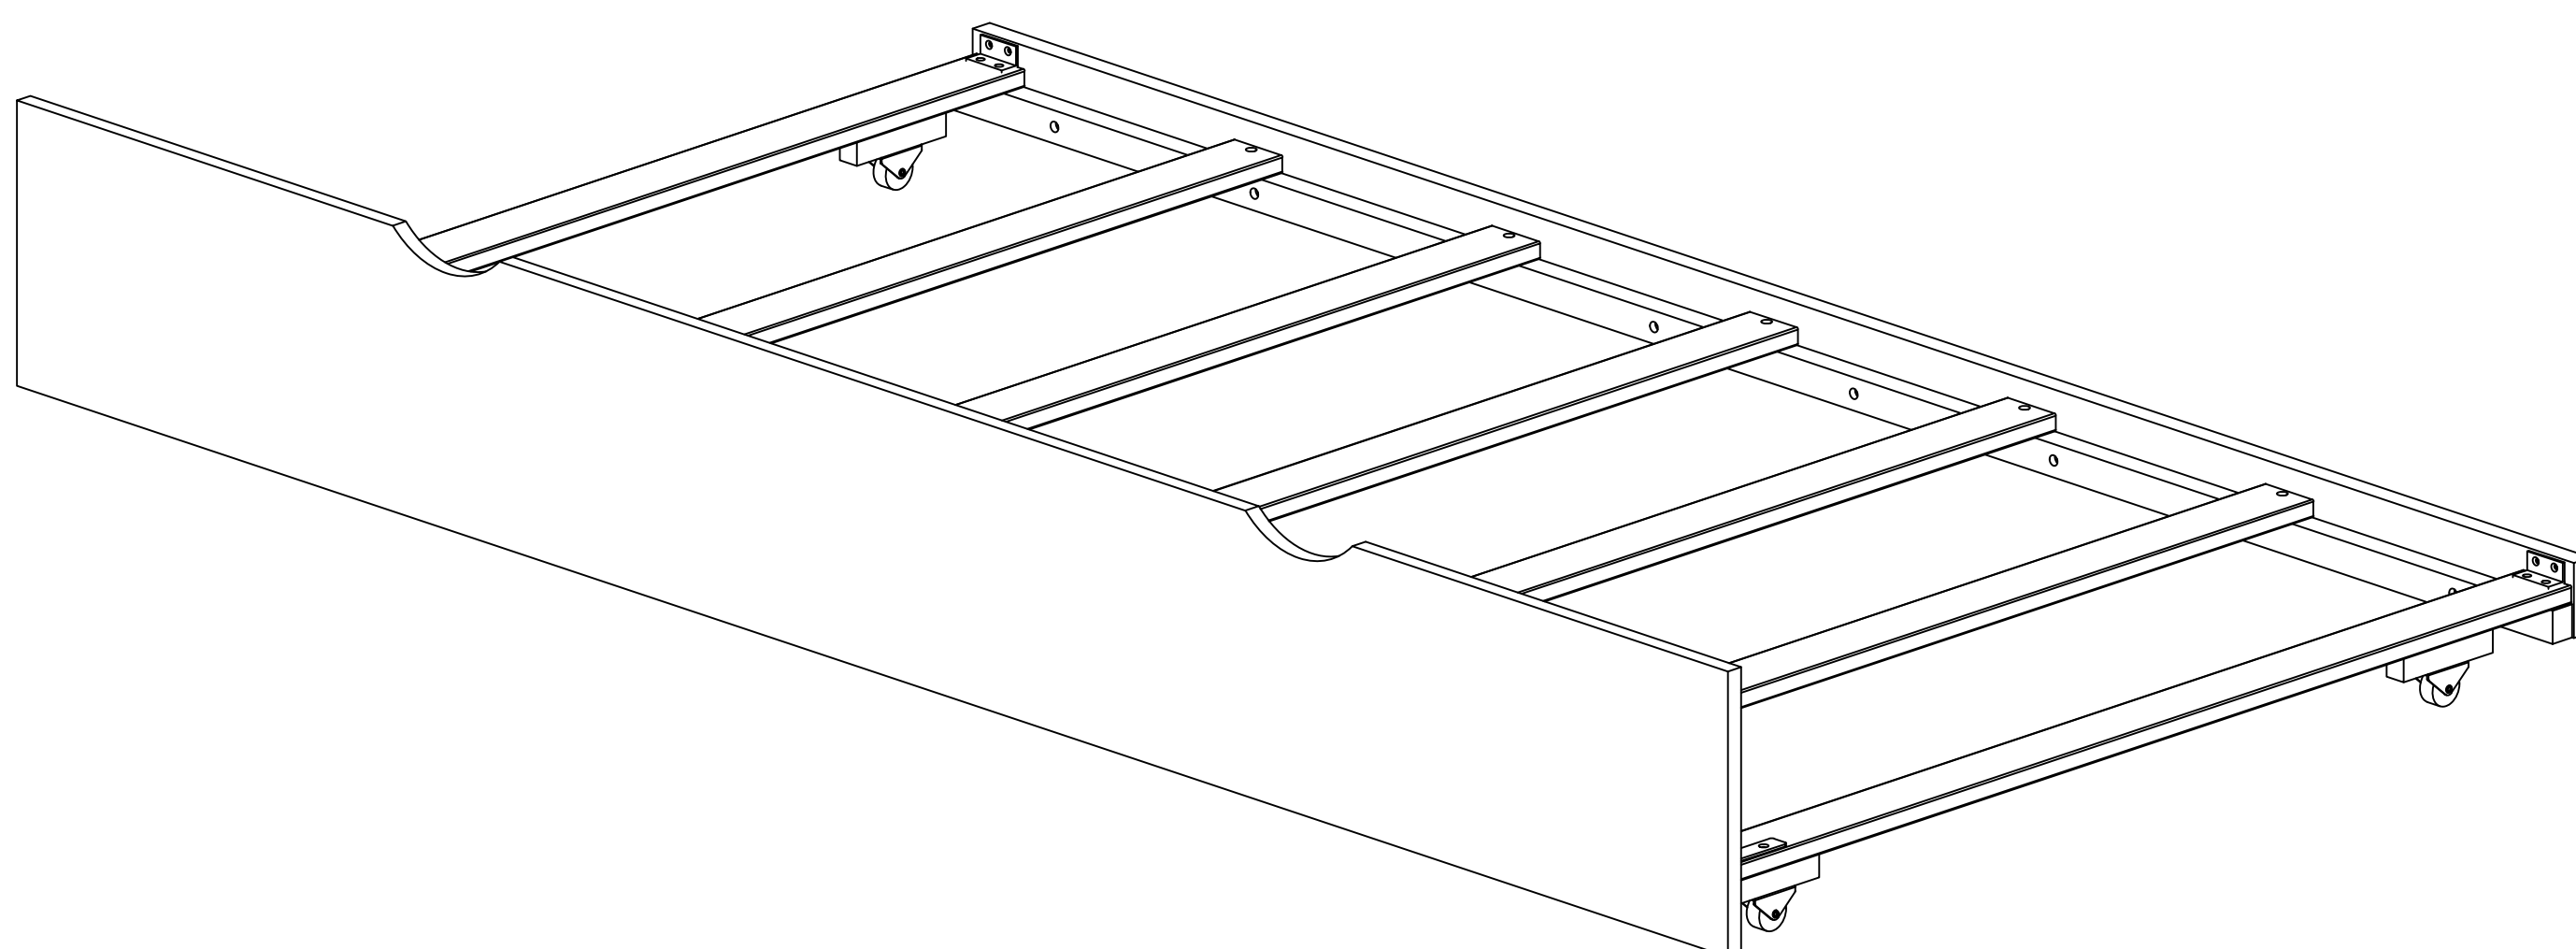
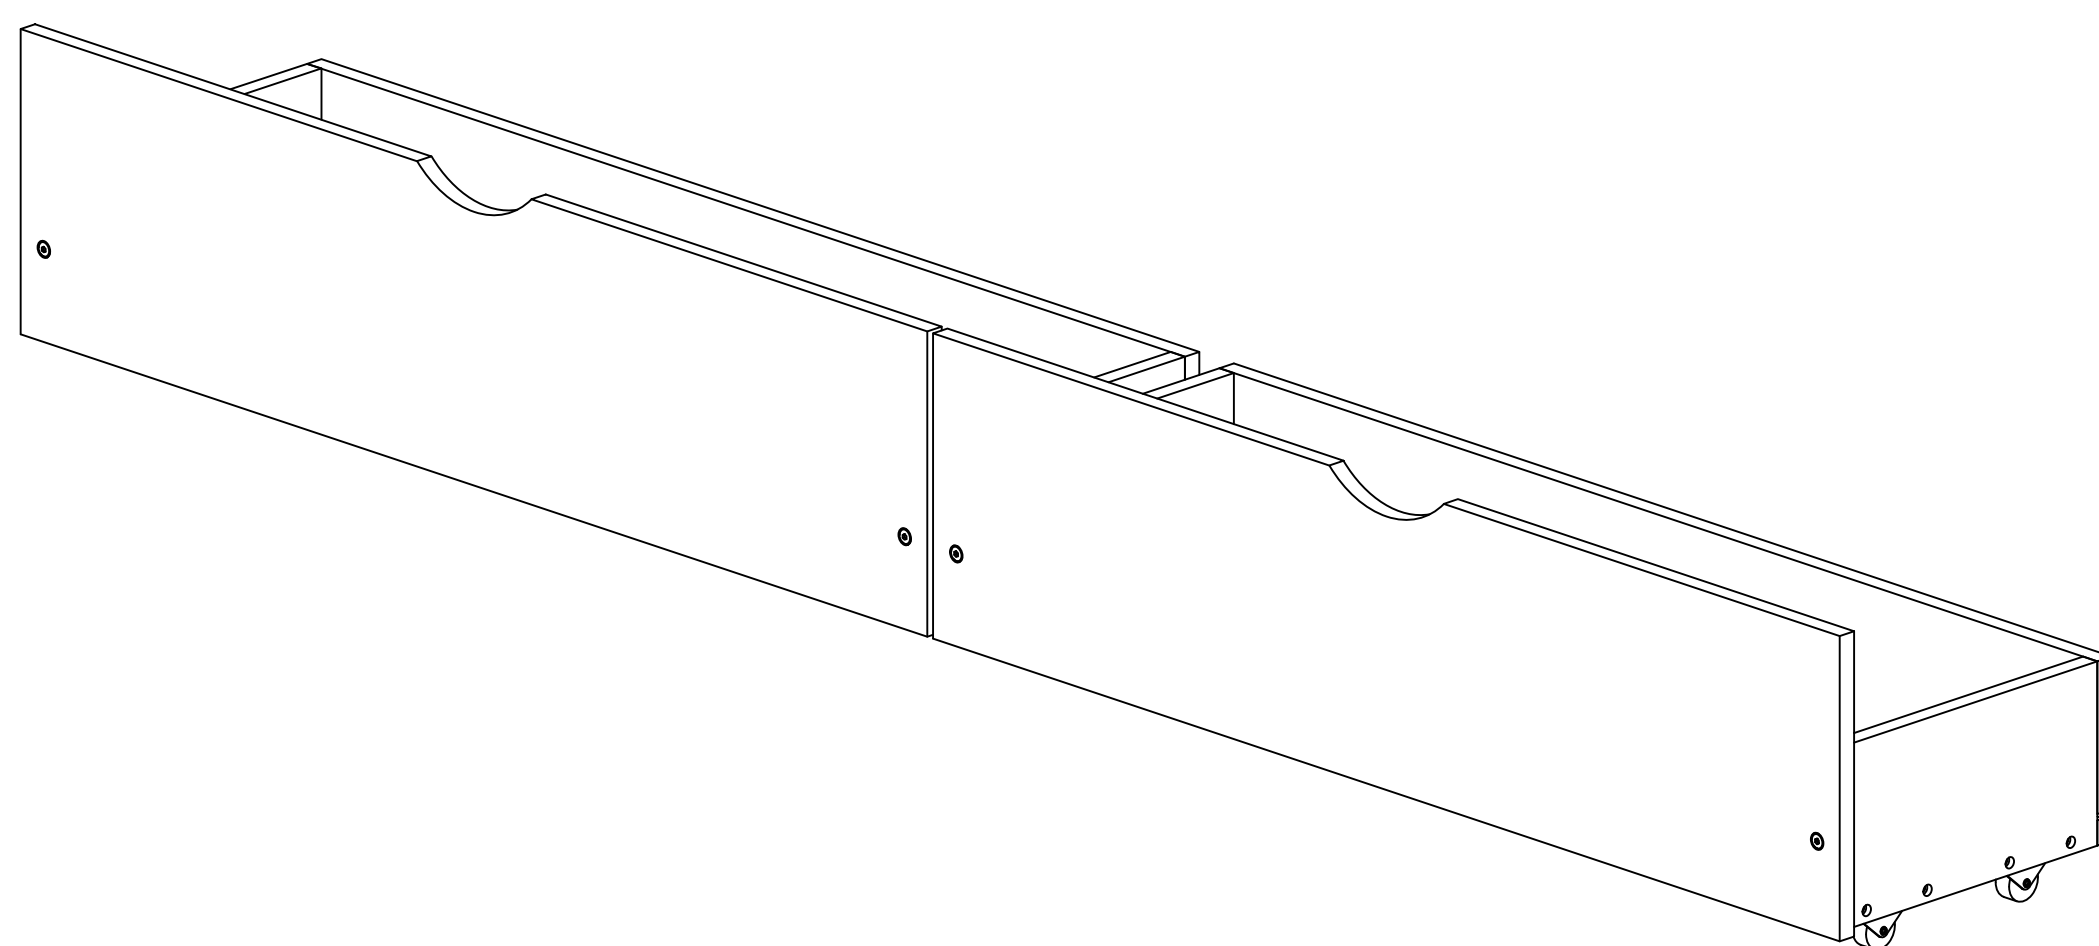


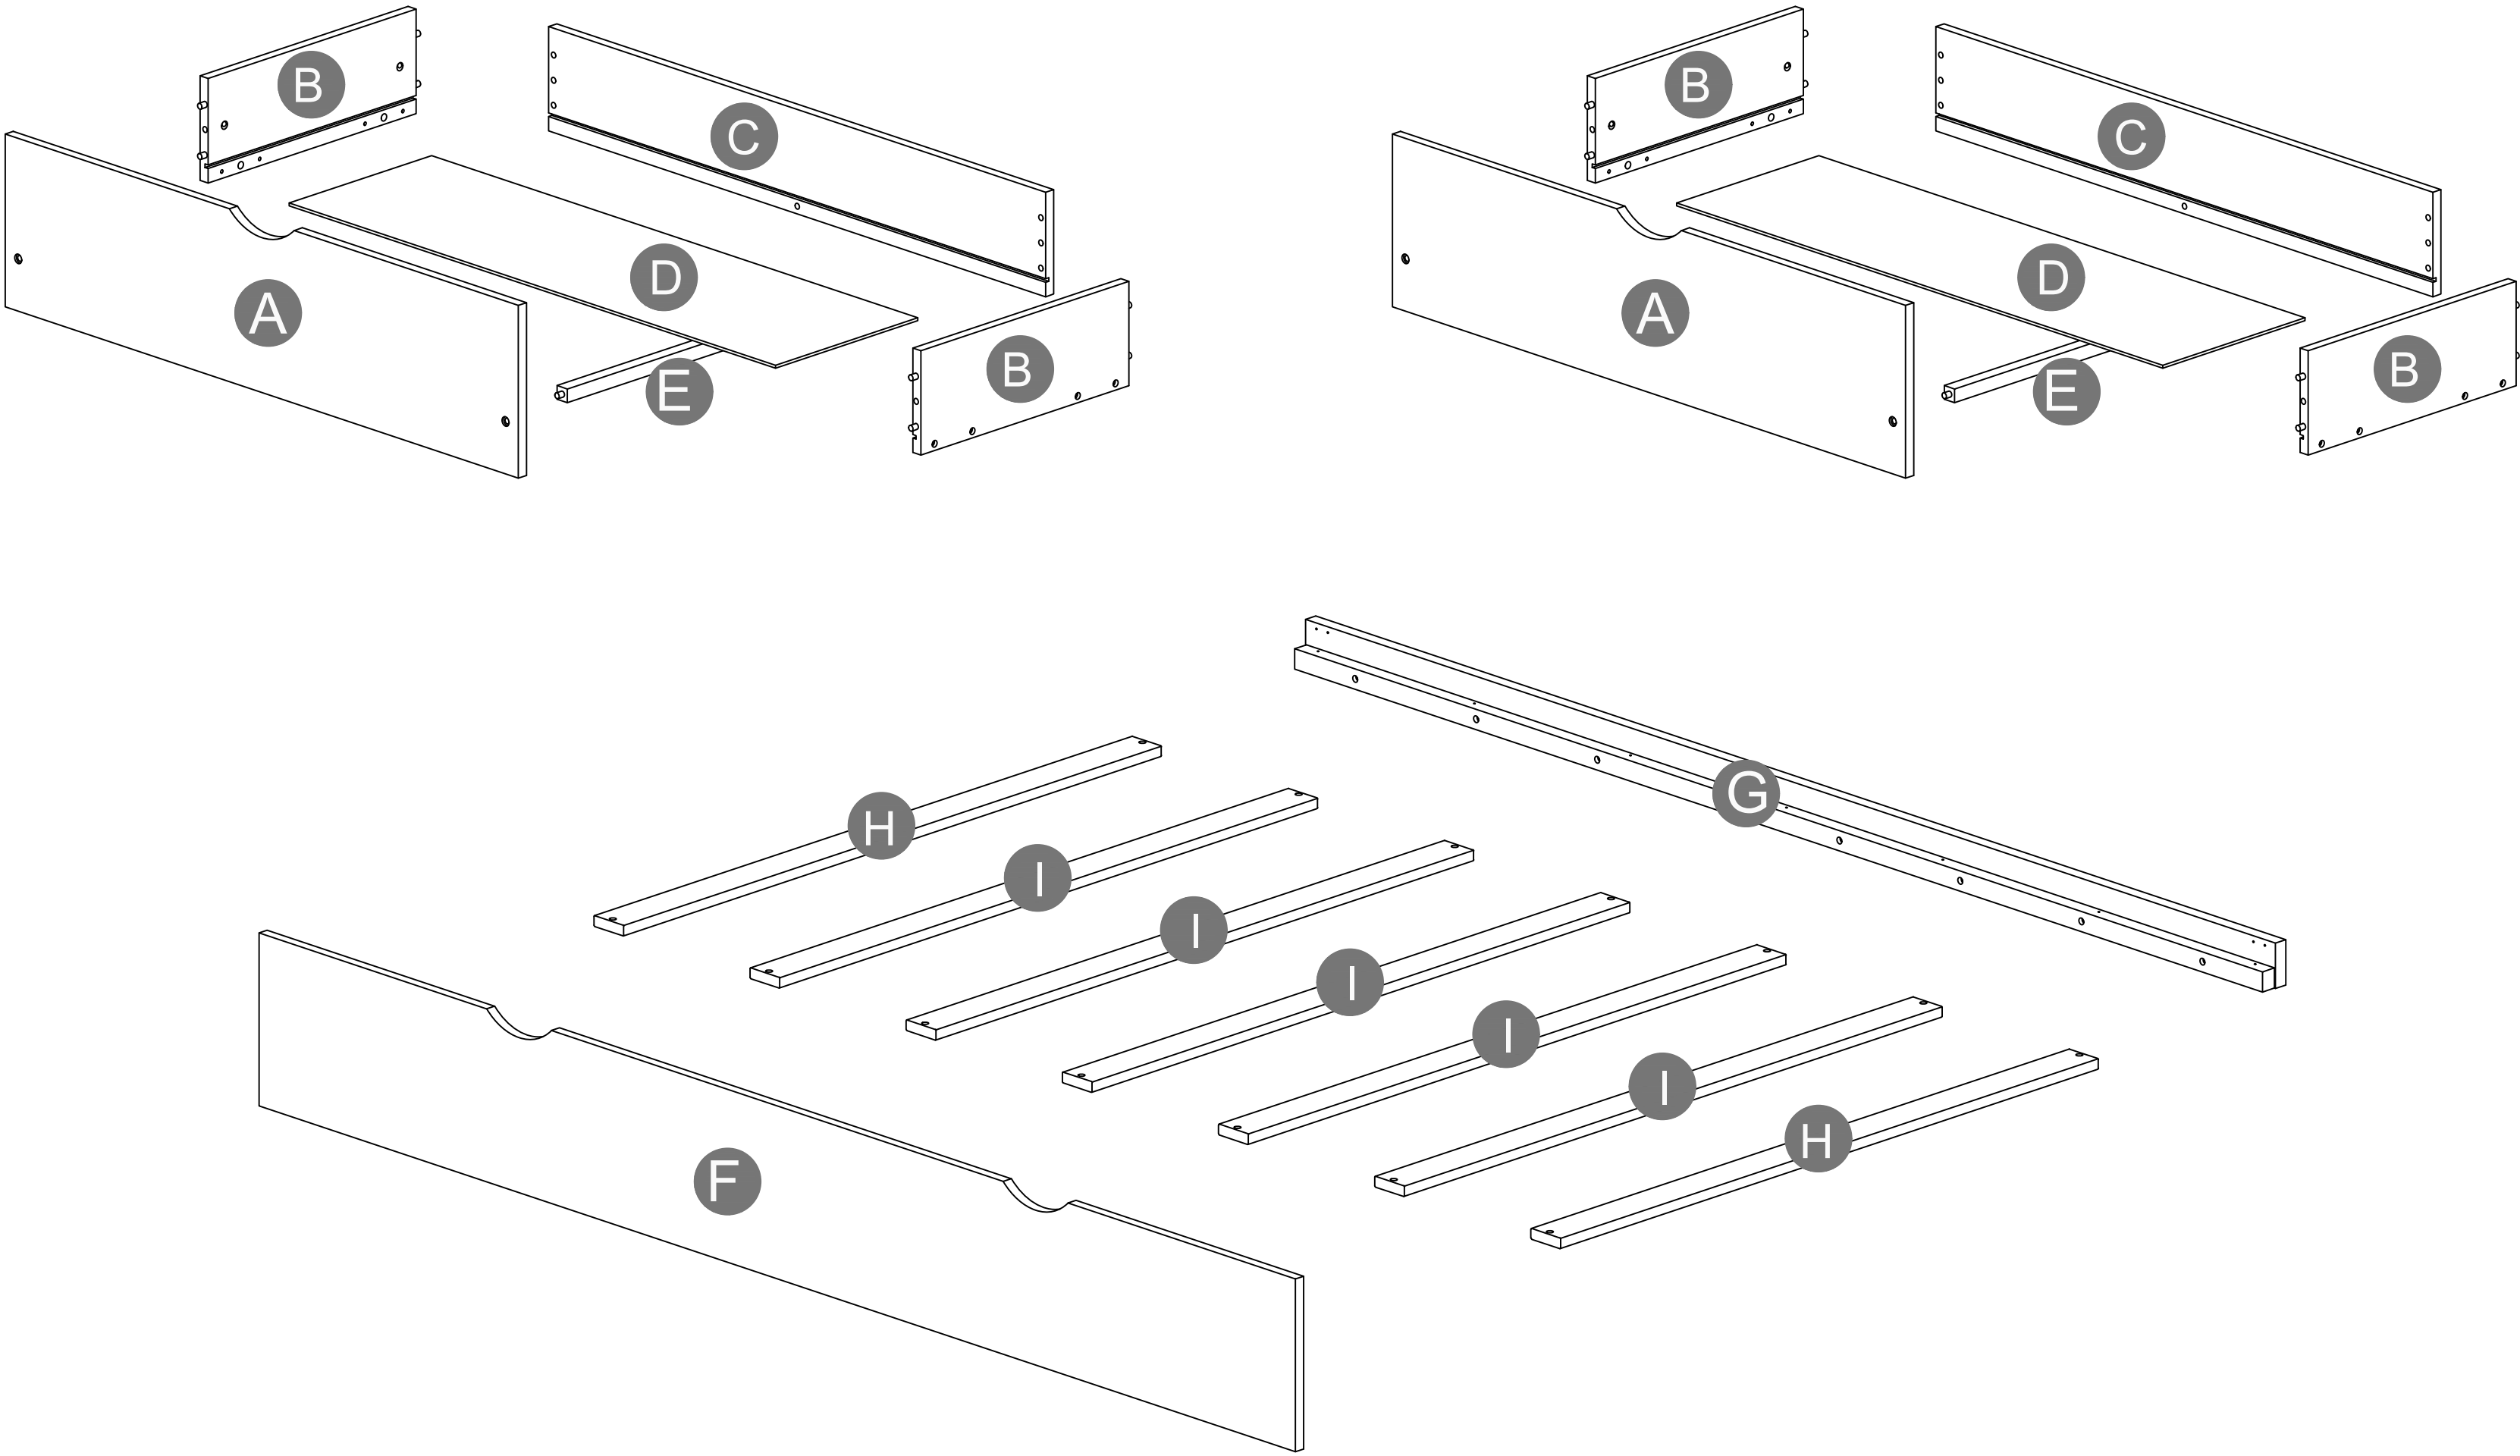
# ASSEMBLY INSTRUCTIONS

## High gloss full bed with trundle and 2 drawers



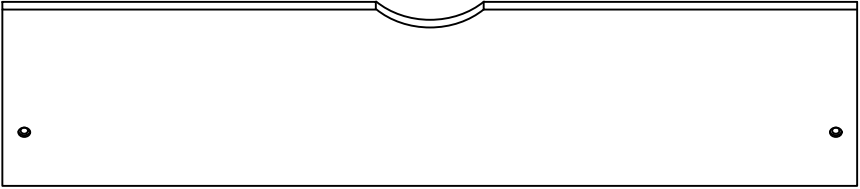
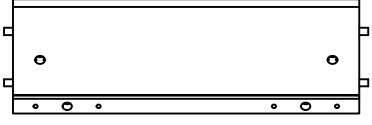







YX7111-2

# Detail View

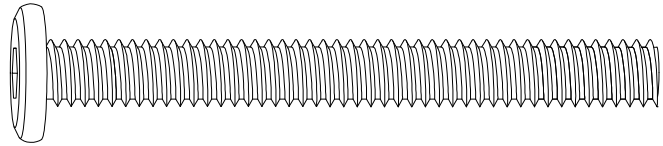
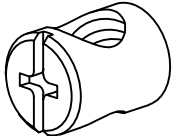
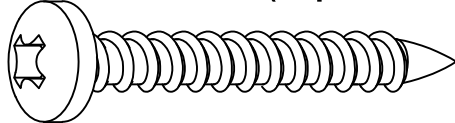

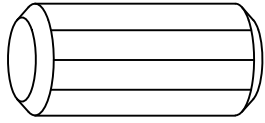
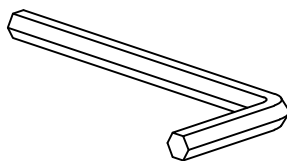


YX7111-2

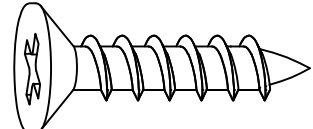
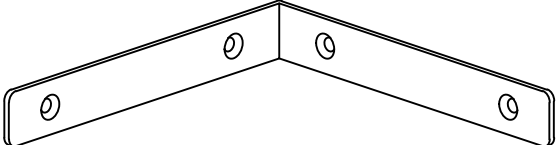
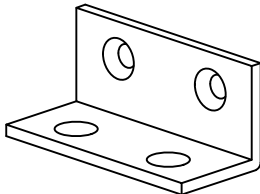
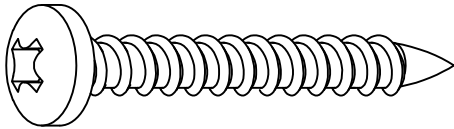
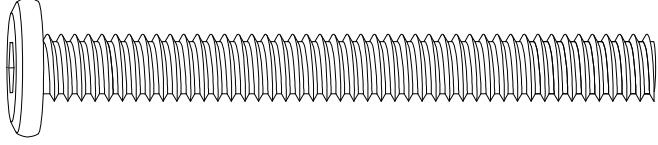

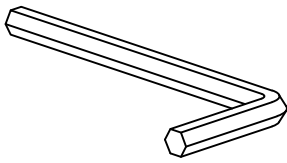
# Part List

|   |   |  |
|---|---|--|
| <div>A</div> <div></div> <div>Front panel of drawer - 2pcs</div> | <div>B</div> <div></div> <div>Side panel of drawer - 4pcs</div> | <div>C</div> <div></div> <div>Back panel of drawer - 2pcs</div> |
| <div>D</div> <div></div> <div>Bottom panel of drawer-2pcs</div>  | <div>E</div> <div></div> <div>Crossprece-2pcs</div>             | <div>F</div> <div></div> <div>Trundle front panel - 1pc</div>   |
| <div>G</div> <div></div> <div>Trundle back Panel -1pc</div>      | <div>H</div> <div></div> <div>Trundle Slat-2pcs</div>           | <div>I</div> <div></div> <div>Trundle Slat-5pcs</div>           |

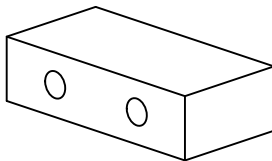
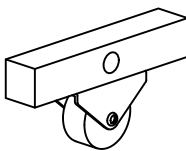
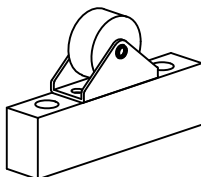
# Hardware List (1/3)

|   |   |   |
|---|---|---|
| <div>1</div> <div><br/>(Spare Hardware-1pc)<br/>(Ø12)1/4"*55mm</div> <div>Hex-Head bolts (12pcs)</div> | <div>2</div> <div><br/>(Spare Hardware-1pc)<br/>1/4"*12mm</div> <div>Horizontal-Hole bolts(9pcs)</div> | <div>3</div> <div><br/>(Spare Hardware-2pcs)<br/>Ø4*25mm</div> <div>Wood screws (18 pcs)</div> |
| <div>4</div> <div><br/>Ø8*25mm</div> <div>Wood dowel (3pcs)</div>                                      | <div>5</div> <div><br/>(Spare Hardware-1pc)<br/>Ø10*20mm</div> <div>Wood dowel (9pcs)</div>             | <div>6</div> <div><br/>(1/4")4*60mm</div> <div>Allen key (1pc)</div>                           |

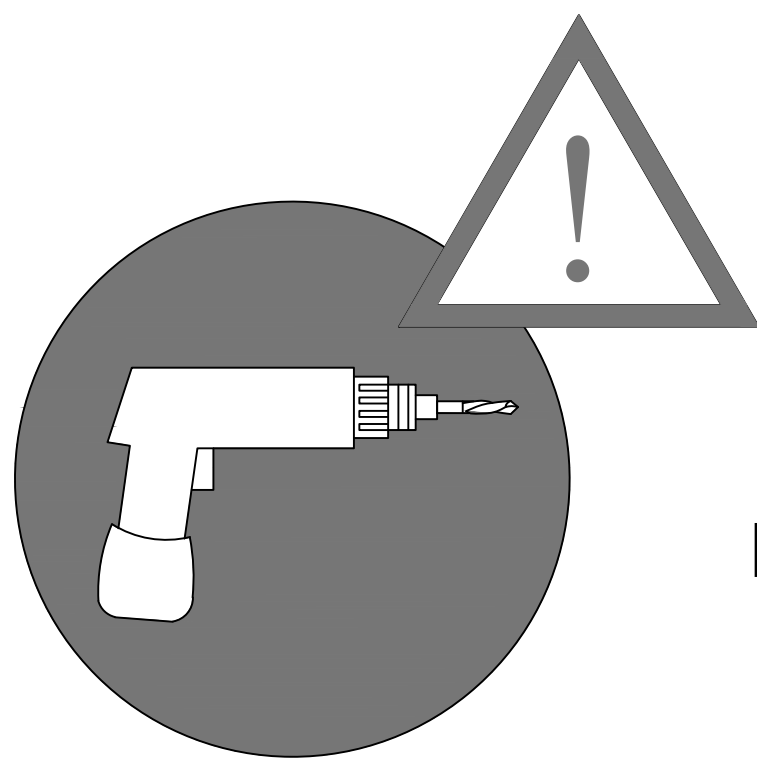
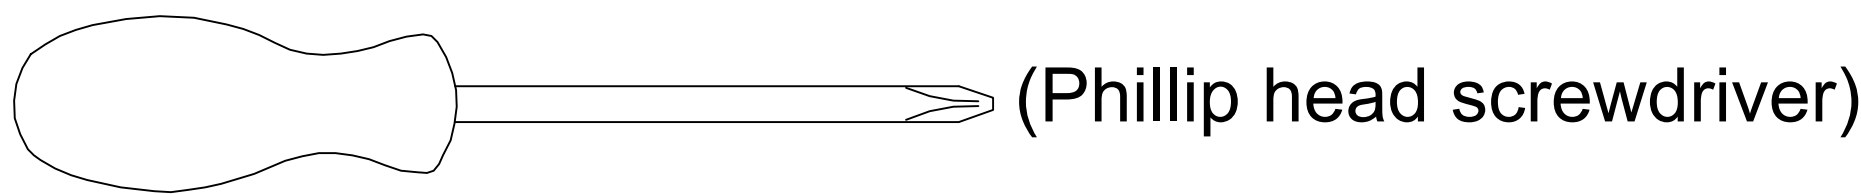
# Hardware List (2/3)

|  |   |  |
|--|---|--|
| <div>7</div> <div><br/>(Spare Hardware-2pcs)<br/>Ø4*12mm</div> <div>Wood screws (18 pcs)</div>    | <div>8</div> <div><br/>120*120*18*2mm</div> <div>Metal bracket (2pcs)</div>     | <div>9</div> <div><br/>35*18*18*2mm</div> <div>Metal bracket (2pcs)</div> |
| <div>10</div> <div><br/>(Spare Hardware-2pcs)<br/>Ø4*25mm</div> <div>Wood screws (24 pcs)</div> | <div>11</div> <div><br/>(Ø12)1/4"*55mm</div> <div>Hex-Head bolts (2pcs)</div> | <div>12</div> <div><br/>Ø8*25mm</div> <div>Wood dowel (2pcs)</div>      |
| <div>13</div> <div><br/>(1/4")4*60mm</div> <div>Allen key (1pc)</div>                           |   |  |

# Hardware List (3/3)

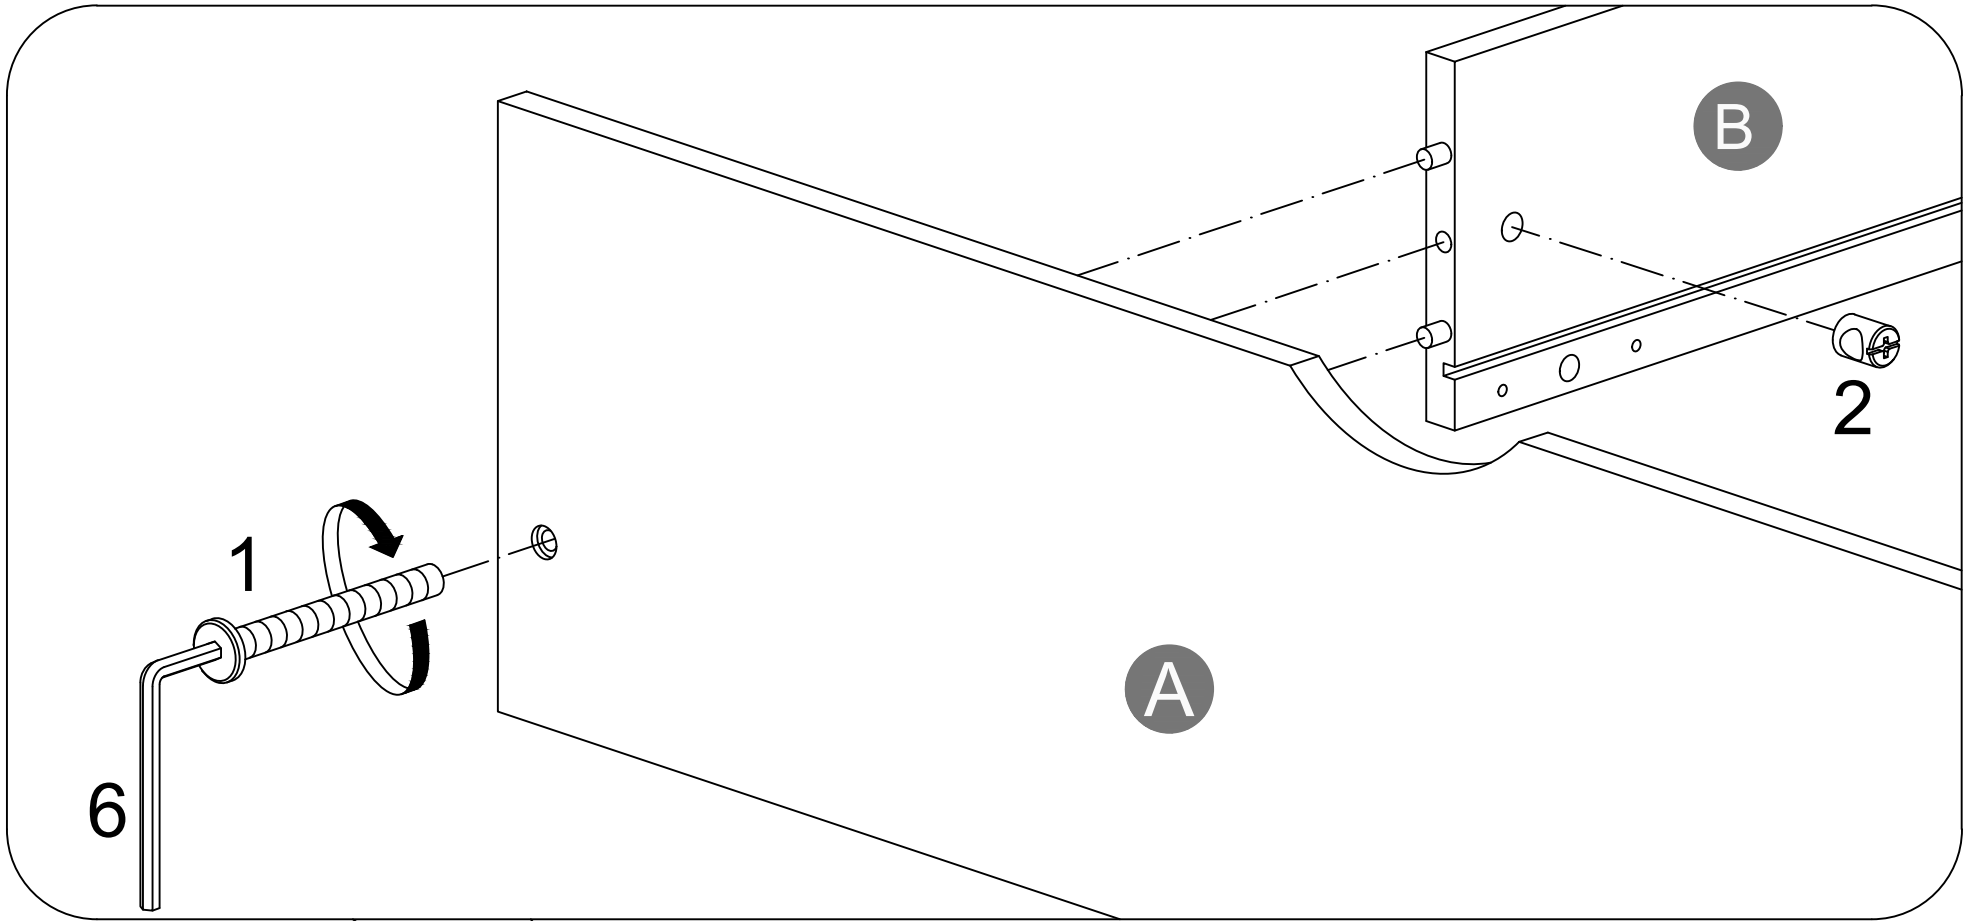
|   |  |   |
|---|--|---|
| <div>14</div> <div><br/>70*38*19mm</div> <div>Stopper (5pcs)</div> | <div>15</div> <div><br/>100*53*19mm</div> <div>Wheels (8pcs)</div> | <div>16</div> <div><br/>100*62*19mm</div> <div>Wheels (4pcs)</div> |
|---|--|---|

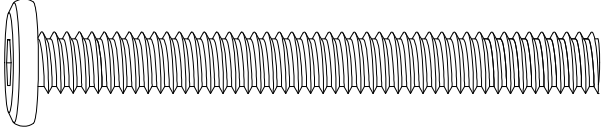

## ASSEMBLY TOOLS REQUIRED ( NOT INCLUDED )

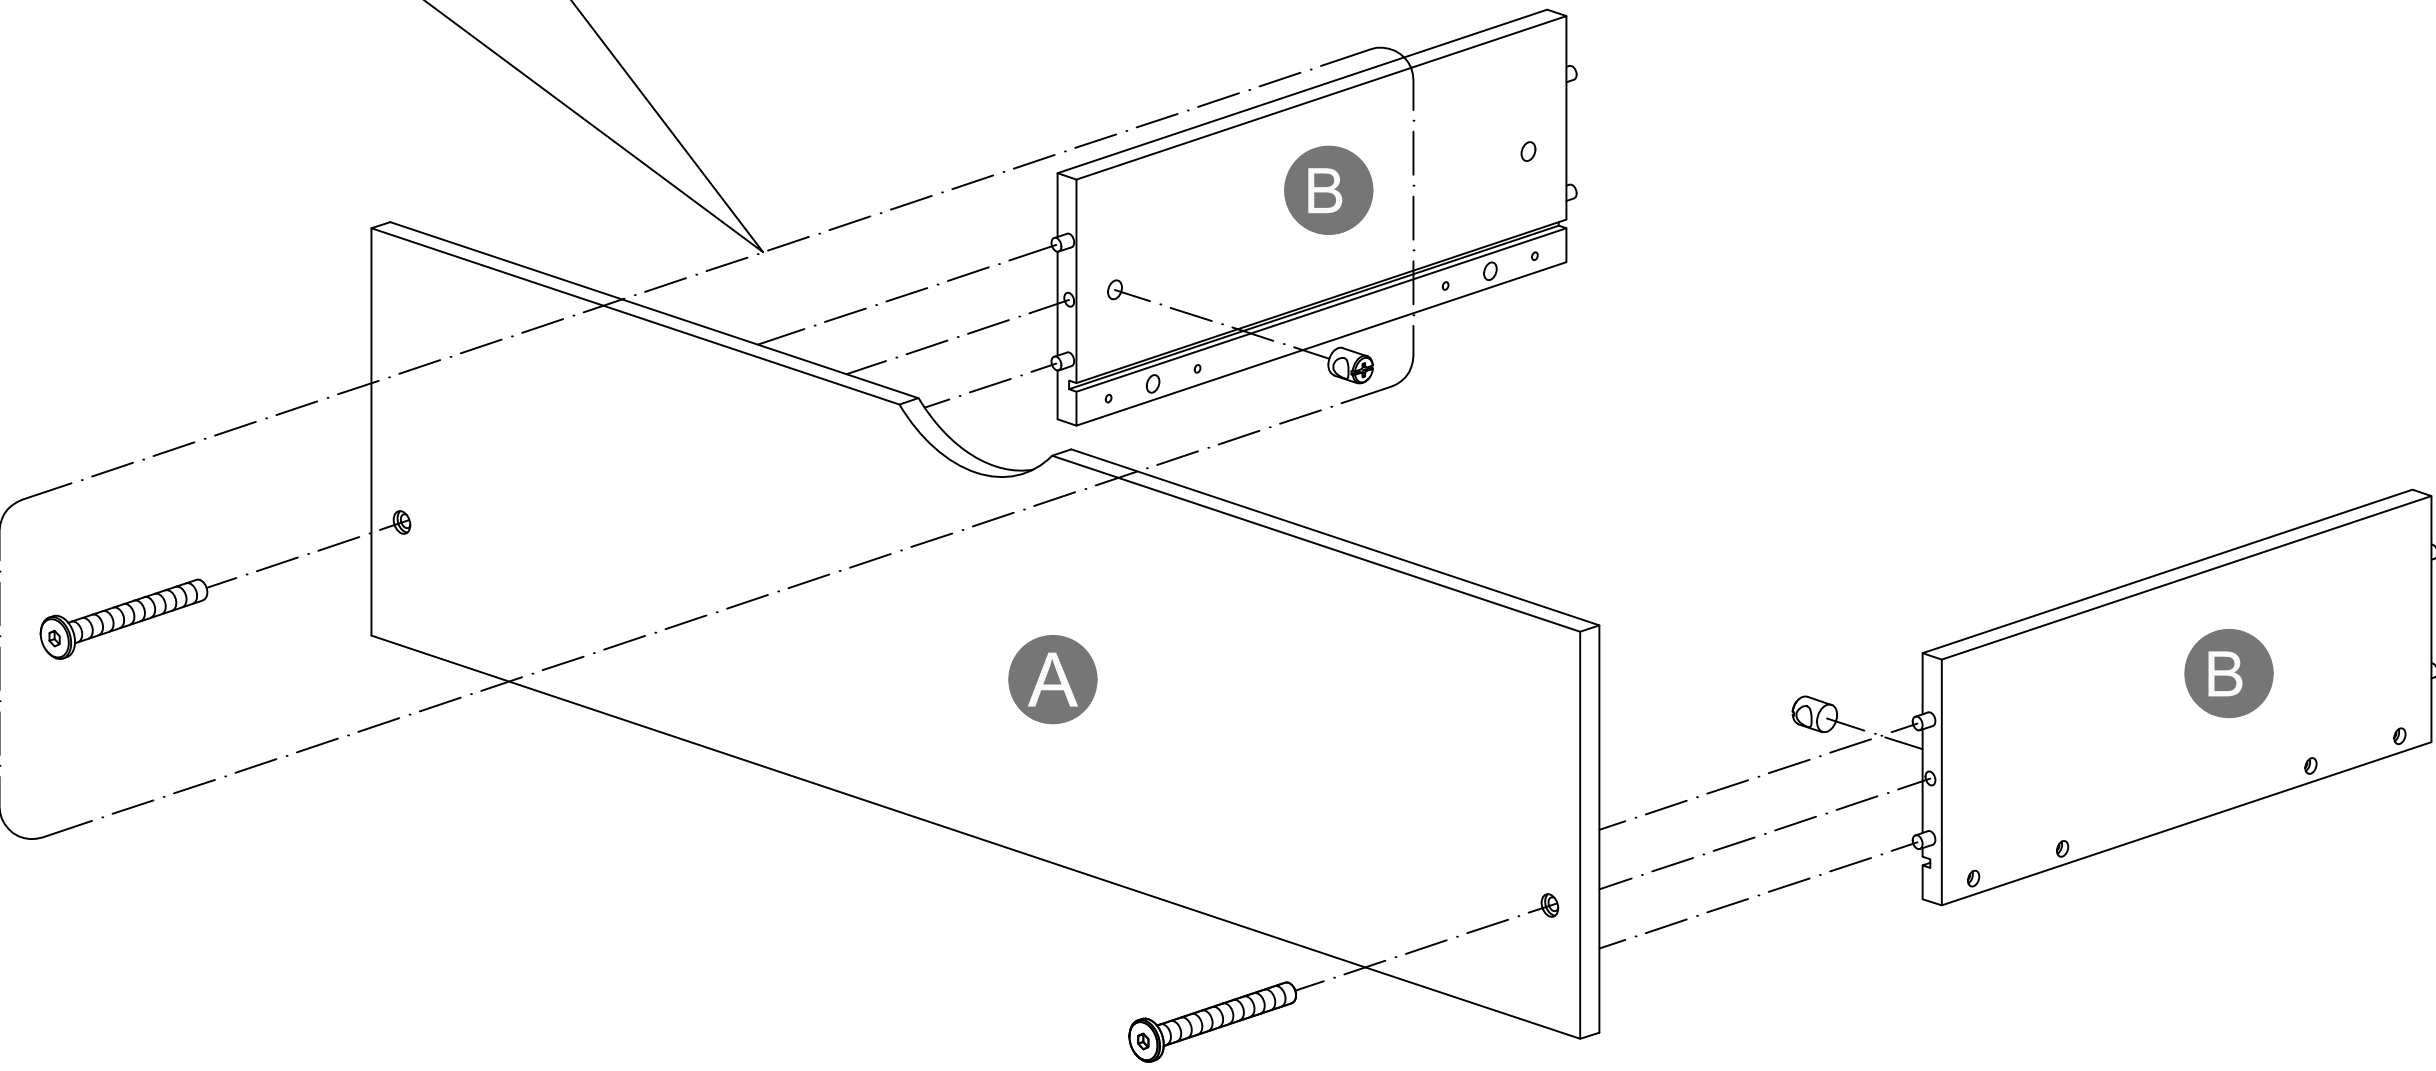


DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT !

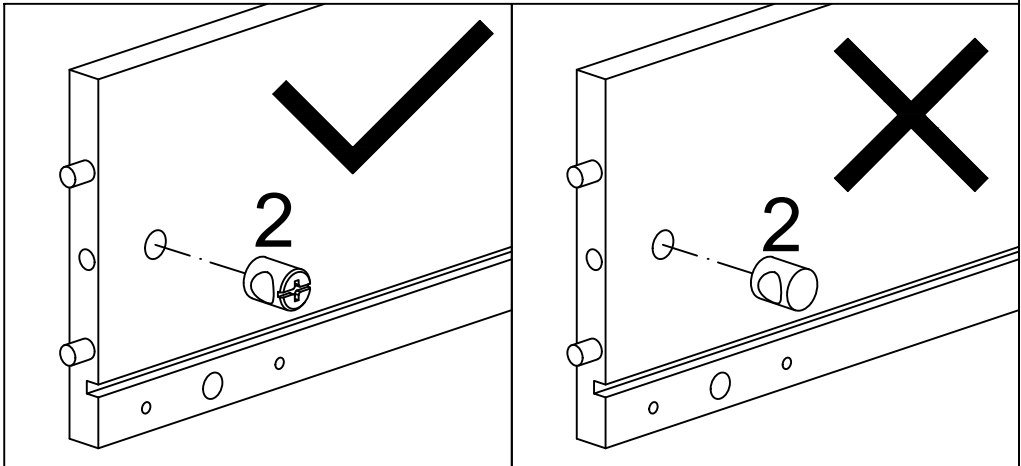
**STEP 1:**



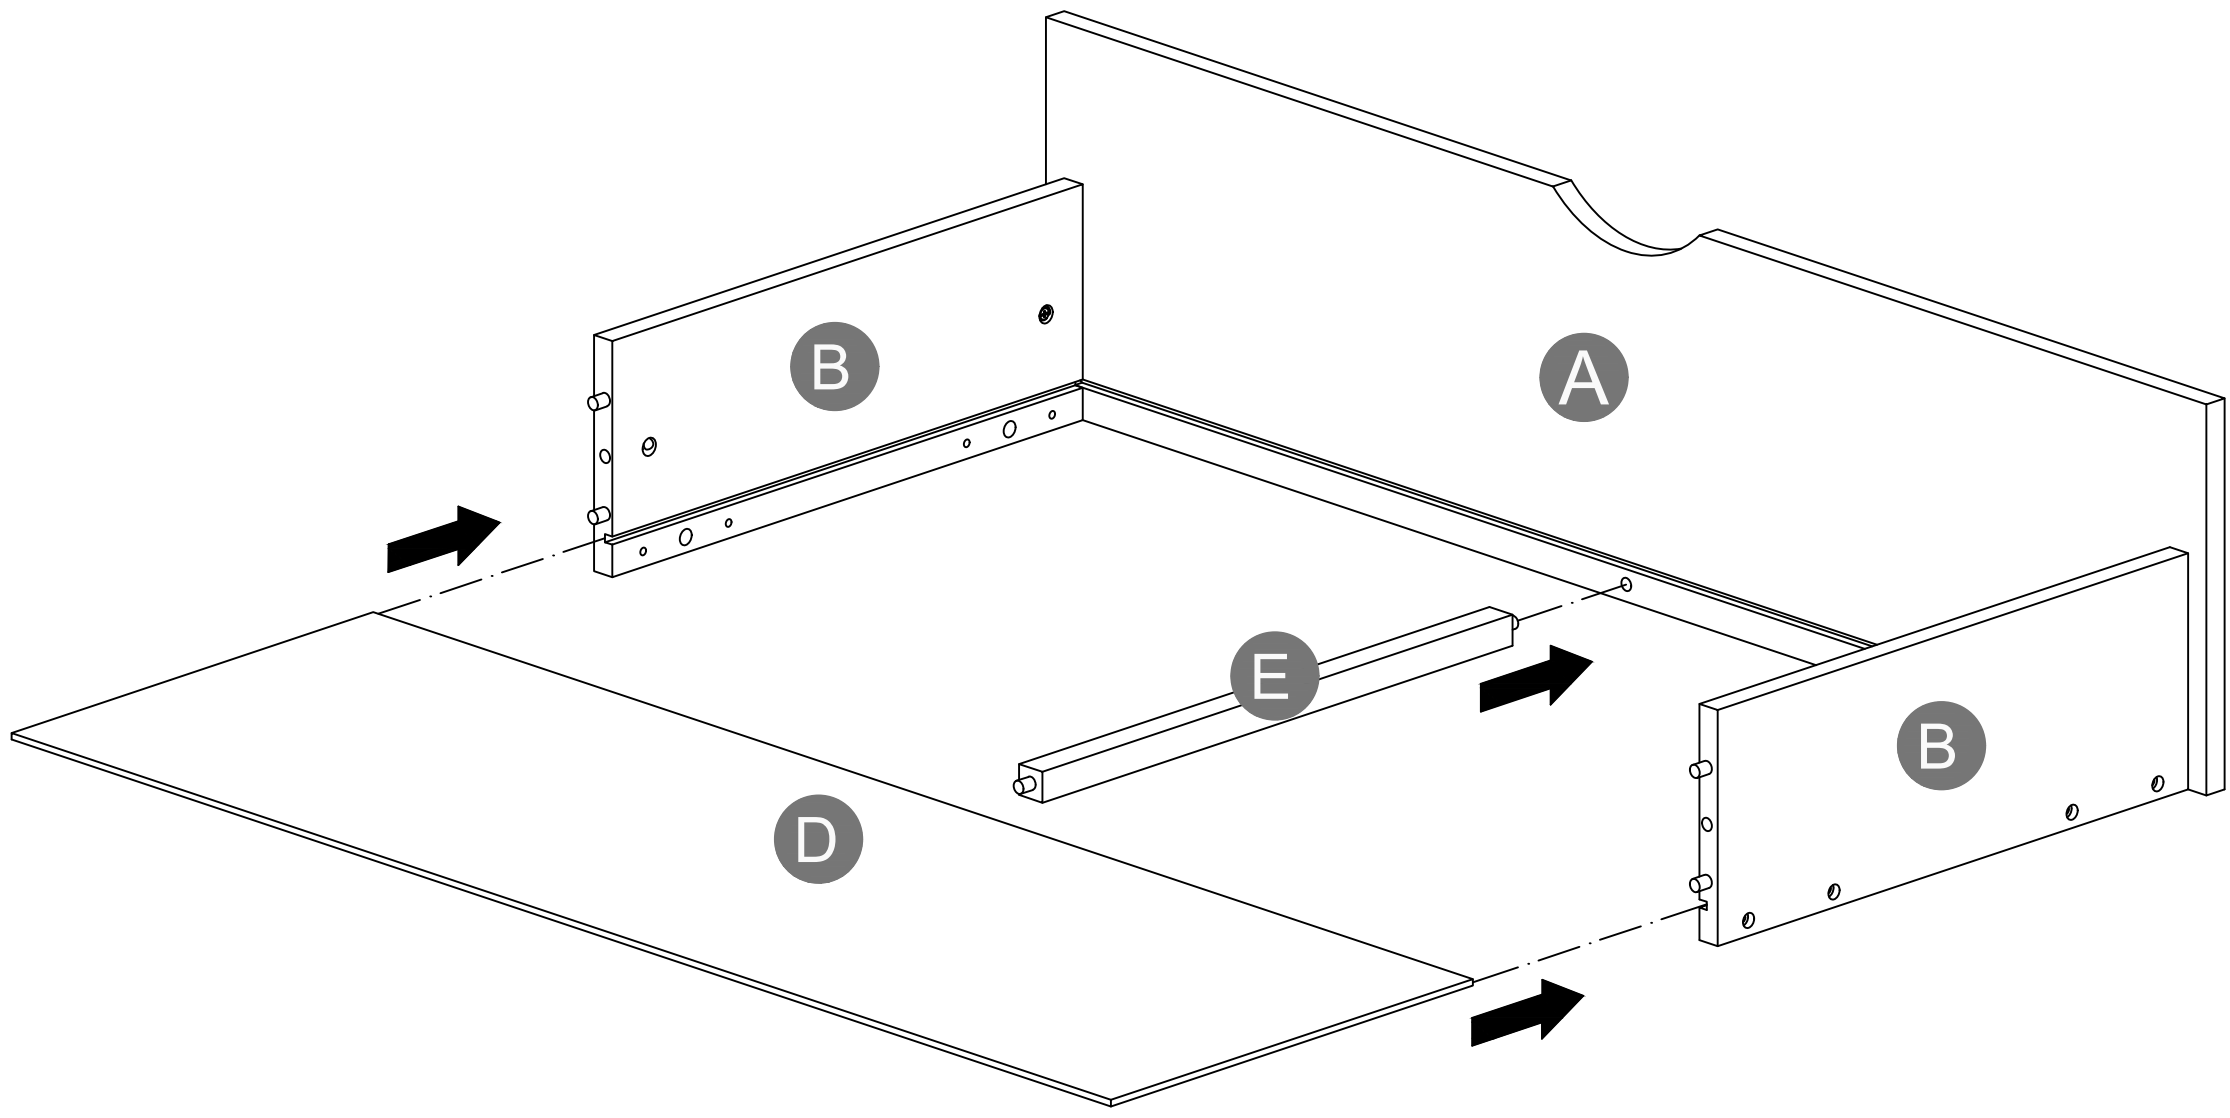
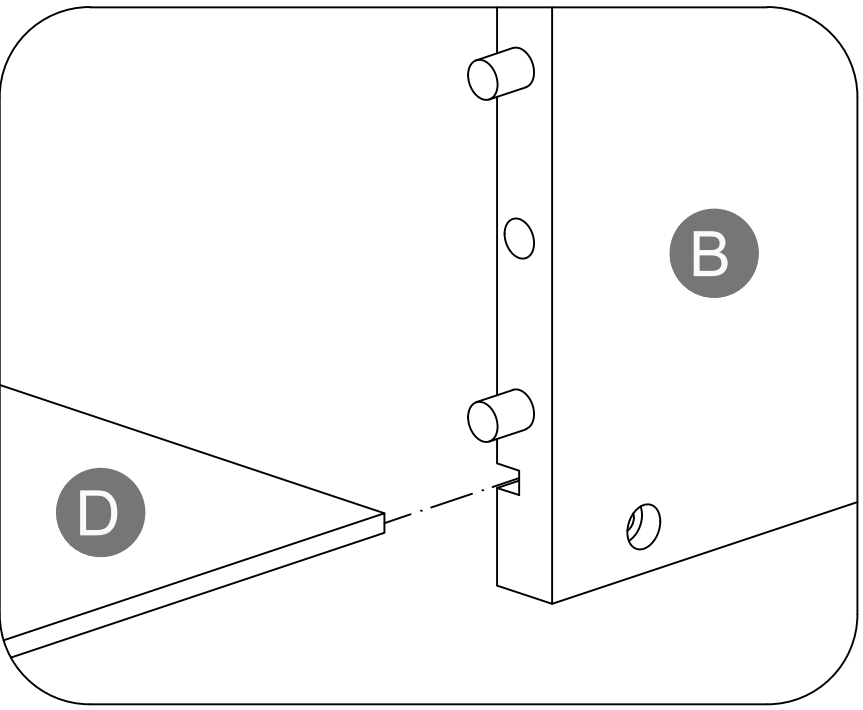
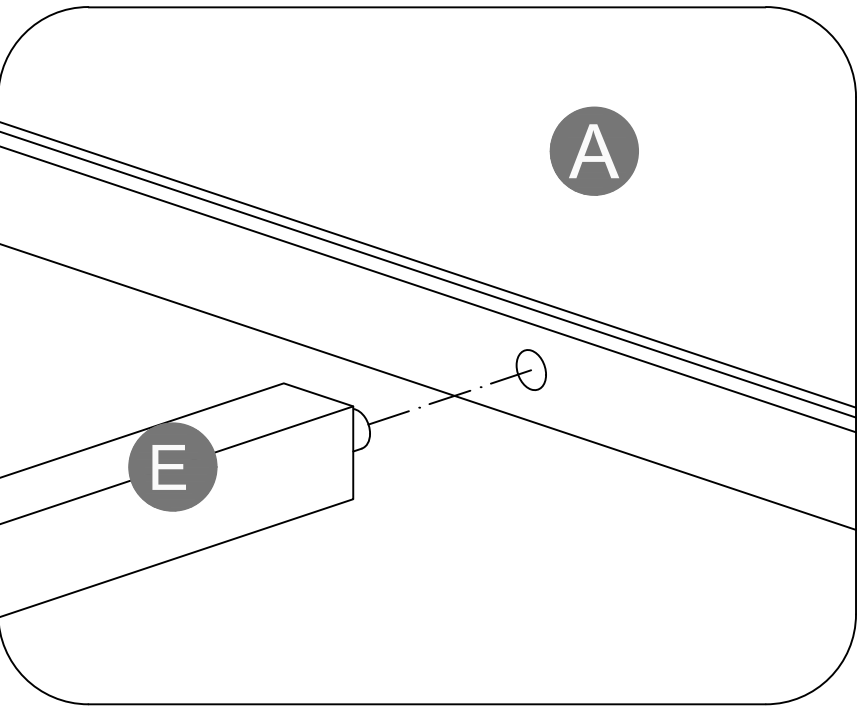
|          |   |          |   |
|----------|---|----------|---|
| <b>1</b> |  | <b>2</b> |  |
| 4pcs     |   | 4pcs     |   |



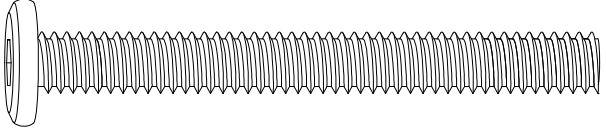
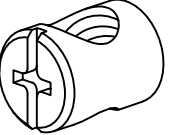
Note:Part 2 will face up with the "x" mark on it, otherwise it cannot be tightened

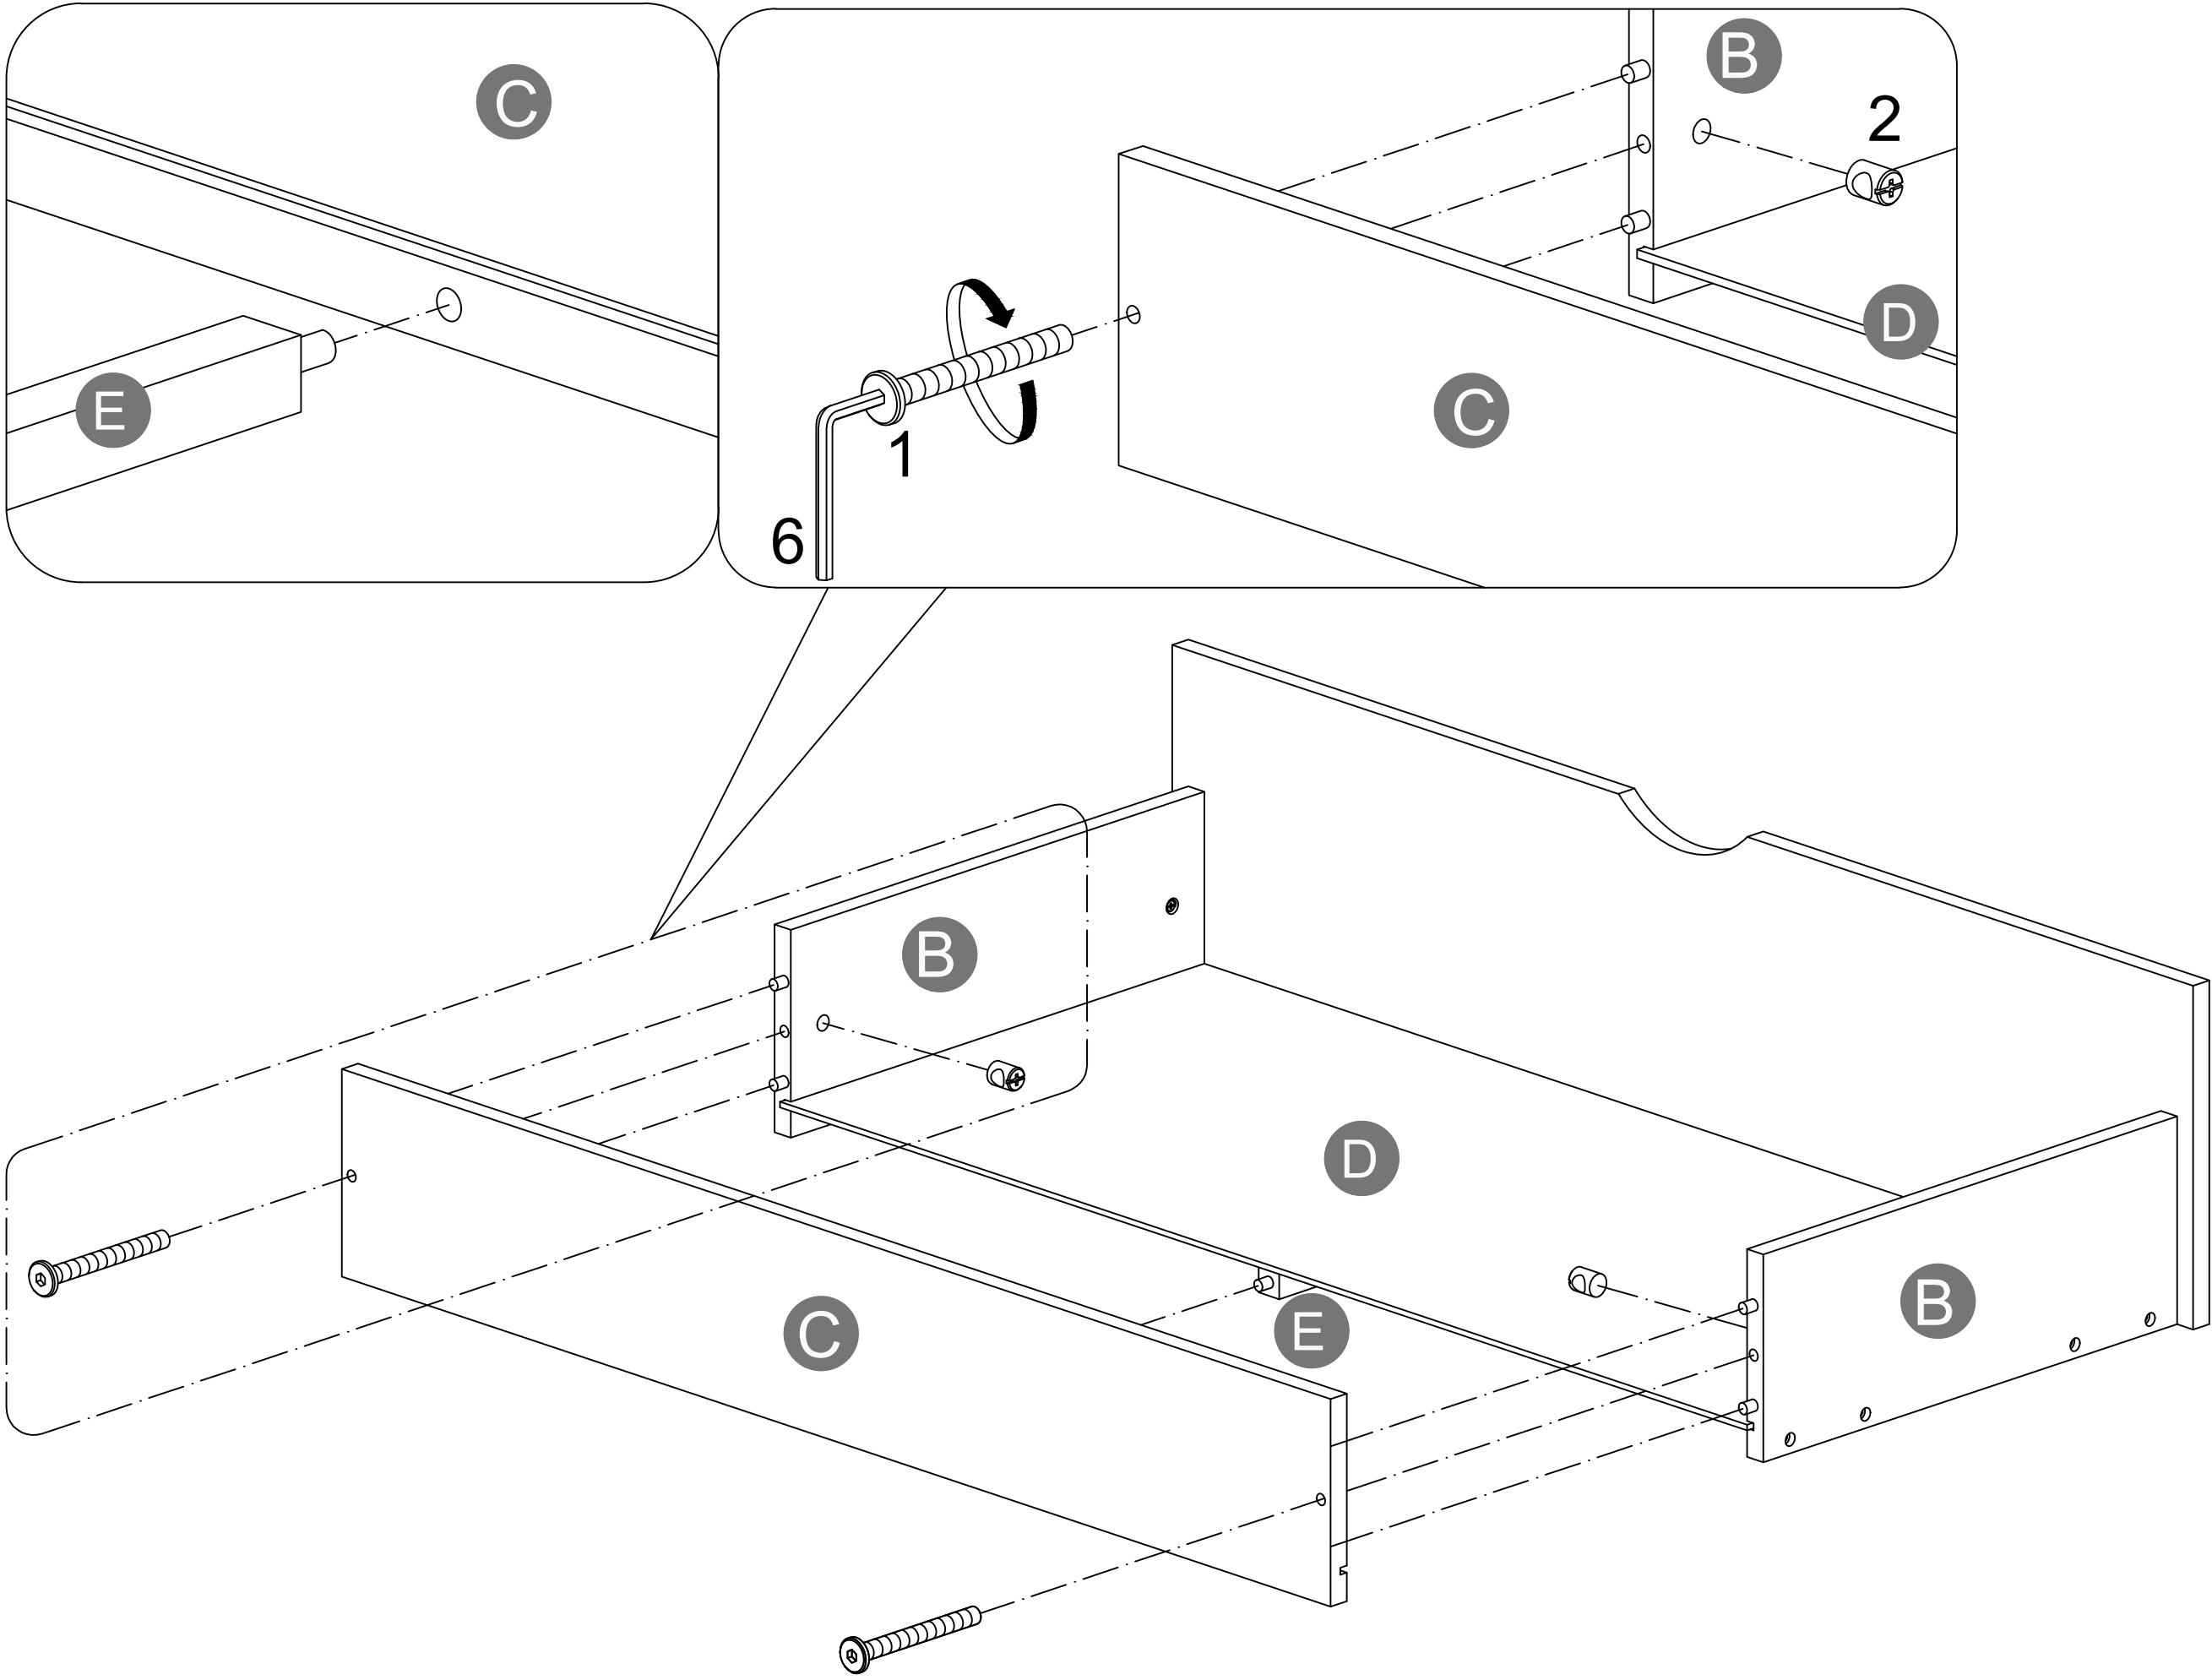


**STEP 2:**





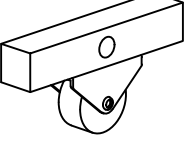
**STEP 3:**

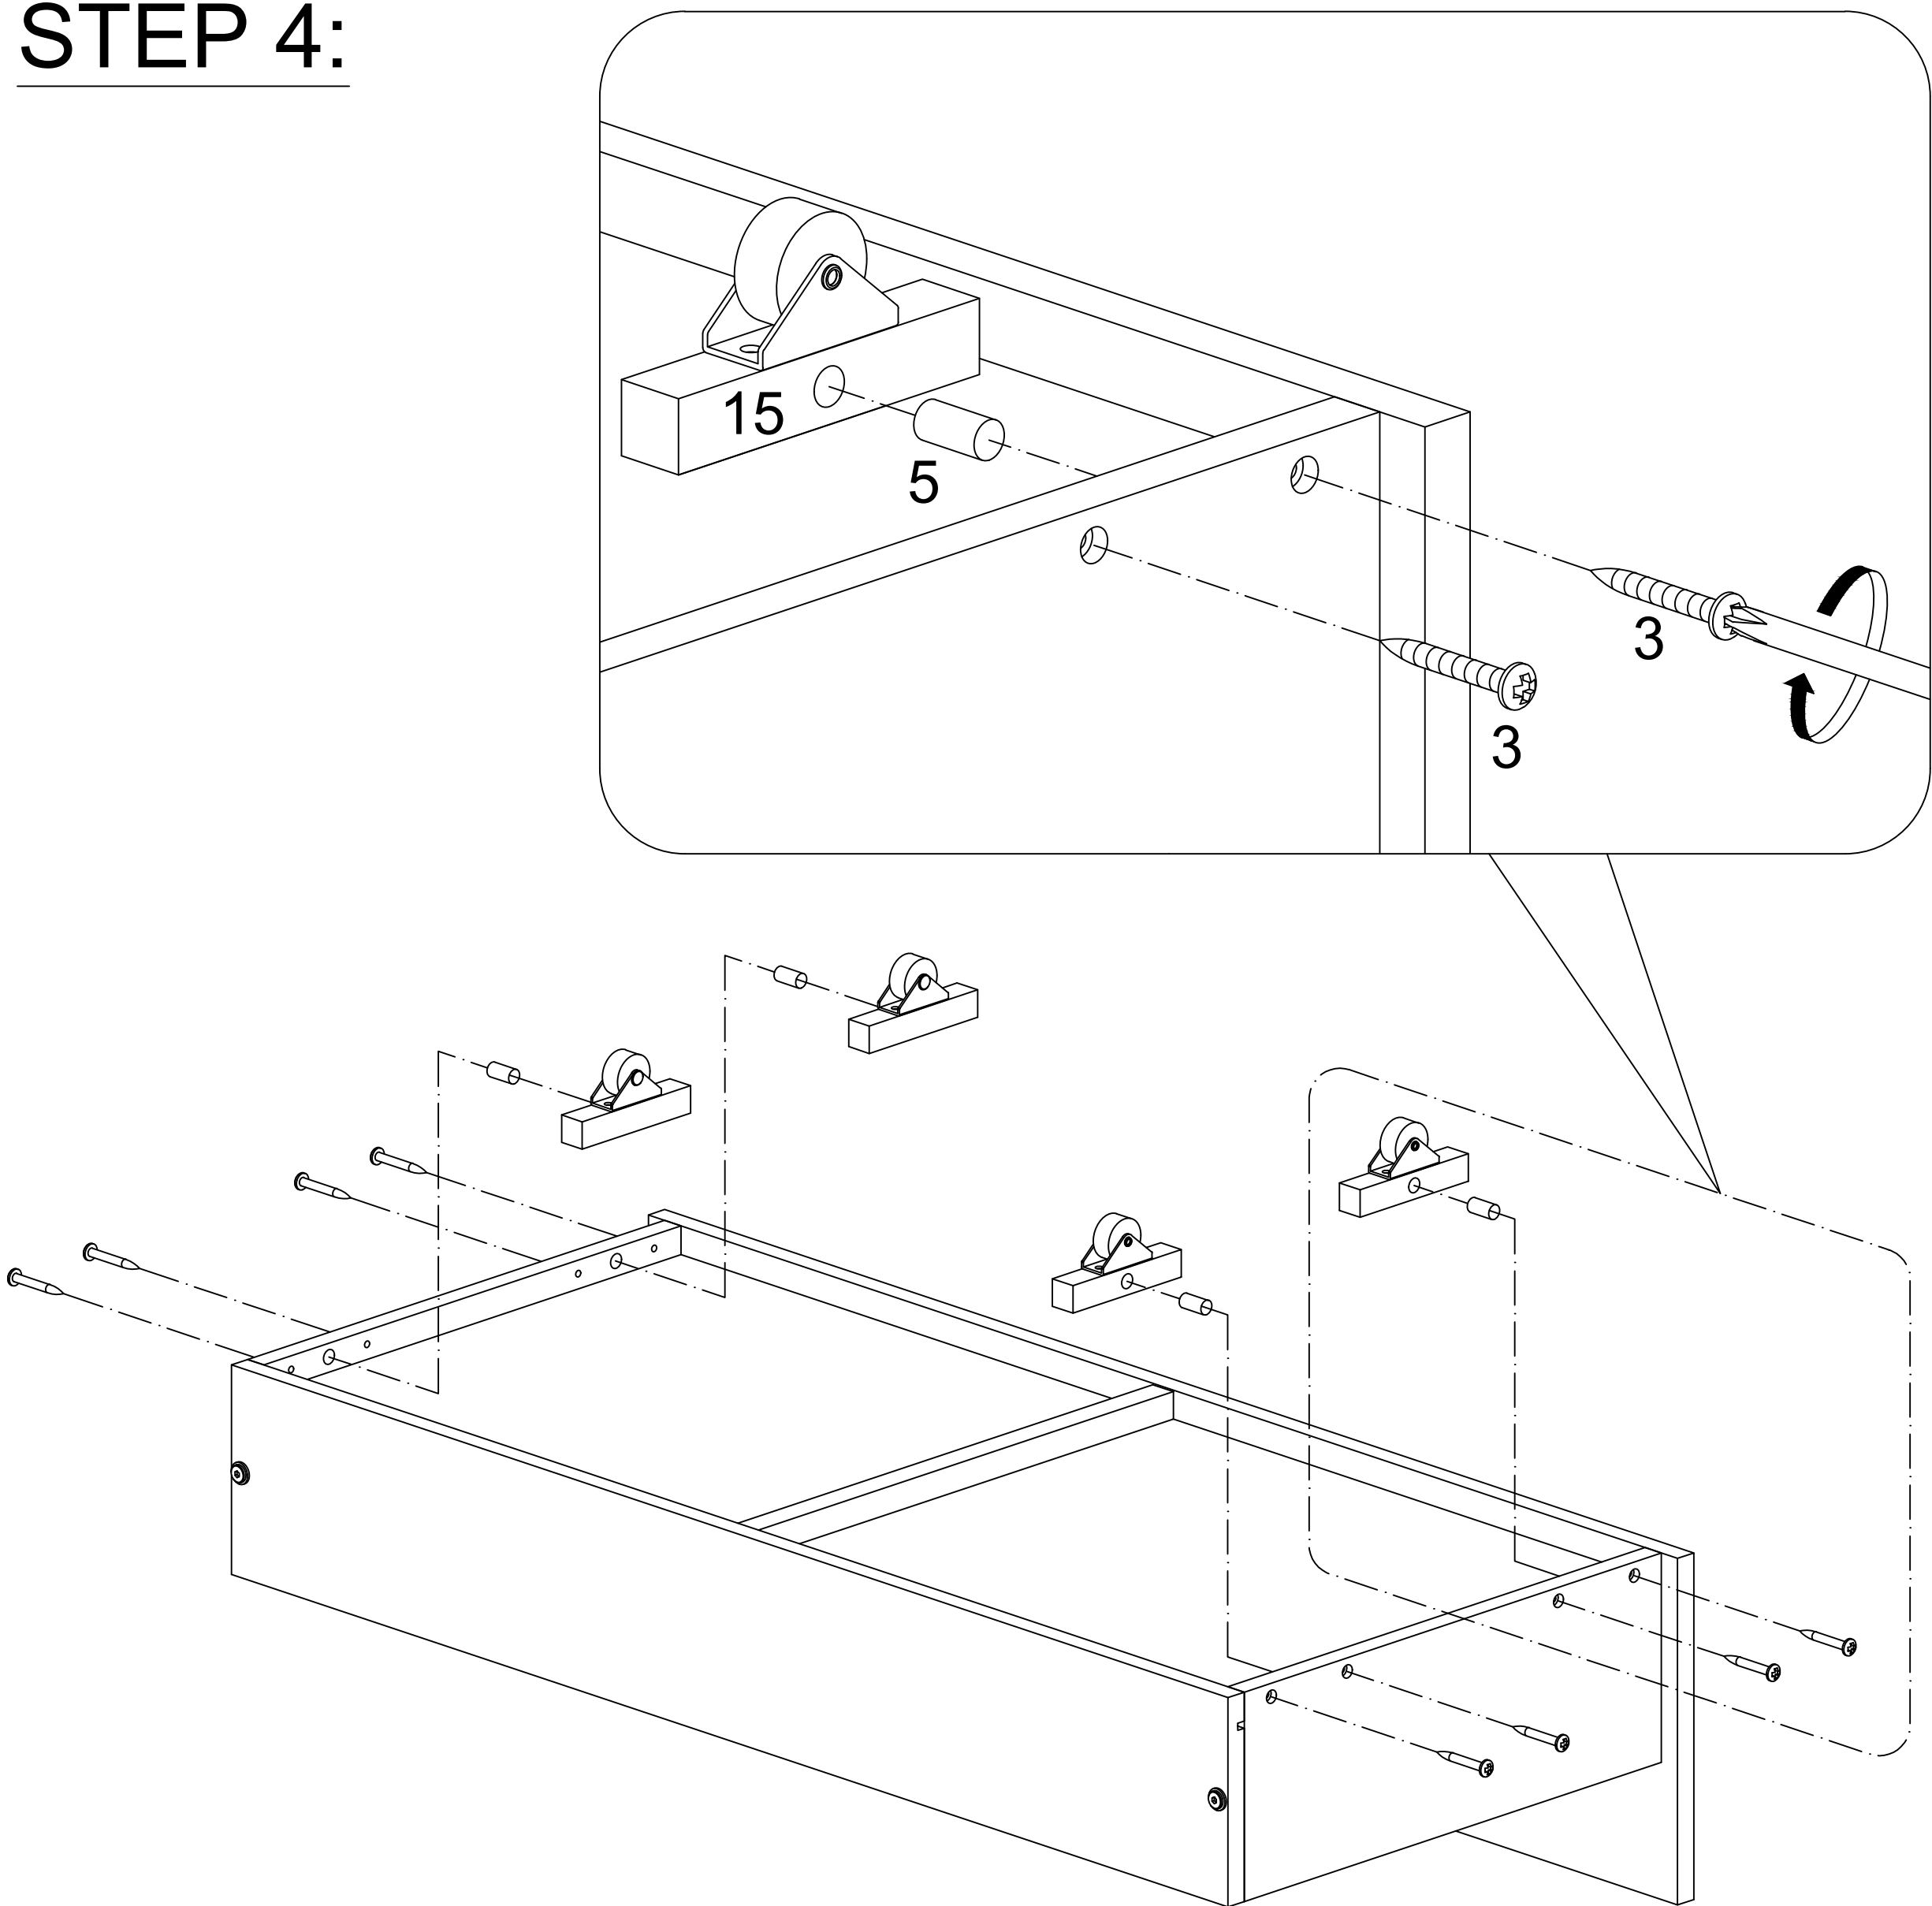
|          |   |          |   |
|----------|---|----------|---|
| <b>1</b> |  | <b>2</b> |  |
| 4pcs     |   | 4pcs     |   |



Note:Part 2 will face up with the "x" mark on it, otherwise it cannot be tightened

**STEP 4:**

|           |   |
|-----------|---|
| <b>3</b>  |  |
| 16 pcs    |   |
| <b>5</b>  |  |
| 8pcs      |   |
| <b>15</b> |  |
| 8pcs      |   |



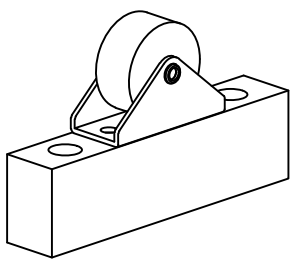
# STEP 5:

10

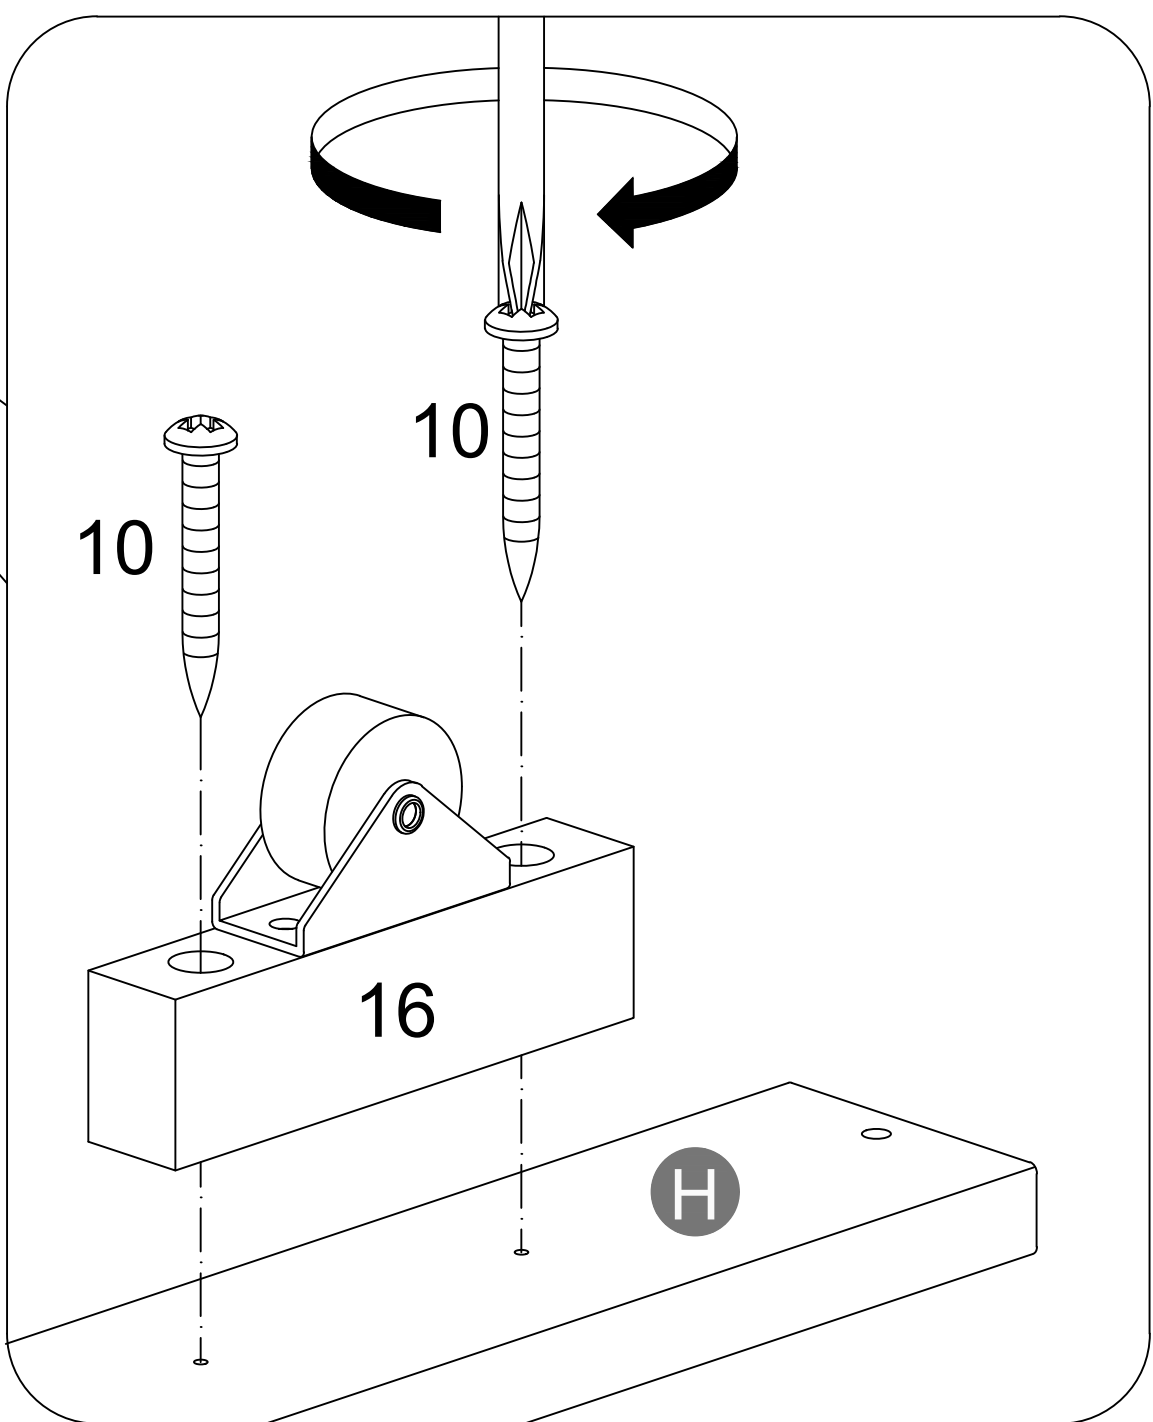
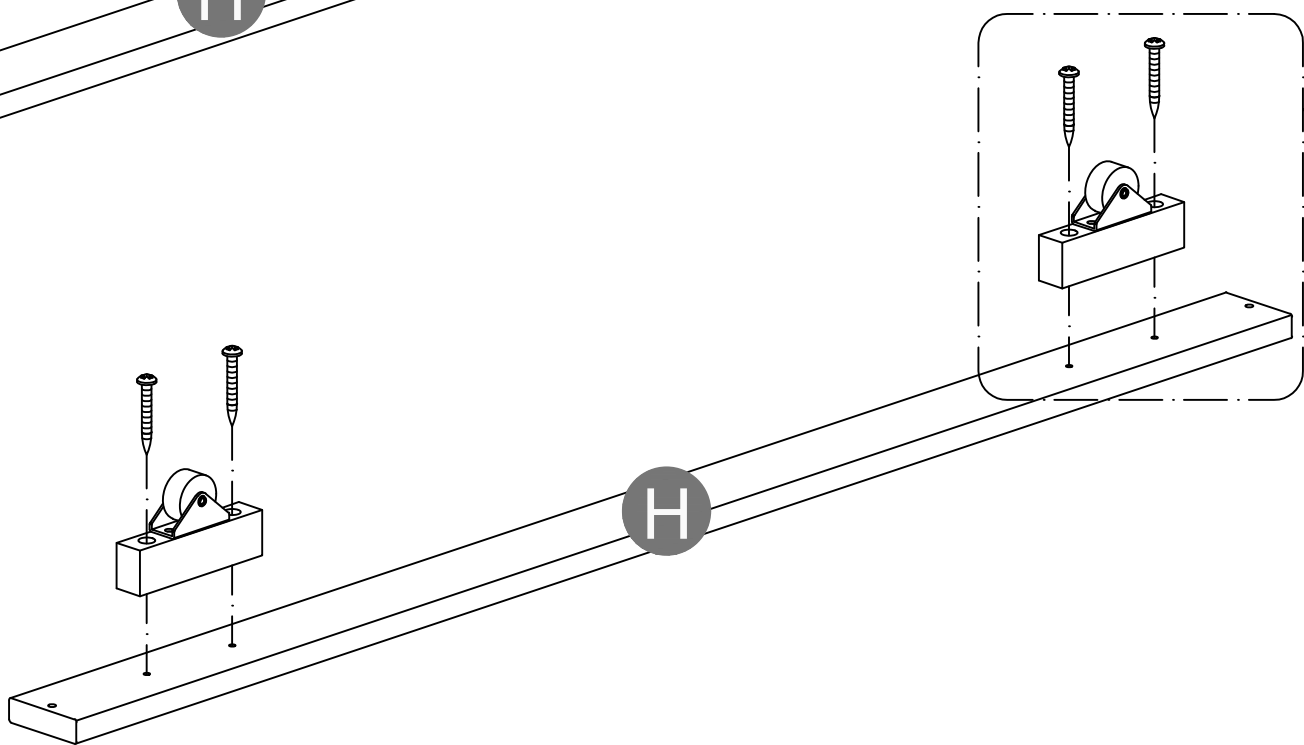
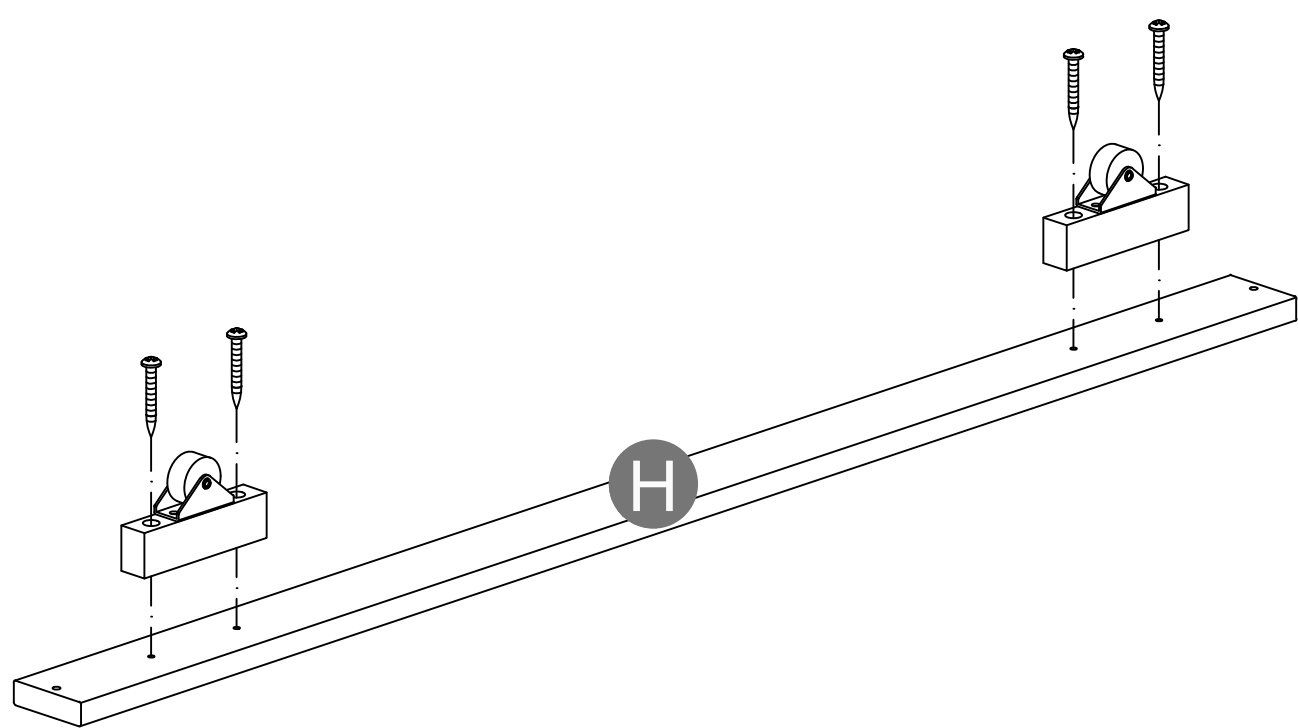


8 pcs

16




4pcs

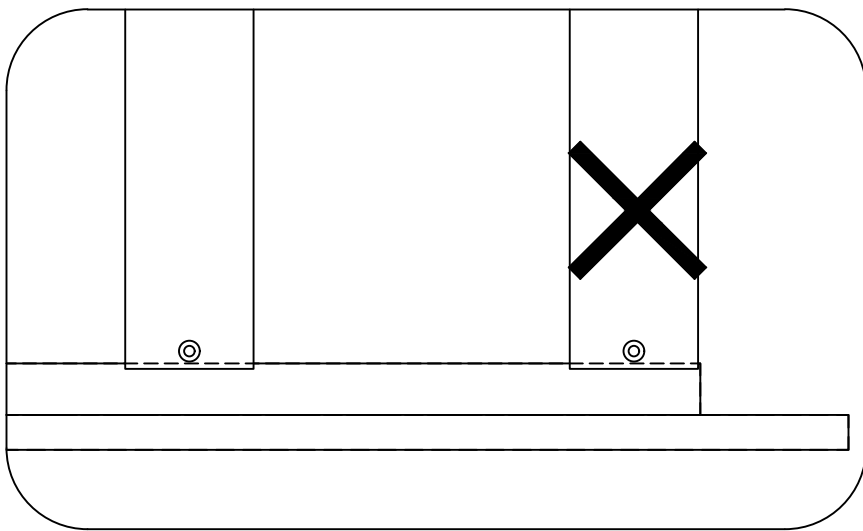
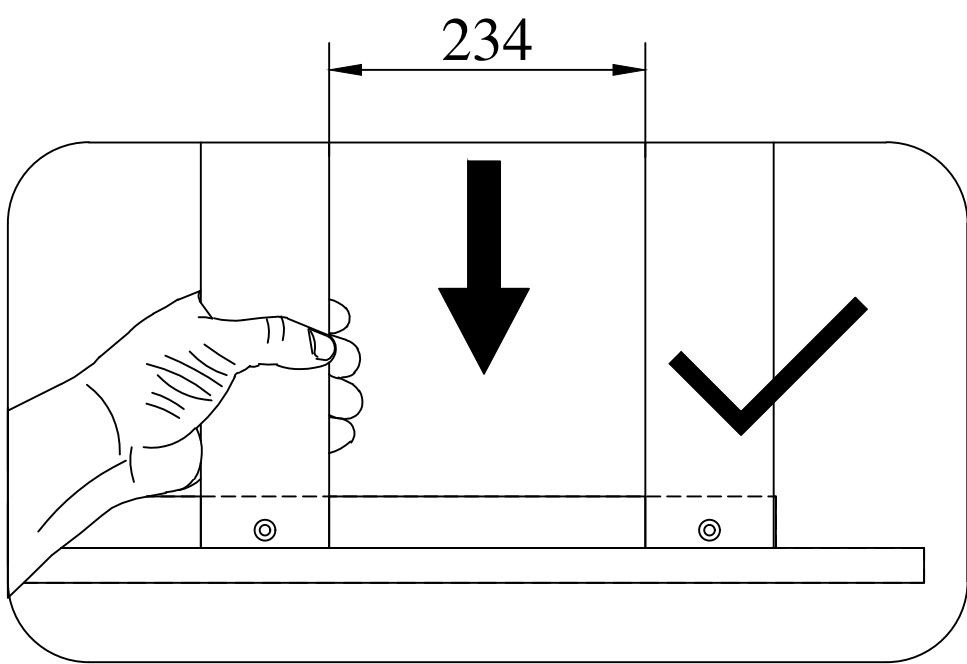
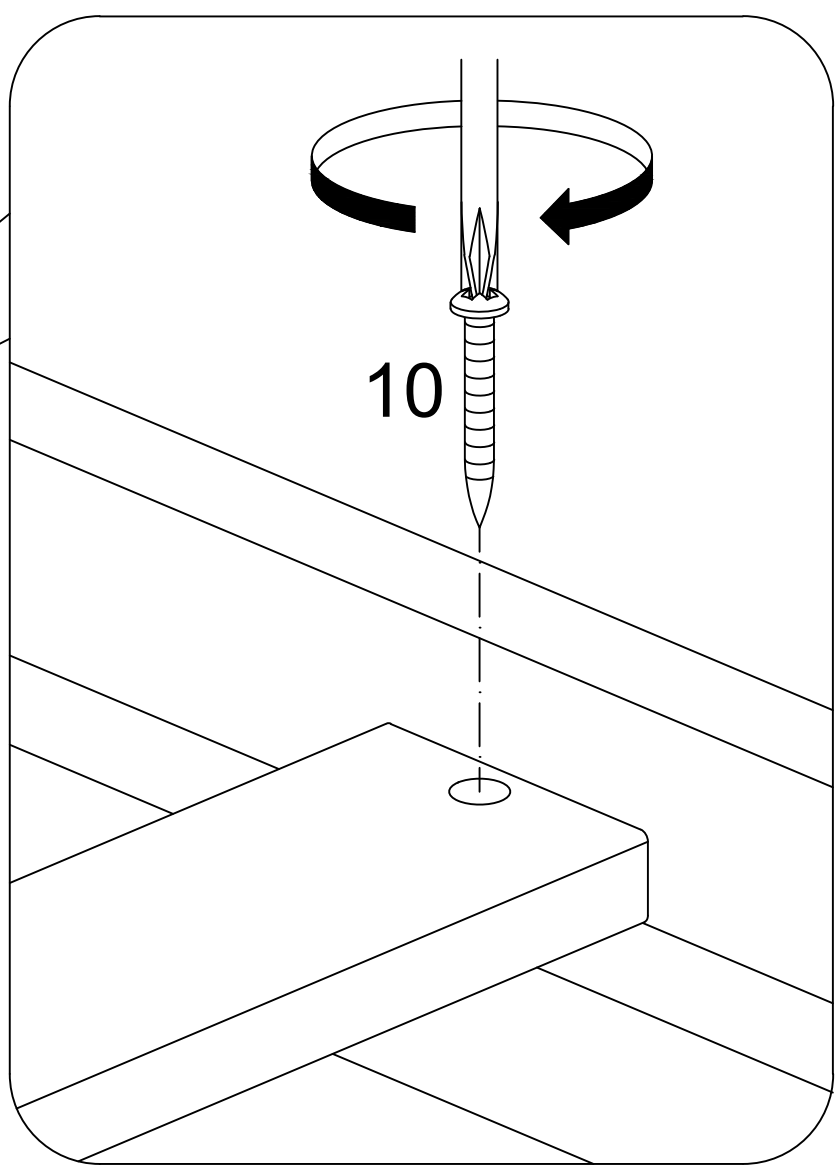
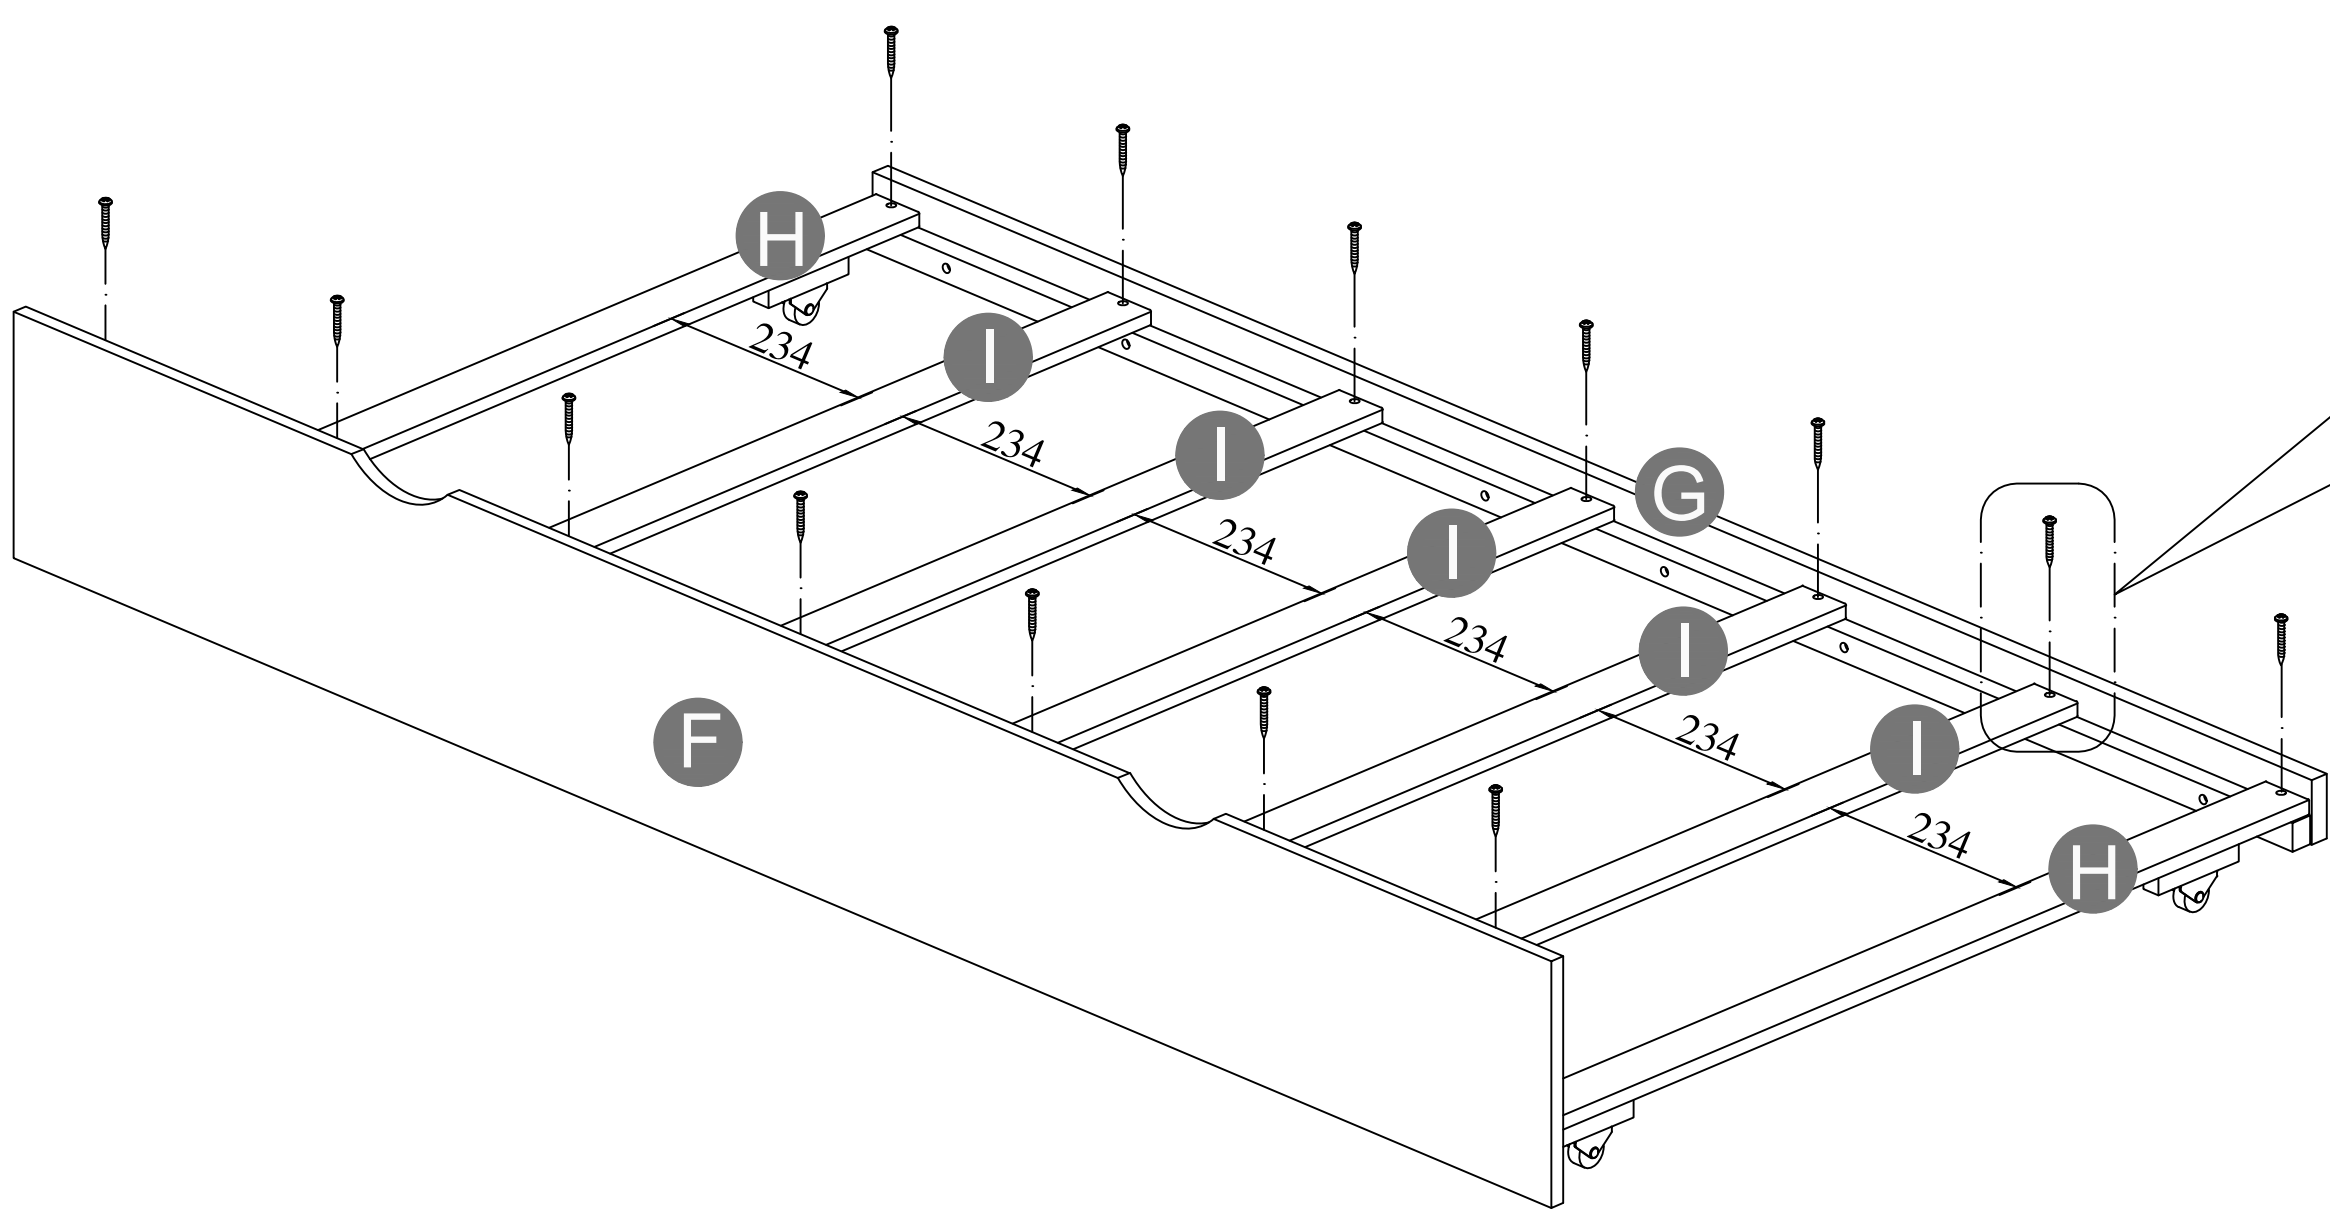


# STEP 6:

10

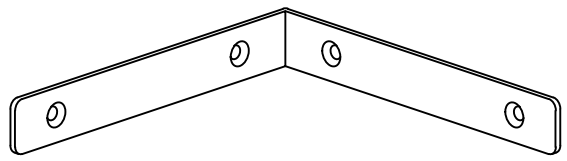
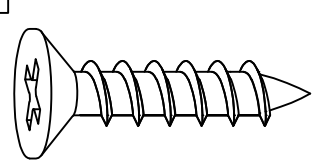


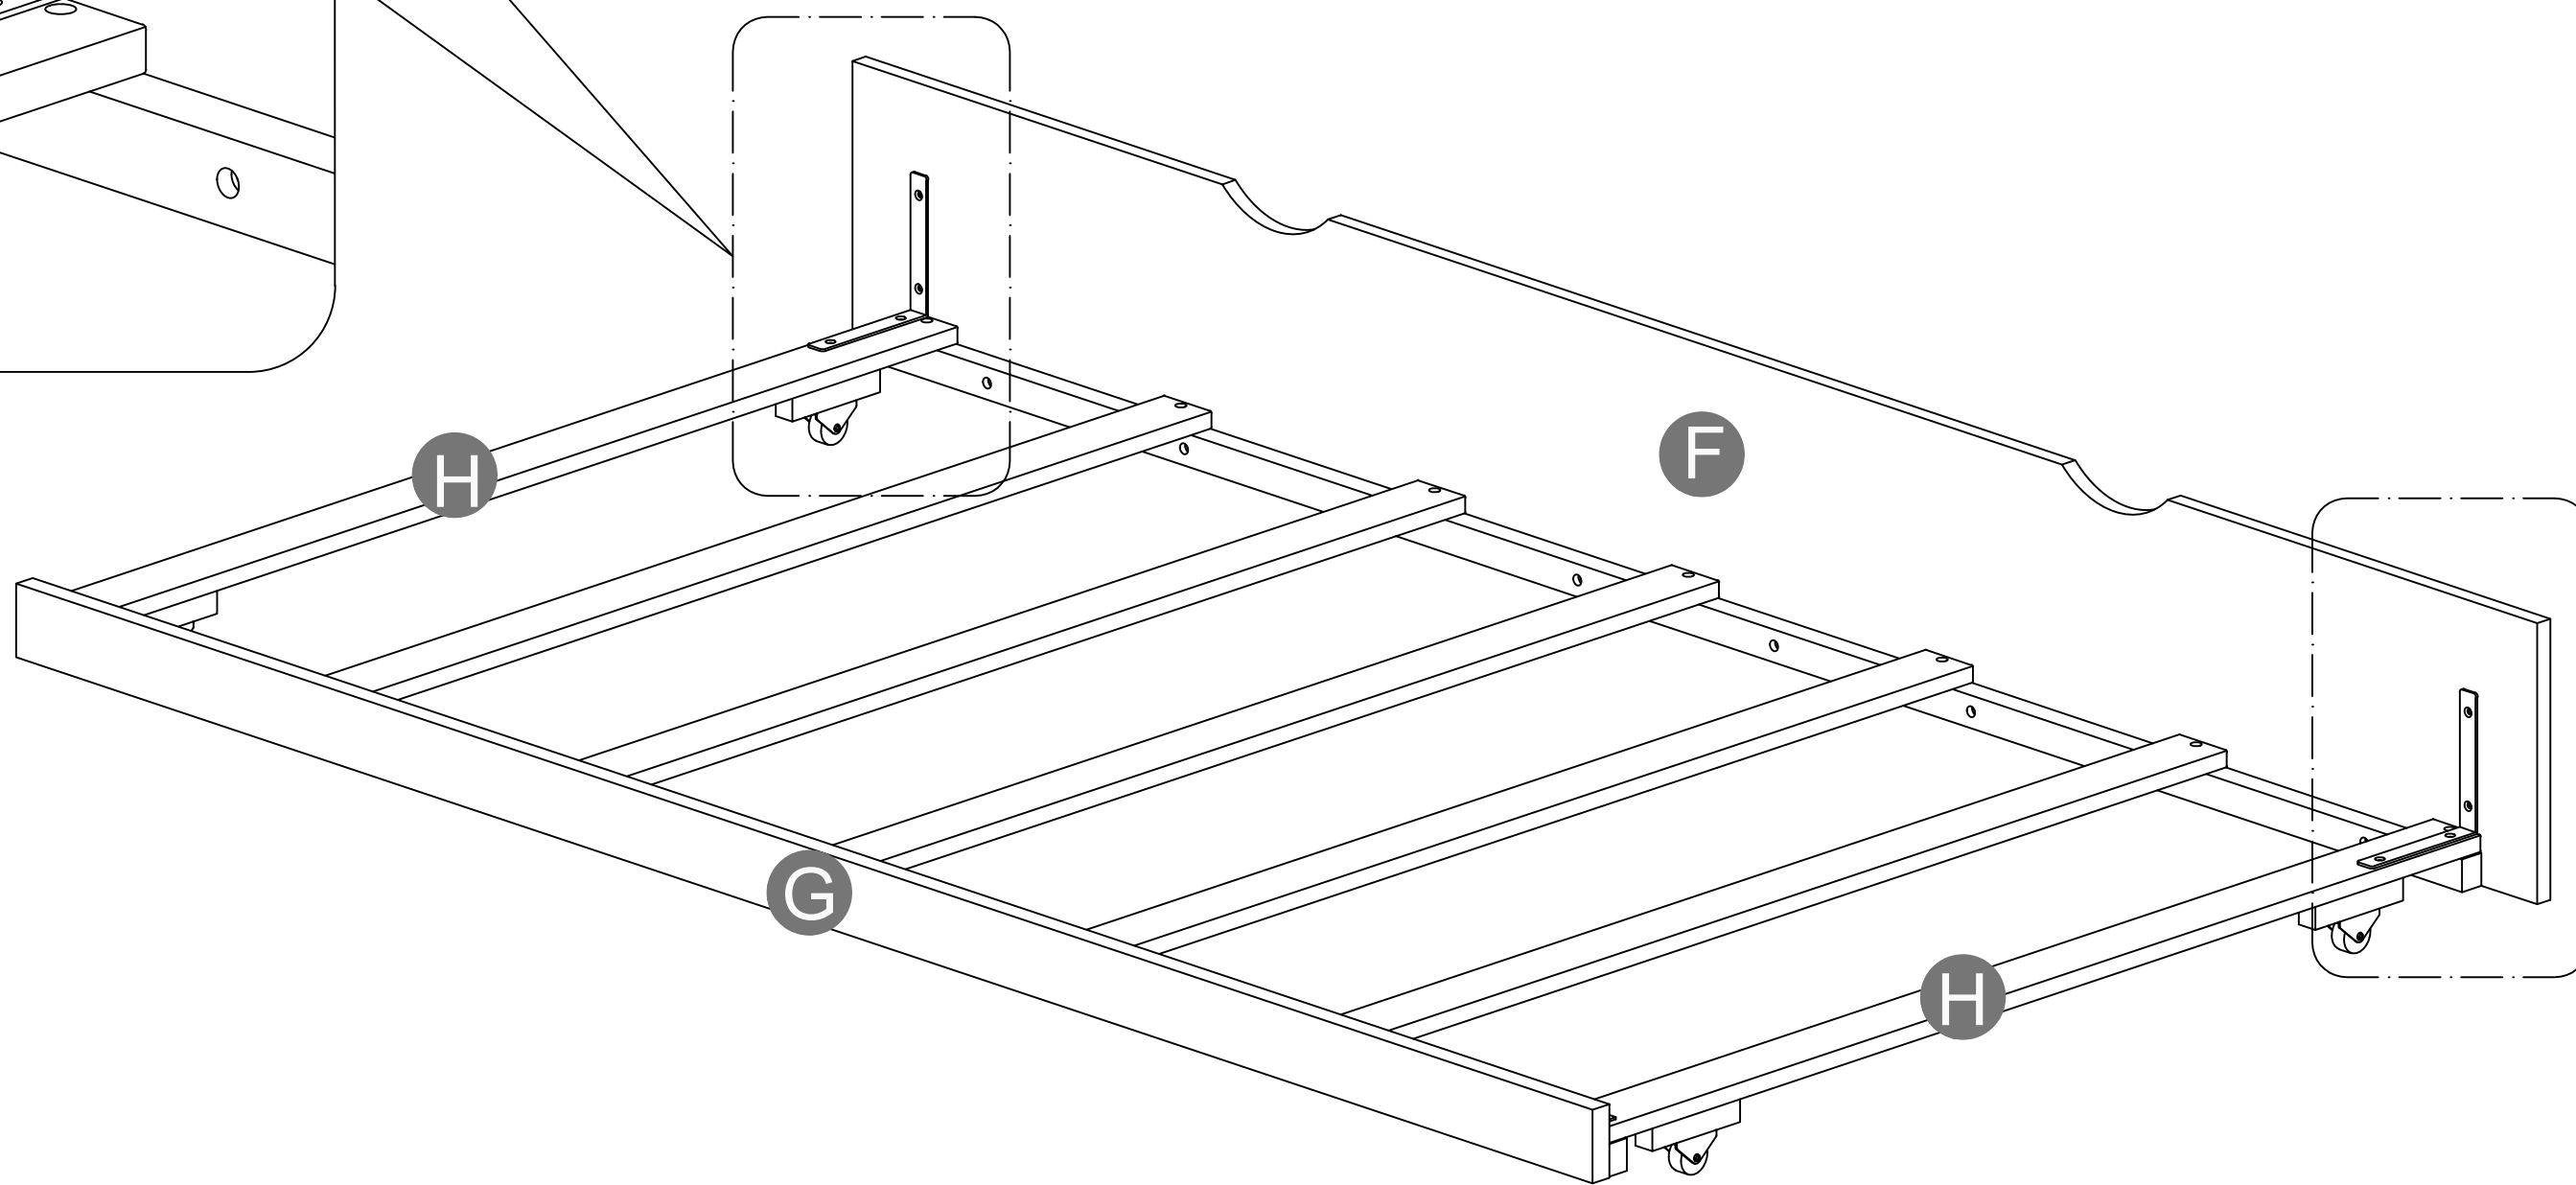
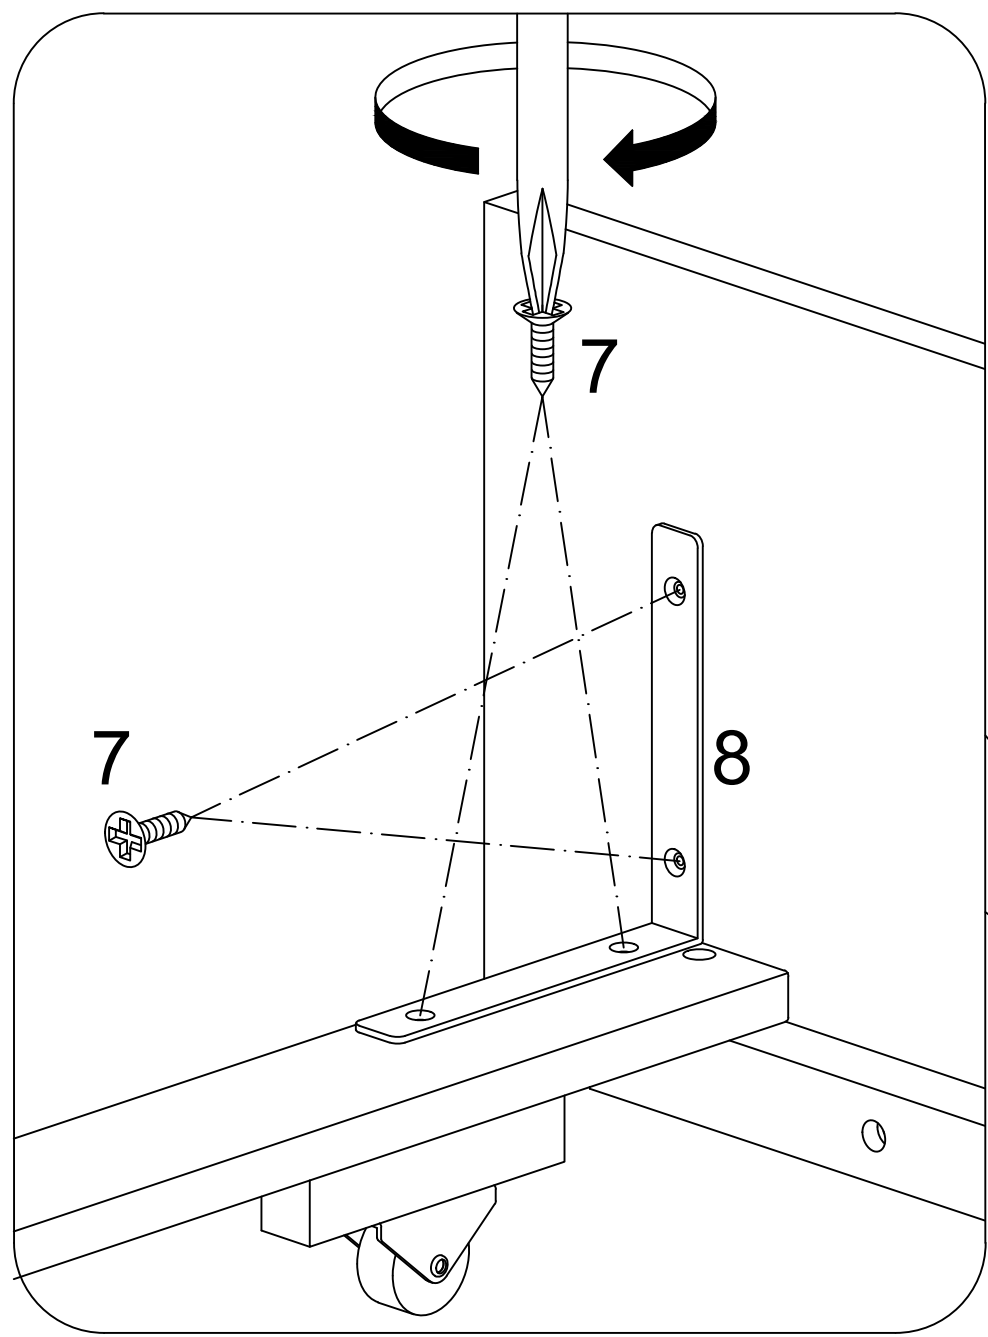
14 pcs



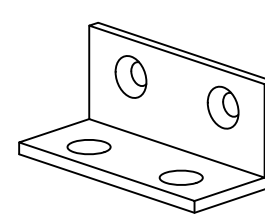
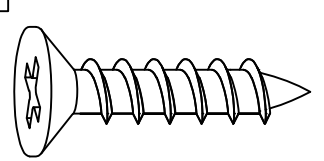
Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing , hold it in place with one hand, then lock the screw

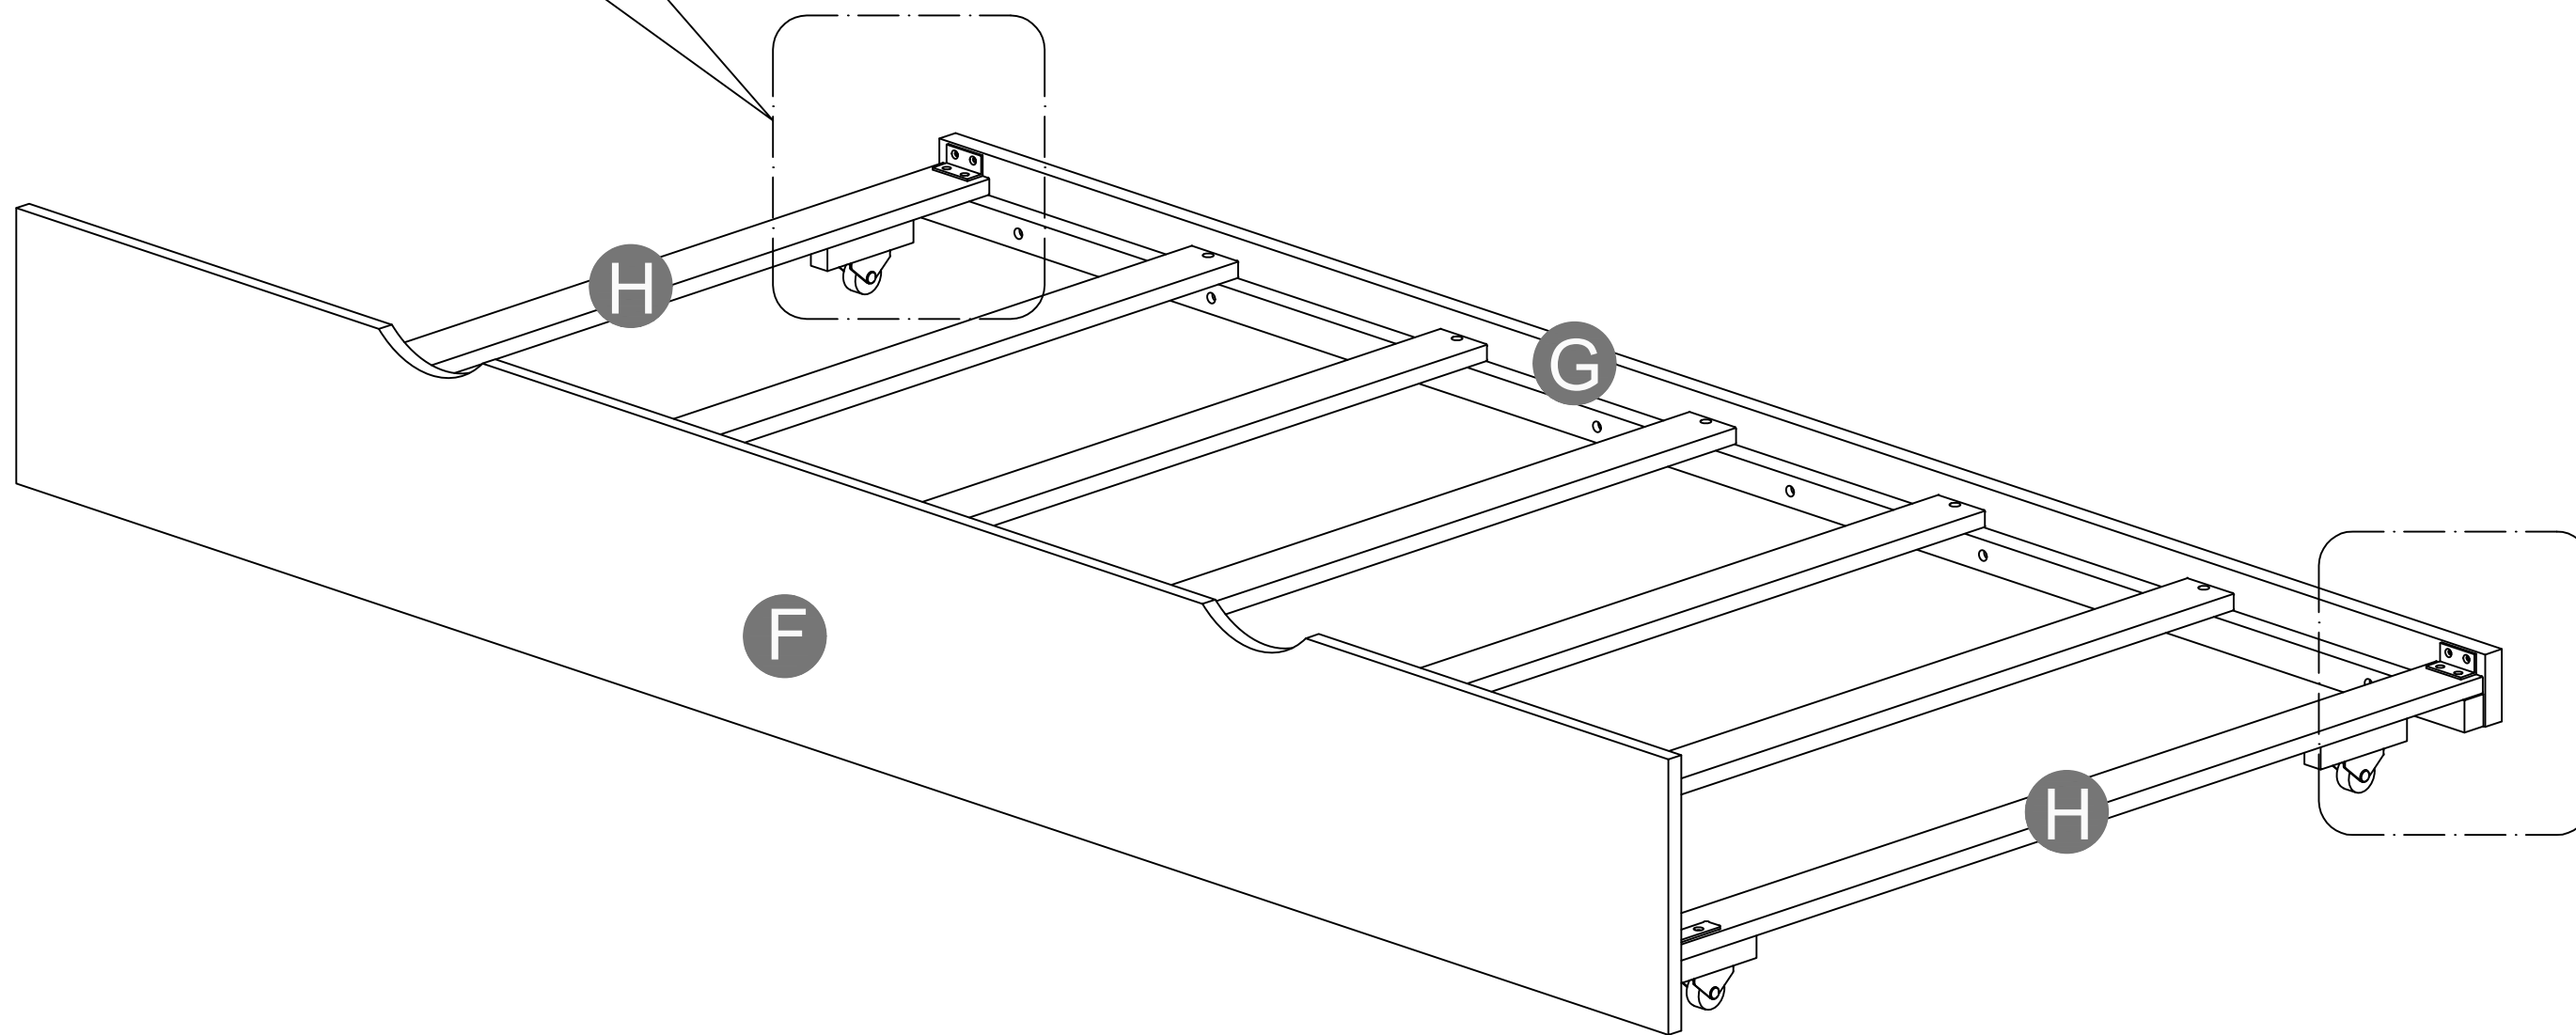
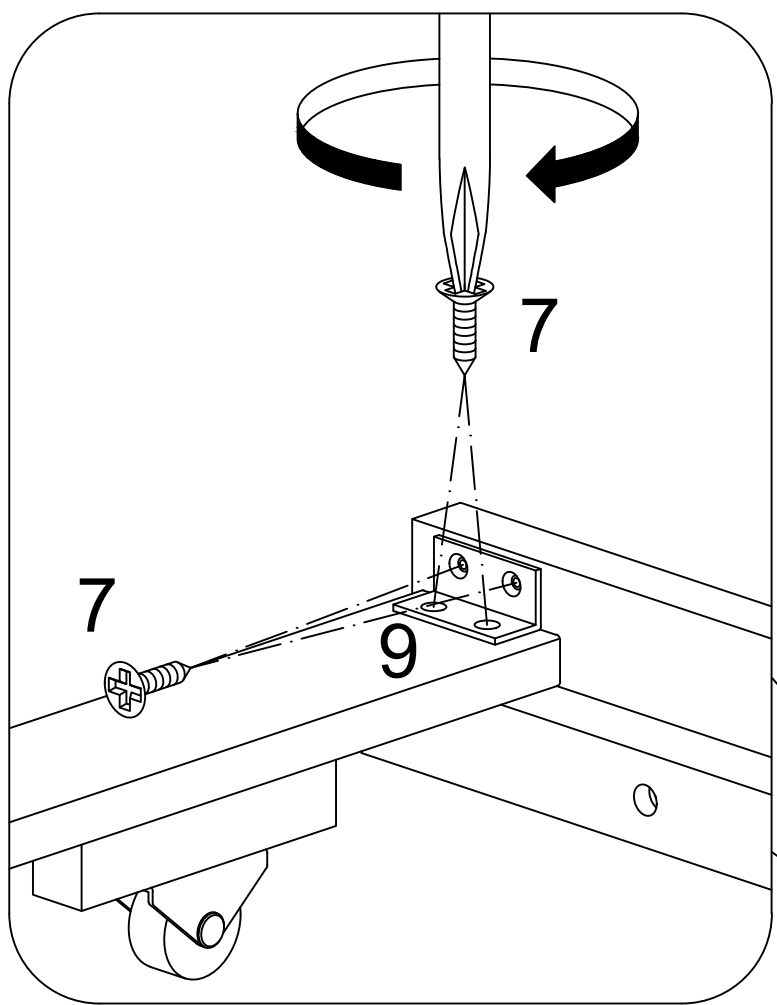
**STEP 7:**

|          |   |          |   |
|----------|---|----------|---|
| <b>8</b> |  | <b>7</b> |  |
| 2pcs     |   | 8 pcs    |   |



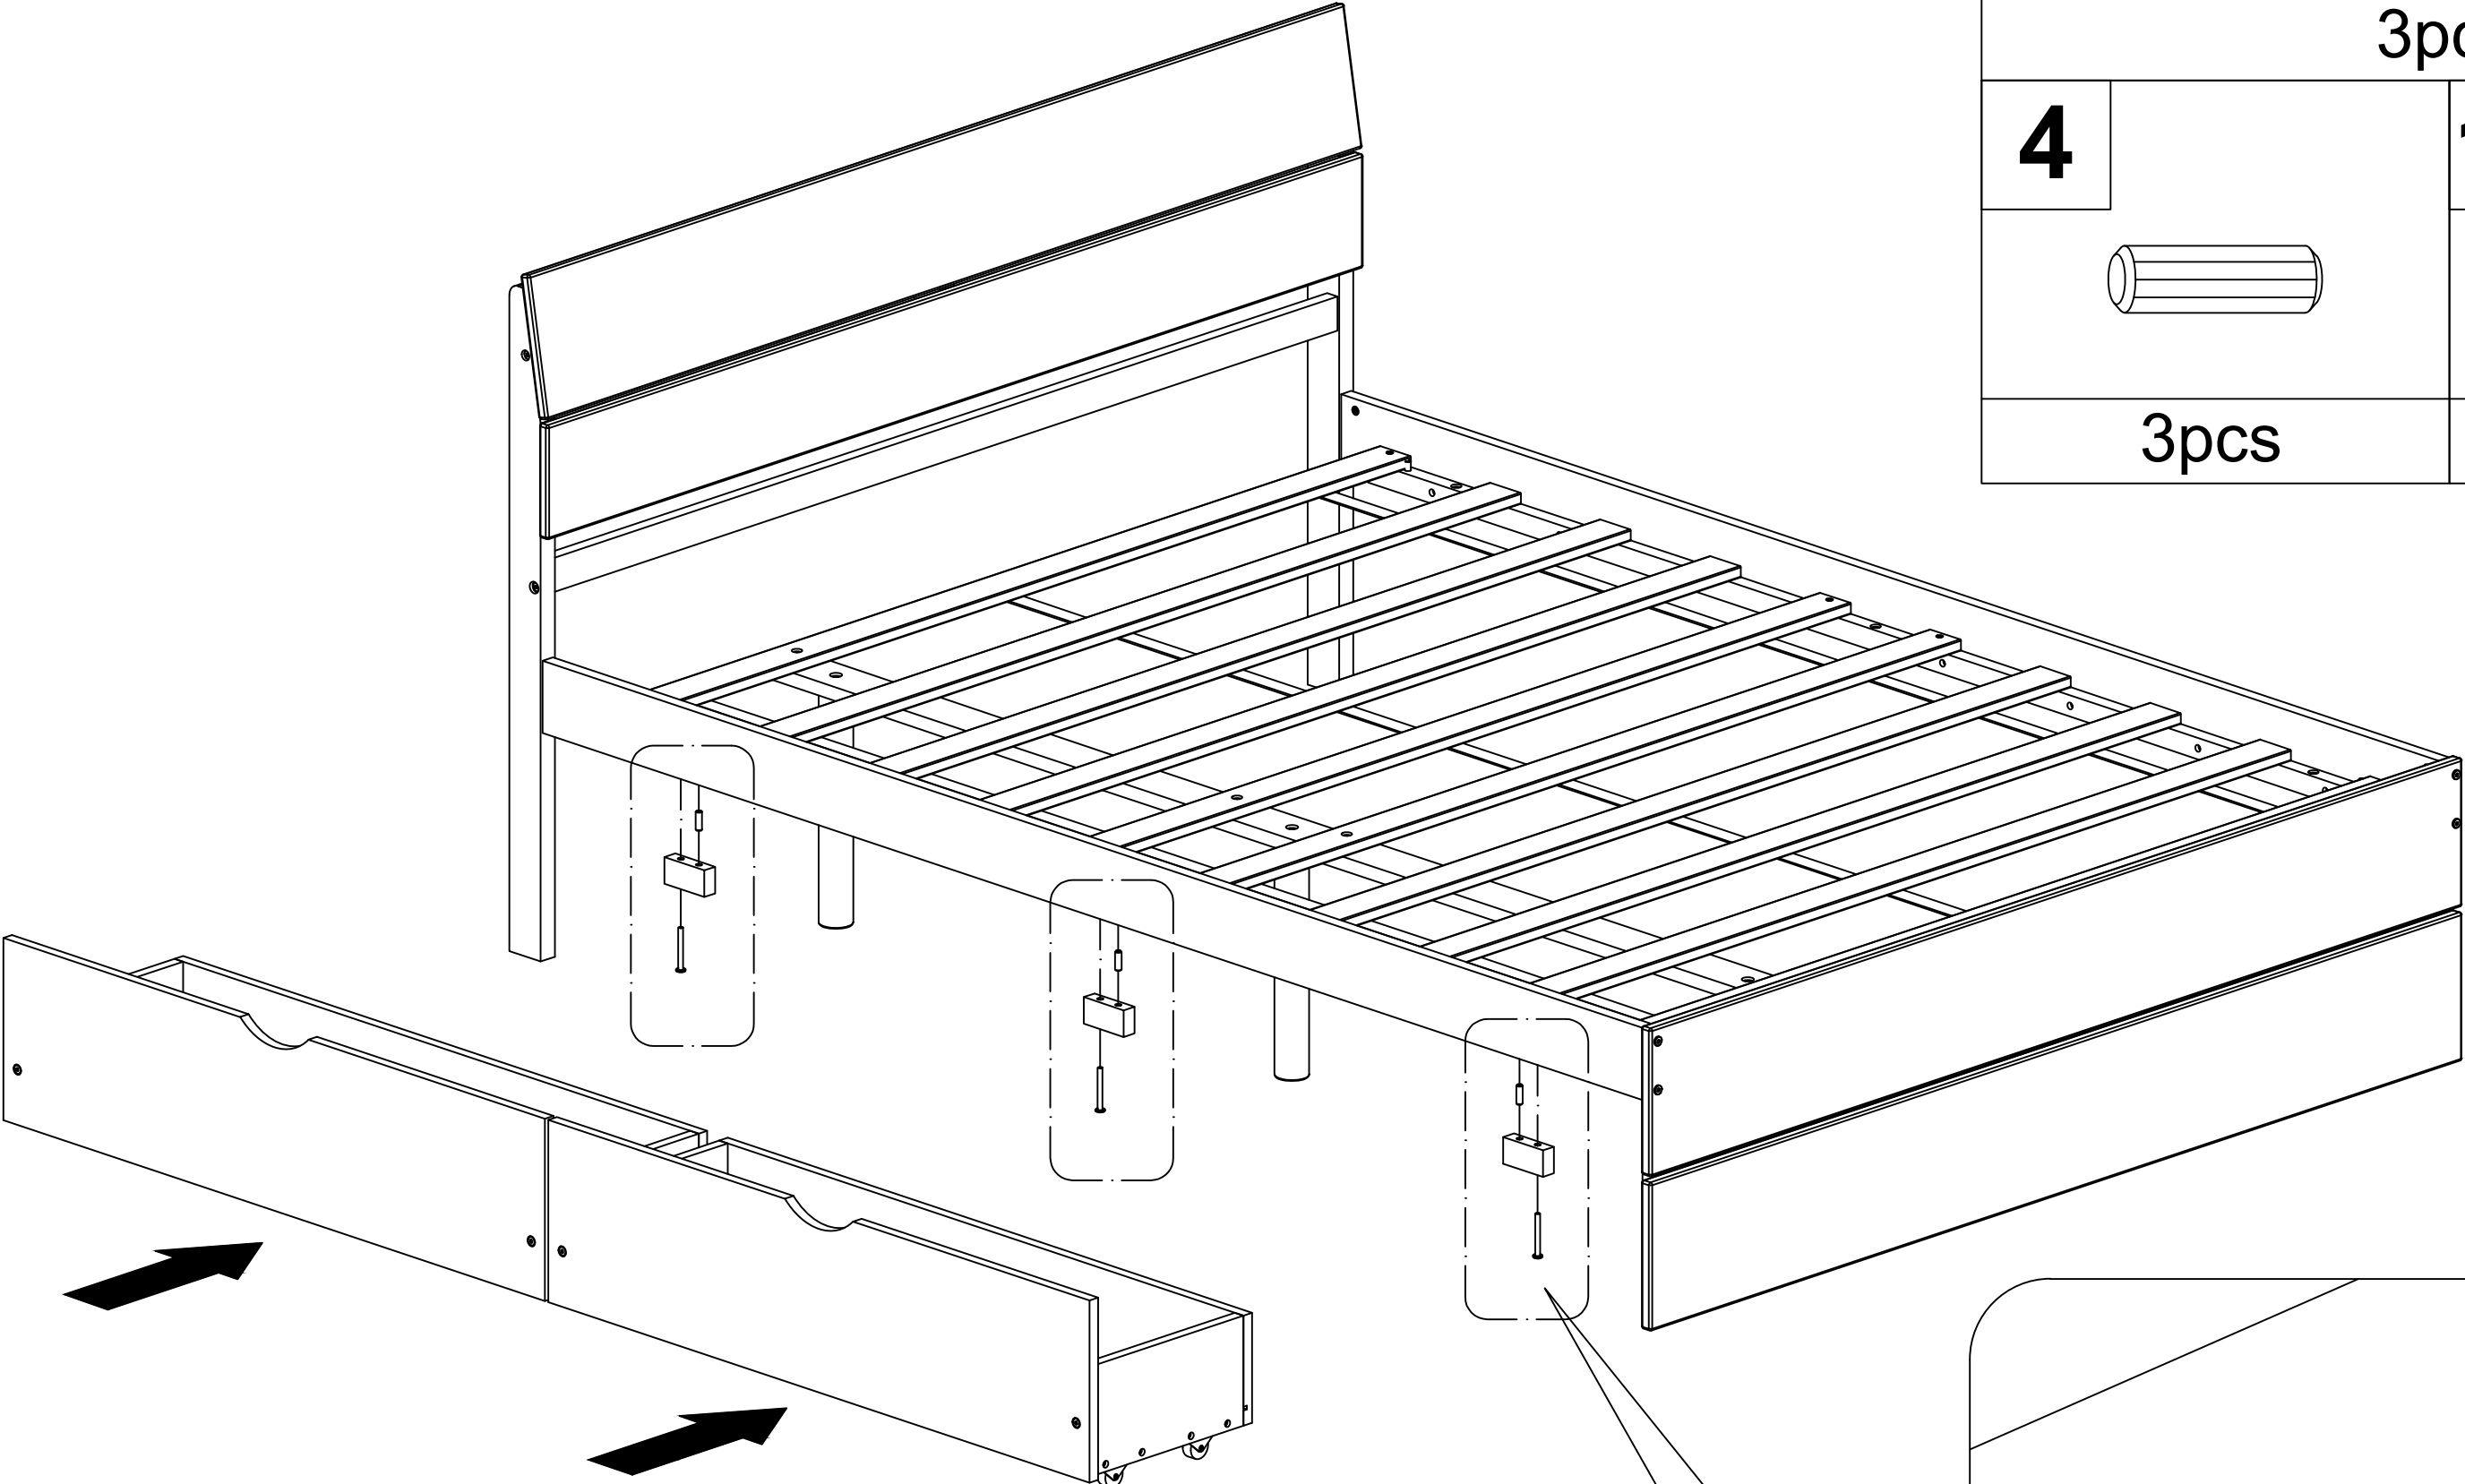
**STEP 8:**

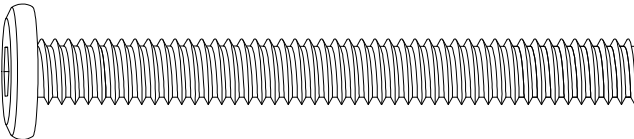

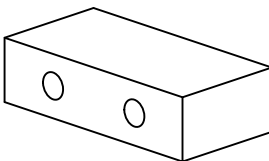
|          |   |          |   |
|----------|---|----------|---|
| <b>9</b> |  | <b>7</b> |  |
| 2pcs     |   | 8 pcs    |   |



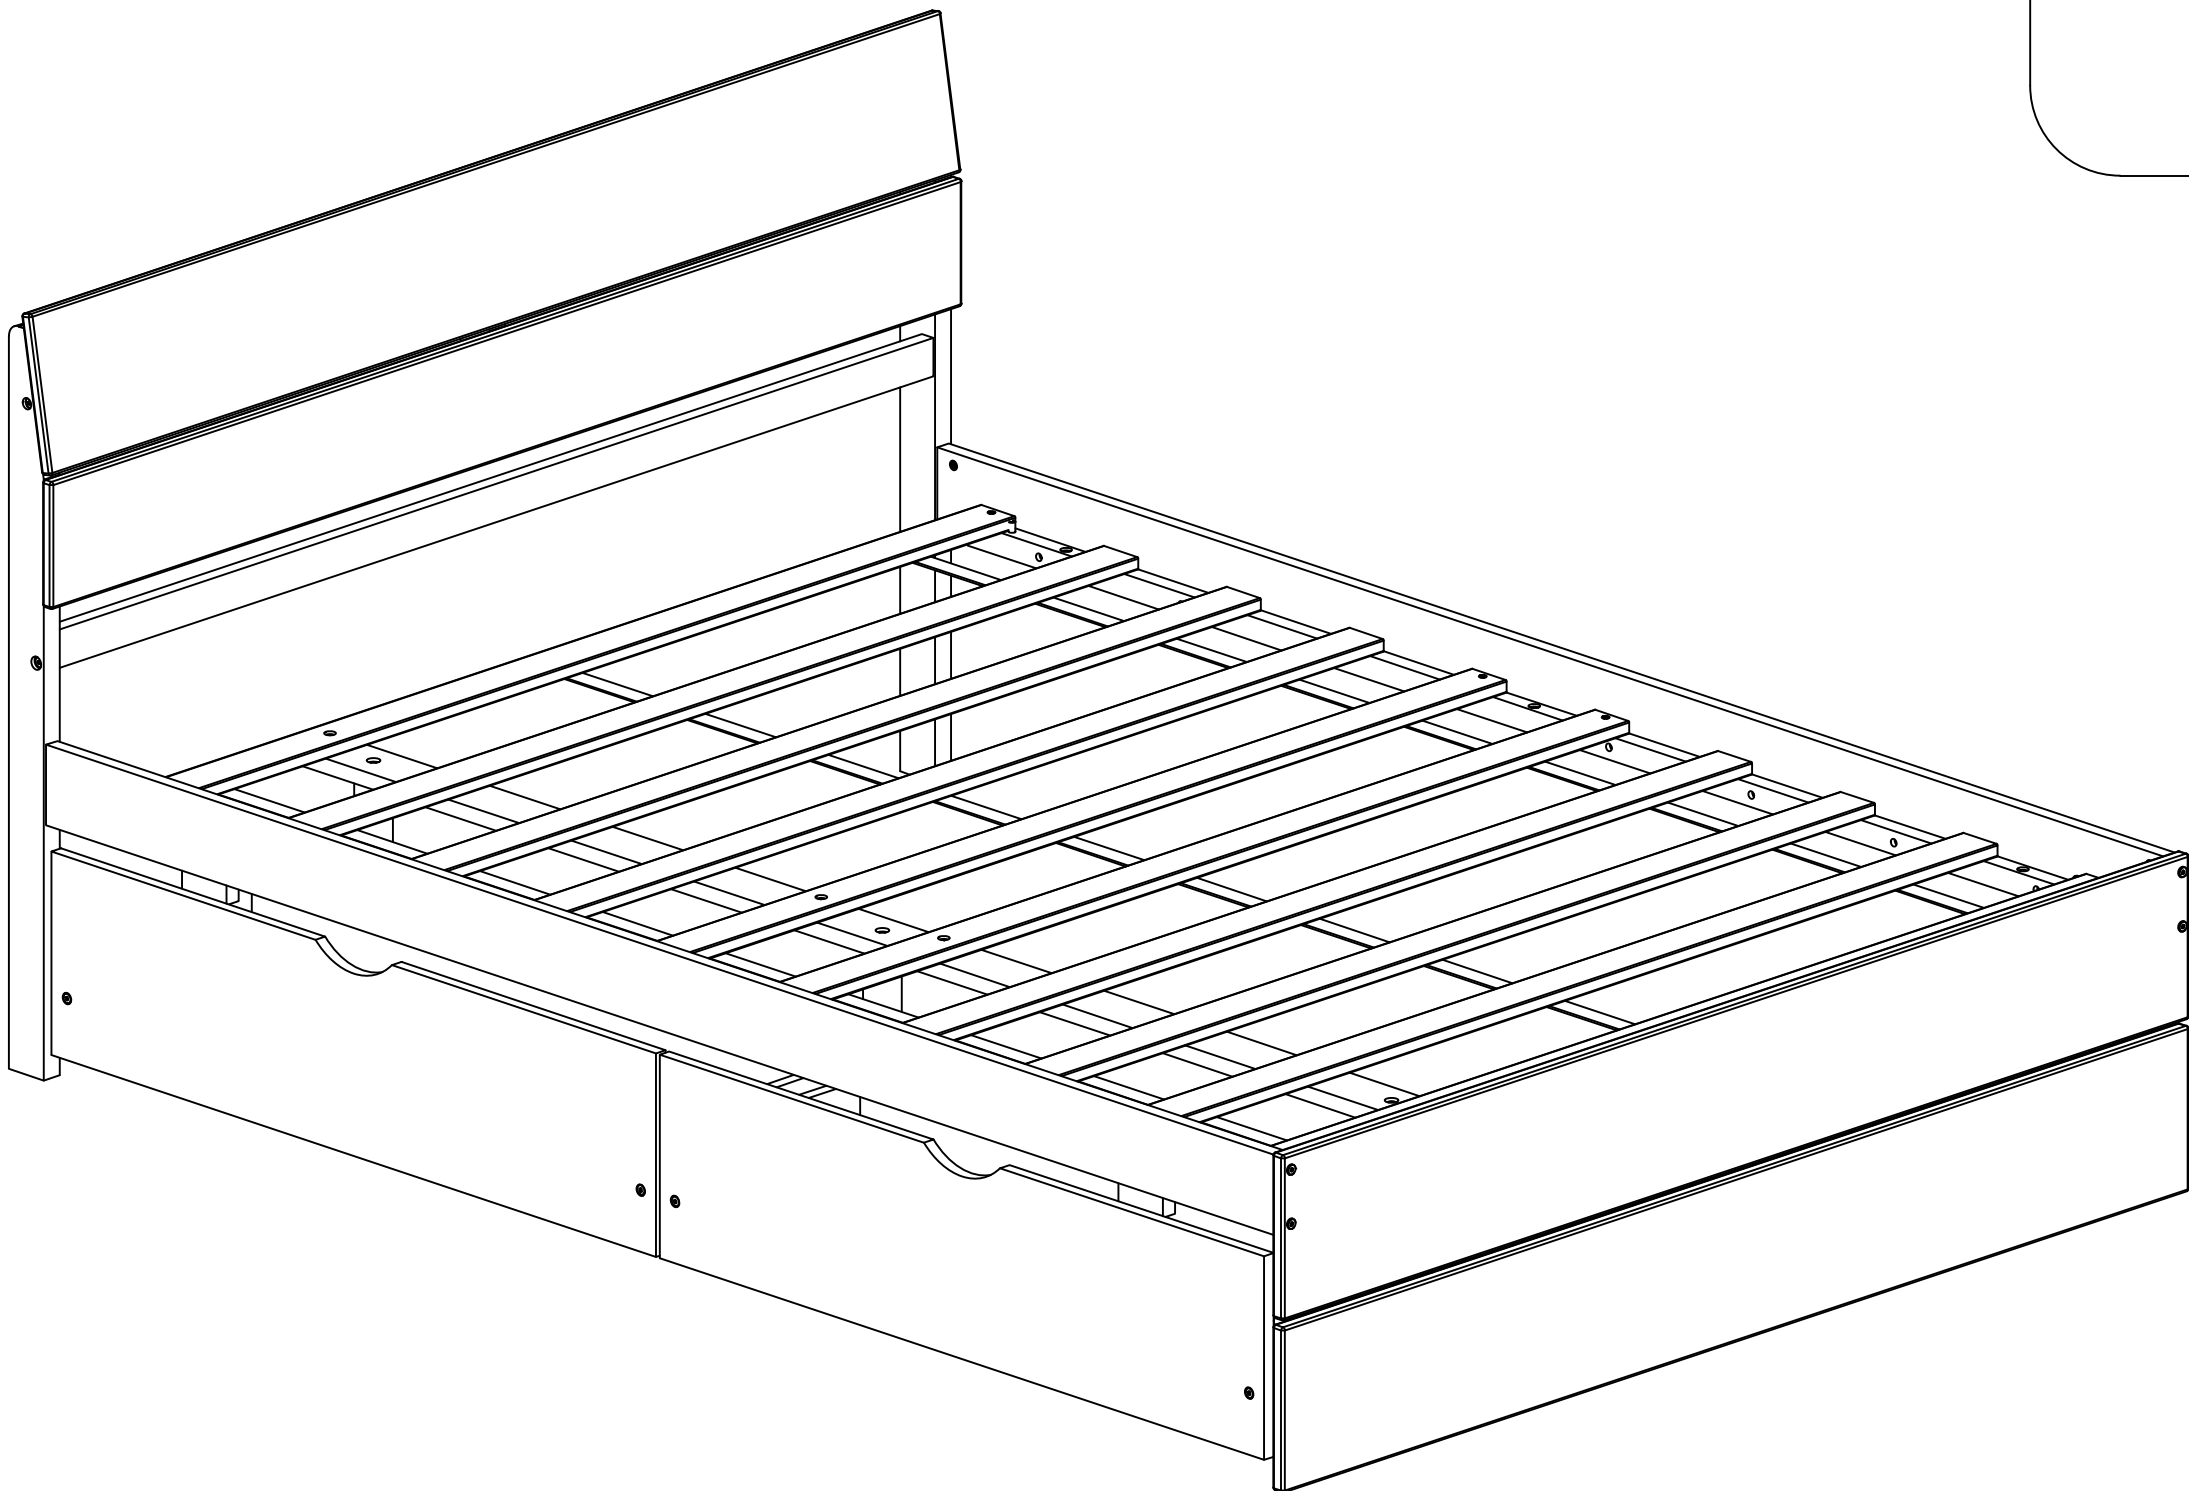
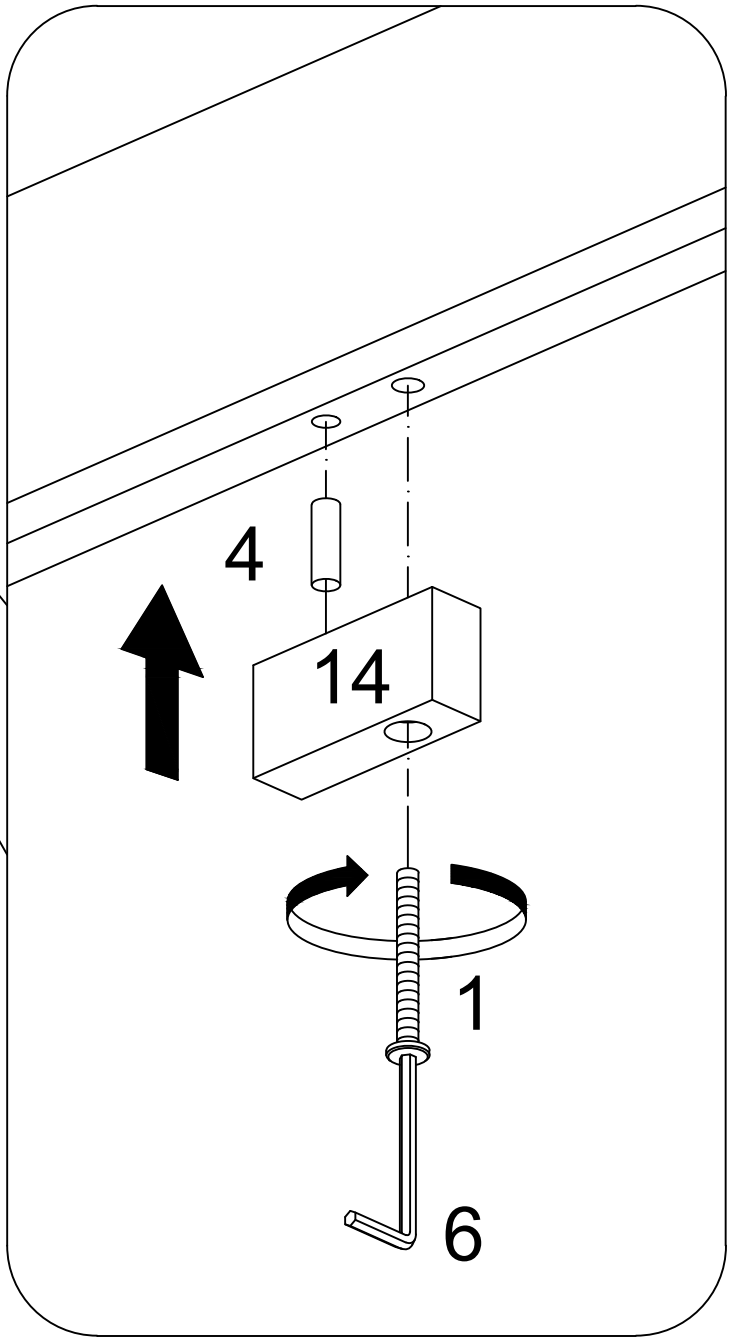


STEP 9:

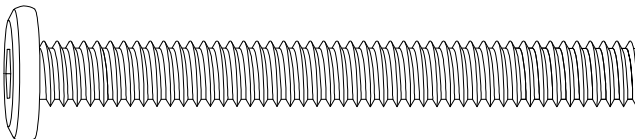

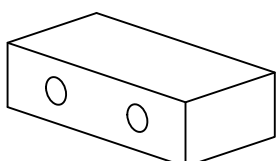


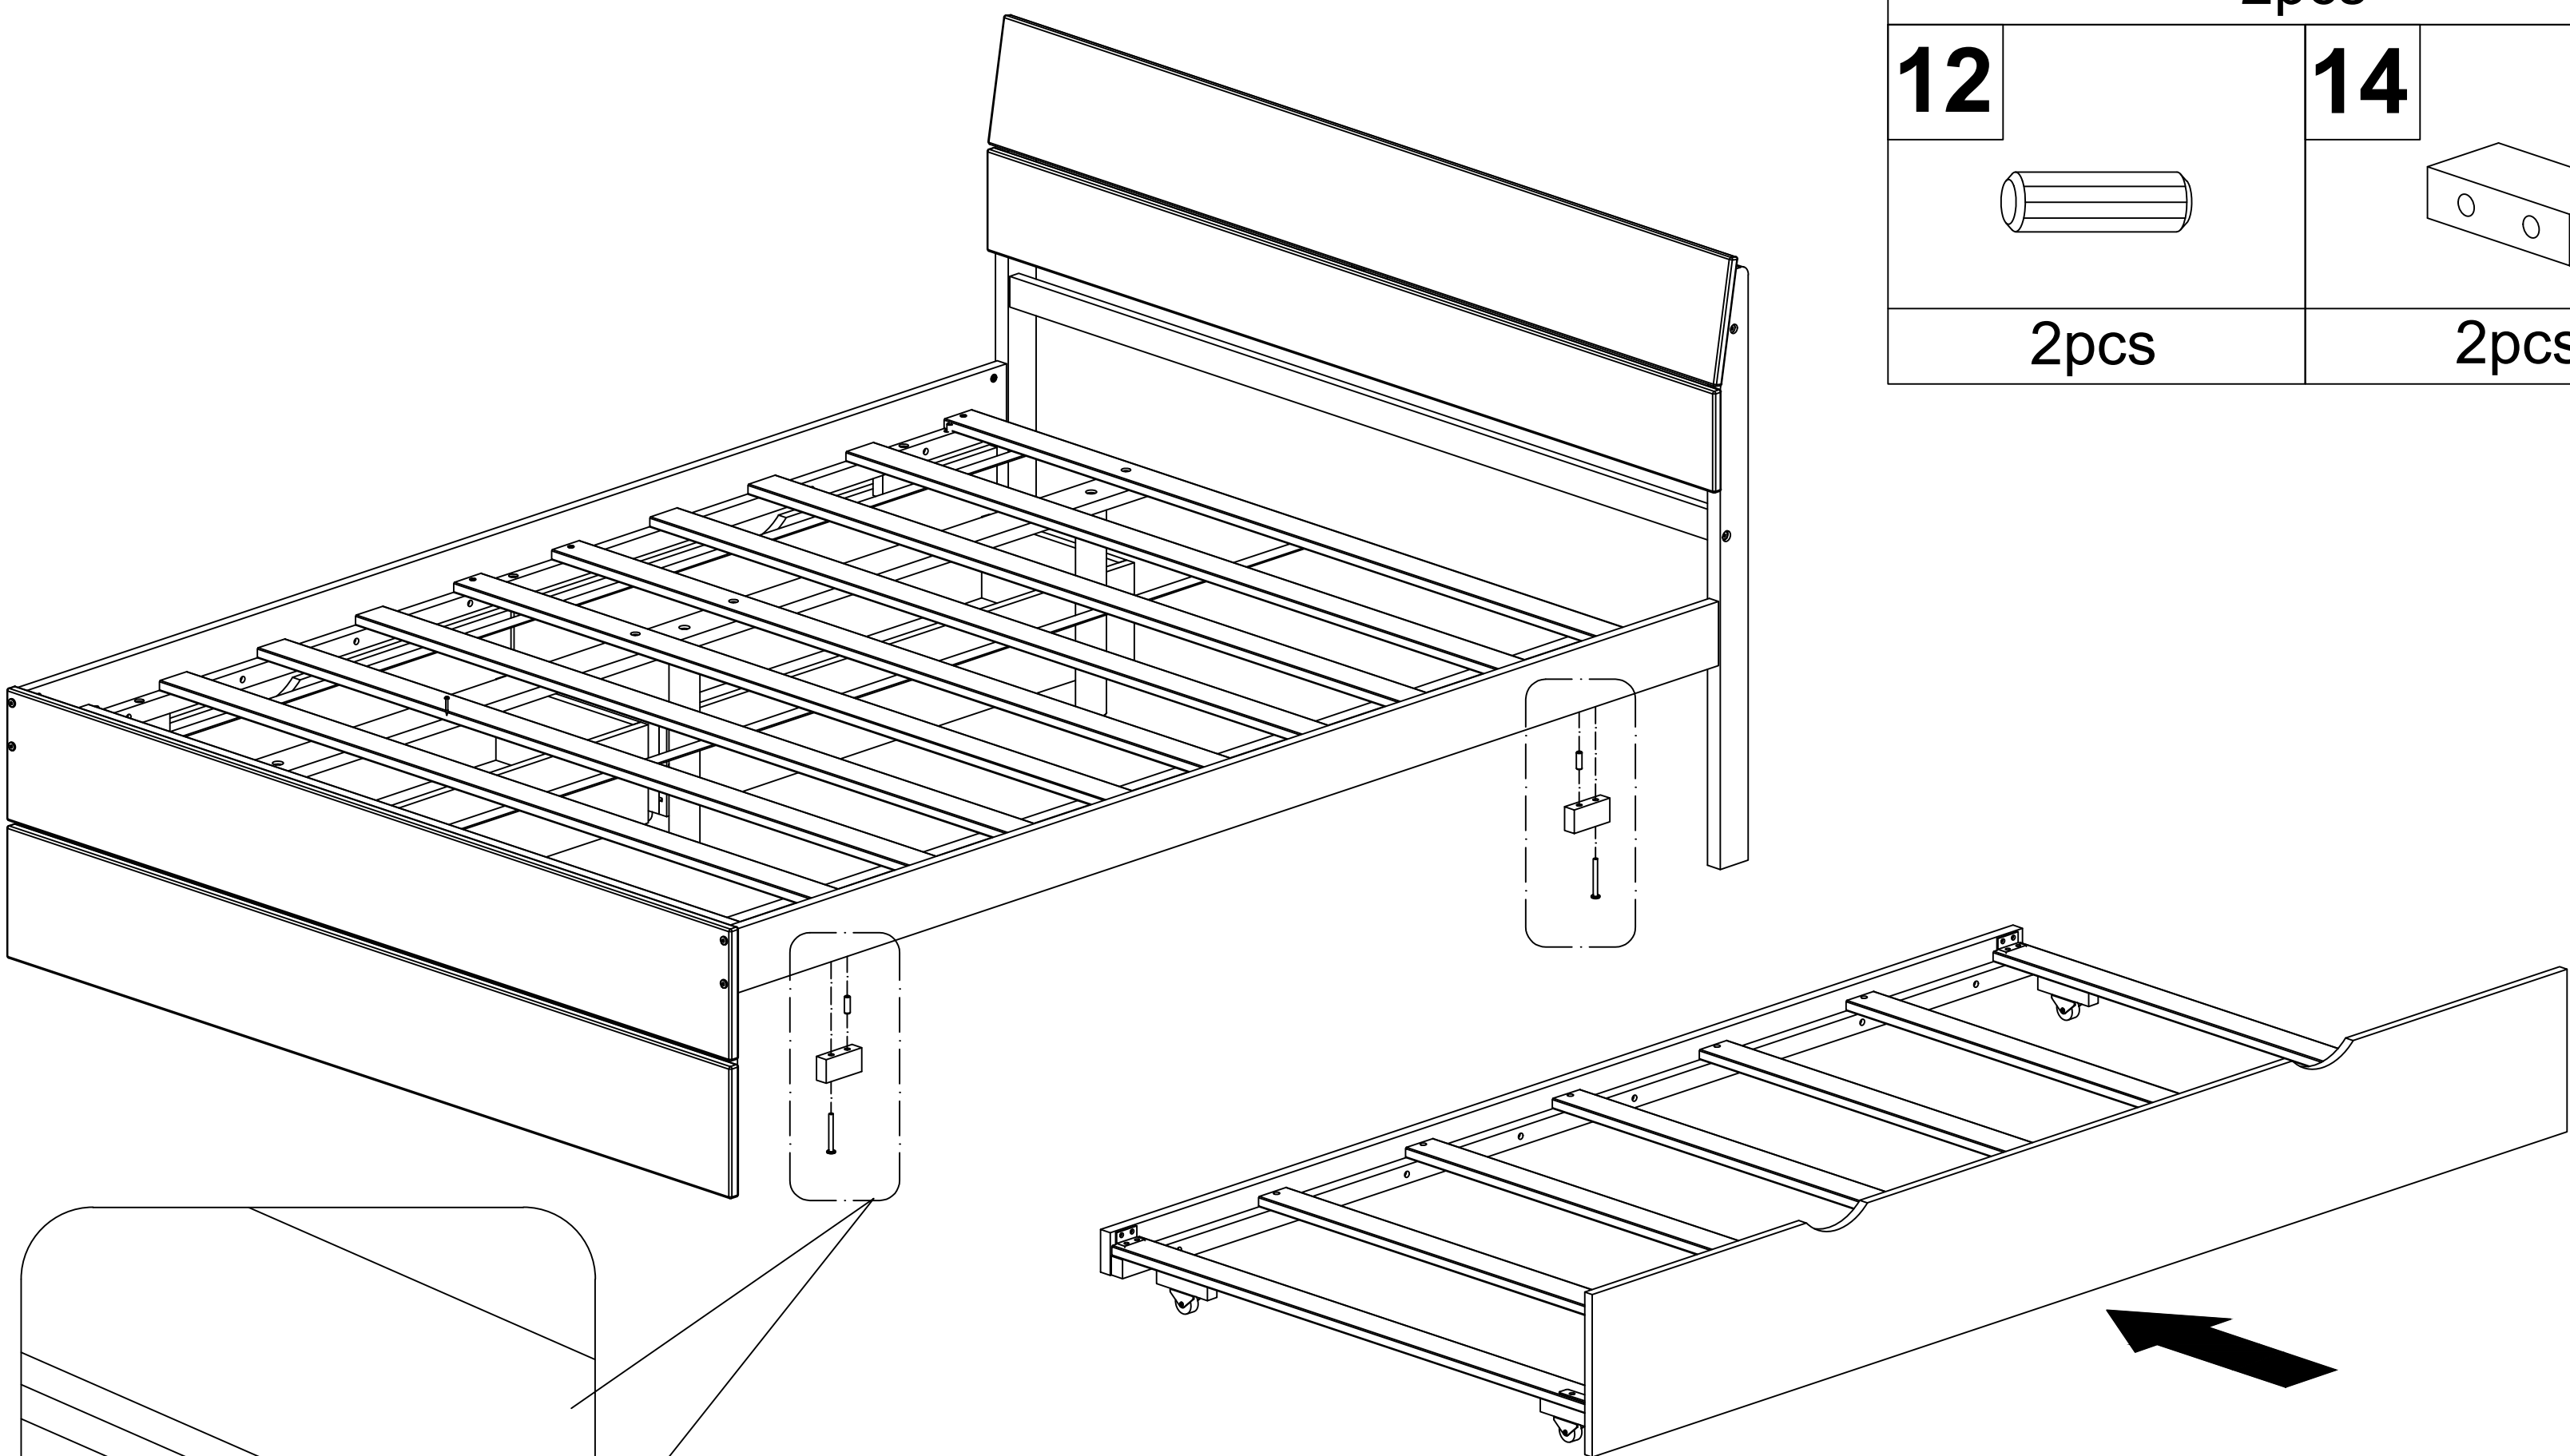
|      |   |      |   |
|------|---|------|---|
| 1    |  |      |   |
| 3pcs |   |      |   |
| 4    |  | 14   |  |
| 3pcs |   | 3pcs |   |

Push Drawers under the bottom of Bed.



STEP 10:

|      |   |   |
|------|---|---|
| 11   |  |   |
| 2pcs |   |   |
| 12   |  | 14  |
| 2pcs |   |  |
| 2pcs |   | 2pcs  |



Push Trundle under the bottom of Bed.

