



ASSEMBLY INSTRUCTIONS
High gloss twin bed with trundle

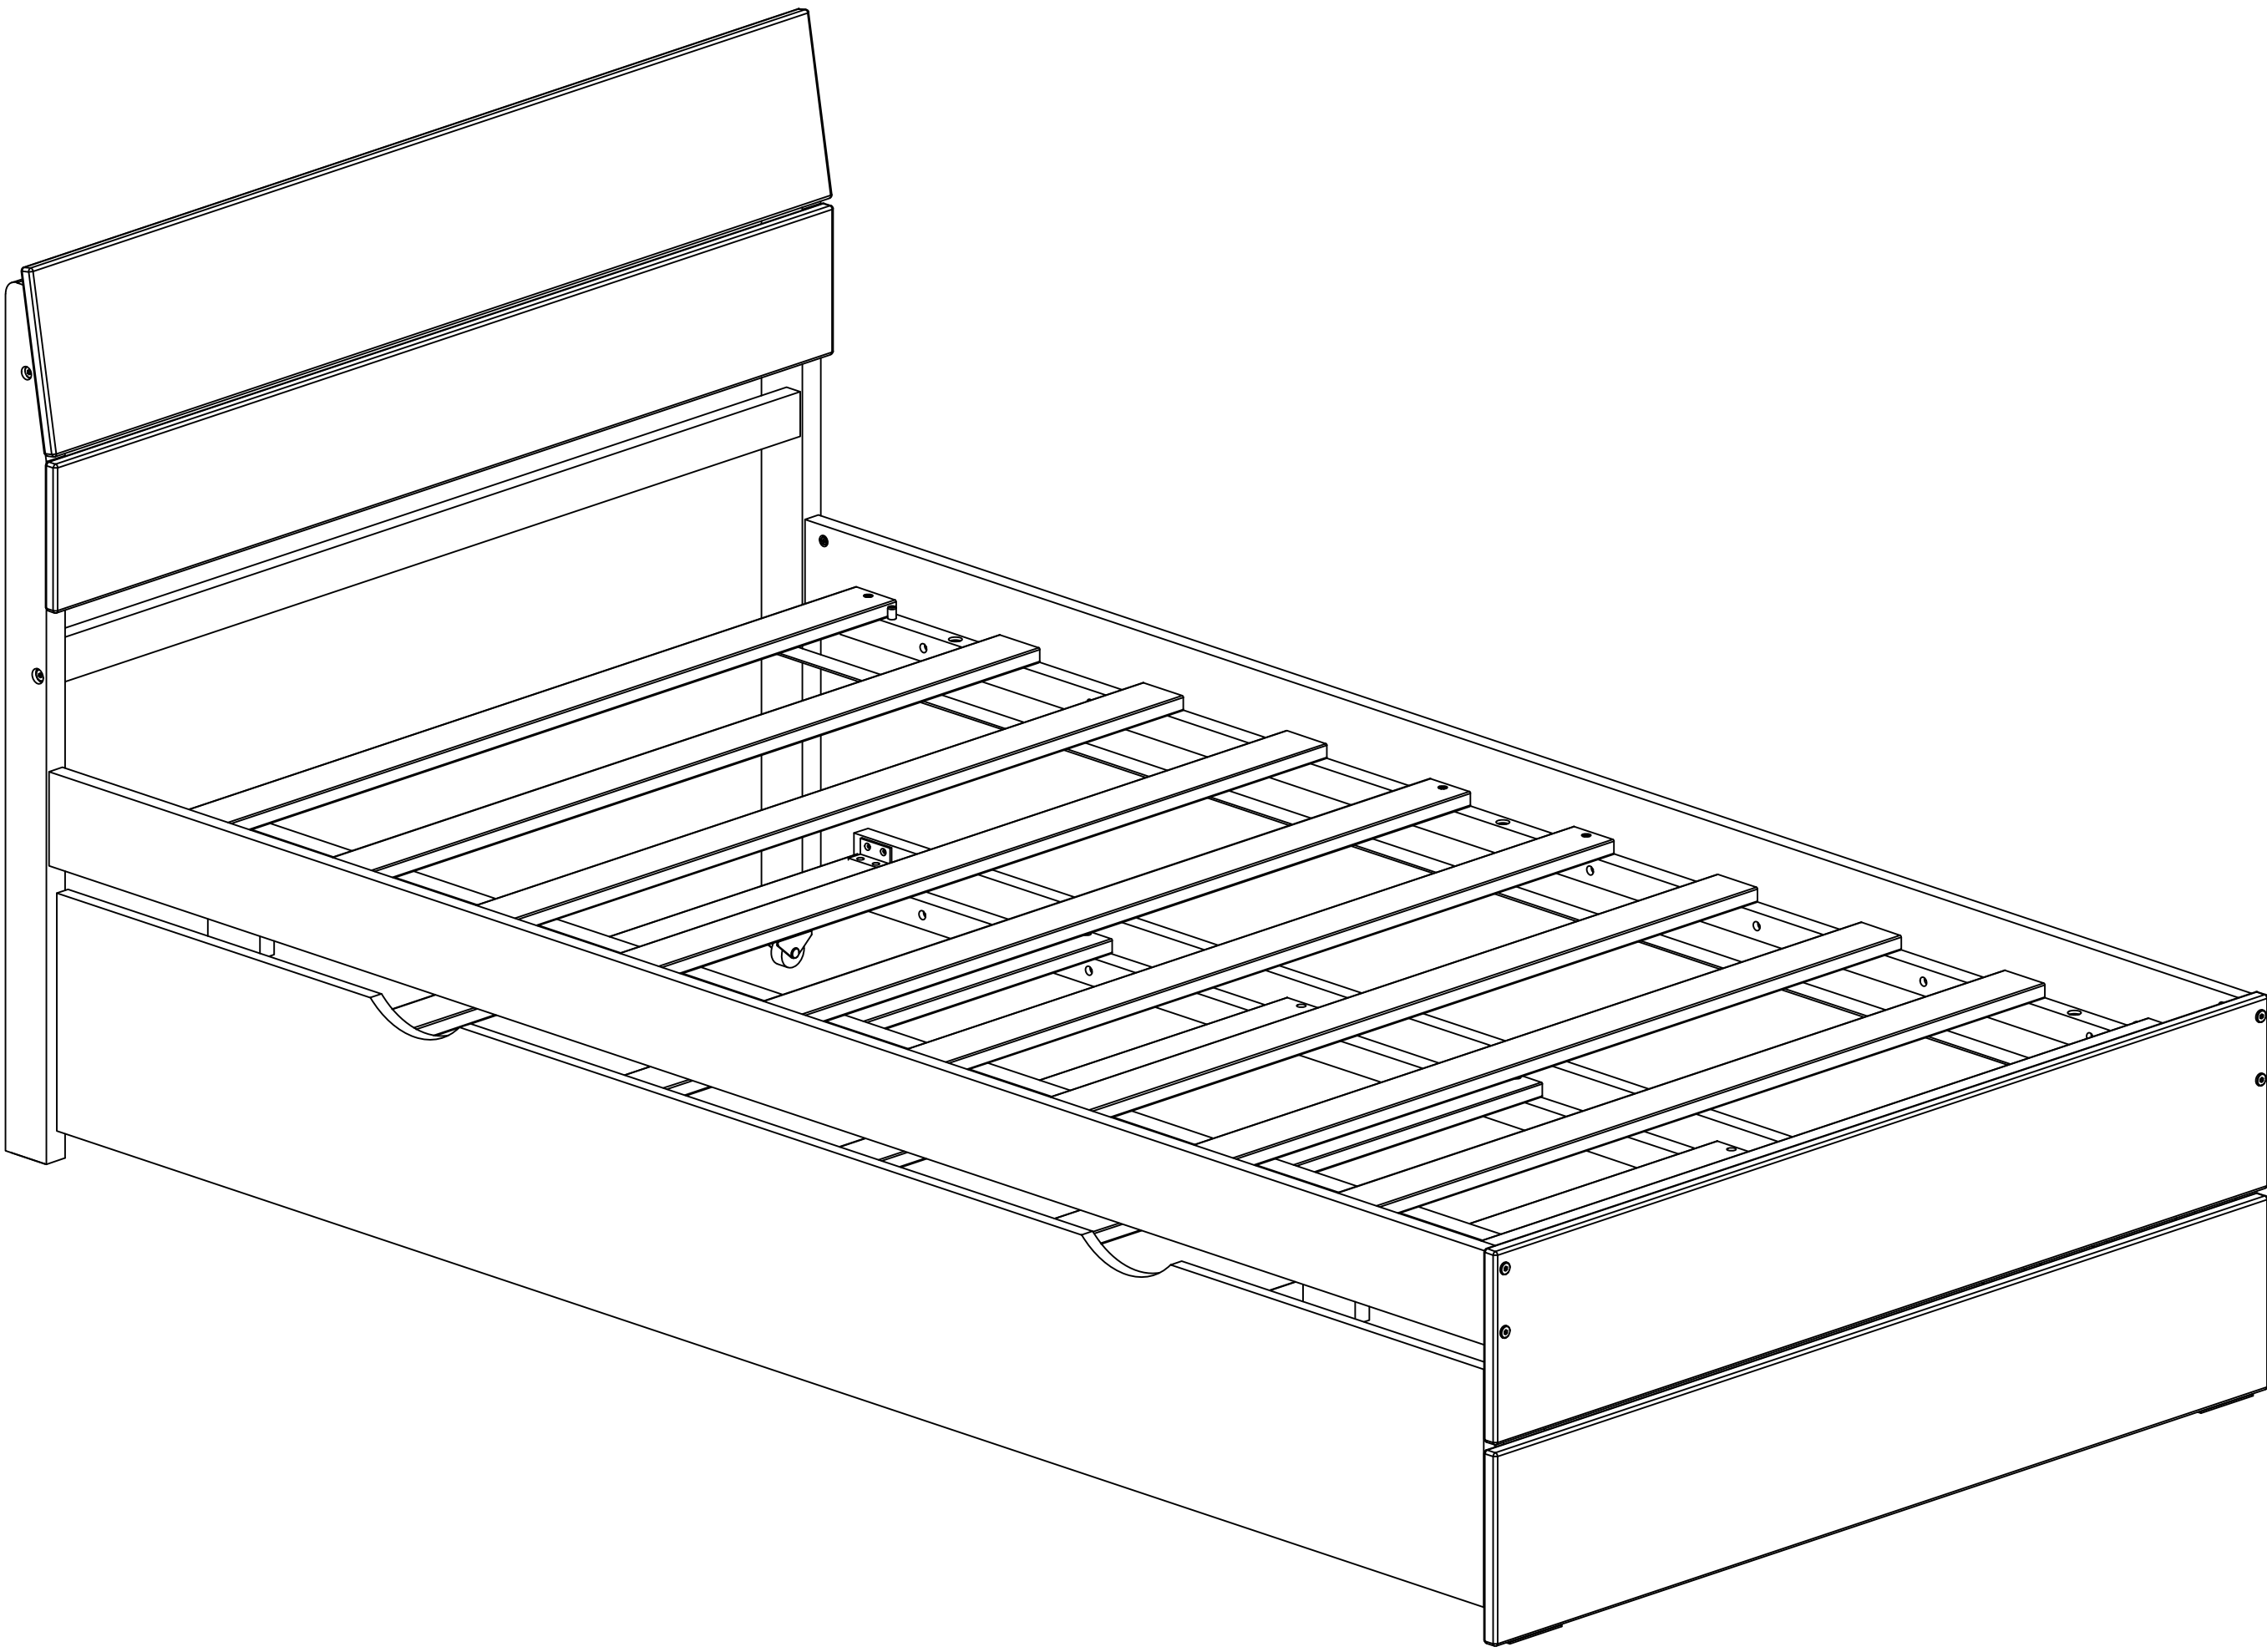















YX7109

Detail View







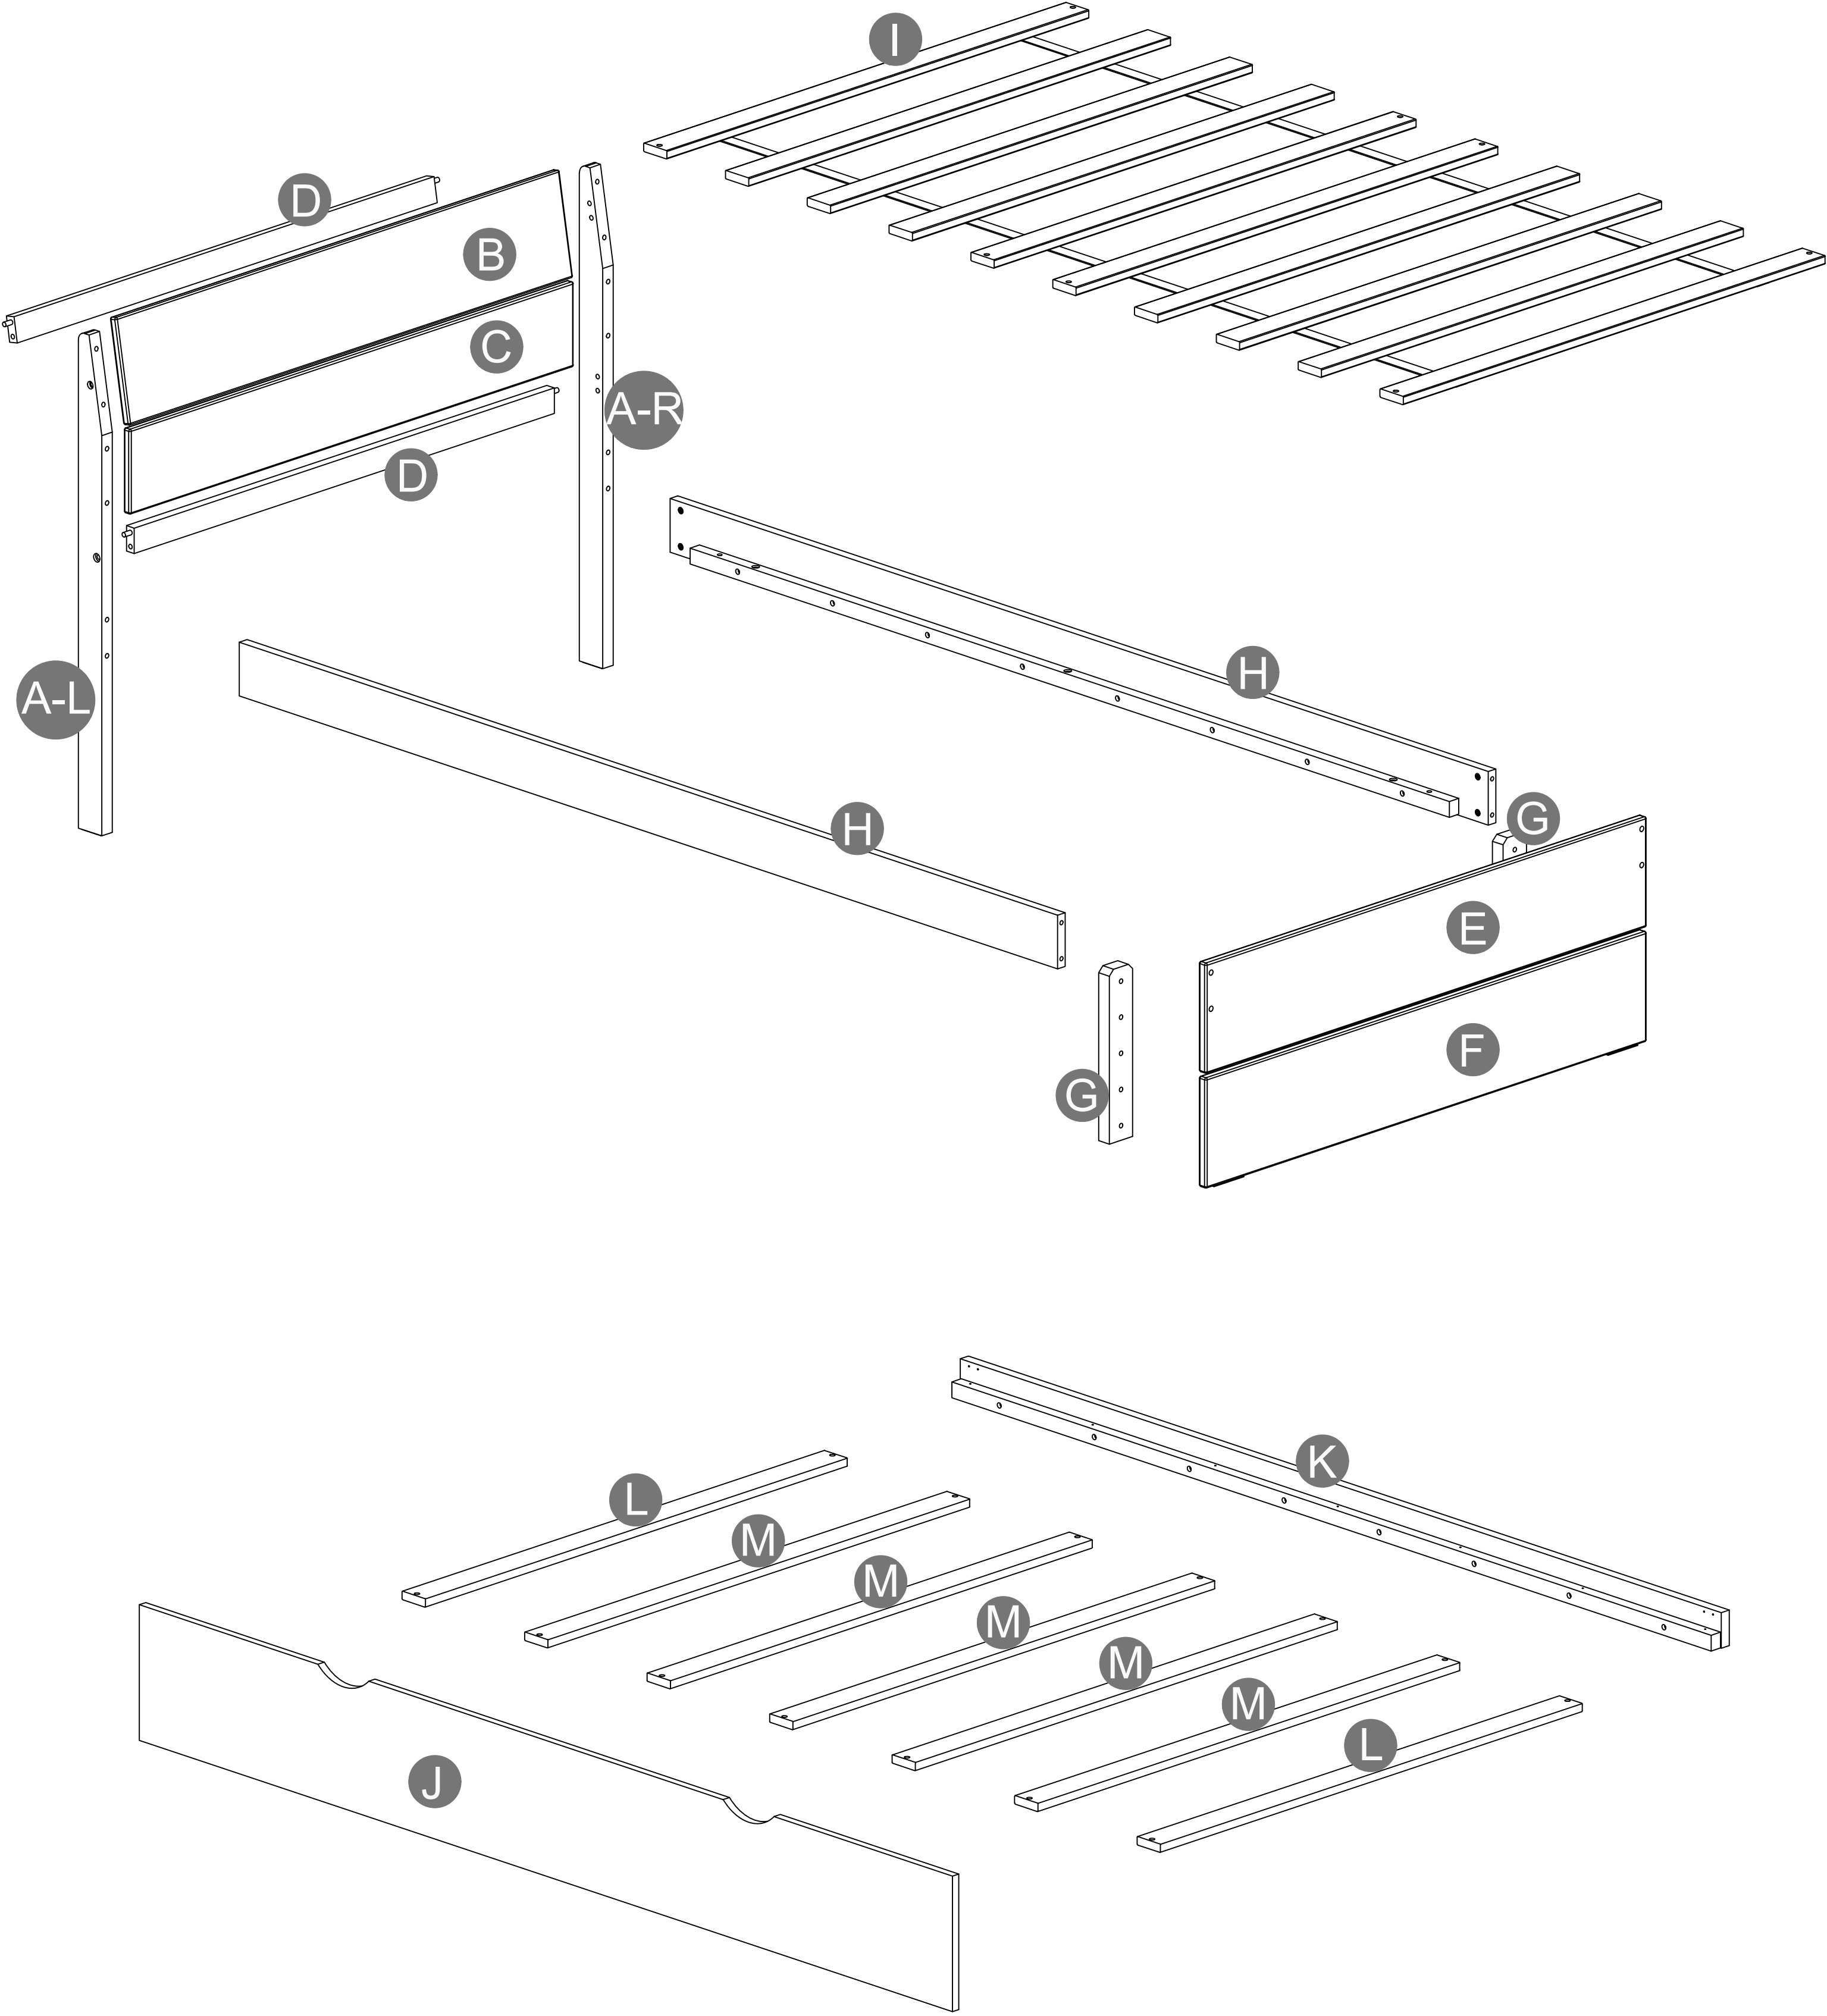


YX7109








Part List

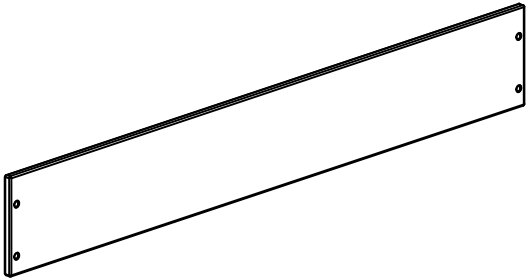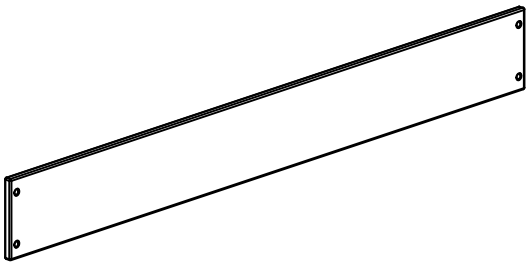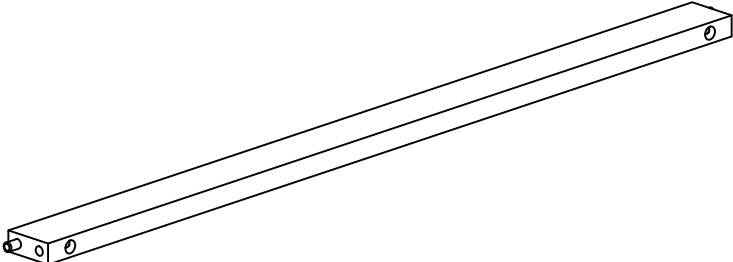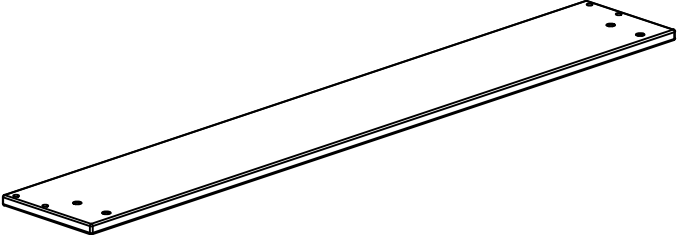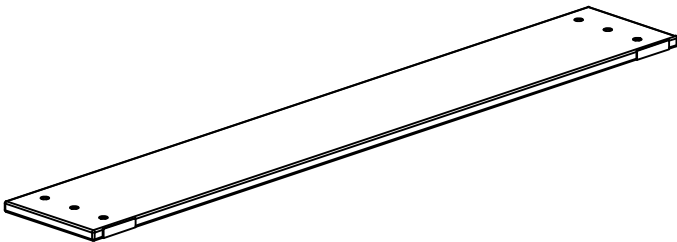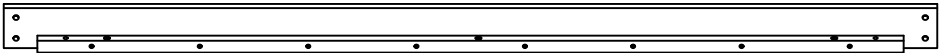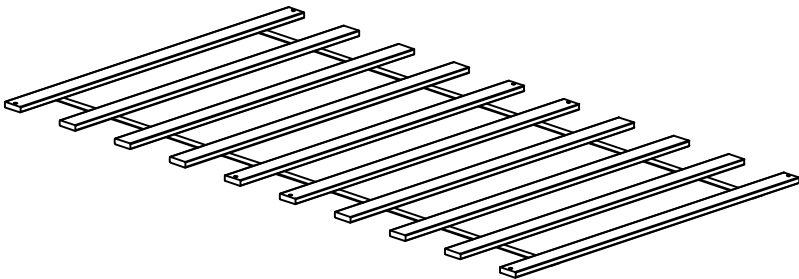A-L  Headboard leg (Left)-1pc	A-R  Headboard leg (Right)-1pc	B  Horizontal upper Panel HB-1pc
C  Horizontal bottom Panel HB-1pc	D  Horizontal bar HB-2pcs	E  Horizontal upper Panel FB-1pc
F  Horizontal bottom Panel FB-1pc	G  Vertical support bar FB-2pcs	H  Side rail-2pcs
I  Slat-10pcs	J  Trundle front panel - 1pc	K  Trundle back Panel -1pc
L  Trundle Slat-2pcs	M  Trundle Slat-5pcs	



Hardware List (1/3)

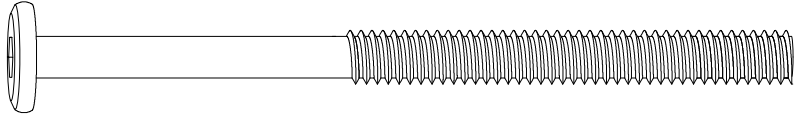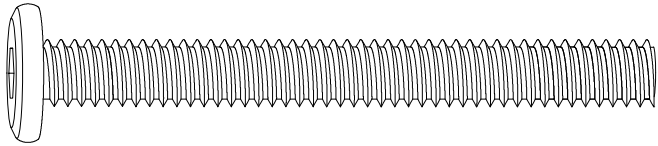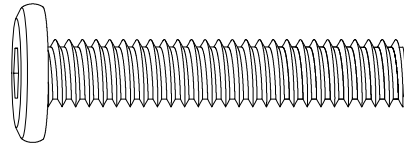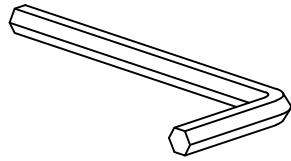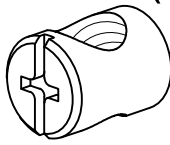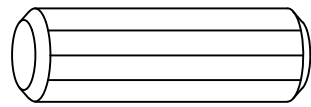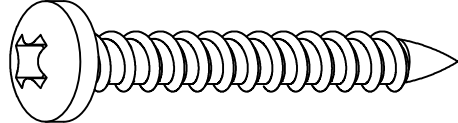1	 (Ø12)1/4"*85mm Hex-Head bolts (4pcs)	2	(Spare Hardware-1pc)  (Ø12)1/4"*55mm Hex-Head bolts (9pcs)	3	(Spare Hardware-2pcs)  (Ø12)1/4"*32mm Hex-Head bolts (20pcs)
4	 (1/4")4*60mm Allen key (1pc)	5	(Spare Hardware-1pc)  1/4"*15mm Horizontal-Hole bolts(13pcs)	6	 Ø8*25mm Wood dowel (4pcs)
7	(Spare Hardware-1pc)  Ø4*25mm Wood screws (9 pcs)				



Hardware List (2/3)

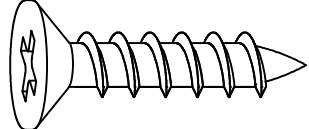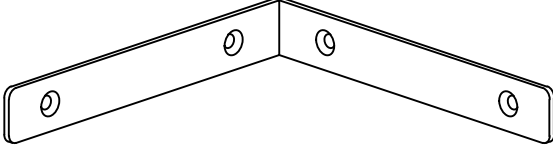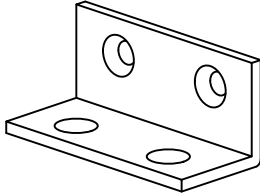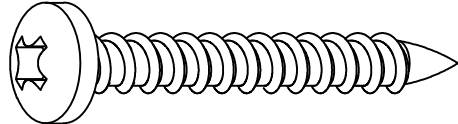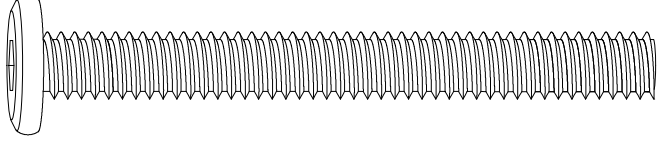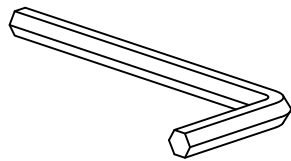8	(Spare Hardware-2pcs)  Ø4*12mm Wood screws (18 pcs)	9	 120*120*18*2mm Metal bracket (2pcs)	10	 35*18*18*2mm Metal bracket (2pcs)
11	(Spare Hardware-2pcs)  Ø4*25mm Wood screws (24 pcs)	12	 (Ø12)1/4"*55mm Hex-Head bolts (2pcs)	13	 Ø8*25mm Wood dowel (2pcs)
14	 (1/4")4*60mm Allen key (1pc)				

Hardware List (3/3)

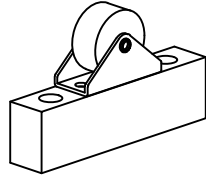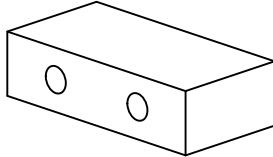15	 100*62*19mm Wheels (4pcs)	16	 70*38*19mm Stopper (2pcs)
----	---	----	--

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)

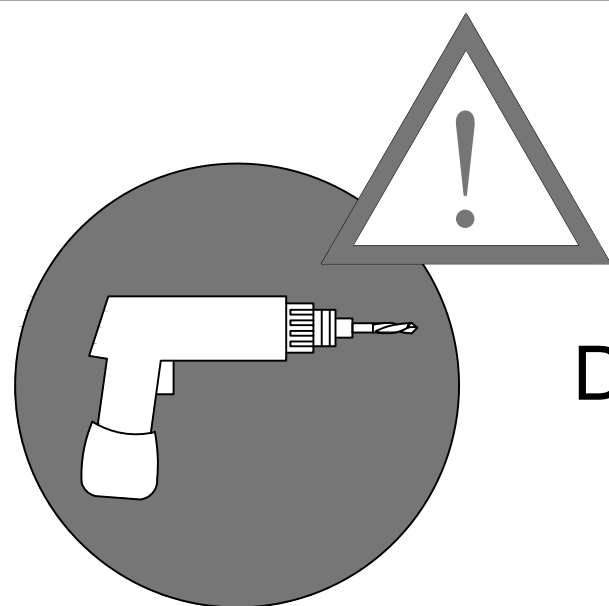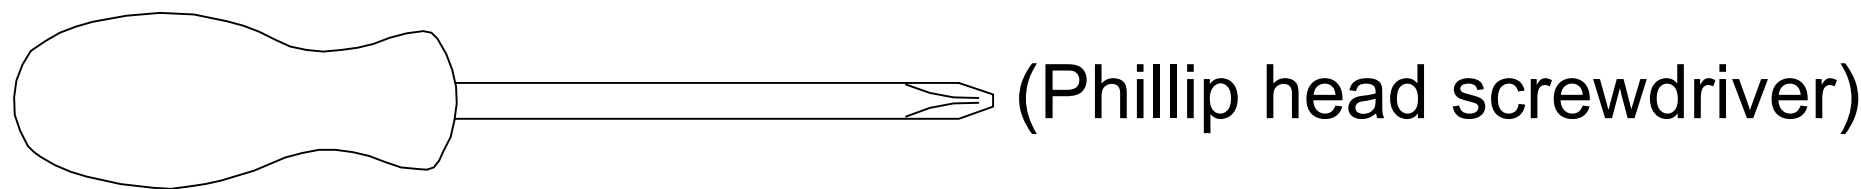


DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT !

Remark: We recommend you assemble your bed in the flat ground.


STEP 1:

2



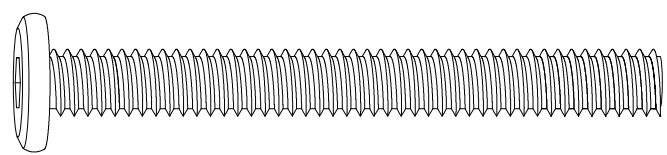


4pcs

5

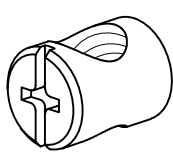


4pcs

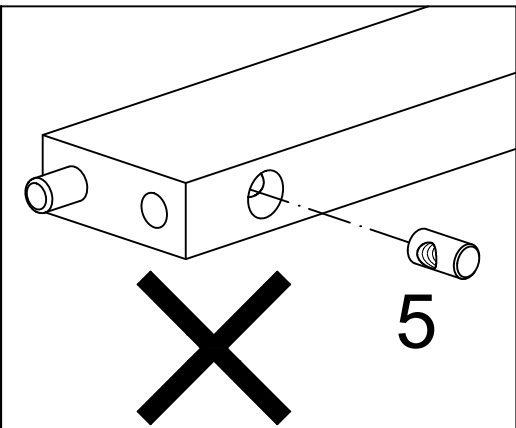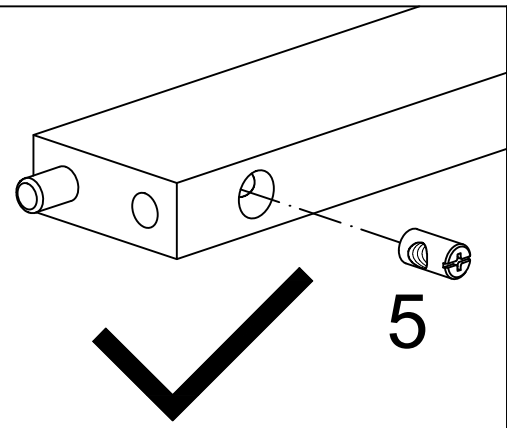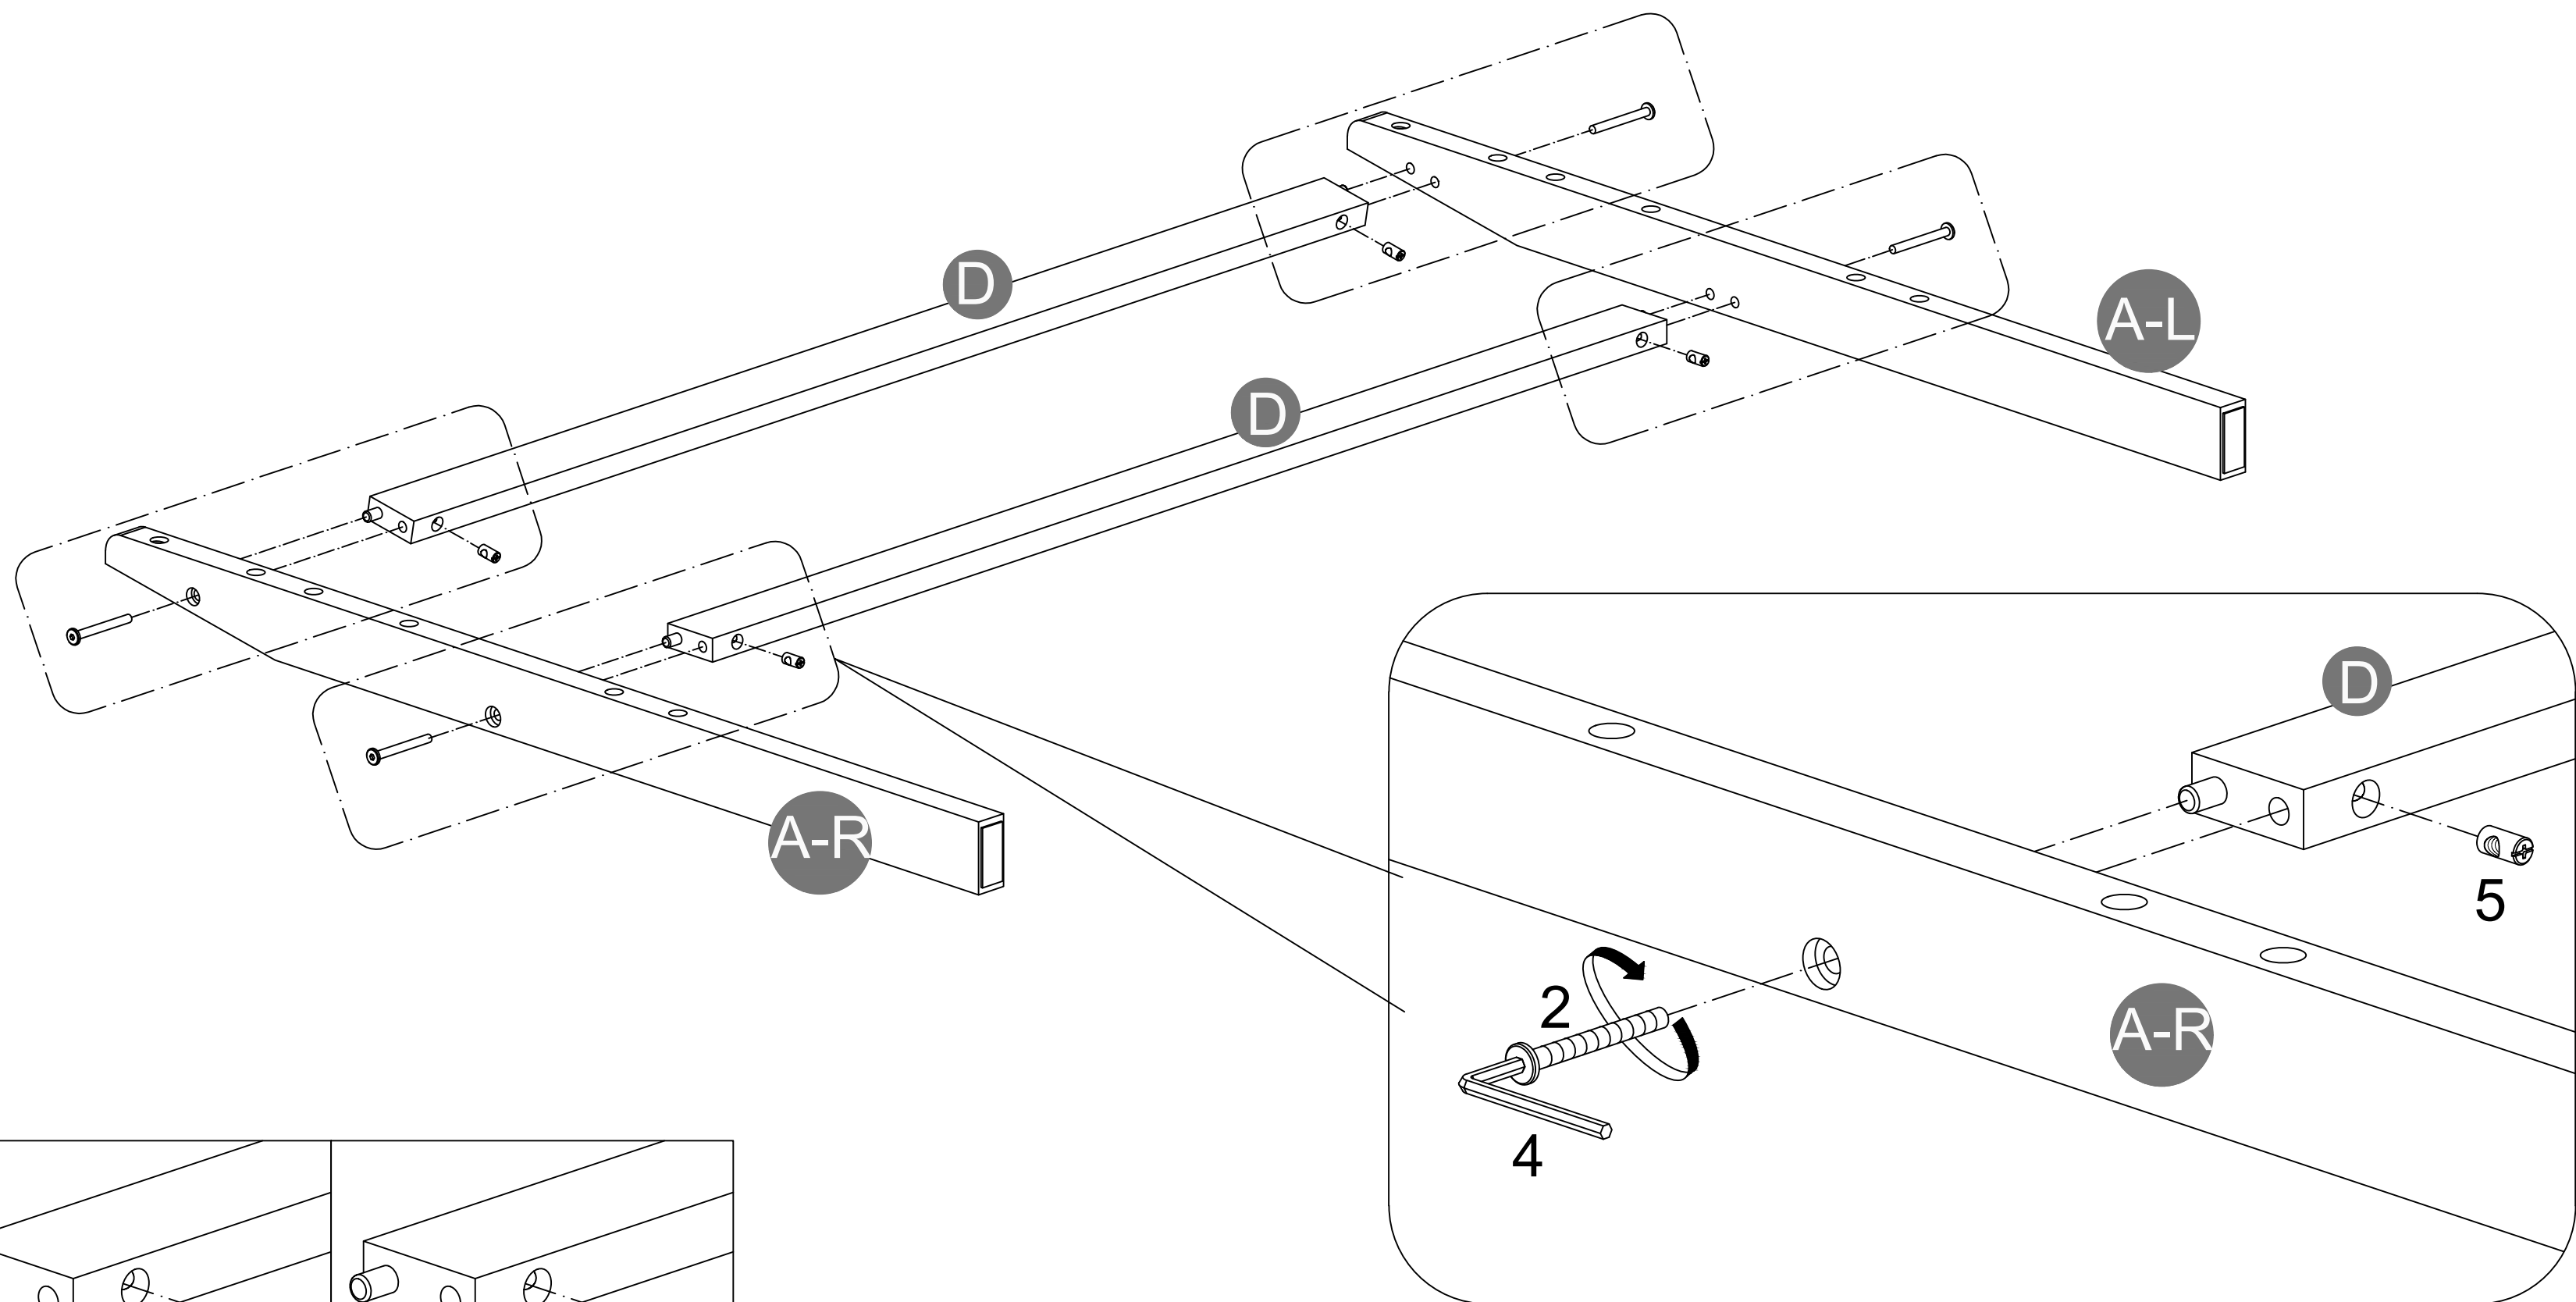


Note: Part 5 will face up with the "x" mark on it, otherwise it cannot be tightened

STEP 2:


3

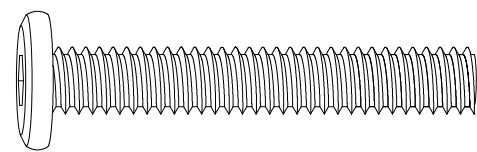


8pcs

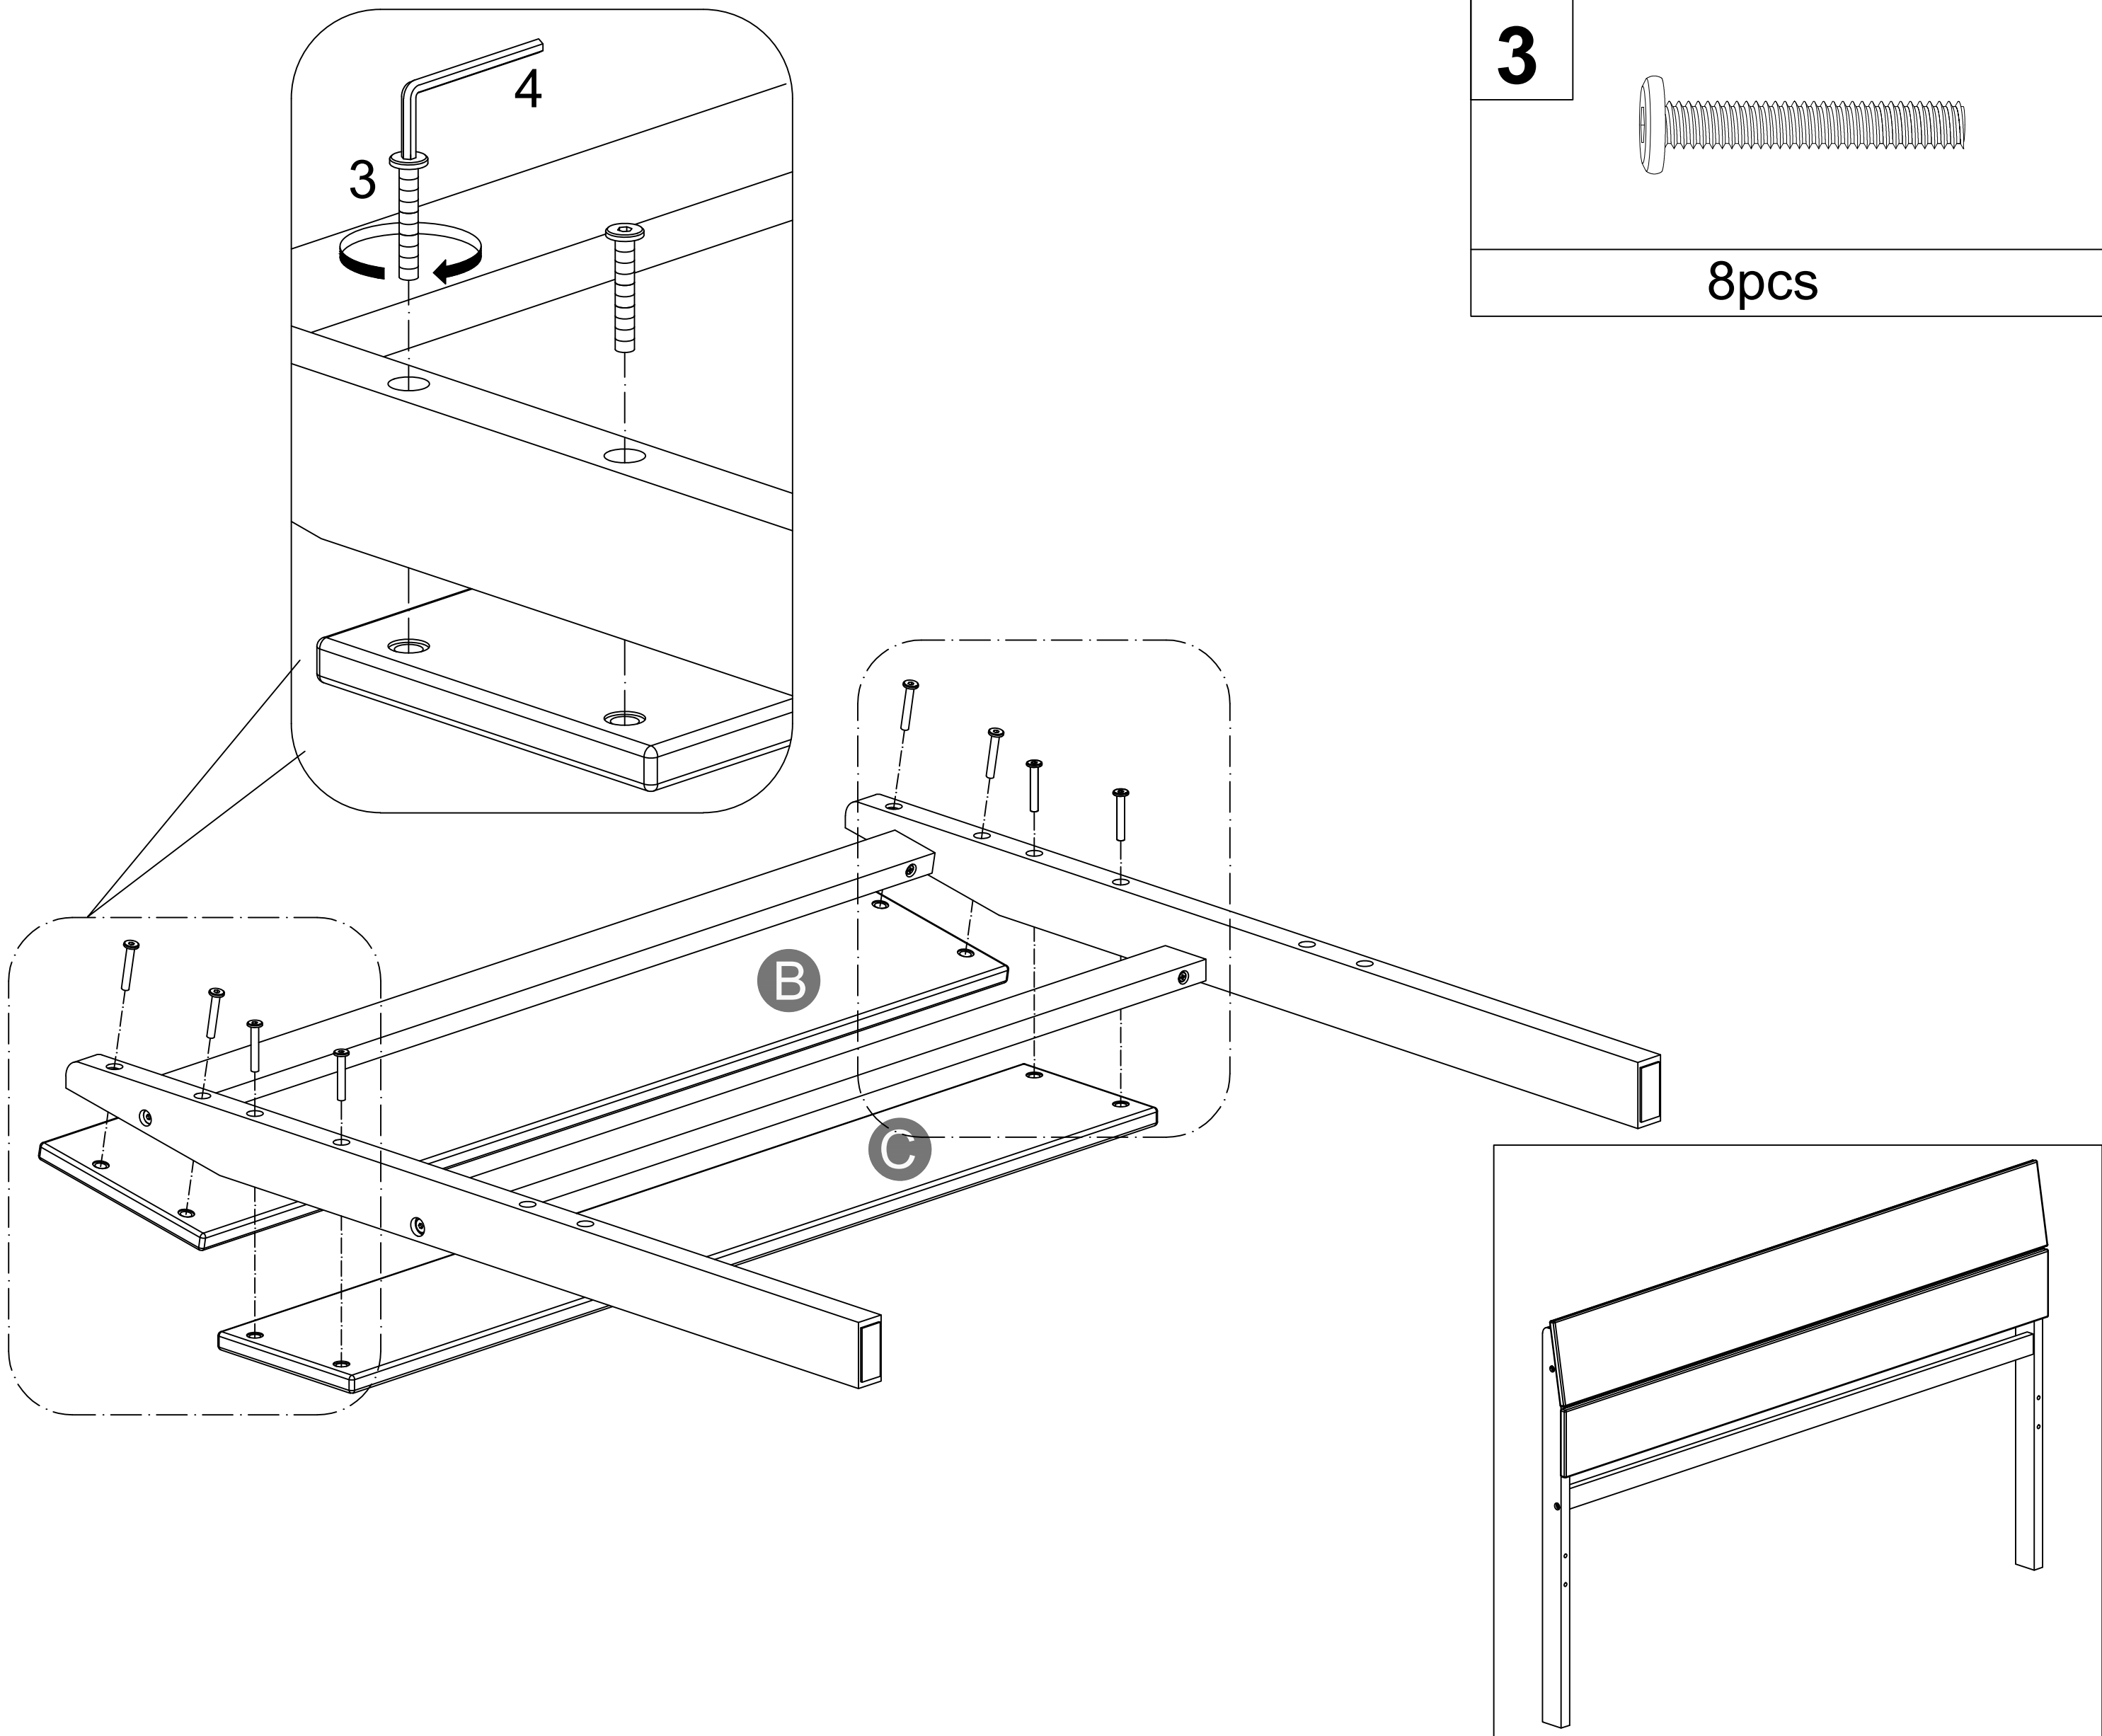


STEP 3:

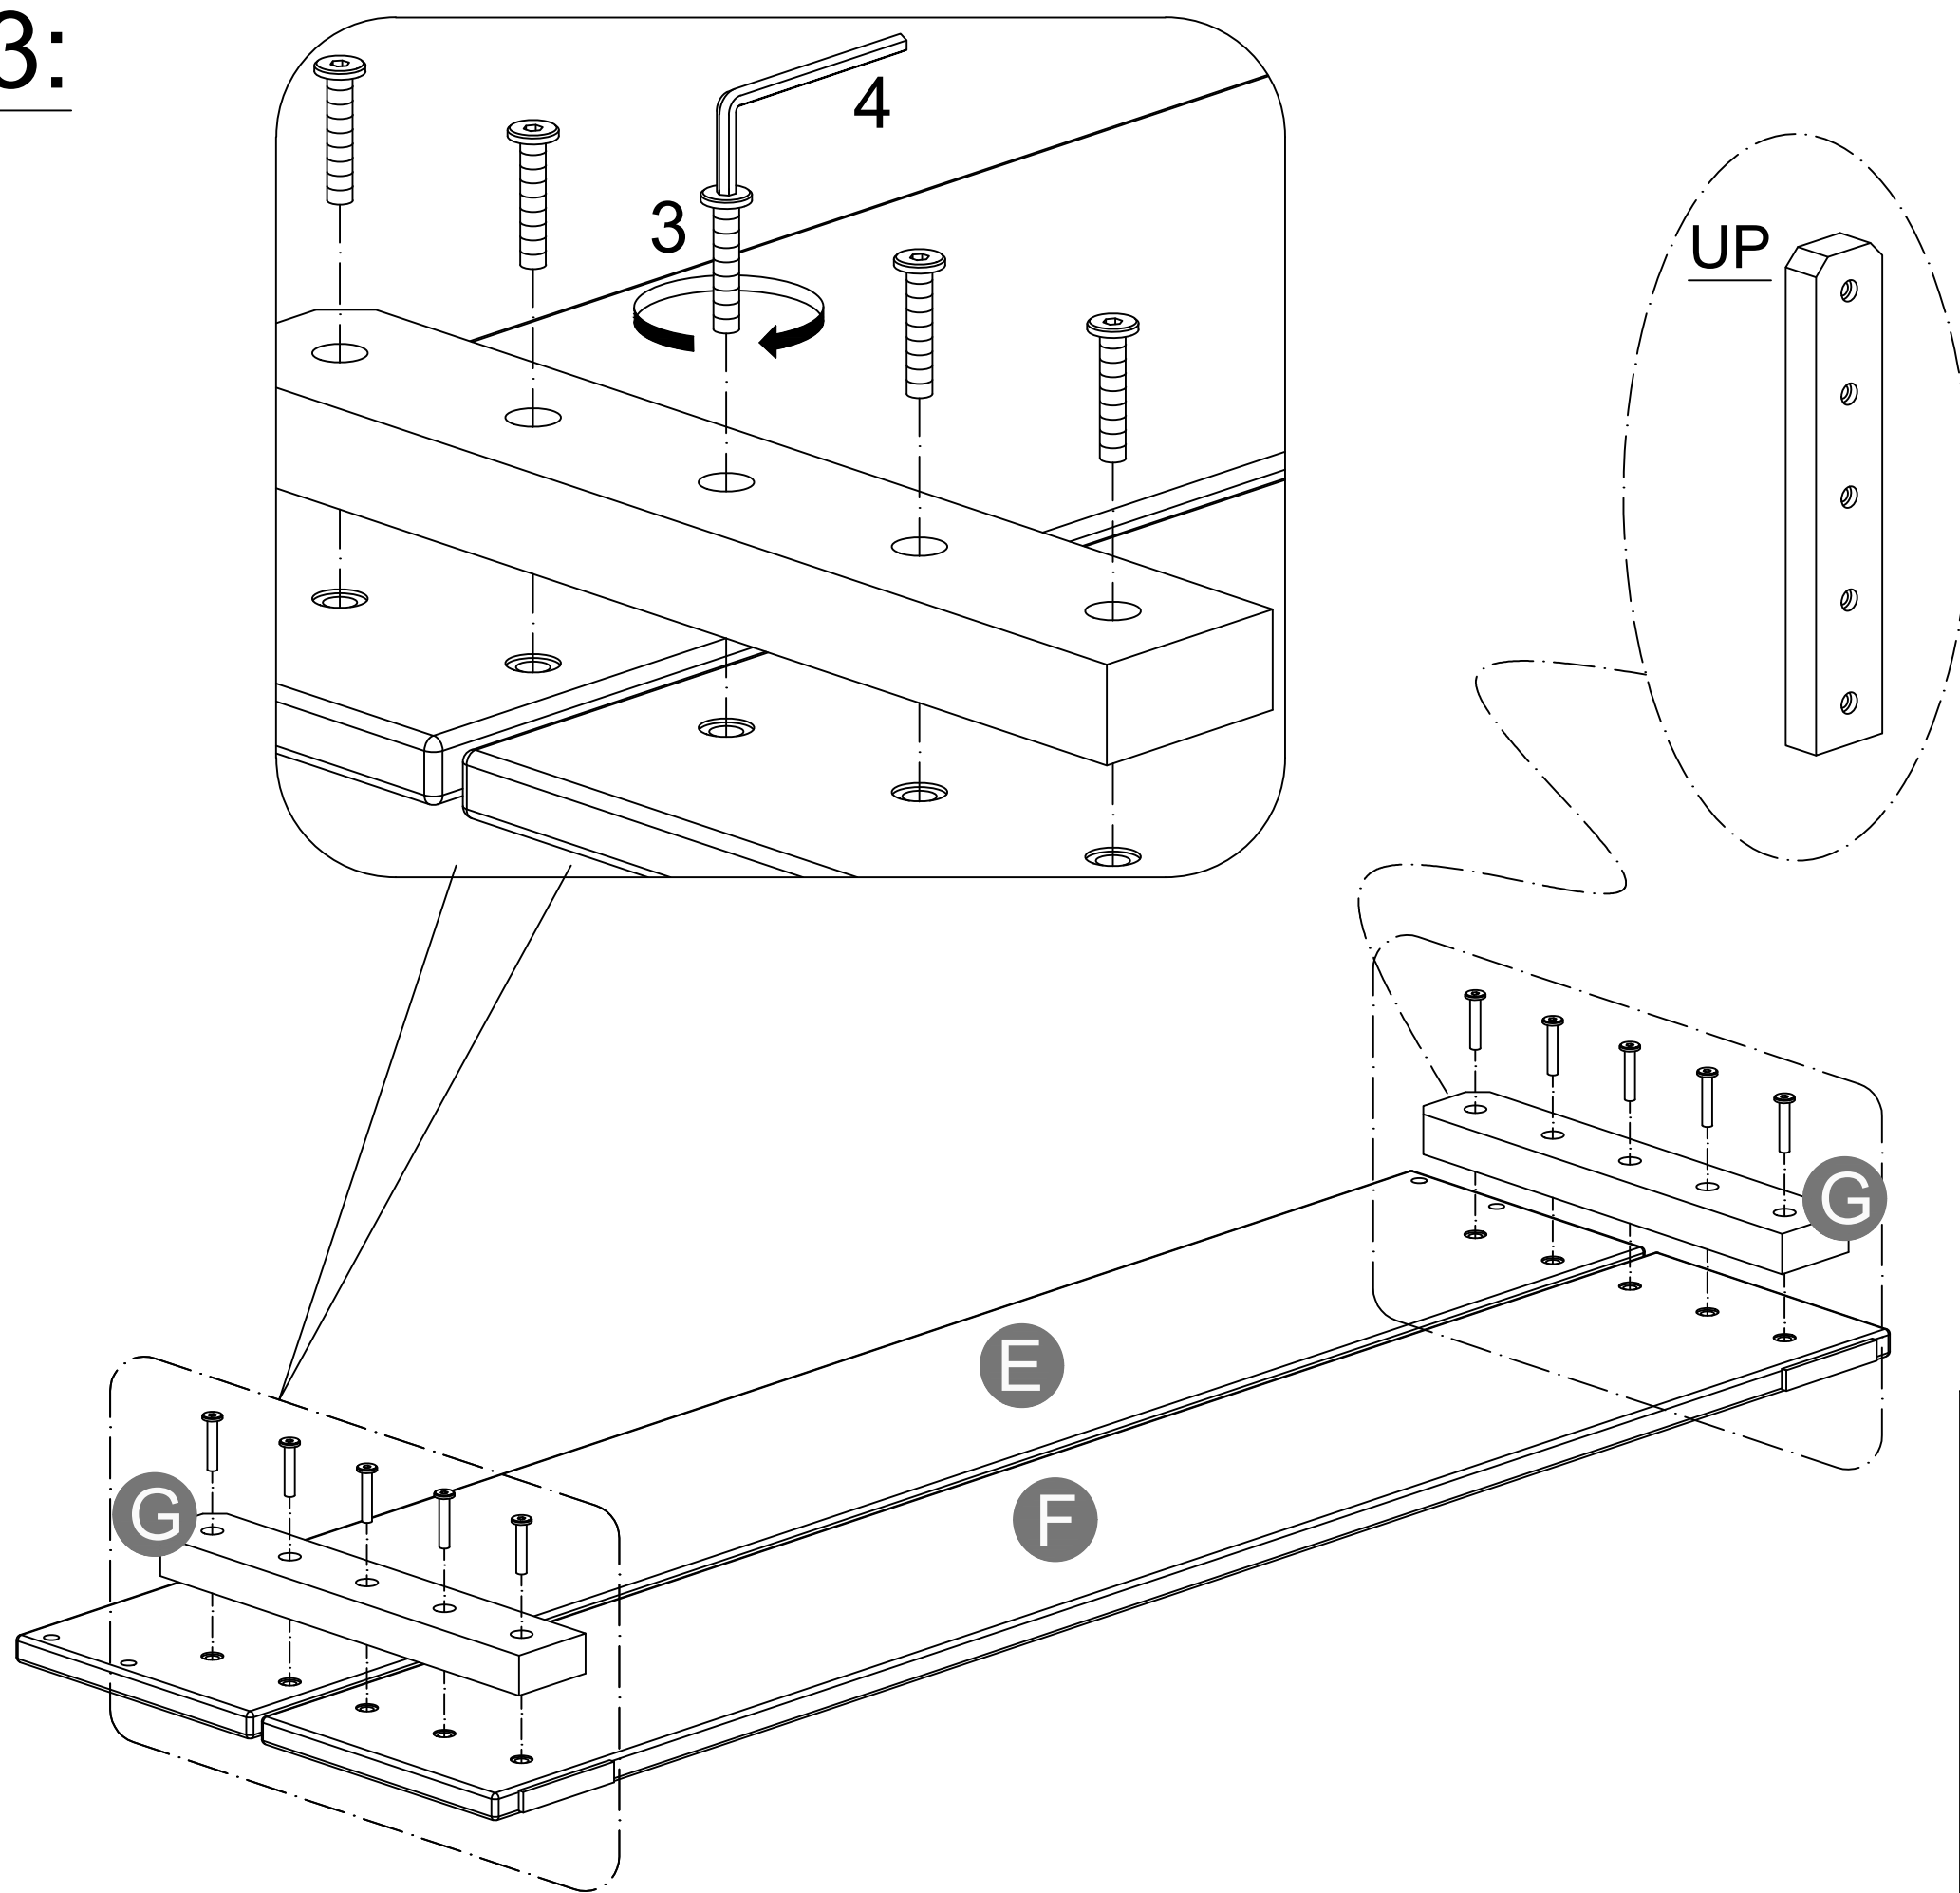


3

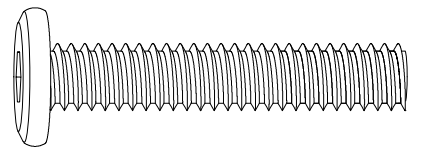


10pcs

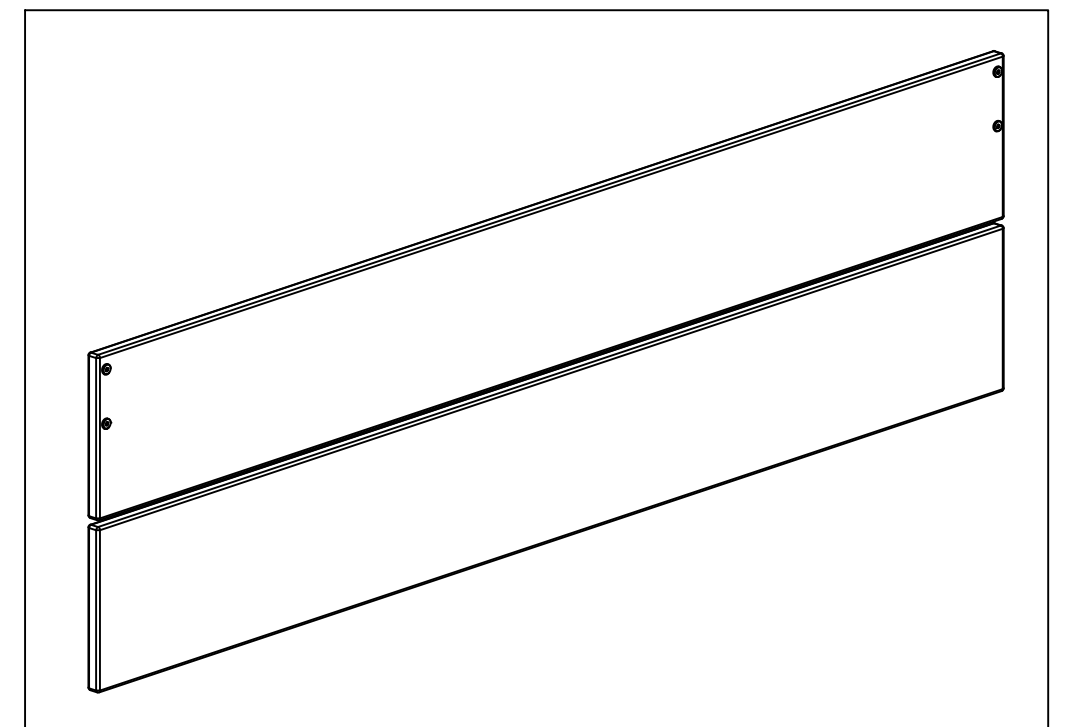

STEP 4:

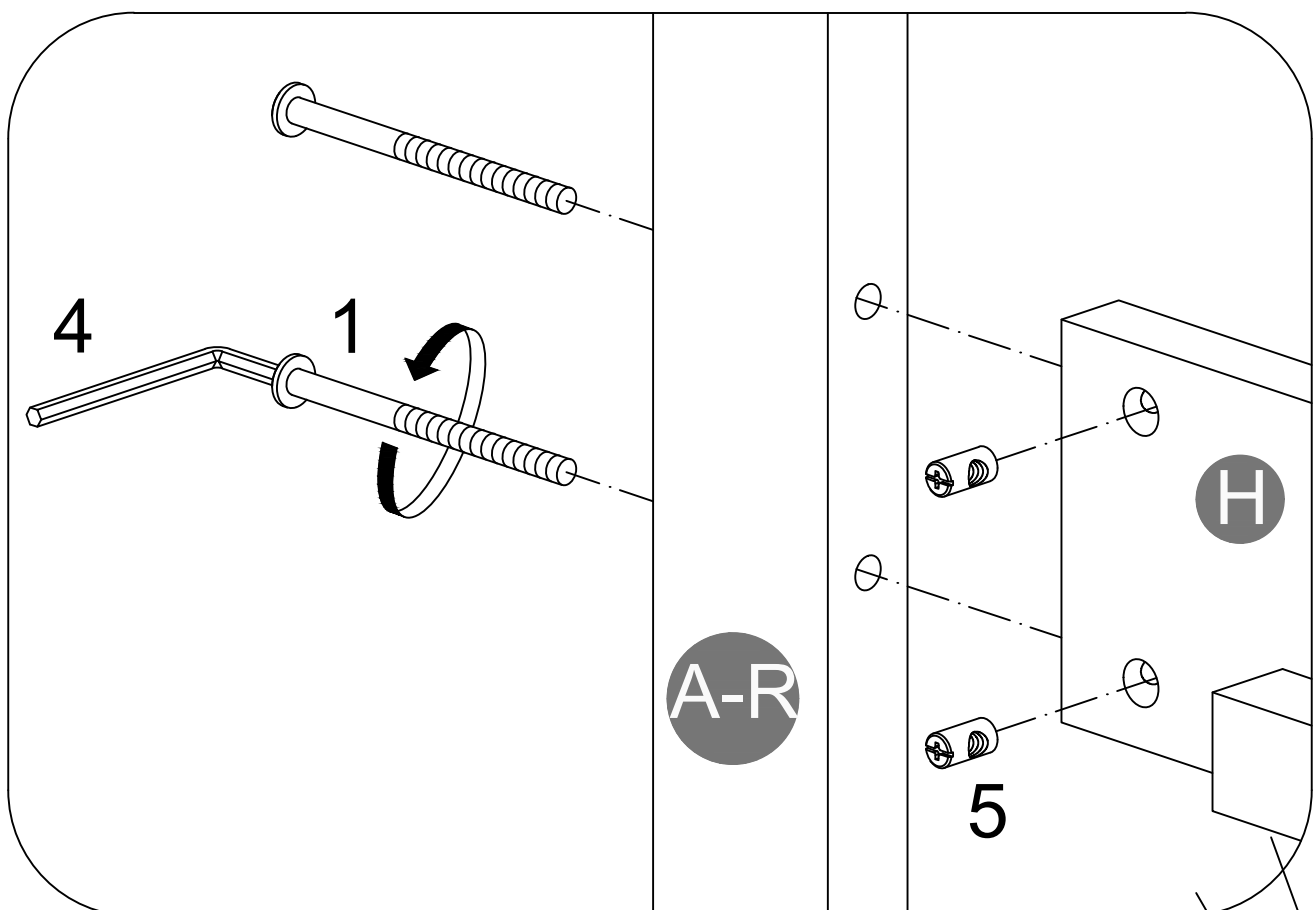


1




4pcs

2





4pcs

5


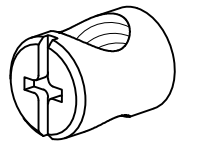





8pcs

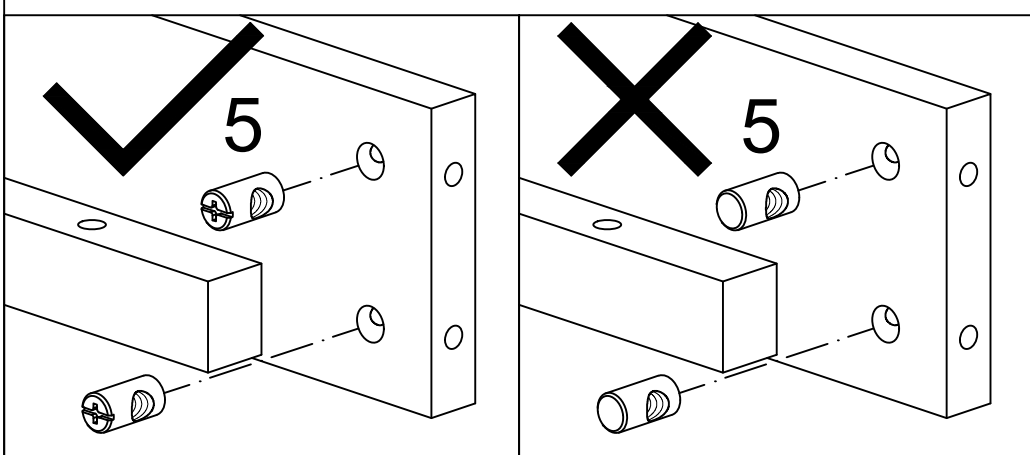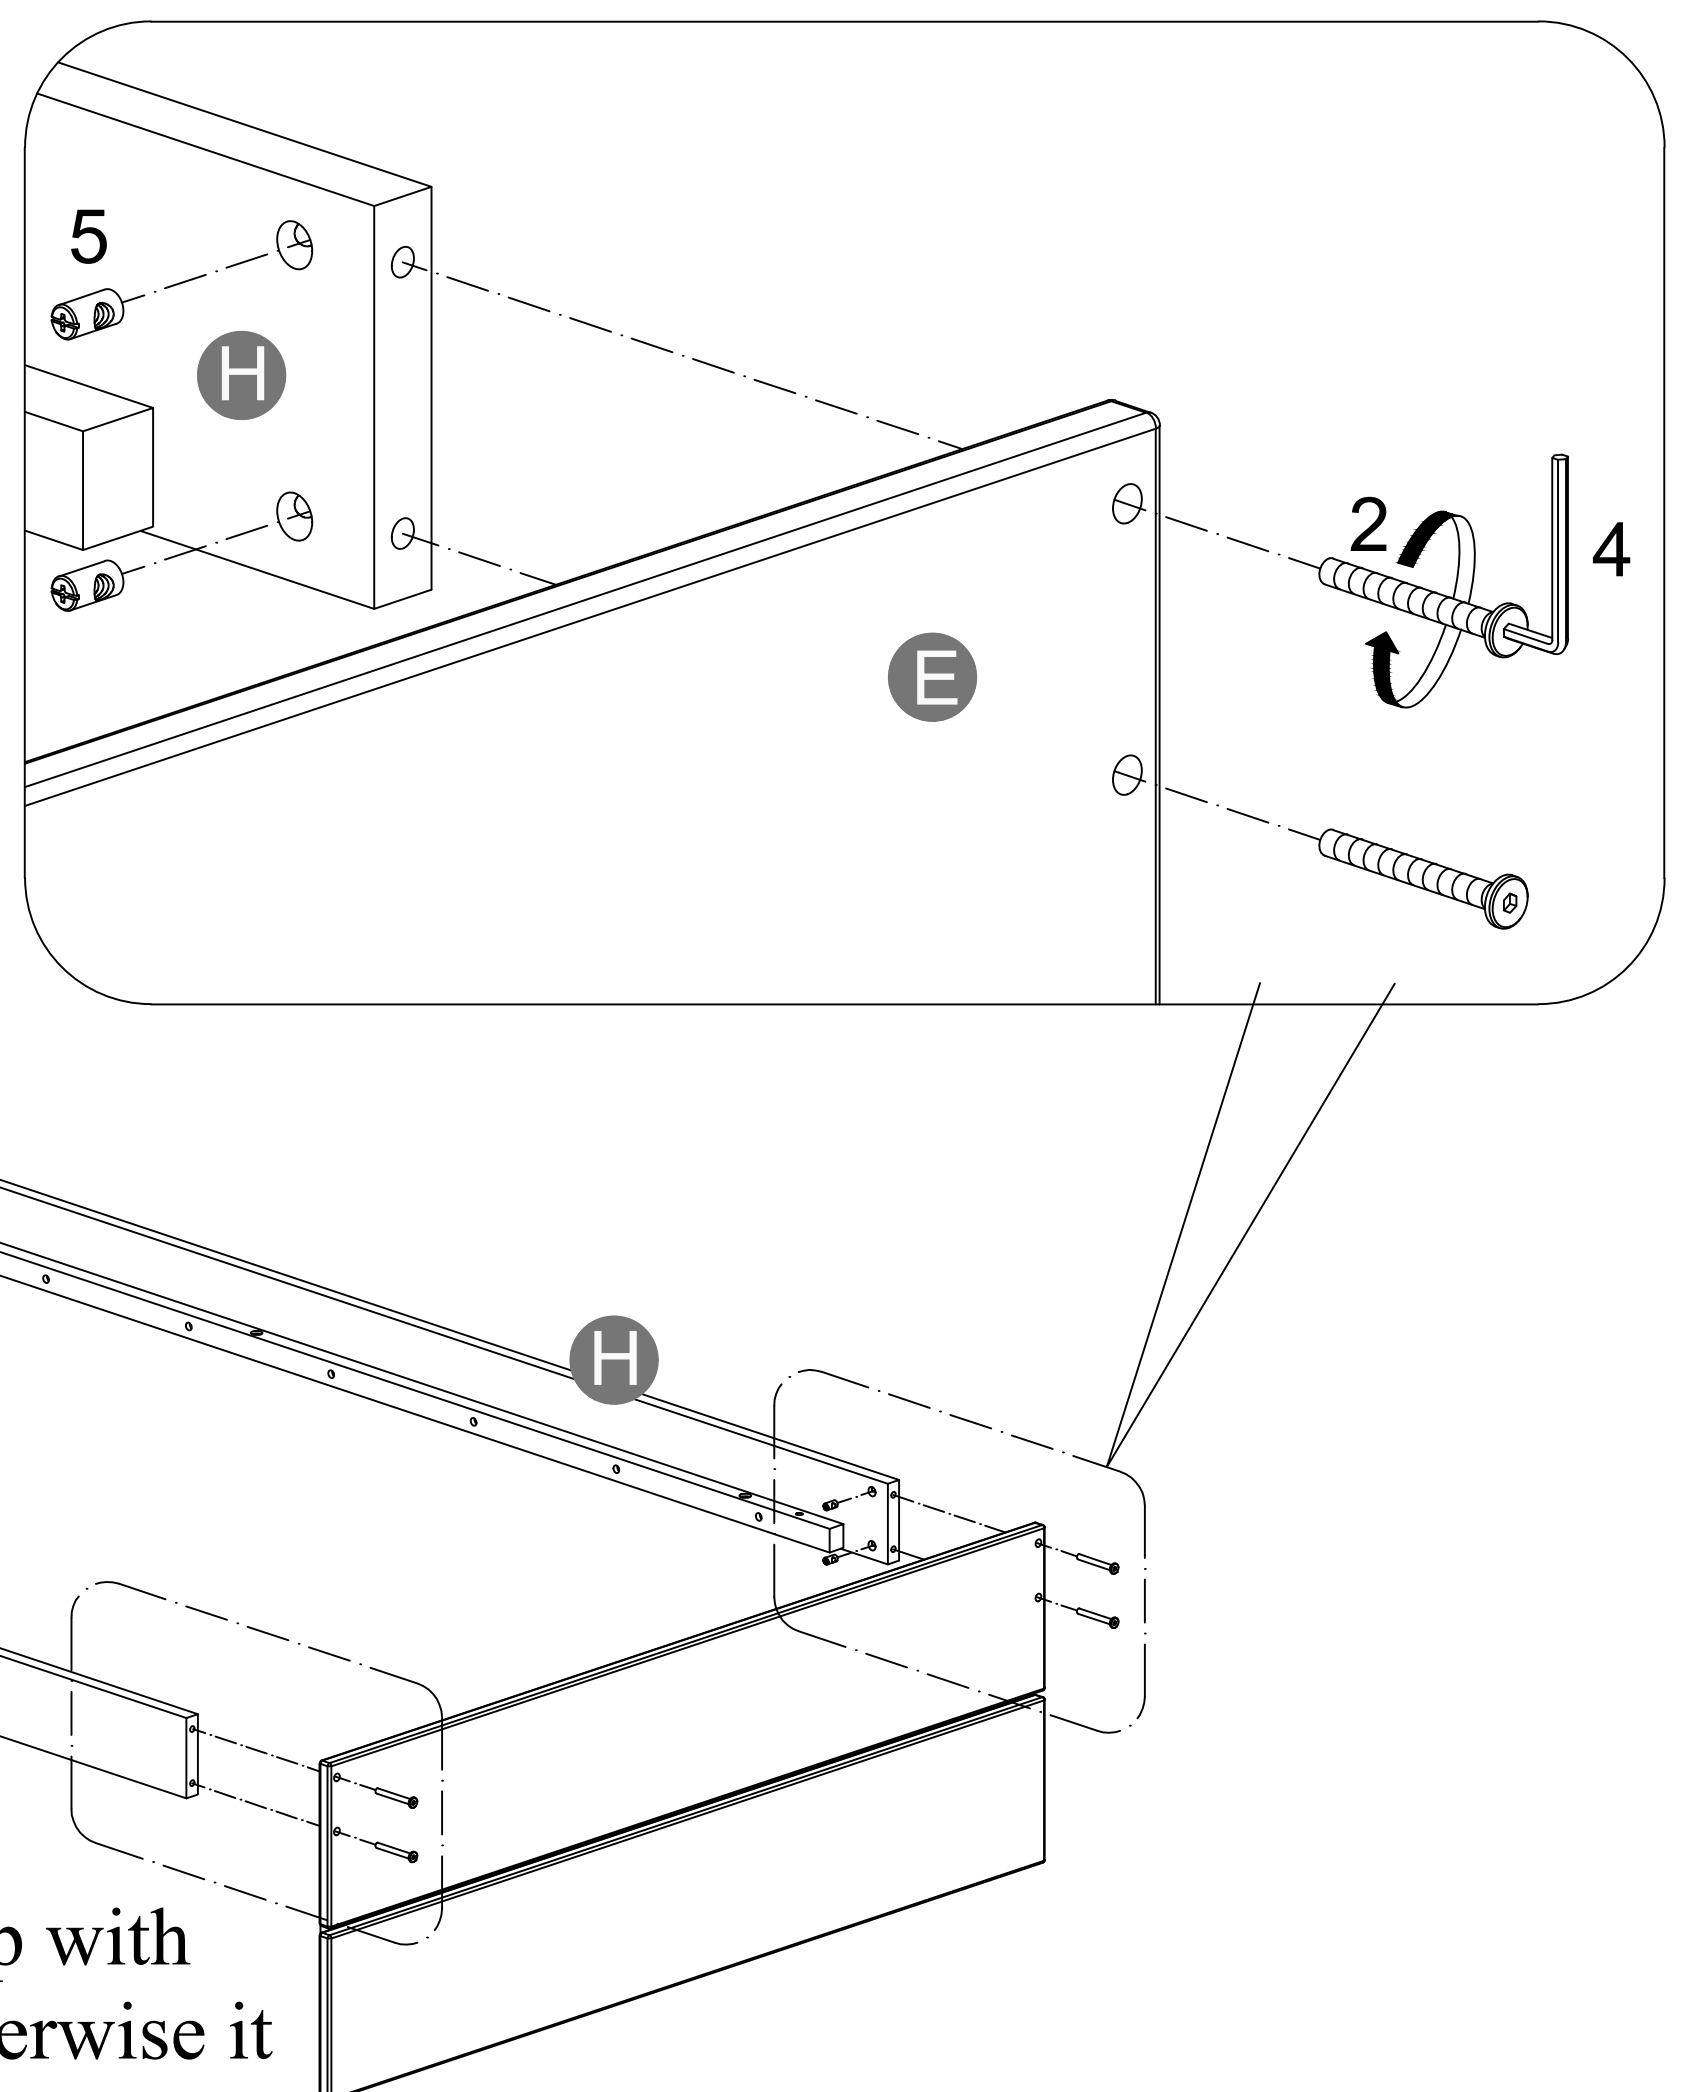

Note: Part 5 will face up with the "x" mark on it, otherwise it cannot be tightened

STEP 5:

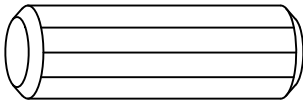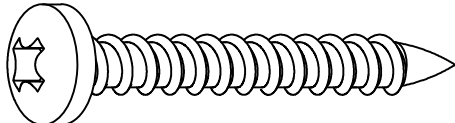
6		7	
4pcs		8 pcs	

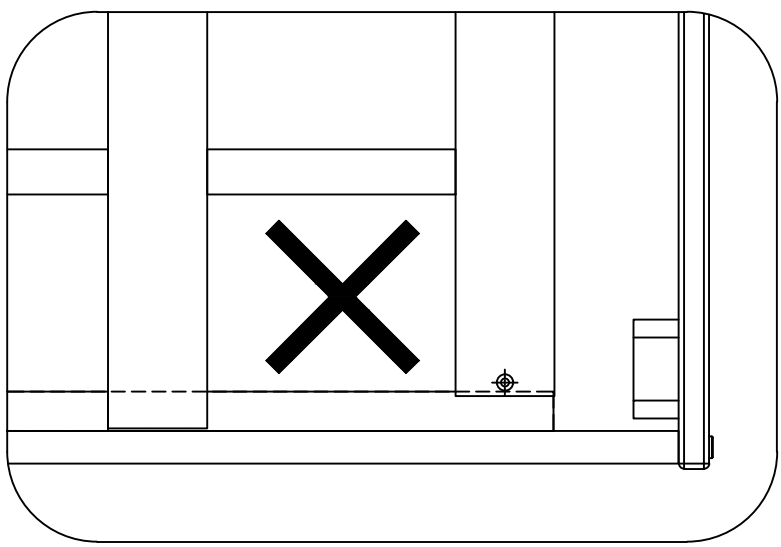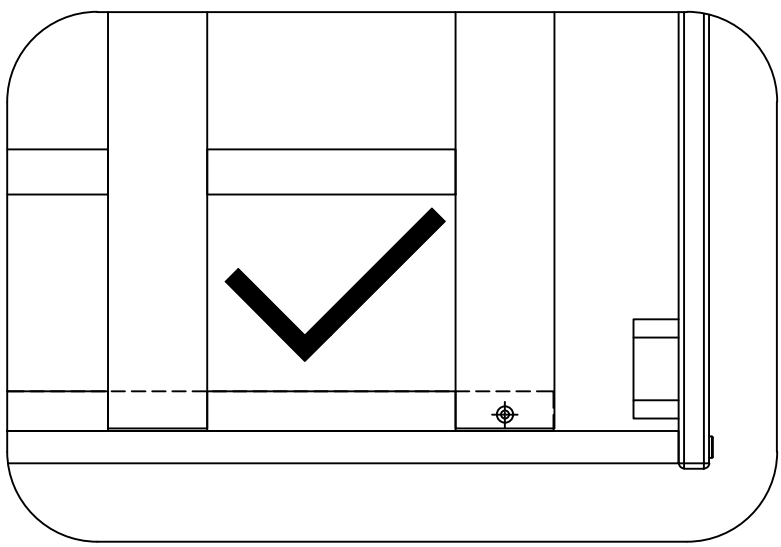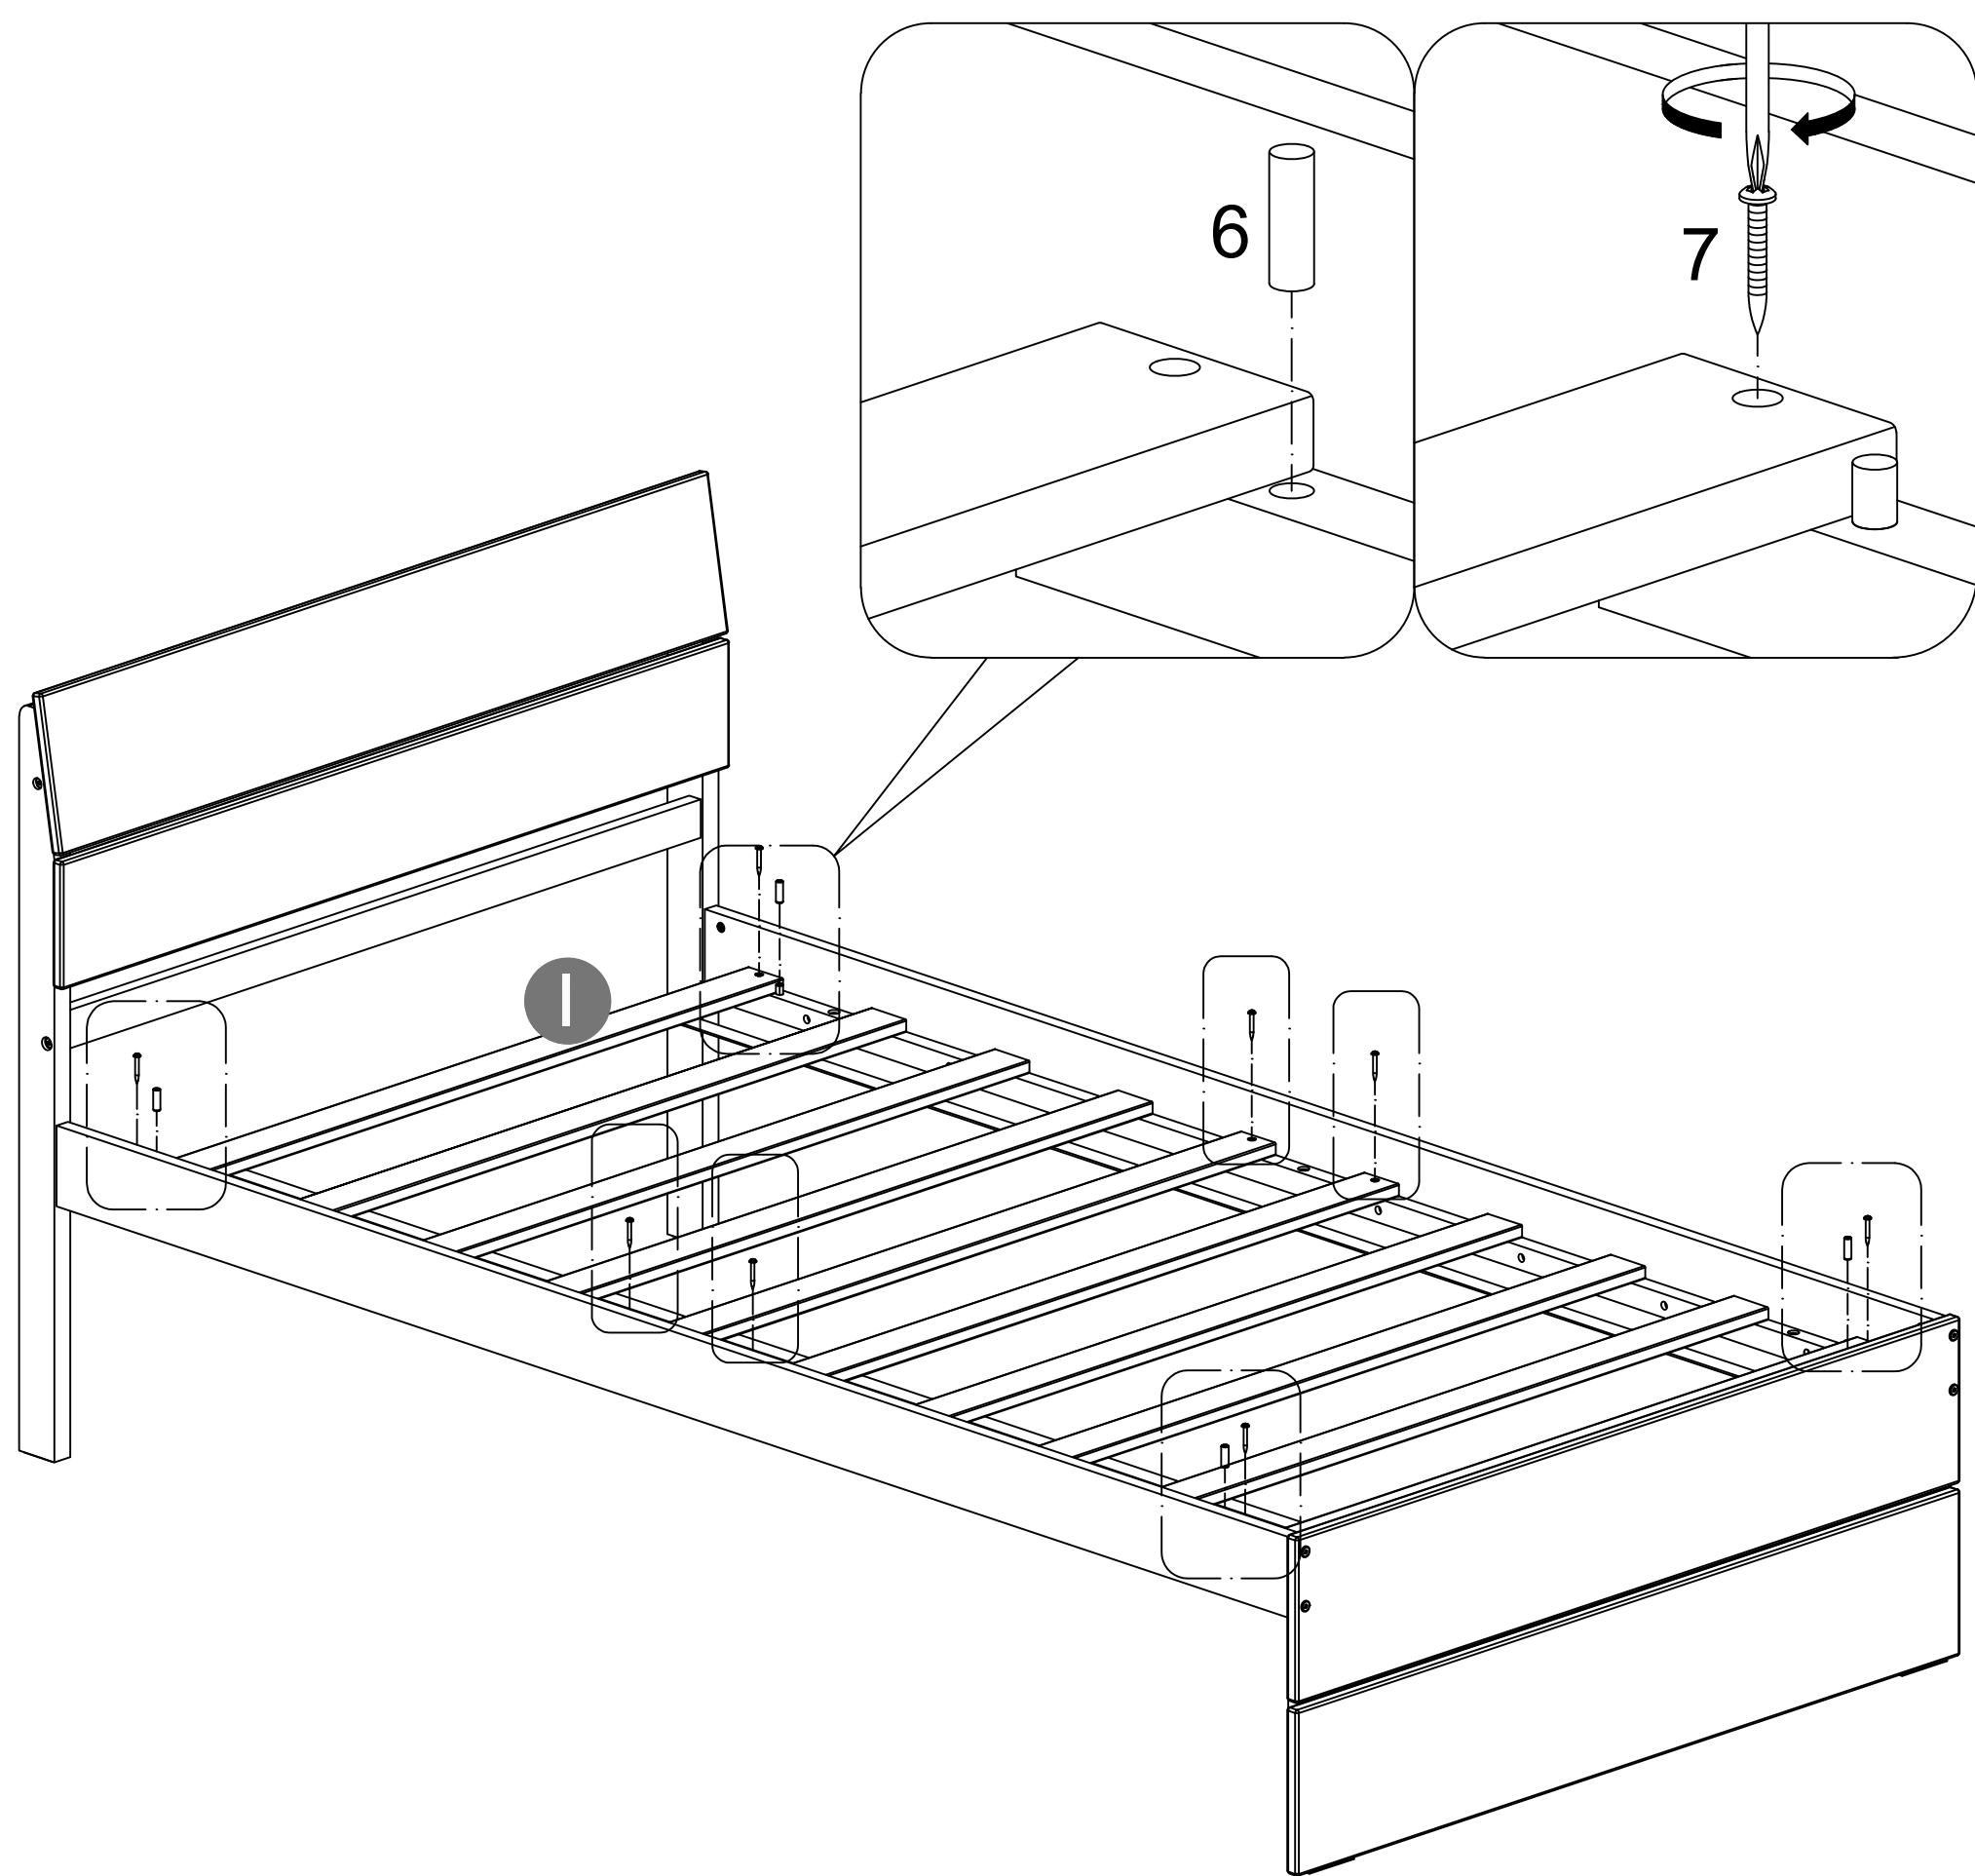

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing , hold it in place with one hand, then lock the screw.


STEP 6:

11






8 pcs

15

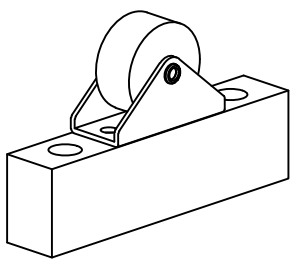


4pcs


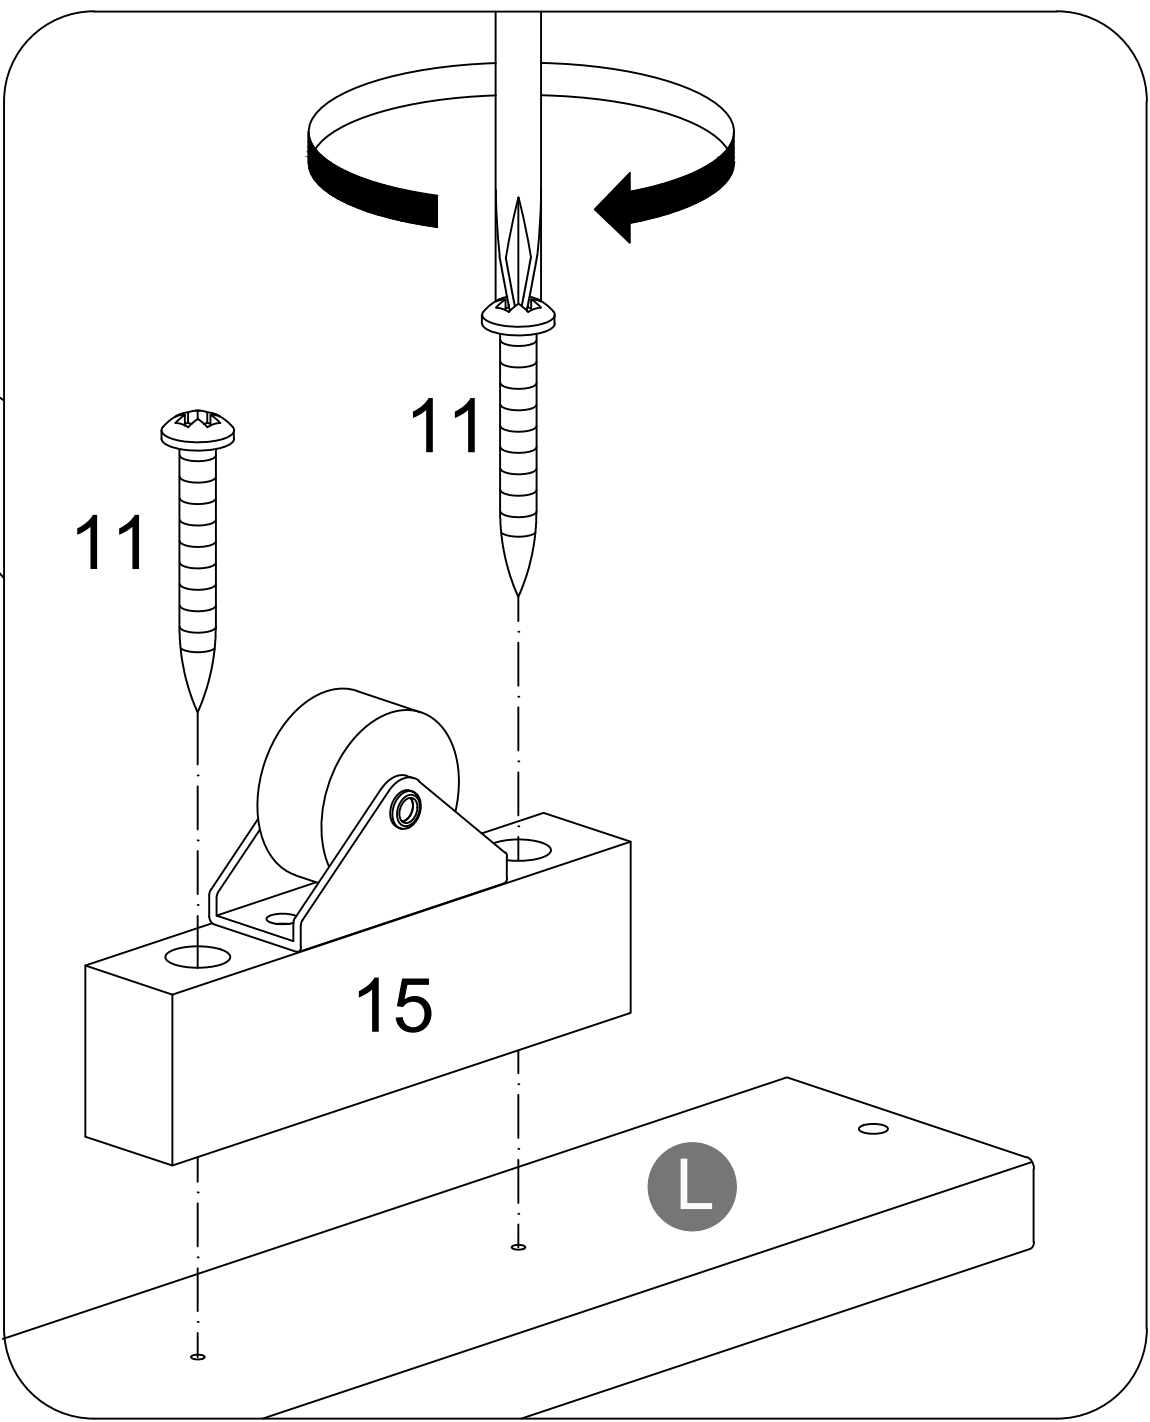
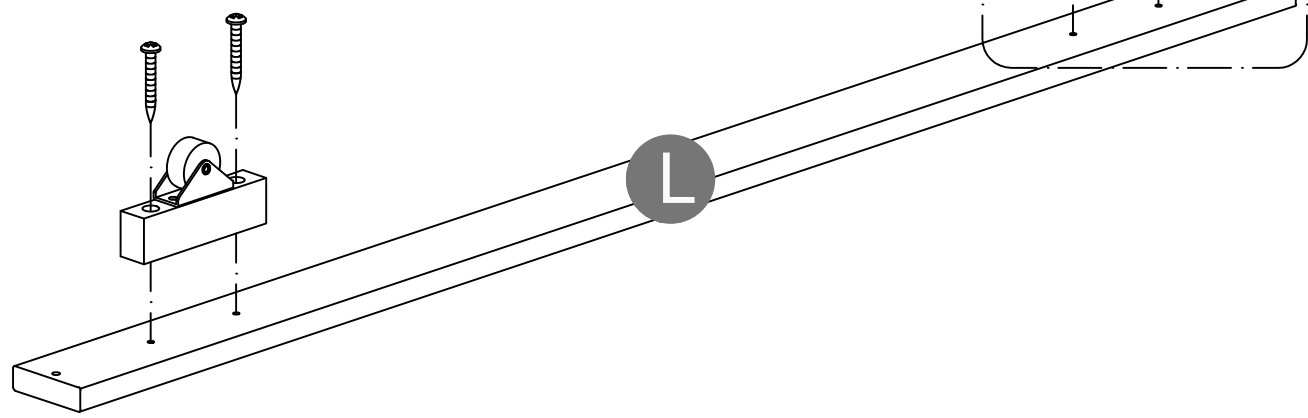
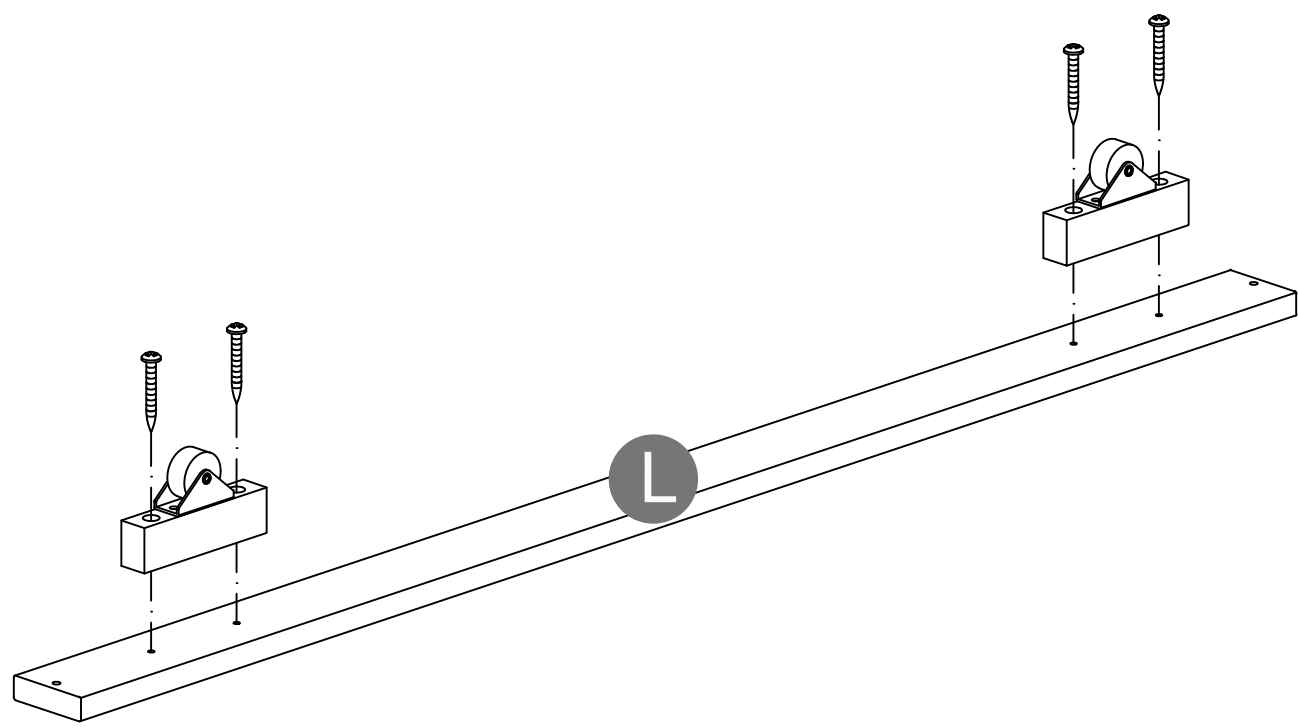


STEP 7:

11

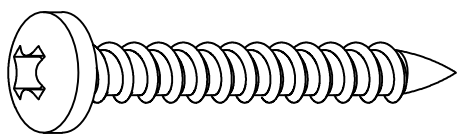


14 pcs

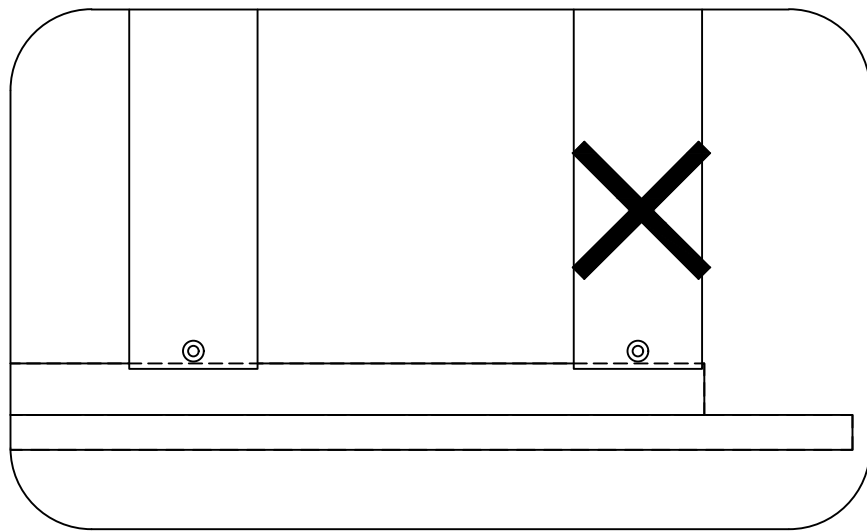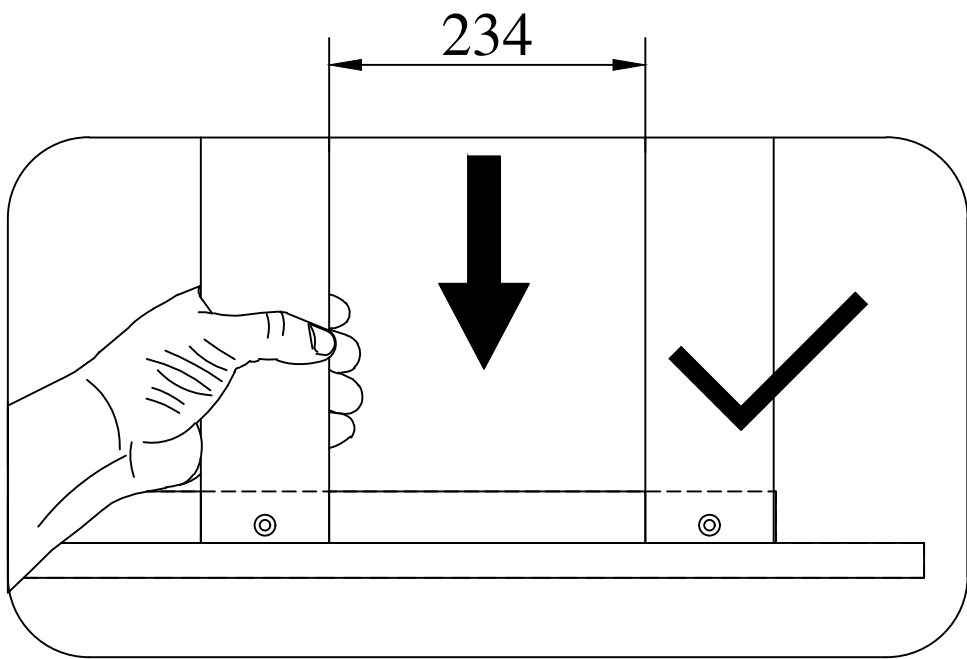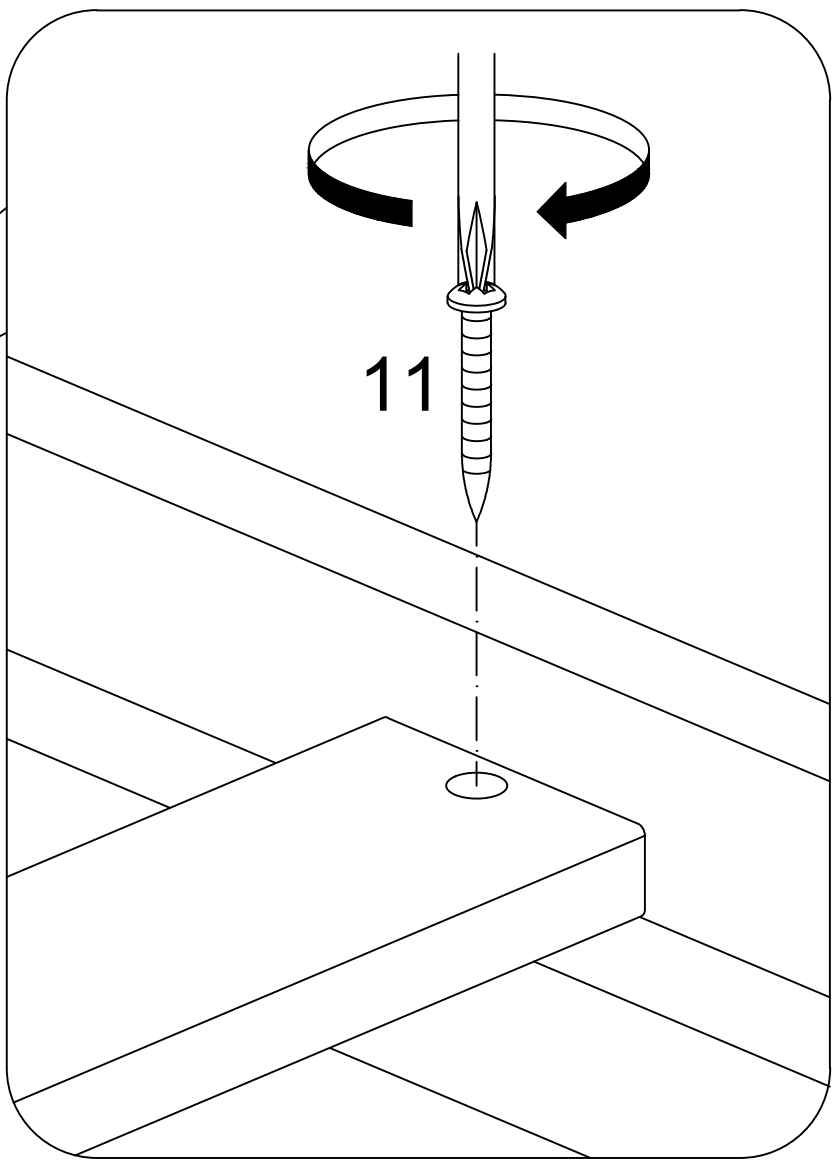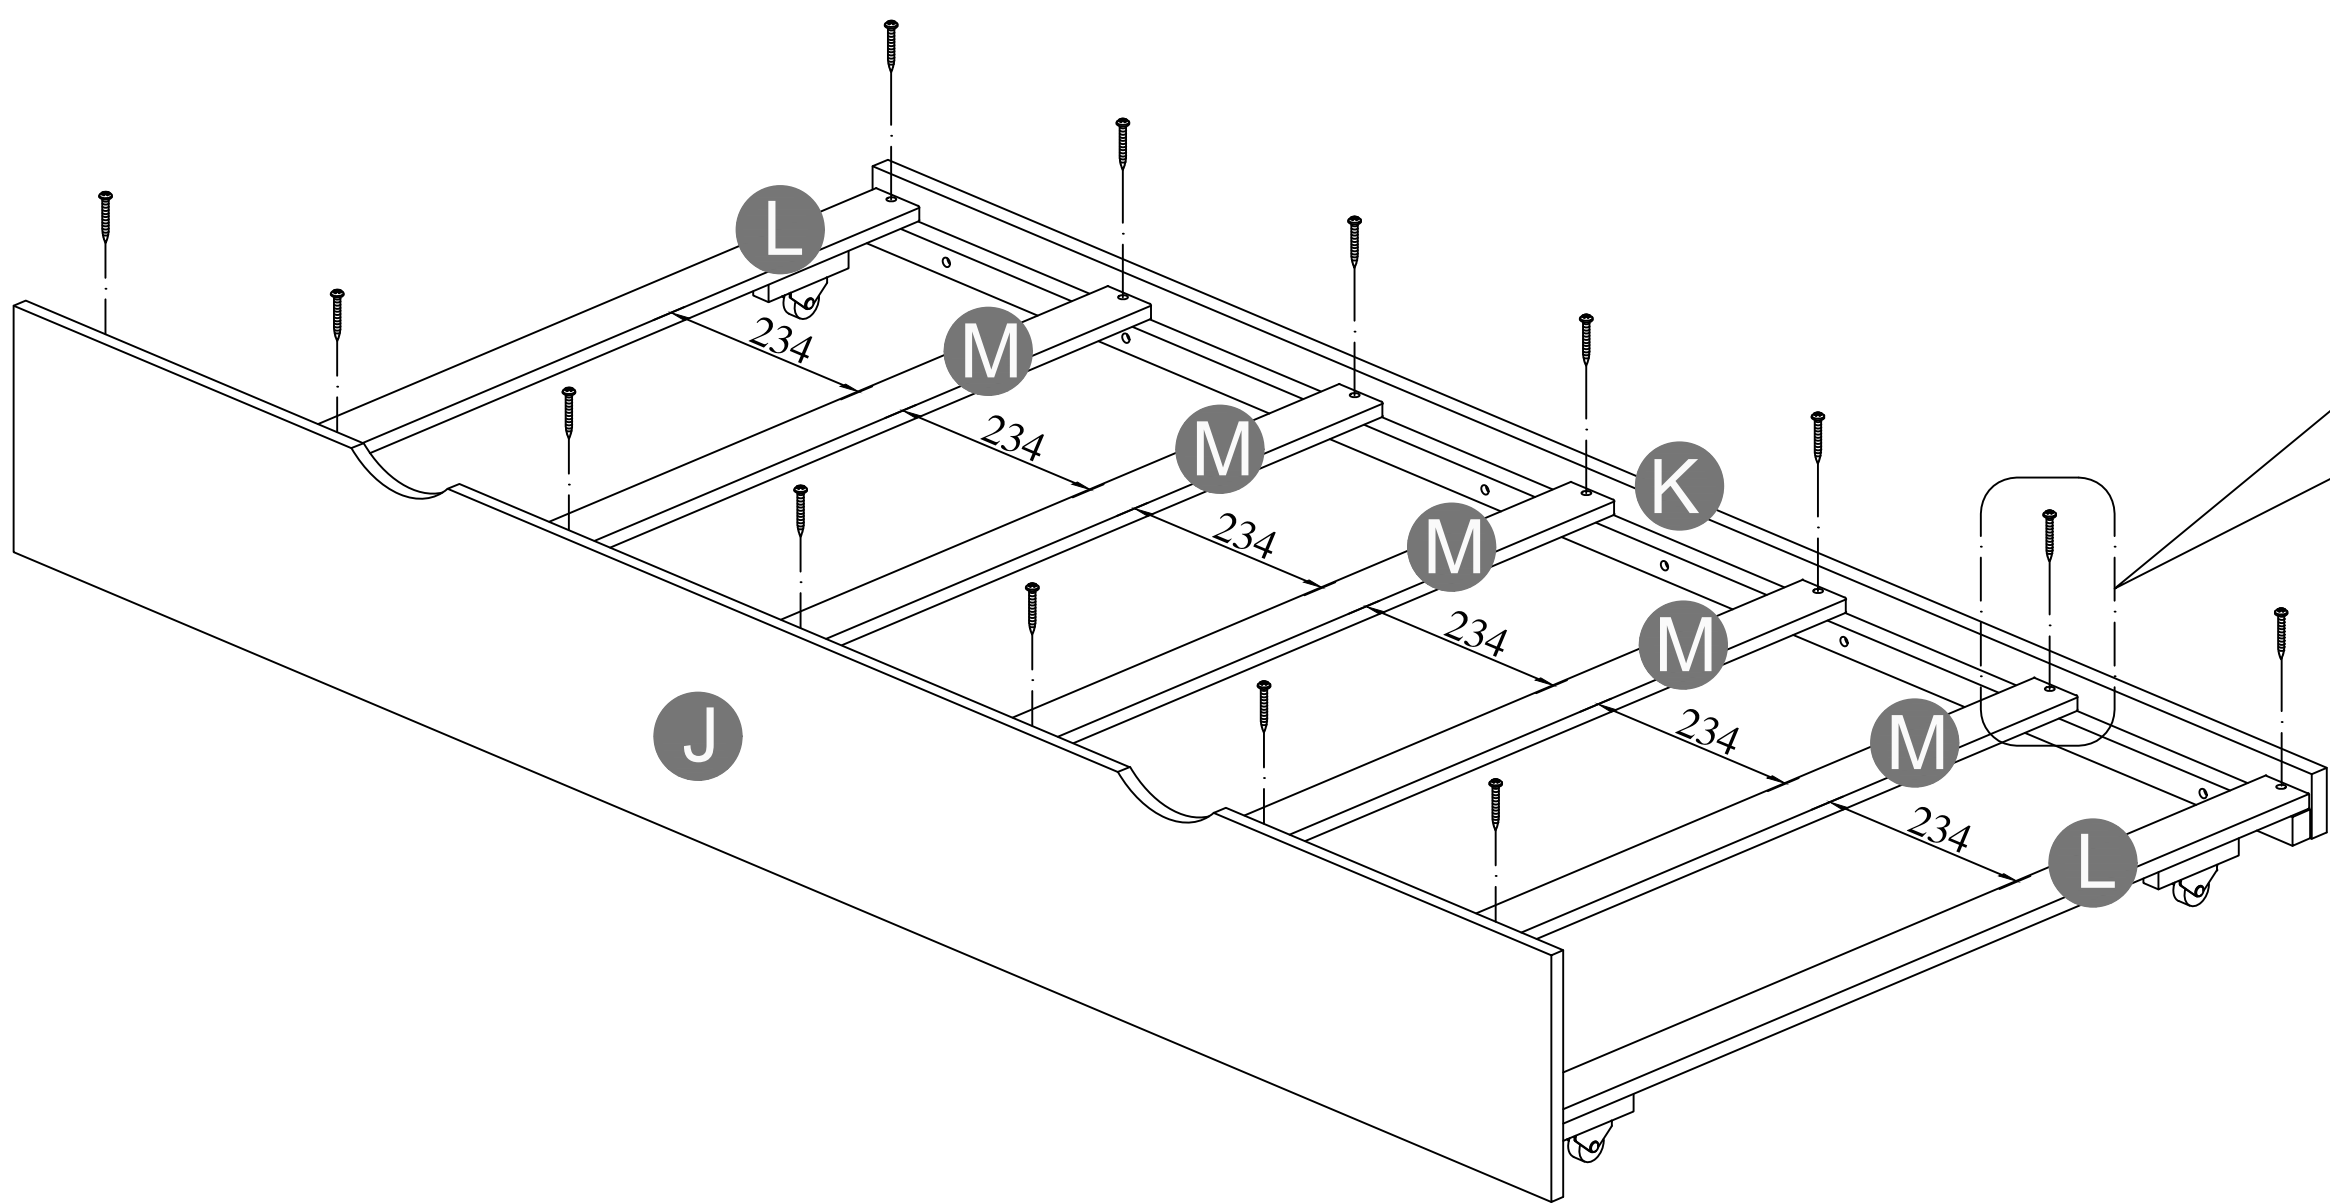


Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing , hold it in place with one hand, then lock the screw


STEP 8:

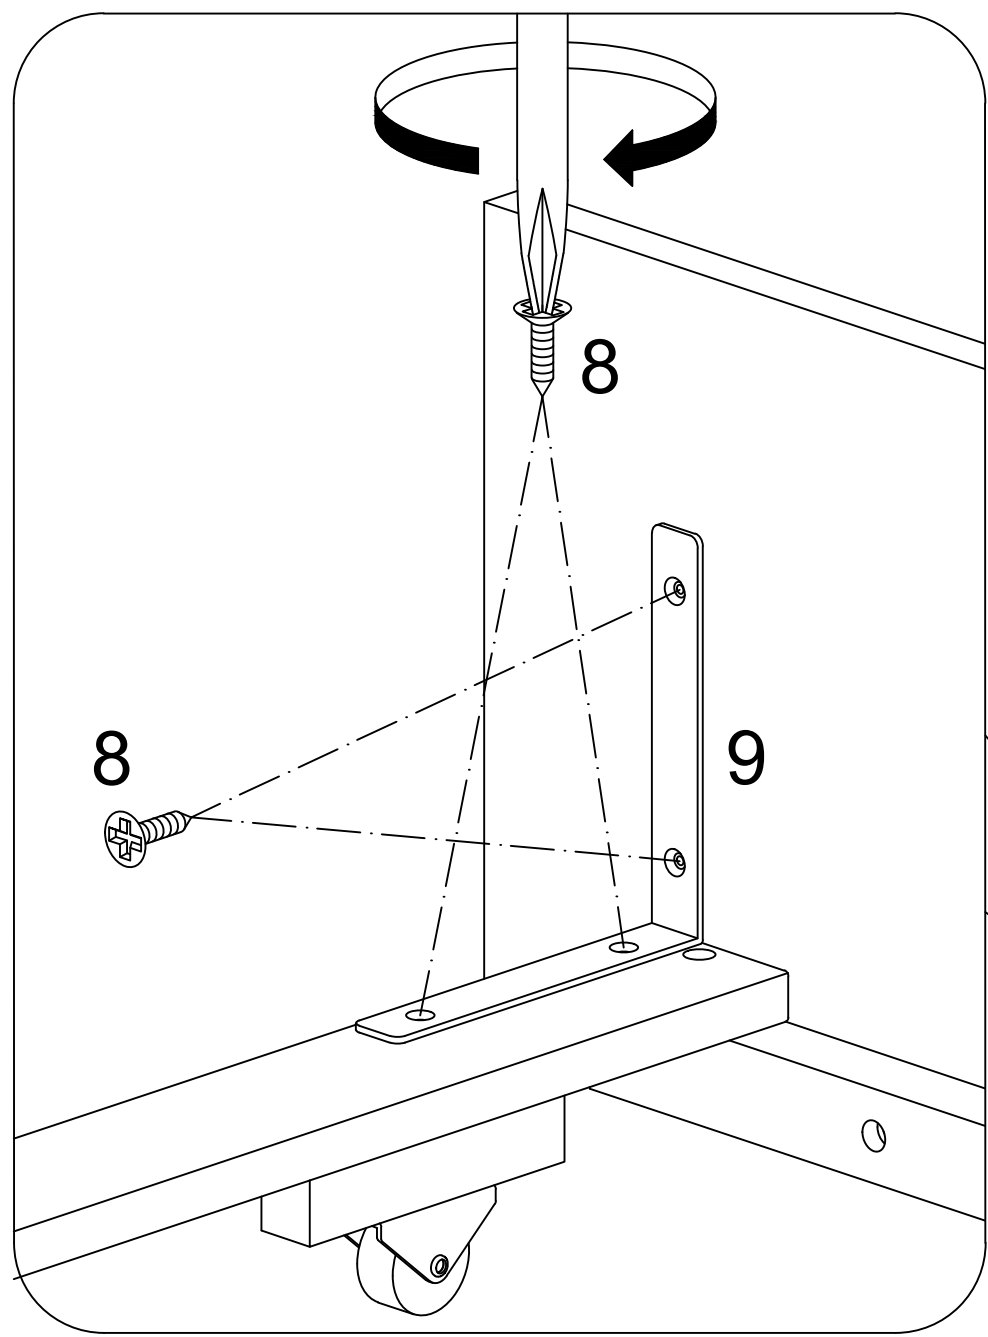


9		8	
2pcs		8 pcs	

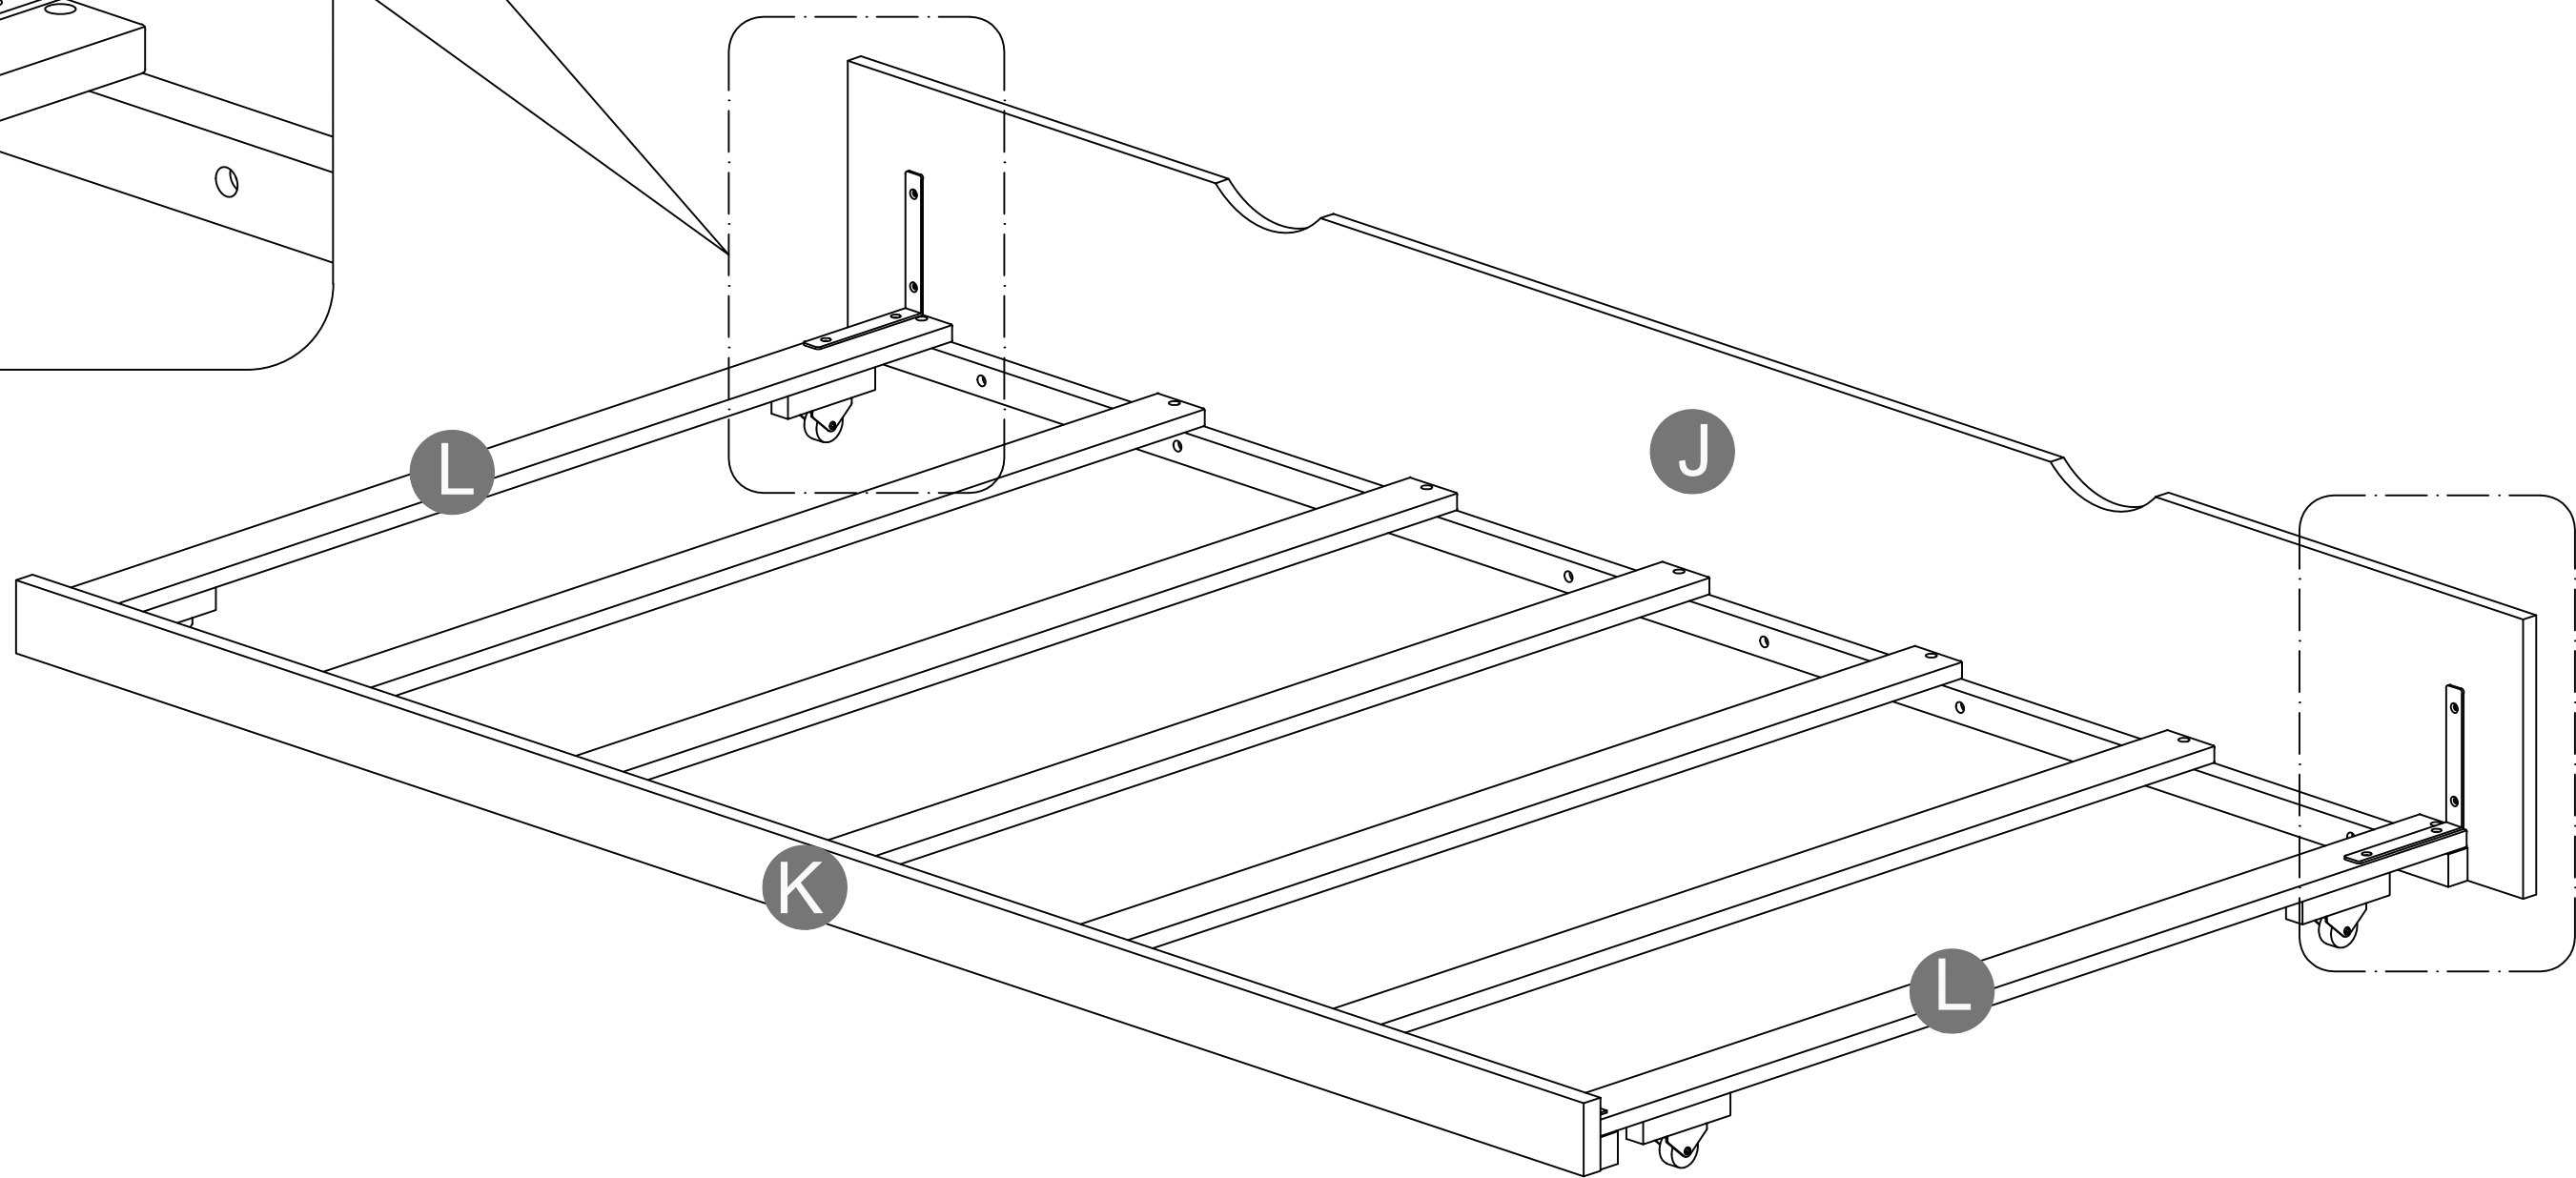




STEP 9:

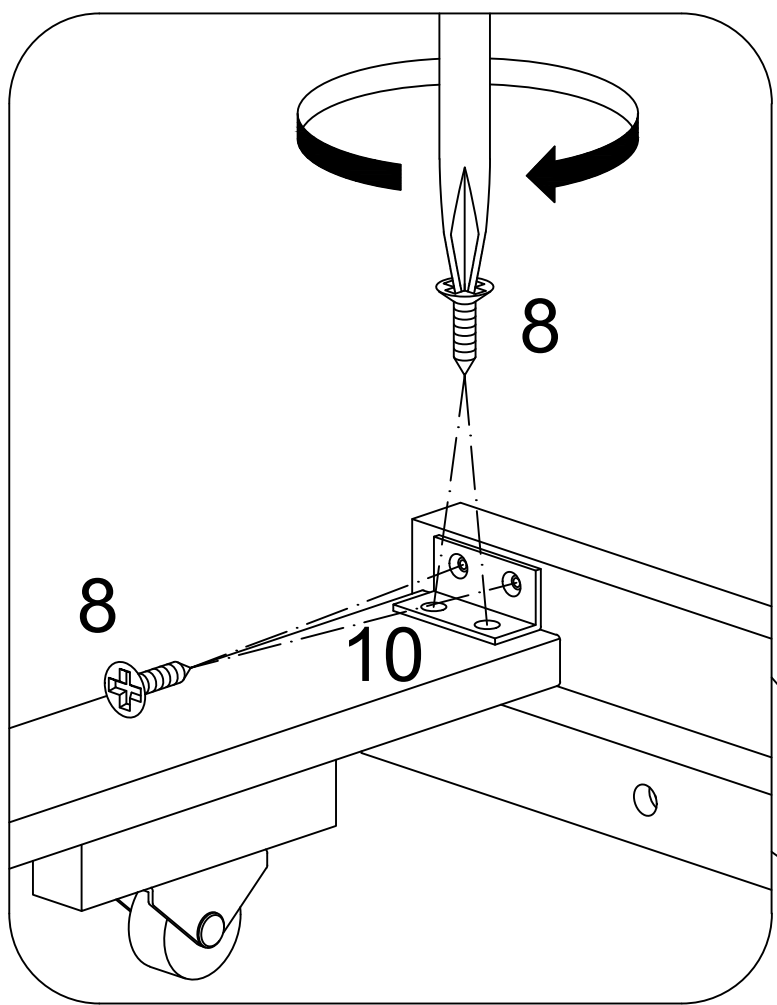


10		8	
2pcs		8 pcs	


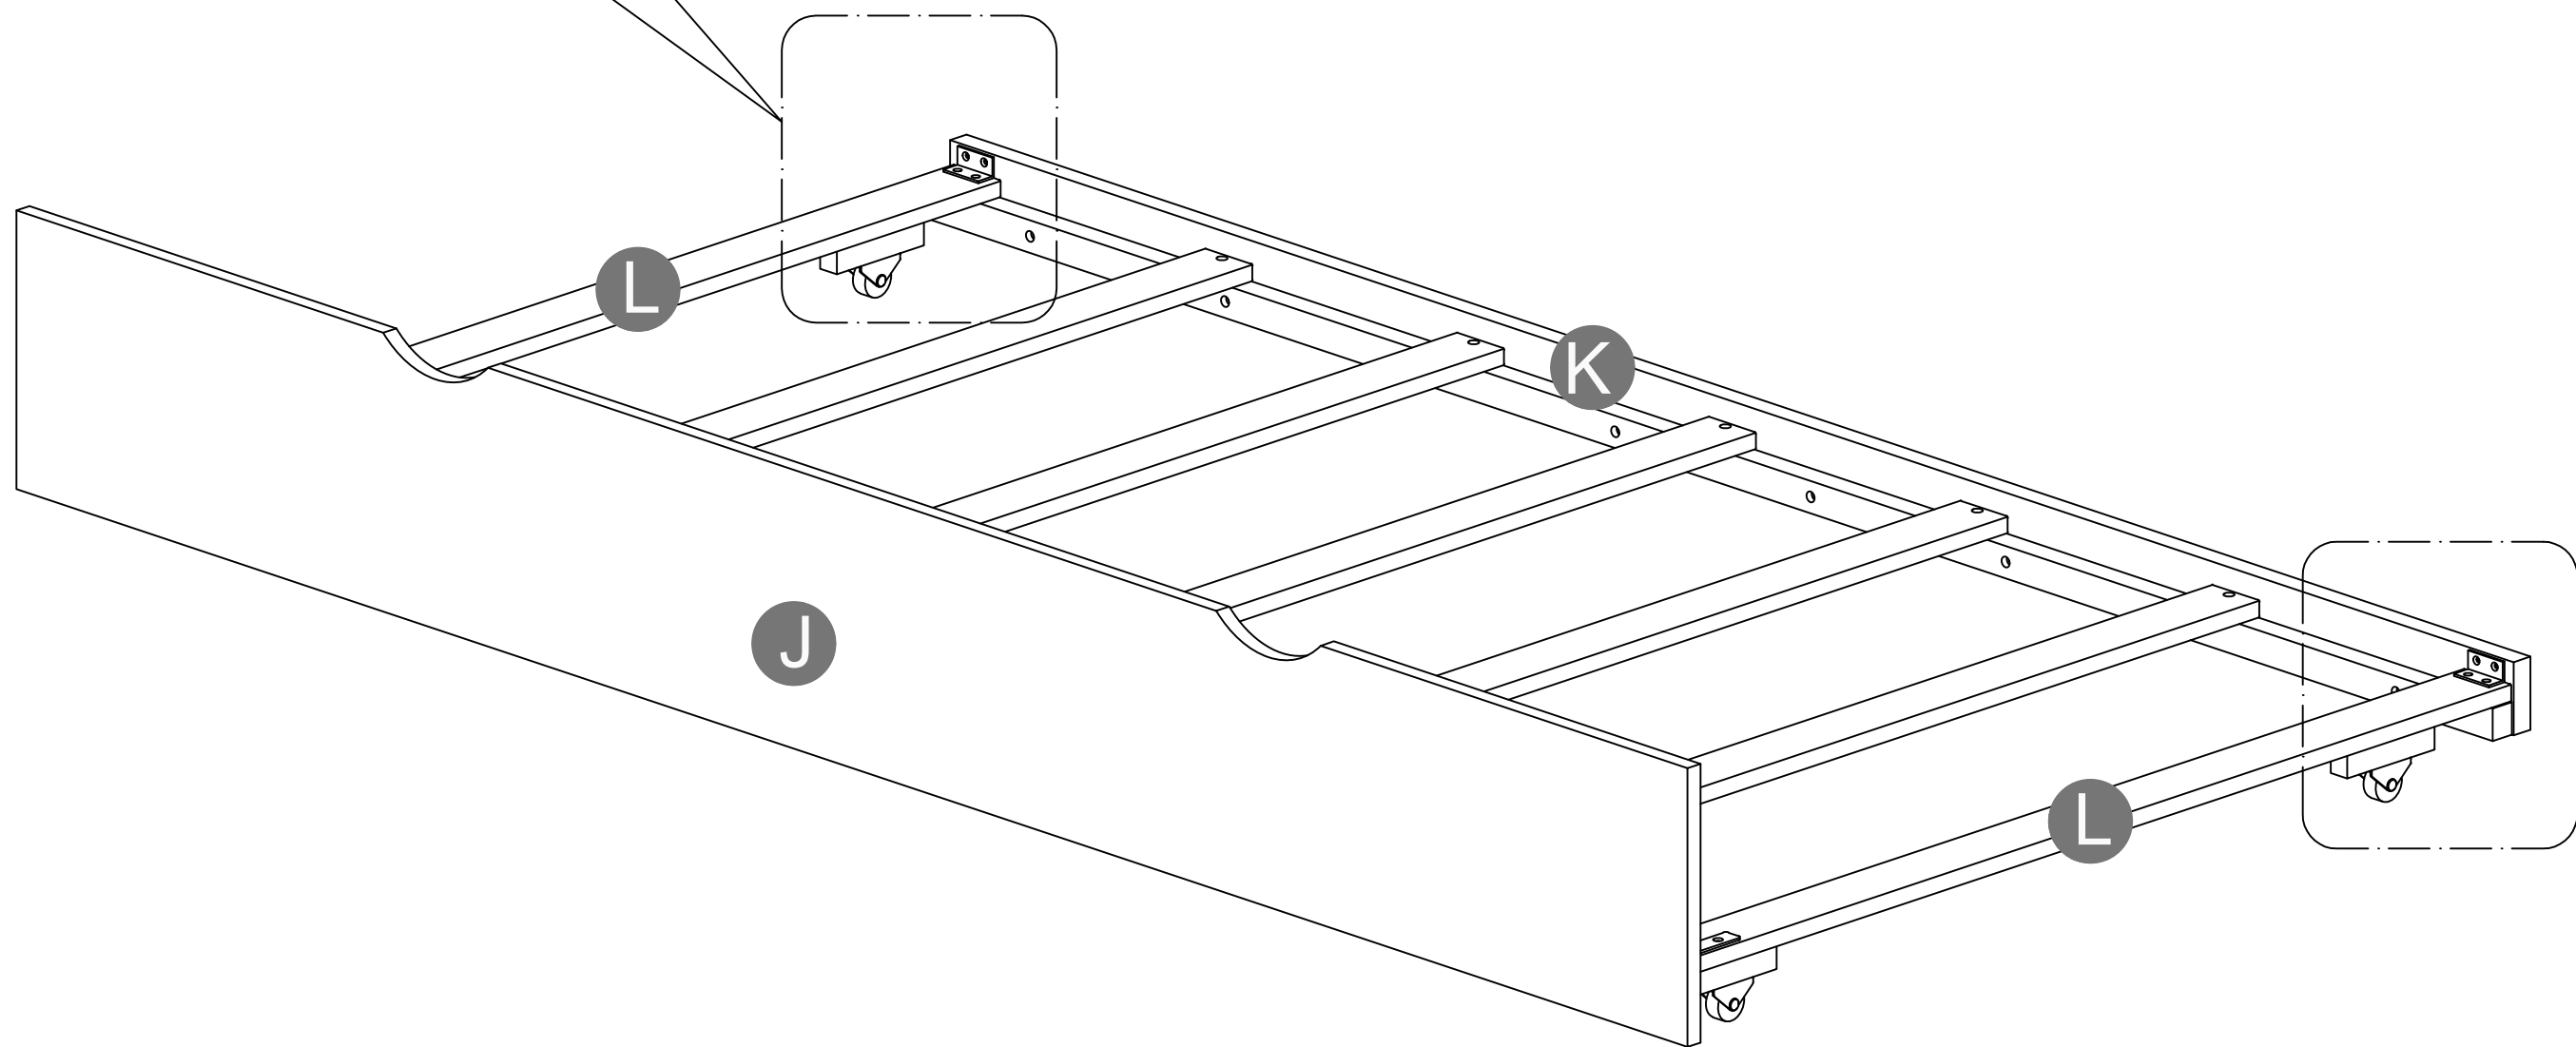


STEP 10:

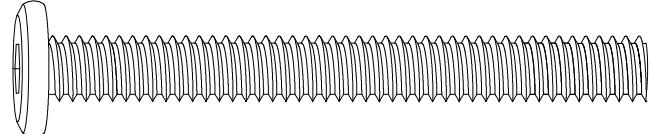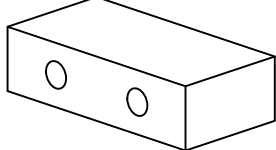12		
2pcs		
13		16
2pcs		
		2pcs

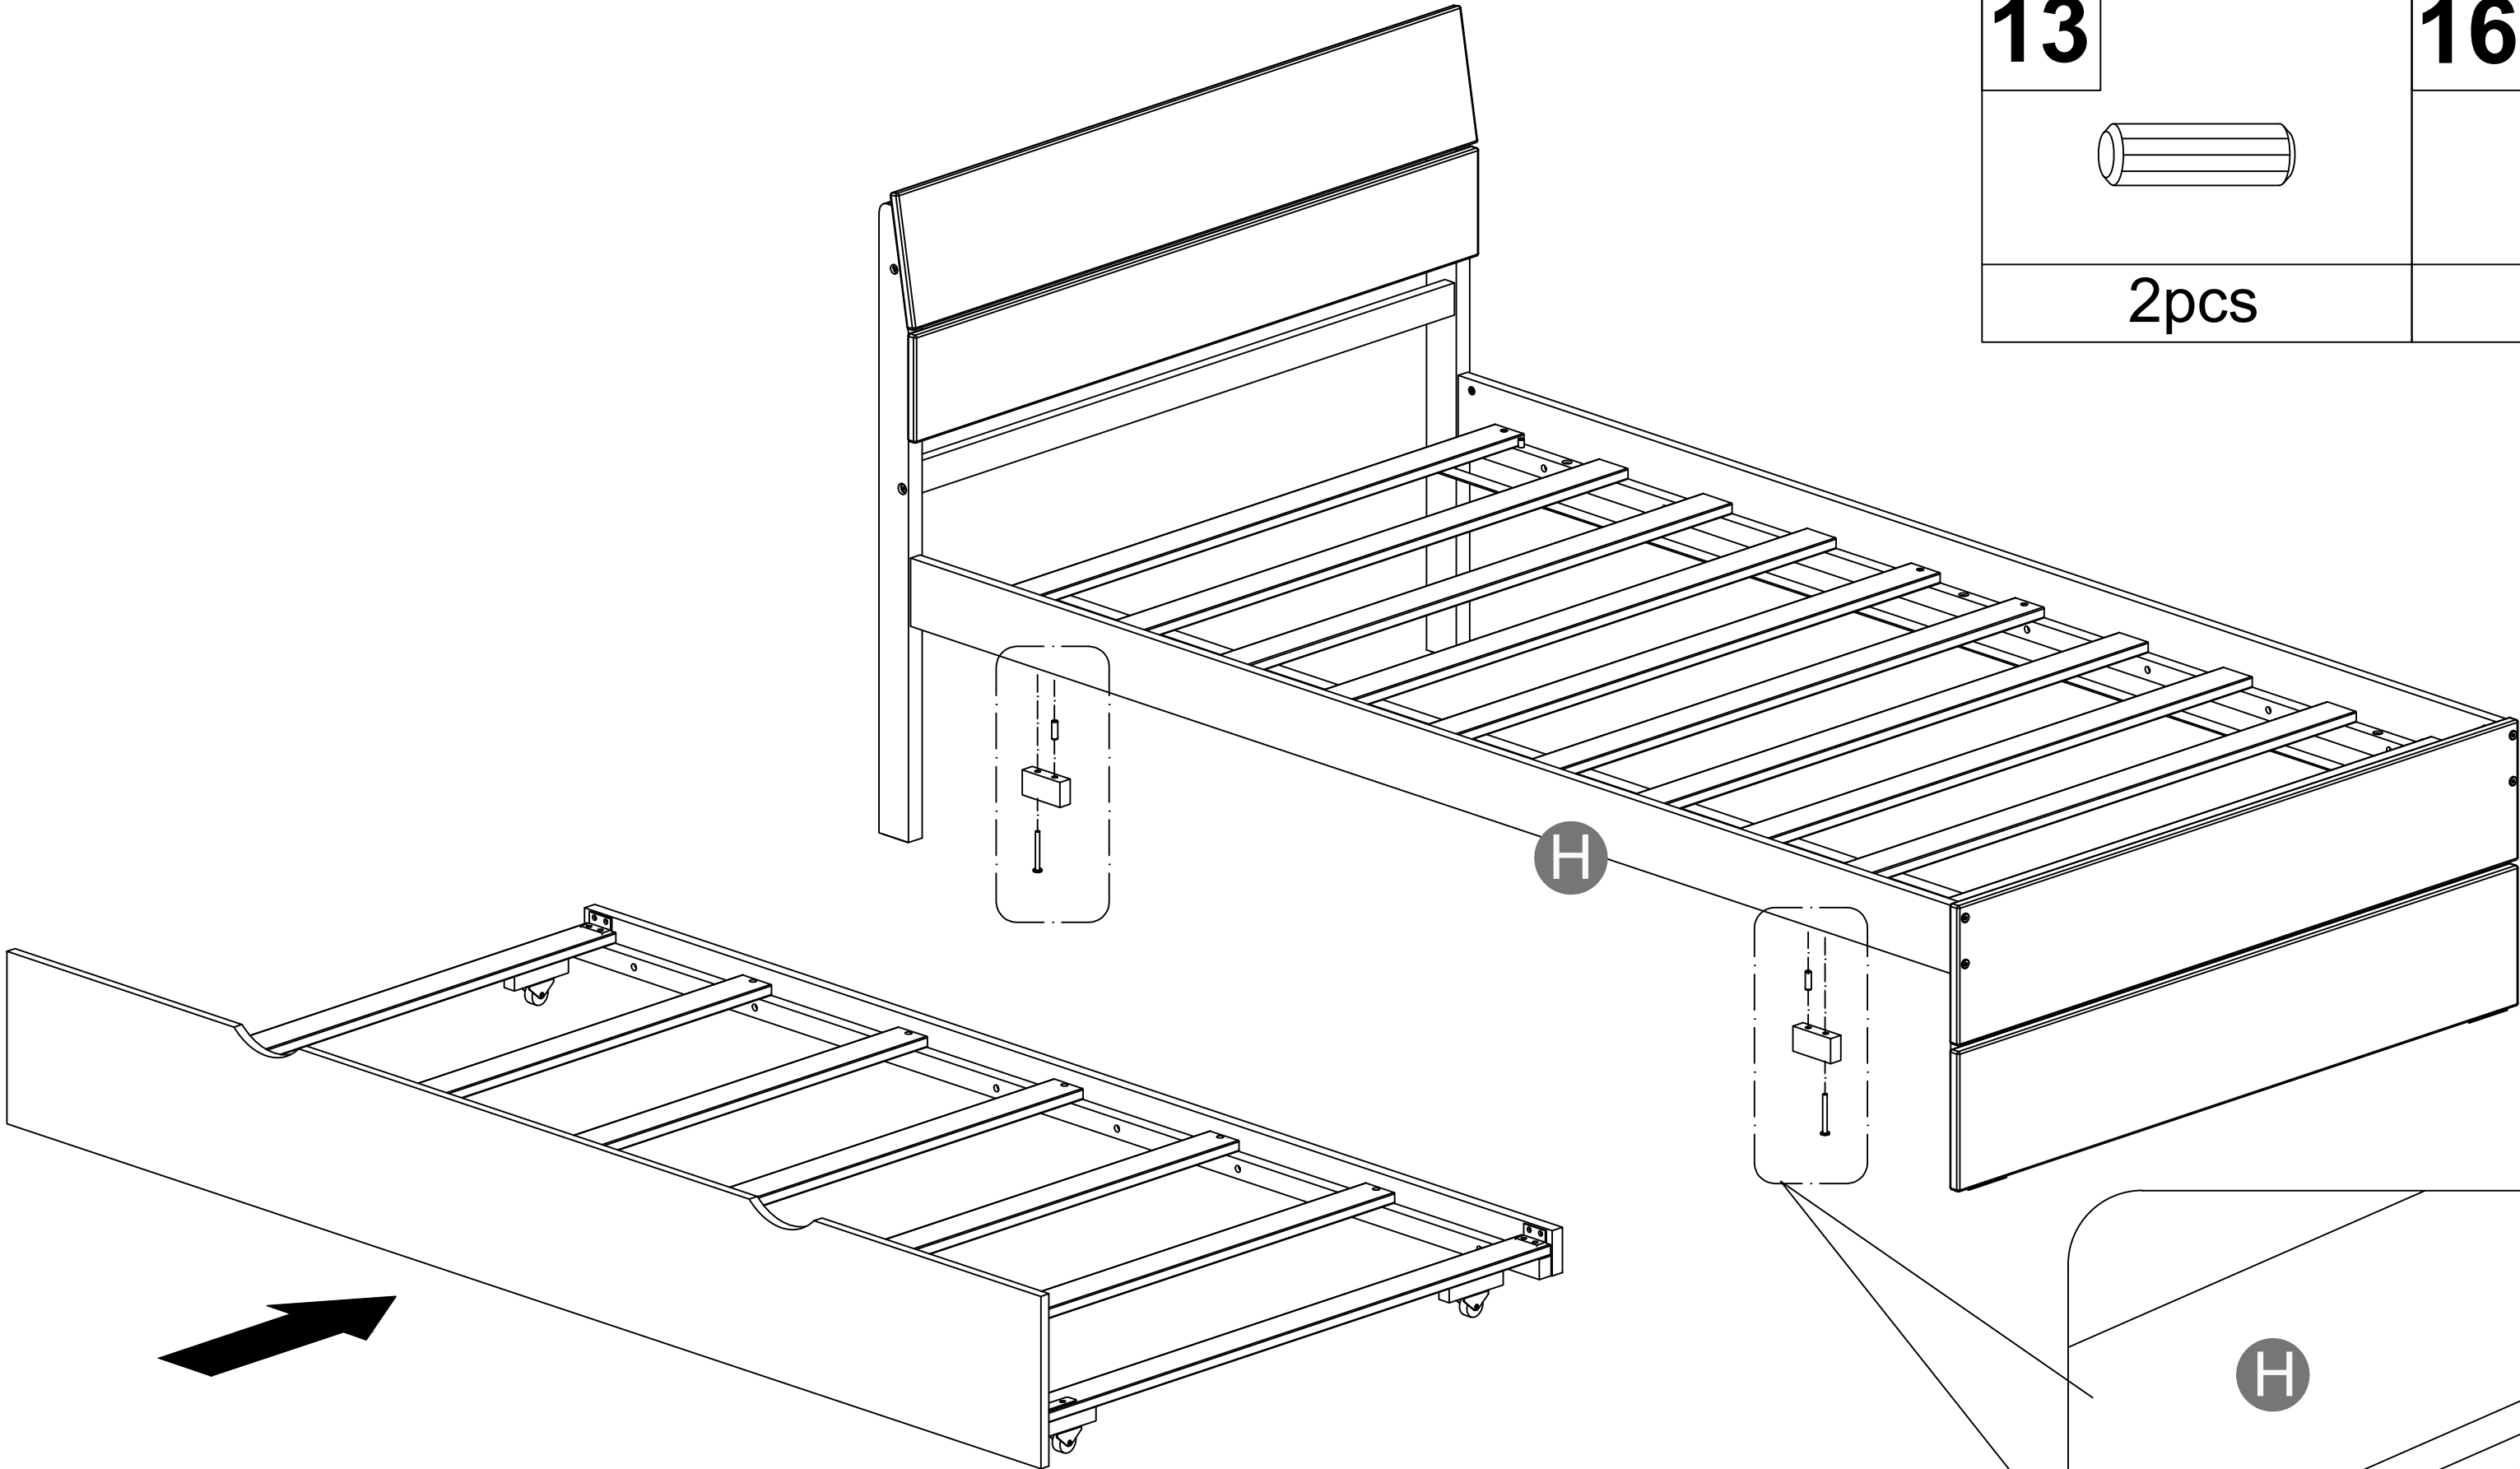

Push Trundle under the bottom of Bed.

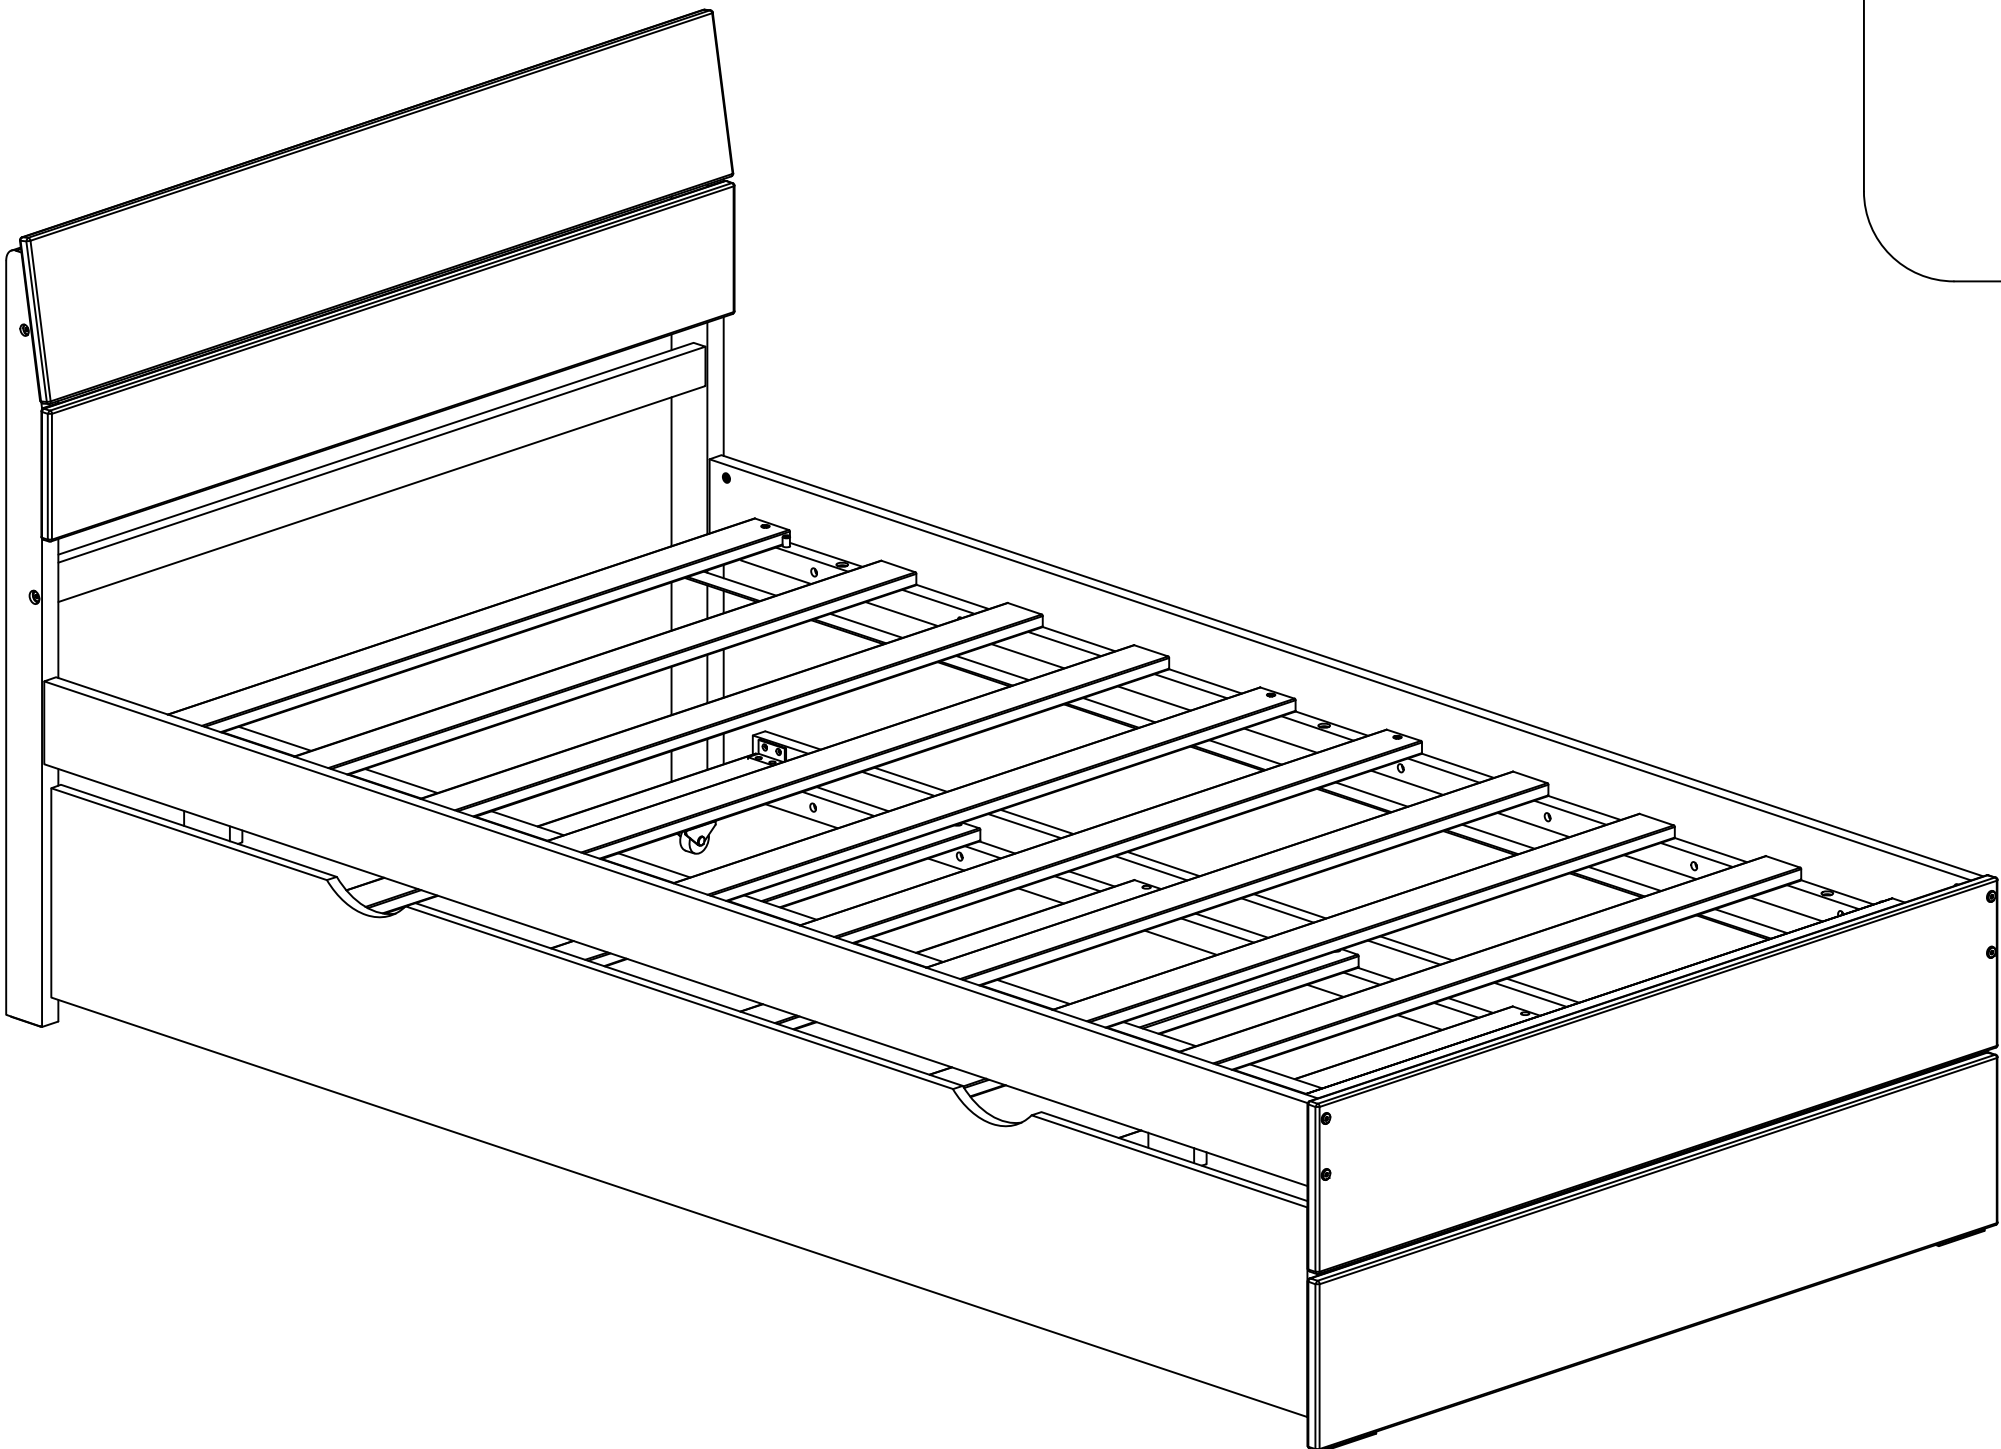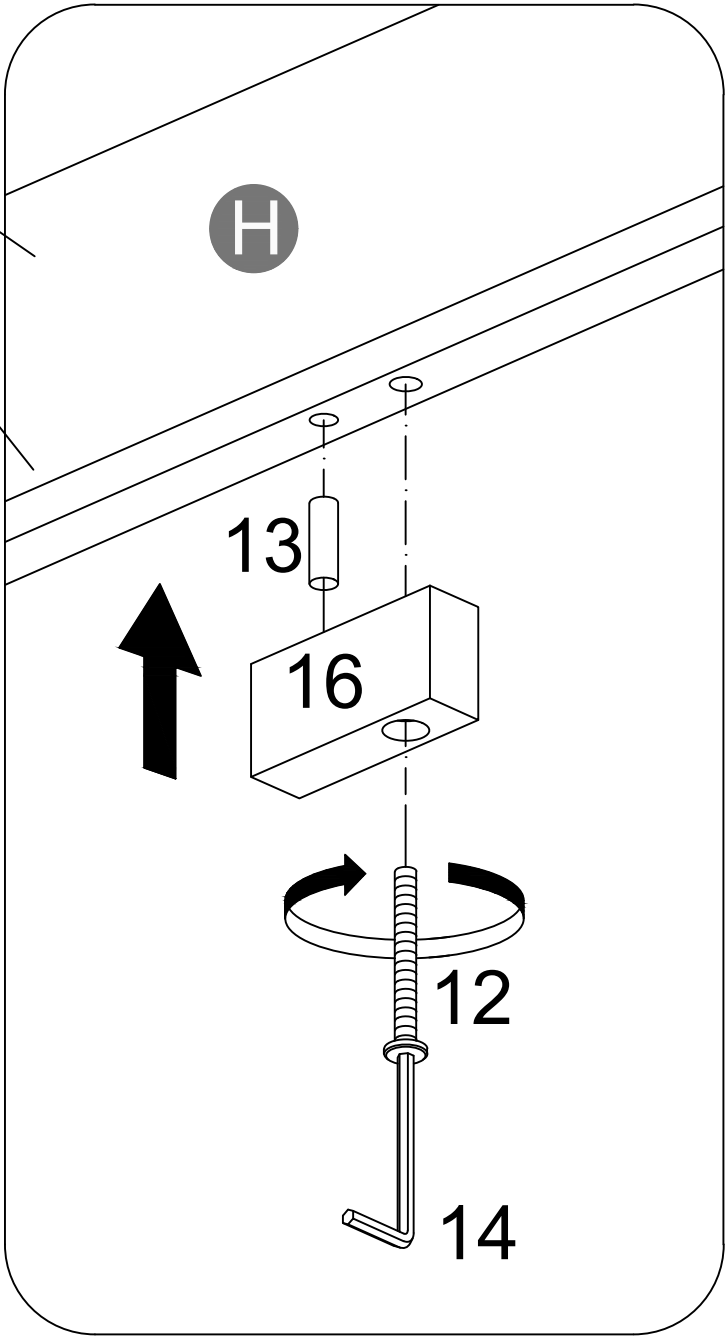

Make sure to tighten all the screws of the bed.