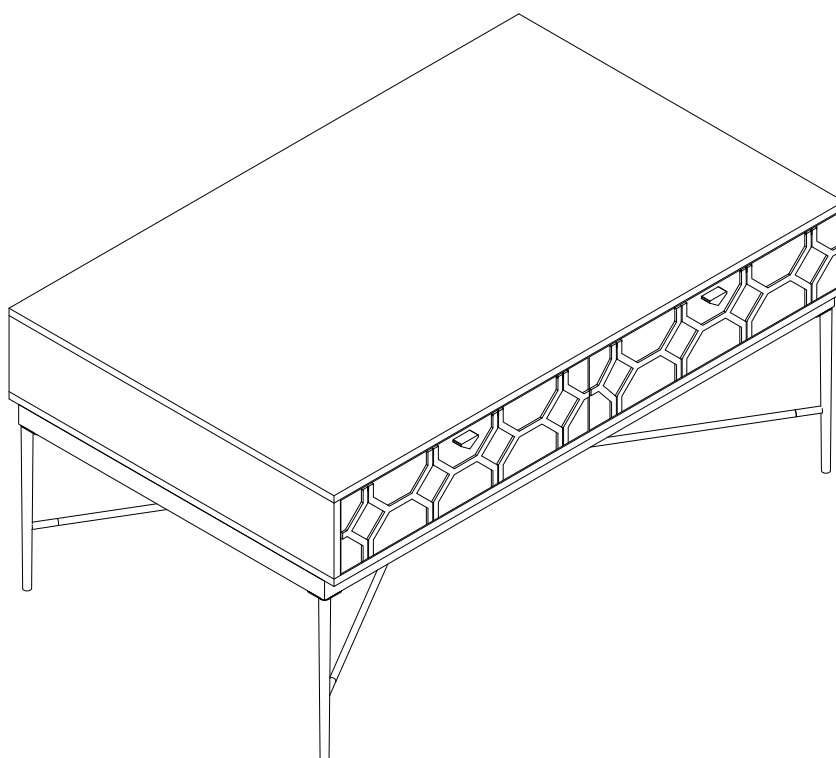


ASSEMBLY INSTRUCTIONS



Phone Number: (951)213-4743
303-747-4421

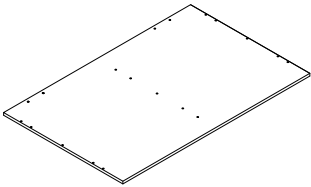
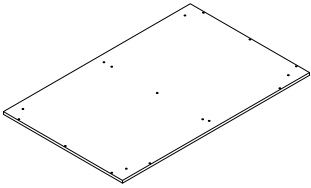
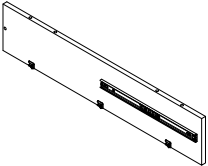
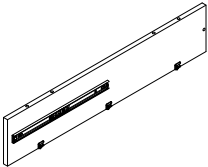
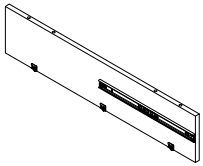
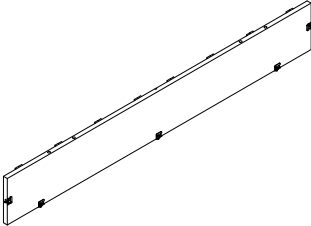
Service Contact : service@clihome.net

Web: www.clihome.net

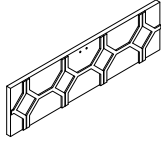
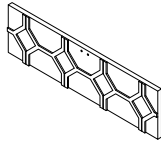


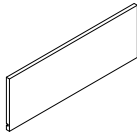
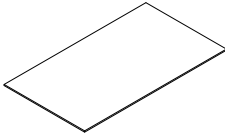
ASSEMBLY INSTRUCTIONS

Page 2 of 10

Part List:

ITEM	DESCRIPTION	PART	QTY
1	Top panel		1
2	Bottom panel		1
3	Left side		1
4	Right side		1
5	Divider		1
6	Back panel		1

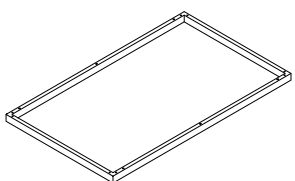
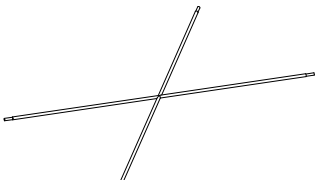
Part List:

ITEM	DESCRIPTION	PART	QTY
7	Left Drawer Front		1
8	Right Drawer Front		1
9	Drawer Left Side		2
10	Drawer Right Side		2
11	Drawer back		2
12	Drawer bottom		2



MADE IN CHINA

ASSEMBLY INSTRUCTIONS

Part List:

ITEM	DESCRIPTION	PART	QTY
13	Bottom frame		1
14	"X" bar		1





Part List:

ITEM	DESCRIPTION	PART	QTY
15	Left front		2
16	Right front		2





ASSEMBLY INSTRUCTION

Page 4 of 10

Hardware List:

ITEM	DESCRIPTION	PART	QTY
A	Wood Dowel	 Φ8*30mm	16
B	Bolt	 Φ1/4"*2"	6
C	Bolt	 Φ1/4"*1 1/4"	10
D	Bolt	 Φ1/4"*1/2"	8

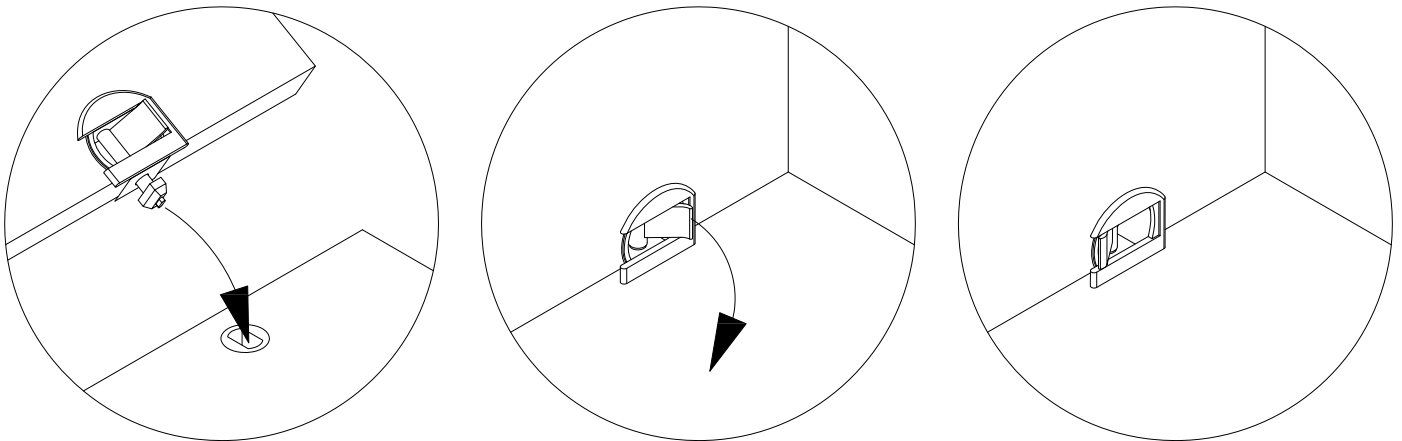
Hardware List:

ITEM	DESCRIPTION	PART	QTY
E	Flet head	 Φ4*30mm	16
F	Handle		2
G	Machine screw	 Φ5/32"*3/4"	4
H	Allen wrench		1

MADE IN CHINA

- * Required screwdriver & mallet, not included.
- * Before discarding packing materials, please check to make sure that all parts and hardware is present.
- * Two people needed for assembly.
- * Please follow the instructions closely; do not over tighten screws or bolts unless instructed.
- * After a few days from initial assembly, the product may have acclimated to the new environment. Please retighten the hardware.



Guideline For Assembling of Plastic Lock

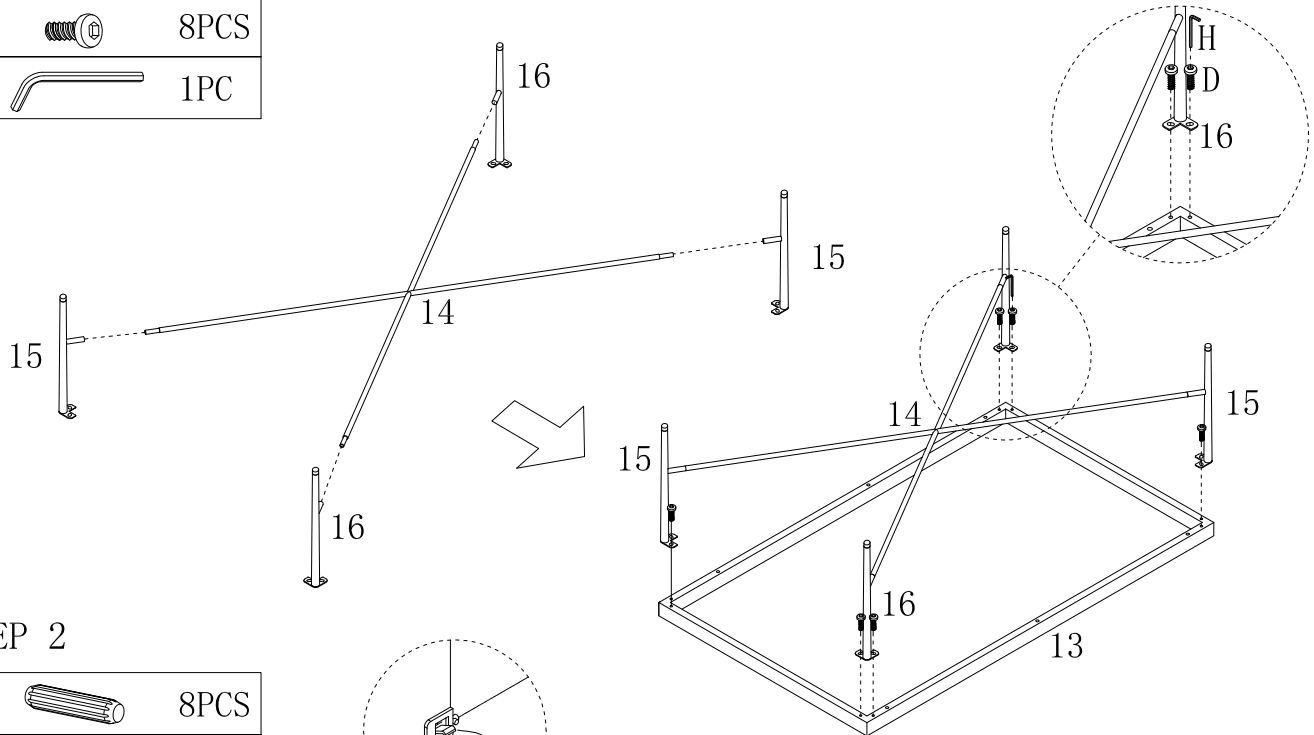


ASSEMBLY INSTRUCTION


Page 6 of 10

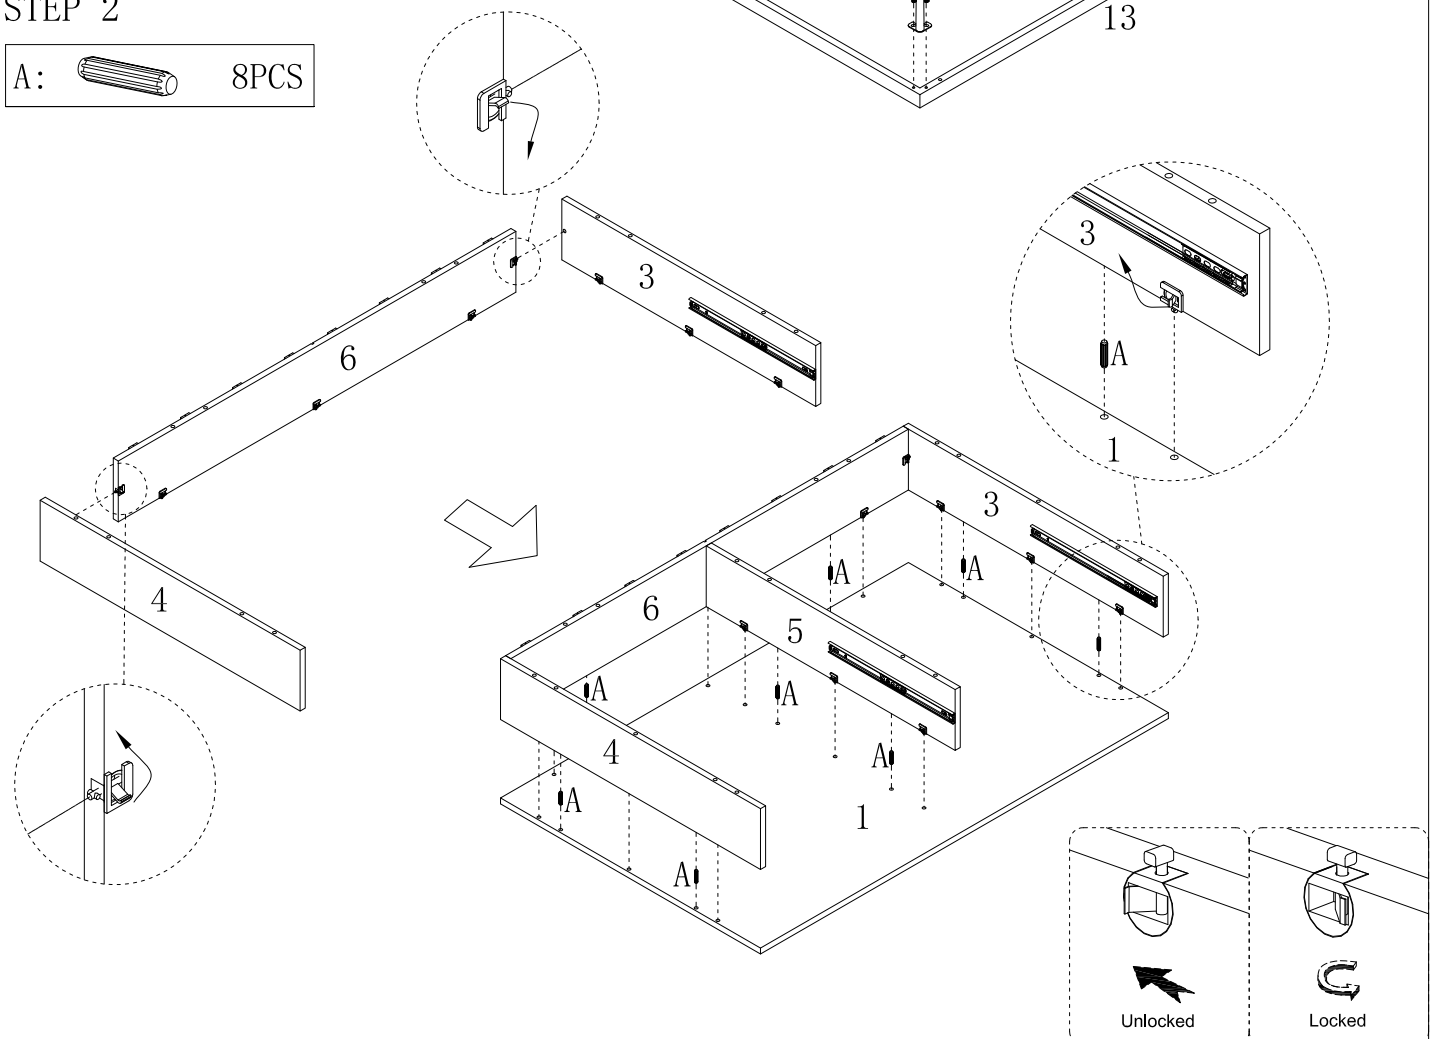
STEP 1

D:		8PCS
H:		1PC



STEP 2

A:		8PCS
----	---	------






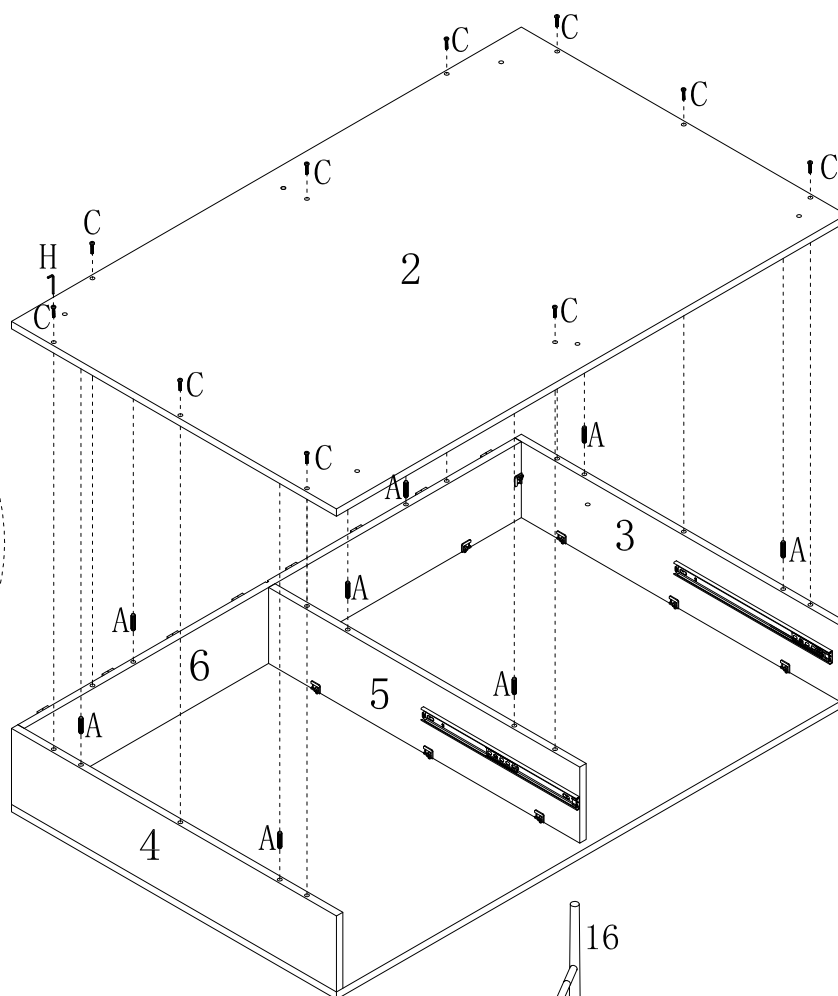
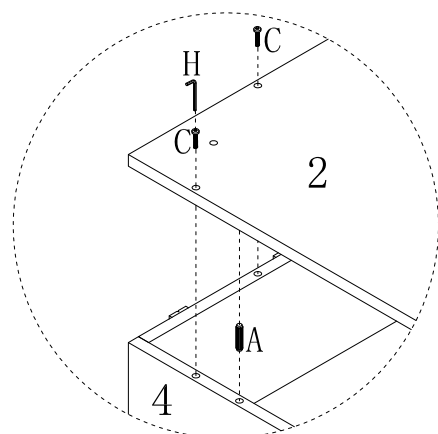
MADE IN CHINA

ASSEMBLY INSTRUCTION



Page 7 of 10

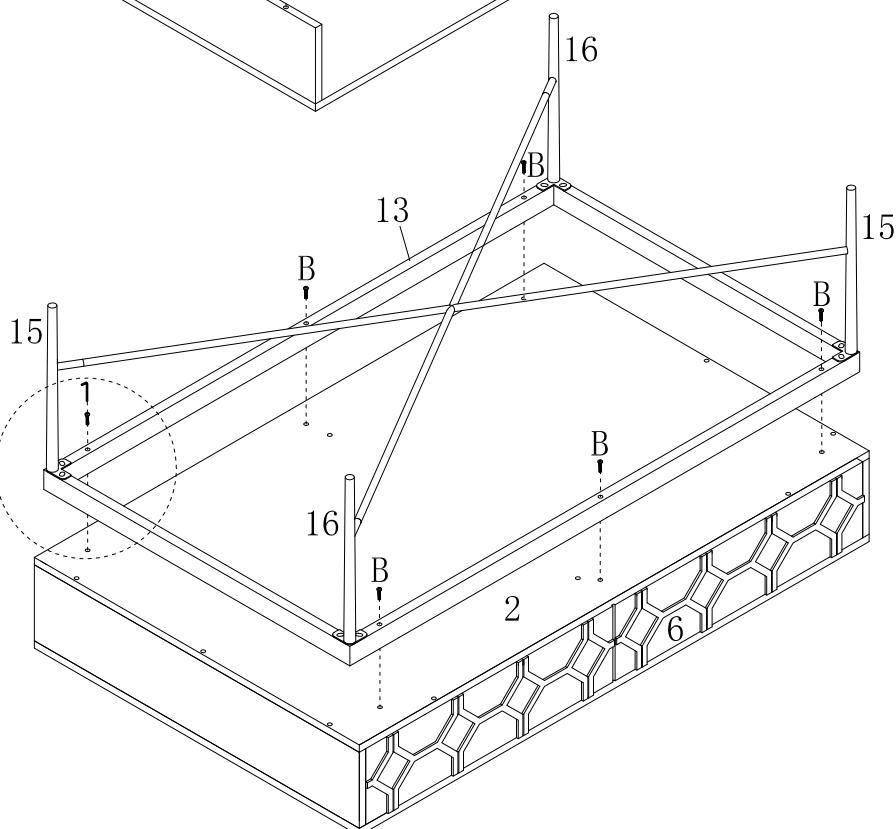
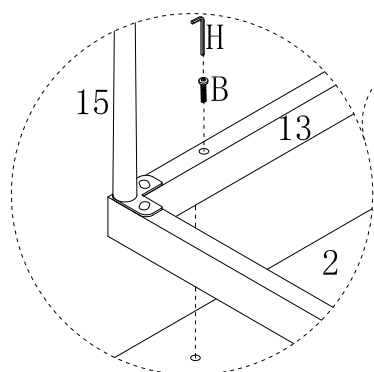
STEP 3

A:		8PCS
C:		10PCS
H:		1PC



STEP 4

B:		6PCS
H:		1PC






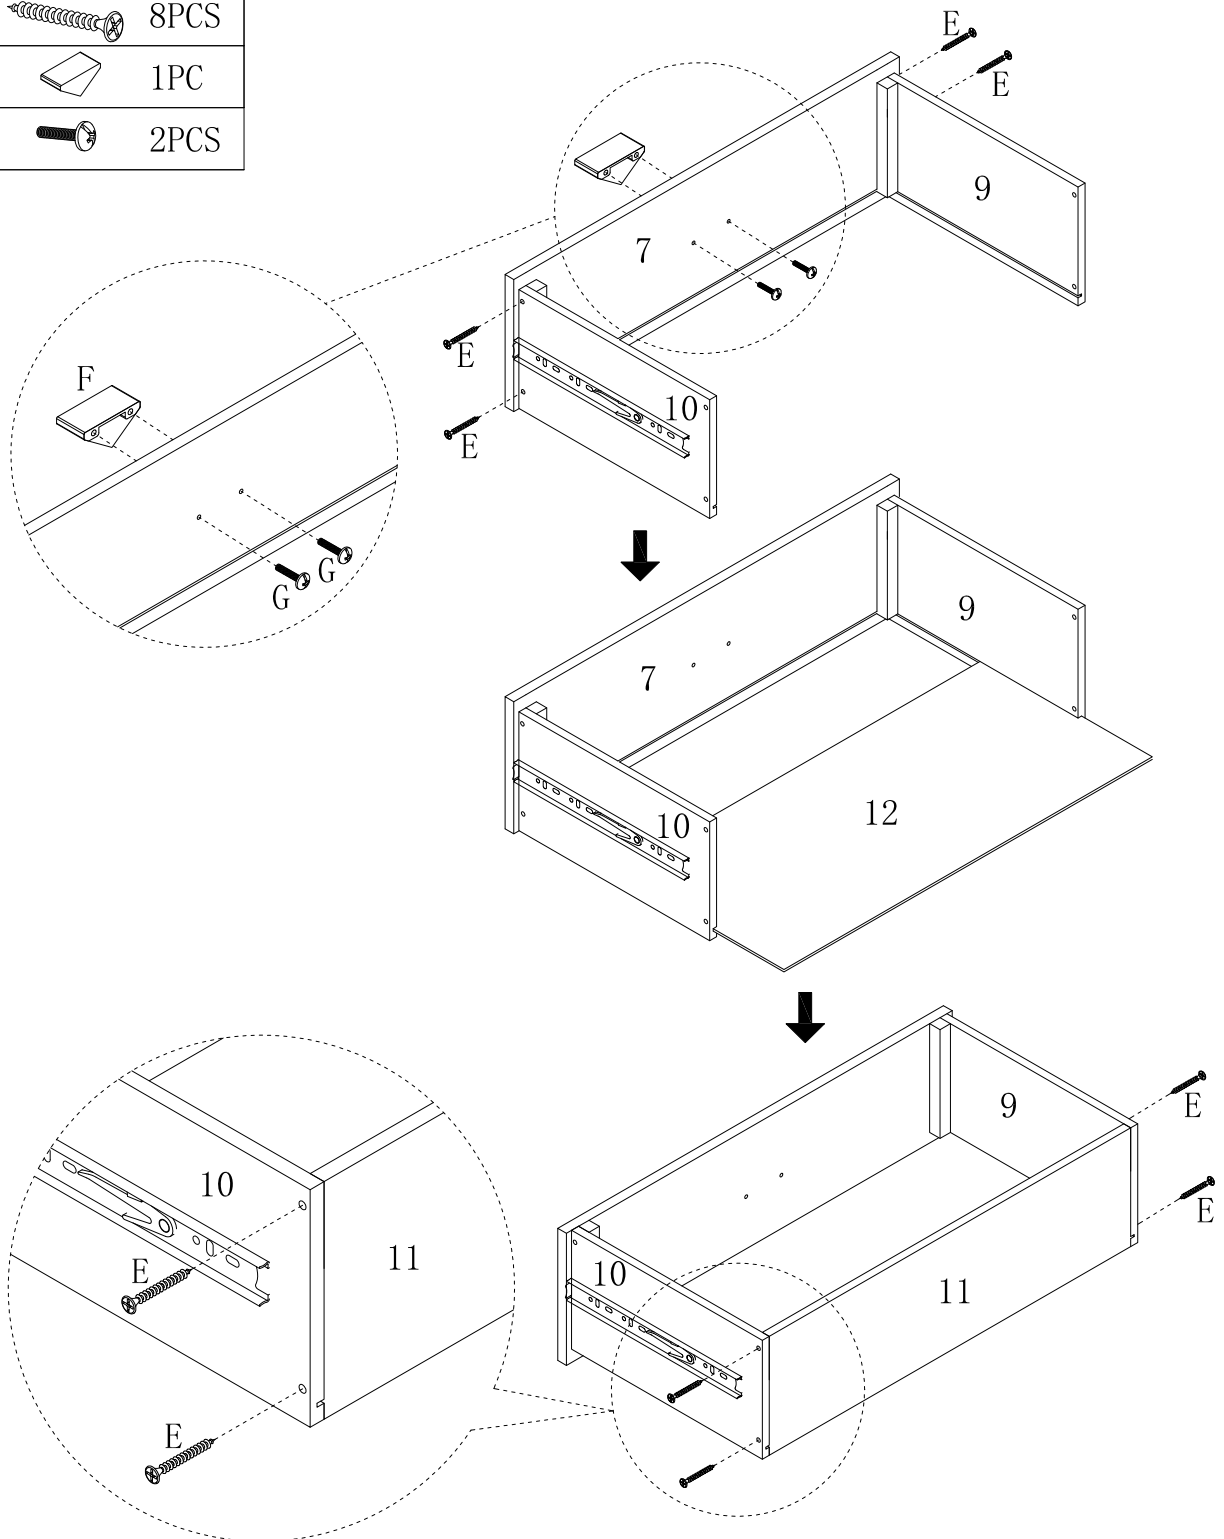
MADE IN CHINA

ASSEMBLY INSTRUCTION

Page 8 of 10

STEP 5

E:		8PCS
F:		1PC
G:		2PCS






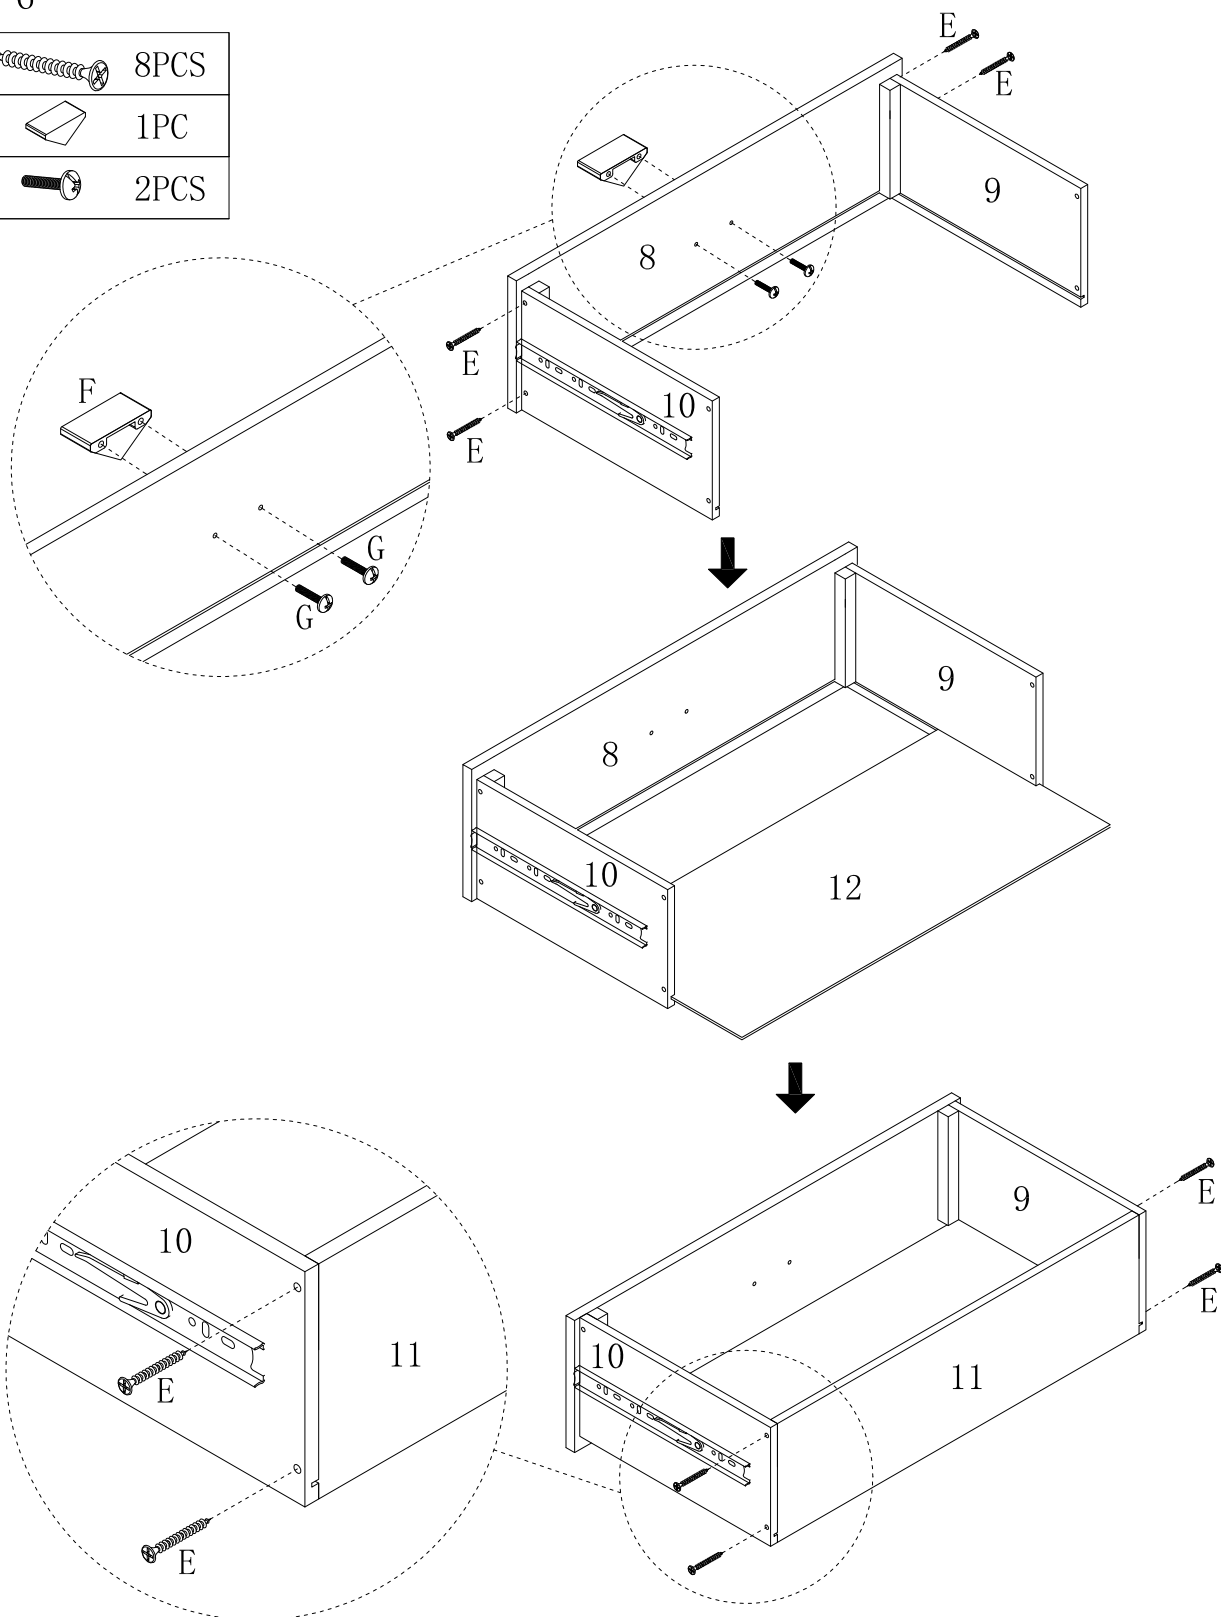
MADE IN CHINA

ASSEMBLY INSTRUCTION

Page 9 of 10

STEP 6

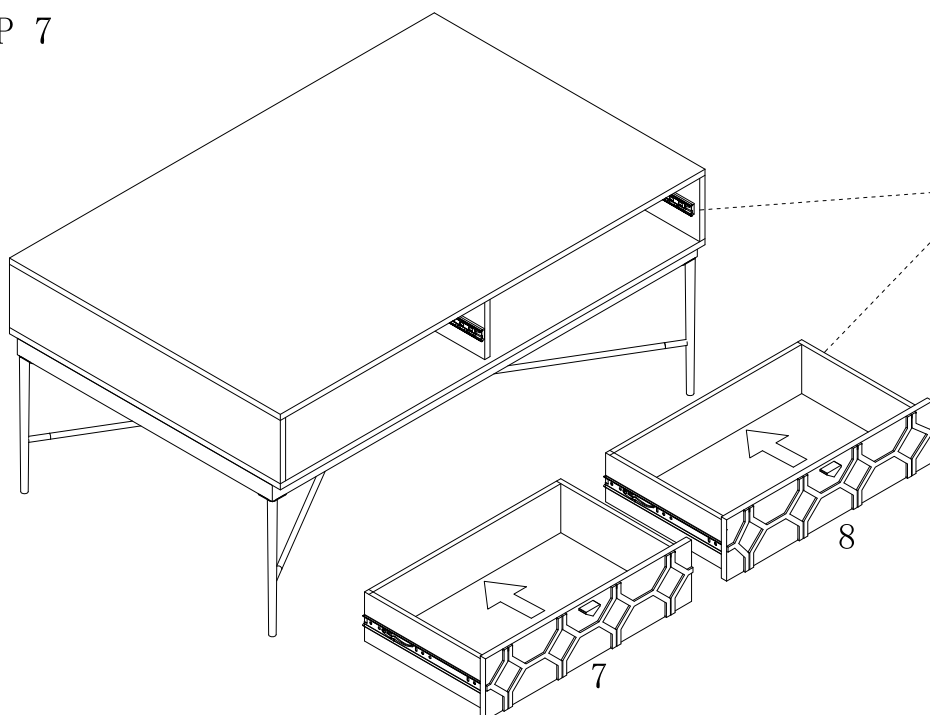
E:		8PCS
F:		1PC
G:		2PCS



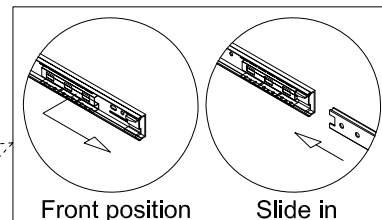
MADE IN CHINA

ASSEMBLY INSTRUCTION

STEP 7



Note: Place the slidable part to the front position before sliding in.



To remove the drawer, lift up on the left side buckle and press down on the right side buckle, operating both left and right at the same time, and move outward to remove it.

