

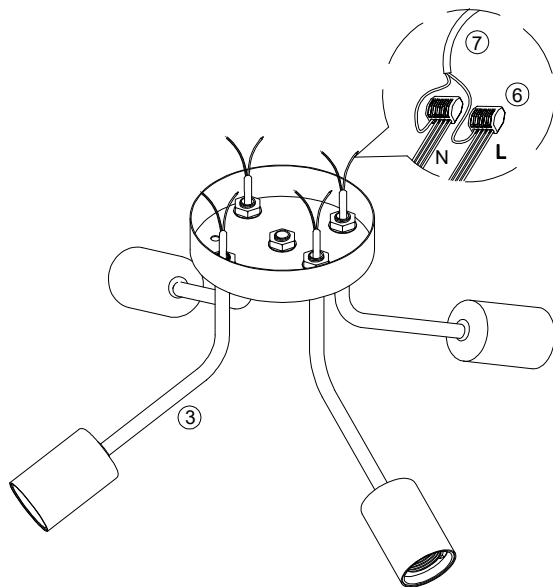


1. Pull the orange operating handle **A** to open the inlet hole, insert the wire **B**.
 2. Press the operating handle **A** to finish wiring.
- (Note: one inlet hole can put 2 or 3 wires inside)

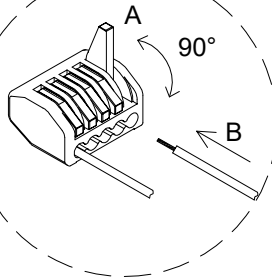

2. Connect the wires with main wire ⑦ by parallel with connector ⑥ (all live line-L use one connector, and neutral Line-N use another connector).

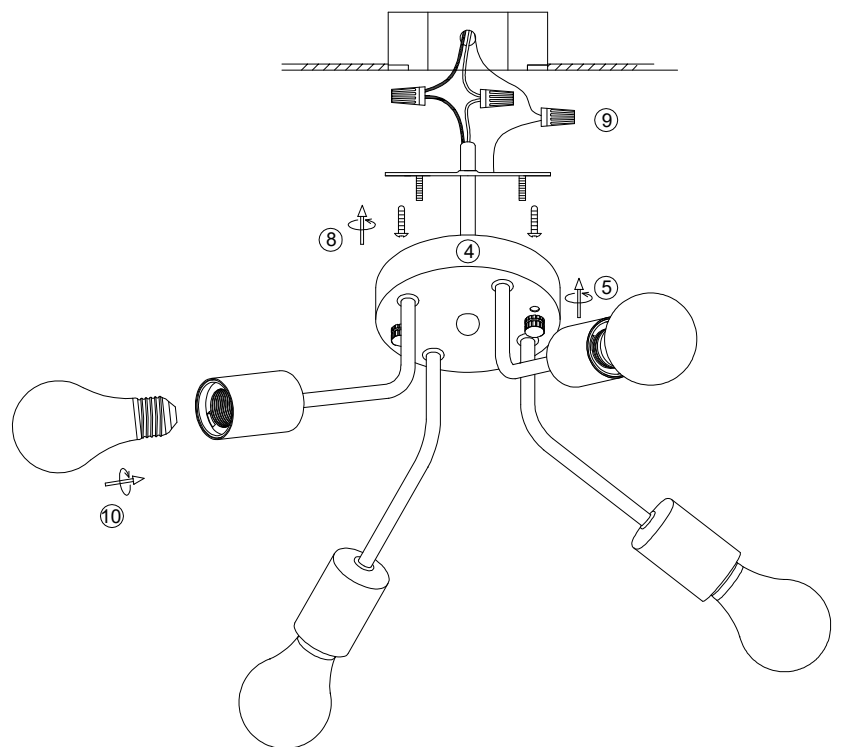

X0112-4

Please read carefully before installation!!!

Note : Please make sure that the electricity is powered off during installation !

Only a professional electrician should install this kind of product !