


THKFBV034BKBW  
THKFBV034NBBW

## INSTALLATION INSTRUCTIONS

\*The vessel and faucet set is not included


# DIMENSIONS

Unit:inch

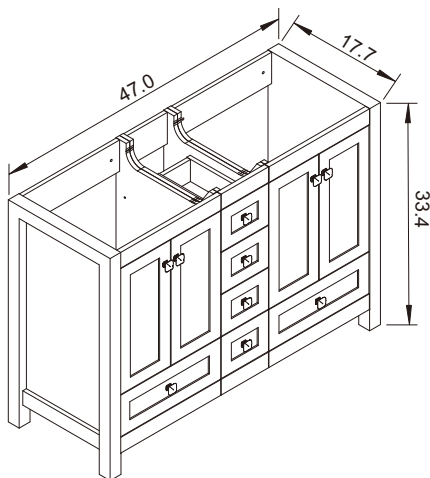


## ASSEMBLY DIAGRAM


Left

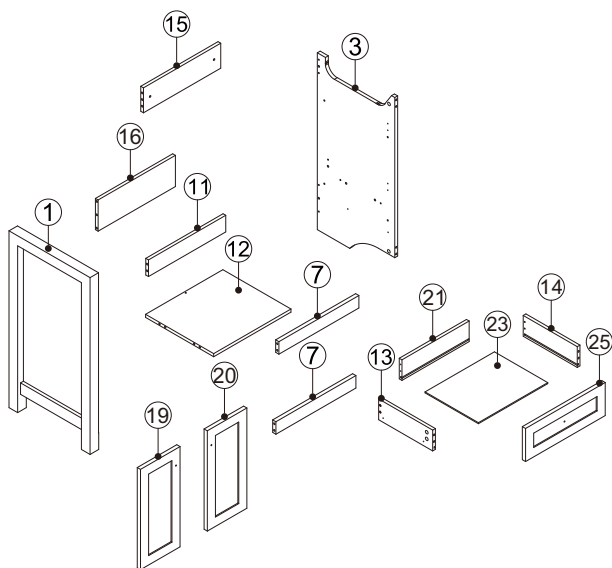






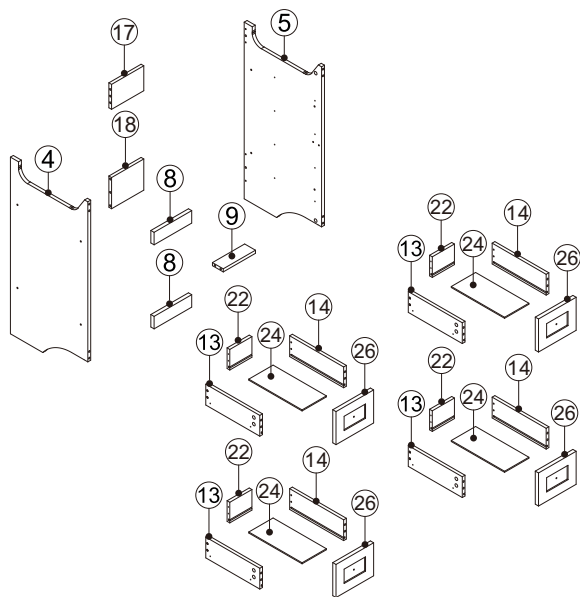









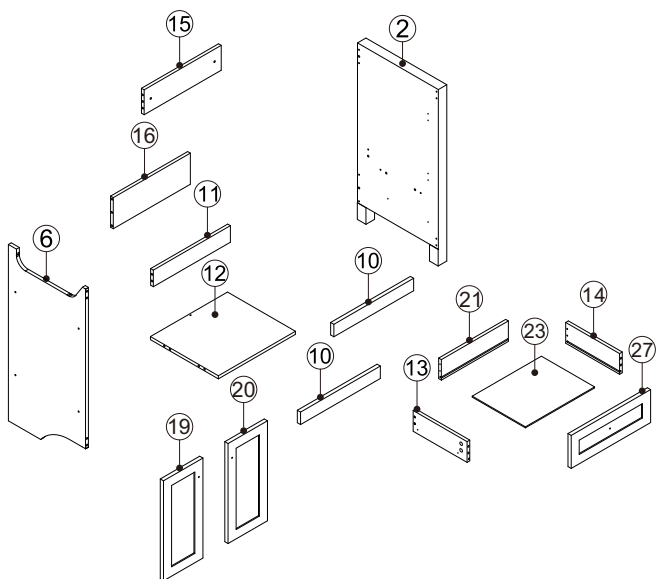


























## Middle



## Right




# PARTS LIST

PARTS LIST			HARDWARE LIST		
No.	Description	QTY	No.	Description	QTY
1		1	A	 Three-in-one Connector	82
2		1	B	 Wood Plug	32
3		1	C	 Screws M4x14	120
4		1	D	 Slider	12
5		1	E	 Foot nail	12
6		1	F	 Screws M4x30	24
7		2	G	 Hinges	4
8		2	H	 Hinges	4
9		1	J	 Handle Screws M4x22	4
10		2	K	 Handle	10
11		2	L	 Screws For Fix On The Wall M5.5x60	4
12		2	M	 Handle Screws M4x18	6
13		6	N	 Butt screws M5x27-M4	8
14		6	P	 Wood grain Cover	24
15		2	Q	 Cover	58
16		2			
17		1			
18		1			
19		2			
20		2			
21		2			
22		4			
23		2			
24		4			
25		1			
26		4			
27		1			

**CAUTION:** Please confirm the parts list before installtion




# YOU MAY NEED (NOT SUPPLIED)

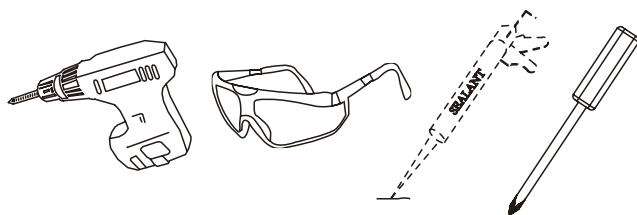


## INSTALLATIONS

### STEP 1


HARDWARE LIST		
A		82PCS
		

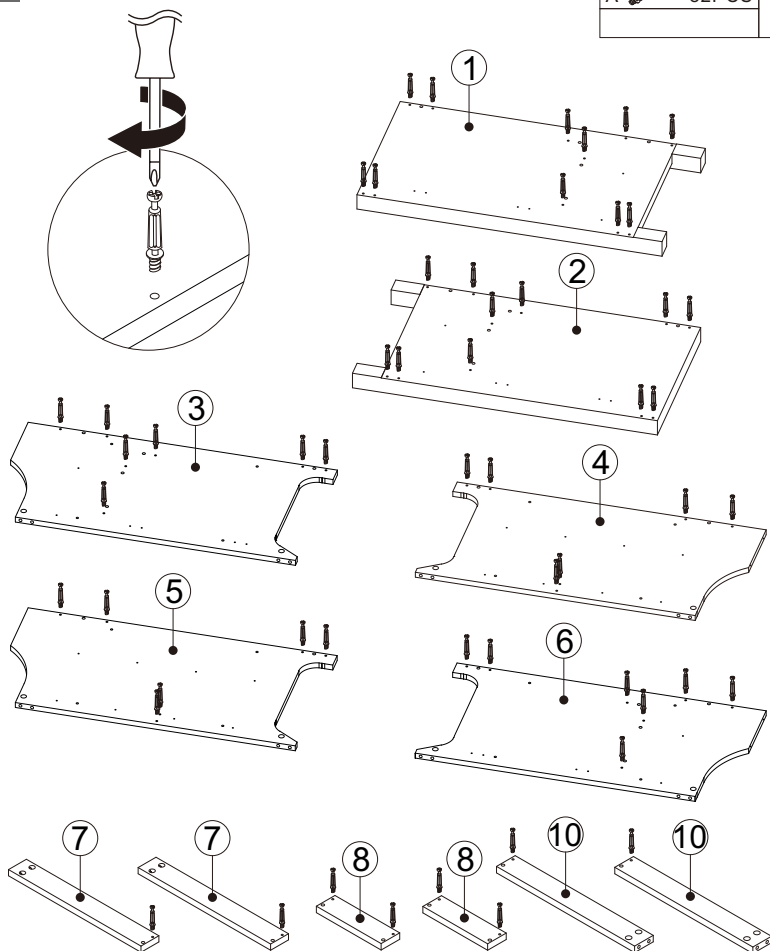

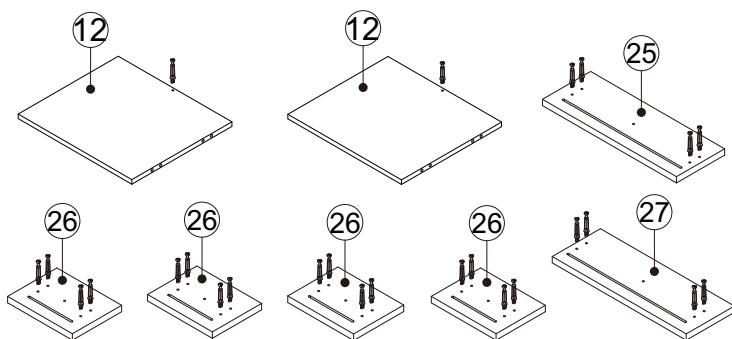




- Insert the Cam Screw into the shelves above.
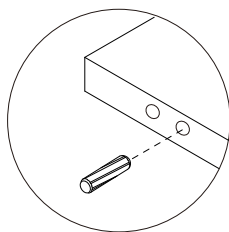
## STEP 2



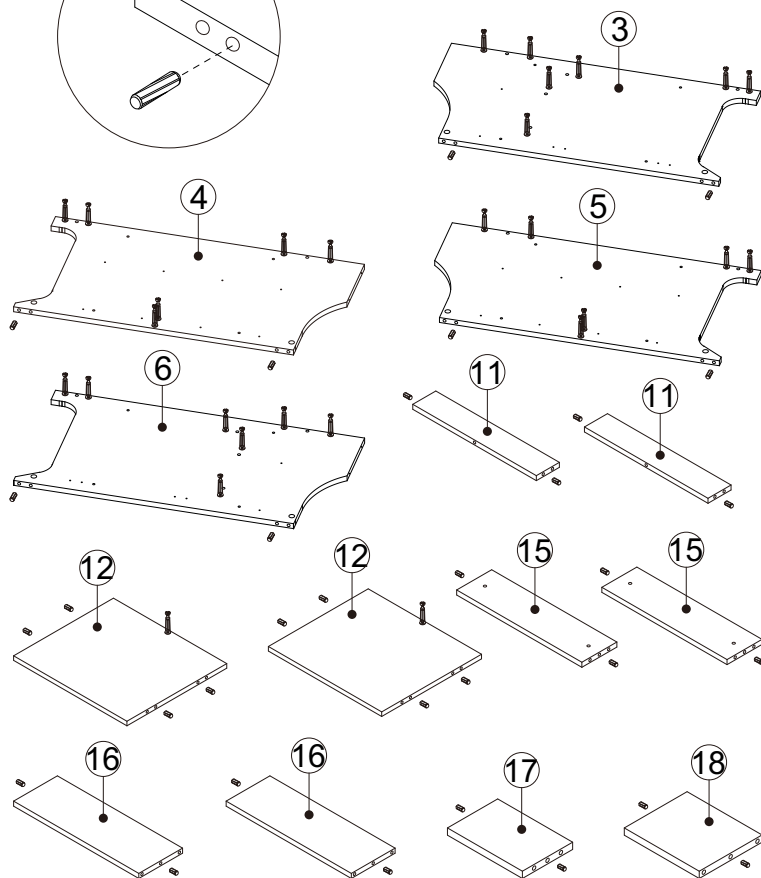


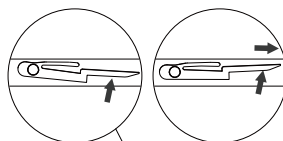



HARDWARE LIST		
B		32PCS
		







- Insert the wooden dowel pins into the shelves.







# STEP 3



HARDWARE LIST		
E		12PCS
D		12PCS
C		36PCS



● Keep pressing here, then pull out to device the slide.

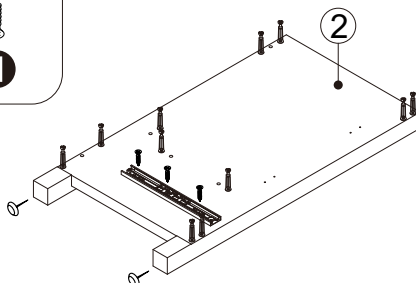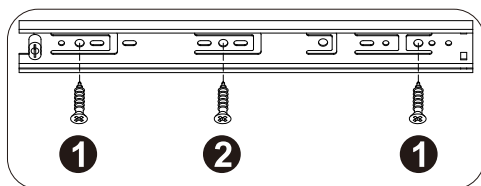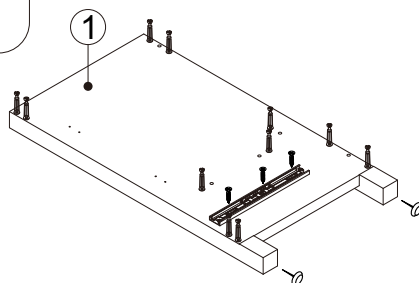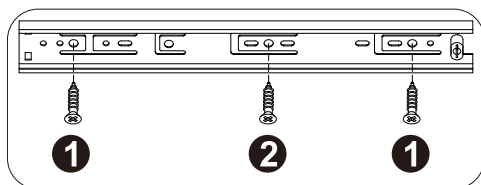

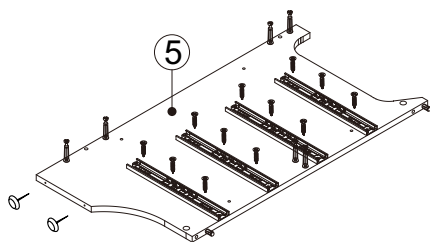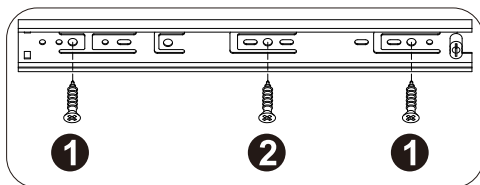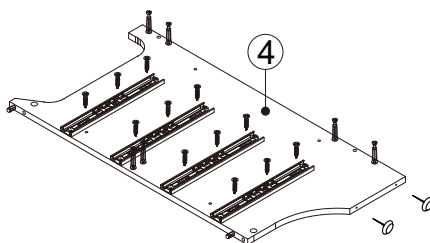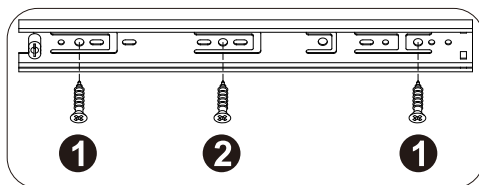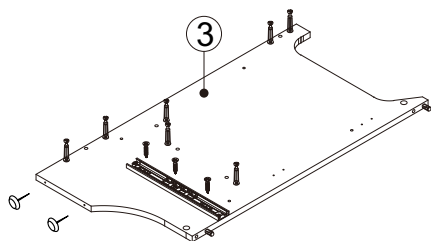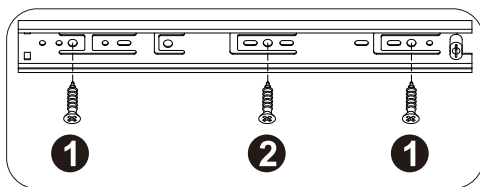

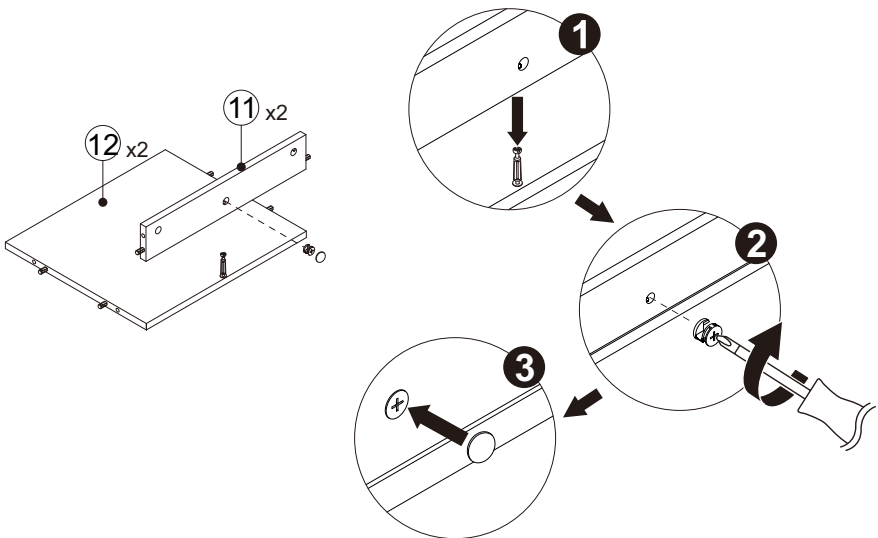


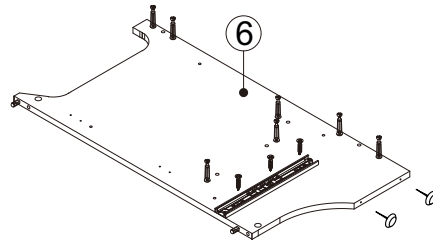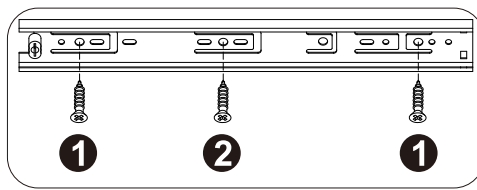

- Refer to the illustration to fix the Slide rails to the board #1,#2,#3,#4,#5,#6 with screws.

#### STEP 4



HARDWARE LIST		
Q		2PCS
A		2PCS






- Insert shelves #11 and #12 downwards to their corresponding positions. Then tighten the cam lock with the cover.

## STEP 5


### HARDWARE LIST

Q		9PCS
A		9PCS

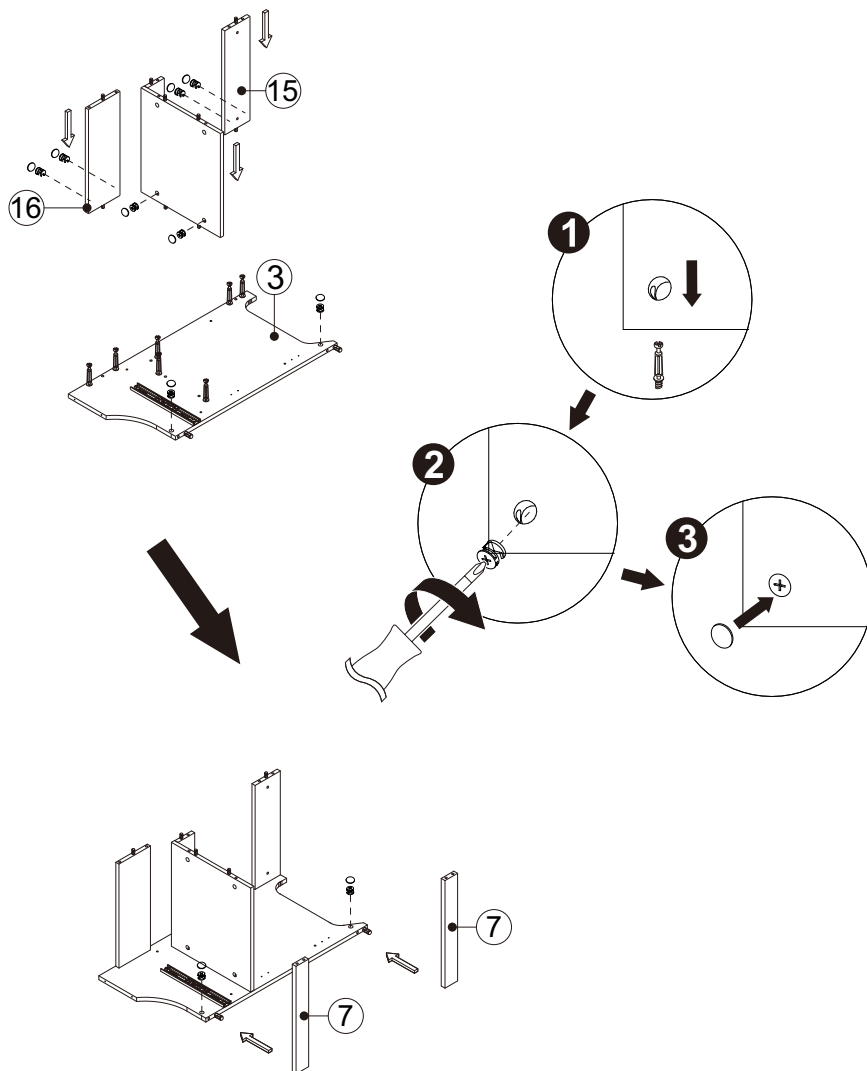


- Refer to the illustration, insert the shelves #15, #16 and already assembled #11, #12 on the shelf #3. Insert the #7 into the assembled shelf as well. Then tighten the cam lock with the cover.

## STEP 6

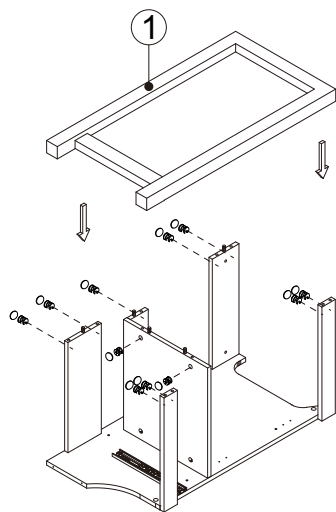


HARDWARE LIST		
Q		11PCS
A		11PCS

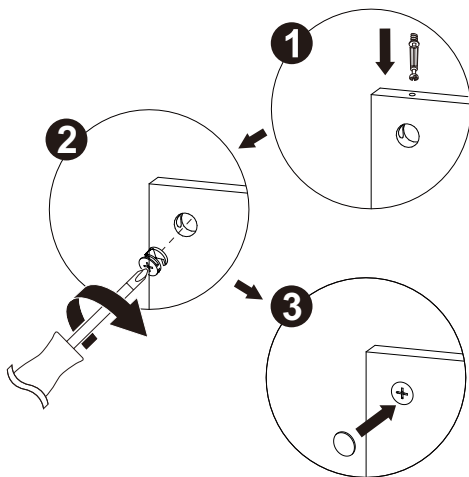


- Refer to the illustration, Install shelf #1 on the cabinet. Then tighten the cam lock with the cover.

## STEP 7

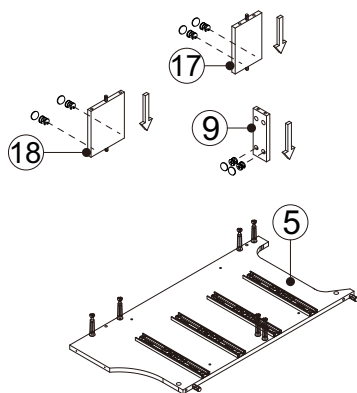

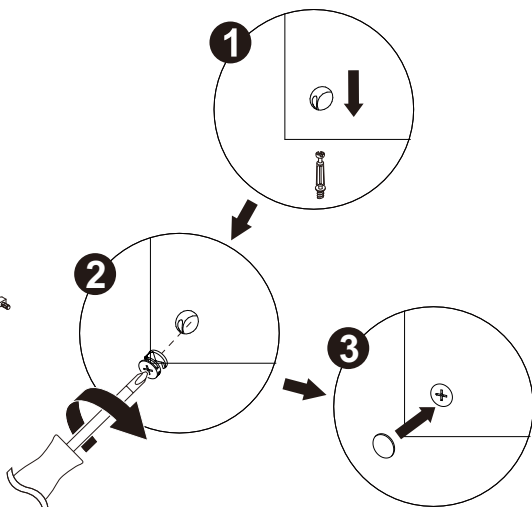


HARDWARE LIST		
Q		6PCS
A		6PCS



- Refer to the illustration, insert the shelves #9, #17, #18 on the shelf #5. Then tighten the cam lock with the cover.



## STEP 8

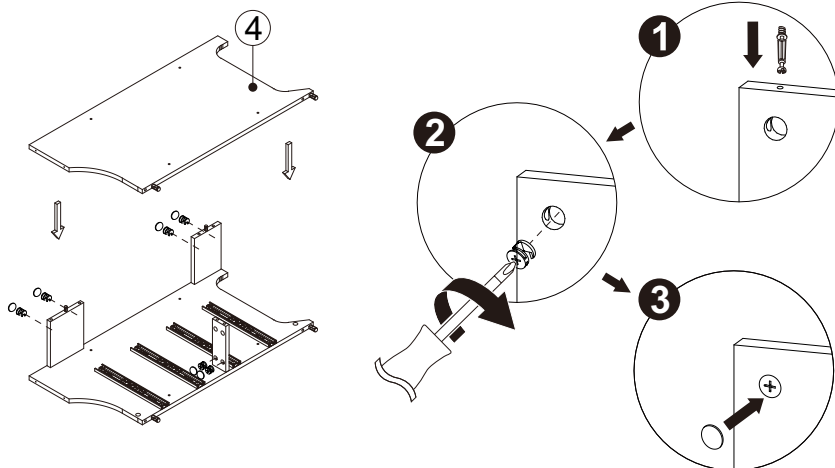
HARDWARE LIST		
Q		6PCS
A		6PCS



- Refer to the illustration, Install shelf #4 on the cabinet. Then tighten the cam lock with the cover.

## STEP 9

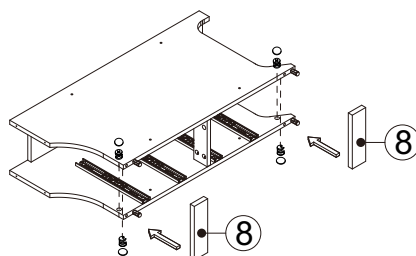

HARDWARE LIST		
Q		4PCS
A		4PCS


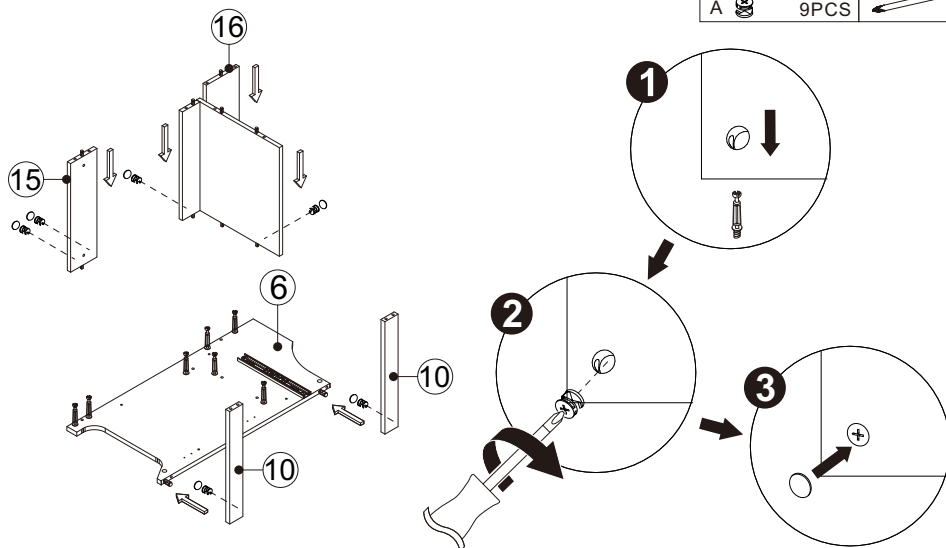


- Refer to the illustration, insert the shelves #8 on the shelf. Then tighten the cam lock with the cover.



## STEP 10


HARDWARE LIST		
Q		9PCS
A		9PCS

- Refer to the illustration, insert the shelves #10, #15, #16 and already assembled #11, #12 on the shelf #6. Then tighten the cam lock with the cover.

## STEP 11




HARDWARE LIST		
Q		11PCS
A		11PCS

- Refer to the illustration, Install shelf #2 on the cabinet. Then tighten the cam lock with the cover.

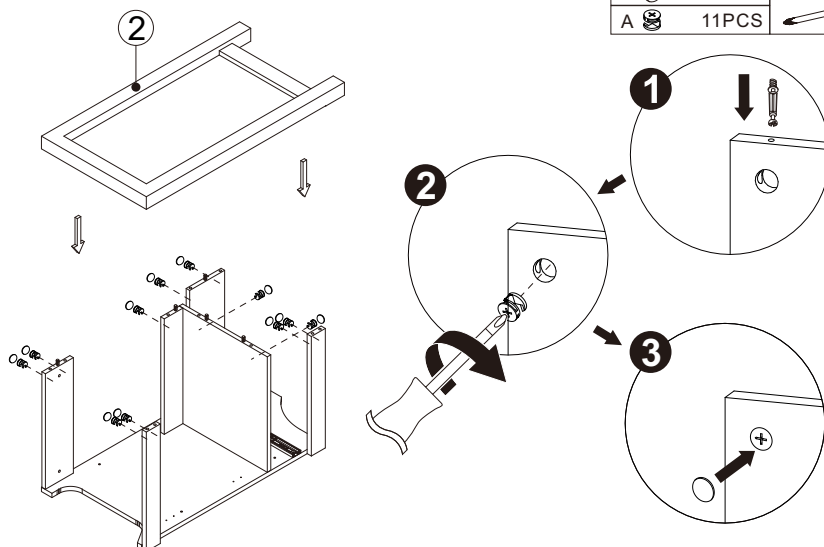





## STEP 12

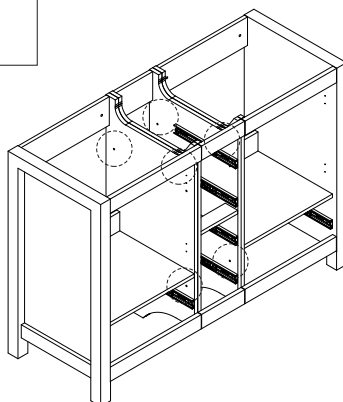
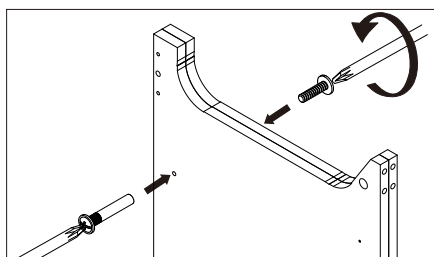
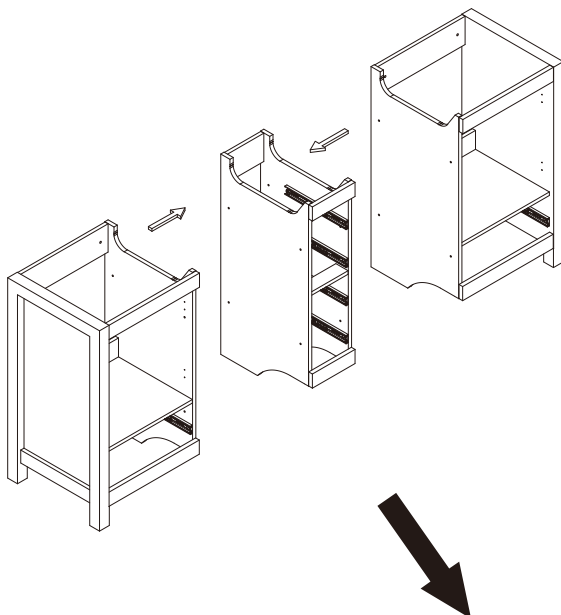
HARDWARE LIST		
N		8PCS
		2PCS 





- The three cabinets on the left,middle,right are combined  
Refer to the illustration,secure with butt screws.

## STEP 13



HARDWARE LIST		
G		4PCS
H		4PCS
J		4PCS
J		4PCS
C		48PCS
K		4PCS

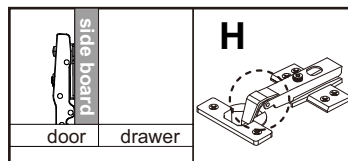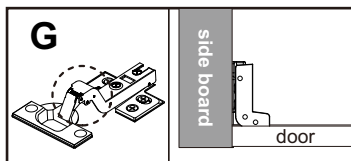

Left

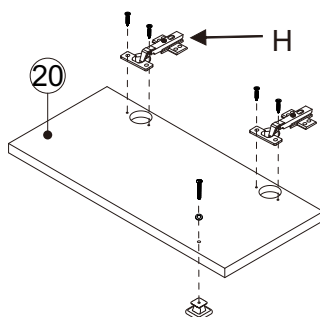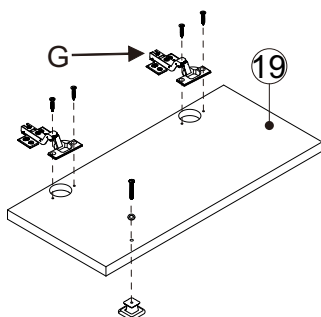






Right

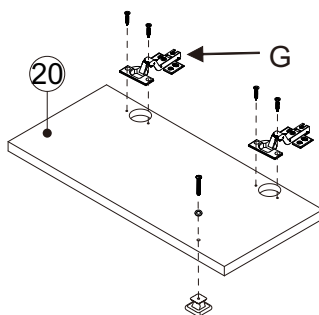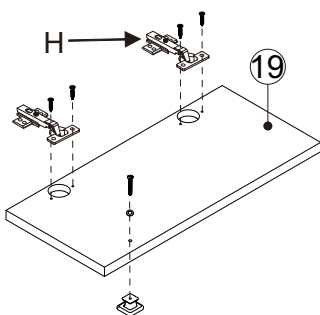

**Note:** see step 13 to adjust the door's position.

- Use Screws to install the handle and apply Screws to fix the hinge on the shelf #19. Then use Screws to connect the hinge bracket to the cabinet. Repeat these steps for the other door.

## STEP 14

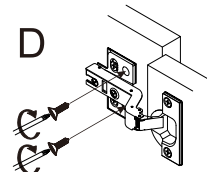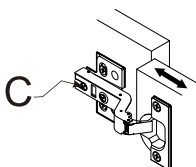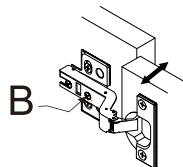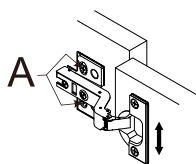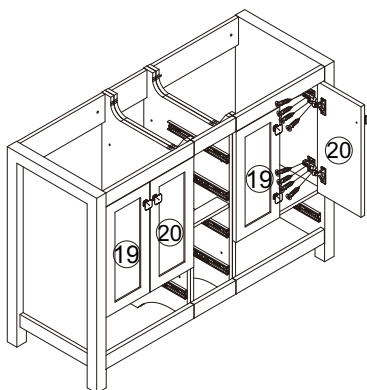

A.Height adjustment

B.Side to side adjustment



C.Depth adjustment

D.After adjustment A/B/C,tighten screws.

- To ensure proper cabinet alignment, refer to the above illustrations for instructions about adjusting the cabinet height, depth and lateral movement.

## STEP 15


HARDWARE LIST		
F		8PCS
		

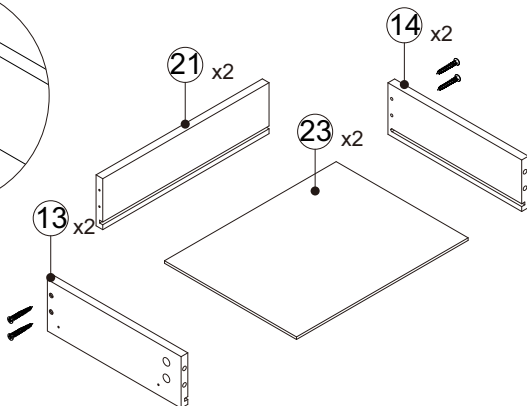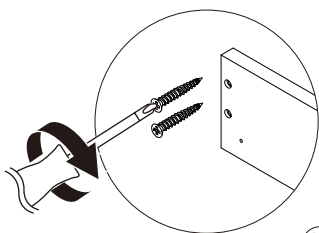

- Refer to the illustration,Connect the side plate #13, #14 with the back plate #21 with screws.Then insert the plate #23 into the finished shelf.



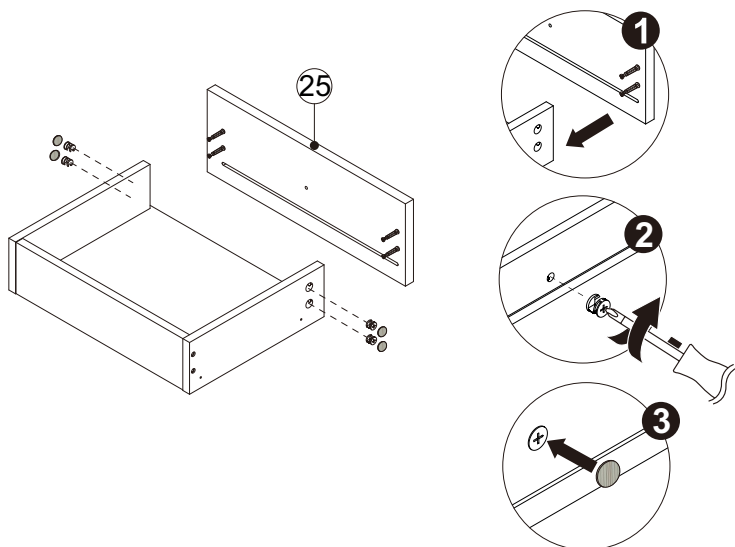


## STEP 16


HARDWARE LIST		
P		4PCS
A		4PCS



- Refer to the illustration, Draw the panel #25 is inserted into the prepared plate, Then tighten the cam lock with the cover.

## STEP 17


HARDWARE LIST		
K		1PCS
D		2PCS
C		6PCS
M		1PCS
M		1PCS

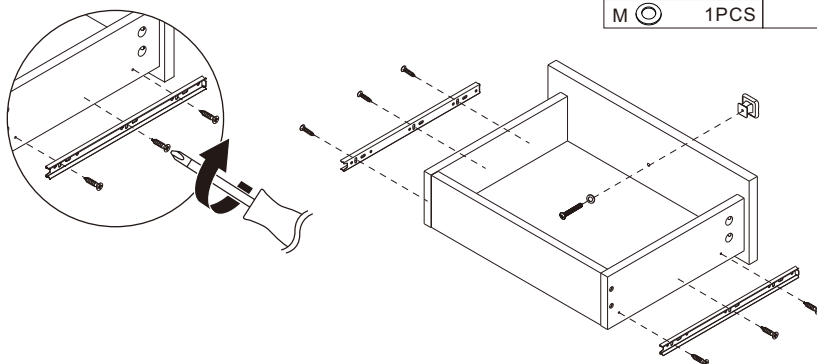

- Refer to the illustration, Apply screws to fix the slides on the boards #13,#14. Use screws to install the handle.



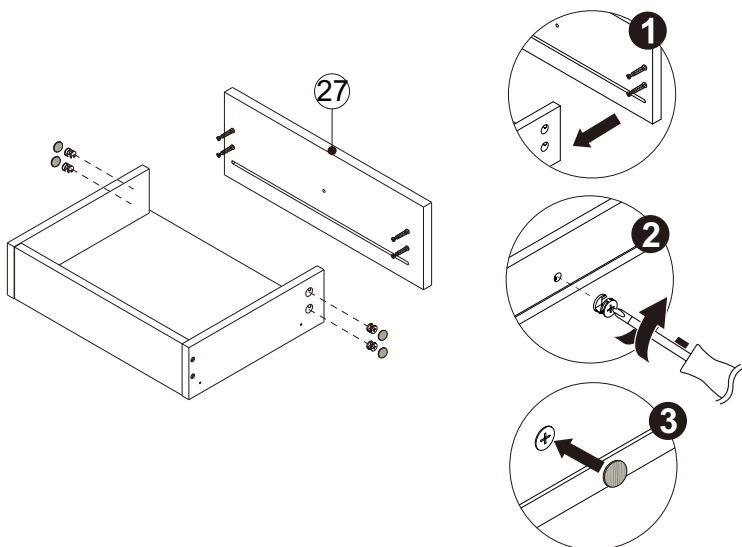


## STEP 18


HARDWARE LIST		
P		4PCS
A		4PCS



- Refer to the illustration, Draw the panel #27 is inserted into the prepared plate, Then tighten the cam lock with the cover.

## STEP 19


HARDWARE LIST		
K		1PCS
D		2PCS
C		6PCS
M		1PCS
M		1PCS

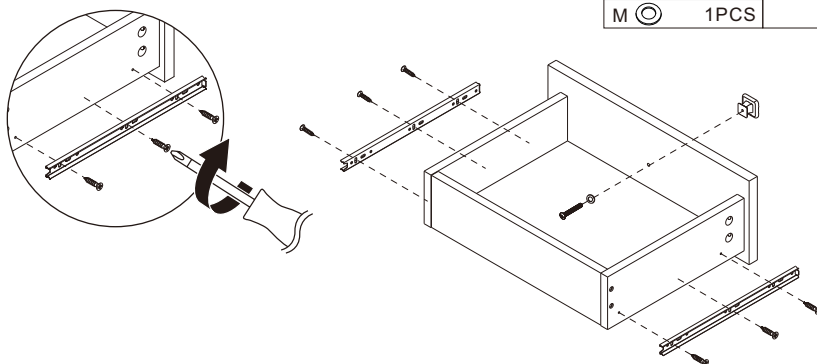

- Refer to the illustration, Apply screws to fix the slides on the boards #13,#14. Use screws to install the handle.

## STEP 20


HARDWARE LIST		
F	 16PCS	

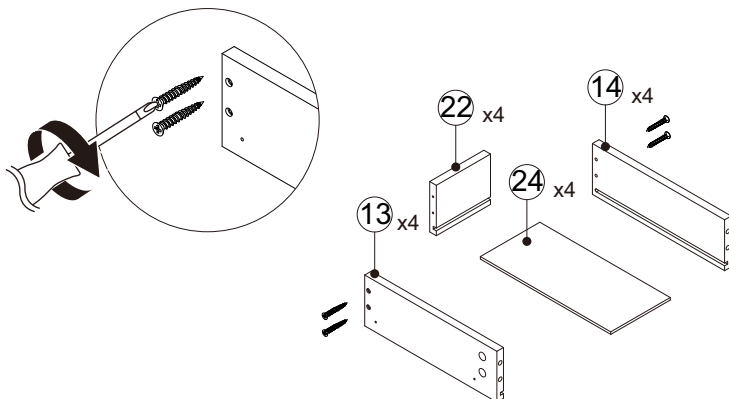

- Refer to the illustration, Connect the side plate #13, #14 with the back plate #22 with screws. Then insert the plate #24 into the finished shelf.



## STEP 21

HARDWARE LIST		
P	 16PCS	
A	 16PCS	

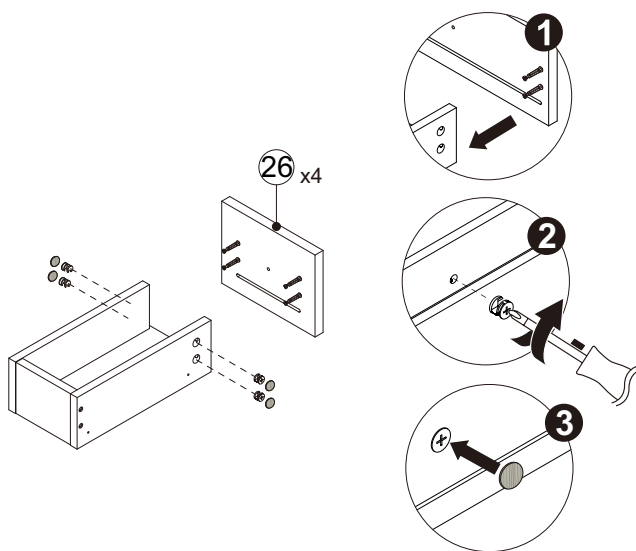


- Refer to the illustration, Draw the panel #26 is inserted into the prepared plate, Then tighten the cam lock with the cover.

## STEP 22


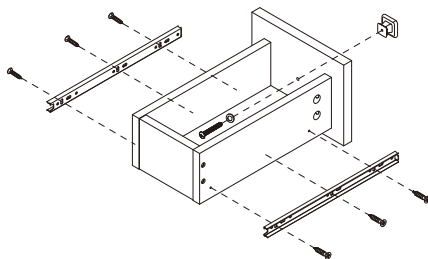
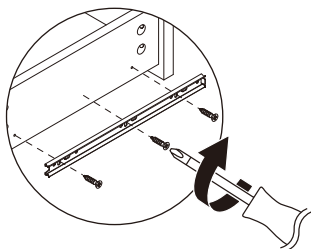


HARDWARE LIST		
K		4PCS
D		8PCS
C		24PCS
M		4PCS
M		4PCS



- Refer to the illustration, Apply screws to fix the slides on the boards #13,#14. Use screws to install the handle.


## STEP 23

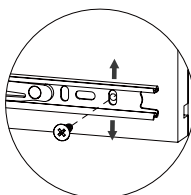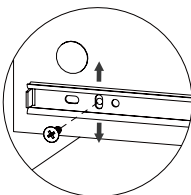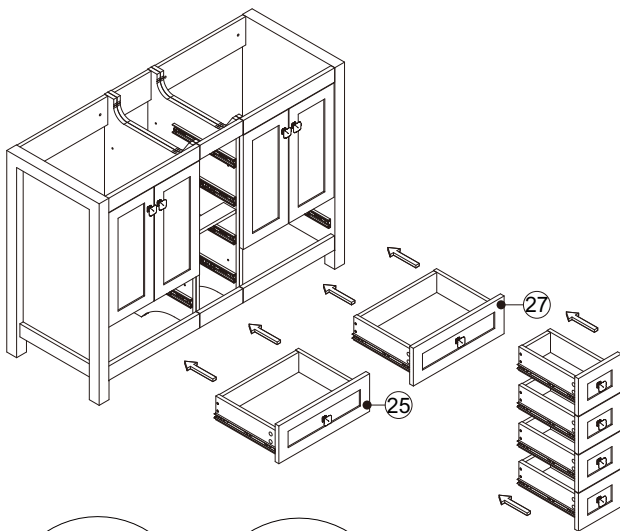






- If the drawers are not in the same level, please adjust the screws in the drawer box.
- Assembled drawers are loaded onto cabinets.

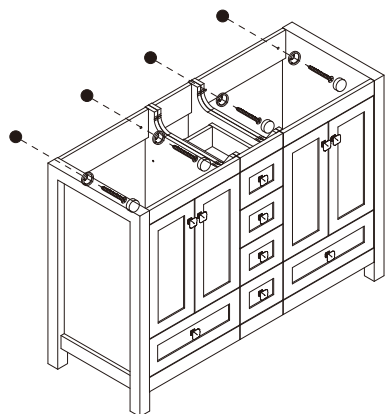

## STEP 24




HARDWARE LIST		
L		4PCS
L		4PCS
L		4PCS
L		4PCS

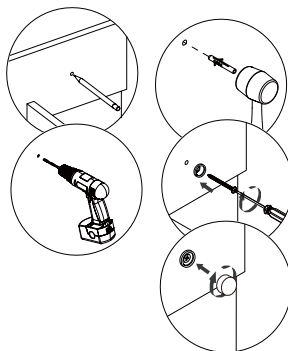


- Refer to the illustration, Draw the spacing between the walls on the cabinet, punch holes in the wall, and fix the cabinet to the wall with screws. Then tighten the nut cover.

## STEP 25

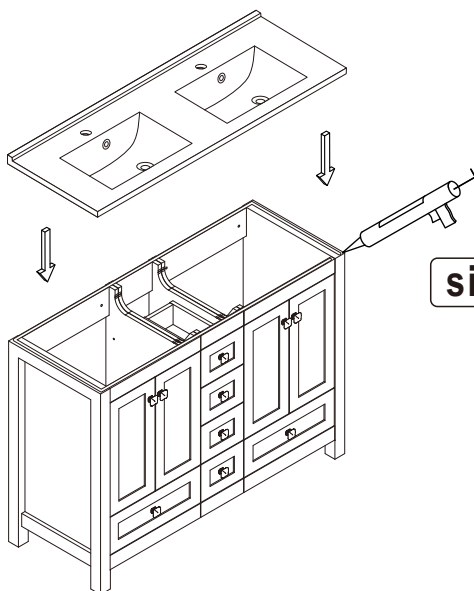

**silicone transparent**

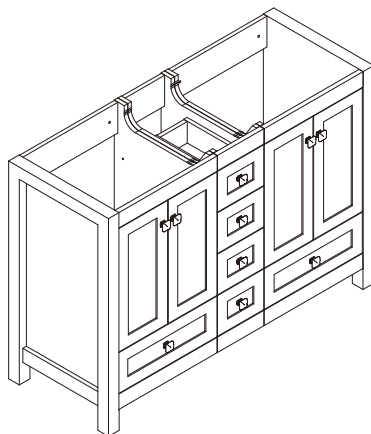

- To help prevent mildew, apply sealant to the space between the wall and the edge of the cabinet.

## CARE AND CLEANING

1. Many cleansers contain abrasive and chemical substance which is not suitable for cleaning stainless steel, enamel, plating or plastic products. You may use mild cleansers or soaps to clean the surfaces. Wipe any splashes of cleaner solutions from the surface with a clean soft cloth.
2. Maintain ventilation in the bathroom and separate the dry area from the damp one if conditions permit. Try to open the door and windows of the bathroom to maintain adequate ventilation.
3. This cabinet is built to withstand normal bathroom humidity. For best results, keep this vanity dry and take necessary steps to minimize bathroom humidity by opening windows and doors and using the exhaust fan (if available).
4. To maintain the cabinet door, clean and wipe the door regularly with a soft cloth. Wipe condensation with a dry, soft cloth. Keep away from fires and high temperatures.
5. Please do not sit, lean or step on the basin cabinet.



Thank you very much for purchasing from us.

We have always been trying to provide the best service and reliable products for every customer.

We sincerely hope you will be satisfied with our products and leave us FIVE STARS and POSITIVE feedback/review in our page.

However, accident may happen sometimes, please contact us to resolve any issue before leaving a negative feedback.

Many thanks and welcome to our shop again!

**Contact number:** (323)-393-8260

**E-mail:** [service@eclifeusa.com](mailto:service@eclifeusa.com)