









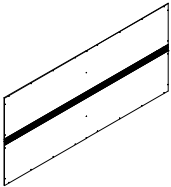


CROSLEY
FURNITURE

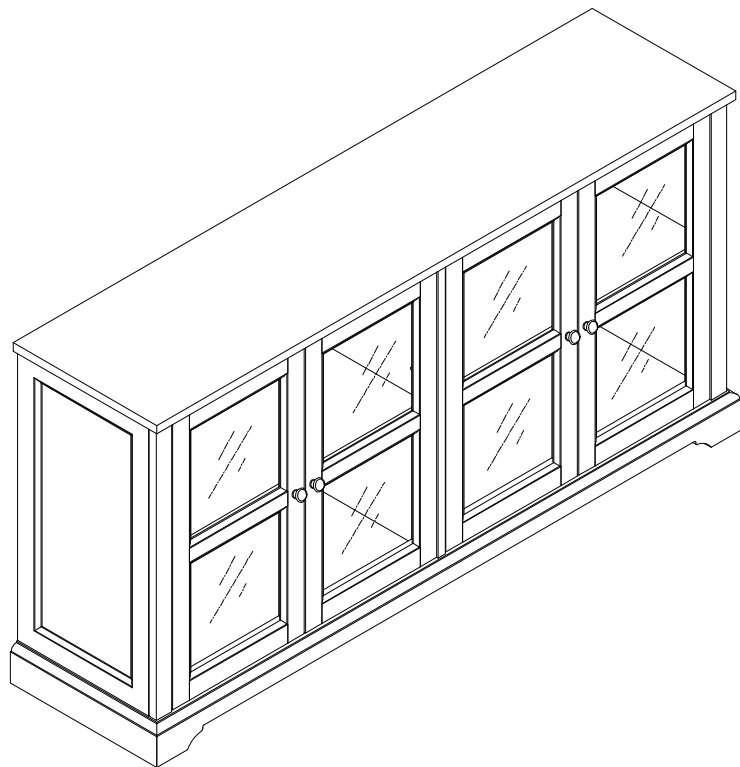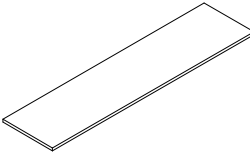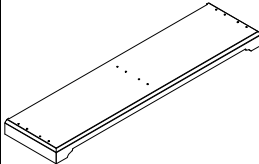











Glass Door Sideboard
CF4221



PART LIST


A 	B 	C 	D 	E 
Top Panel 1 PC	Left Panel 1 PC	Right Panel 1 PC	Bottom Panel 1 PC	Adjustable Shelf 2 PCS
F 	G 	H 	I 	J 
Partition Panel 1 PC	Left Door 2 PCS	Right Door 2 PCS	Support Leg 1 PC	Back Panel 1 PC

HARDWARE LIST

<div>#1</div>  <div>1/4"x1-1/4"</div>	<div>#2</div>  <div>1/4"</div>	<div>#3</div>  <div>1/4"x16mm</div>	<div>#4</div>  <div>8x30mm</div>	<div>#5</div> 
<div>Bolt</div> <div>12 PCS (Extra 1)</div>	<div>Spring Washer</div> <div>12 PCS (Extra 1)</div>	<div>Flat Washer</div> <div>12 PCS (Extra 1)</div>	<div>Wood Dowel</div> <div>12 PCS (Extra 1)</div>	<div>Knob</div> <div>4 PCS</div>
<div>#6</div>  <div>5/32x25mm</div>	<div>#7</div> 	<div>#8</div>  <div>3x14mm</div>	<div>#9</div> 	<div>#10</div>  <div>3x14mm</div>
<div>Round Head Bolt</div> <div>4 PCS (Extra 1)</div>	<div>Double Magnet</div> <div>2 PCS</div>	<div>Round Head Screw</div> <div>4 PCS (Extra 1)</div>	<div>Shelf Holder</div> <div>8 PCS (Extra 1)</div>	<div>Screw</div> <div>26 PCS (Extra 1)</div>
<div>#11</div>  <div>M 4</div>	<div>#12</div> 			
<div>Allen Wrench</div> <div>1 PC</div>	<div>Safety Strap Kit</div> <div>1 SET</div>			

ADDITIONAL TOOLS (Not Provided)


Note: It is not recommended to use power tools during assembly.




Phillips Head Screwdriver

Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.


Step 1. Attach knobs (part #5) to doors (parts G & H) using round head bolts (part #6) and phillips head screwdriver. Attach double magnets (part #7) to top panel (part A) using round head screws (part #8) and phillips head screwdriver.

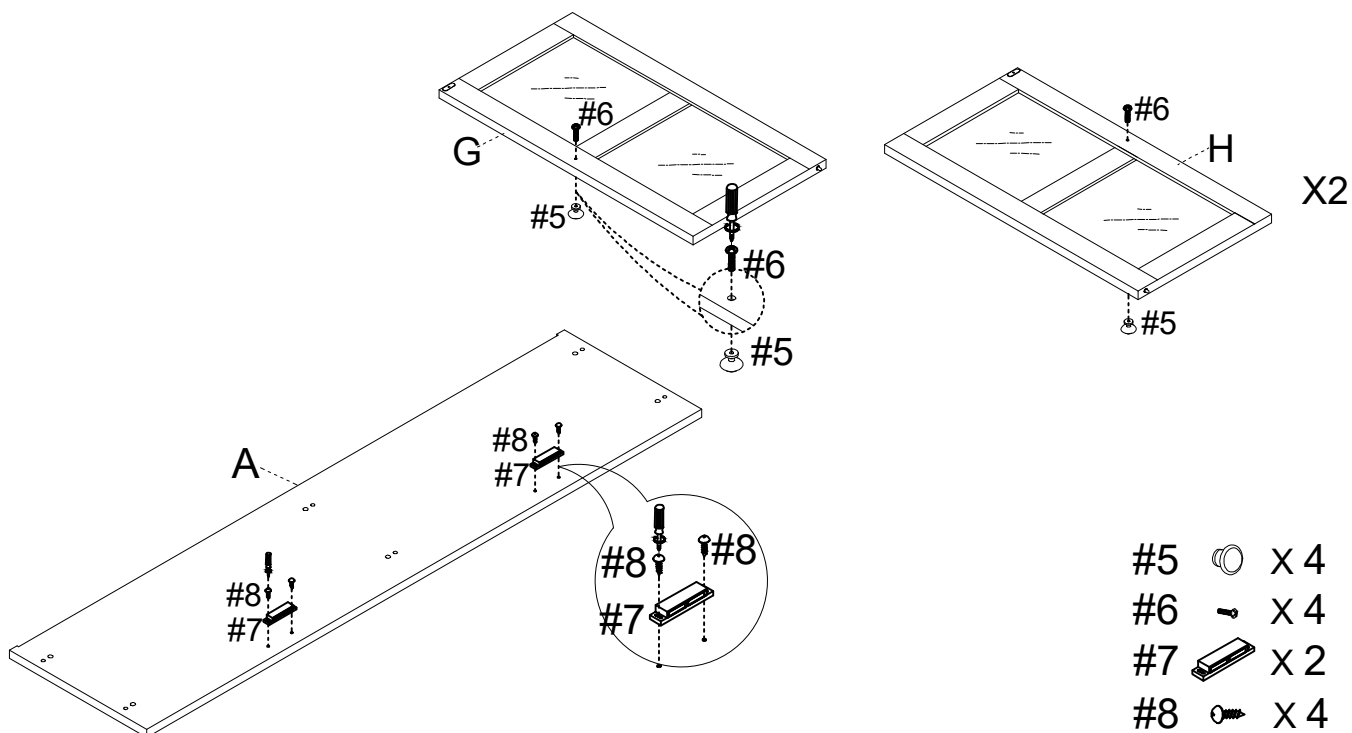


Step 2. Attach support leg (part I) to bottom panel (part D).

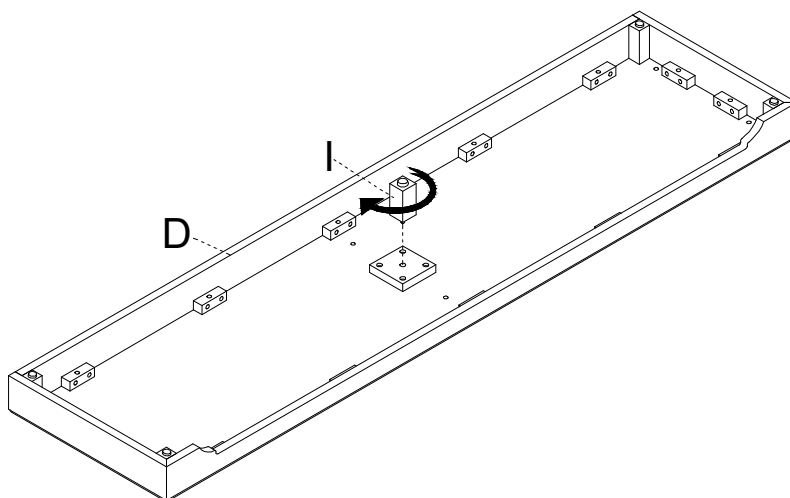


Step 3. Attach bottom panel (part D) to panels (parts B, C & F) using wood dowels (part #4), bolts (part #1), spring washers (part #2), flat washers (part #3) and allen wrench (part #11).

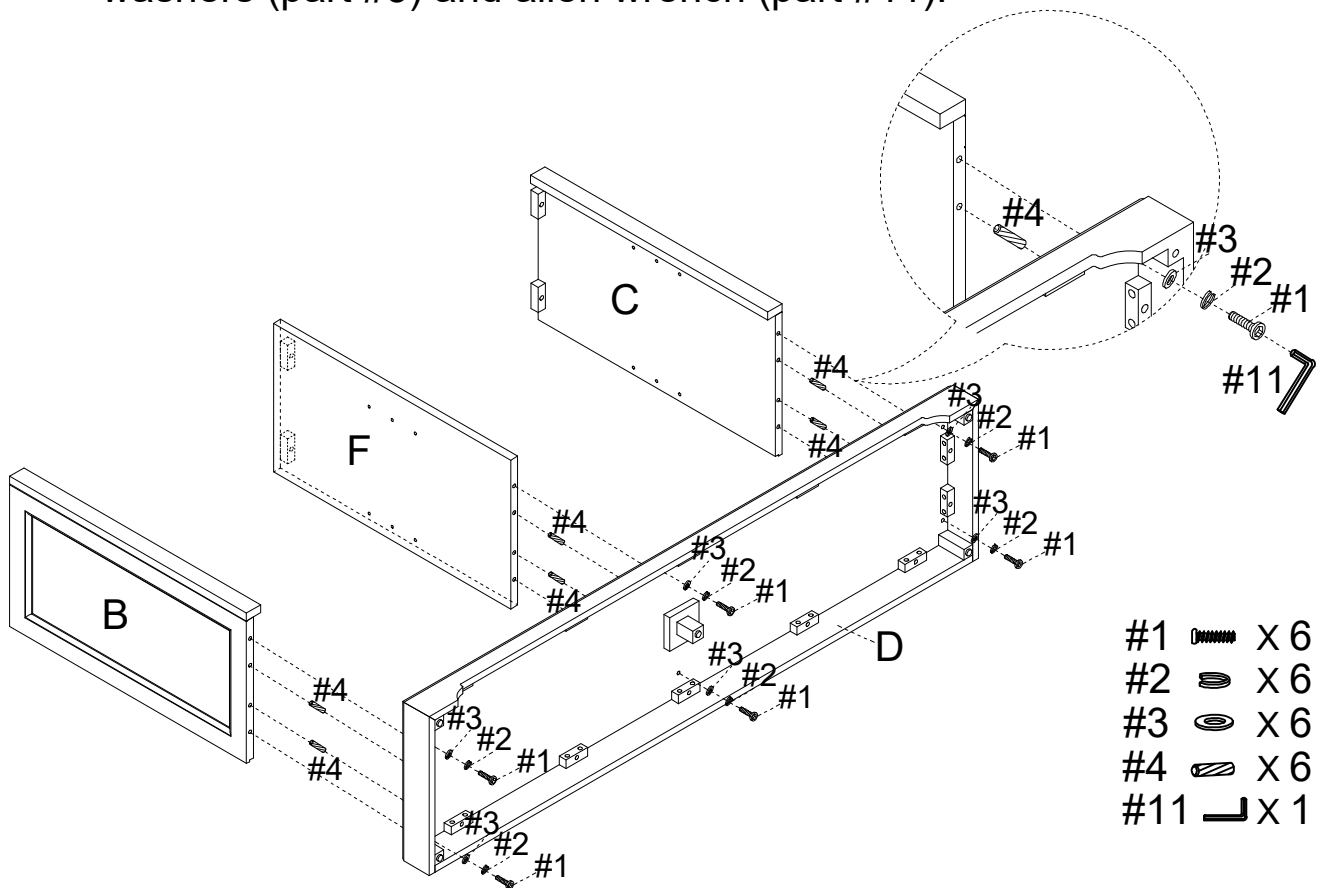


Step 4. Carefully turn unit upright. Attach top panel (part A) to assembled unit (parts B, C & F) using wood dowels (part #4), bolts (part #1), spring washers (part #2), flat washers (part #3) and allen wrench (part #11).

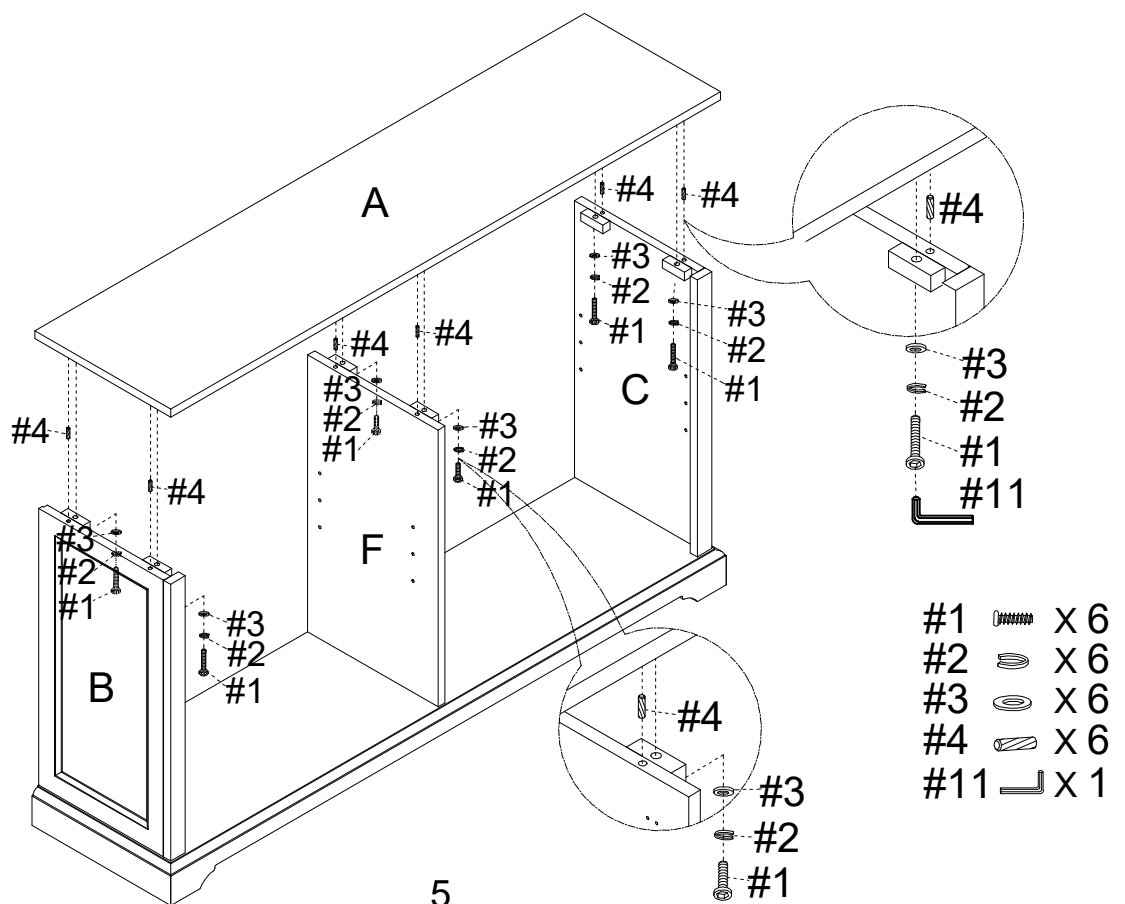

Step 5. Attach back panel (part J) to assembled unit (parts A, B, C, D & F) using screws (part #10) and phillips head screwdriver.

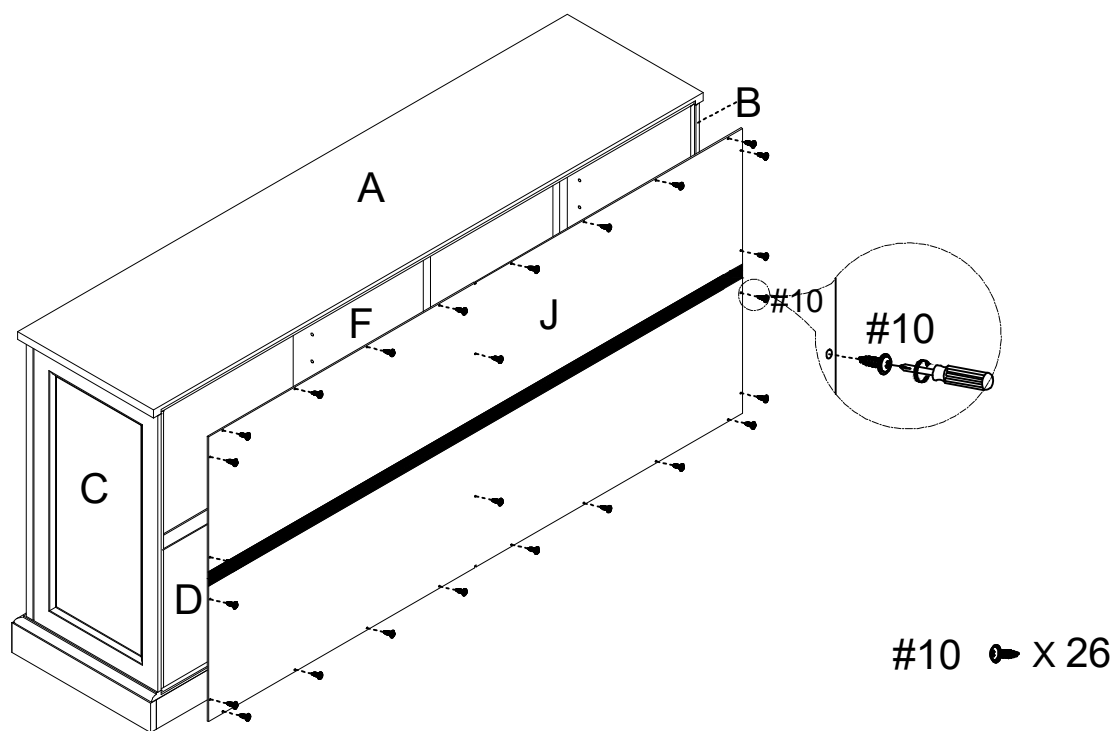

Step 6. Place shelf holders (part #9) into desired position and slide adjustable shelves (part E) into place.

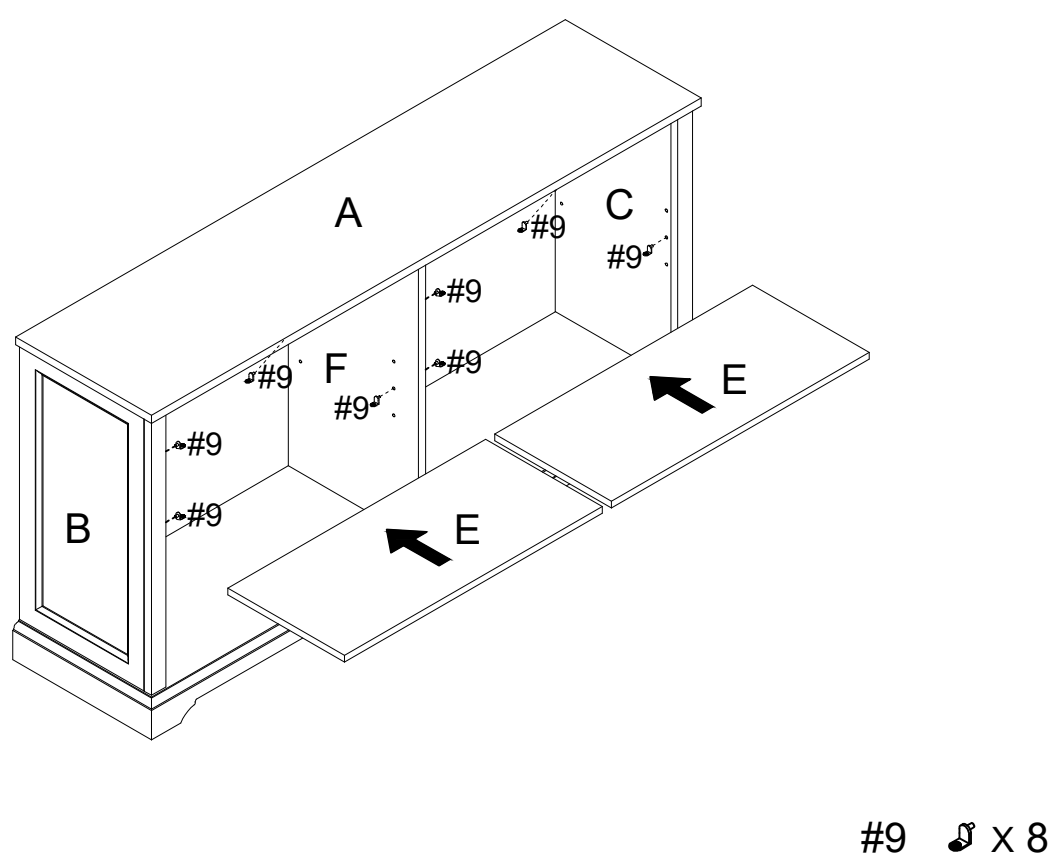








Step 7. Attach doors (parts G & H) by placing bottom pin hinge (pre-installed in door) in the pre-drilled hole of bottom panel (part D). Then depress the top spring-loaded pin hinge so it can be placed in the pre-drilled hole of top panel (part A).

Note: Be sure top and bottom pin hinges are fully extended to secure doors in place.

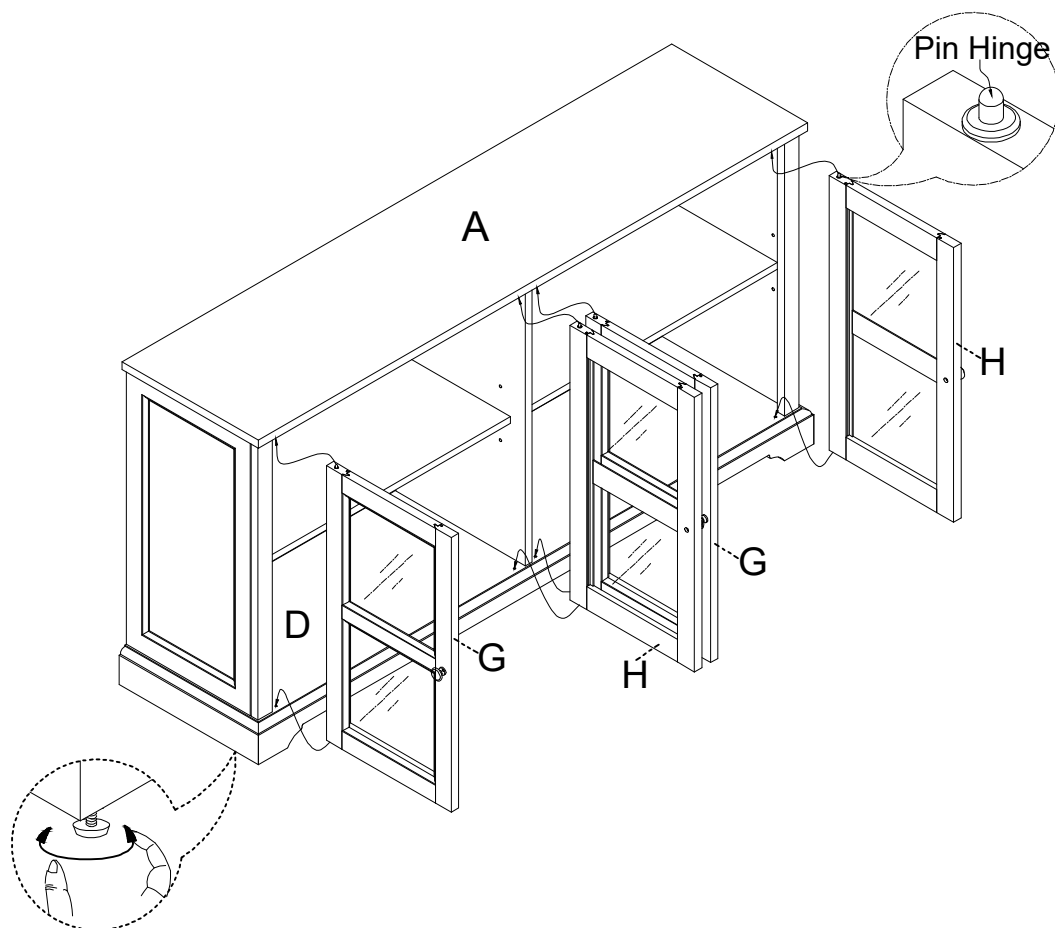Note: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

Important: Safety strap kit (part #12) must be installed to prevent tipping, damage and/or injury.



#12	A	B	C	D	E
					
Safety Strap Kit 1 SET	Wall Anchor 1 PC	Bracket 2 PCS	Short Screw 1 PC 5/8"x ϕ 3xD8	Long Screw 1 PC 1-1/2"x ϕ 4xD8	Safety Wall Strap 1 PC

SAFETY WALL STRAP INSTALLATION

Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury.

1. Insert short screw (C) and safety wall strap (E) through bracket (B) and attach to top panel (part A) using phillips head screwdriver.
2. Drill a 11/32" hole where you want to secure the unit. The drilled hole will be at the same height as the hole in top panel (part A) where bracket (B) is attached. Tap wall anchor (A) into the hole.
3. Insert long screw (D) and safety wall strap (E) through bracket (B) into wall anchor (A) using phillips head screwdriver.

Note: This item is not intended for clothing storage use.

