
AI-BDCSTV2 Assembly Instructions



General Assembly Guidelines

- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are : wood dowels , screws and bolts.
- V. The provided glue is to secure wood dowels in place. When first inserting dowels, locate the appropriate hole for the dowel, place a small amount of glue in the hole and insert the dowel. Wipe away excess glue immediately.




In future assembly steps when dowels are necessary to attach assembly parts together, place a small amount of glue on the end of the dowel before attaching parts together. Wipe away excess glue immediately.




VI. A Phillips head screwdriver is required for the assembly of this product.



VII. Power tools should not be used to assemble this product.



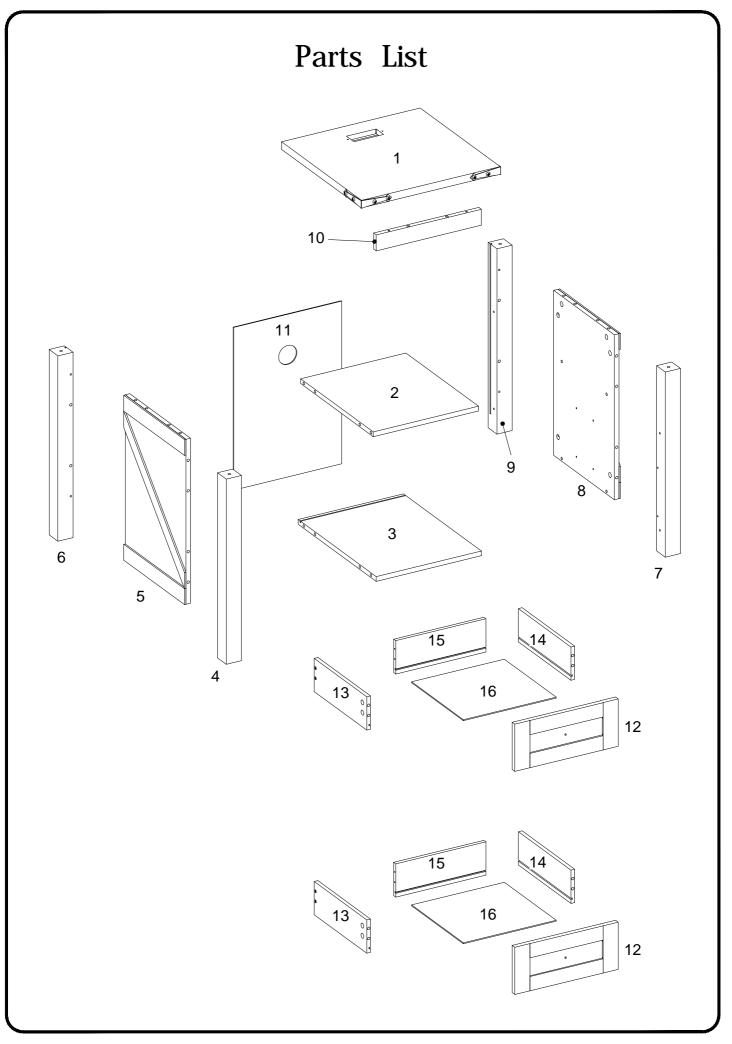



Hardware List


Α		Ø8x30mm	Wooden dowel	26	pcs
В		Ø6x35mm	Cam bolt	28	pcs
С		Ø15x11mm	Cam lock	20	pcs
D		Ø30mm	Sticker	28	pcs
Е			Glue tube	1	рс
F			Plastic wedge	4	pcs
G	<	Ø3x17mm	Flat-head screw	4	pcs
Н		Ø4x12mm	Handle bolt	2	pcs
J			Handle	2	pcs
K		Ø15x9.5mm	Cam lock	8	pcs
L	<ammam(%)< td=""><td>Ø4x38mm</td><td>Screw</td><td>8</td><td>pcs</td></ammam(%)<>	Ø4x38mm	Screw	8	pcs
М	<i>₹amman</i> (%)	Ø4x44mm	Screw	2	pcs
N		Ø3.5x12mm	Screw	26	pcs
Р	23.00	12"	Left cabinet member	2	pcs
Q	0.0.20	12"	Right cabinet member	2	pcs
R	9 1 2 1 0 Tr	12"	Left drawer runner	2	pcs
S	And the state of t	12"	Right drawer runner	2	pcs
Т			USB Interface	1	pcs





Philips head screwdriver required for assembly (not included)

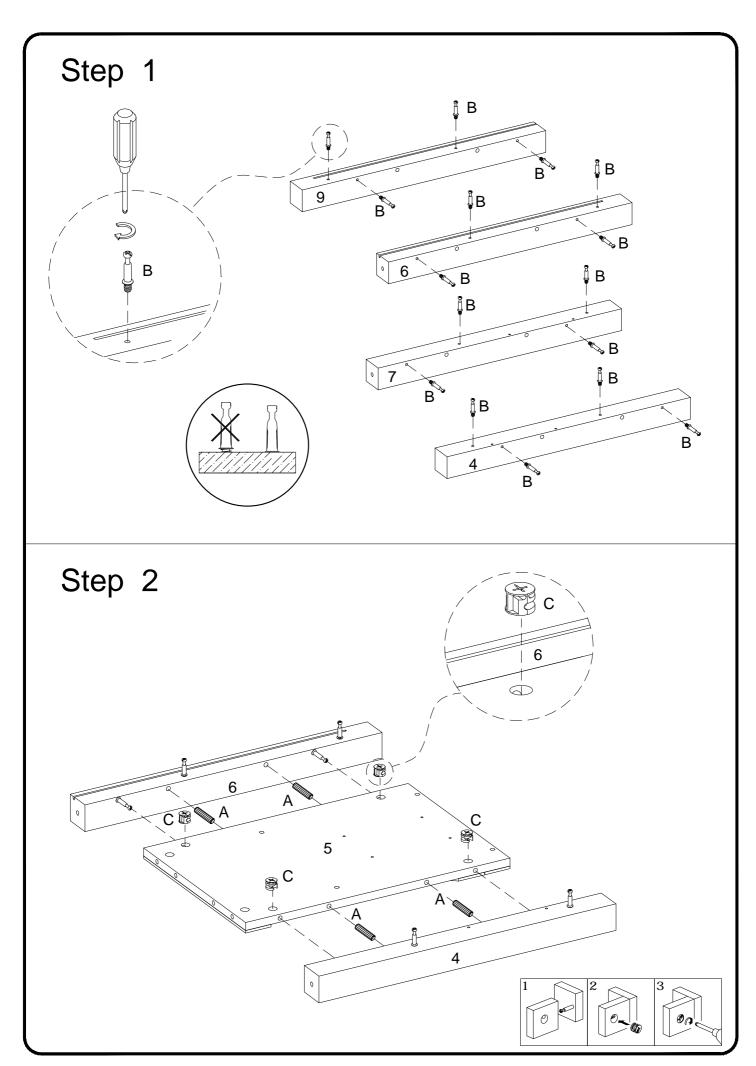


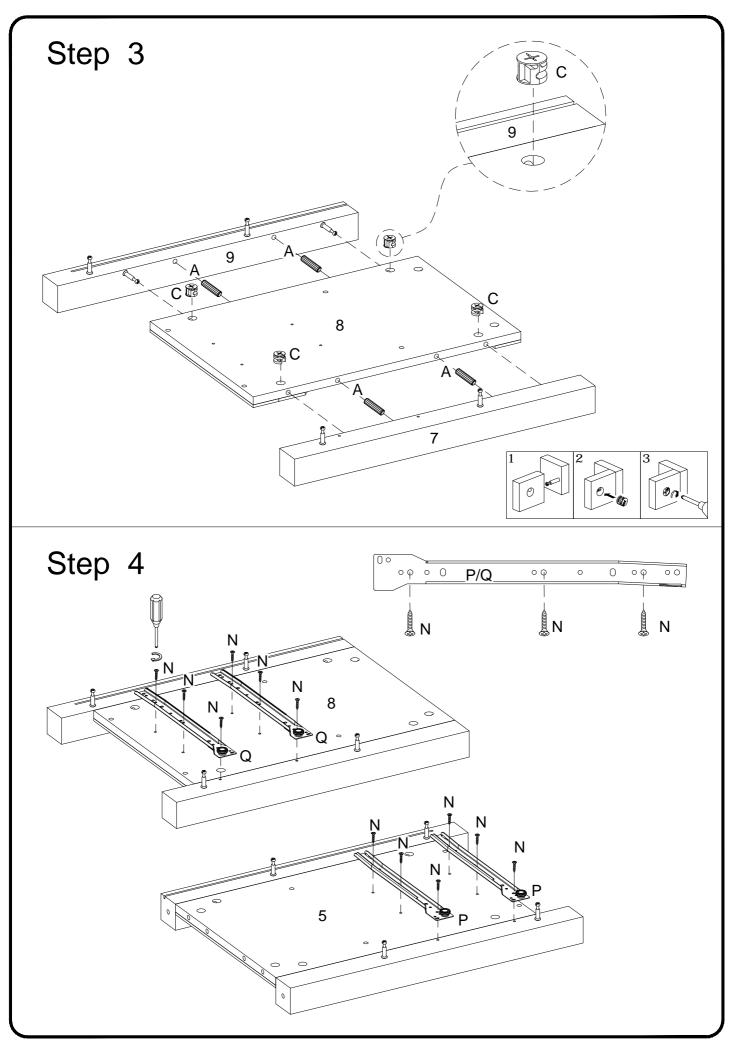


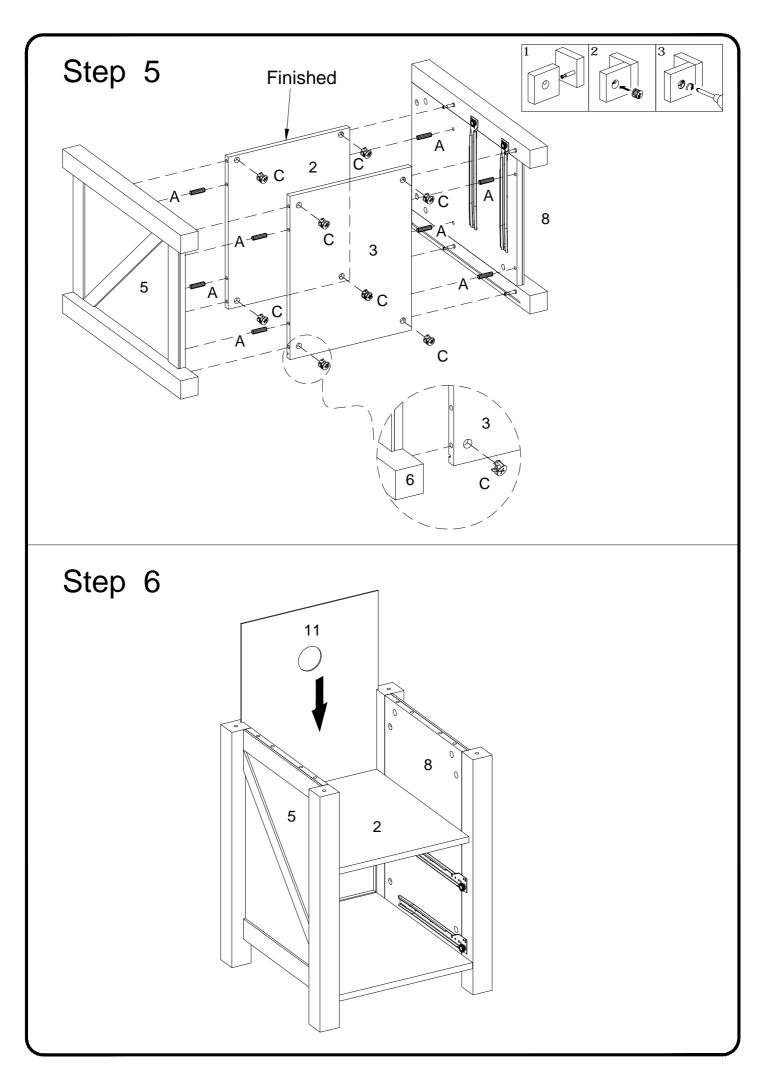

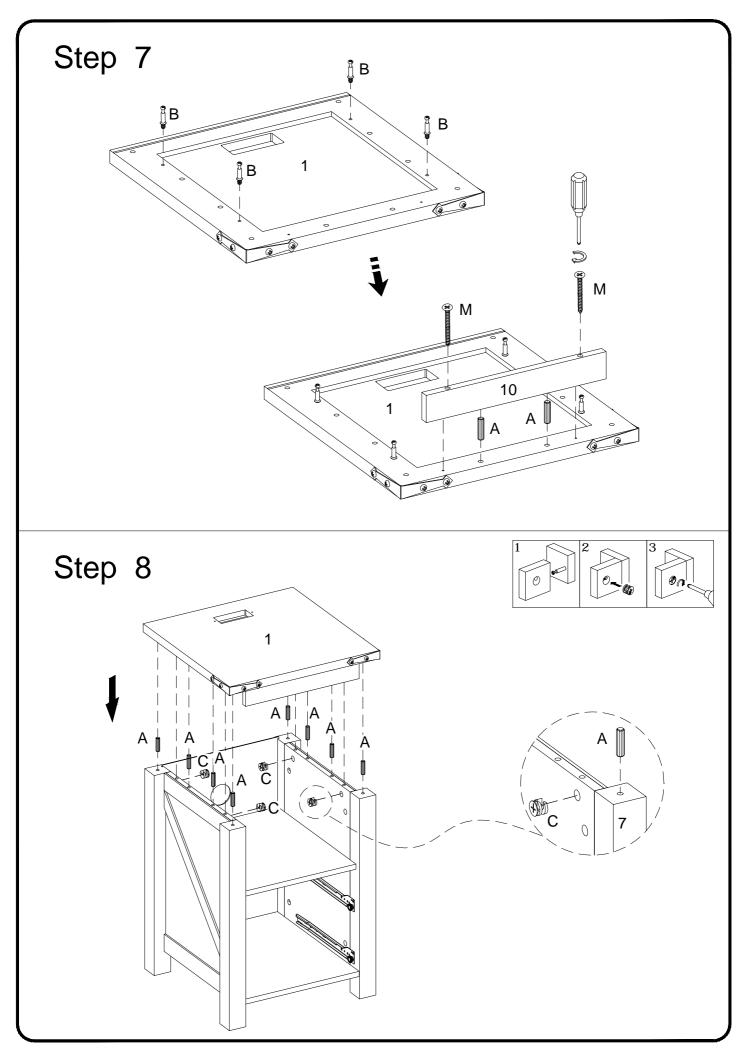

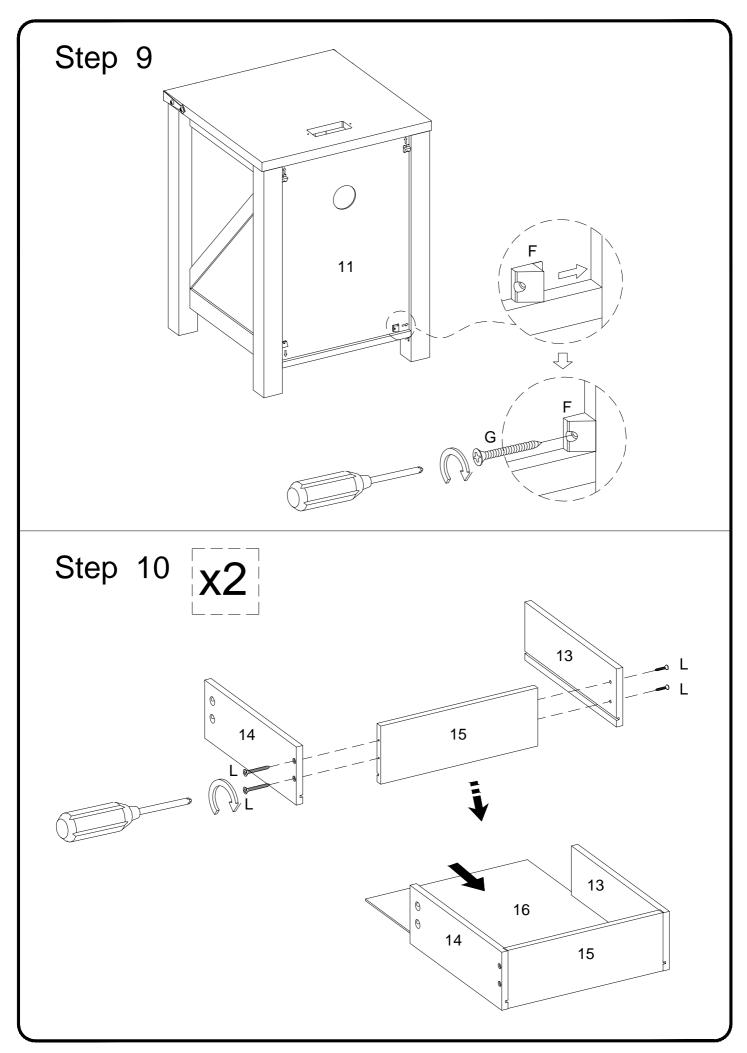

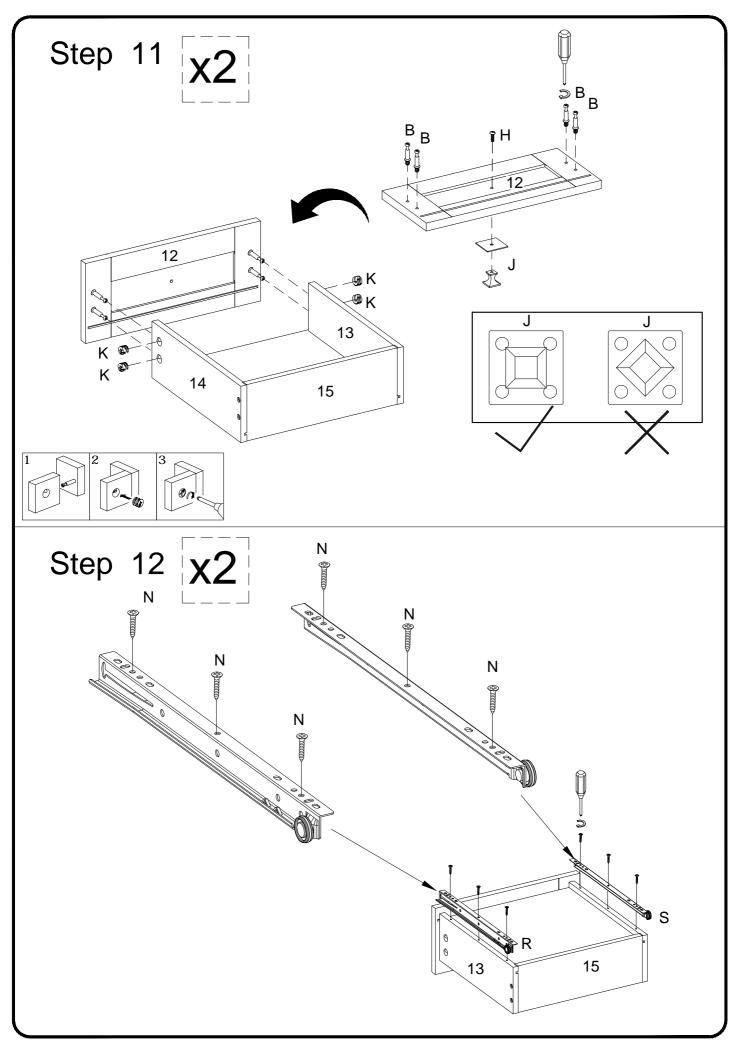

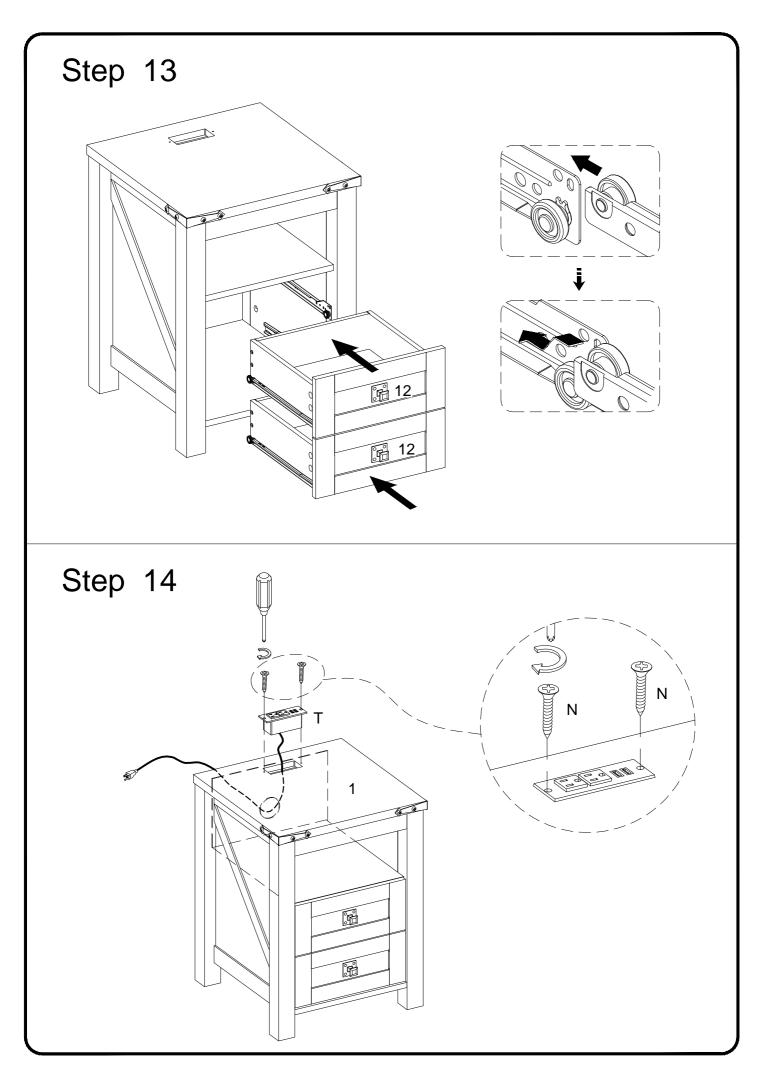

Step 15 Final Assembly