












ASSEMBLING INSTRUCTION


A		1pc	F	 M6*40	6pcs
B		1pc	G	 M6	10pcs
C		1pc	H		1pc
D		1pc	I		1pc
E	 M6*35	4pcs	J		1pc

Note: first screw all bolts in by hand, before tightening.


①

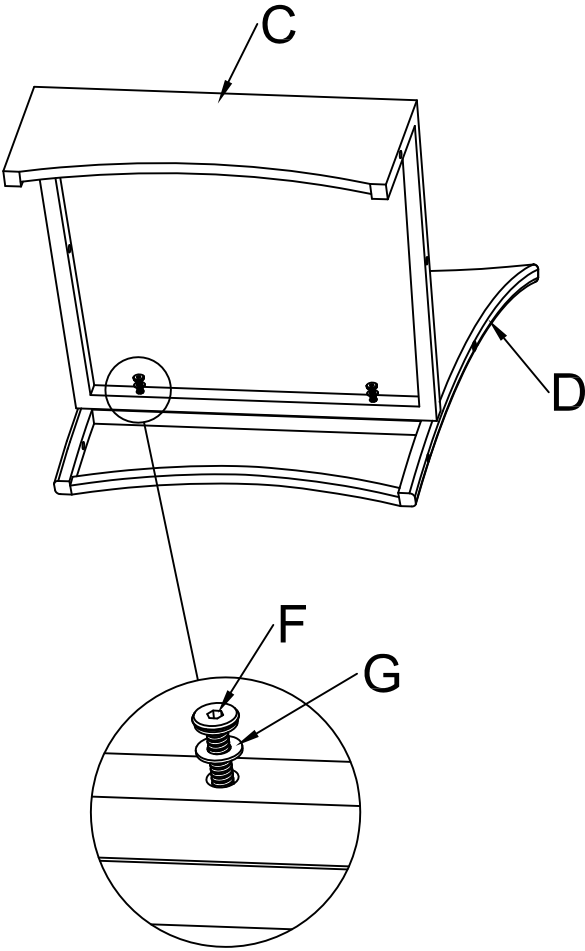

2

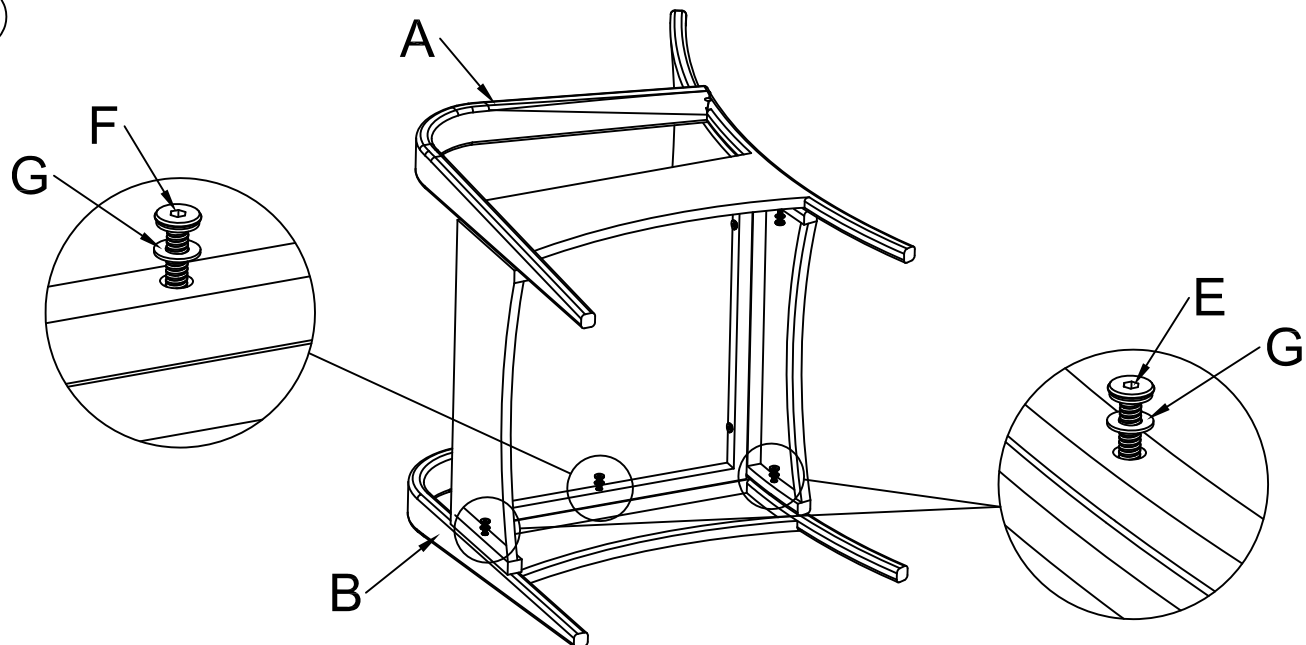

3

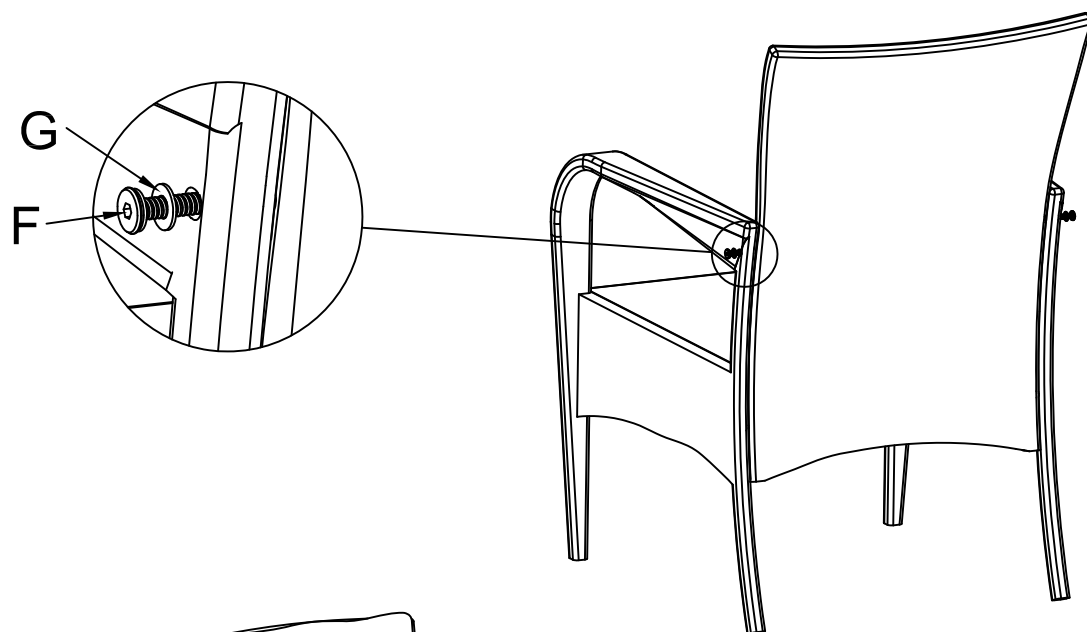

4

