


AI-ASC18ST


Assembly Instructions

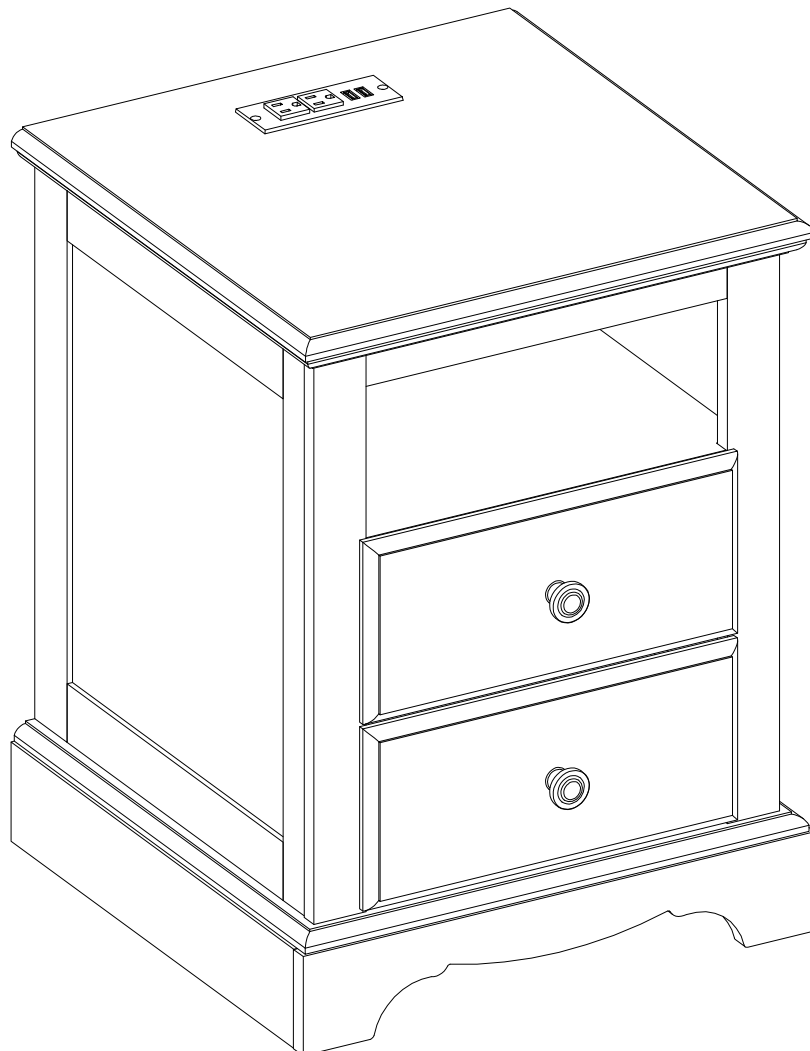


Customer Service E-mail Address : xiuxiumaoyius@163.com

General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are : wood dowels , screws and bolts.
- V. The provided glue is to secure wood dowels in place . When first inserting dowels , locate the appropriate hole for the dowel , place a small amount of glue in the hole and insert the dowel . Wipe away excess glue immediately.

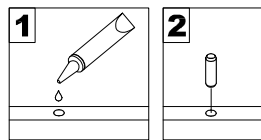


In future assembly steps when dowels are necessary to attach assembly parts together , place a small amount of glue on the end of the dowel before attaching parts together . Wipe away excess glue immediately.

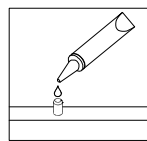


- VI. A Phillips head screwdriver is required for the assembly of this product .

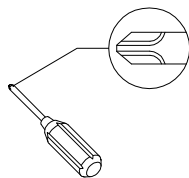

- VII. Power tools should not be used to assemble this product .

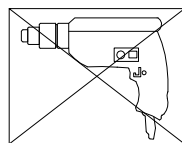





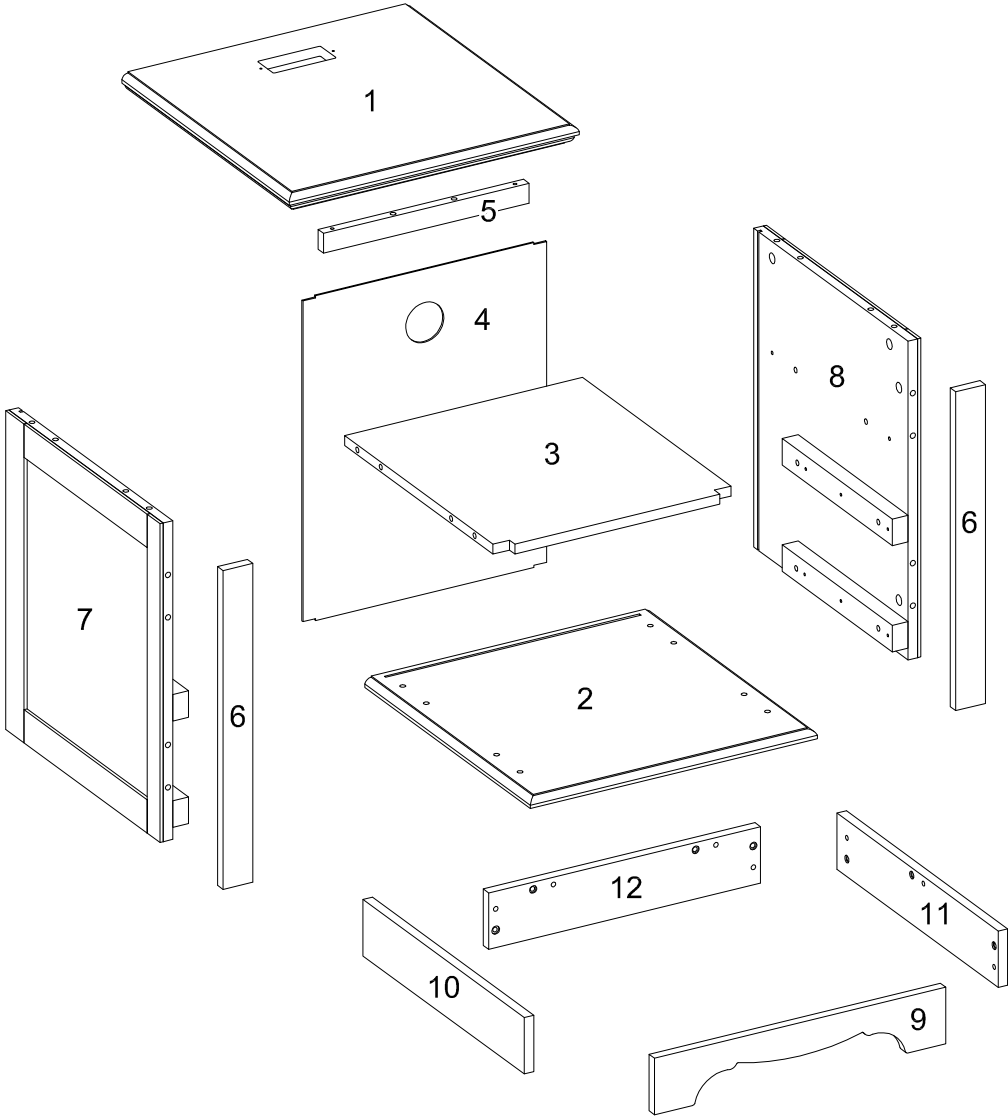
















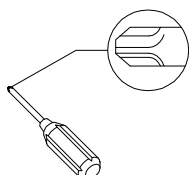
Parts List



x2


Hardware List

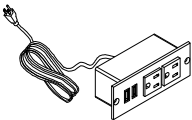A		Ø8x30mm	Wooden dowel	18 pcs
B		Ø6x35mm	Cam bolt	20 pcs
C		Ø15x11mm	Cam lock	12 pcs
D		Ø30mm	Sticker	20 pcs
E			Glue tube	1 pc
F			Plastic wedge	6 pcs
G		Ø3x17mm	Flat-head screw	6 pcs
H		Ø4x22mm	Handle bolt	2 pcs
J			Handle	2 pcs
K		Ø15x9.5mm	Cam lock	8 pcs
L		Ø4x32mm	Screw	10 pcs
M		Ø6x50mm	Screw	4 pcs
N		Ø6x12mm	Bolt	20 pcs
P			Connector	10 pcs
Q		Ø3.5x12mm	Screw	26 pcs
R		12"	Left cabinet member	2 pcs
S		12"	Right cabinet member	2 pcs
T		12"	Left drawer runner	2 pcs
U		12"	Right drawer runner	2 pcs
V			USB Interface	1 pcs
W		M 4	Hexagon socket key	1 pcs




Philips head screwdriver required for assembly
(not included)



Step 1

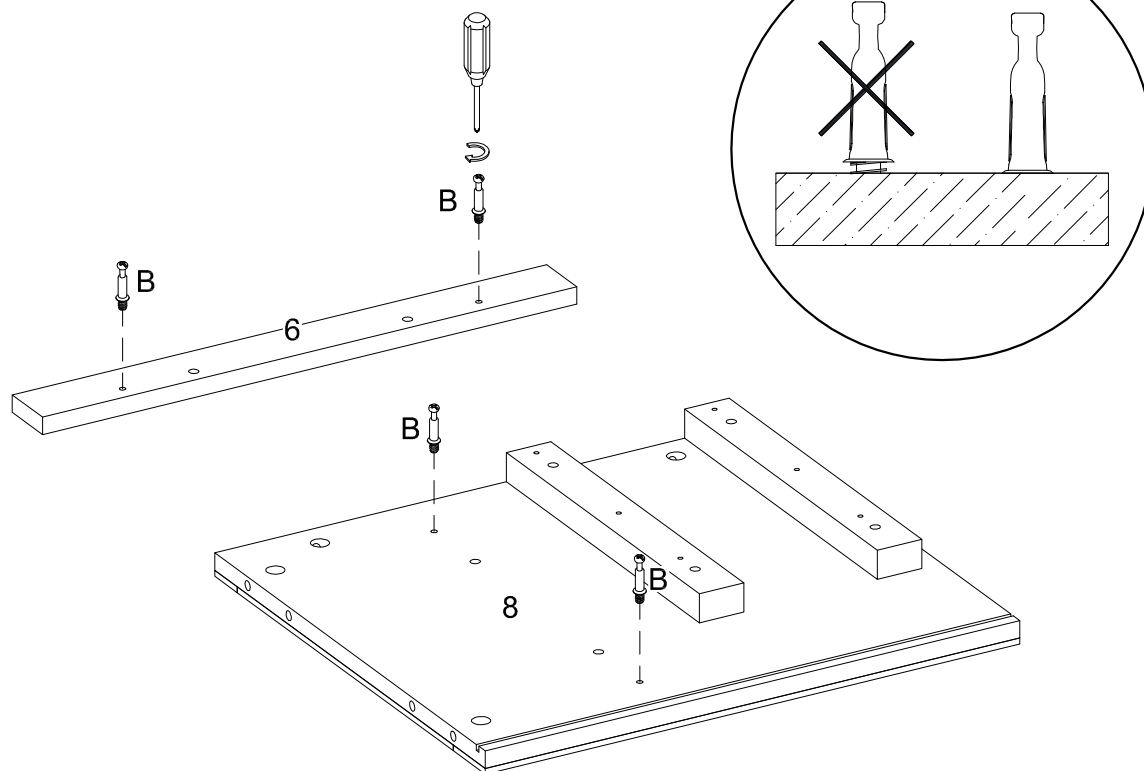



Step 2

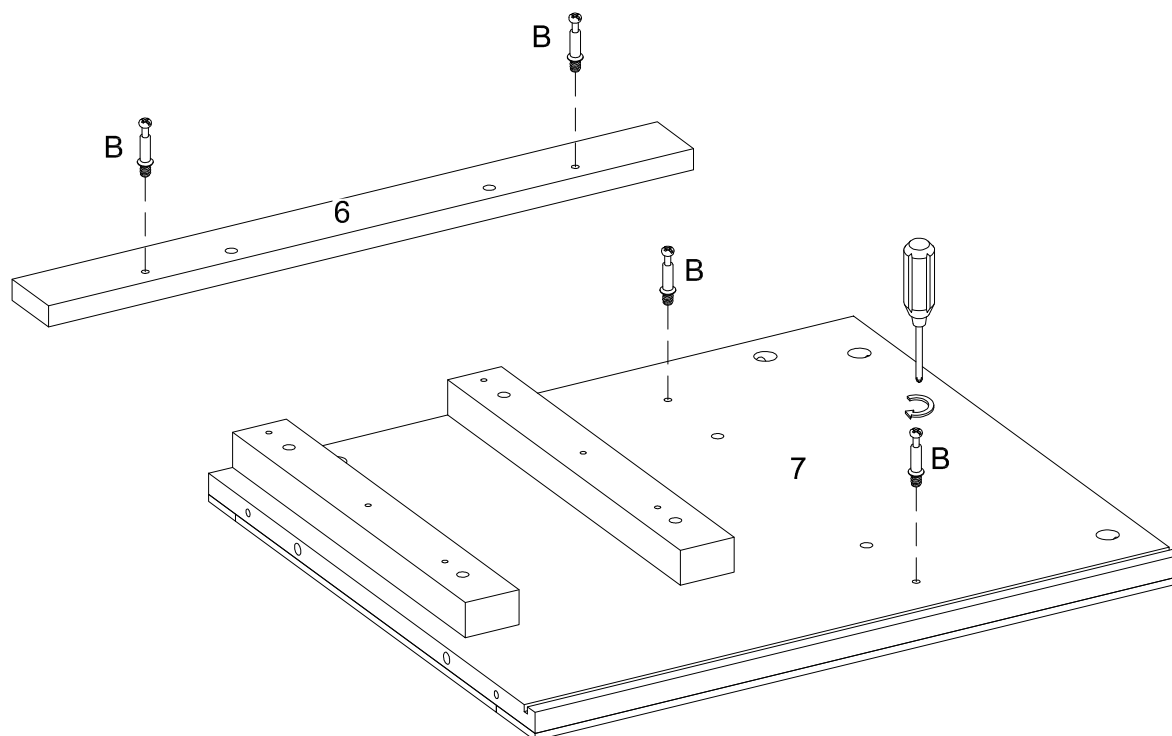


Step 3

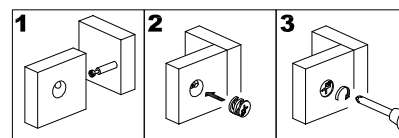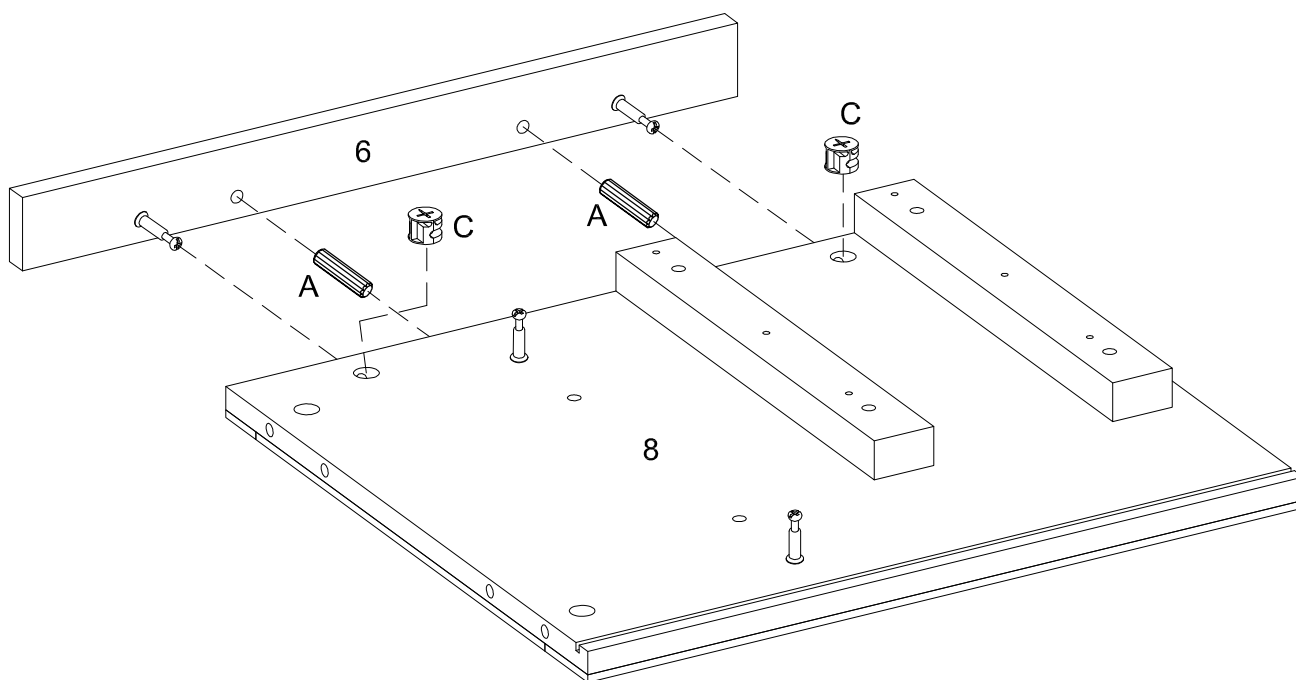


Step 4

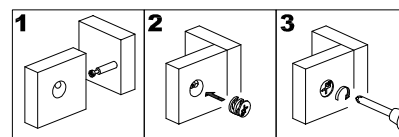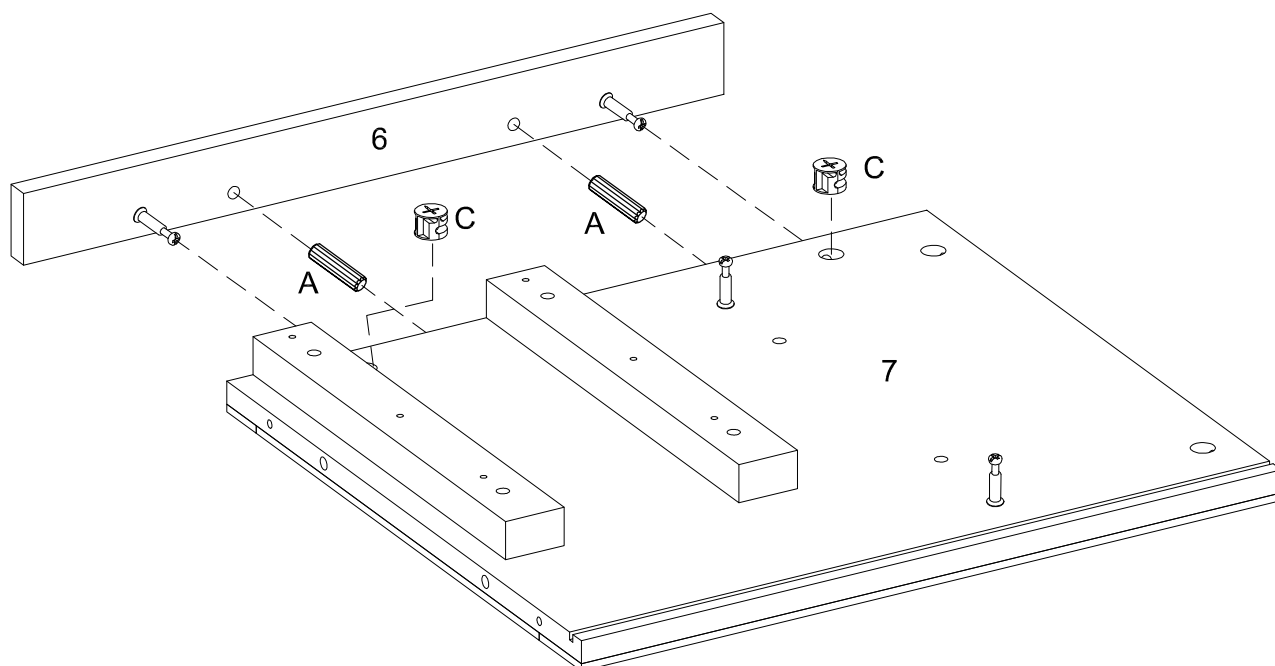


Step 5

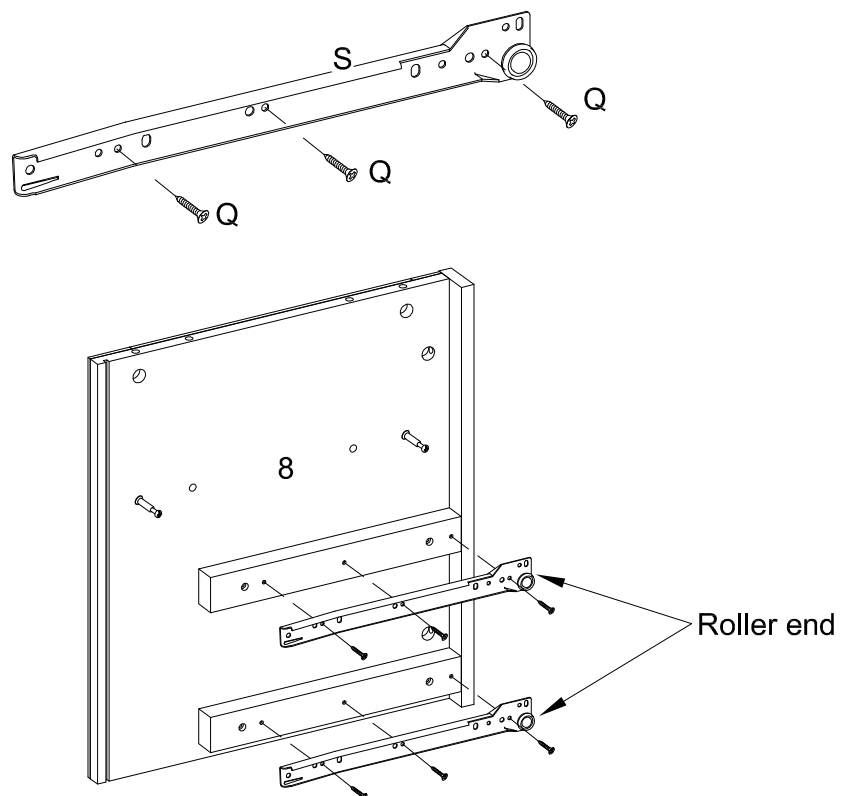


Step 6

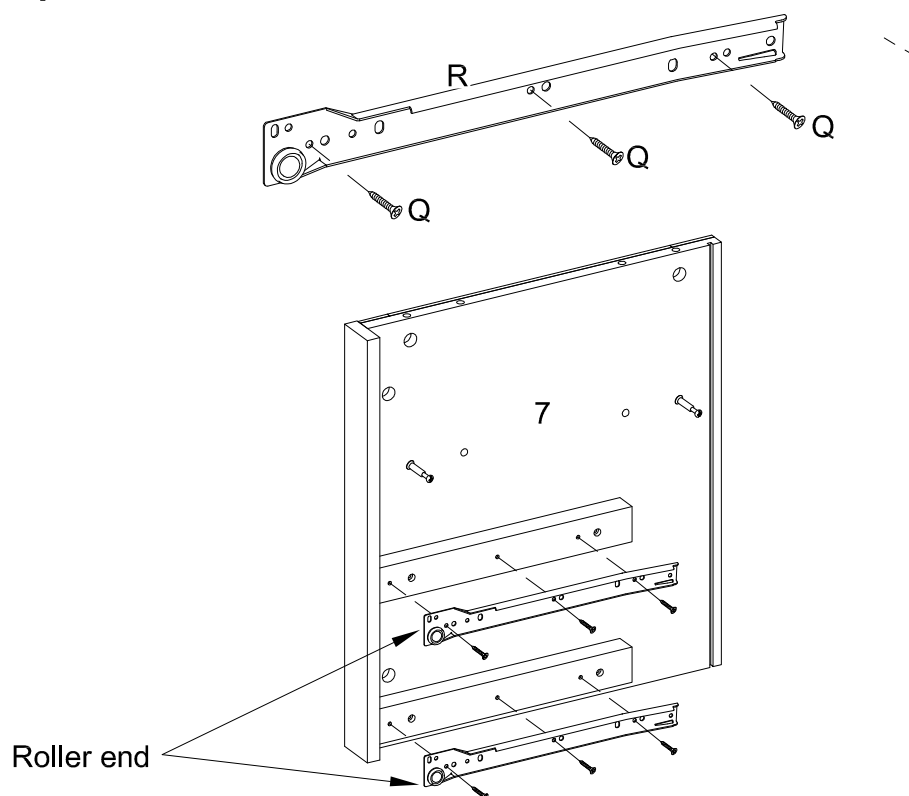


Step 7

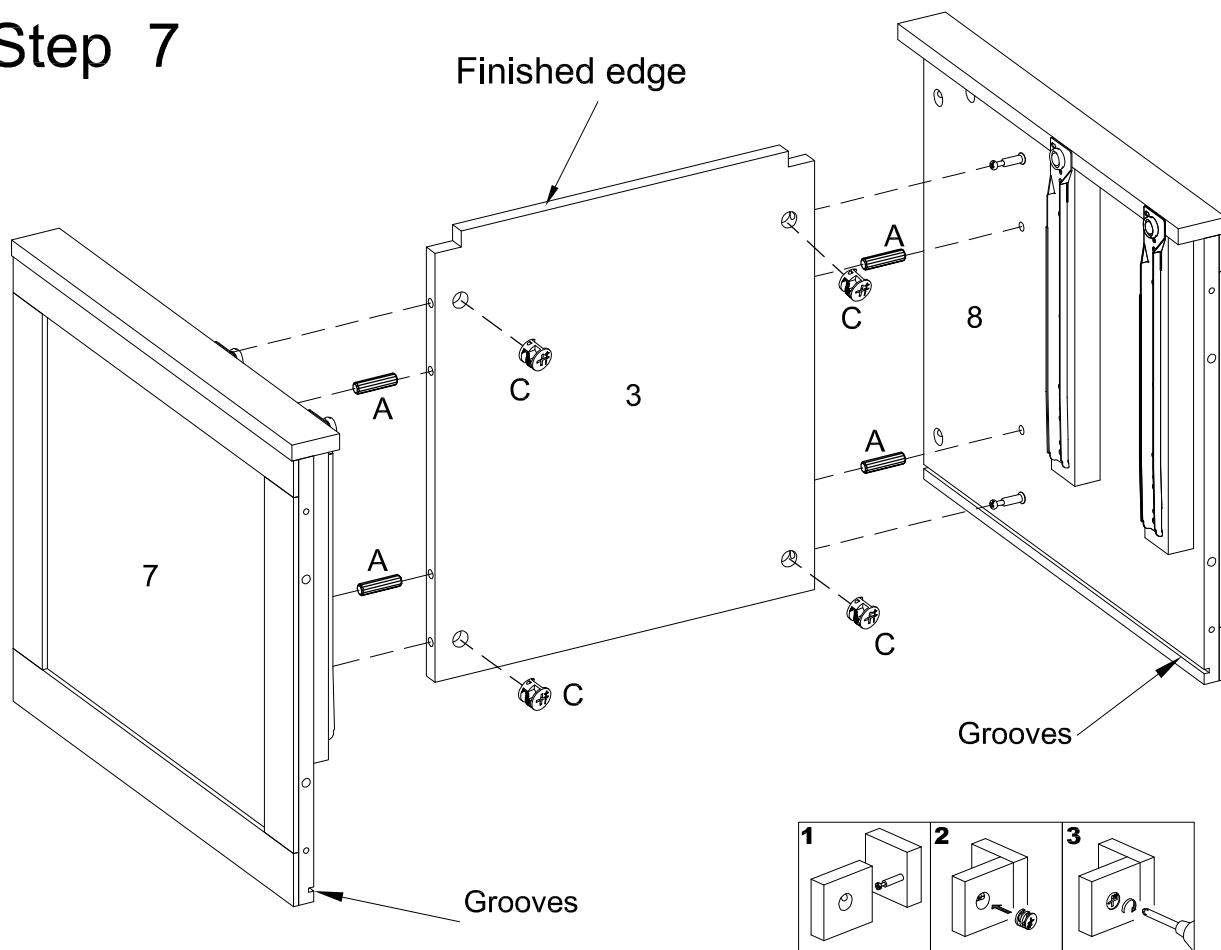


Step 8

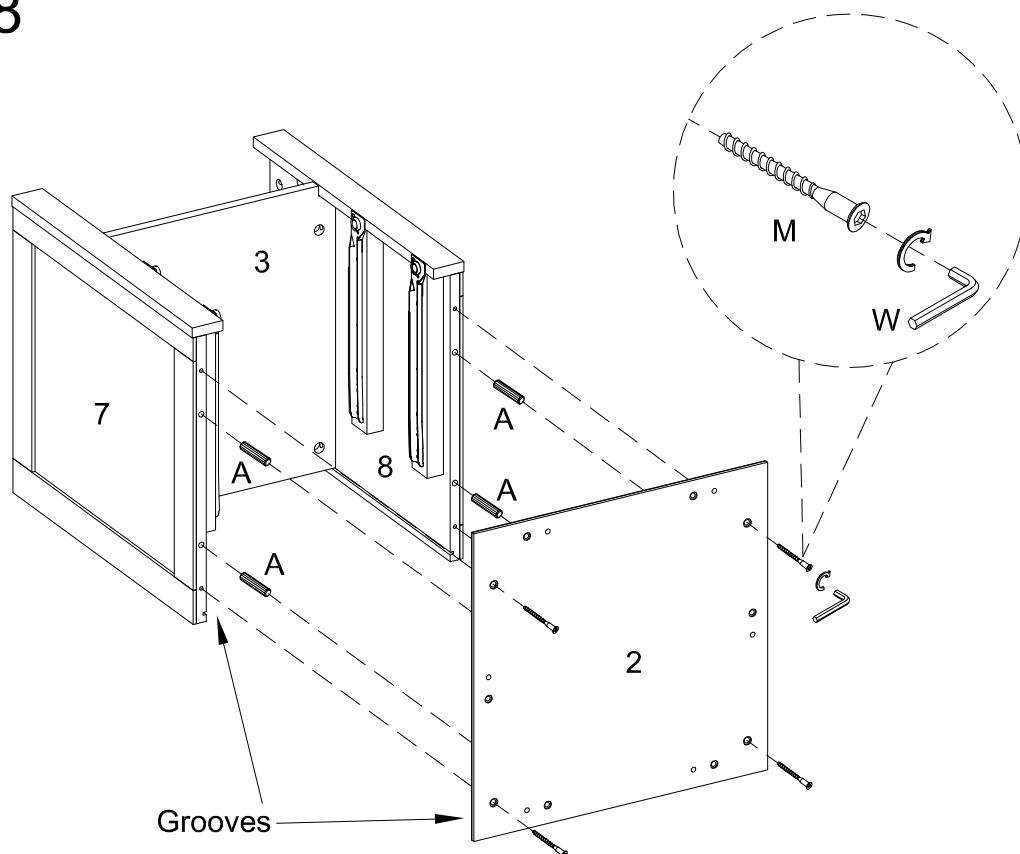


Step 9

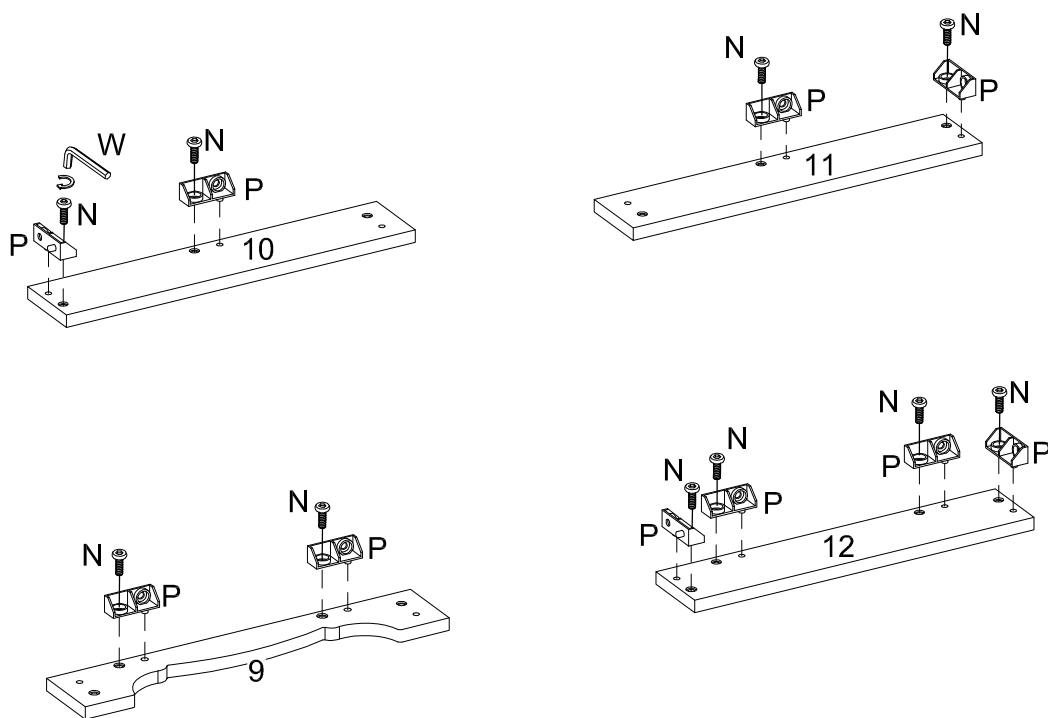


Step 10

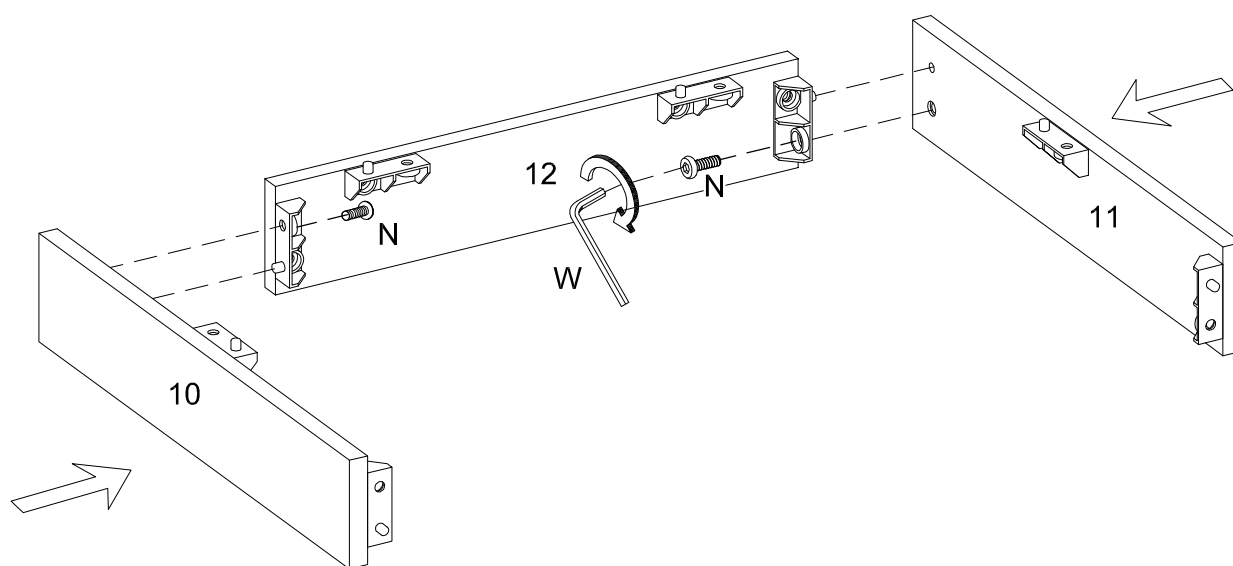


Step 11

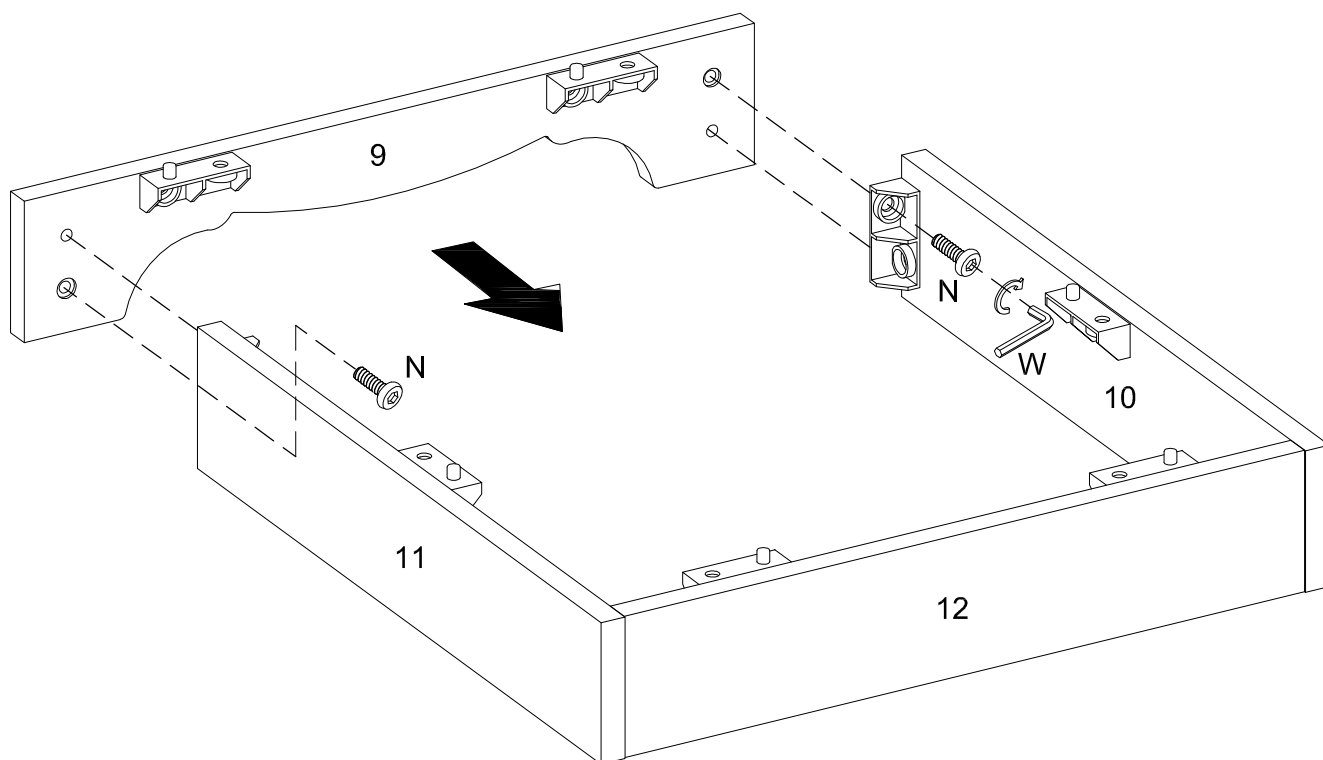


Step 12

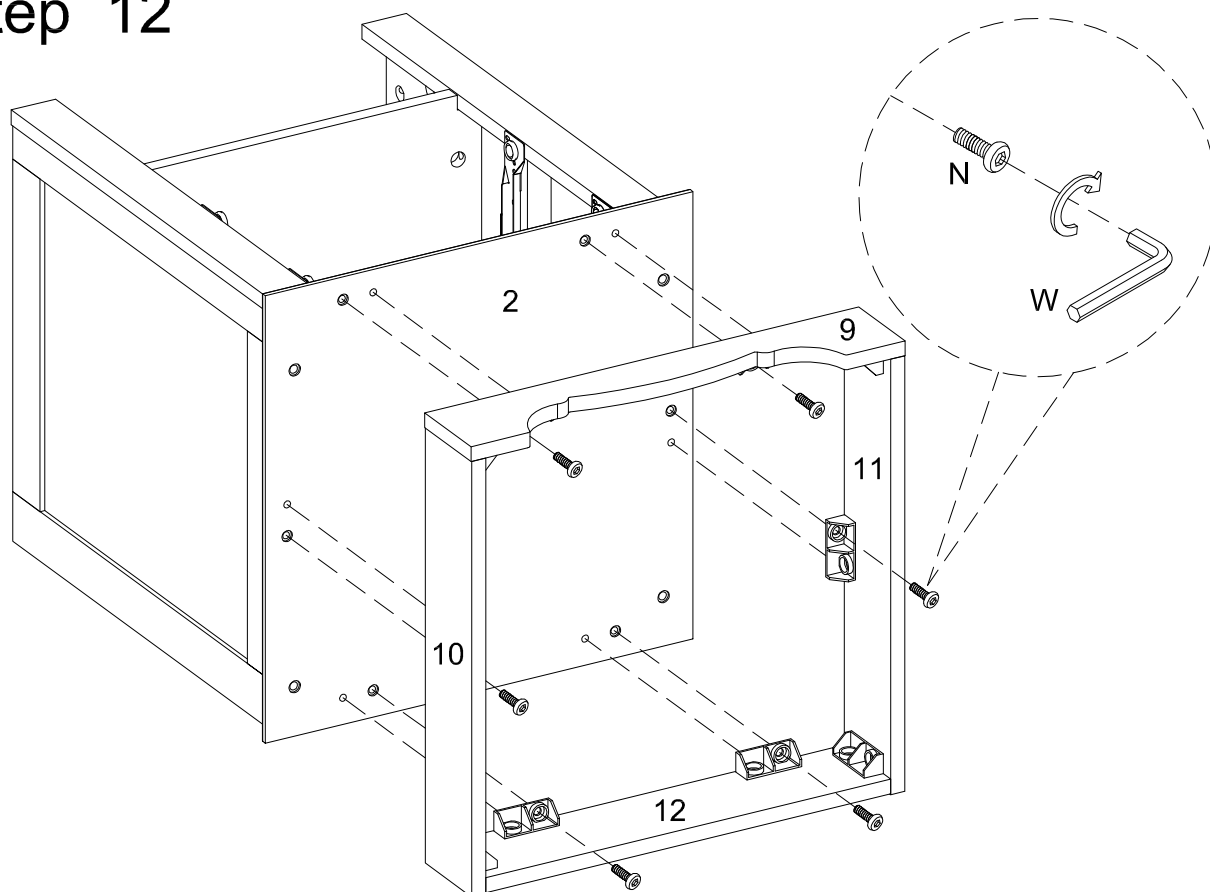


Step 13

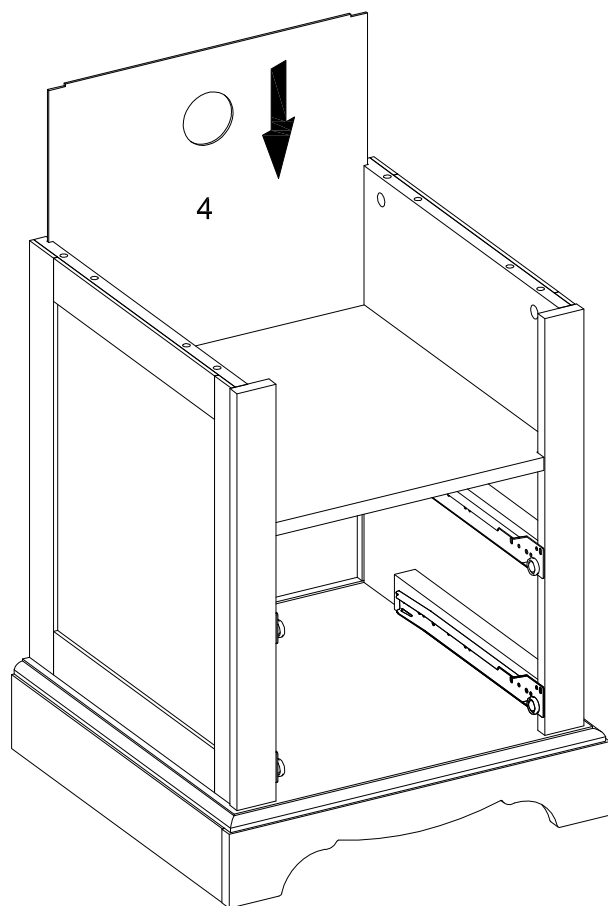


Step 14

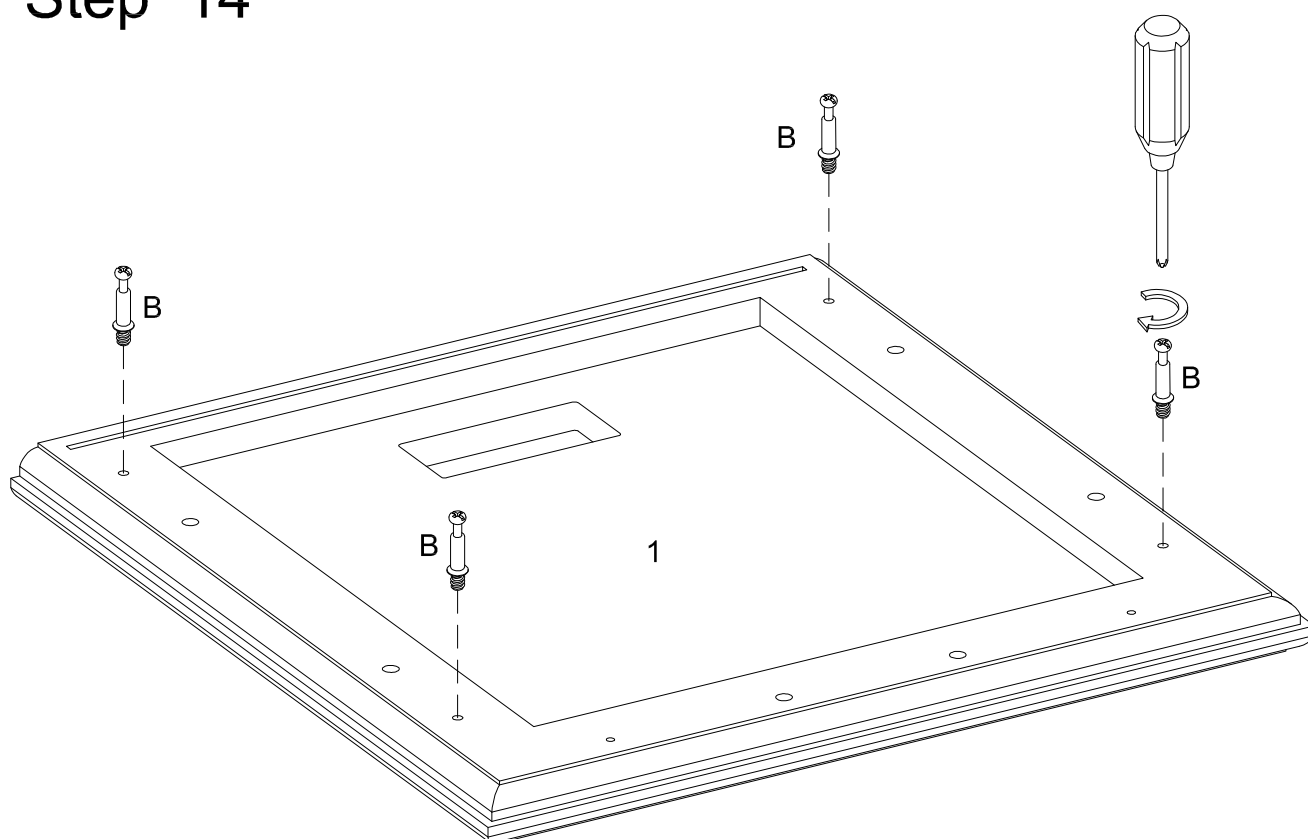


Step 15

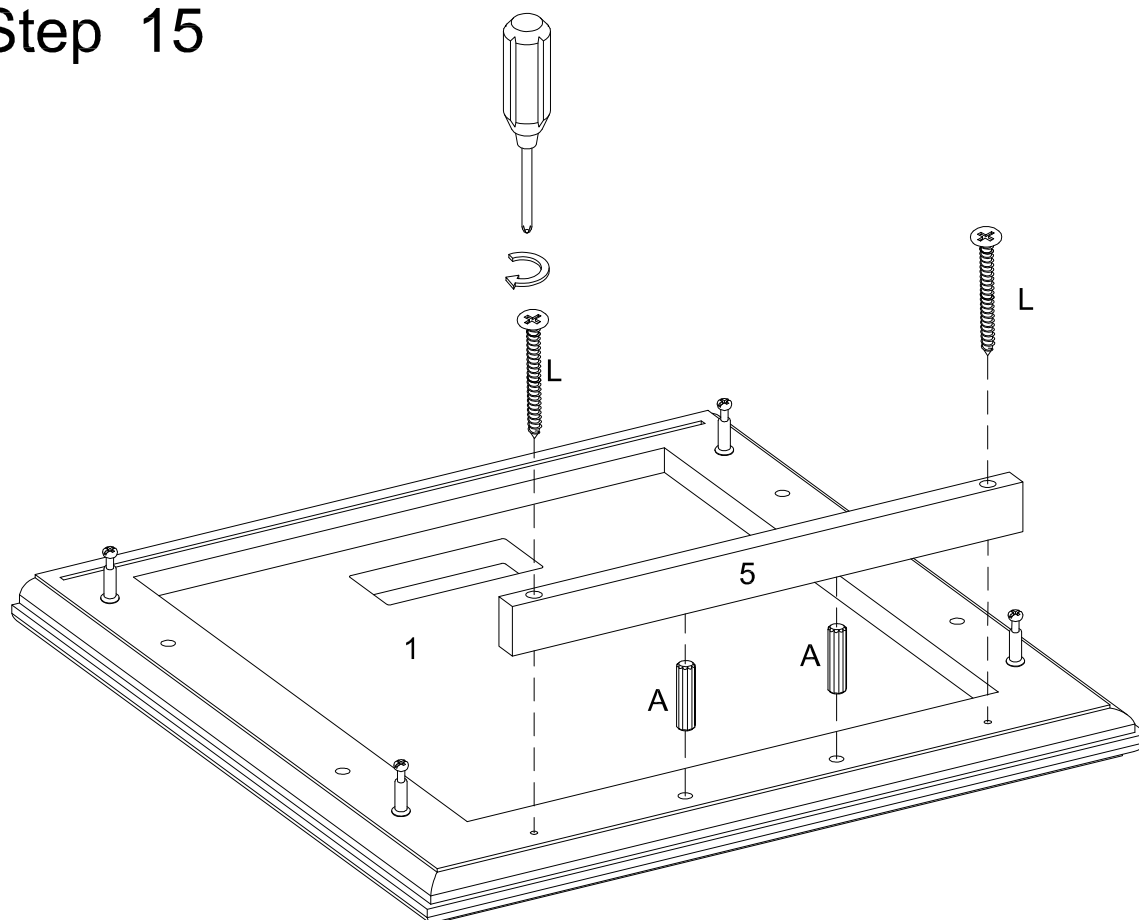


Step 16

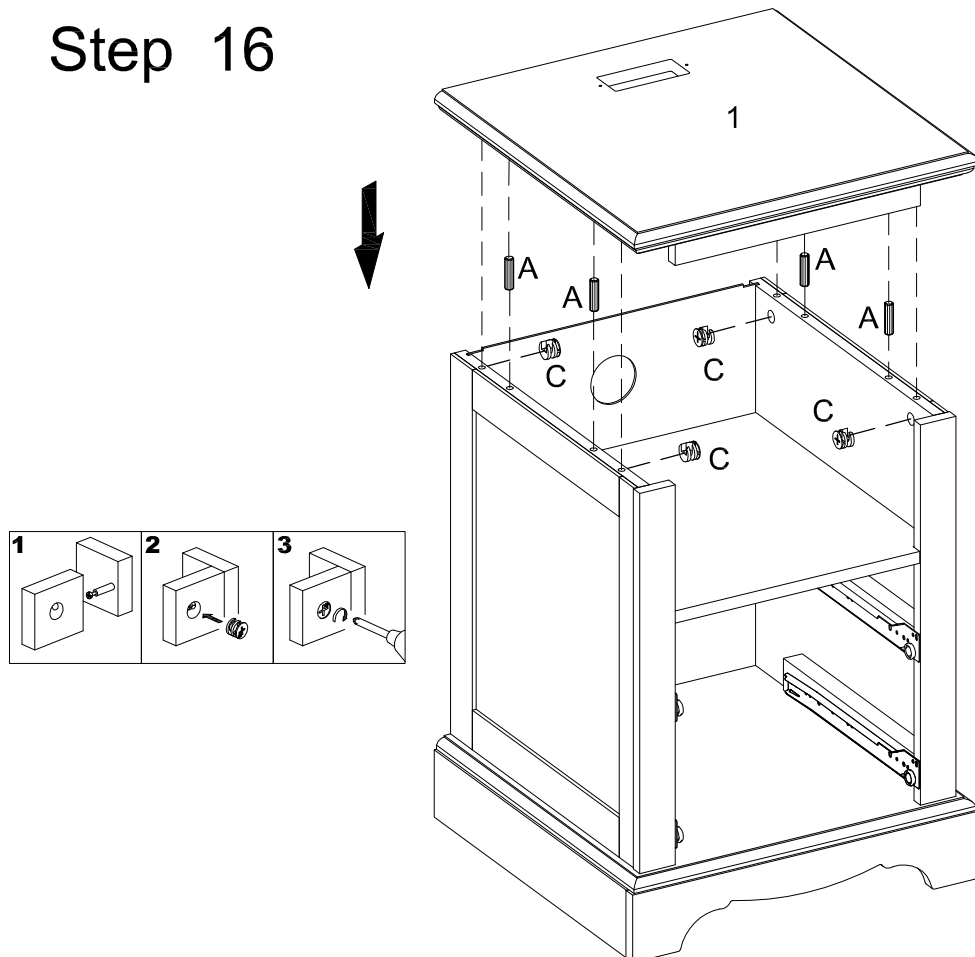


Step 17

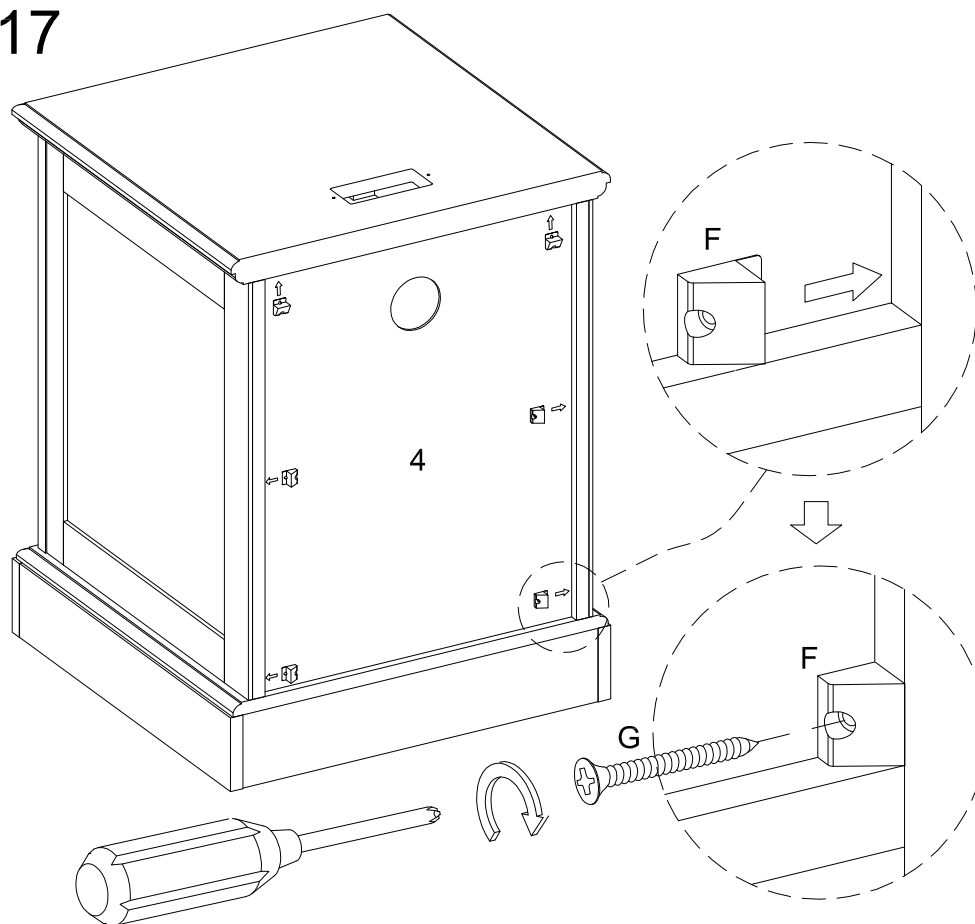


Step 18

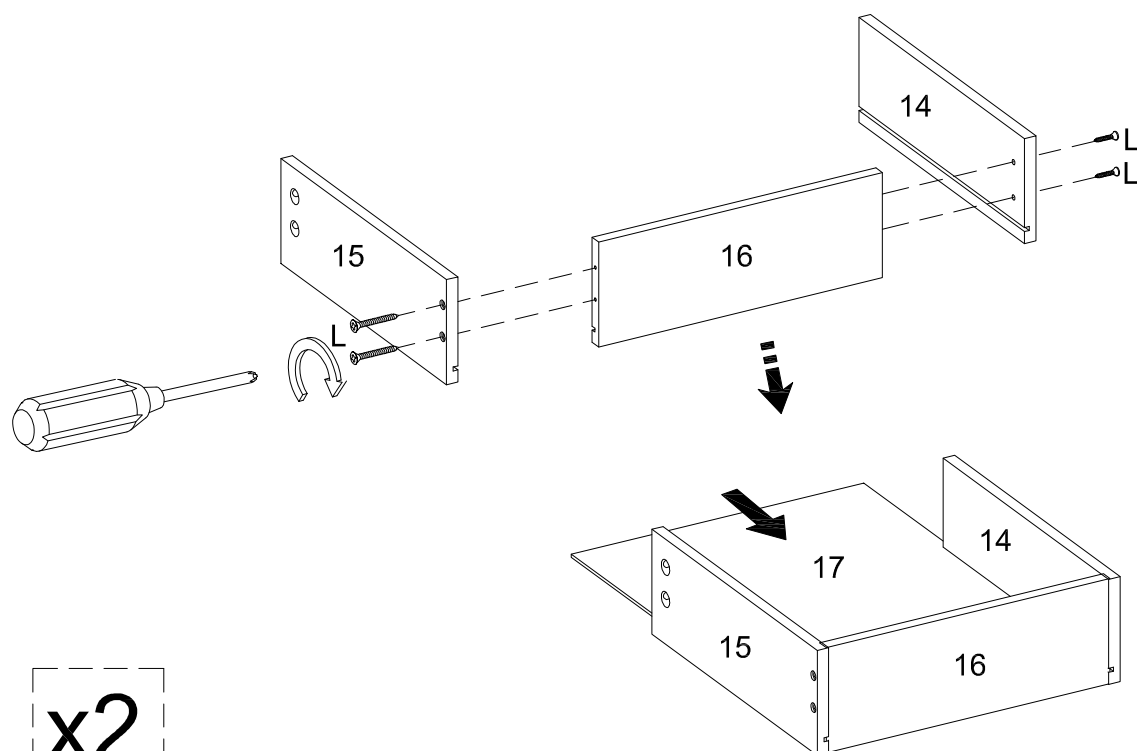

Step 19

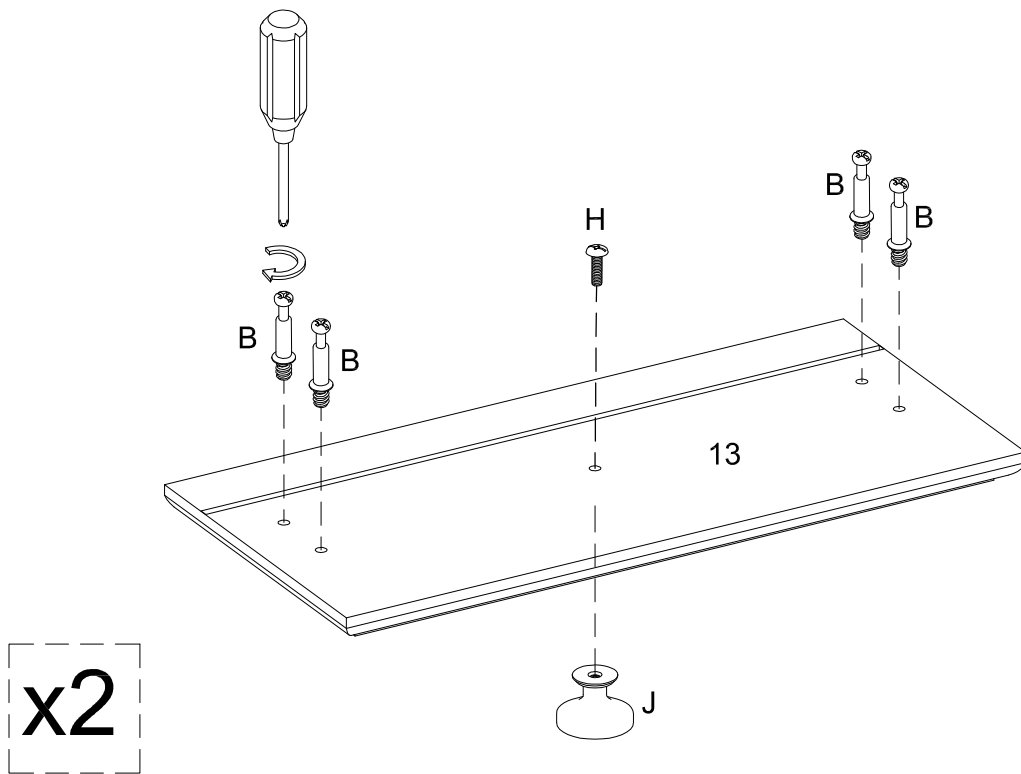


Step 20


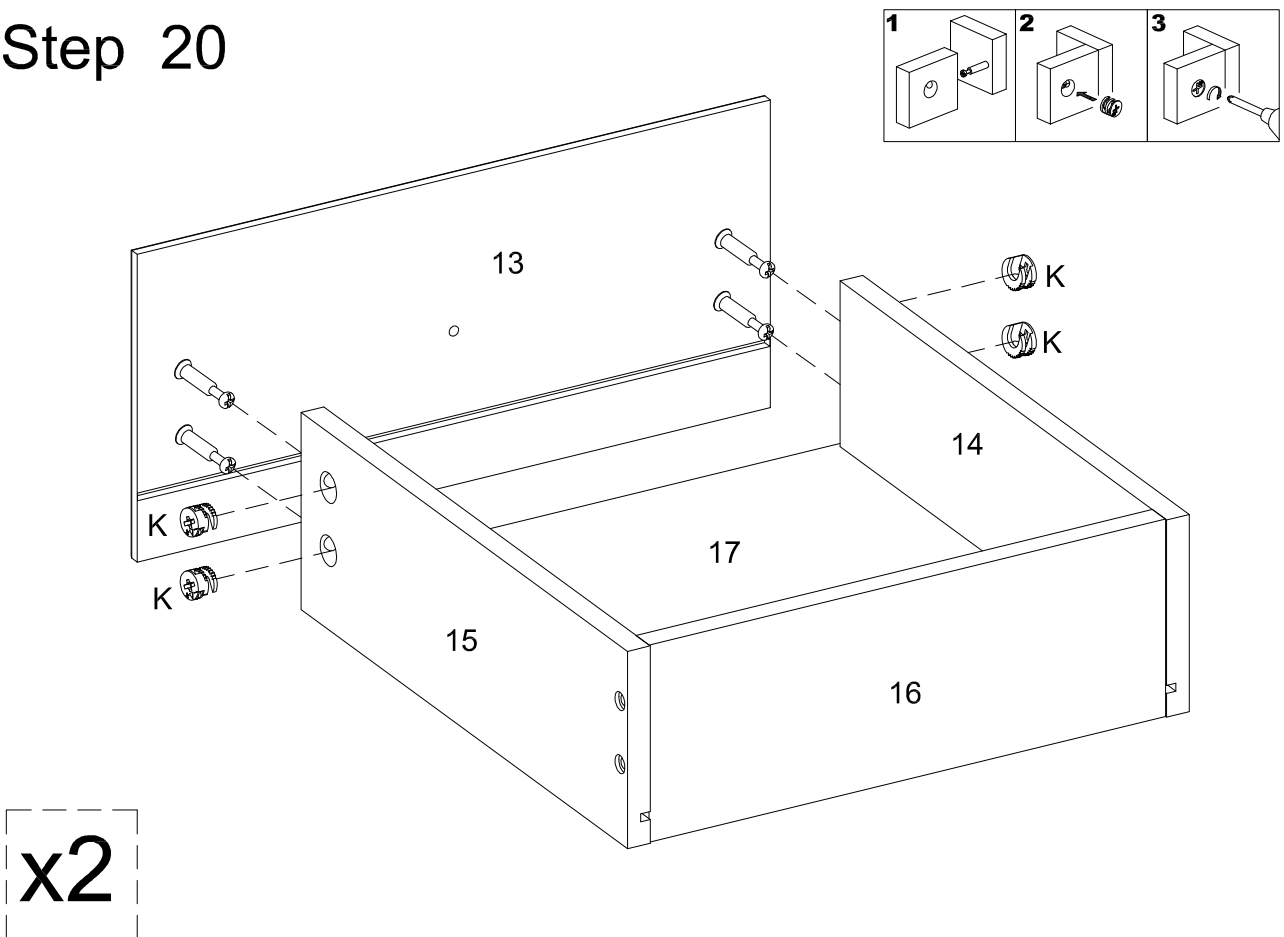


Step 21


x2

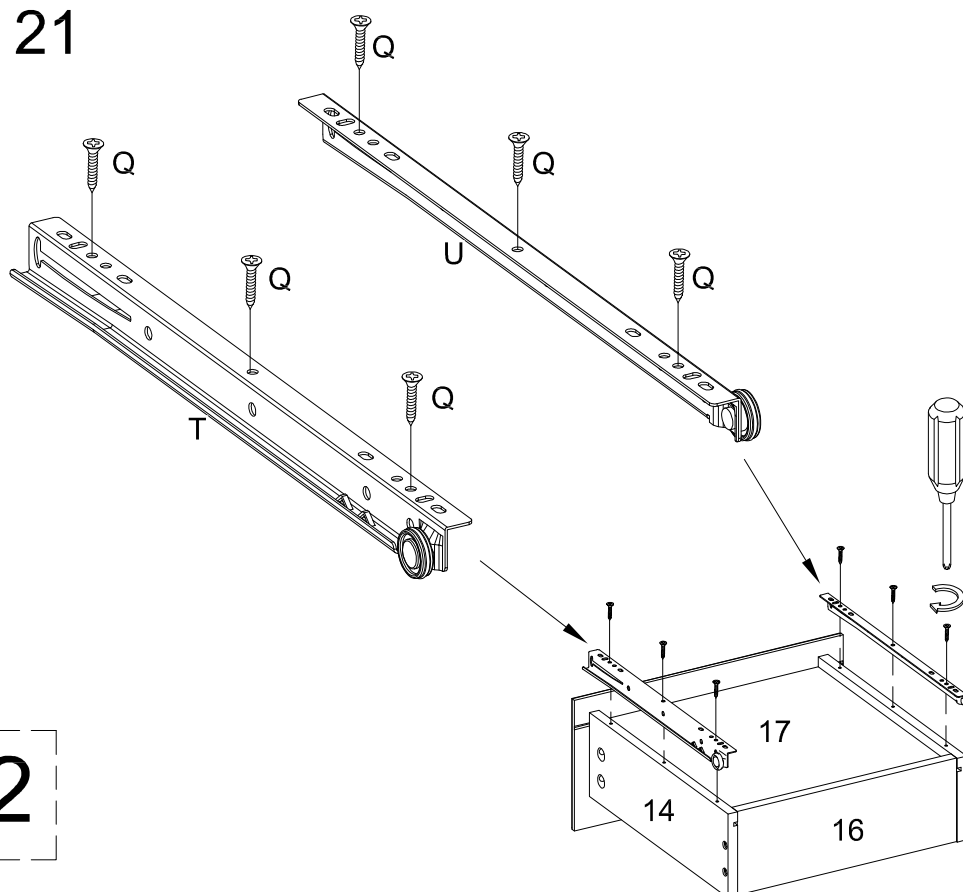


Step 22

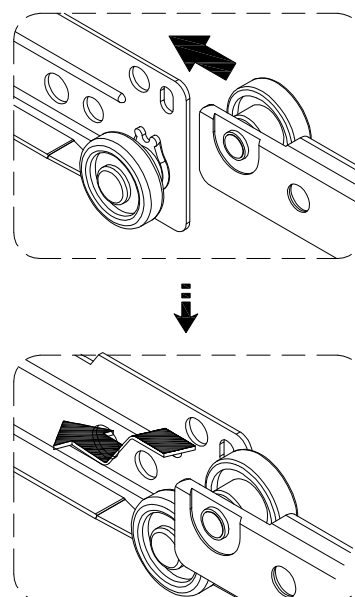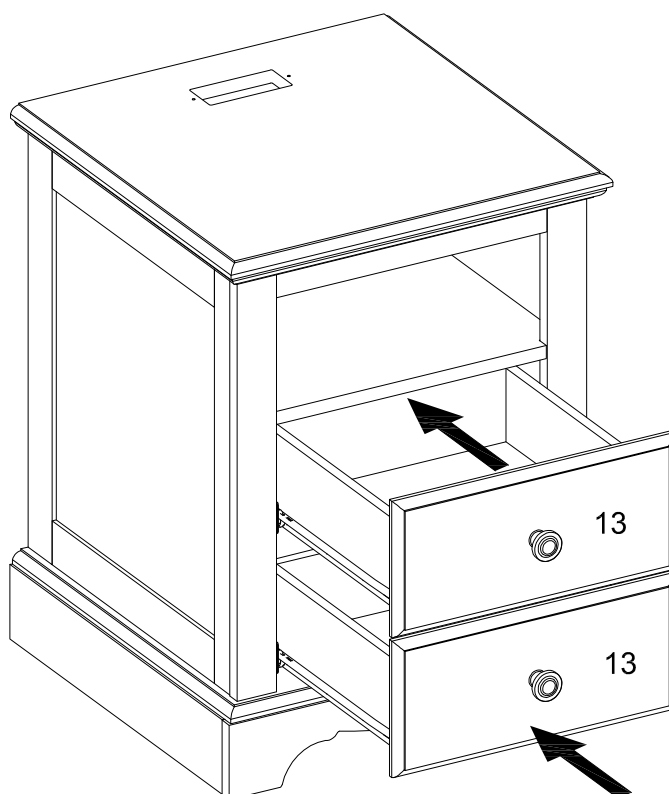

Step 23

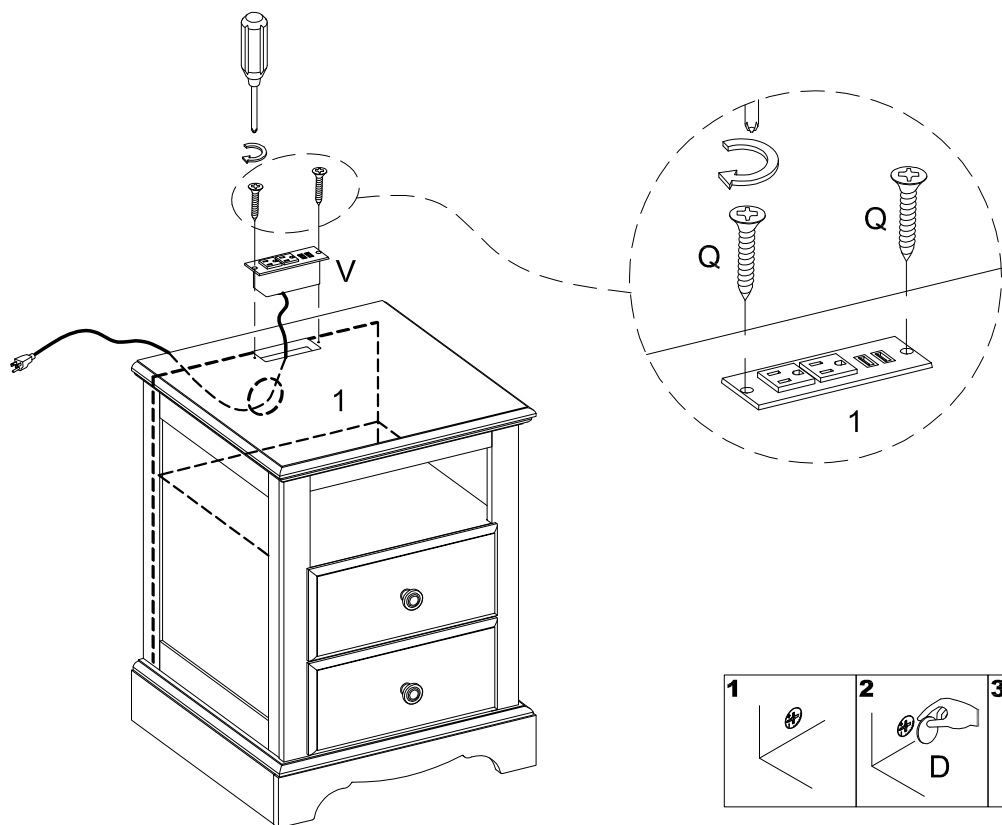

Step 24

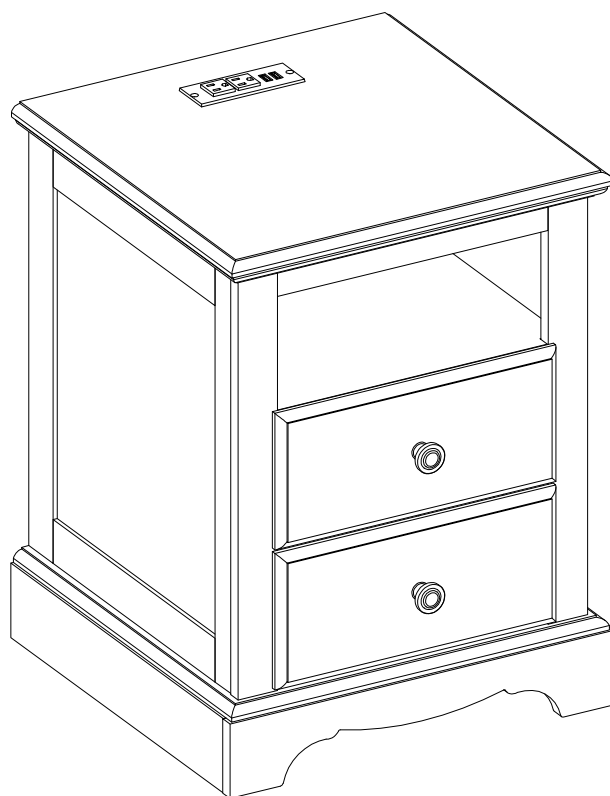

Final Assembly