


# AI-FHC66BDTC

## Assembly Instructions

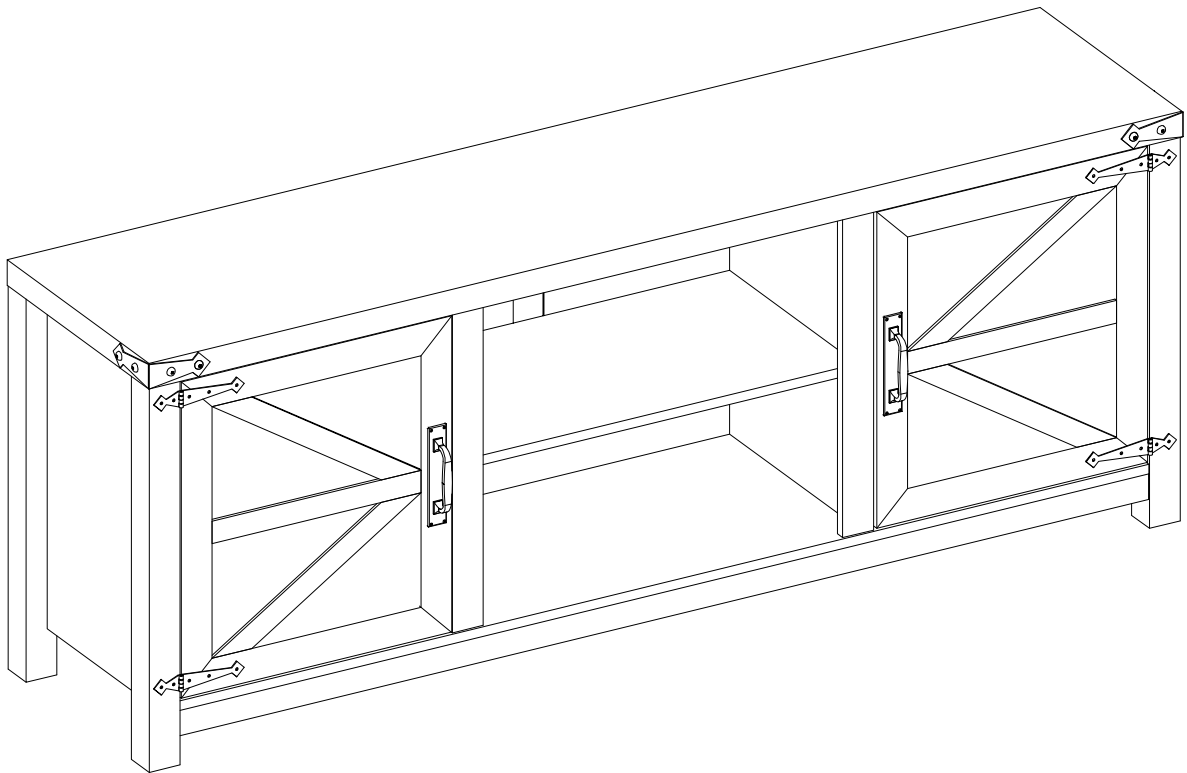

# General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are : wood dowels , screws and bolts.
- V. The provided glue is to secure wood dowels in place . When first inserting dowels , locate the appropriate hole for the dowel , place a small amount of glue in the hole and insert the dowel . Wipe away excess glue immediately.




In future assembly steps when dowels are necessary to attach assembly parts together , place a small amount of glue on the end of the dowel before attaching parts together . Wipe away excess glue immediately.




- VI. A Phillips head screwdriver is required for the assembly of this product .

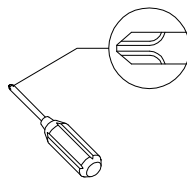


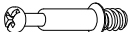


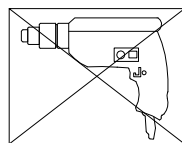
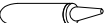



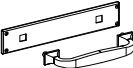
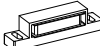




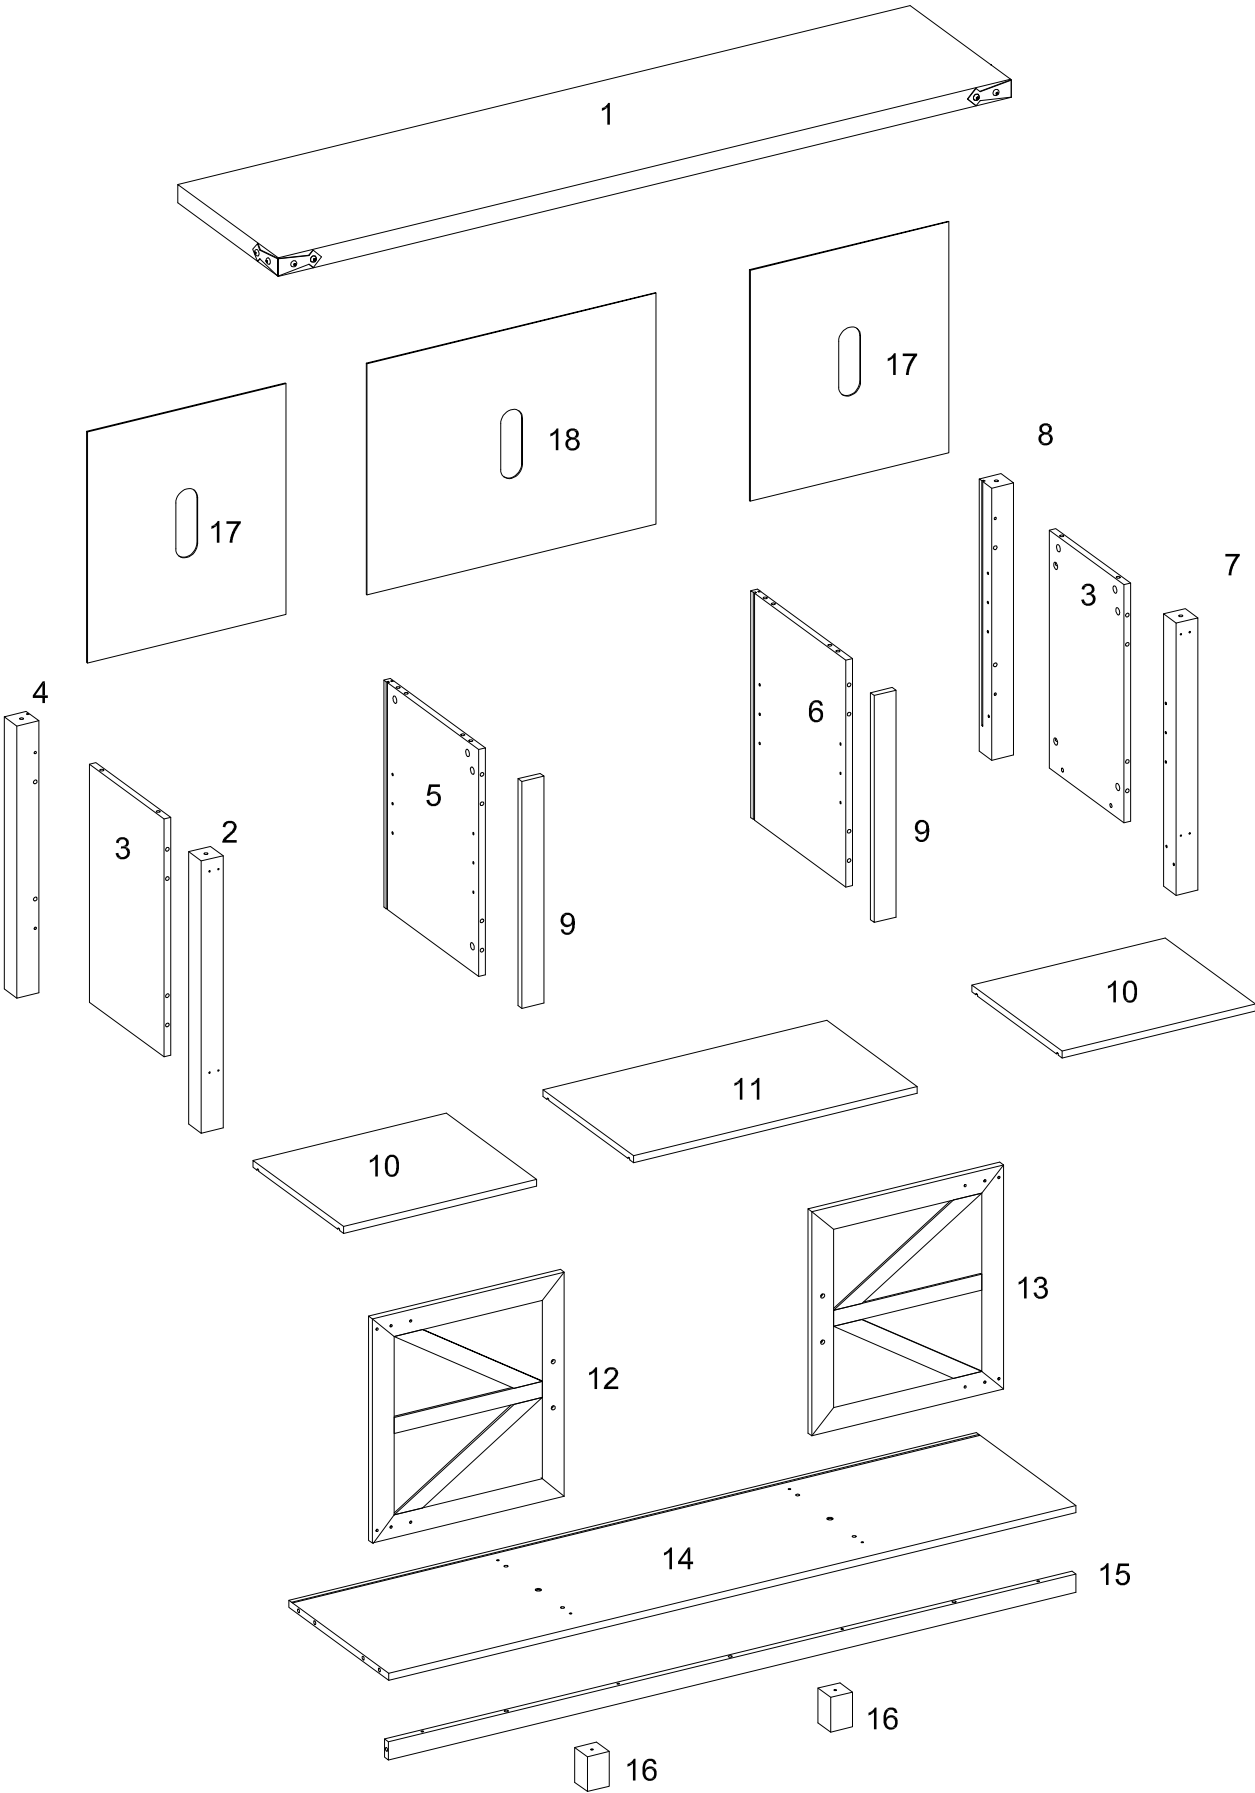


- VII. Power tools should not be used to assemble this product .




# Parts List

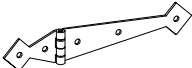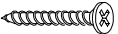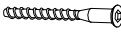



# Hardware List

A		Ø8x30mm	Wooden dowel	31 pcs
B		Ø6x35mm	Cam bolt	26 pcs
C		Ø15x11mm	Cam lock	26 pcs
D		Ø30mm	Sticker	26 pcs
E		Ø8x5x16mm	Shelf support pin	12 pcs
F			Glue tube	1 pc
G			Plastic wedge	12 pcs
H		Ø3x17mm	Flat-head screw	12 pcs
J		Ø4x12mm	Handle bolt	4 pcs
K			Handle	2 pcs
L			Magnetic catch	2 pcs
M		Ø3x15mm	Screw	24 pcs
N			Metal piece	2 pcs
O			Hinge	4 pcs
P		Ø4x38mm	Screw	4 pcs
Q		Ø6x50mm	Screw	6 pcs
R		M 4	Hexagon socket key	1 pc
S		Ø3x12mm	Screw	2 pcs


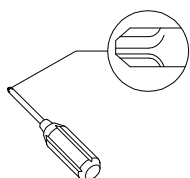


Philips head screwdriver required for assembly  
(not included)



## Step 1

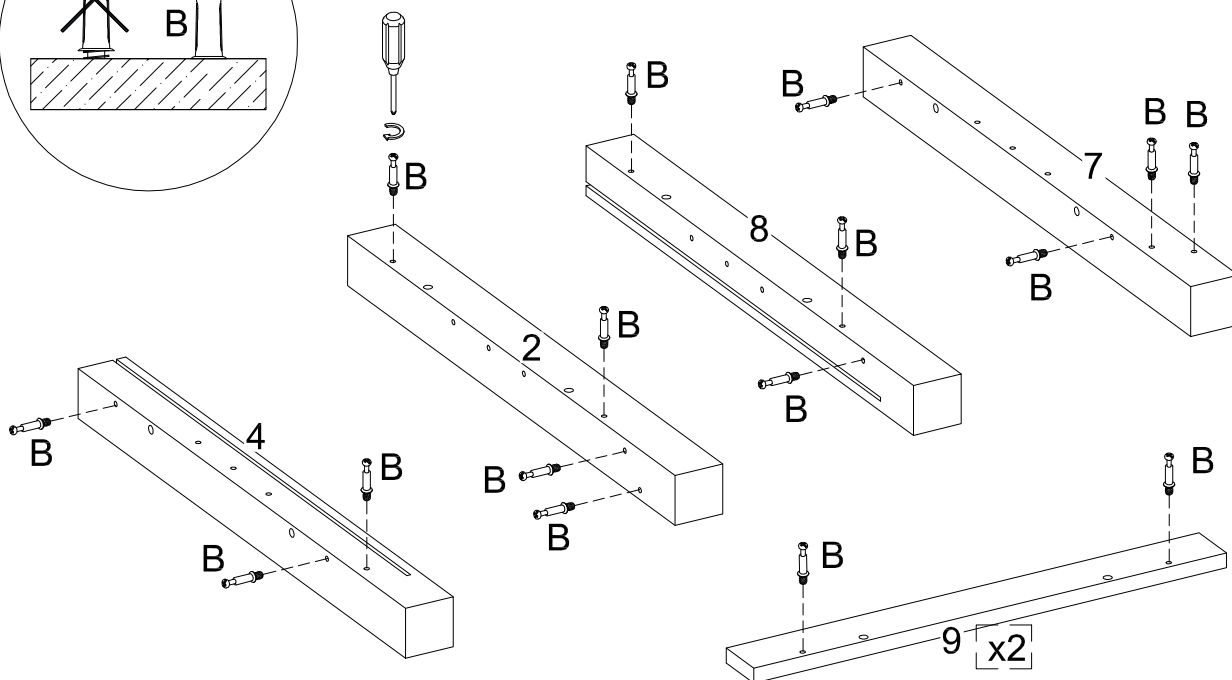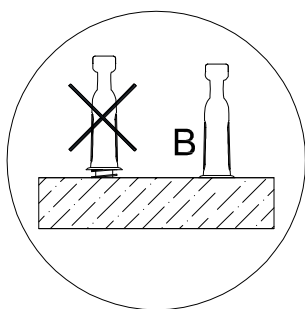



## Step 2

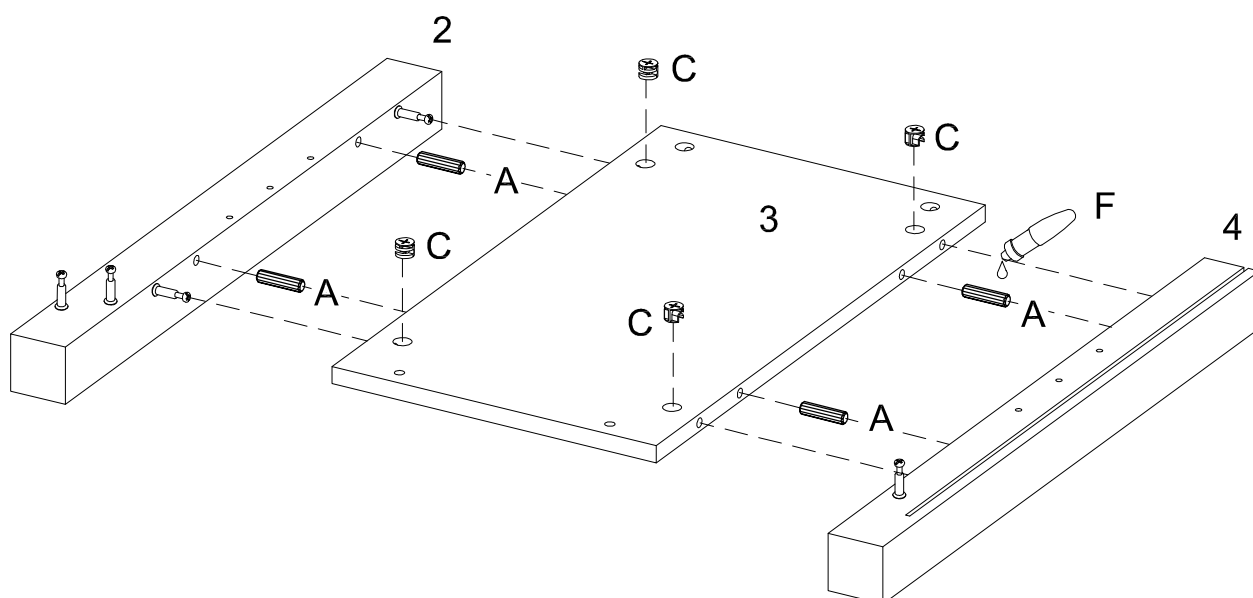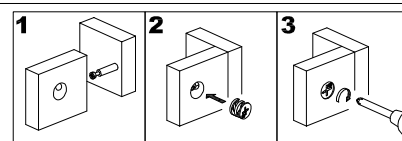



## Step 3

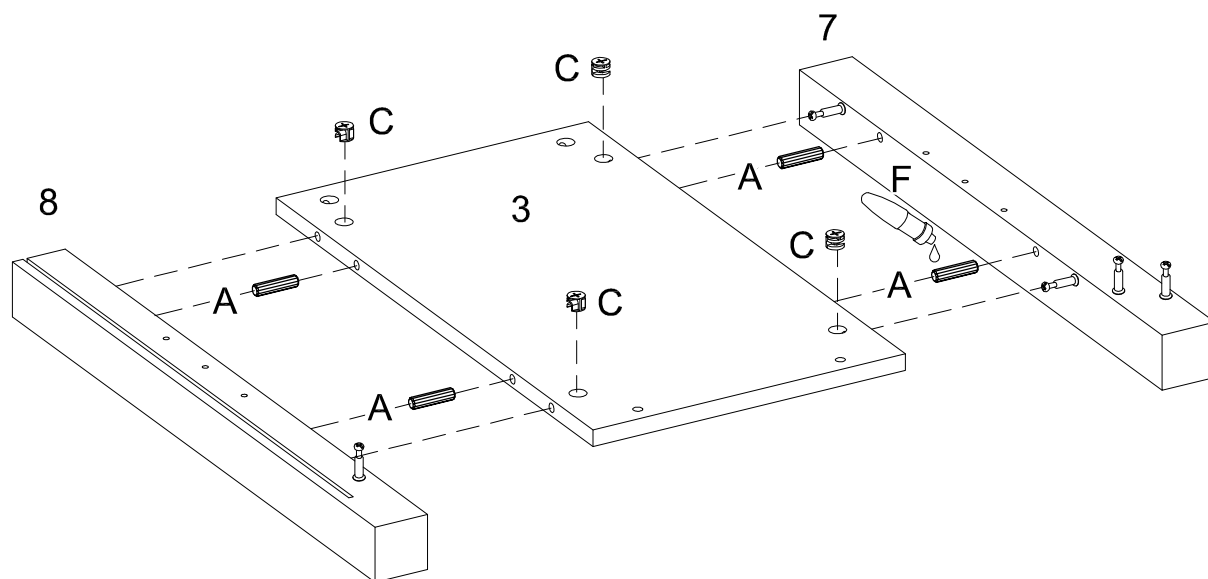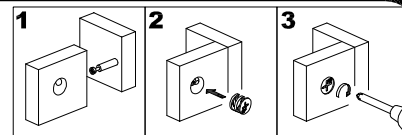


## Step 4

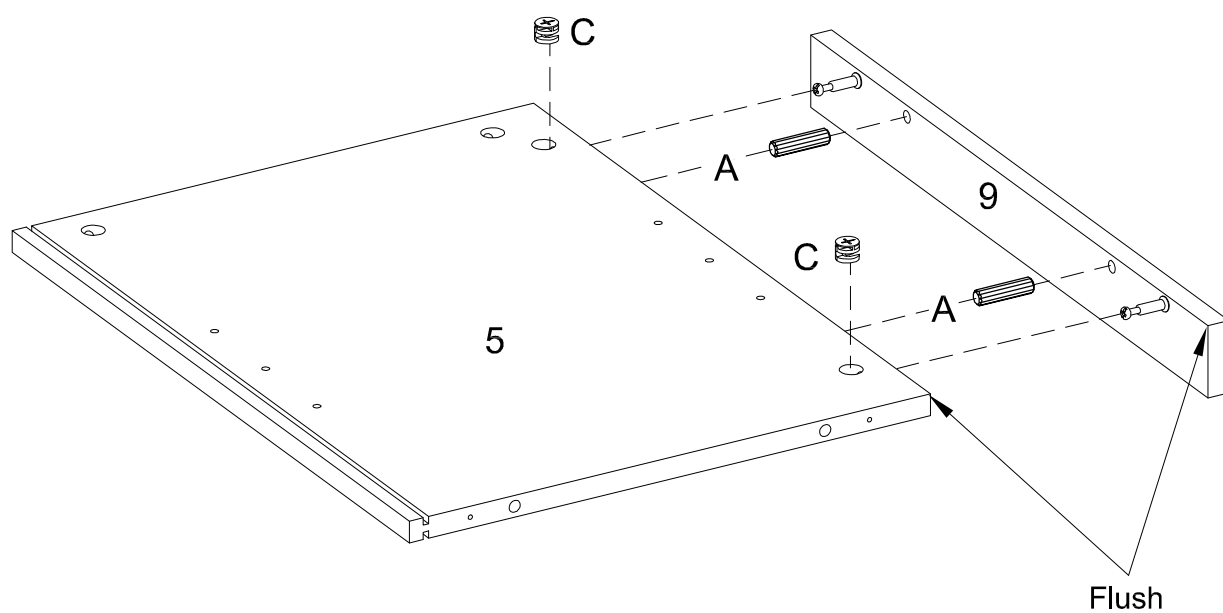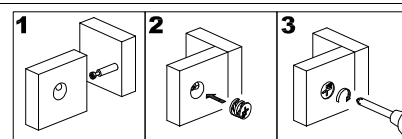


## Step 5

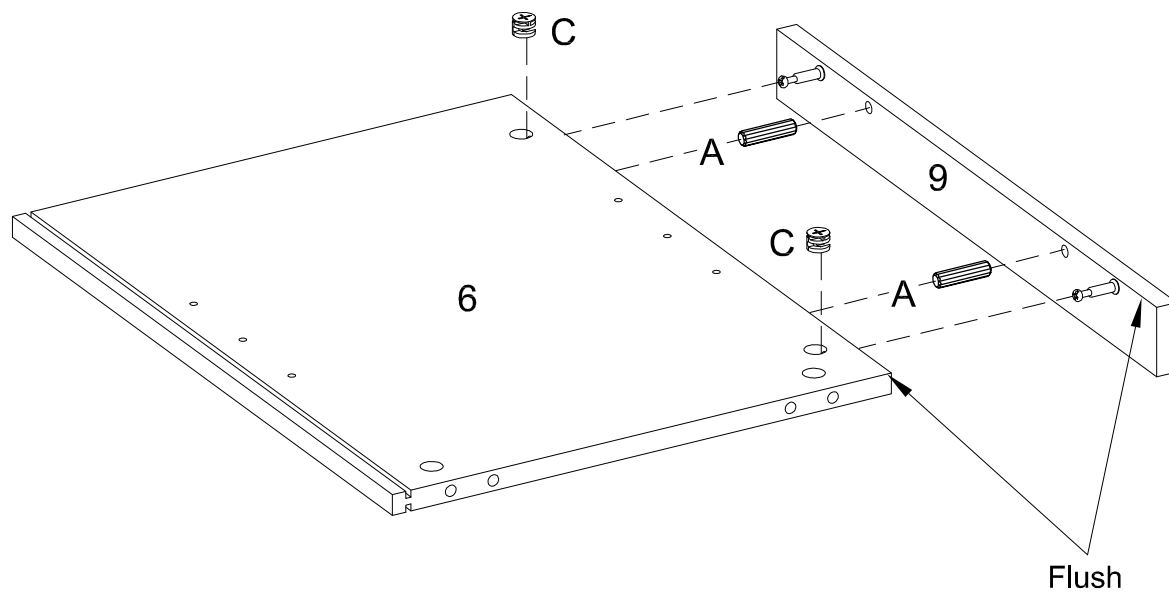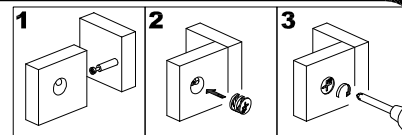


## Step 6

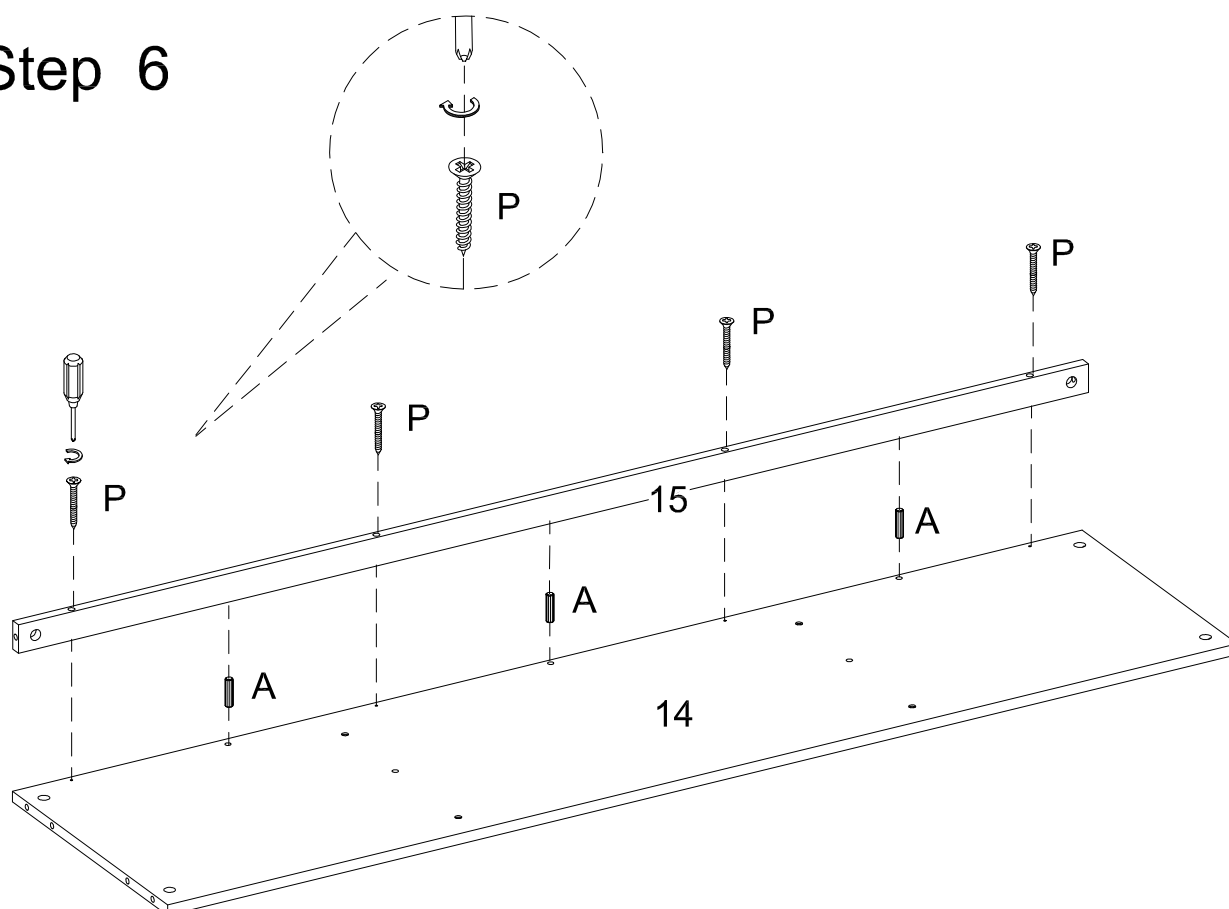

## Step 7


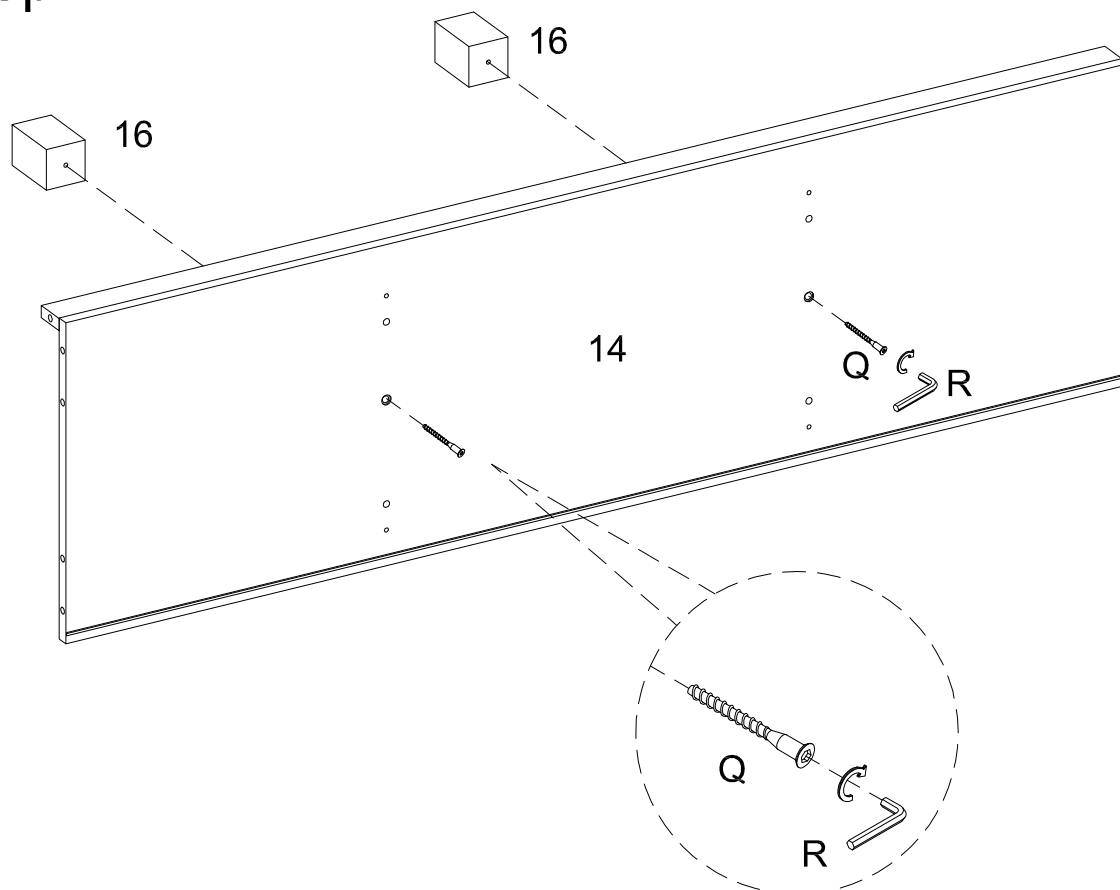


## Step 8


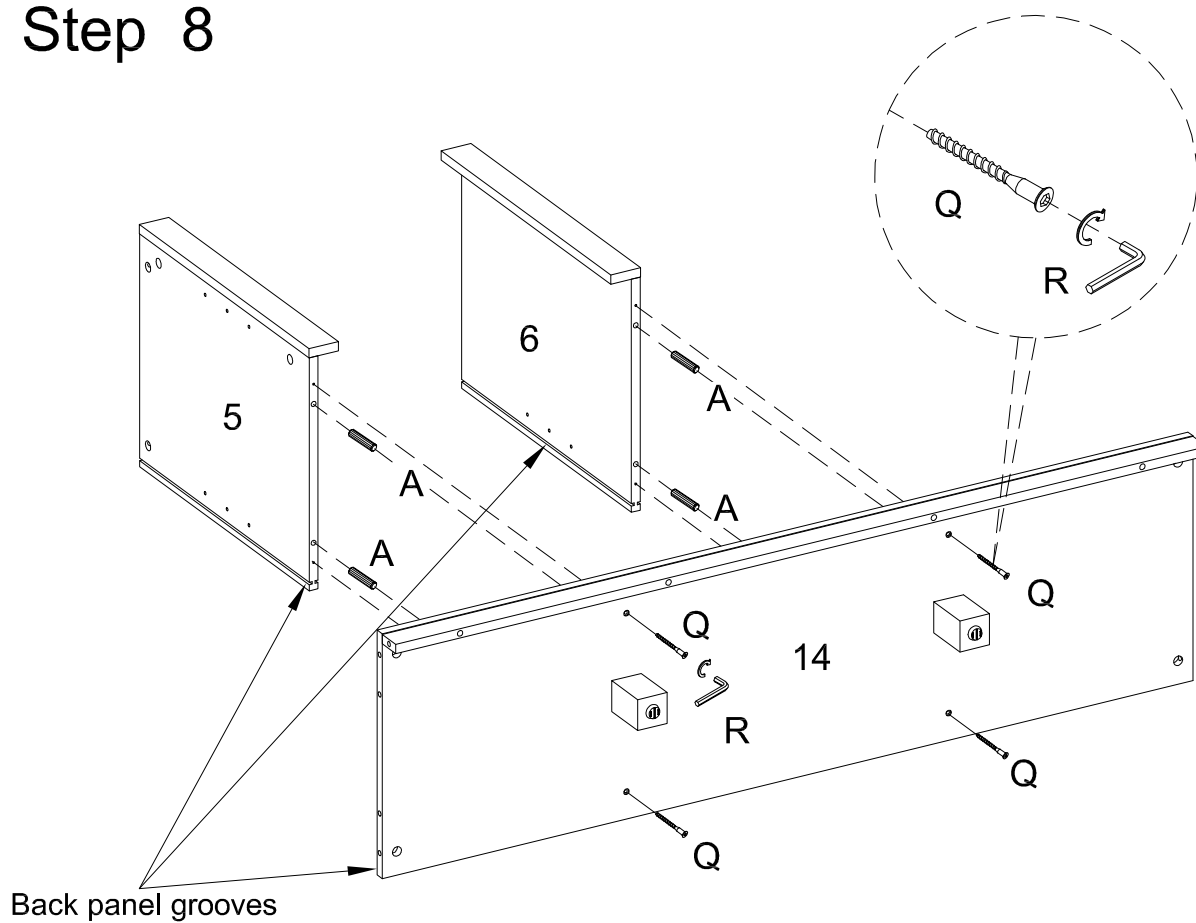





## Step 9

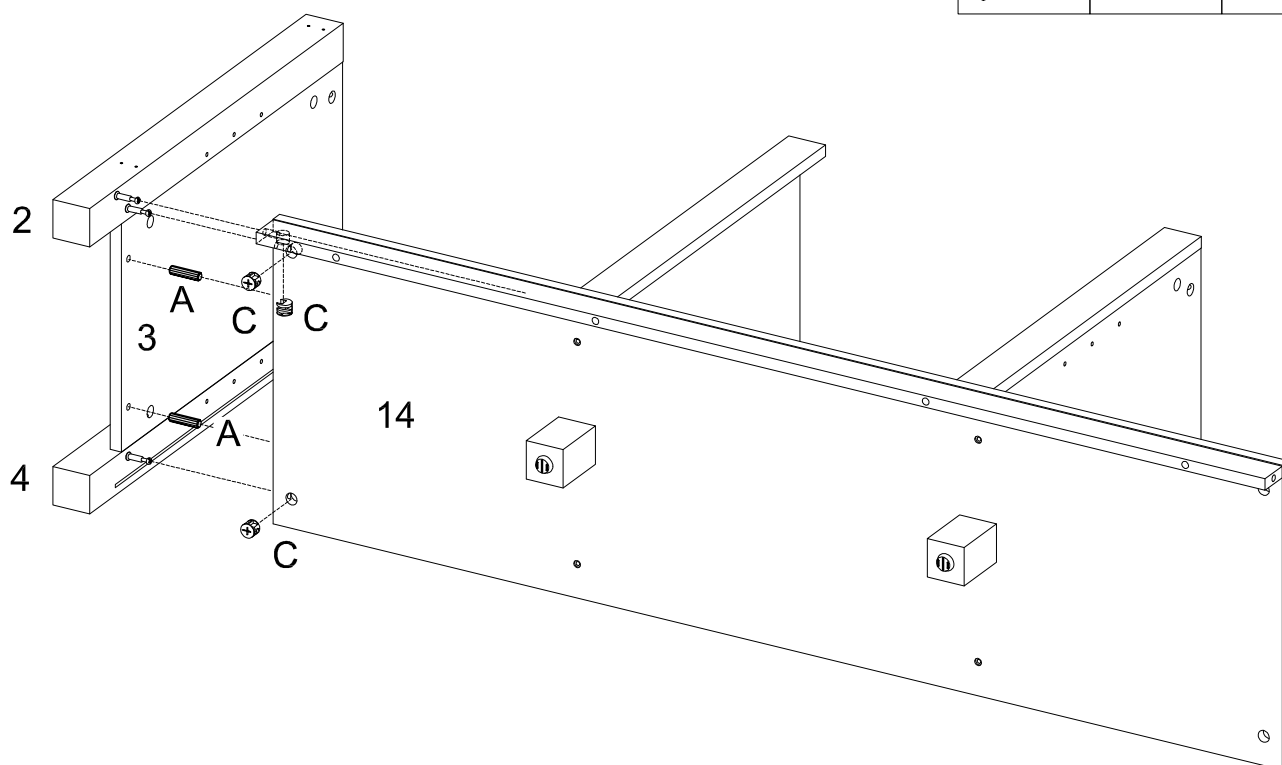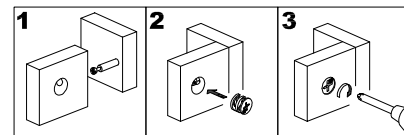


## Step 10

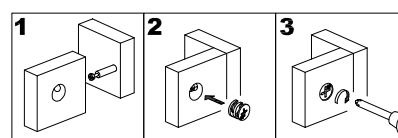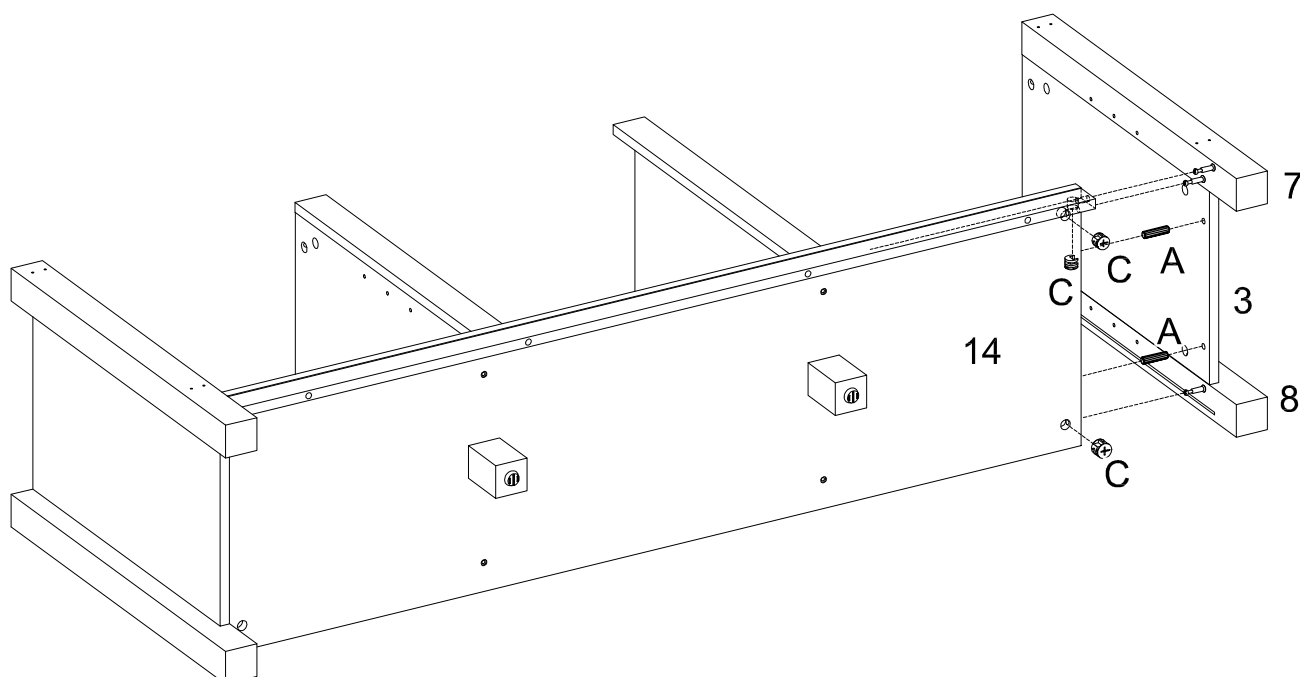



## Step 11

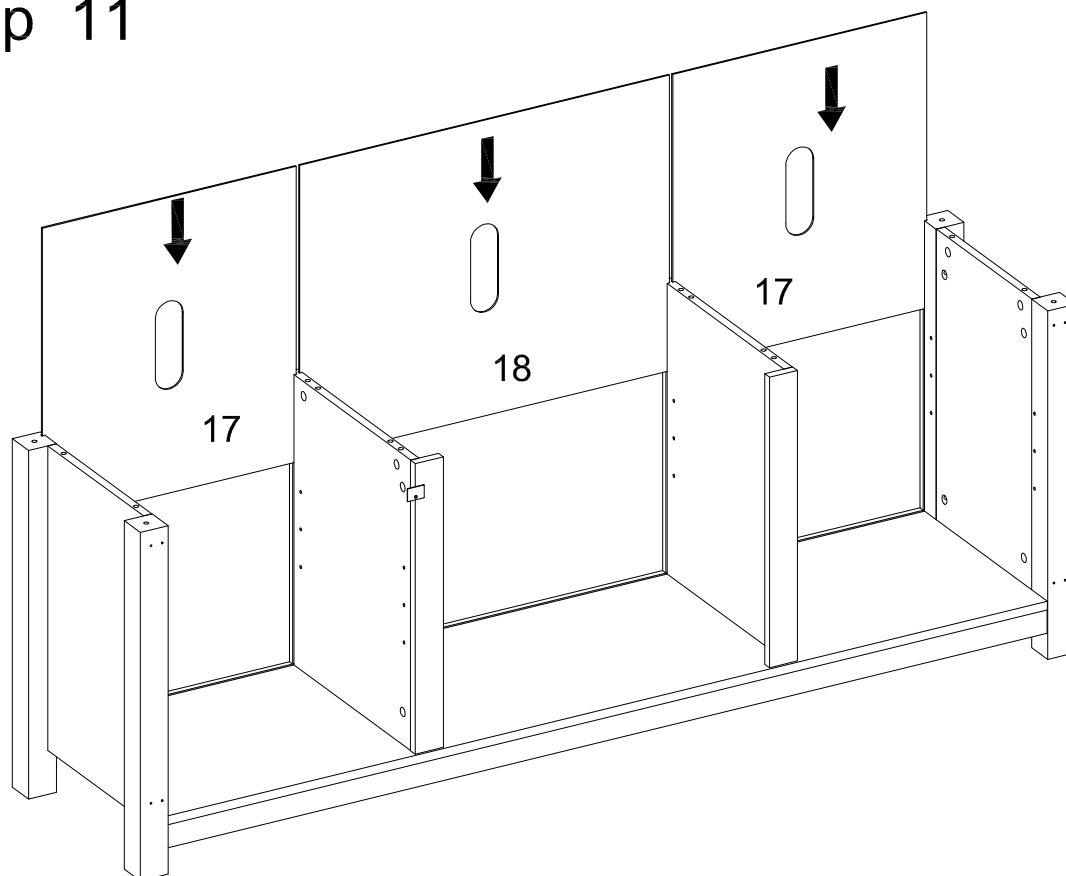

## Step 12

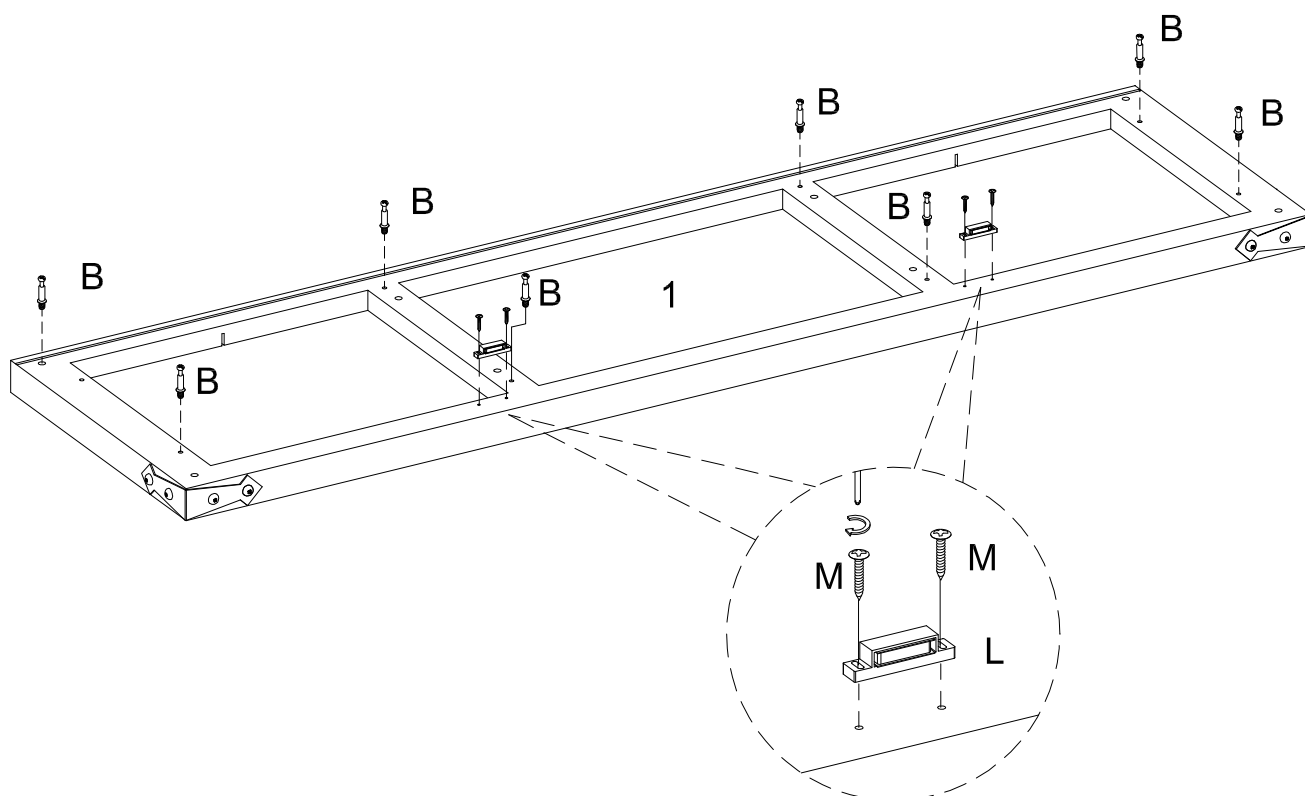


## Step 13

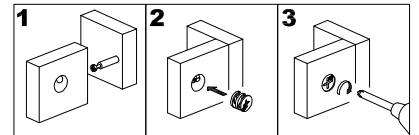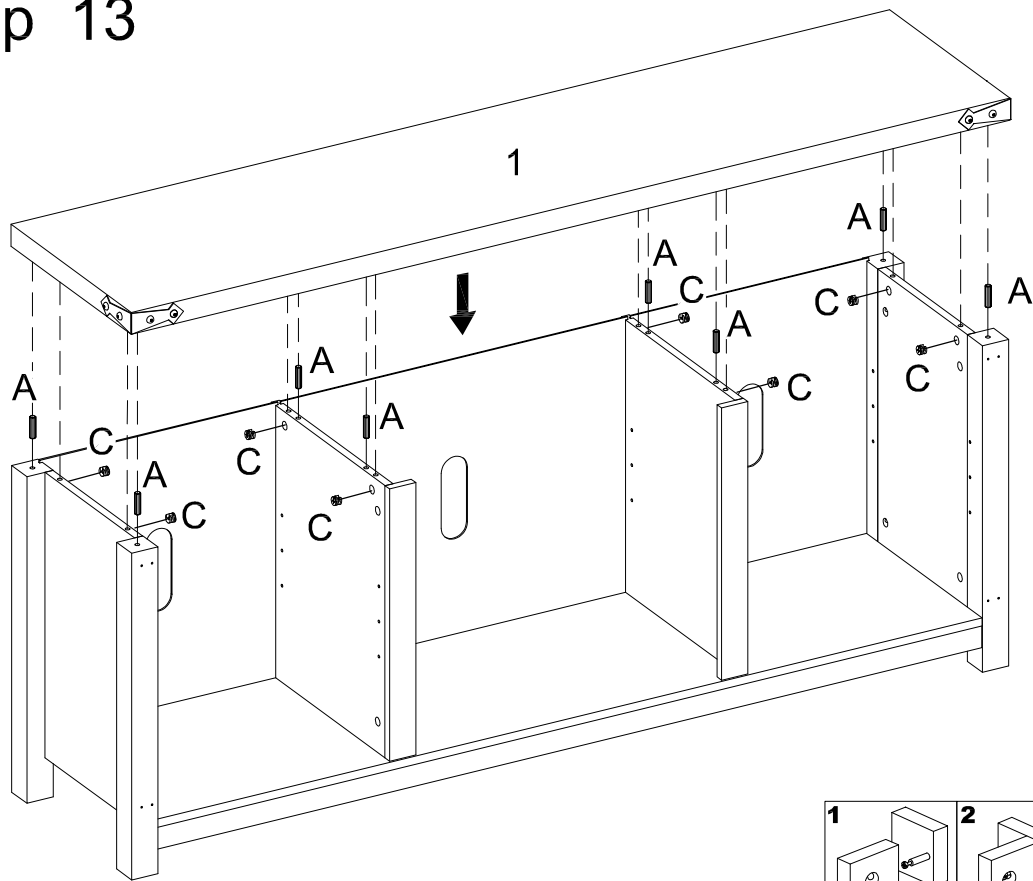


## Step 14


Before attaching the back panel be sure that the unit is at 90°.

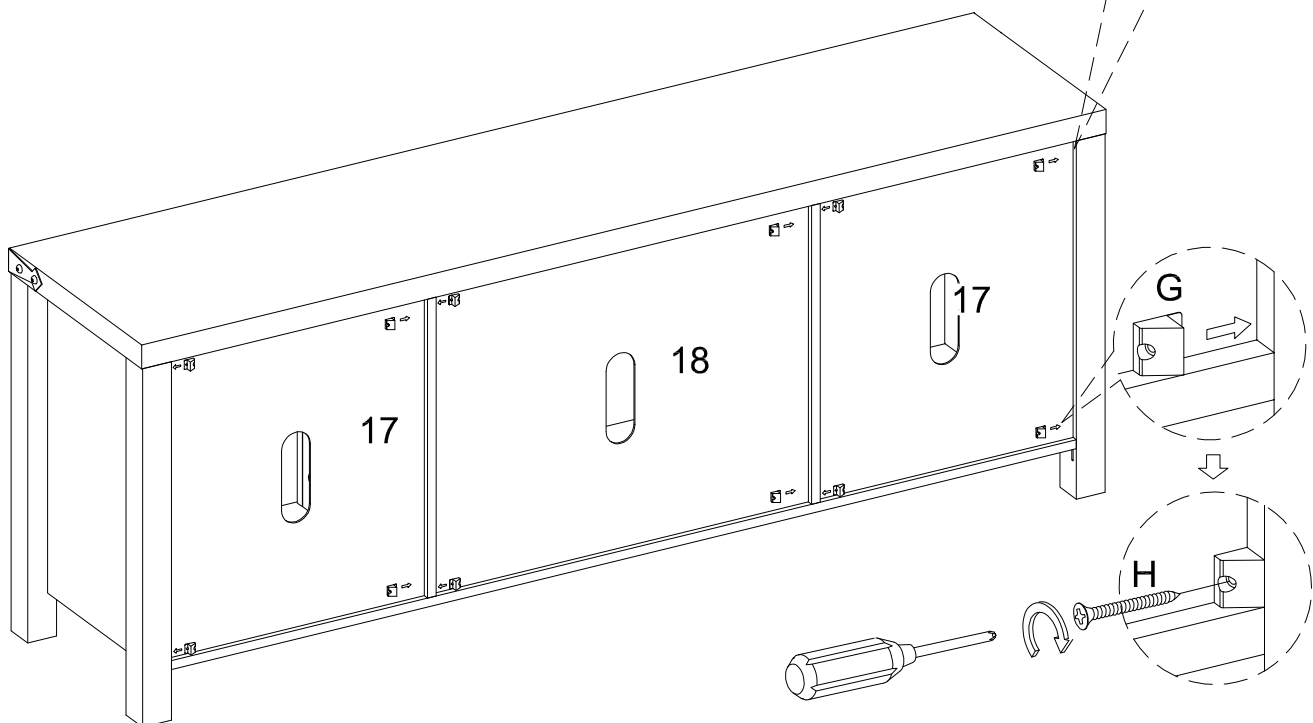


## Step 15

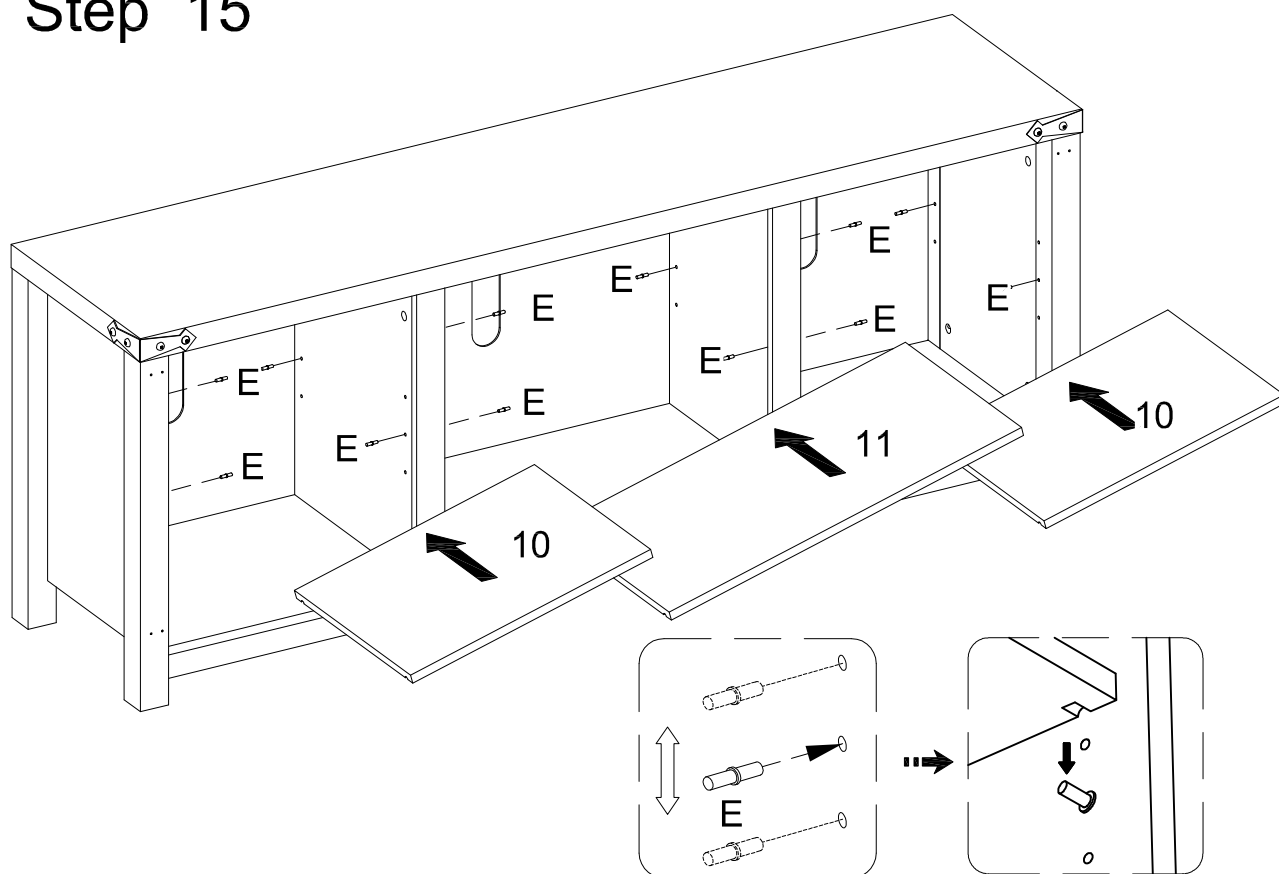


## Step 16

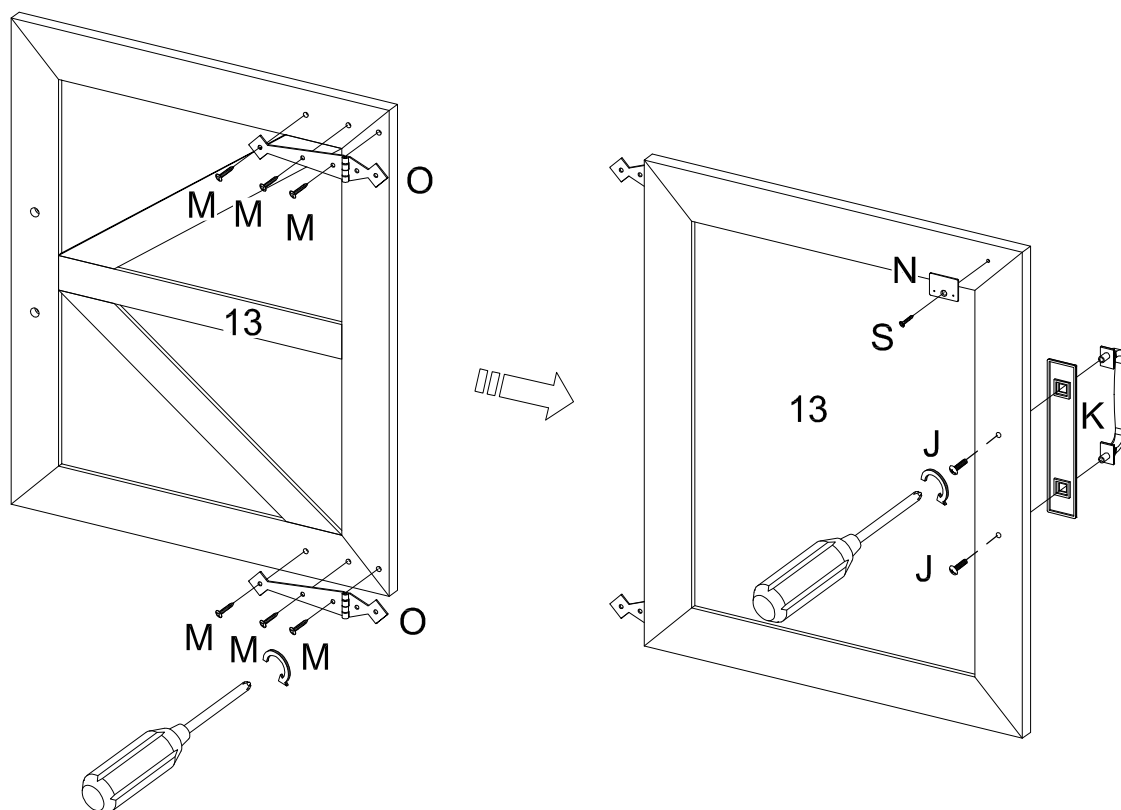


## Step 17

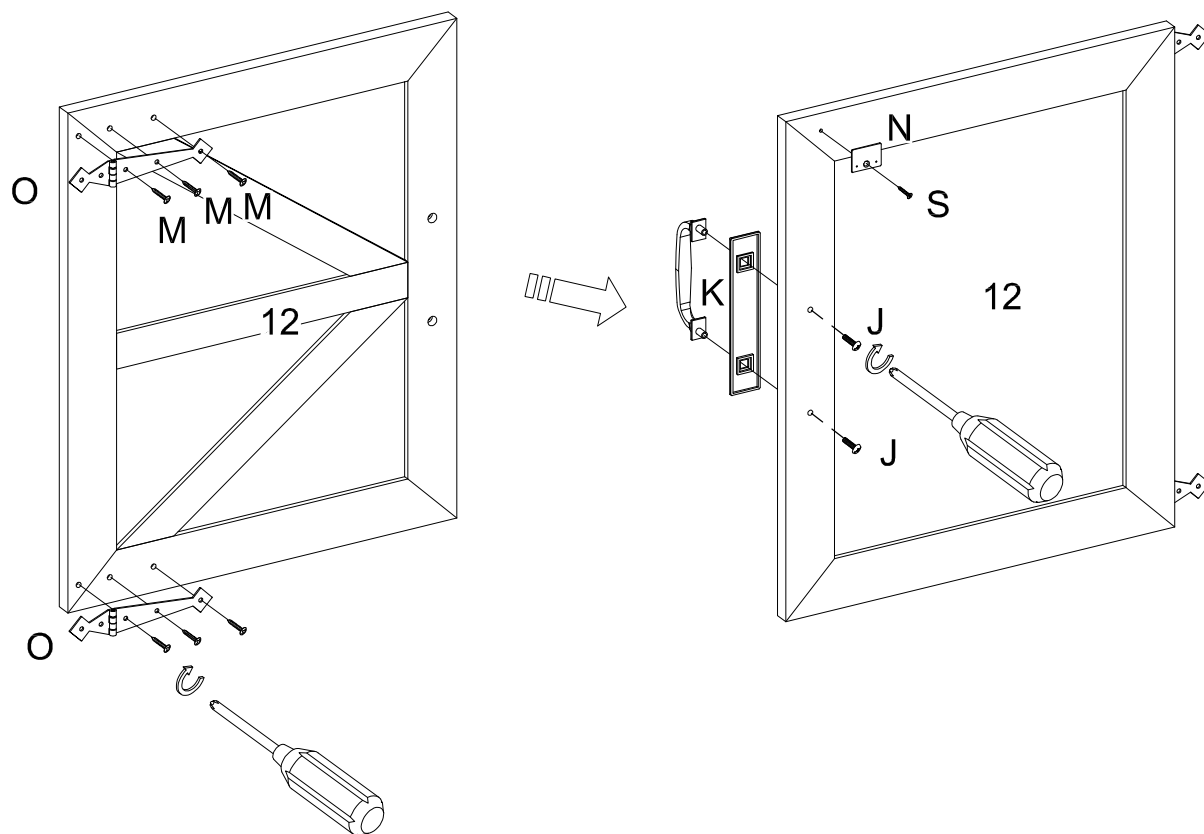


## Step 18

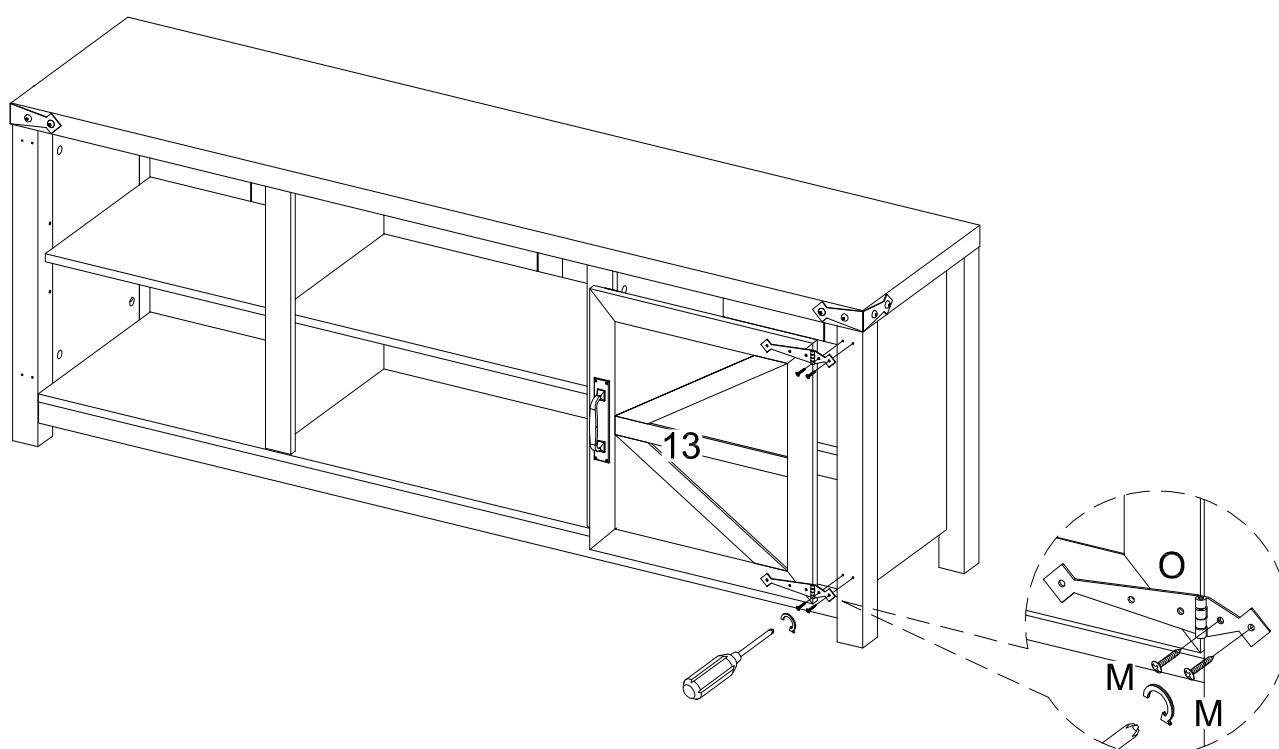

## Step 19

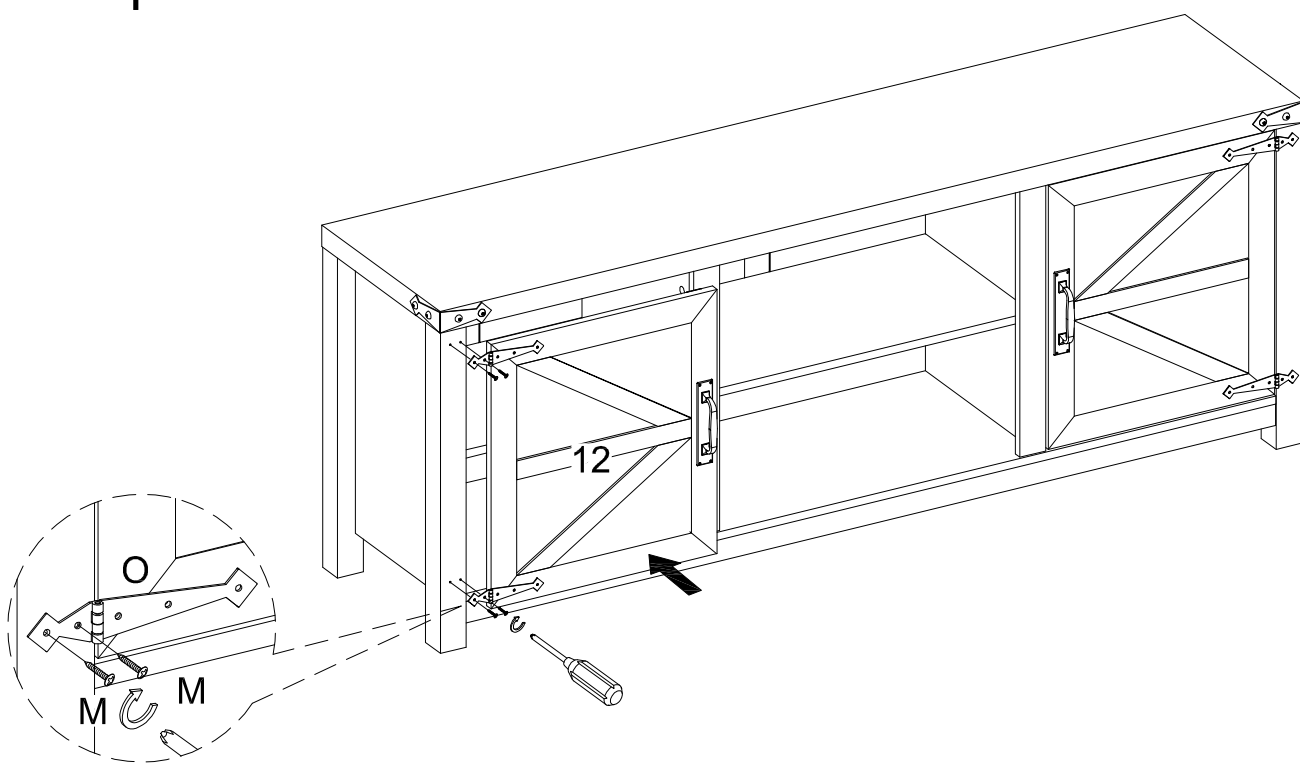

## Step 20

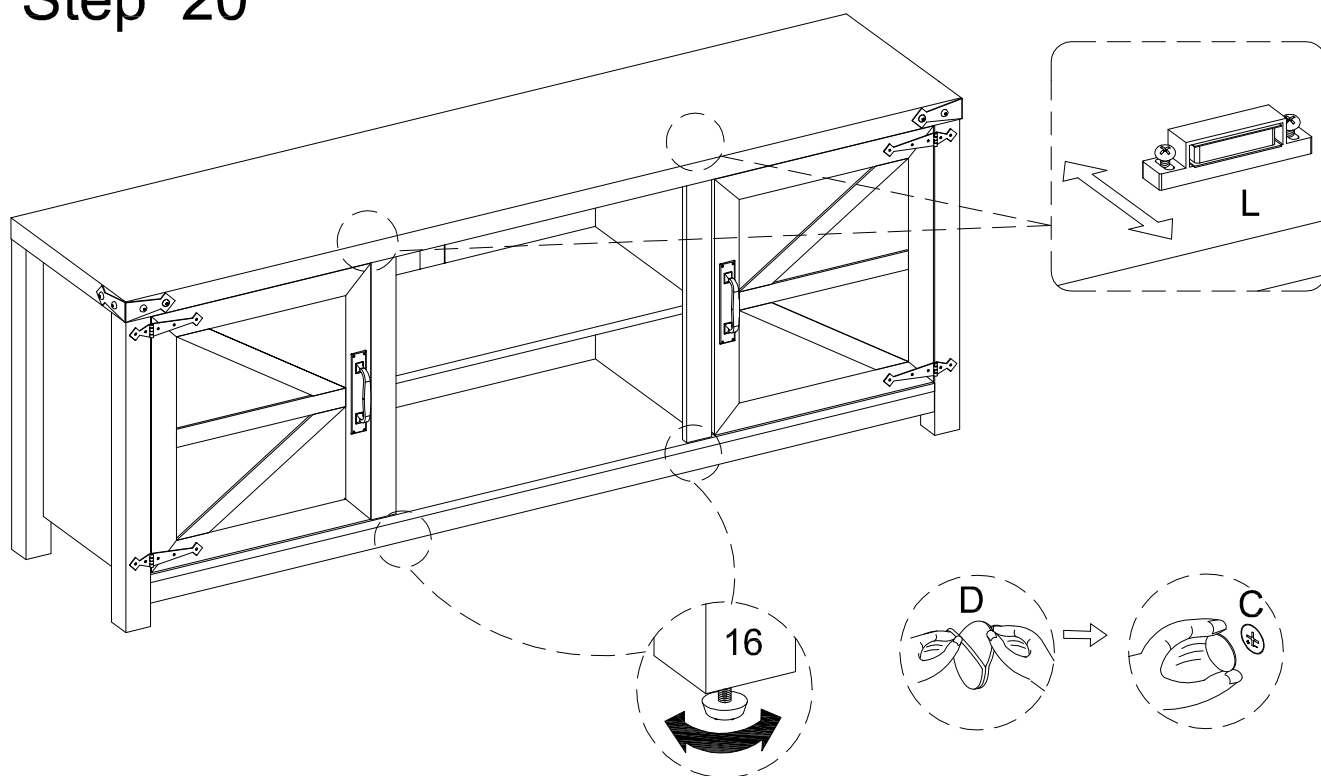

Final Assembly