
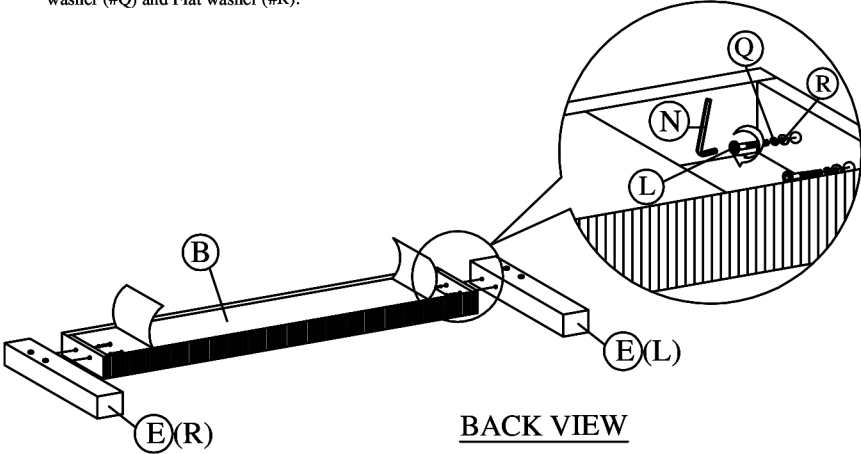
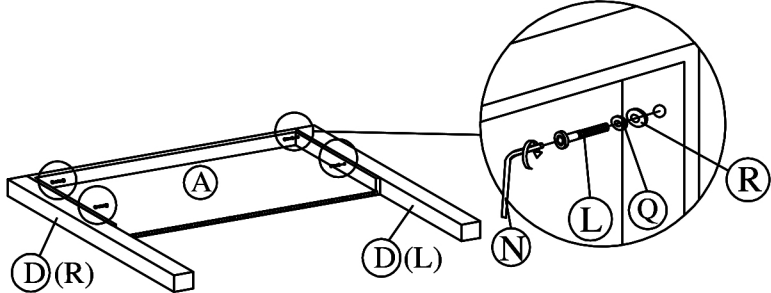









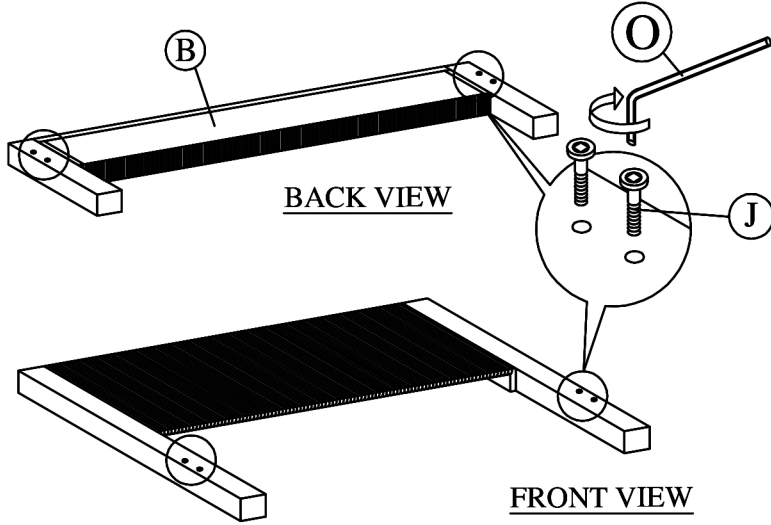
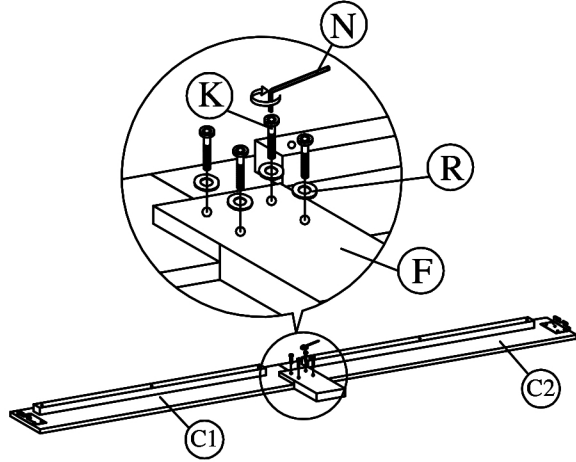












			Assembly Instruction	
A		Headboard 1pc	<p>Step 1 : Lift velcro to align the Footboard legs (#E) to the Footboard (#B). Then secure by using Bolts (#L) with Spring washer (#Q) and Flat washer (#R).</p>  <p style="text-align: center;"><u>BACK VIEW</u></p>	<p>Step 2 : Attach the Headboard legs (#D) to the Headboard (#A) by using Bolt (#L) and with Spring washer (#Q) and Flat washer (#R).</p>  <p style="text-align: center;"><u>BACK VIEW</u></p>
B		Footboard 1pc		
C		Side Rail 4pcs		
D		Headboard Legs 2pcs		
E		Footboard Legs 2pcs		
F		Side Rail Legs 285 x 80 x 30mm 2pcs		
G		Center Rail 870mm 2pcs		
H		12 Slat 1477mm 2pcs		
I		Support Legs 30 x 30 x 300mm 4pcs		
J		JCBB M8 x 20 8pcs	<p>Step 3 : Prepare Headboard (#A) and Footboard (#B) and attach the Bolts (#J).</p>  <p style="text-align: center;"><u>BACK VIEW</u></p> <p style="text-align: center;"><u>FRONT VIEW</u></p>	<p>Step 4 : Attach the side rail leg (#F) to the Side Rail (#C) by using Bolts (#K) with Flat washer (#R).</p> 
K		JCBC M6 x 30 8pcs		
L		JCBC M6 x 50 8pcs		
M		JCBC M6 x 60 4pcs		
N		Allen Key 65mm 1pc		
O		Allen Key 70mm 1pc		
P		CSK Screw 32mm 24pcs		
Q		Spring Washers 8pcs		
R		Flat Washers 16pcs		

Step 5 : Attach Side rail (#C) to the Headboard (#A) and Footboard (#B) by pushing the bracket down to fit. Tighten the 4 corners with Allen Key (#O).



Step 6 : Align the Center rail (#G) to the center of Slats (#H). Secure the support legs (#I) to the Center Rail (#G) and Slats (#H) by using Bolt (#M).

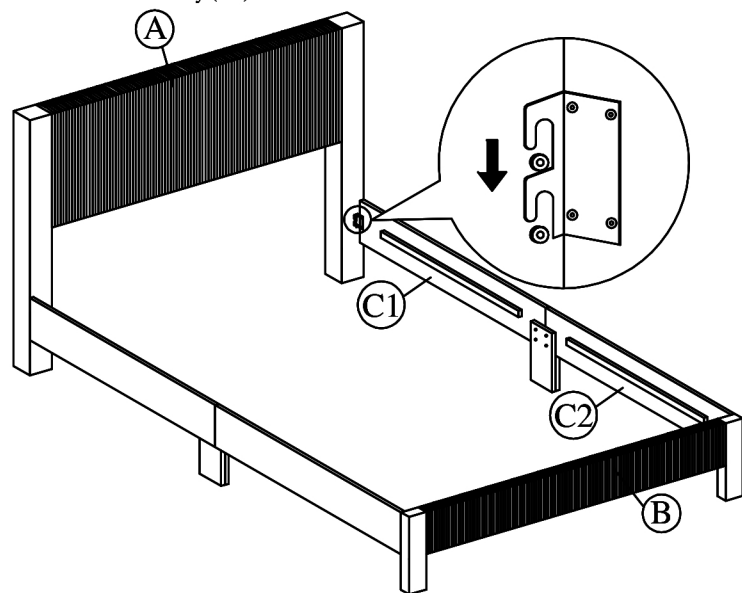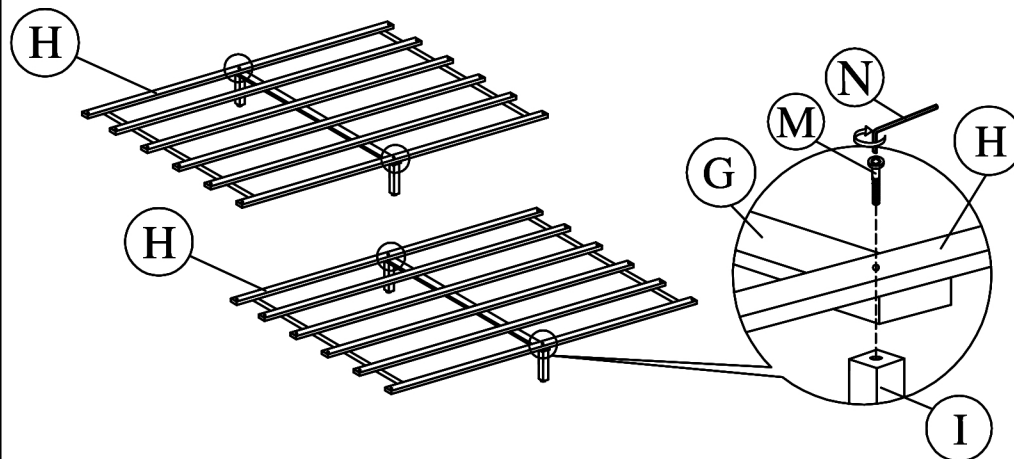

Step 7 : Install the bed slats by aligning to the Side. The distance of the slats should be sufficient to obtain desirable stability. Tighten the slats by using Screw (#P).

