
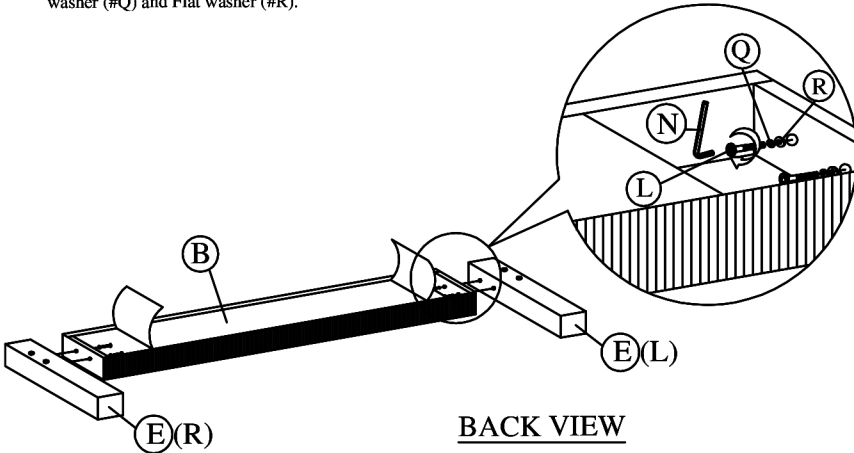
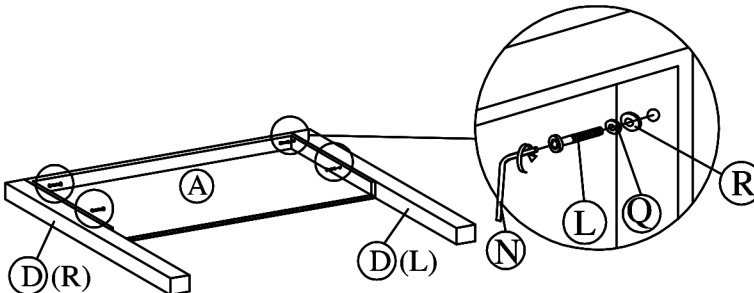

















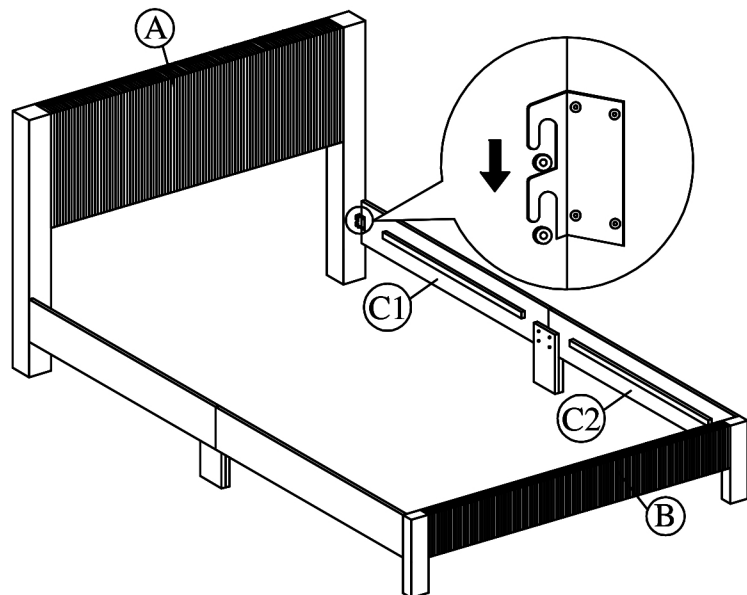
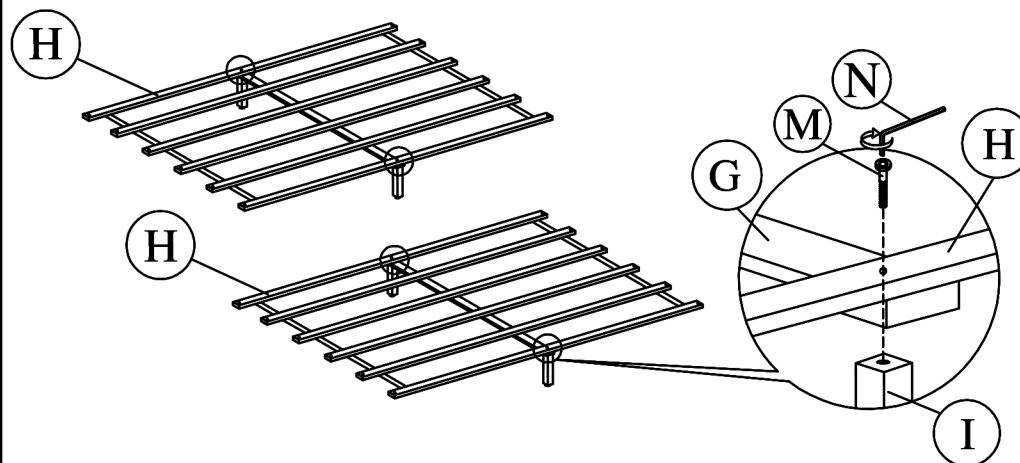


				Assembly Instruction	
A		Headboard	1pc	<p>Step 1 : Lift velcro to align the Footboard legs (#E) to the Footboard (#B). Then secure by using Bolts (#L) with Spring washer (#Q) and Flat washer (#R).</p>  <p style="text-align: center;"><u>BACK VIEW</u></p>	<p>Step 2 : Attach the Headboard legs (#D) to the Headboard (#A) by using Bolt (#L) and with Spring washer (#Q) and Flat washer (#R).</p>  <p style="text-align: center;"><u>BACK VIEW</u></p>
B		Footboard	1pc		
C		Side Rail	4pcs		
D		Headboard Legs	2pcs		
E		Footboard Legs	2pcs		
F		Side Rail Legs 285 x 80 x 30mm	2pcs		
G		Center Rail 800mm	2pcs		
H		12 Slat 1327mm	2pcs		
I		Support Legs 30 x 30 x 300mm	4pcs		
J		JCBB M8 x 20	8pcs		
K		JCBC M6 x 30	8pcs		
L		JCBC M6 x 50	8pcs		
M		JCBC M6 x 60	4pcs		
N		Allen Key 65mm	1pc		
O		Allen Key 70mm	1pc		
P		CSK Screw 32mm	24pcs		
Q		Spring Washers	8pcs		
R		Flat Washers	16pcs		

Step 5 : Attach Side rail (#C) to the Headboard (#A) and Footboard (#B) by pushing the bracket down to fit. Tighten the 4 corners with Allen Key (#O).



Step 6 : Align the Center rail (#G) to the center of Slats (#H). Secure the support legs (#I) to the Center Rail (#G) and Slats (#H) by using Bolt (#M).



Step 7 : Install the bed slats by aligning to the Side. The distance of the slats should be sufficient to obtain desirable stability. Tighten the slats by using Screw (#P).

