

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

223390KW (B1-B4) California King Storage Bed

REVISION 0: 09/09/2023

PAGE 1 OF 9

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

30 MINUTES

PARTS IDENTIFICATION

B1 (BOX 1)

B1 (BUX 1)							
A F	IEADBOARD PANEL		1PC	В	HEADBOARD BOTTOM RAIL		1PC
c H	RIGHT IEADBOARD LEG		1PC	D	LEFT HEADBOARD LEG		1PC
B2 (BOX 2)							
E F	OOTBOARD PANEL		1PC	F	RIGHT FOOTBOARD LEG		1PC
G	LEFT FOOTBOARD LEG		1PC	_			
B3 (BOX 3)							
н	BED RAIL		2PCS	ı	BED SLAT SUPPORT WITH LEVELER		8PCS
J	ROLL SLAT (11PCS)		1SET	K	CENTER RAIL		1PC
L	CENTER RAIL SUPPORT WITH LEVELER		3PCS	М	TOP SIDE RAIL		2PCS
B4 (BOX 4)							
N	DRAWER		2PCS	0	DRAWER SUPPORT WITH LEVELER		4PCS
Р	DRAWER PANEL		2PCS				
НВ	223390KW (B1) FROM BOX 1 HEADBOARD COMPLETE		1PC	FB	223390KW (B2) FROM BOX 2 FOOTBOARD		1PC

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 223390KW (B1)

- **MEDIUM BOLT** 1 (Ø5/16" x 45MM- RBW)
- 10PCS
- **LOCK WASHER** 2 (Ø5/16" - RBW)



10PCS

- **FLAT WASHER** 3 (Ø5/16" - RBW)
- 10PCS
- **ALLEN WRENCH** (4MM - RBW)



1PC

Z-B2 (BOX 2) - HARDWARE PACK IS LOCATED IN 223390KW (B2)

- **LONG BOLT** 5 (Ø5/16" x 55MM- RBW)
- 4PCS
- **LOCK WASHER** 6 (Ø5/16" - RBW)

4PCS

- **FLAT WASHER** 7 (Ø5/16" - RBW)
- 4PCS
- **ALLEN WRENCH** 8 (4MM - RBW)

1PC

Z-B3 (BOX 3) - HARDWARE PACK IS LOCATED IN 223390KW (B3)

- THREADED BOLT (Ø5/16" x 90MM - RBW)
 - **HEX NUT** (Ø5/16" x 14MM - RBW)
- **FLAT HEAD SCREW** 13 (Ø4 x 30MM - RBW)
- **LOCK WASHER** 15 (Ø1/4" - RBW)
- **ALLEN WRENCH** 17 (4MM - RBW)





8PCS

€

10PCS

1PC

12PCS

- HALF ROUND NUT 10 (Ø5/16" - RBW)
- **WRENCH** 12 (14MM - RBW)



FLAT WASHER 16 (Ø1/4" - RBW)



8PCS

1PC

10PCS



10PCS

Z-B4 (BOX 4) - HARDWARE PACK IS LOCATED IN 223390KW(B4)

- SHORT BOLT 18 (Ø1/4" x 38MM- RBW)

12PCS

LOCK WASHER 19 (Ø1/4" - RBW)



12PCS

20 **FLAT WASHER**

22 FLAT HEAD SCREW

(Ø4 x 15MM - RBW)

- (Ø1/4" RBW)
- 12PCS 8PCS
- **ALLEN WRENCH** 21 (4MM - RBW)




1PC

11


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: 223390KW(B1-B4) ASSEMBLY INSTRUCTIONS STEP 1



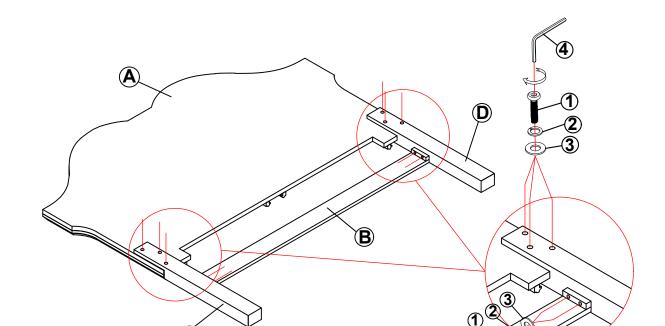


STEP 2

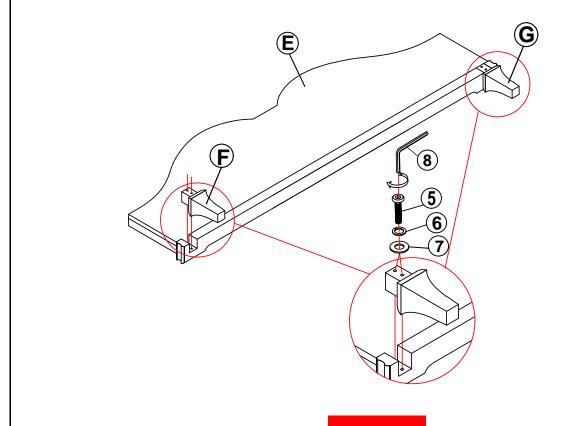


PAGE 4 OF 9

ASSEMBLY INSTRUCTIONS STEP 3



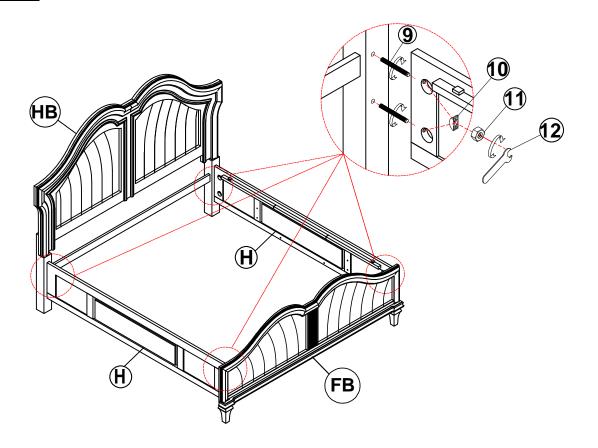


STEP 4

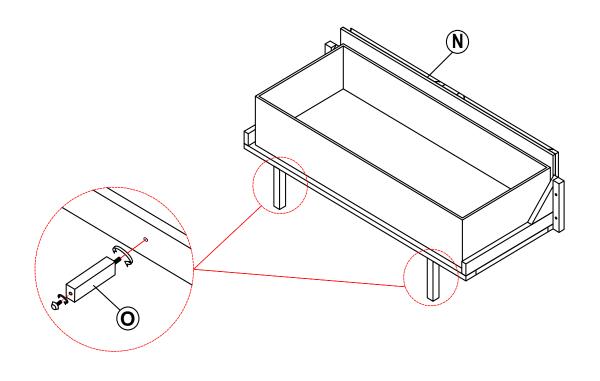



PAGE 5 OF 9

ASSEMBLY INSTRUCTIONS STEP 5



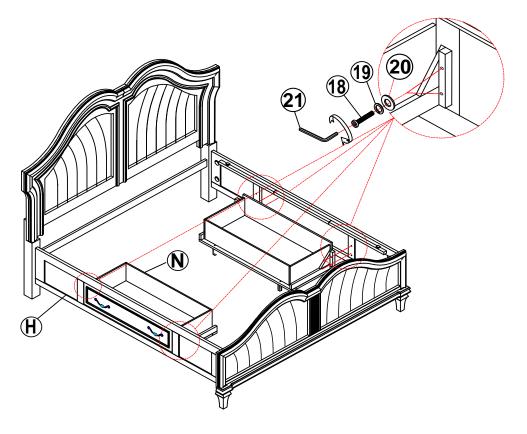


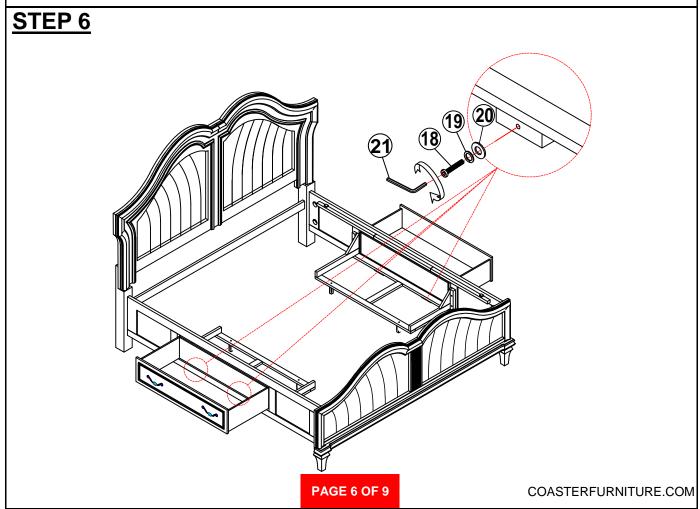

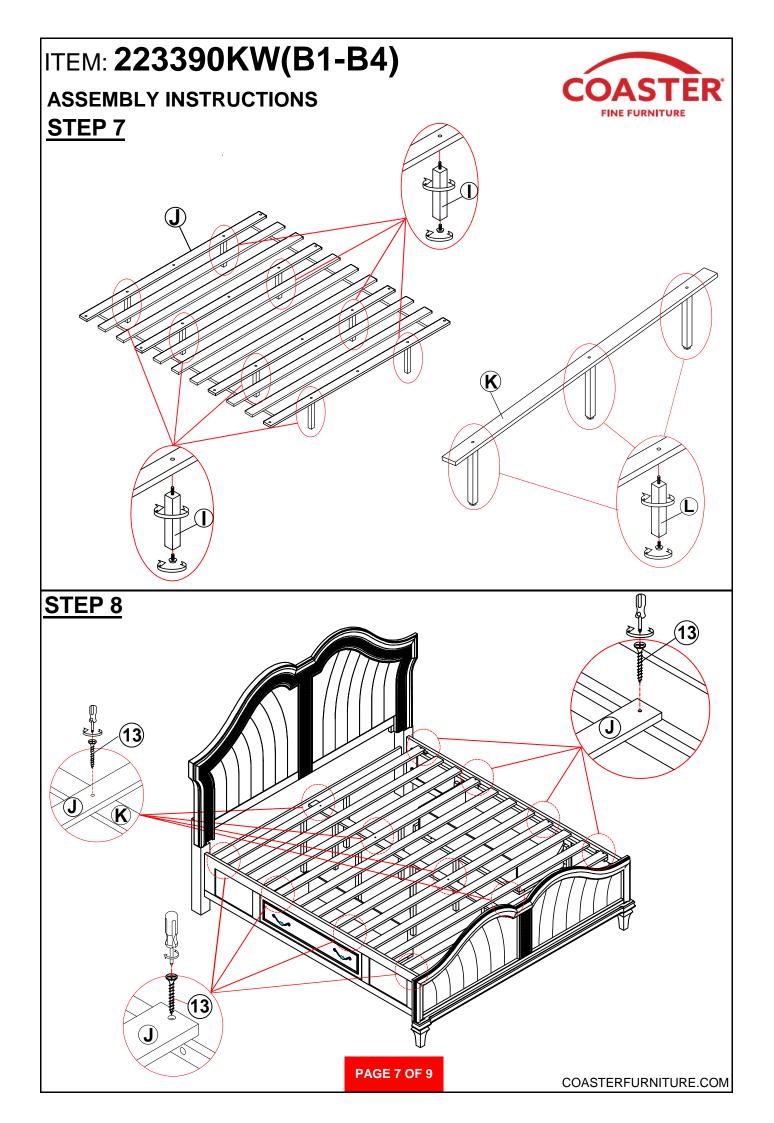


ASSEMBLY INSTRUCTIONS STEP 9



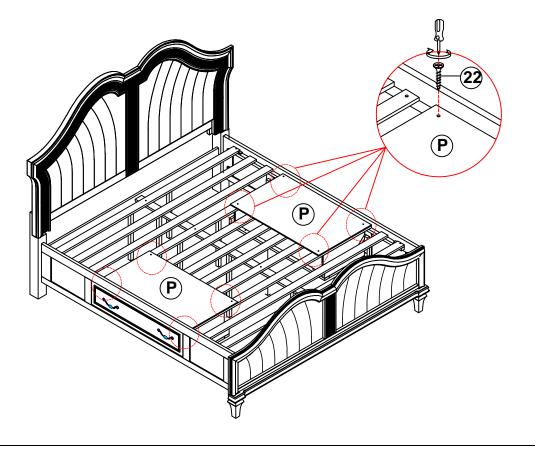

STEP 10

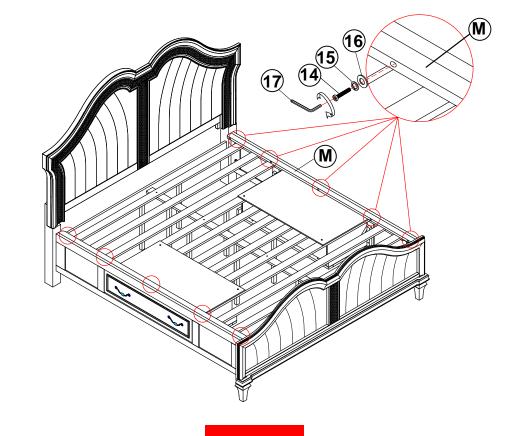

PAGE 8 OF 9

ASSEMBLY INSTRUCTIONS




STEP 11 COMPLETE





Inner Size :72.50"W X 85.50"D

Inner Size of Drawer :37.00"W X 17.25"D X 6.50"H X 0.50"T

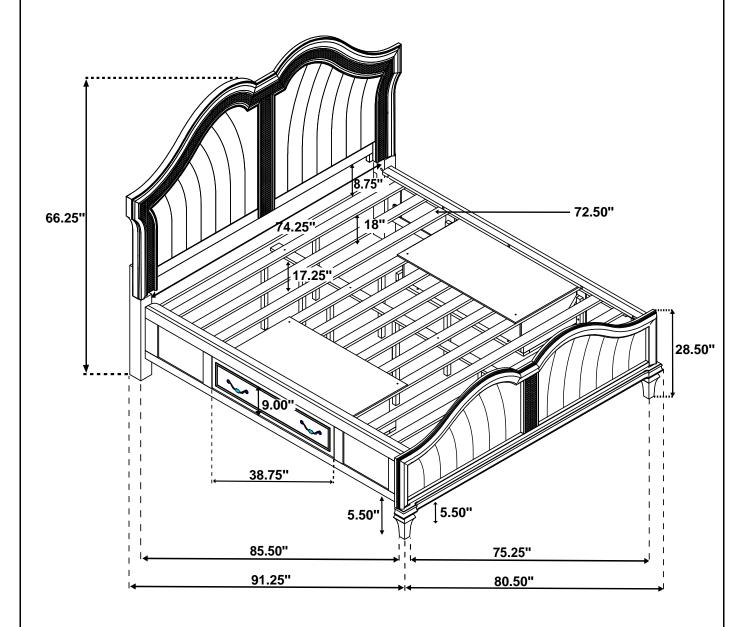

Note: Dimension tolerance ±5%