
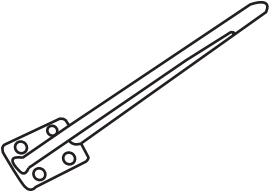


Assembling Instruction



Ax1  1 PC	EXTPA PATRS  2 PCS
Bx4  4 PCS	
Cx16  16 PCS	
Dx1  1 PC	

①

Do not fully tighten the bolts until all the bolt align with the hole. Pls be sure you align the hole first.

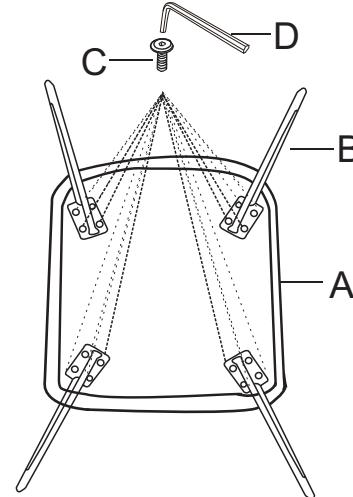

②

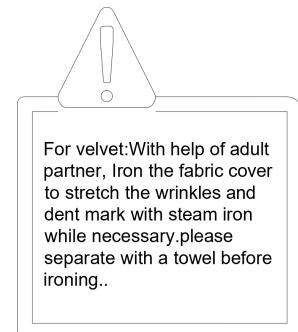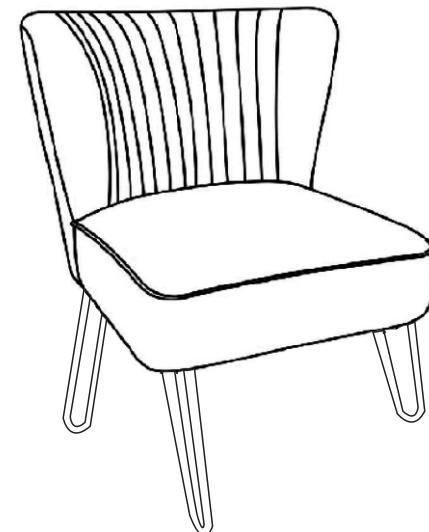

For velvet:With help of adult partner, Iron the fabric cover to stretch the wrinkles and dent mark with steam iron while necessary.please separate with a towel before ironing..