
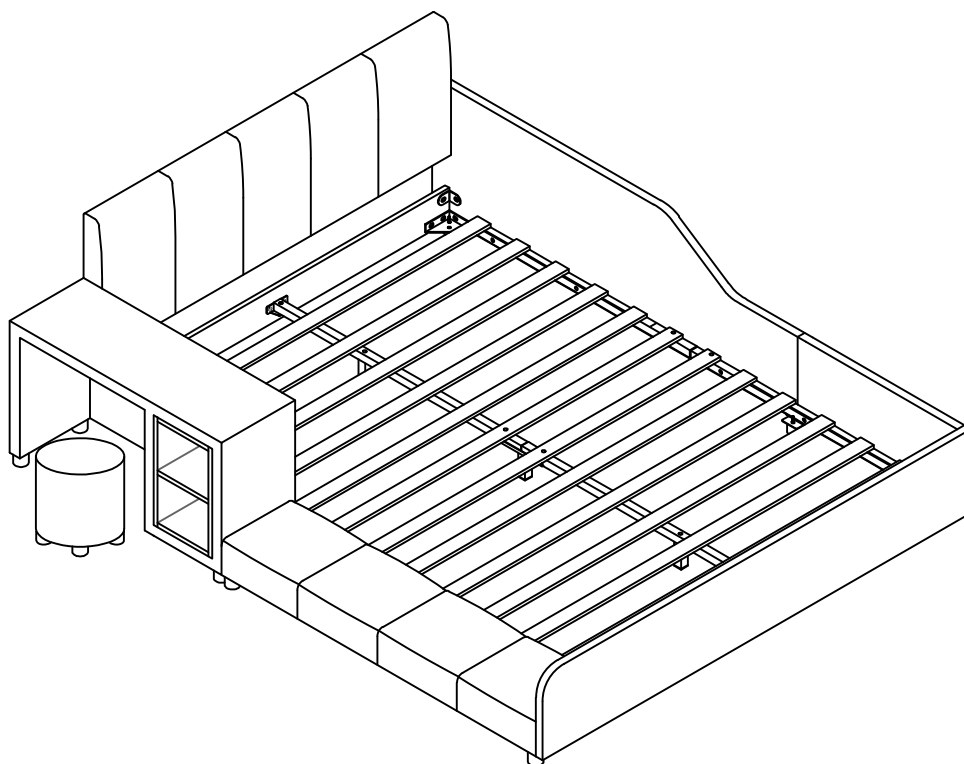


# ASSEMBLY INSTRUCTION

SKU:WF316441+WF316443




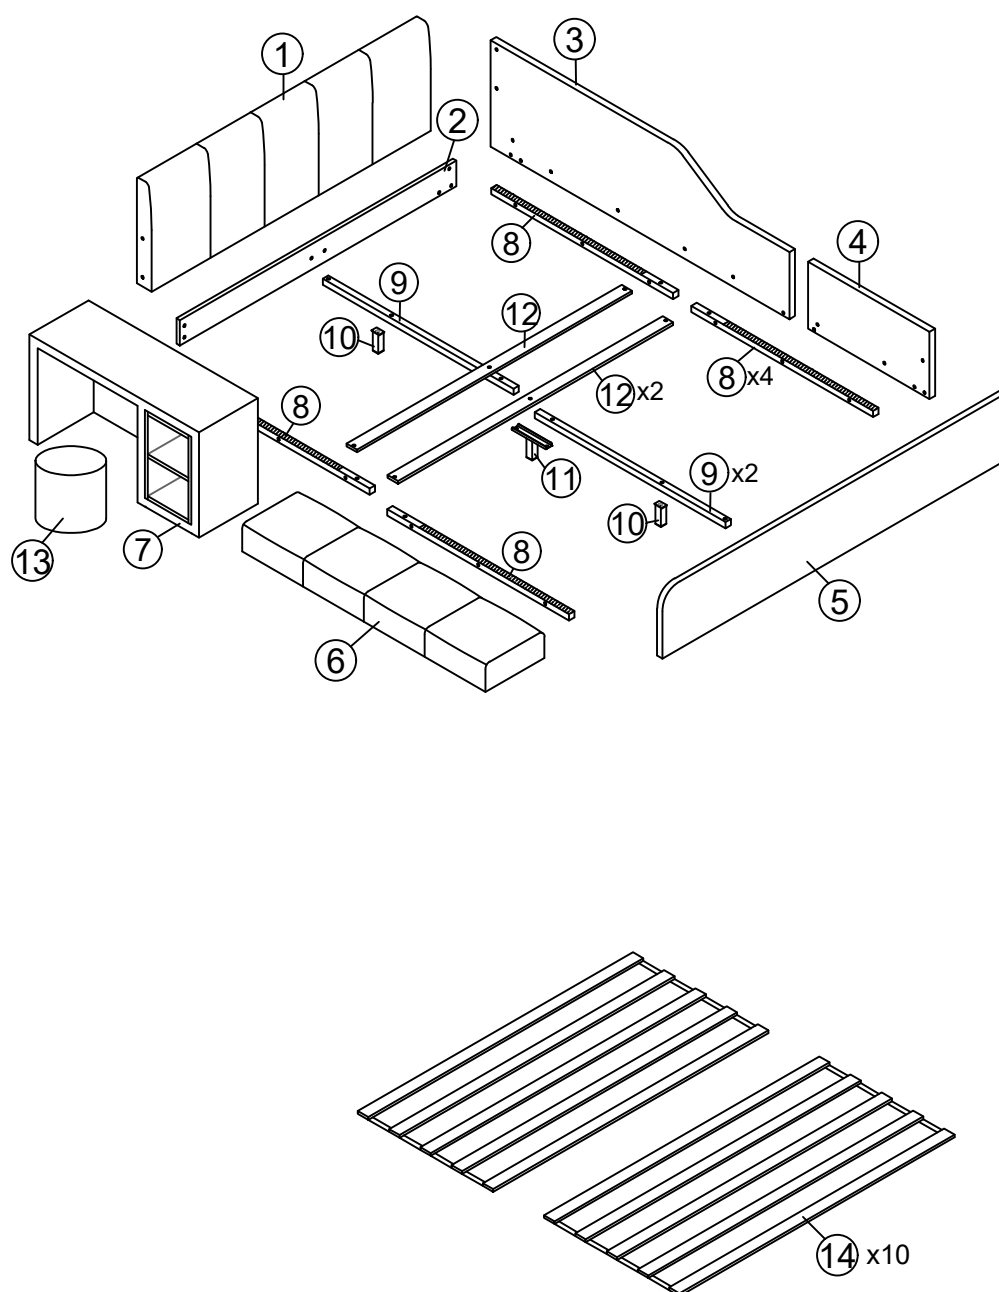


## Detail View









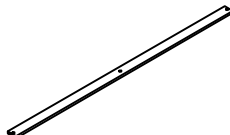
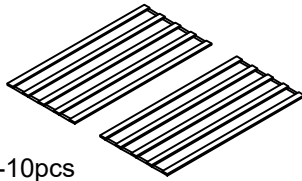


# Part List

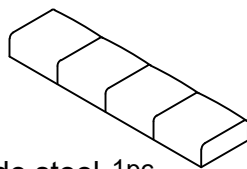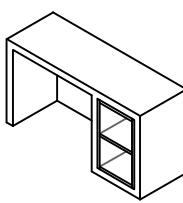







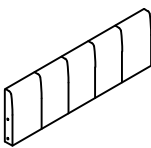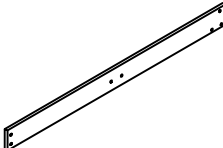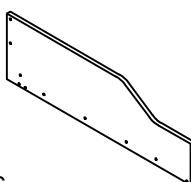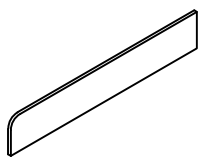




WF316443

<b>4</b>  Siderail-1pc	<b>6</b>  Bedside stool-1pc	<b>7</b>  Desk-1pc
<b>13</b>  Stool-1pc		

## Hardware List + Part list WF316441

<b>1</b>  Head board-1pc	<b>2</b>  Cross board-1pc	<b>3</b>  Siderail-1pc
<b>5</b>  Foot board -1pc	<b>8</b>  Side rails support bar-4pcs	<b>9</b>  Center support bar -2pcs
<b>10</b>  Middle support leg-2pcs	<b>11</b>  Middle support leg-1pc	<b>12</b>  Cross bar -2pcs
<b>14</b>  Slats -10pcs		



## Hardware List

<b>A</b> 	<b>B</b>  Ø8*45mm	<b>C</b>  Ø8*18mm
Allen Key(1pc)	Bolts(16pcs)	Bolts(28pcs)
<b>D</b> 	<b>E</b>  Ø8*50mm	<b>F</b>  86*32*28*2mm
Two hole iron(1pc)	Bolts(2pcs)	Center support bar fittings(3pcs)
<b>G</b>  77*33**33*2mm	<b>H</b>  Ø8*30mm	<b>I</b> 
"7" Connector(2pcs)	Bolts(8pcs)	Little "7" Connector (2pcs)
<b>J</b> 	<b>K</b> 	<b>L</b> 
Metal Corner (2pcs)	Spanner (1pc)	Nuts(2pcs)
<b>M</b>  H:40mm		
Bed legs(15pcs)		

Attention: Do not tighten the screws before completing the entire installation. If you have any difficulty with the installation process, please feel free to contact us.


## Step 1

Fix the Bed legs M to the Bedside stool ⑥ ,Desk ⑦ and Stool ⑬.

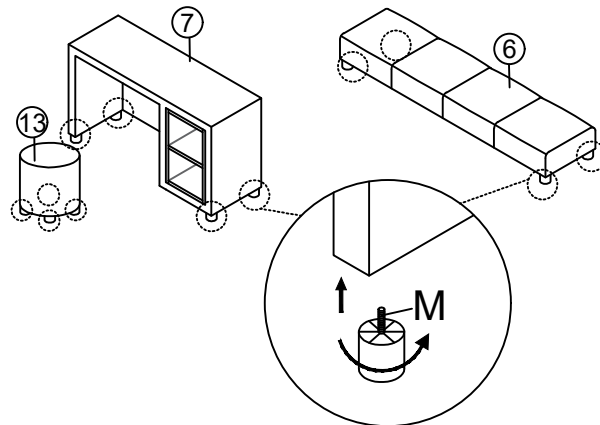

## Step 2


Fix Siderail ③ and siderail ④ together with Two hole Iron D, center support bar fittings F and Bolts C by using Allen Key A.

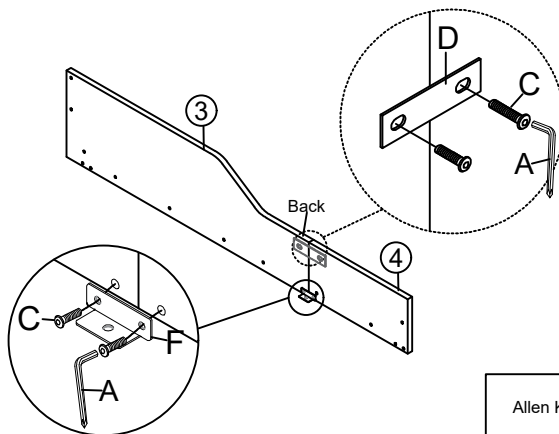

Allen Key 	C Bolts x 4  M8X18mm	D Two hole iron x1 	F Center support bar fittings x1 
---------------	----------------------------	------------------------	--------------------------------------

## Step 3


Fix the Siderails support bar ⑧ to the Siderail ③ ,Siderail ④, Bedside stool ⑥ and Desk ⑦ with Bolts B by using Allen key A.

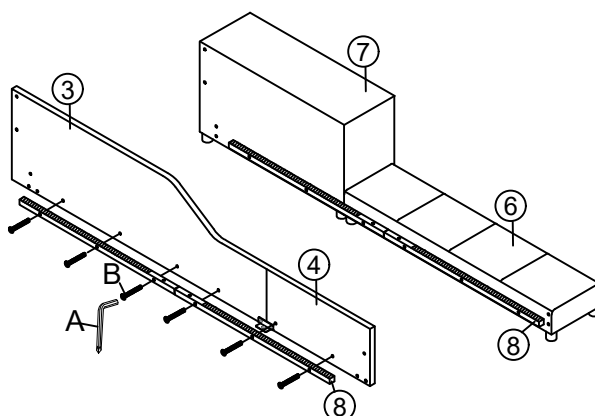

Allen Key 	B Bolts x 12  M8X45mm
---------------	-----------------------------

### Step 4


Fix the Metal Corner J to the siderails ③ and ④ with Bolts C by using Allen key A.

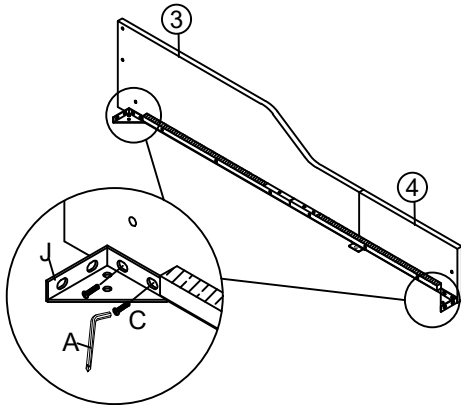

Allen Key	C Bolts x 4	J Metal Corner x 2
	 M8X18mm	

### Step 5


Fix the legs M to the Metal Corner J and Center Support bar fittings F with Nuts L by using Spanner K.

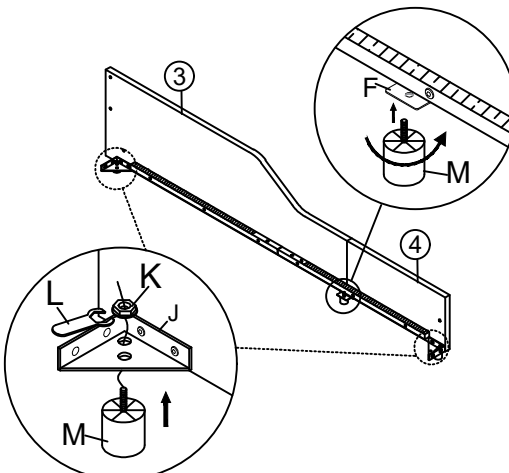



K Spanner x1	L Nuts x2	M Bed legs x 3
		

### Step 6

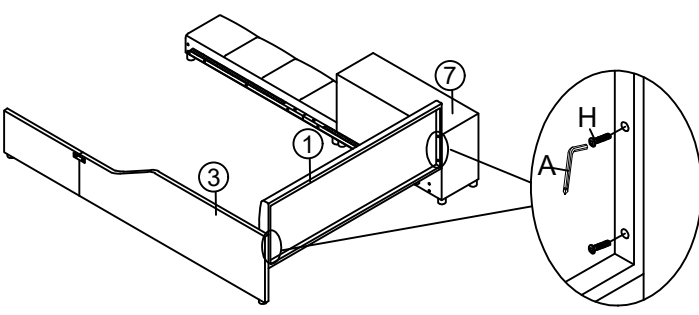Fix the Headboard ① to the Siderail ③ and Desk ⑦ with Bolts H by using Allen key A.




Allen Key	H Bolts x 4
	 M8X30mm

## Step 7

Fix the Cross board ② to the Siderail ③ and Desk ⑦ with Metal Corner J and Little "7" Connector I and Bolts C by using Allen key A.


Fix Foot board ⑤ to Side rail ④ and Bedside stool ⑥ with "7" Connector G and Bolts C by using Allen key A.

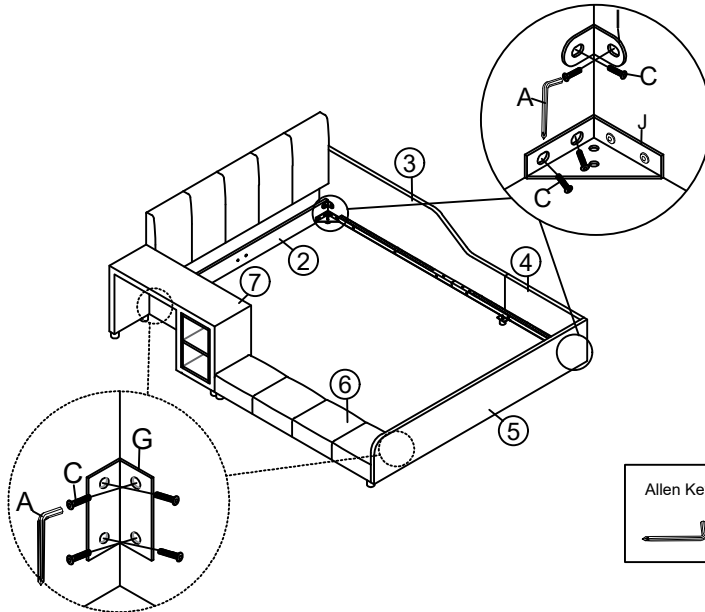

Allen Key	C Bolts x 16 M8X18mm	G "7" Connector x 2	I Little "7"Connector x 2

## Step 8 x3

Fix the Center support bar fittings F to the Cross board ② and Foot board ⑤ with Bolts C by using Allen key A.

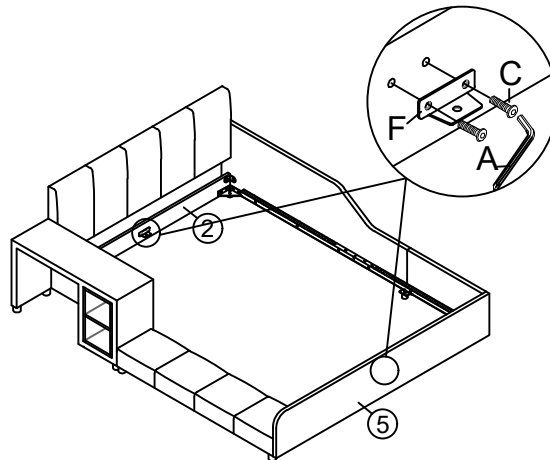


Allen Key	C Bolts x 4 M8X18mm	F Center support bar fittings x2

## Step 9

Fix the Cross bar ⑫ to the Center support bar ⑨ and Connected support leg ⑪ with Bolts E by using Allen key A.


Fix the Middle support leg ⑩ to the Center support bar ⑨ with Bolts B by using Allen key A.

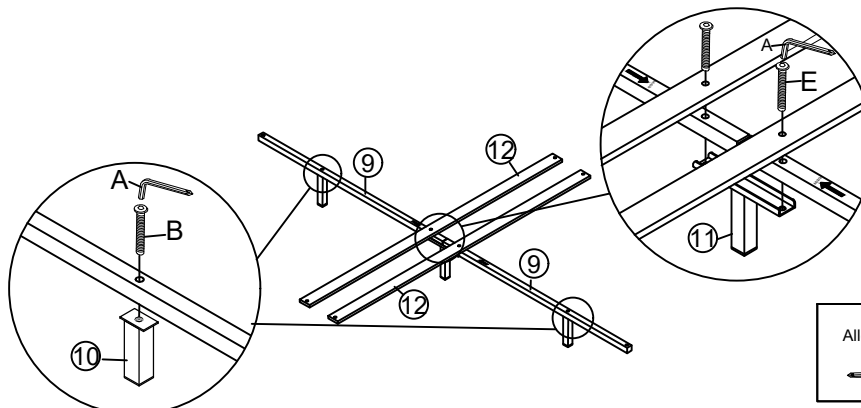

Allen Key	B Bolts x 2 M8X45mm	E Bolts x 2 M8X50mm

## Step 10

Fix the Center support bar ⑨ to the Center support bar fitting F with Blots B by using Allen key A.  
Fix the Cross bar ⑫ to the Siderails bar ⑧ with Blots H by using Allen key A.

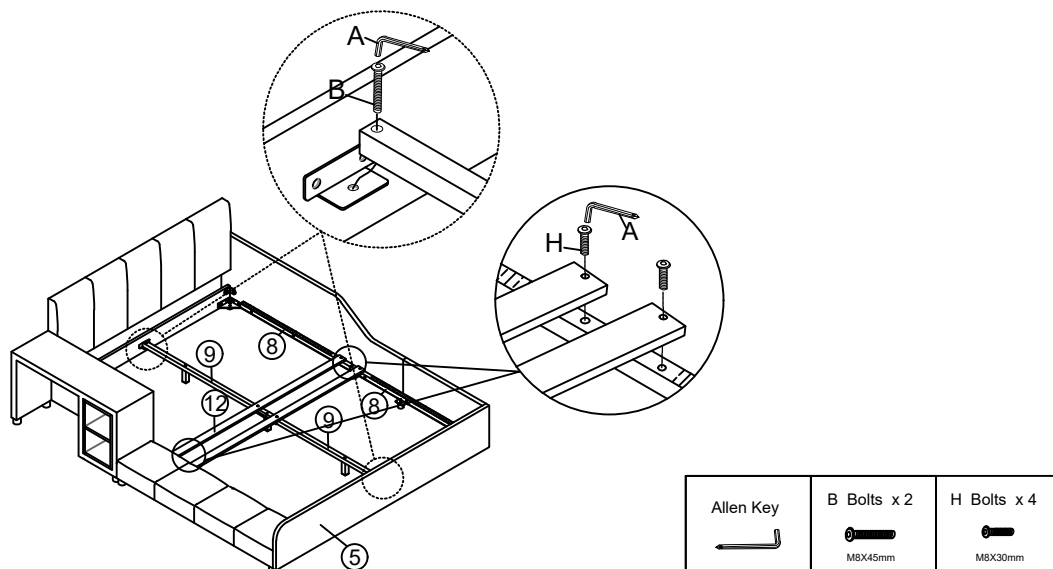

## Step 11

Fix the slats ⑭ to the side support bar ⑧, then please tighten all of the hardware and enjoy your bed.

