


# SHOWER ENCLOSURE SINGLE SLIDING INSTALLATION INSTRUCTIONS

320048-SS-MB/320056-SS-MB


320060-SS-MB/320064-SS-MB

320068-SS-MB

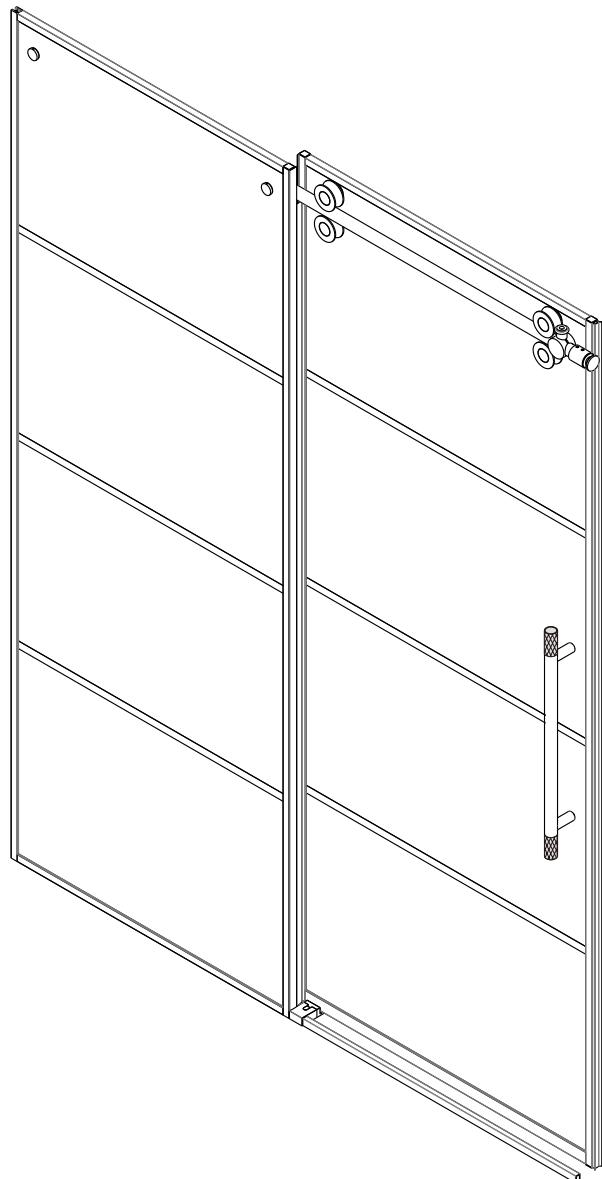

# PART LIST




**CODE:** 320048-SS-MB/320056-SS-MB/320060-SS-MB  
320064-SS-MB/320068-SS-MB

PART	DESCRIPTION	QUANTITY
[1]	Support Bar	 1 <input checked="" type="checkbox"/>
[2]	Bottom Threshold	 1 <input checked="" type="checkbox"/>
[3]	Fixed Panel	 1 <input checked="" type="checkbox"/>
[4]	Door Panel	 1 <input checked="" type="checkbox"/>
[5]	Closing Gasket	 1 <input checked="" type="checkbox"/>
[6A]	Side Gasket (Longer)	 1 <input checked="" type="checkbox"/>
[6B]	Side Gasket (Shorter)	 1 <input checked="" type="checkbox"/>
[7]	Handle Set	 1 <input checked="" type="checkbox"/>
[8]	Top Rollers	 4 <input checked="" type="checkbox"/>
[9]	Support Bar Wall Brackets	 2 <input checked="" type="checkbox"/>
[12]	Bottom Slider A	 1 <input checked="" type="checkbox"/>
[13]	Bottom Slider B	 1 <input checked="" type="checkbox"/>
[14]	Wall Plug	 1 <input checked="" type="checkbox"/>
[15]	Screw ST4x25	 1 <input checked="" type="checkbox"/>



#### IMPORTANT-Please

read and follow all warnings and instructions before using this product. Injury can result from improper use. Save this documents.

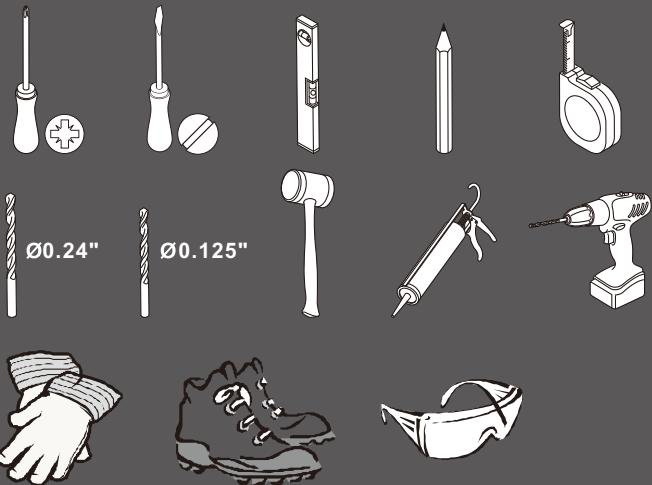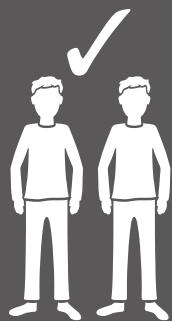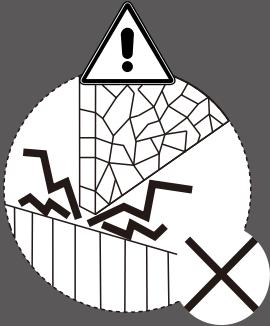

#### WARNING

Tempered Glass, please don't hit the corners and the surrounding, otherwise the glass will burst.

## ● General Information

Please inspect the product immediately upon receipt for transit damage, missing packs/parts or manufacturing fault. Damage reported later cannot be accepted. Please handle the product with care avoiding knocks and shock loading to all sides and edges of the glass.

### **Notes: Safety glass can not be re-worked.**

Please read these instructions carefully before start of installation.

Special care should be taken when drilling walls to avoid hidden pipes or electrical cables.


Note: This product is heavy and may require two people to install.

## **Aftercare instructions**

After use, your shower should be cleaned with soap and water. This is particularly important in hard water districts where insoluble lime salts may be deposited and allowed to build up. Cleaners of a gritty or abrasive nature should not be used. Care should be taken to avoid contact with strong chemicals such as organic solvents and strippers.






Glass cleaners can be used but with caution, if in doubt contact the manufacturer of the cleaner in question.

Please keep these instructions for aftercare and customer service details.

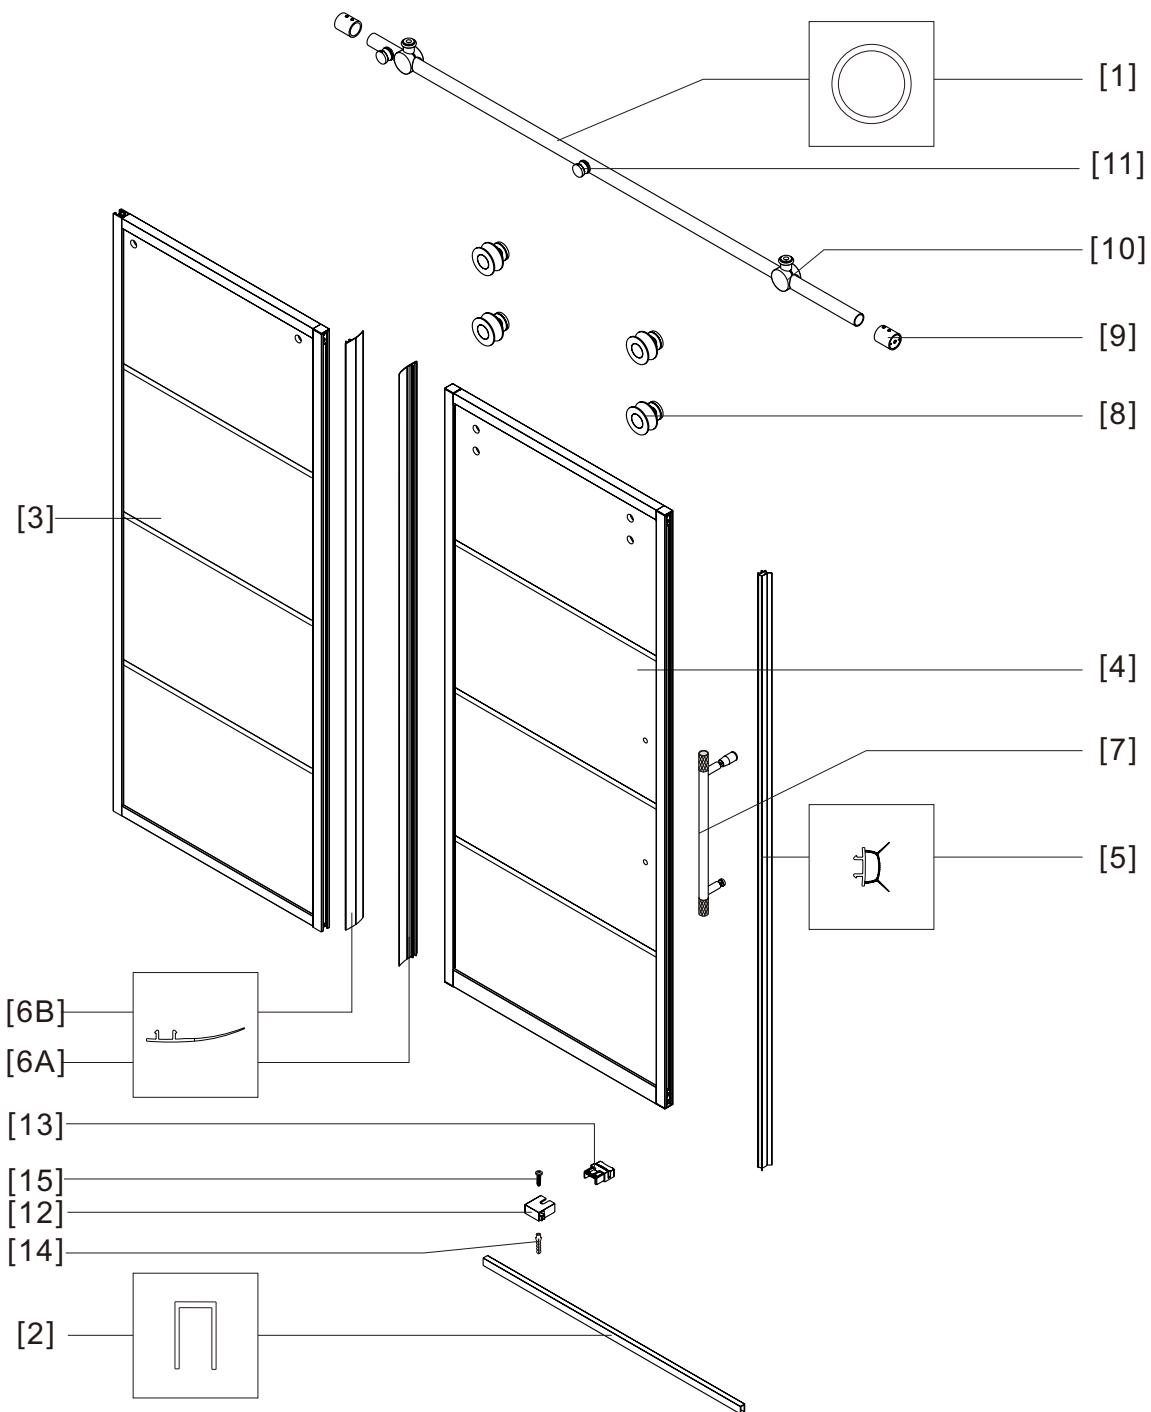

[1] 1xSupport Bar.	[8] 4xTop Rollers.
[2] 1xBottom Threshold.	[9] 2xSupport Bar Wall Brackets.
[3] 1xFixed Panel.	[10] 2xAnti-collision Components.
[4] 1xDoor Panel.	[11] 2xFasteners.
[5] 1xClosing Gasket.	[12] 1xBottom Slider A.
[6A] 1xSide Gasket (Longer).	[13] 1xBottom Slider B.
[6B] 1xSide Gasket (Shorter).	[14] 1xWall Plug.
[7] 1xHandle Set.	[15] 1xScrew ST4x25.

## ● Box Contents:

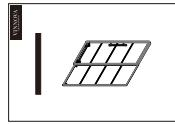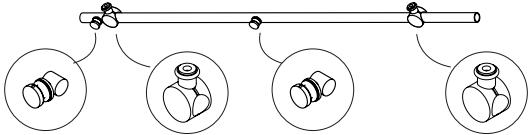
1xInstallation Instruction.	→	
[1] 1xSupport Bar. [10] 2xAnti-collision Components. [11] 2xFasteners.	→	
[2] 1xBottom Threshold.	→	
[3] 1xFixed Panel.	→	
[4] 1xDoor Panel.	→	
[5] 1xClosing Gasket.	→	
[6A] 1xSide Gasket (Longer). [6B] 1xSide Gasket (Shorter).	→	
[7] 1xHandle Set.	→	
[8] 4xTop Rollers.	→	
[9] 2xSupport Bar Wall Brackets.	→	
[12] 1xBottom Slider A. [13] 1xBottom Slider B.	→	
[14] 1xWall Plug. [15] 1xScrew ST4x25.	→	




## ● Assembly

01

Size	L
48"(1219mm)	44"-48"(1118-1219mm)
56"(1422mm)	52"-56"(1321-1422mm)
60"(1524mm)	56"-60"(1422-1524mm)
64"(1626mm)	60"-64"(1524-1626mm)
68"(1727mm)	64"-68"(1626-1727mm)

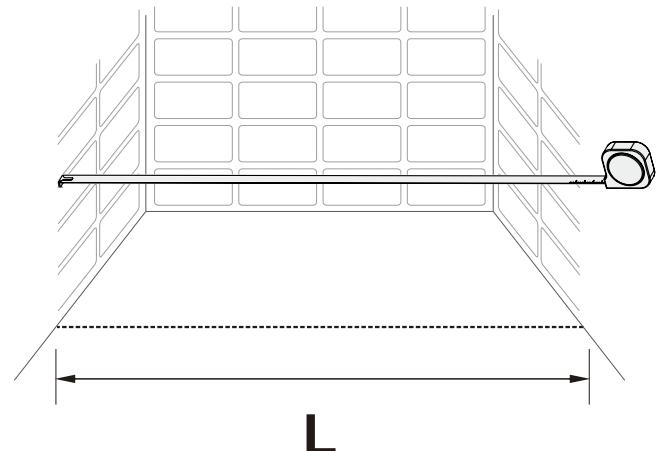


02

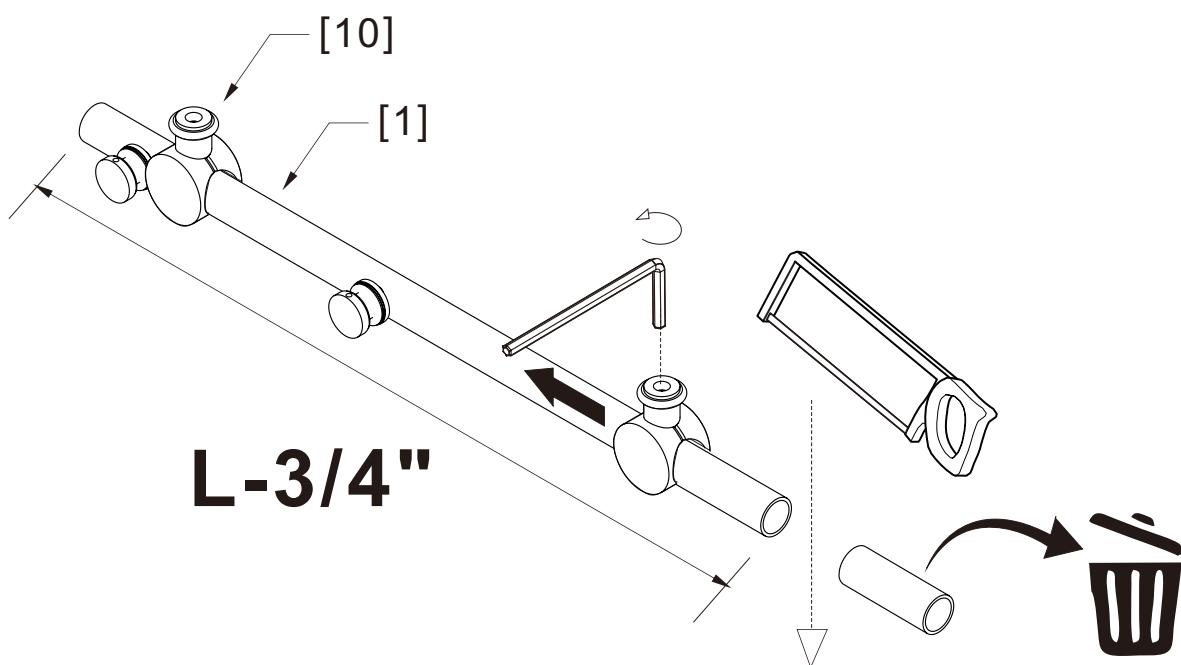

03



LH



RH




180°




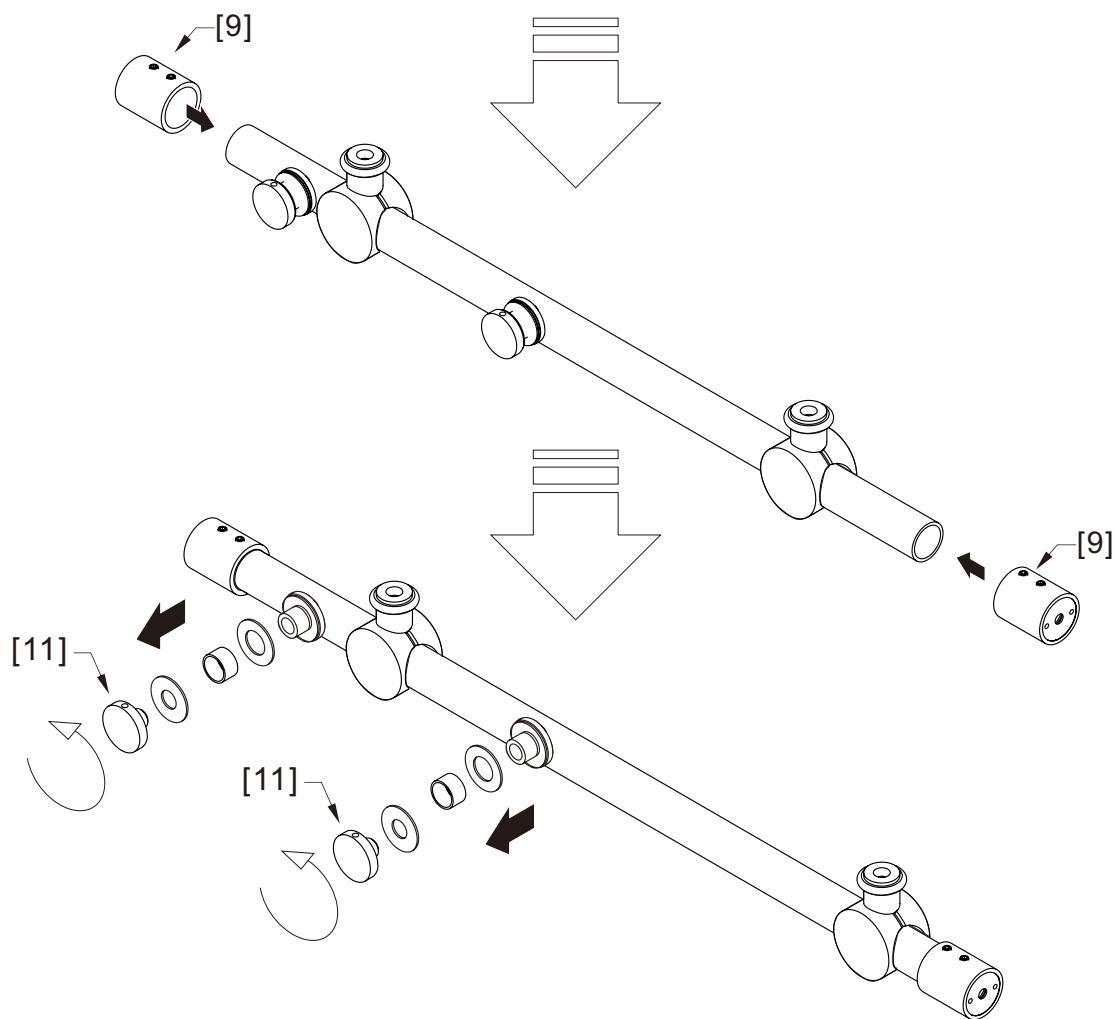
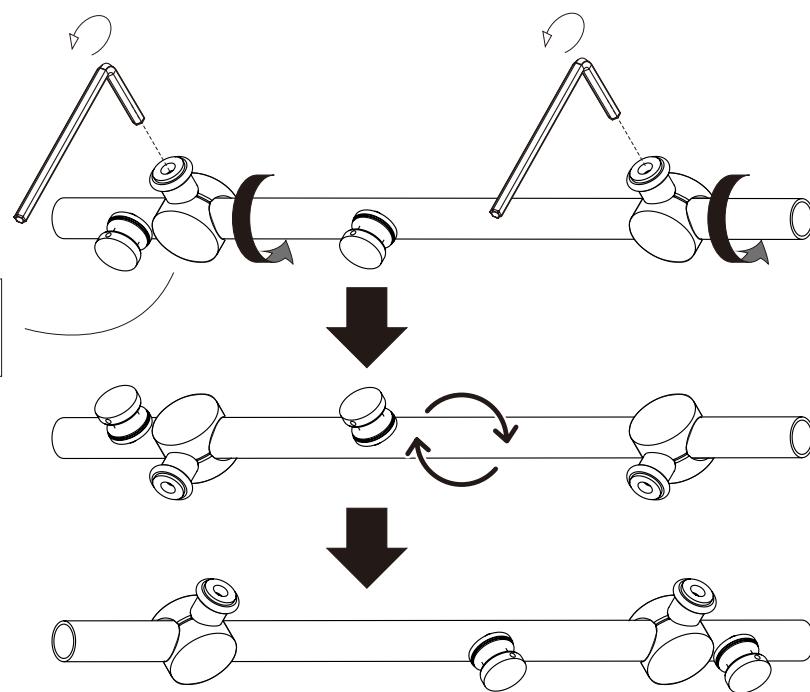


04

2x



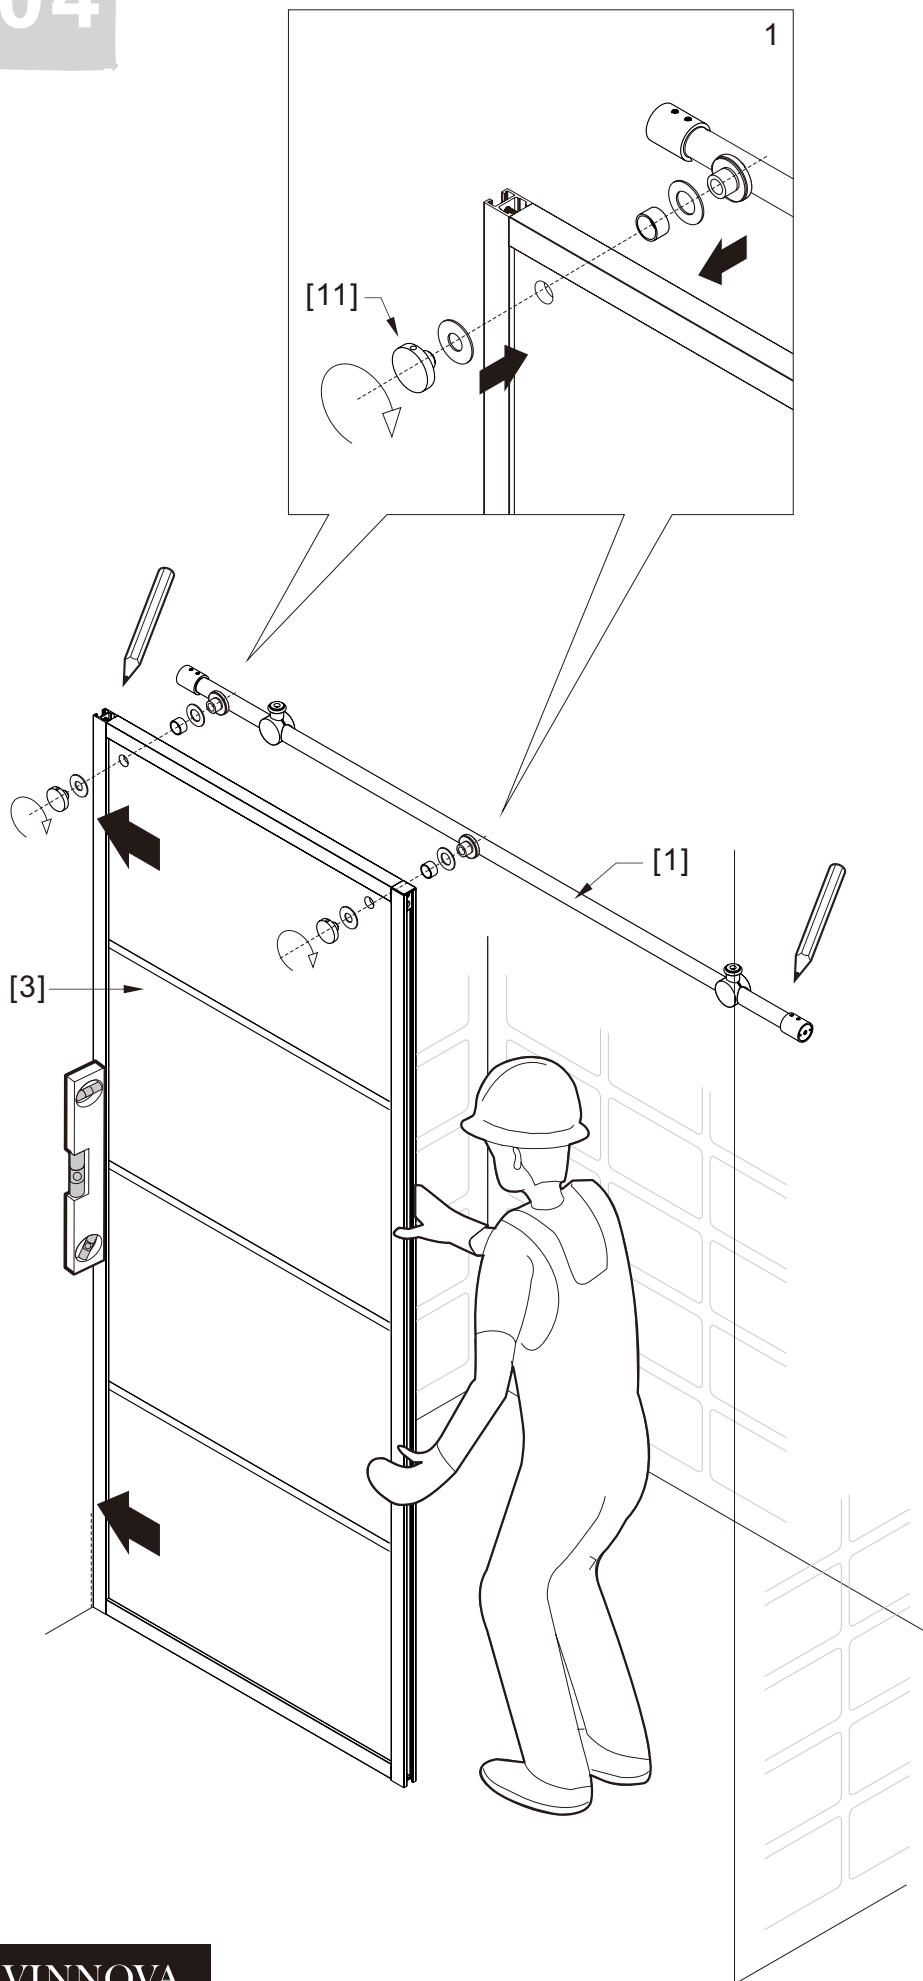


2x

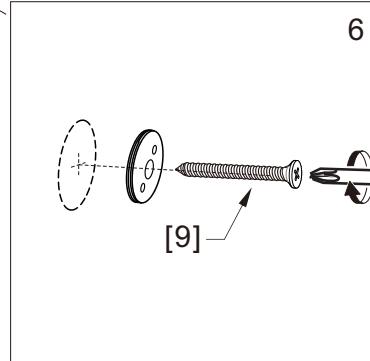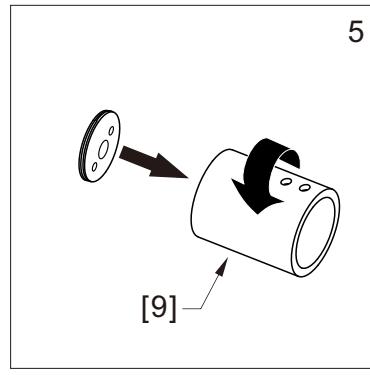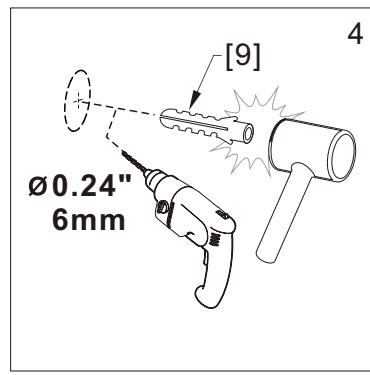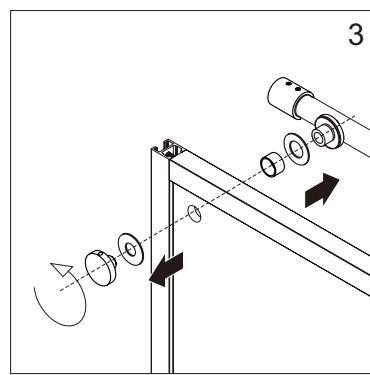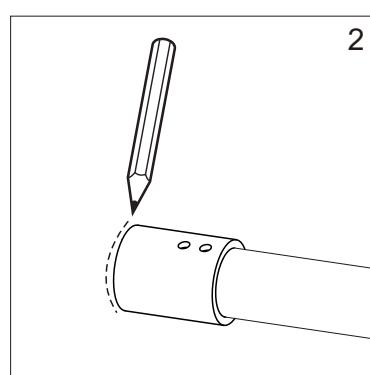

05




2x

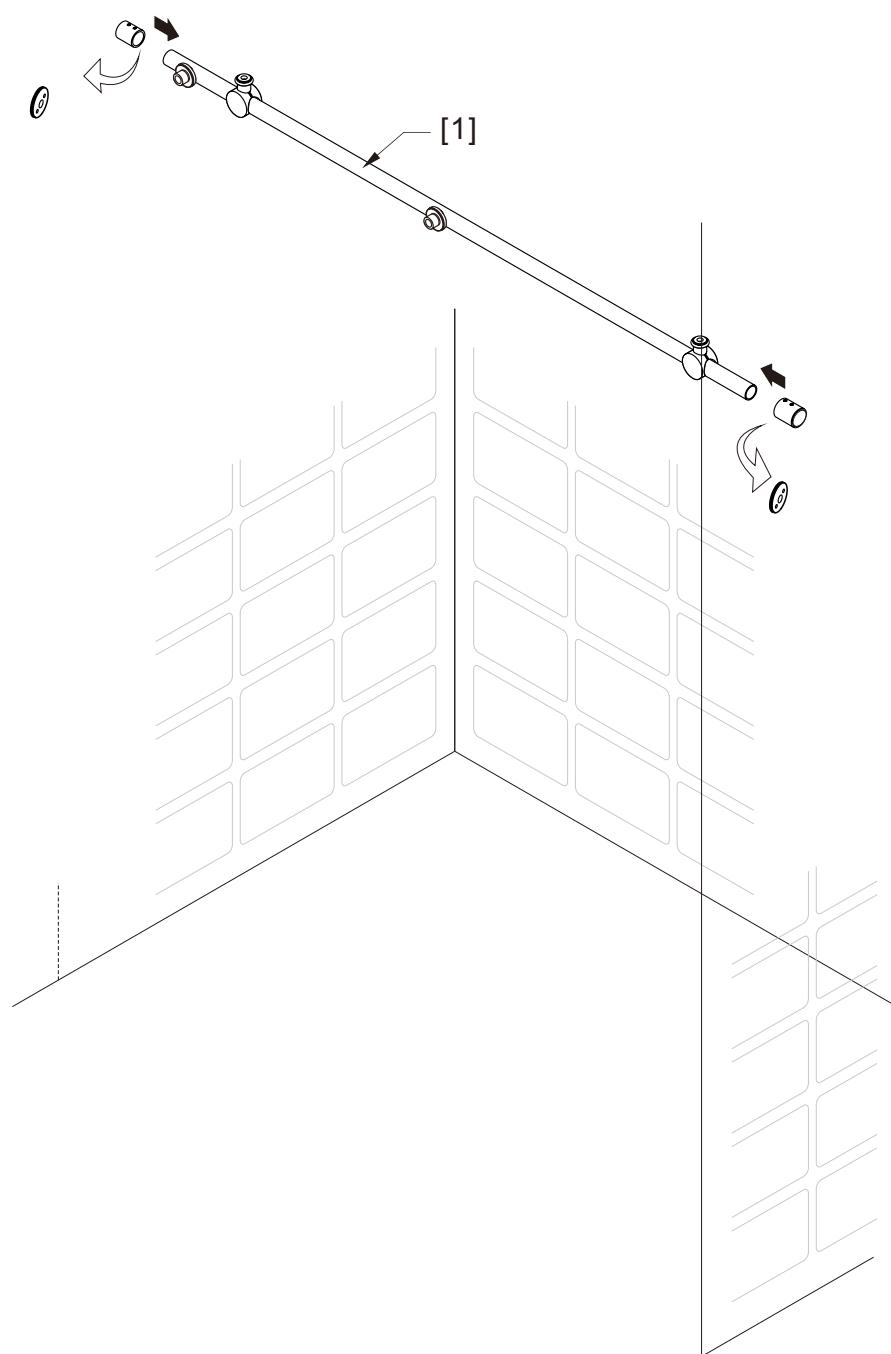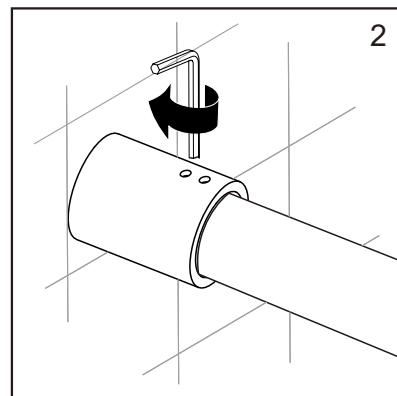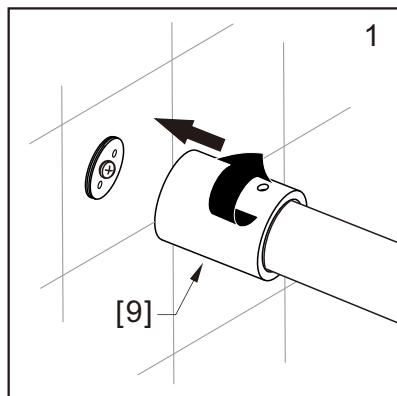


06

LH






2x

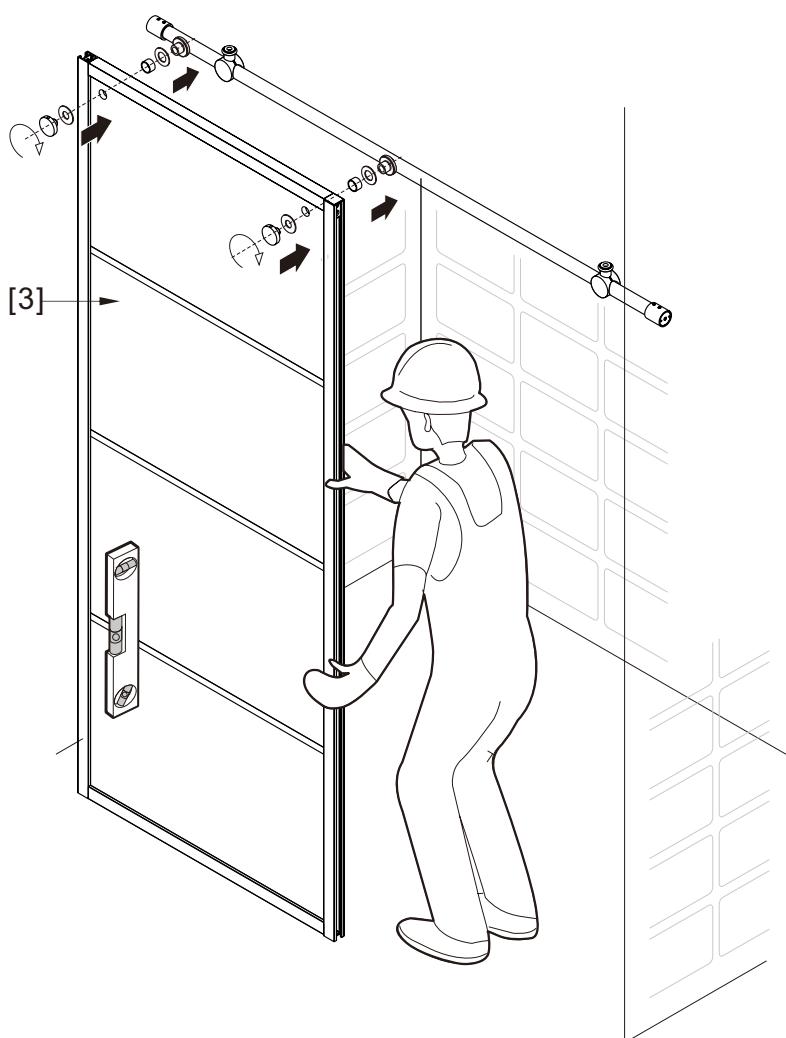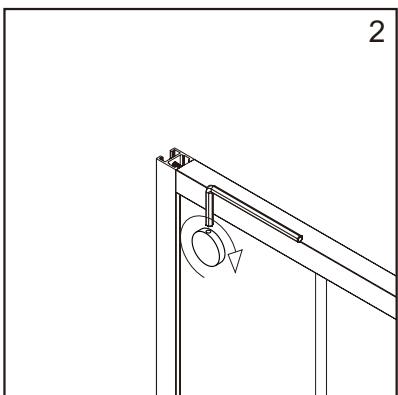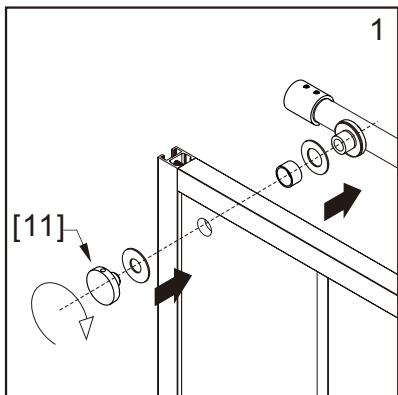



RH

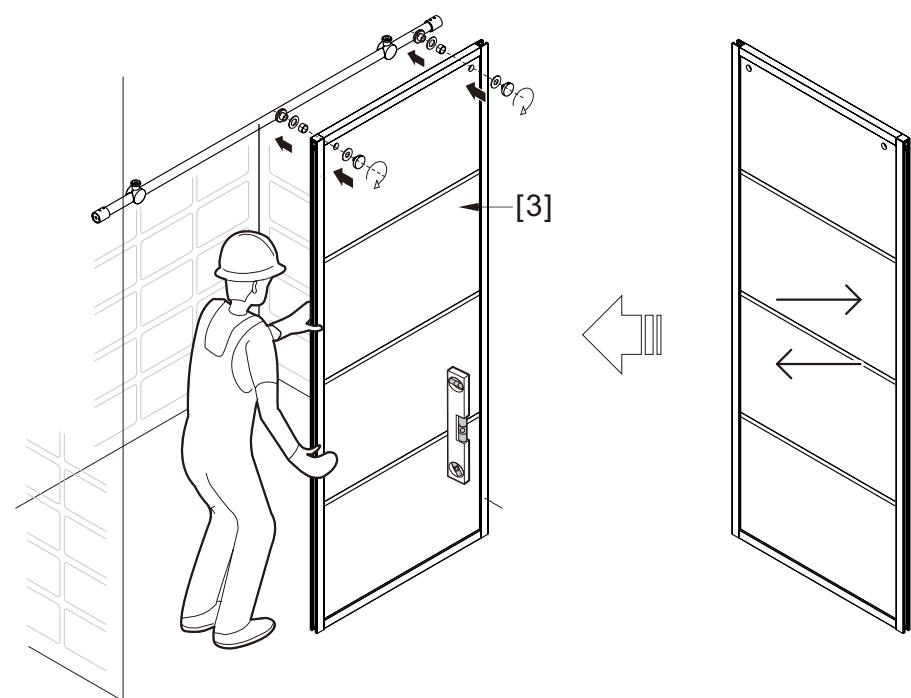


07

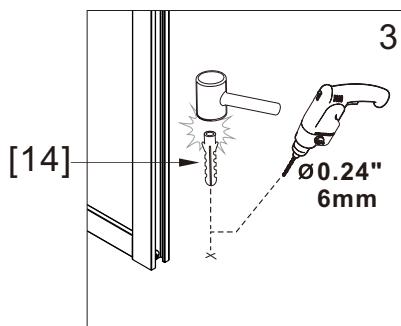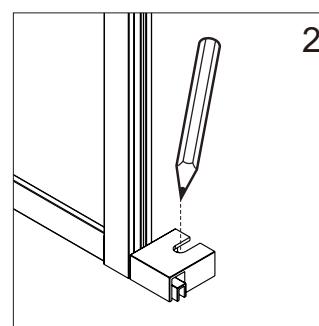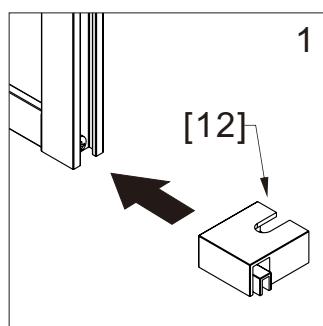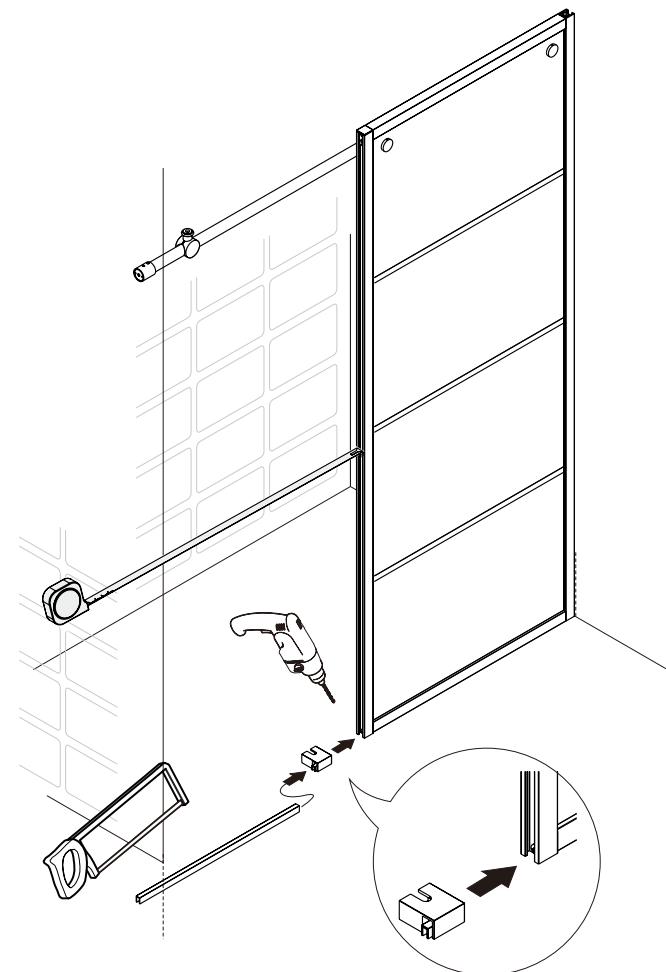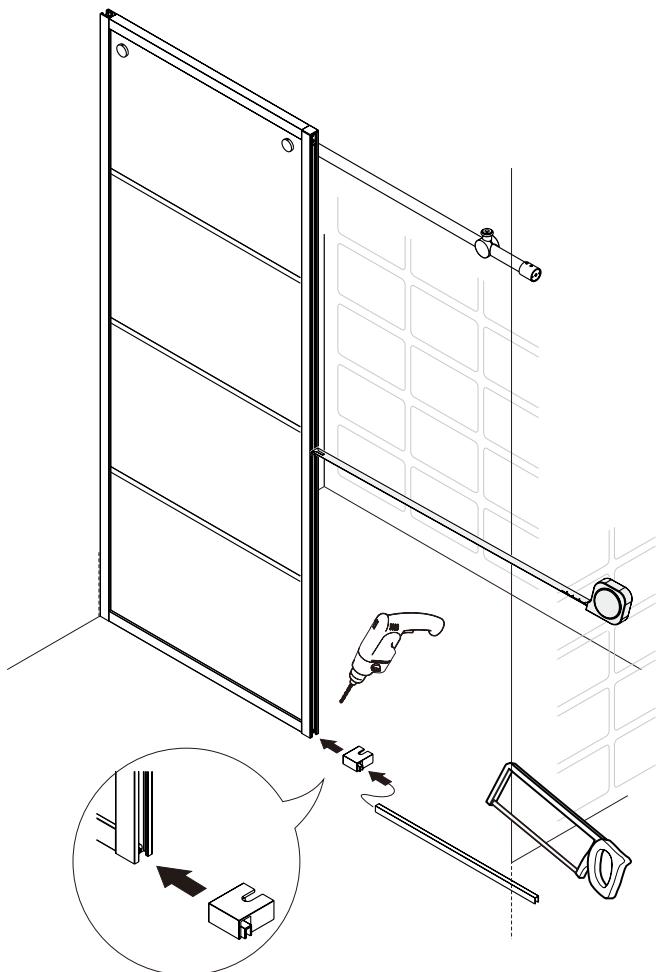


6mm

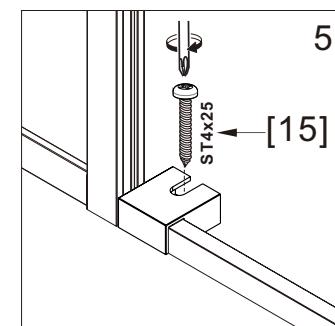
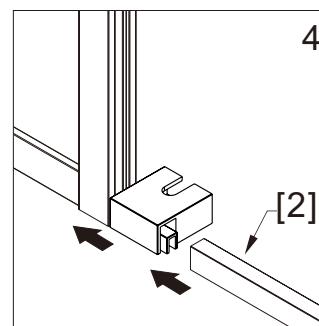



08

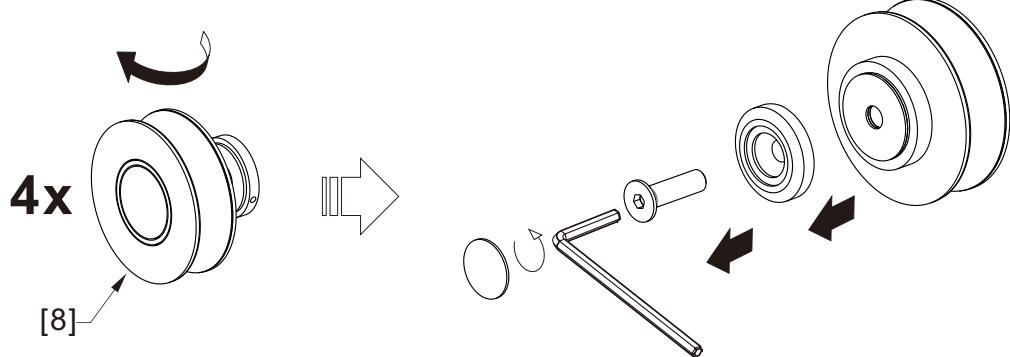


09

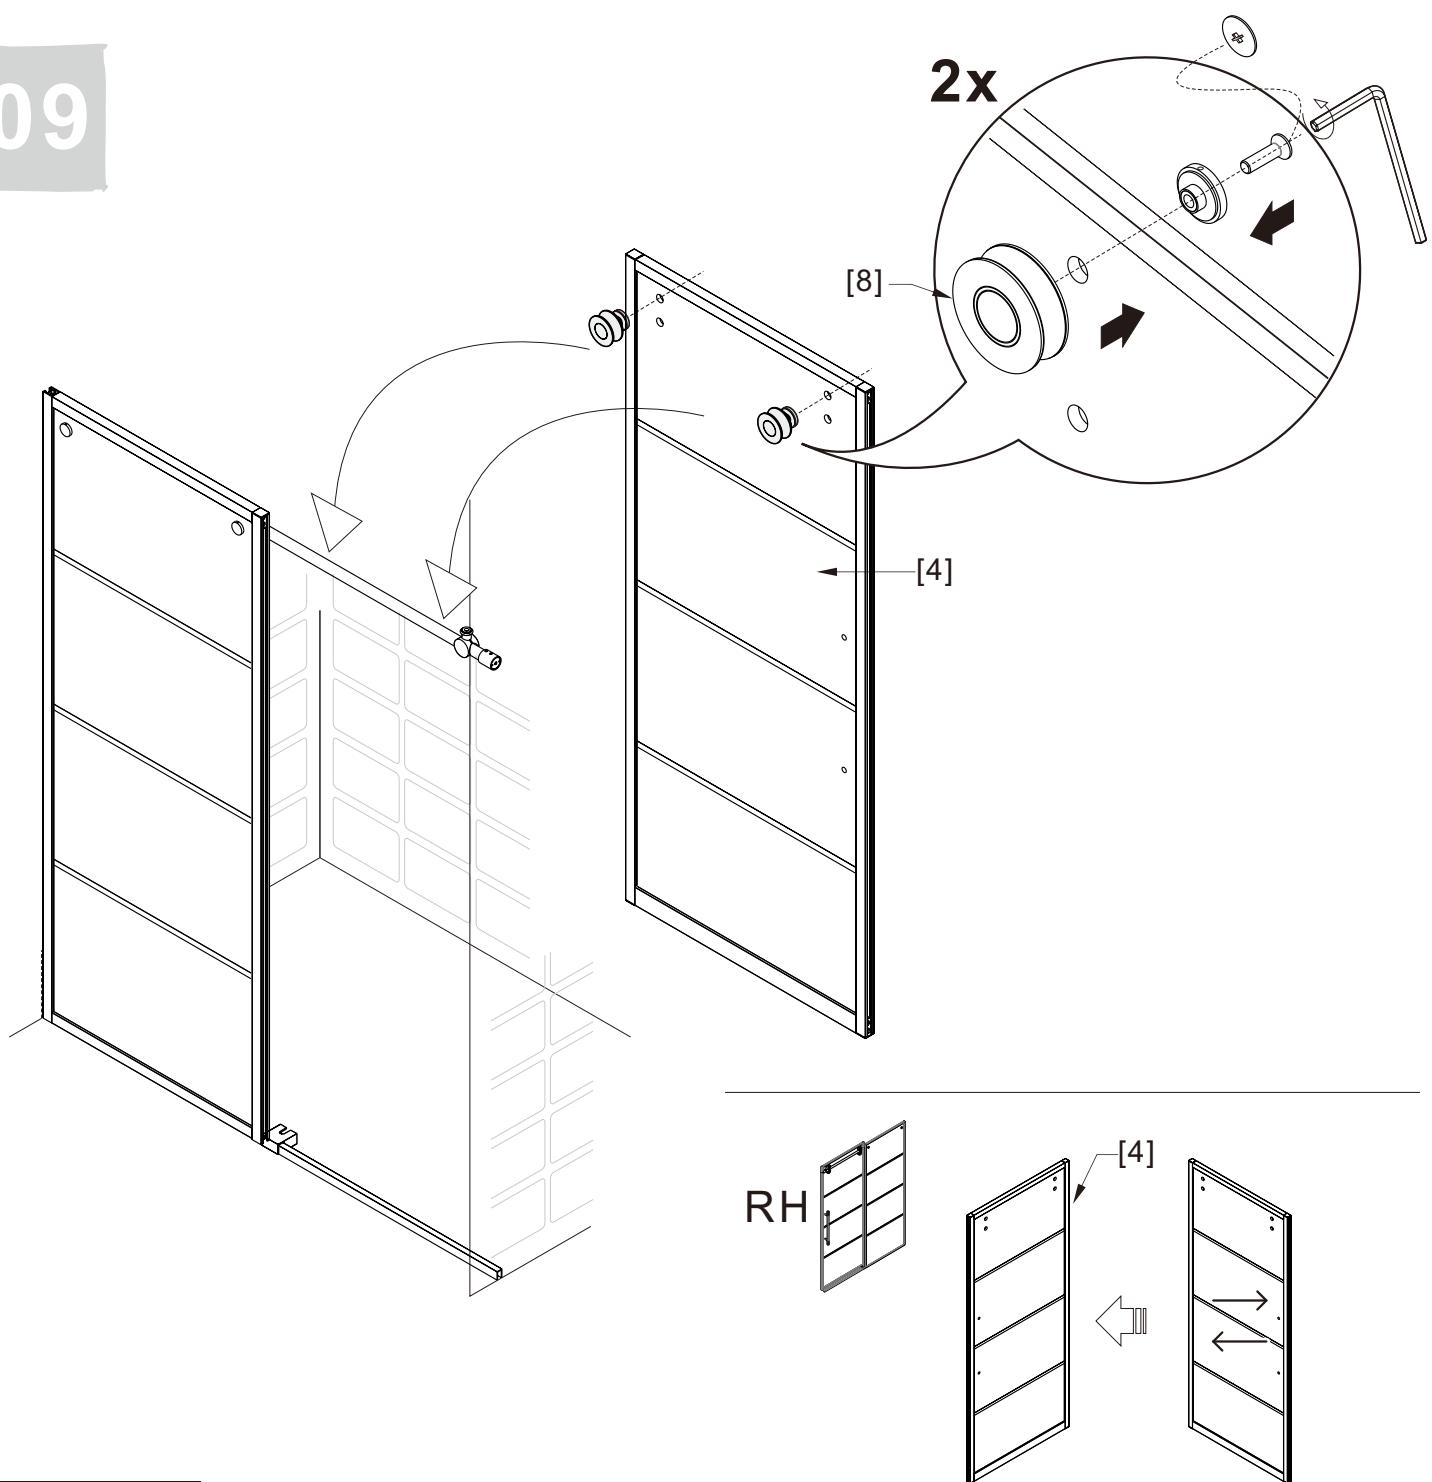

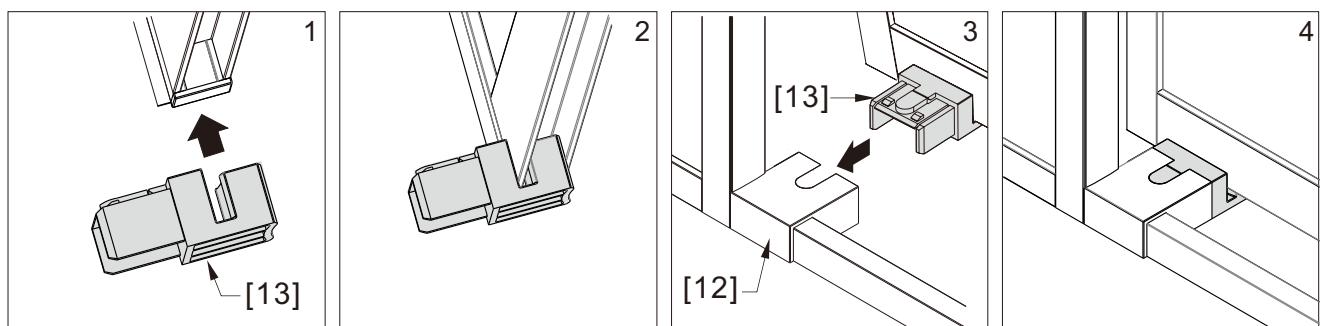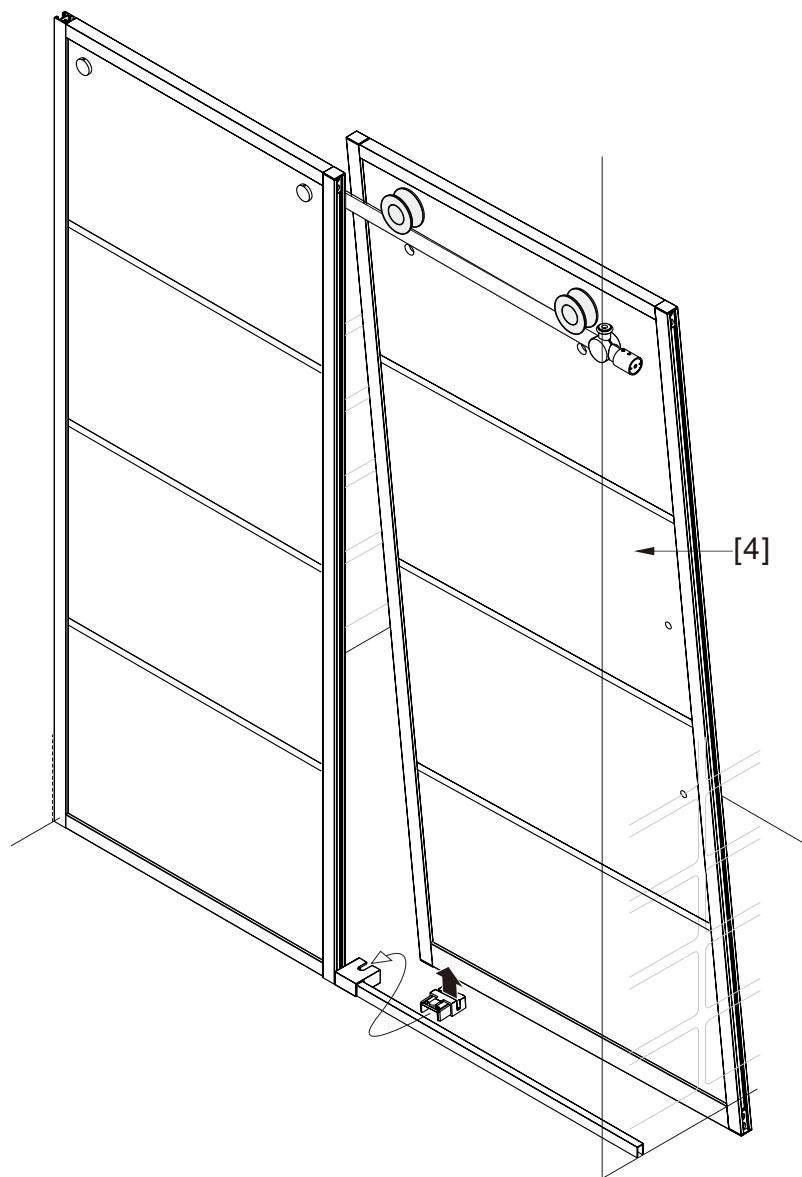


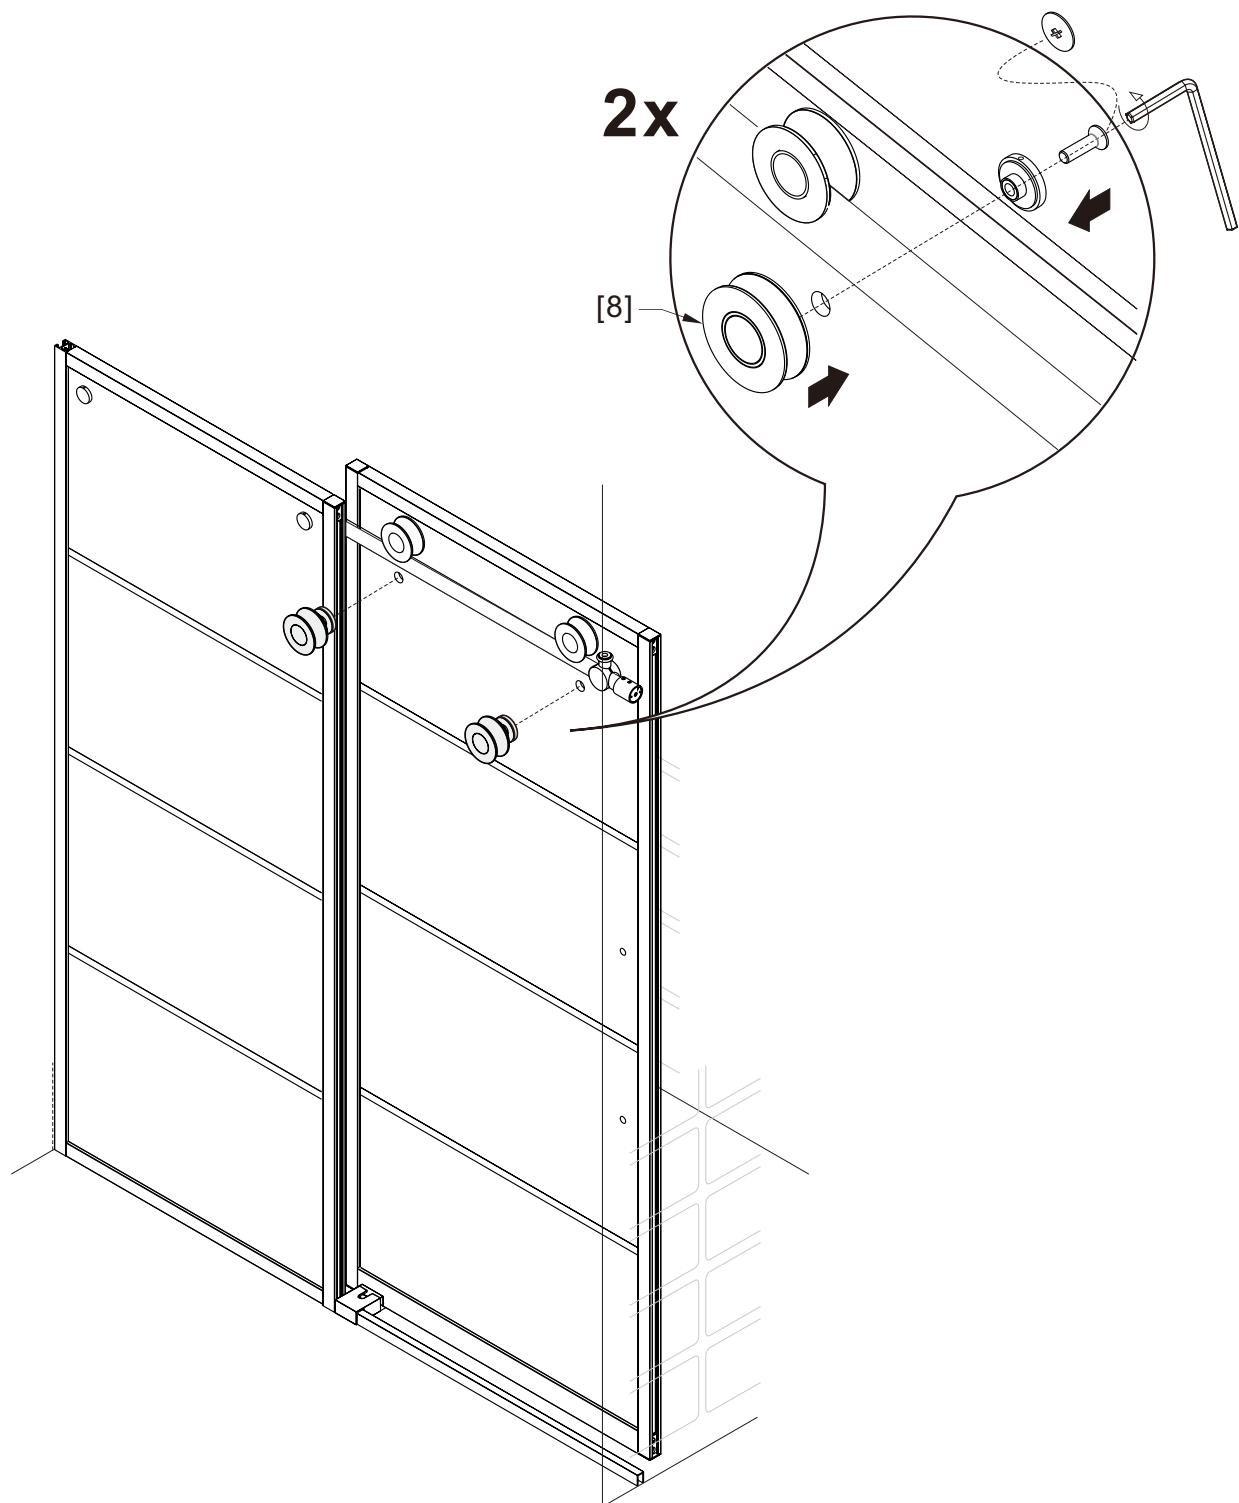


12

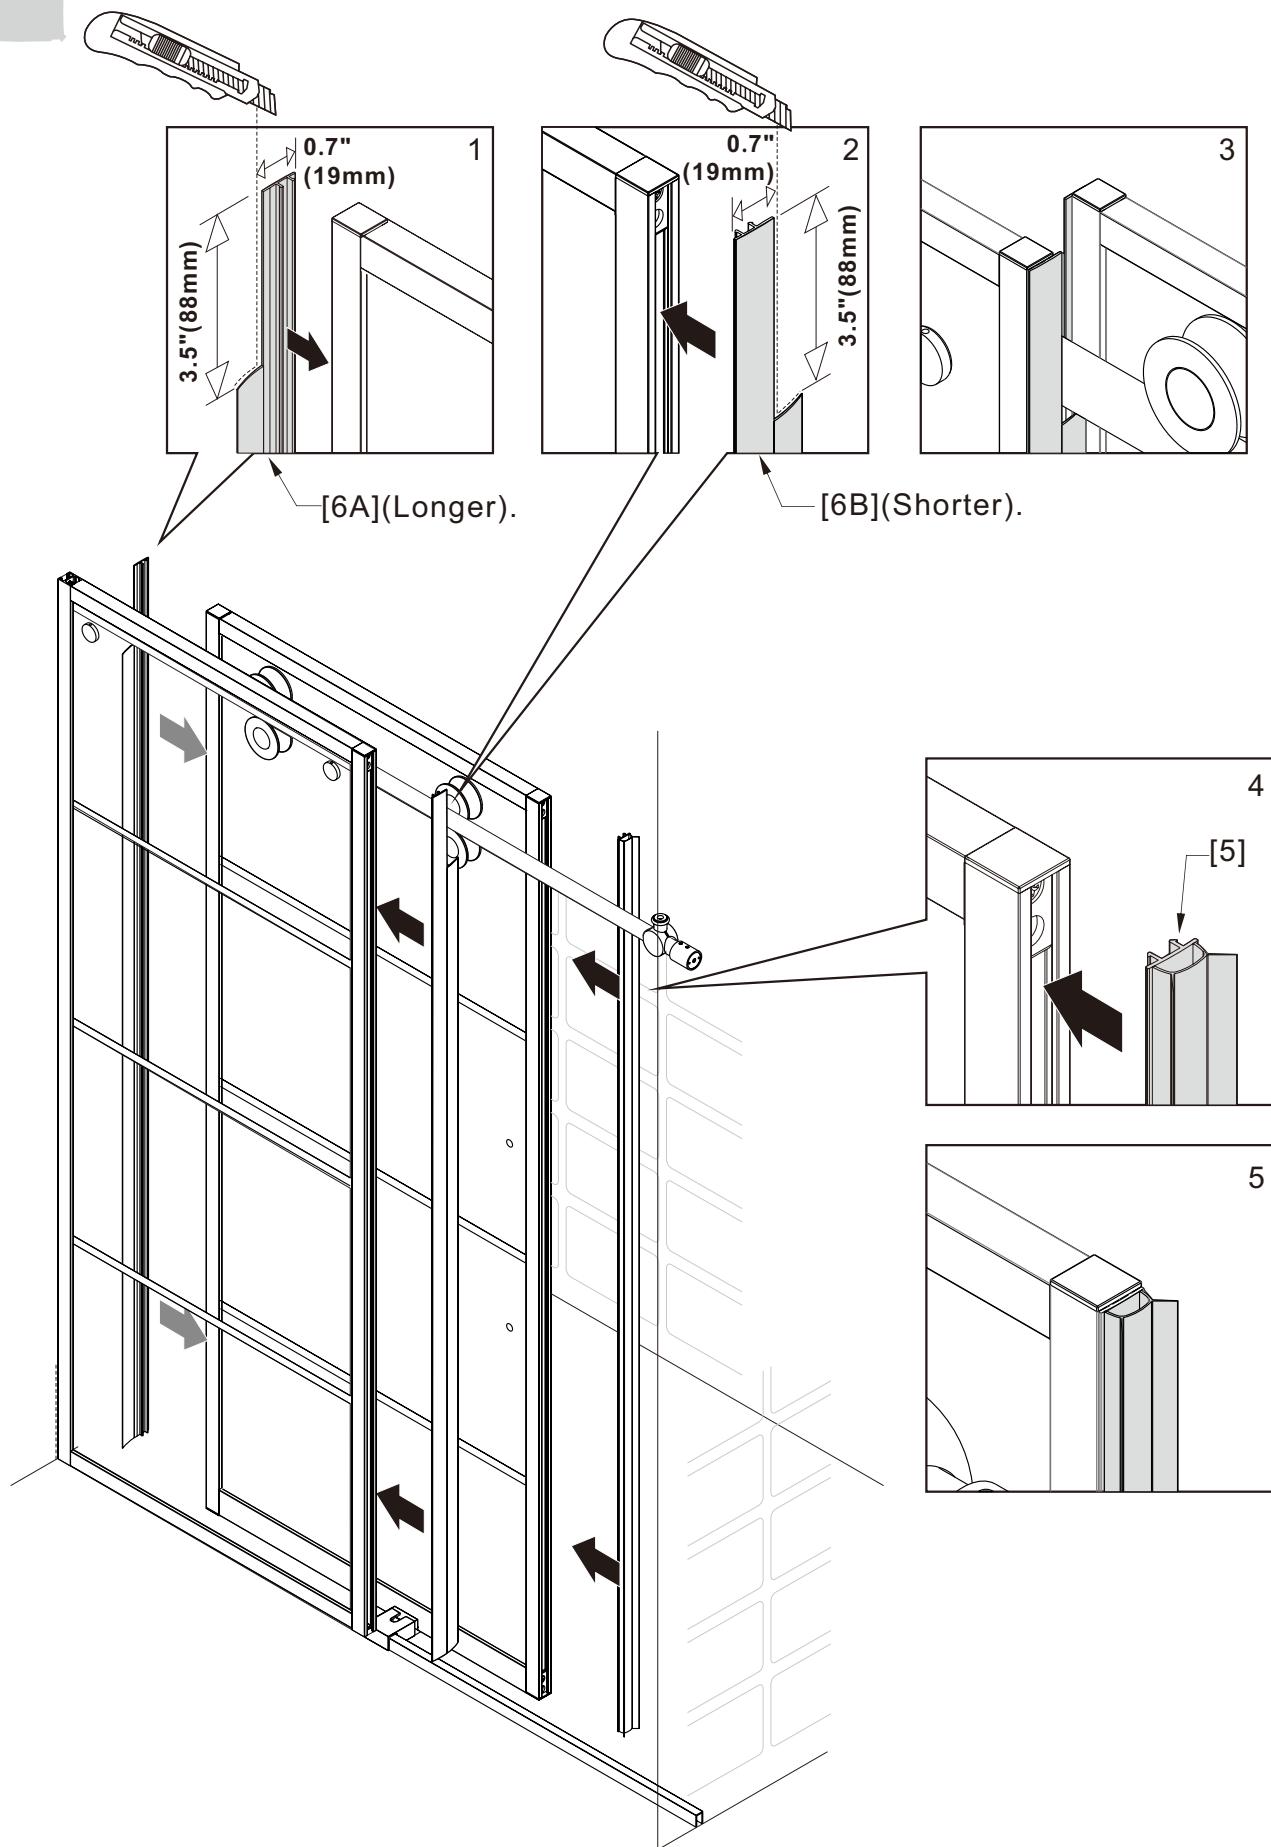

13

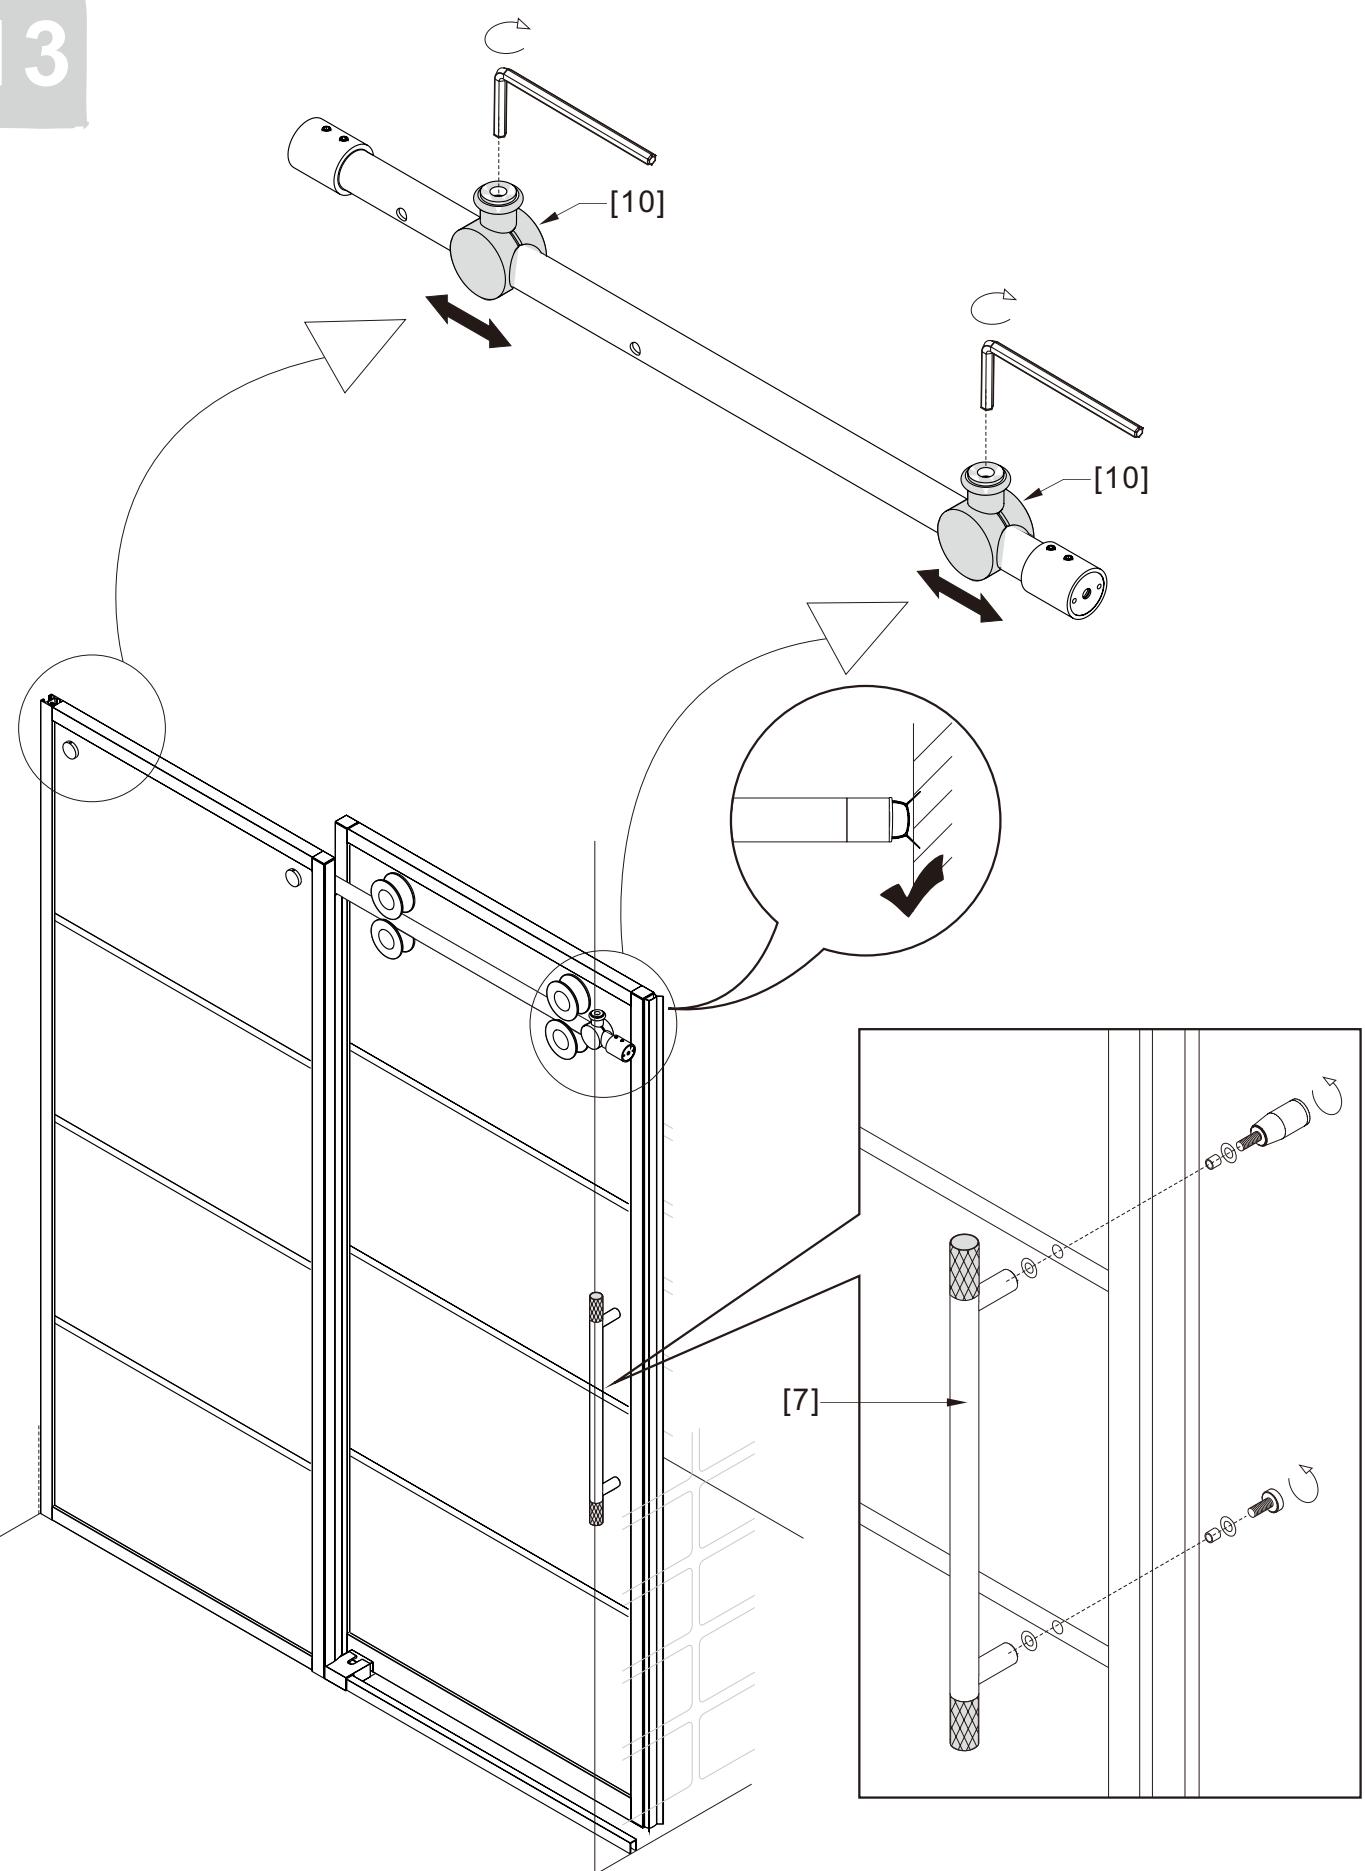

14

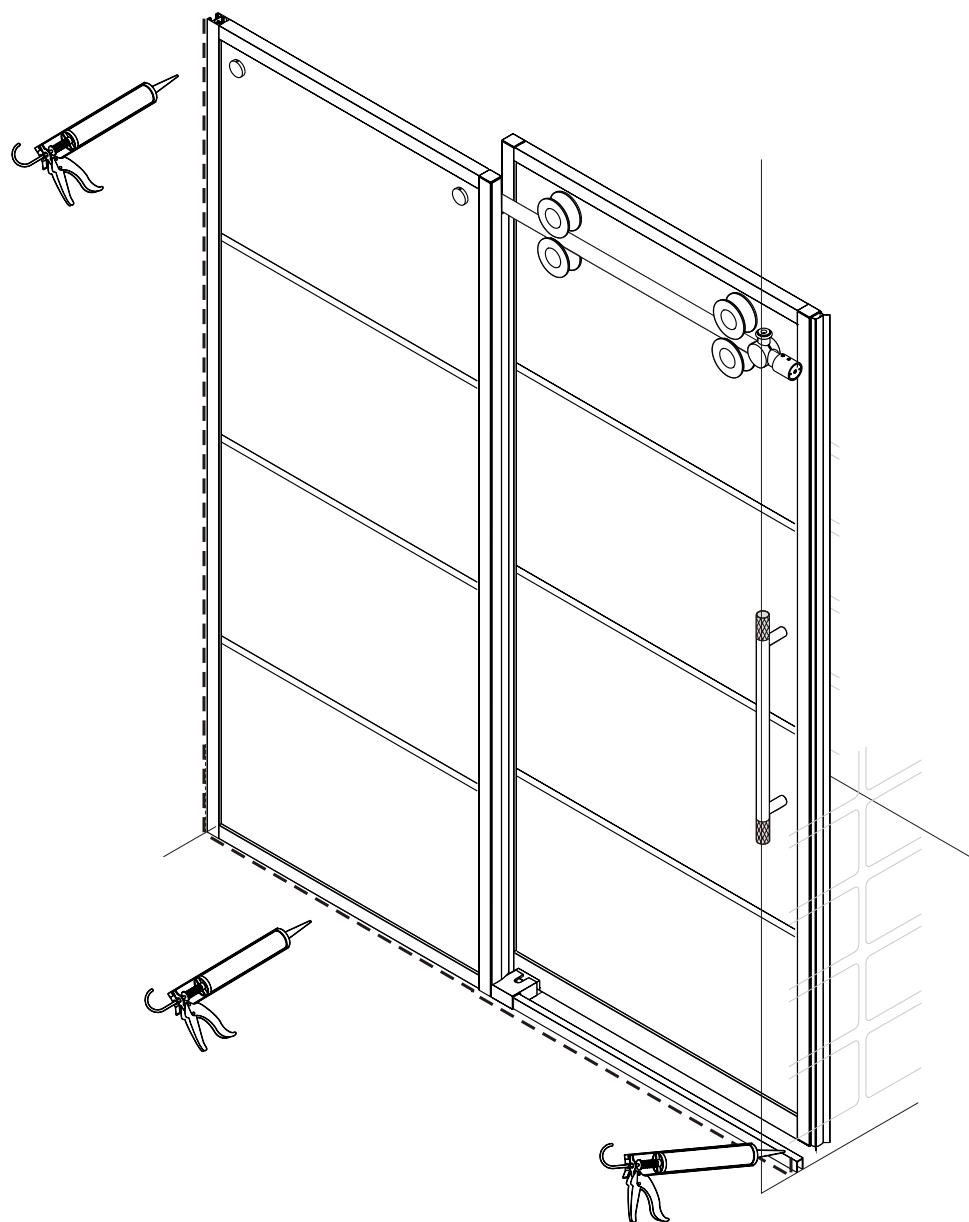

- Do not use the shower enclosure for at least 24 hours in order to allow the silicone sealant to cure fully.





