


# HULALA

---

## H O M E

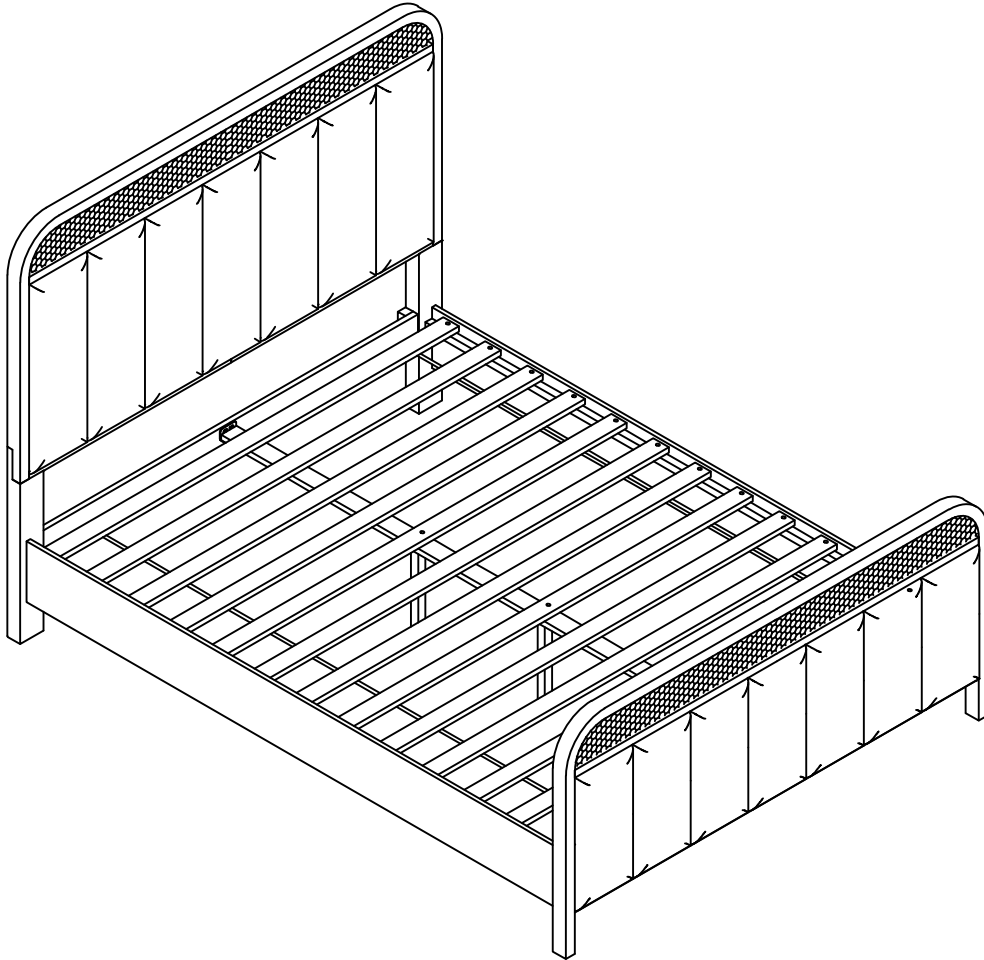

**ITEM NO. BDTL0984QB**

---


### NOTE:

This brochure contains IMPORTANT safety info. Please read and keep for future reference.

---

# MAINTAINANCE AND WARNING


- 1.Keep furniture away from heat sources.
- 2.Do not clean furniture with harsh cleaner or polishes.Do not use detergents,solvents,abrasives,spray packs or leather cleaner.  
Use non-color mild soa with warm water to clean spills(Mix 1:10 soap to water).
- 3.Do not place furniture under direct sunlight,material will possibly fade over time.
- 4.Do not use on site dry cleaning machine.Children should not climb or jump on the furniture.
- 5.Do not write on furniture that is not protectedby a padded barrier.
- 6.Not for commercial use,only for residential use.

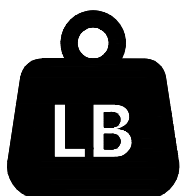



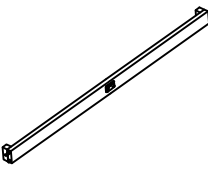
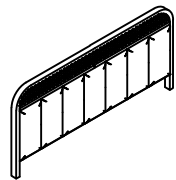
Weight Limitation

**650 LBS**


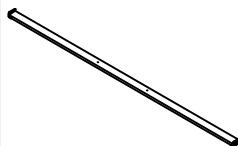
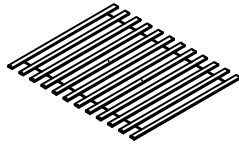

BDTL0984-QB-A PARTS LIST

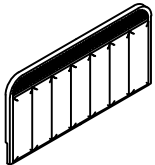A	x1
	






BDTL0984-QB-B PARTS LIST

B	x1	C	x1	D	x1	E	x1
							


BDTL0984-QB-C PARTS LIST

F	x1	G	x1	H	x1	I	x2
							






HARDWARE LIST (BDTL0984-QB-B)

#1	x16	#2	x16	#3	x16	#4	x24	#5	x4
									
Ø5/16x20mm		Ø5/16x13mm		Ø5/16x30mm		Ø8 x 25L		Ø10 x 30mm	

TOOL LIST

#6	x1
	
M4	

HARDWARE SPARE LIST


#1	x2	#2	x2	#3	x2	#4	x2	#5	x2
									
Ø5/16x20mm		Ø5/16x13mm		Ø5/16x30mm		Ø8 x 25L		Ø10 x 30mm	




# ASSEMBLY INSTRUCTIONS



## STEP- 1

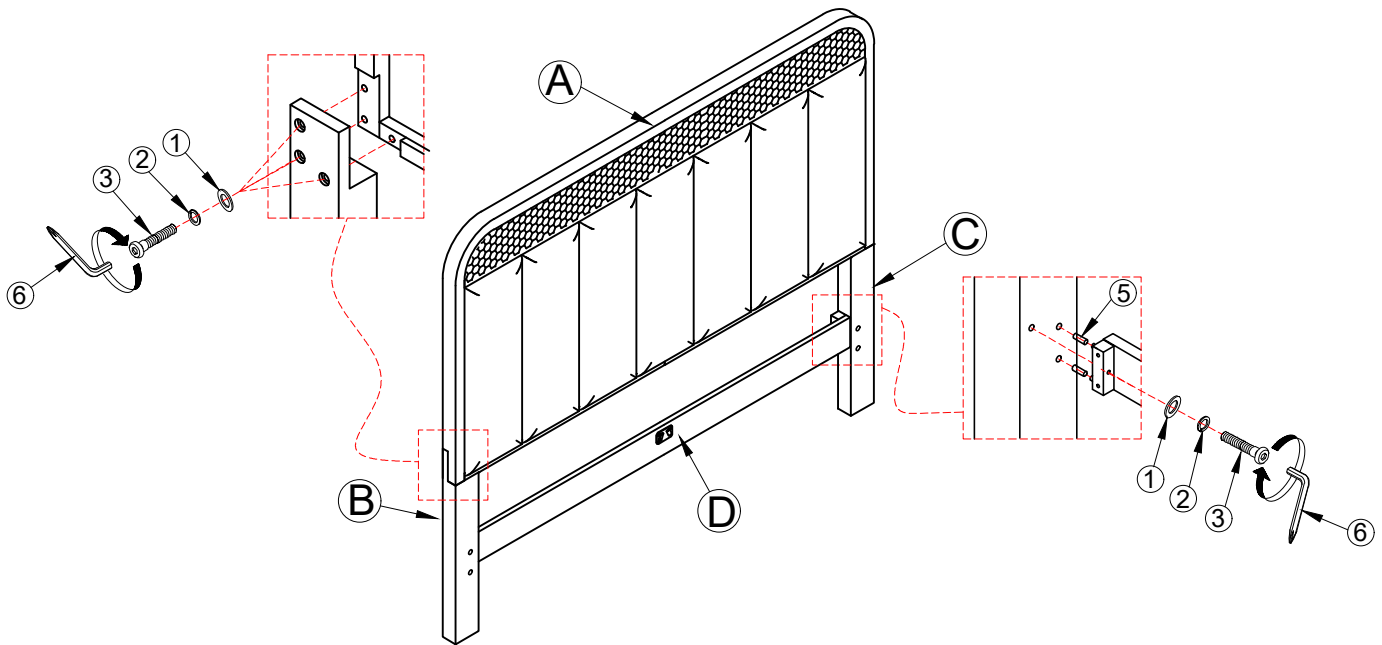Attach the headboard leg left (B) and the headboard leg right (C) on the headboard (A) by using Flat washer (1), Lock Washer (2), Bolt (3) with Allen Key (5) .(Don't tighten bolt).

Then attach the stretcher on the headboard legs by using Flat washer (1), Lock Washer (2), Bolt (3) with Allen Key (5).(Don't tighten bolt).




1		x8
2		x8
3		x8

5		x4
6		x1

## STEP- 2

Attach the support legs (I) and vertical support slat (G) on the slats roll (H).

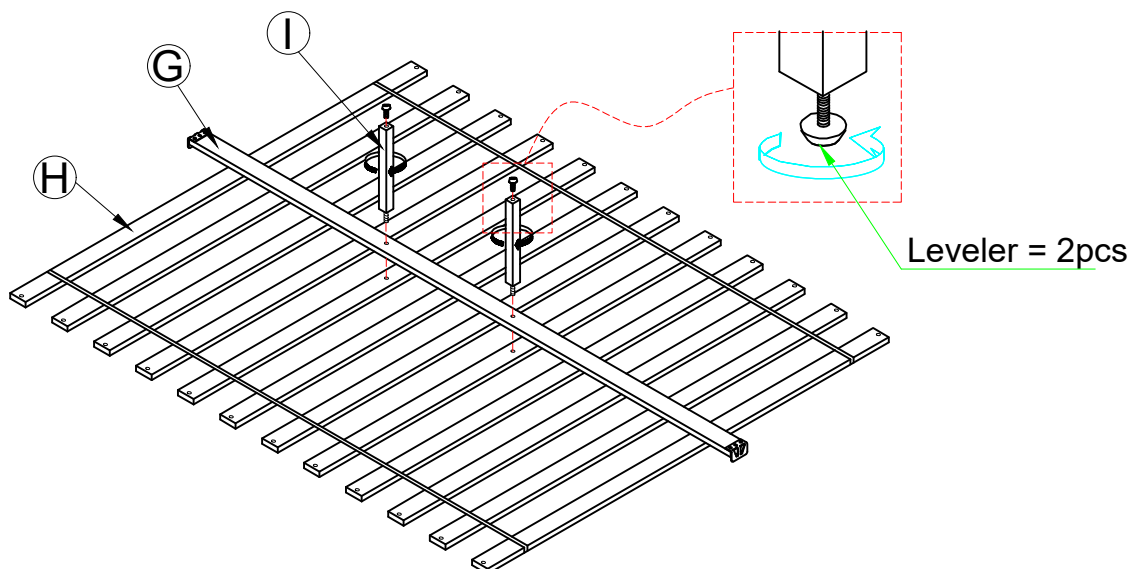





# ASSEMBLY INSTRUCTIONS


## STEP- 3

Attach Flat washer (1), Lock Washer (2), Bolt (3) with Allen Key (5) on the headboard leg left (B), the headboard leg right (C) and footboard (E).(Don't tighten bolt).

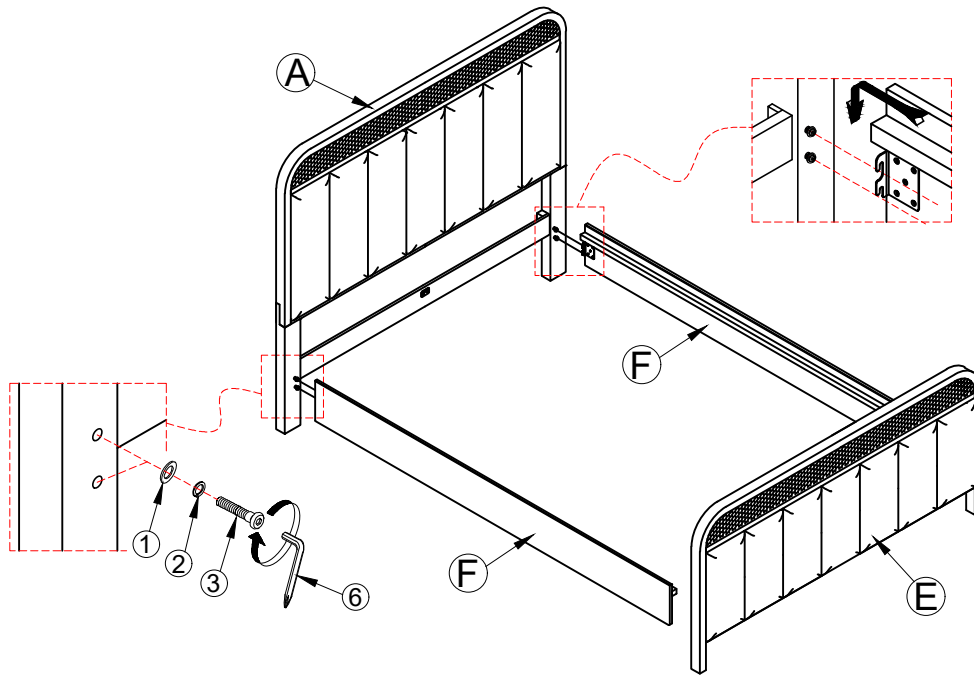Attach side rails (F) on the headboard (A) and the footboard (E).




1		x8
2		x8
3		x8

6		x1
---	---	----

## STEP- 4


Attach slats roll (H) on the bed.

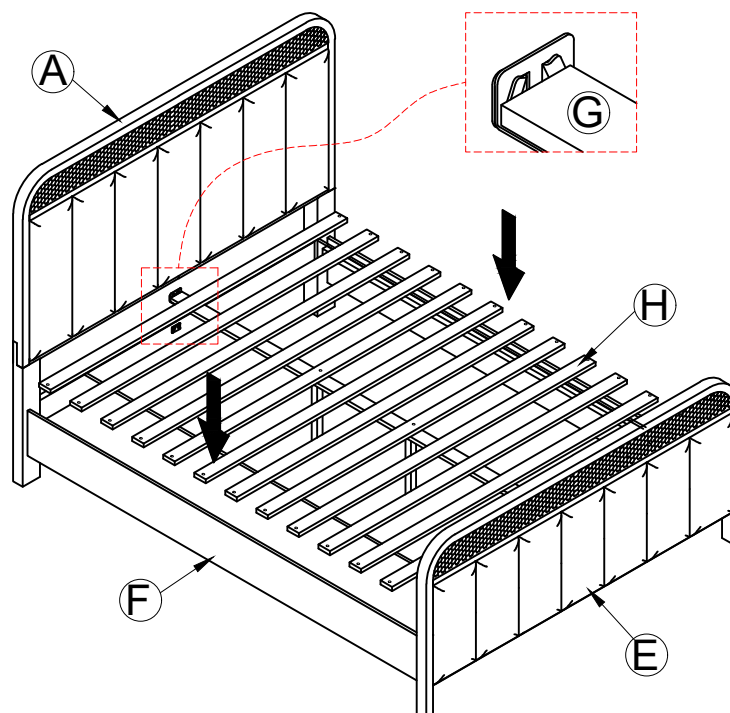

# ASSEMBLY INSTRUCTIONS

## STEP- 5

Connect the slats roll (H) to the bed by using screws (4) with Allen Key (5)

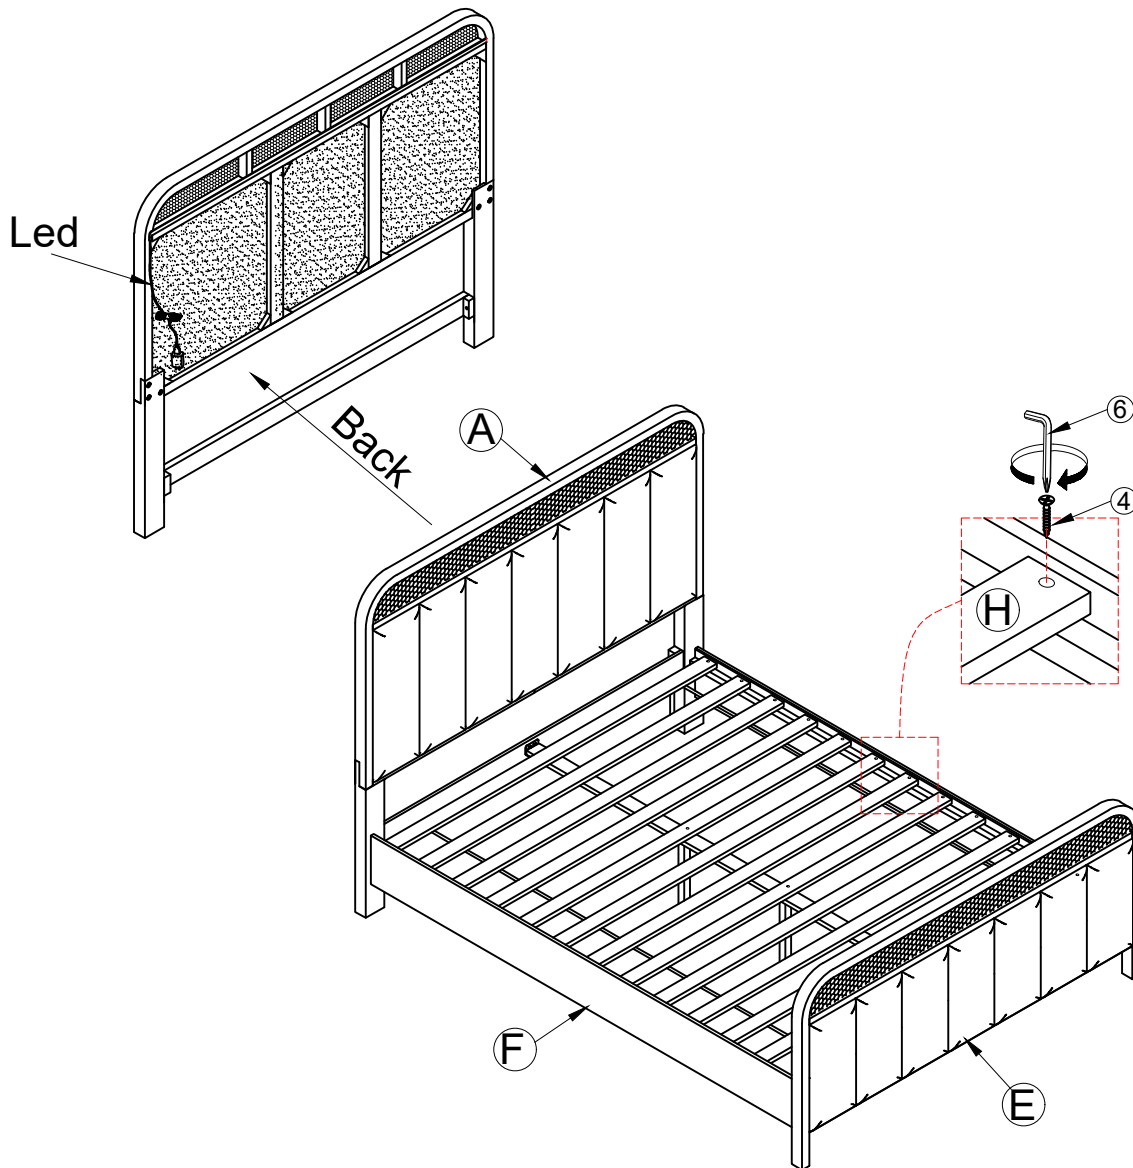

4		x24
6		x1

After installation, please keep the bed, tighten all bolts.

# WARRANTY

1. We strive to offer high-quality products, and we also try our best to satisfy each and every customer that orders from us with product or service as needed.
2. We provide 30 days warranty starting from the time you receive the item. Each customer must provide a record of their order such as the order number, or item receipt for any items that are out of the warranty period you may also still receive.
3. Replacement parts by purchasing them with our company if they are available.

Are you having difficulty  
With assembly? Missing parts?  
Please send email with your order No to  
**[customerservice@hulalahome.com](mailto:customerservice@hulalahome.com)**  
For return, please check the return policy with  
the retailer or market place you bought from.

Appreciate your purchasing from us.  
Pop up your life by our furniture piece!