

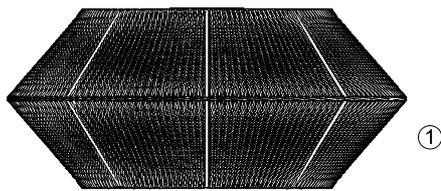
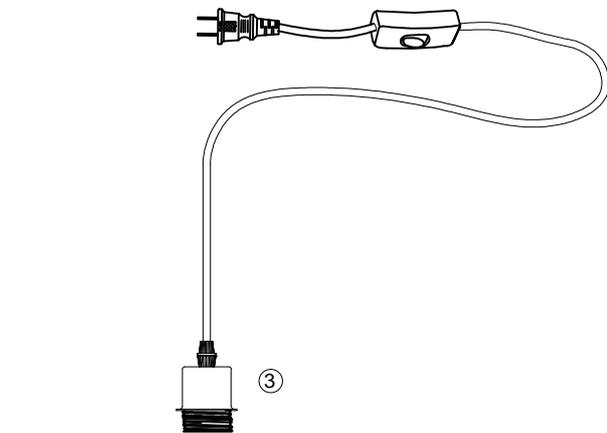



① lampshade

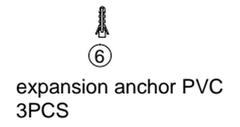

1. Install the lampshade ① to the bulbholder ③ with lock ring ②.

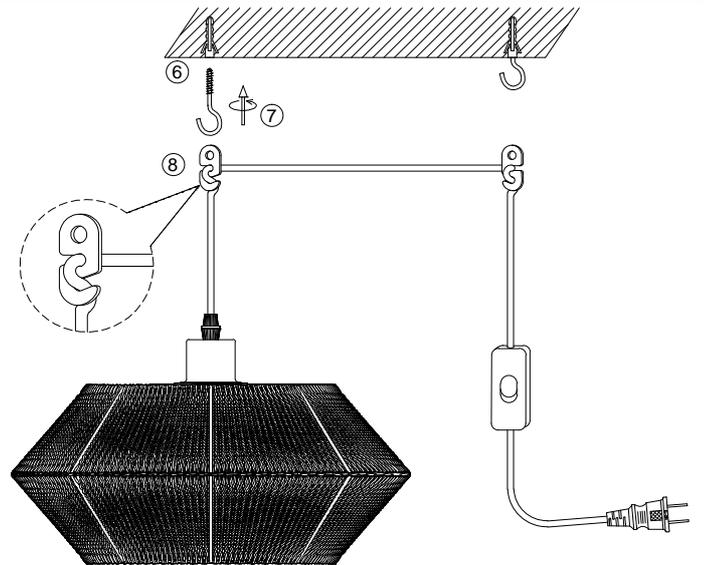

2. Drill a hole with impact bit machine at the ceiling, hit the expansion anchor ⑥ into the hole with hammer, rotate to install the open eye screw hook ⑦ to the anchor ⑥.
3. Hang the wire to the open side of shock cord hook ⑧, adjust suitable distance of the wire.
4. Hang the shock cord hook ⑧ on the hook ⑦.

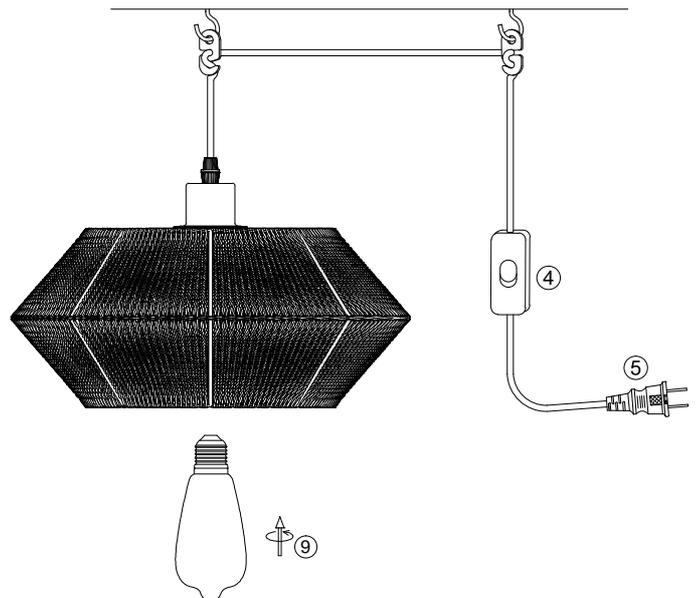

5. Install the bulb ⑨ and put in plug ⑤, then installation finish.

Y0140-1

Please read carefully before installation!!!

Note : Please make sure that the electricity is powered off during installation !

Only a professional electrician should install this kind of product !