


# **BM311534**


ASSEMBLY INSTRUCTIONS

## **CONSOLE TABLE**

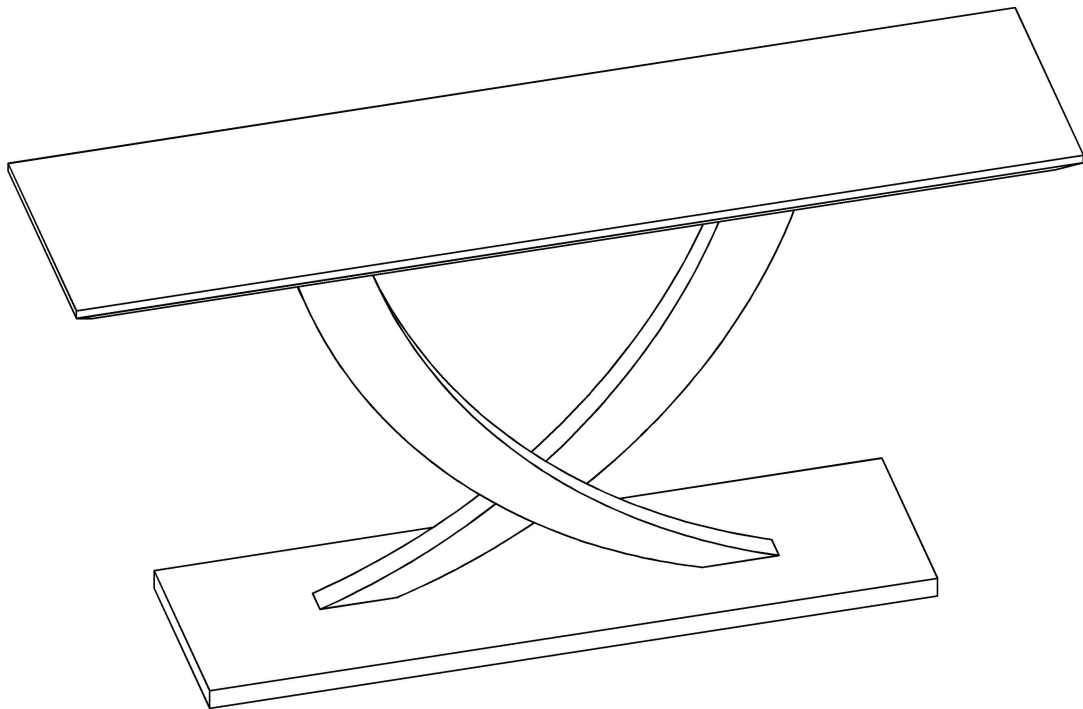


**E**

**A**




**Threaded rod**  
**M6\*40**  
**1 PC**

**B**

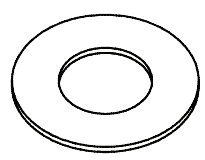


**Plastic Washer**  
**1 PC**

**C**

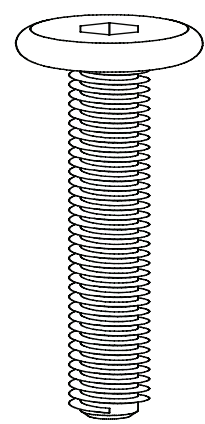


**M8\*40**  
**4 PCS**


**D**

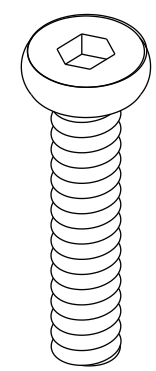

**M6\*35**  
**4 PCS**

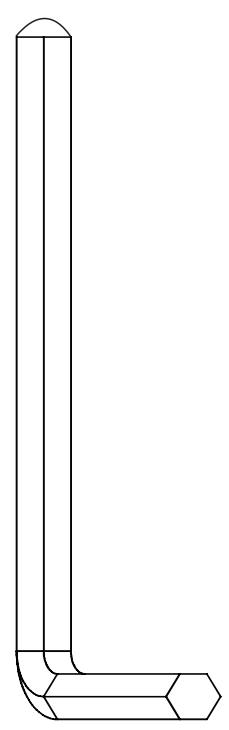


**1 PC**

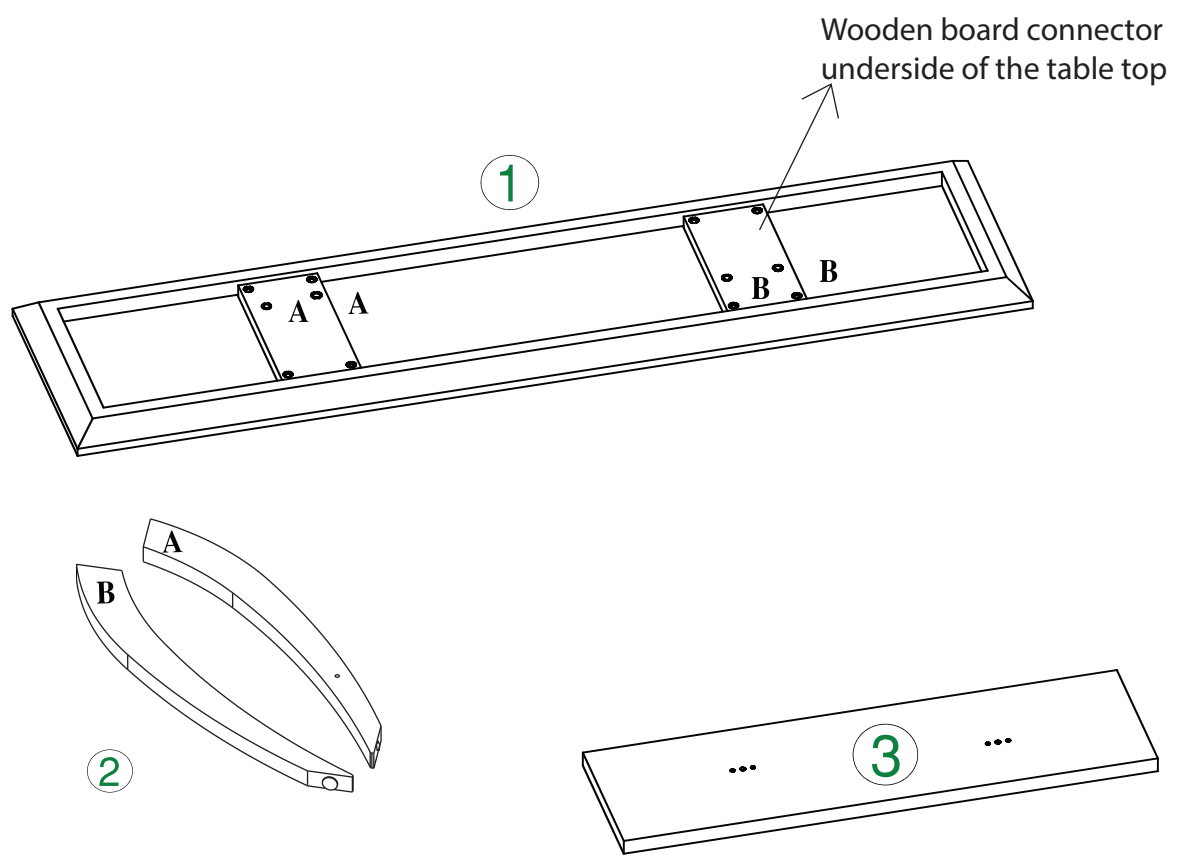



**01**

**2**

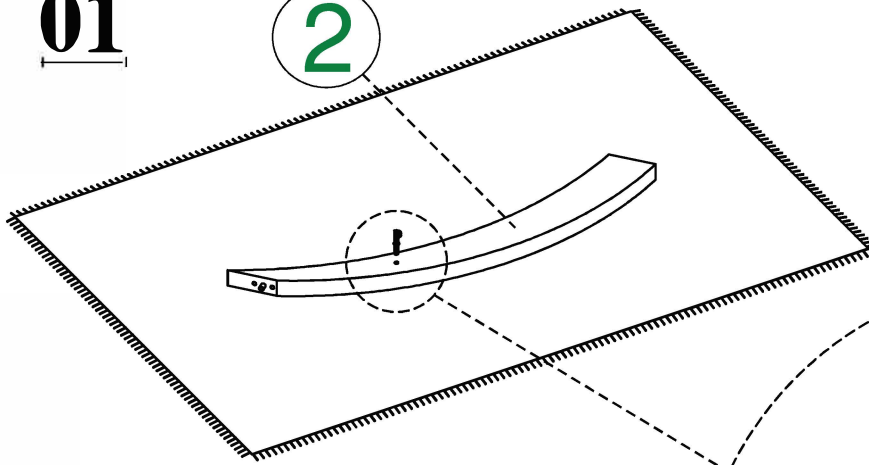


**A**

**B**

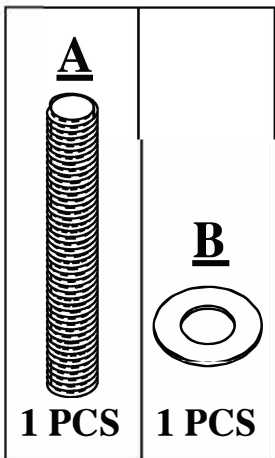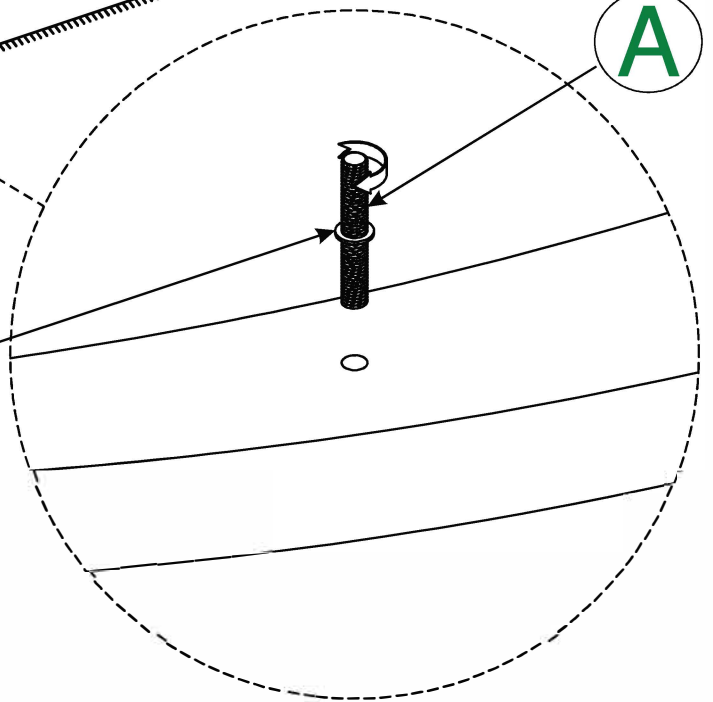

TIGHTEN BOLT COMPLETELY.

**02**

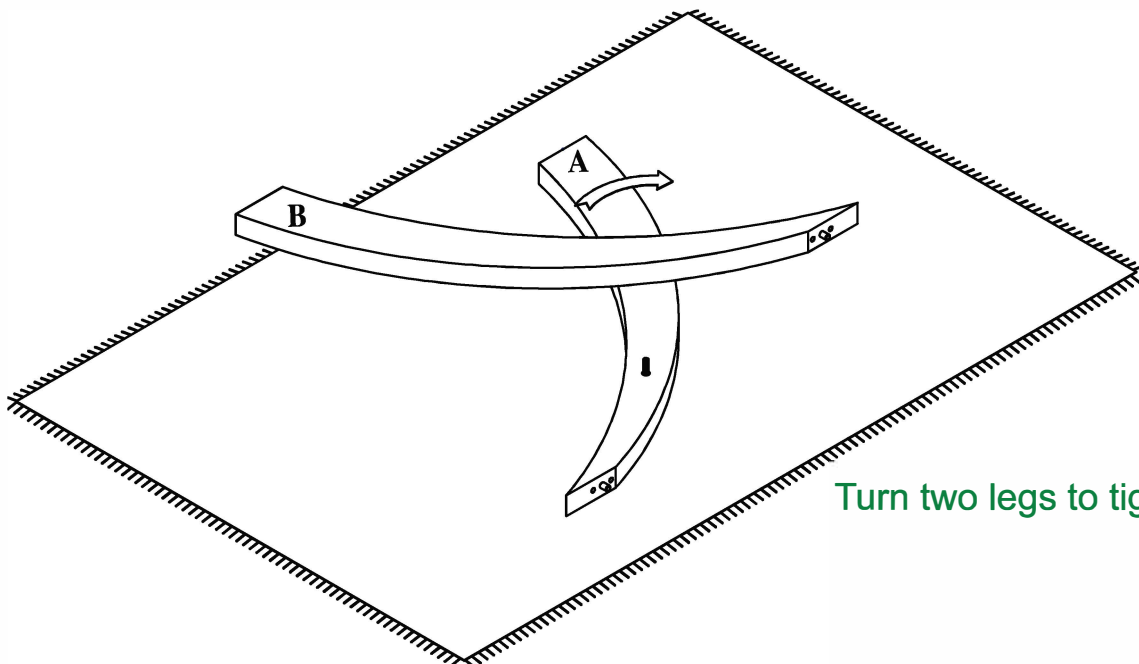


Turn two legs to tighten


TIGHTEN BOLT COMPLETELY.

# 03

**C**



**M8\*40  
4 PCS**

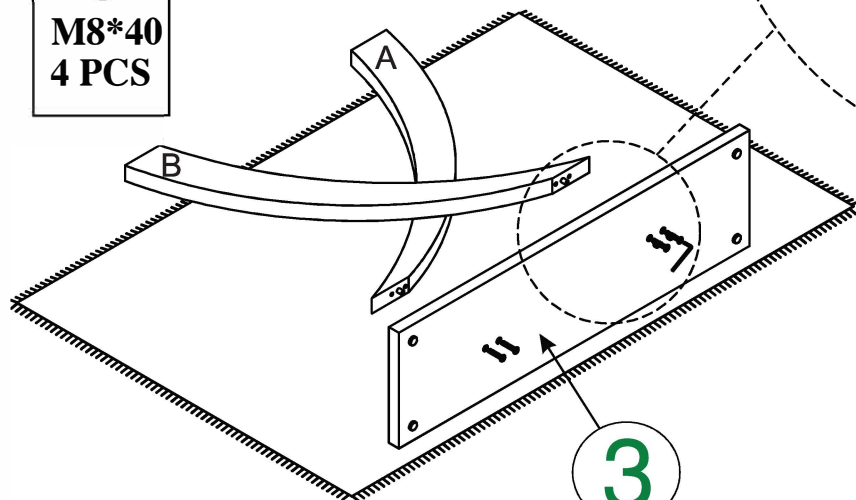


**3**

**TIGHTEN BOLT COMPLETELY.**


# 04

**E**


Remove wooden board connector from table top with Allen key provided. Please keep the hardware for step 06.

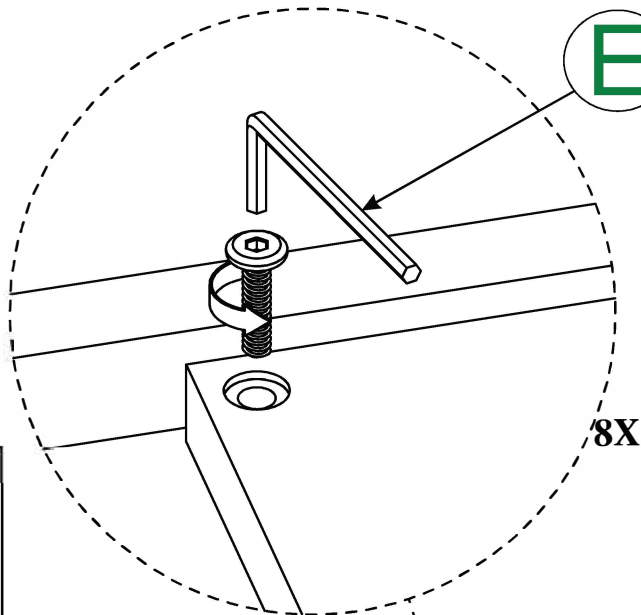




**8X**



**M6\*25  
8 PCS**

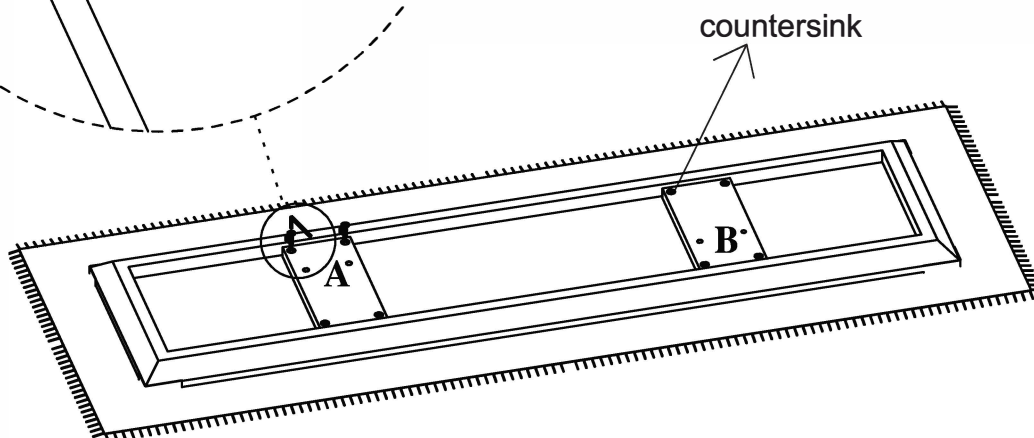




# 05

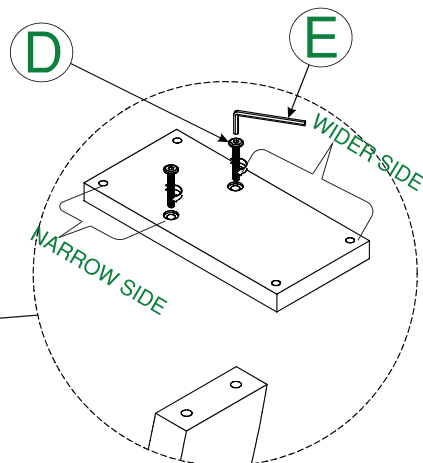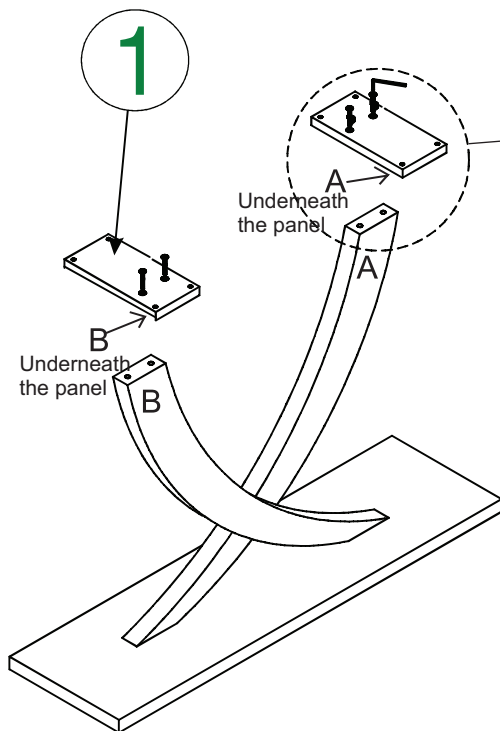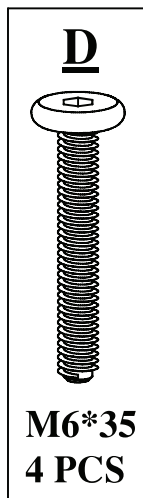


Align wooden board connector to match A - A, B - B

TIGHTEN BOLT T COMPLETELY.

# 06

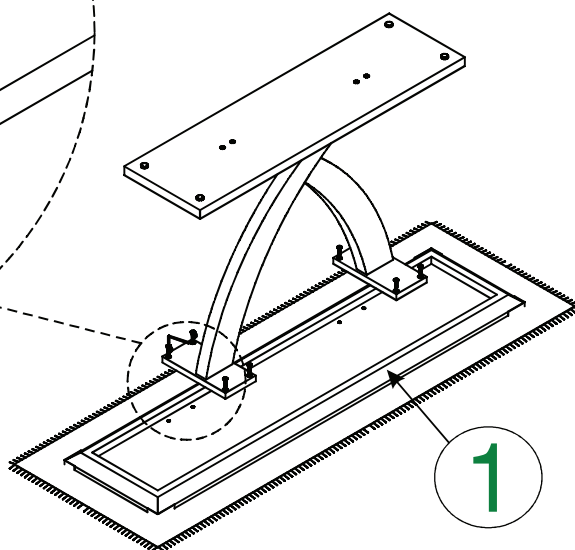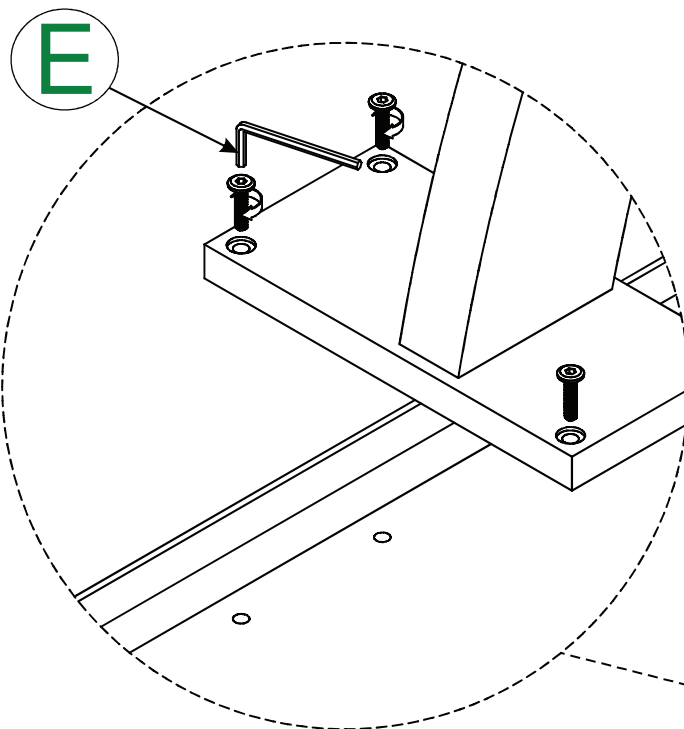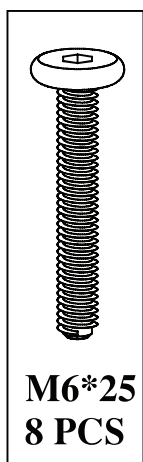

-Align all bolts with the bolt holes and turn by finger 2 turns.  
-Once All bolts alignment is confirmed, tighten securely using provided allen key.

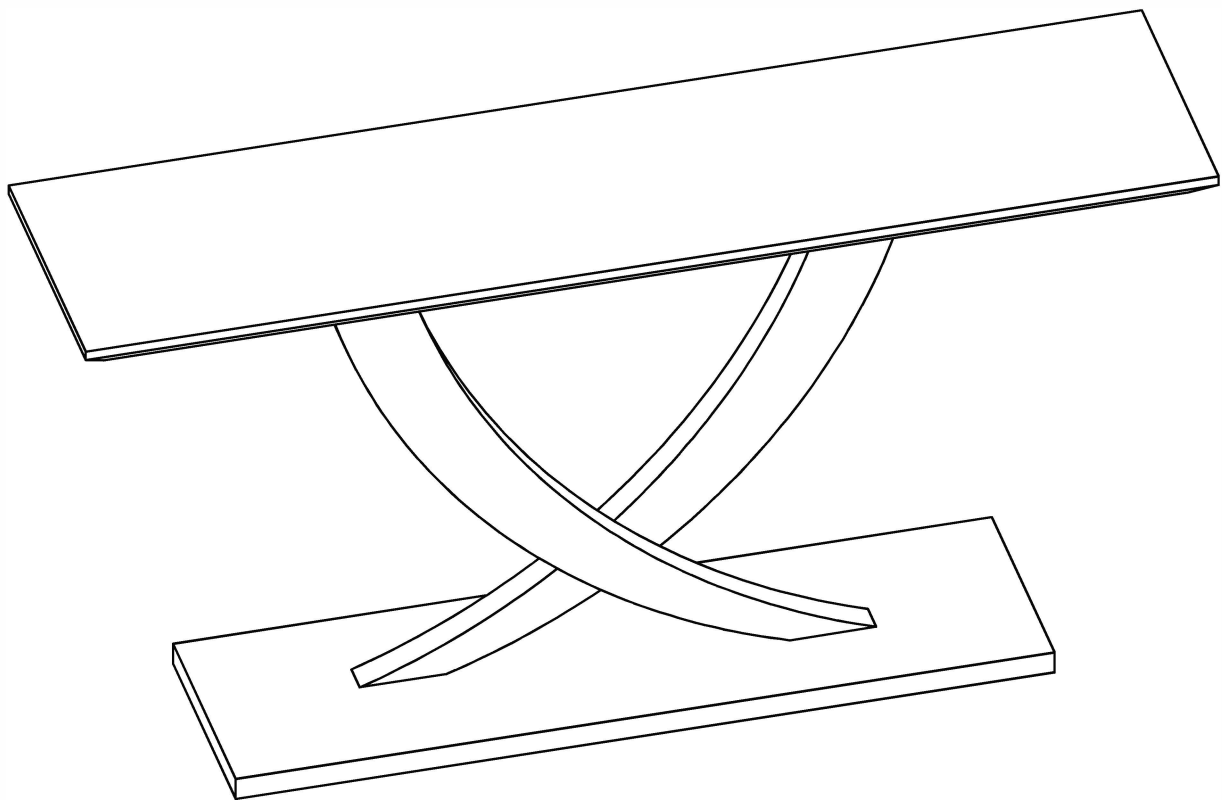

Warning:

Serious injuries can occur from the Console table tip-over

BE SURE TO CHECK ALL BOLTS ARE SECURELY  
TIGHTENED PRIOR USING THIS TABLE.