



ASSEMBLY INSTRUCTION

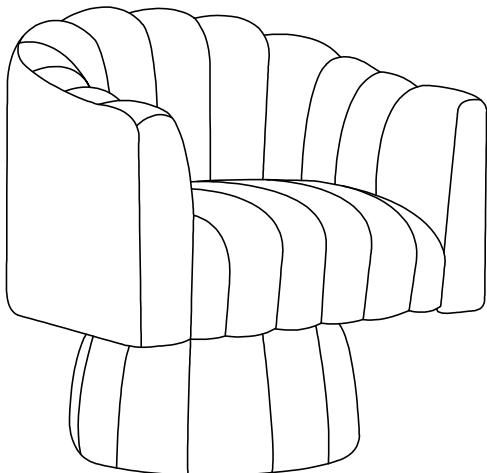

A*1

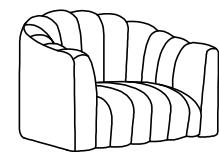


B*1



C*4



D*1

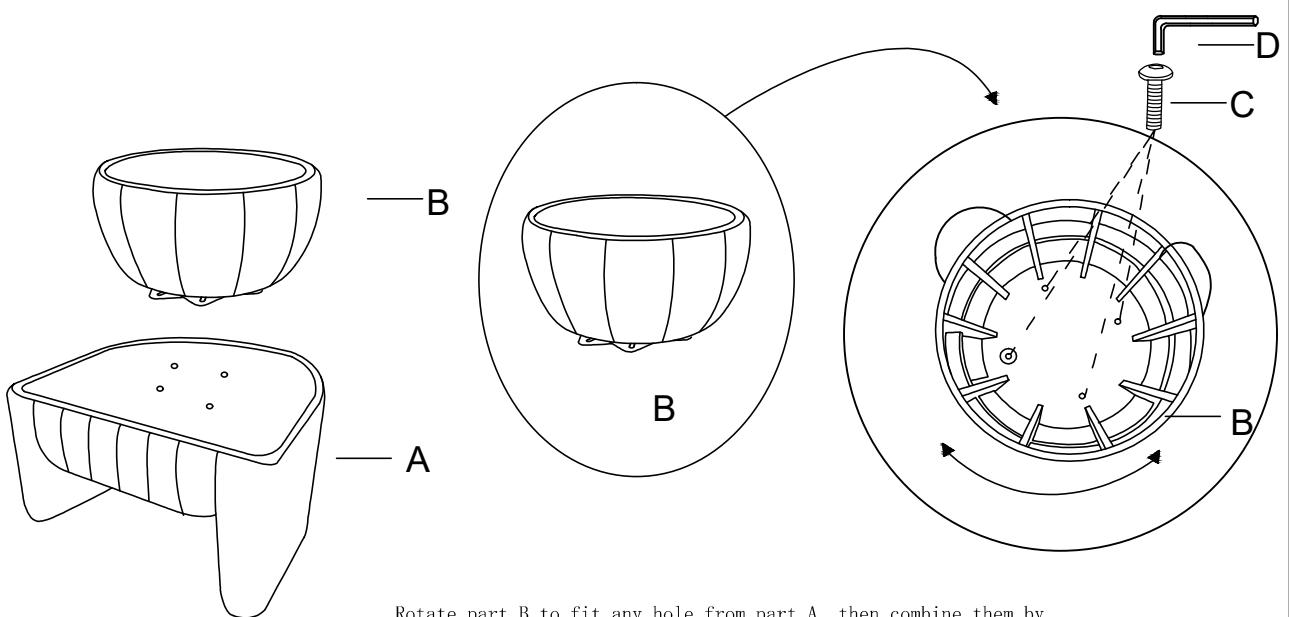

Rotate part B to fit any hole from part A, then combine them by tightening the screws to 80% firstly. Turn around part B to make every hole combined by tightening screws one by one to 80%. Then tighten all screws to 100% after all steps settled down.

