

## ASSEMBLY INSTRUCTIONS

Before assembling your headboard, please read through these instructions carefully and familiarize yourself with the different parts.

**ATTENTION!** If you receive a damaged or defective item, please contact afifurnishings at [customerservice@afifurnishings.com](mailto:customerservice@afifurnishings.com) or 1-800-955-3726



### PARTS LIST

①	LEFT POST	1 PC
②	RIGHT POST	1 PC
③	TOP RAIL	1 PC
④	CENTER RAIL	2 PCS
⑤	BOTTOM RAIL	1 PC
⑥	SPACER BLOCK	2 PCS
⑦	SUPPORT RAIL	1 PC

Instructions apply for bed sizes  
TWIN > FULL

### HARDWARE




<b>(A)</b> JCB M8 X 40mm (1 1/2") - 4 pcs Spare - 1 pc		<b>(D)</b> Wood button - 4 pcs Spare - 1 pc		<b>(G)</b> JCB M6 X 25mm (1") - 4 pcs Spare - 1 pc	
<b>(B)</b> JCB M6 X 40mm (1 1/2") - 2 pcs Spare - 1 pc		<b>(E)</b> Allen wrench M4 - 1pc		<b>(H)</b> Flat washer - 4 pcs Spare - 1 pc	
<b>(C)</b> JCB M6 X 30mm (1 1/4") - 5 pcs Spare - 1 pc		<b>(F)</b> Allen wrench M5 - 1pc		<b>(I)</b> Split washer - 4 pcs Spare - 1 pc	

#### HARDWARE FOR METAL BED FRAME

NOTE: WE INCLUDE SPARE HARDWARE IN CASE DAMAGE OCCURS DURING ASSEMBLY.

### Step 1

Attach spacer block (6) to left right post (1)(2), using JCB (B). Tighten with the Allen wrench (E).

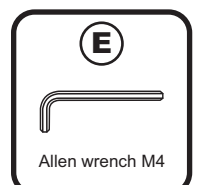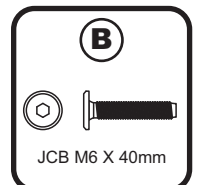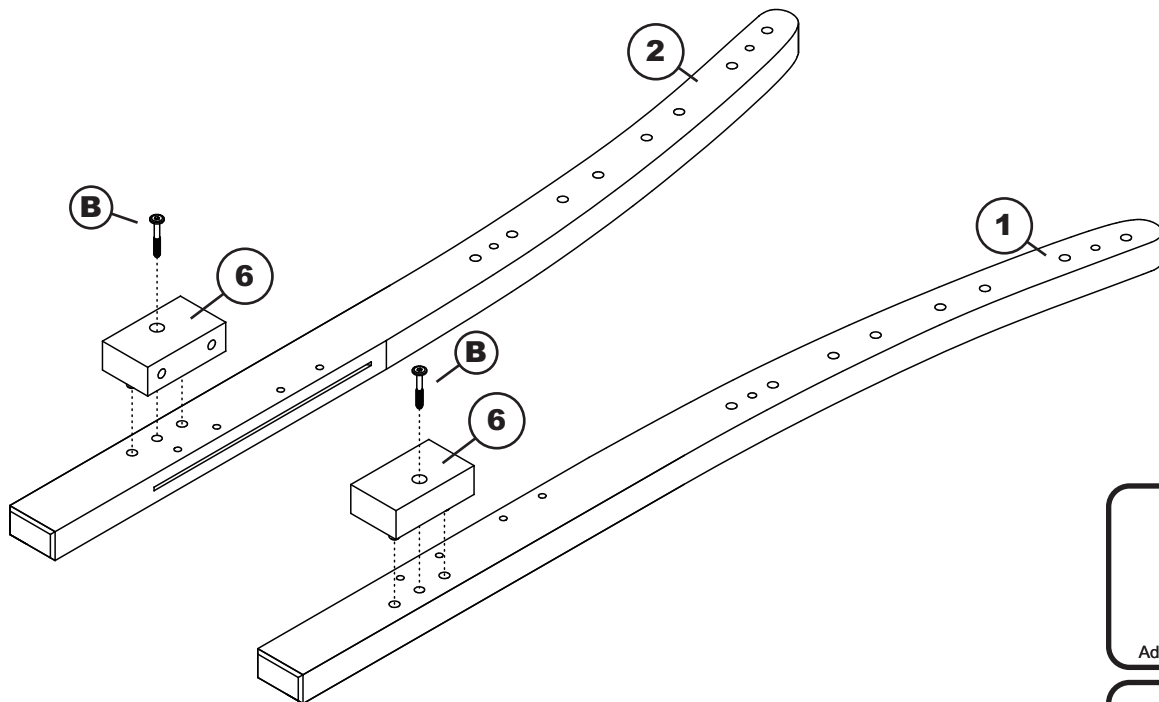


PO:

CODE	ITEM	ITEM
HB-SAV	R-29782X	R-29783X

## TWIN > FULL


### Step 2

Attach top rail (3) center rails (4) and bottom rail (5) to the left right post (1)(2) as shown below. Using JCB (A) tighten with Allen wrench (F).

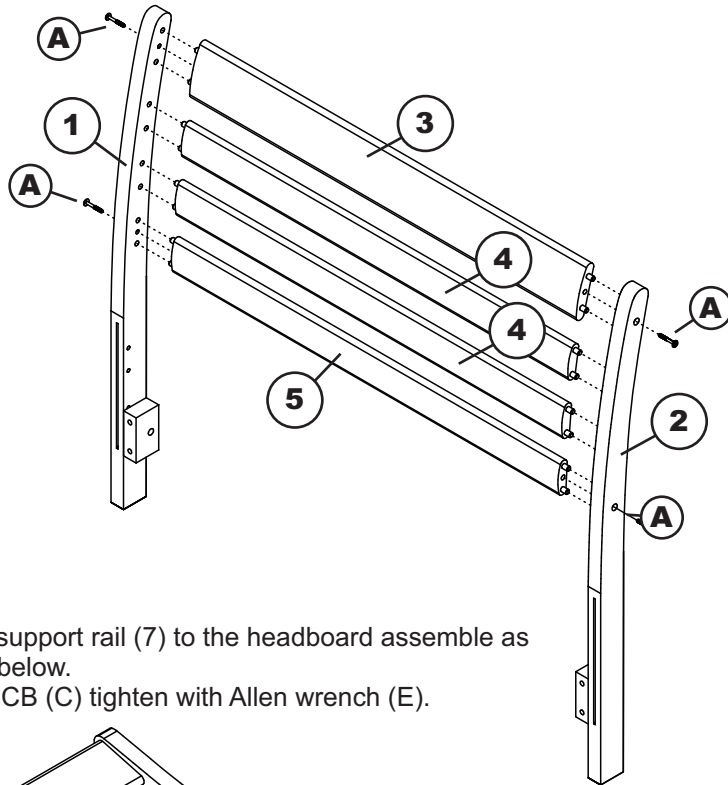


### Step 3

Attach support rail (7) to the headboard assemble as shown below. Using JCB (C) tighten with Allen wrench (E).

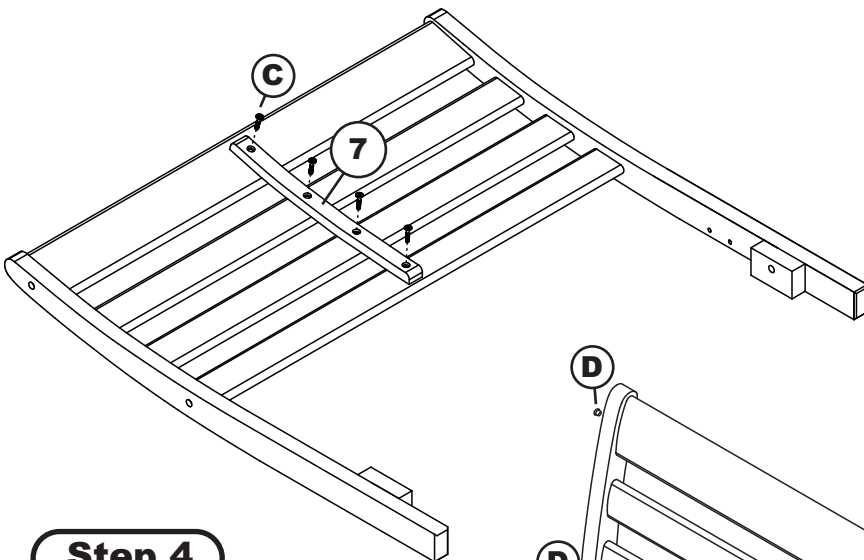

### Step 4

Lastly, cover holes with wood button (D).

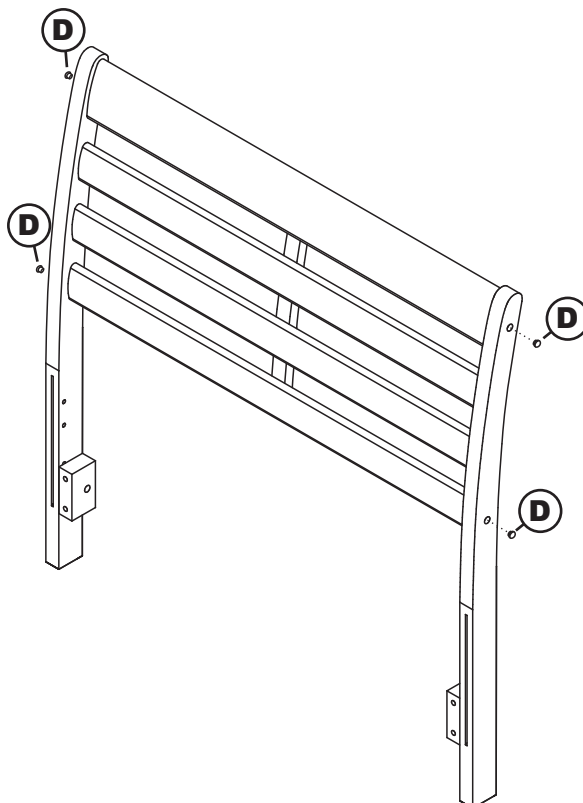

Adult assembly

(A)



JCB M8 X 40mm

(C)



JCB M6 X 30mm

(D)



Wood button

(E)



Allen wrench M4

(F)



Allen wrench M5

If you purchased a wood headboard to attach to metal bed frame, please refer to page 3.

## ASSEMBLY INSTRUCTIONS

Before assembling your bed, please read through these instructions carefully and familiarize yourself with the different parts.







Instructions apply for bed sizes  
**TWIN > FULL > QUEEN > KING**



Metal bed frames are sold separately from wood headboards. The hardware shown on this page is supplied with your wood headboard for attaching the bed frame to the headboard. The metal bed frame is supplied with its own assembly instructions and hardware.

### Step 1

Attach the headboard assembly to the metal frame using JCB (G), flat washer (H), and split washer (I) then tighten with Allen wrench (E), as shown below.

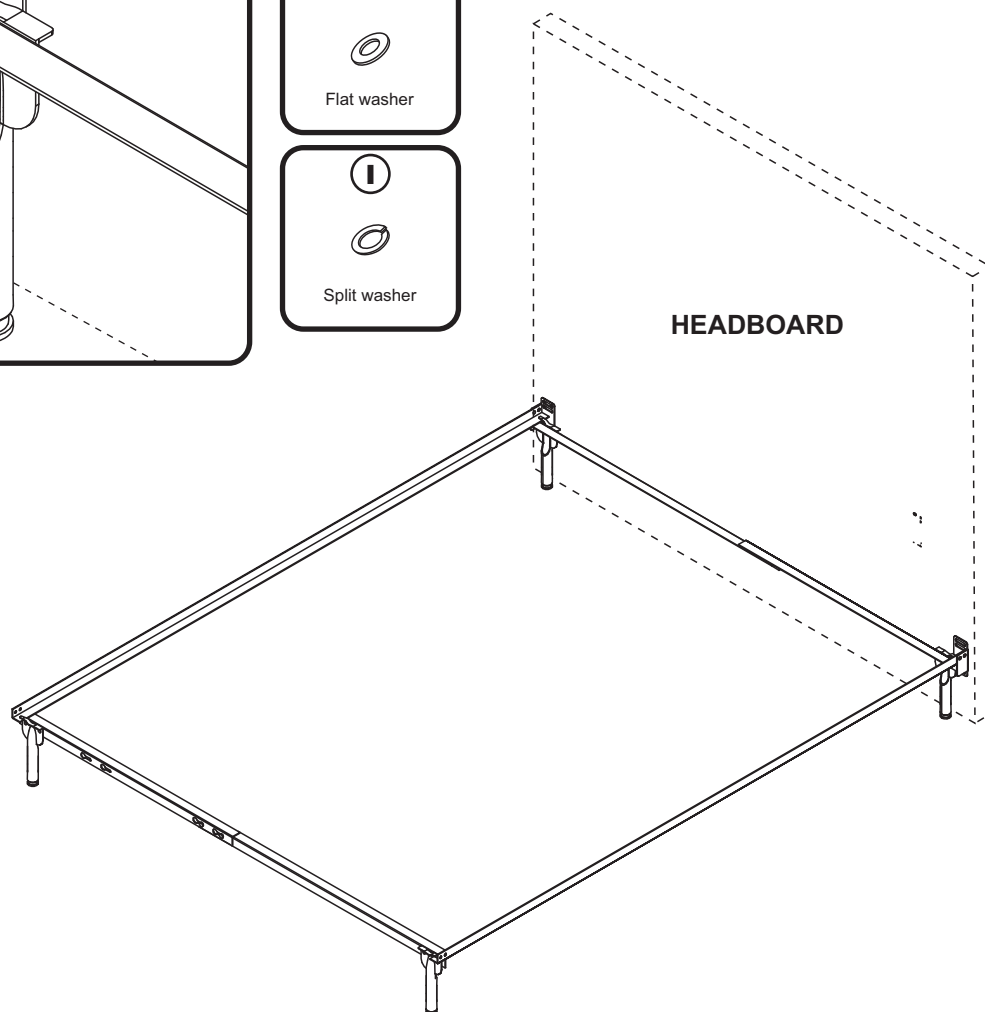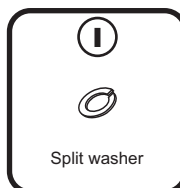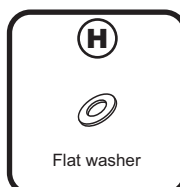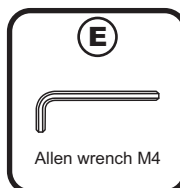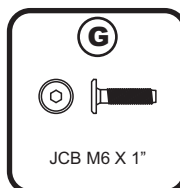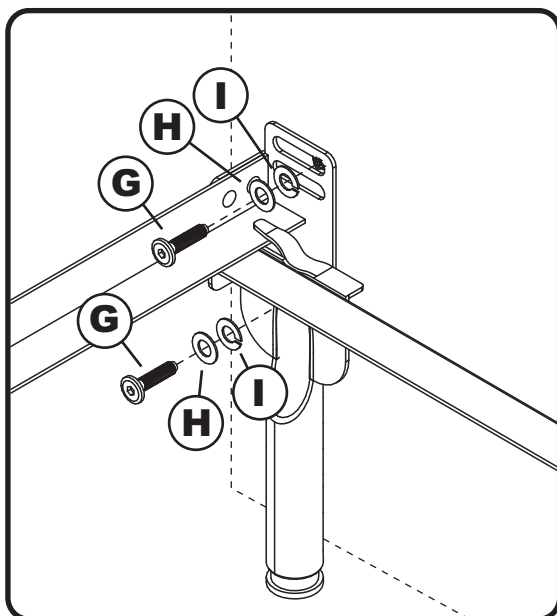

## Congratulations!

Your bed is now ready for use.

To ensure lasting safety, we recommend that you periodically check that all screws are tight and all parts are secure.

## TWIN XL

### ASSEMBLY INSTRUCTIONS

Before assembling your bed frame, please read through these instructions carefully and familiarize yourself with the different parts.






**ATTENTION!** If you receive a damaged or defective item, please contact [afifurnishings.com](mailto:customerservice@afifurnishings.com) or 1-800-955-3726



#### PARTS LIST

- |   |                       |       |
|---|-----------------------|-------|
| ① | LEFT LEG              | 1 PC  |
| ② | RIGHT LEG             | 1 PC  |
| ③ | TOP/BOTTOM RAIL 2 PCS |       |
| ④ | FB PANEL              | 1 PC  |
| ⑤ | LEFT SIDE RAIL        | 1 PC  |
| ⑥ | RIGHT SIDE RAIL       | 1 PC  |
| ⑦ | SLAT KIT              | 2 SET |

#### HARDWARE

- |  |  |
|--|--|
| <br><b>(A)</b> JCB M6 X 80mm (3 1/8") - 8 pcs<br>Spare - 1 pc | <br><b>(D)</b> Wood button - 8 pcs<br>Spare - 1 pc  |
| <br><b>(B)</b> Barrel nut - 8 pcs                             | <br><b>(E)</b> Allen wrench M4 - 1pc<br>Spare - 1pc |
| <br><b>(C)</b> Wood screw (1 1/4") - 12 pcs<br>Spare - 1 pc   |  |

NOTE: WE INCLUDE SPARE HARDWARE IN CASE DAMAGE OCCURS DURING ASSEMBLY.

#### Step 1


Attach right leg (2) to top/bottom rail (3), using JCB (A) and barrel nut (B). Tighten with the Allen wrench (E).

#### Step 2

Guide the FB panel (4) in carefully so that it won't jump out of its grooves. Be sure it fits fully into its groove at the leg before fitting the left leg (1).


#### Step 3

Attach left leg (1) to the footboard assemblies as shown below. Using JCB (A) and barrel nut (B). Tighten with allen wrench (E).

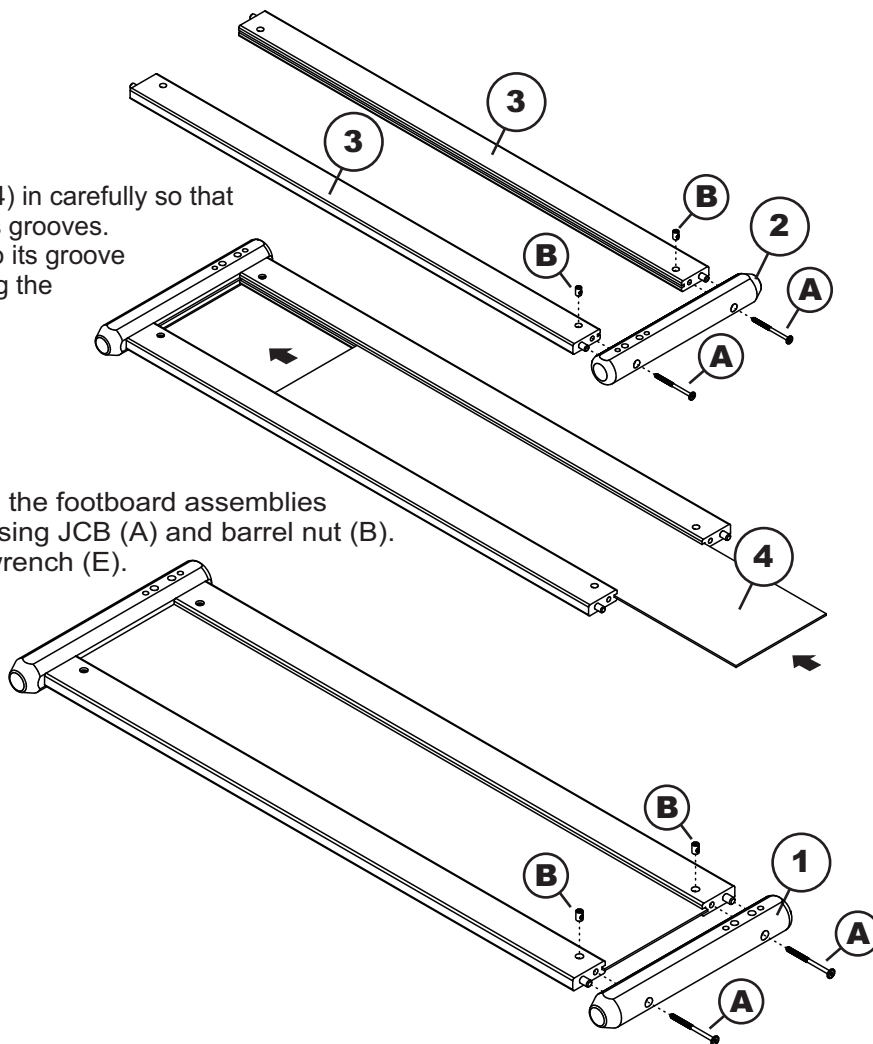

Adult assembly

**(A)**



JCB M6 X 80mm

**(B)**



Barrel nut

**(E)**



Allen wrench


PO:

CODE	ITEM
FR-BRC-STP	R-20331X

# TWIN XL


## Step 4

Attach left & right side rails (5)(6) to the footboard as shown below. Using JCB (A) and barrel nut (B) tighten with Allen wrench (E).

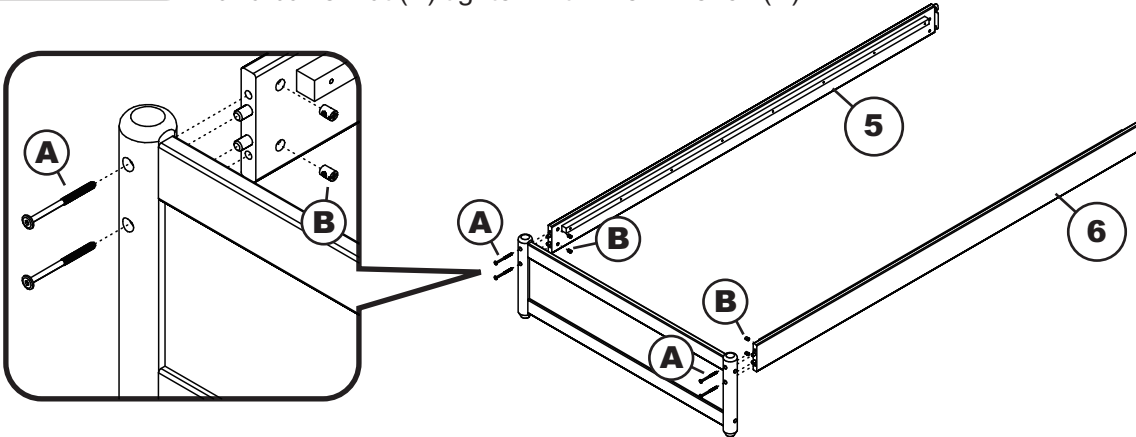


## Step 5

Attach the side rails to the headboard as shown using the bed hooks and middle set of pins on headboard.

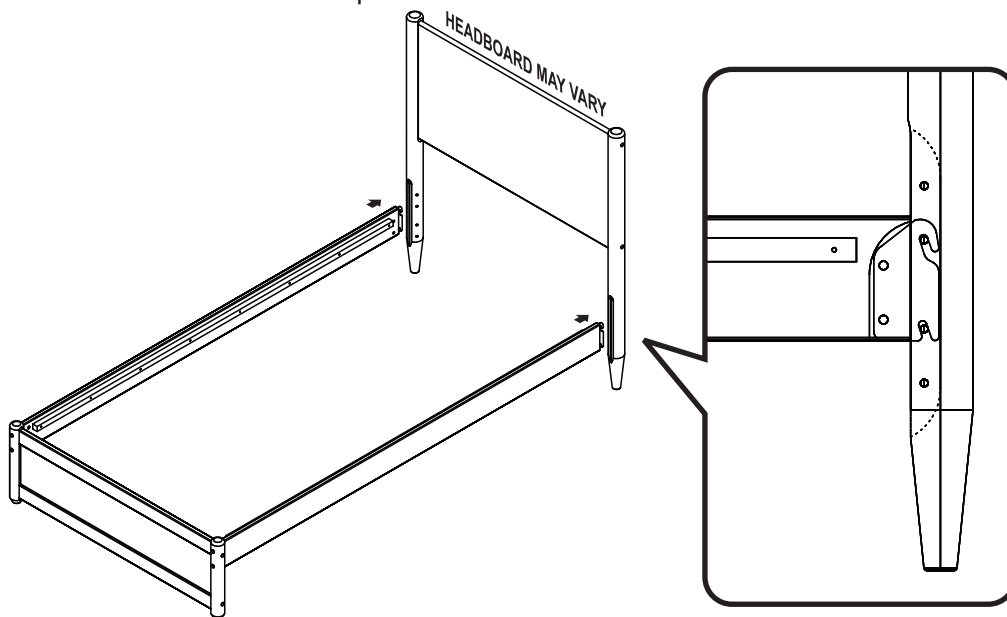

## Step 6

Attach slat kit (7) onto the bed. Using wood screw (C) tighten with Phillips head screwdriver. (Customer supplied) Lastly, cover holes with wood button (D).

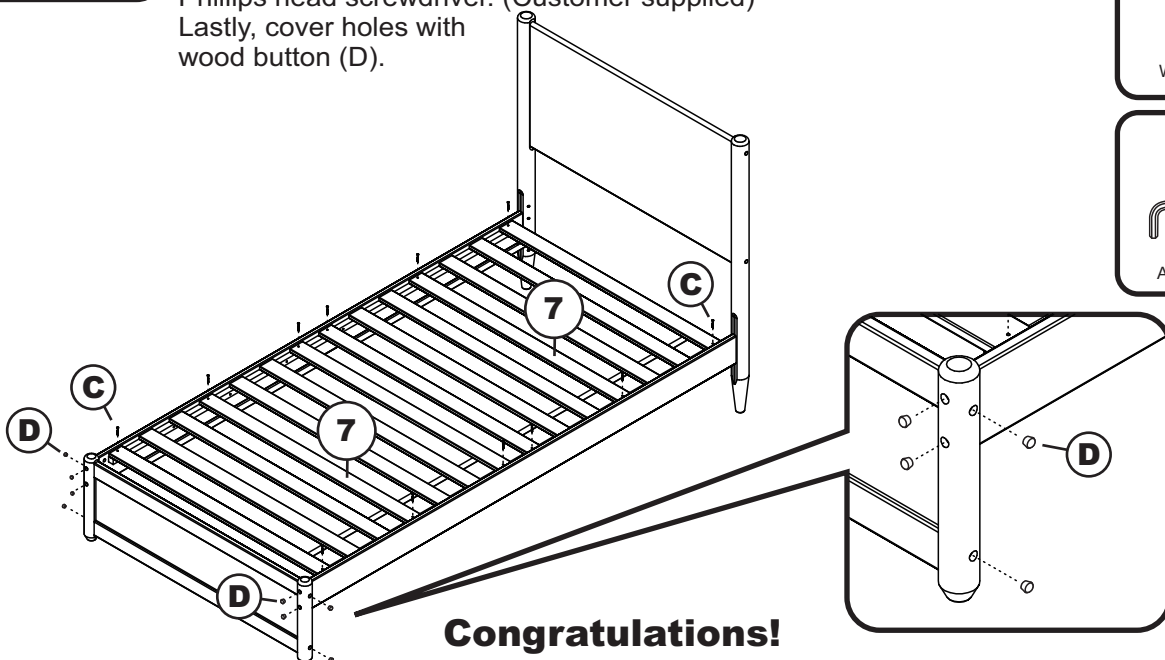

**Congratulations!**


Your bed is now ready for use.

We recommend that you periodically recheck that all screws are tight to ensure lasting safety.



Adult assembly

A




JCB M6 X 80mm

B



Barrel nut

C



Wood screw 1 1/4"

D



Wood button

E





Allen wrench

## ASSEMBLY INSTRUCTIONS

Before assembling your bed drawer, please read through these instructions carefully, familiarize yourself with the different parts.

**ATTENTION!** If you receive a damaged or defective item, please contact afifurnishings at [customerservice@afifurnishings.com](mailto:customerservice@afifurnishings.com) or 1-800-955-3726

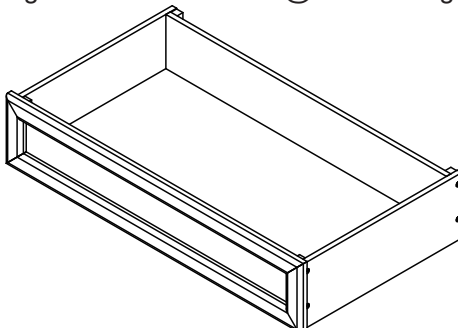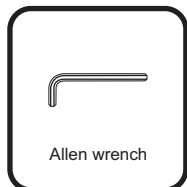


NOTE: WE INCLUDE SPARE HARDWARE IN CASE DAMAGE OCCURS DURING ASSEMBLY.

### HARDWARE





**(A)** JCB M6 X 30mm - 16 pcs  
Spare - 1 pc



**(B)** Allen wrench - 1 pcs  
Spare - 1 pc




### PARTS LIST

<b>(01)</b>	<b>HARDWARE</b>	<b>1 BOX</b>
<b>(02)</b>	<b>DRAWER FACE</b>	<b>2 PCS</b>
<b>(03)</b>	<b>DRAWER SIDE</b>	<b>4 PCS</b>
<b>(04)</b>	<b>DRAWER BACK</b>	<b>2 PCS</b>
<b>(05)</b>	<b>DRAWER BOTTOM</b>	<b>2 PCS</b>

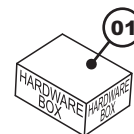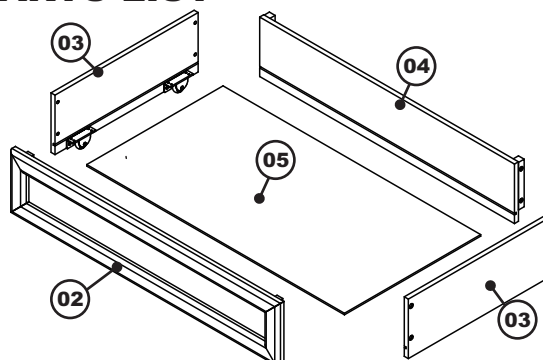

### Step 1

Lay the drawer face (02) on smooth, flat surface so the drawer bottom (05) groove is facing upwards. Attach the drawer sides (03) to drawer face (02) using JCB M6 X 30mm (A). Align groove inside drawer side with groove in drawer face. Tighten with Allen wrench (B).

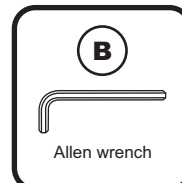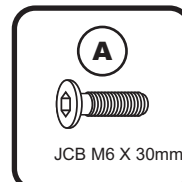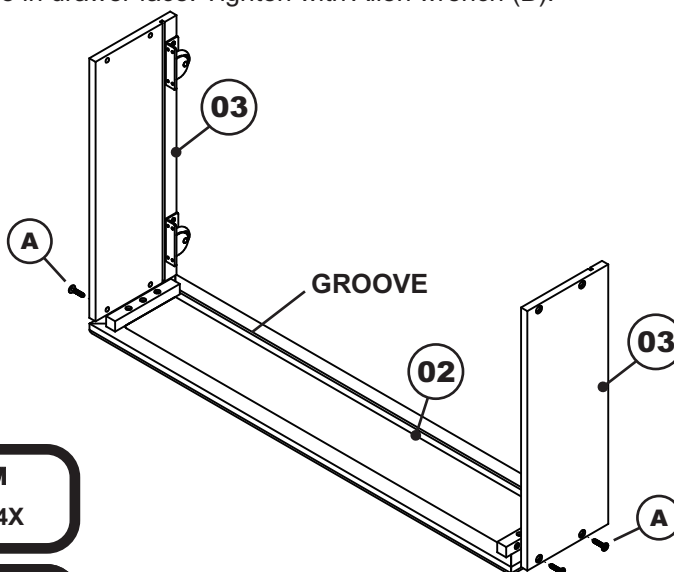


CODE	ITEM	ITEM
ST-DR2-MCM	E-7113X	E-7114X

PO :

**Step 2**


Guide the drawer bottom (05) in carefully so that it won't jump out of its grooves. Be sure it fits fully into its groove at the bottom (in the drawer face) before fitting the drawer back.

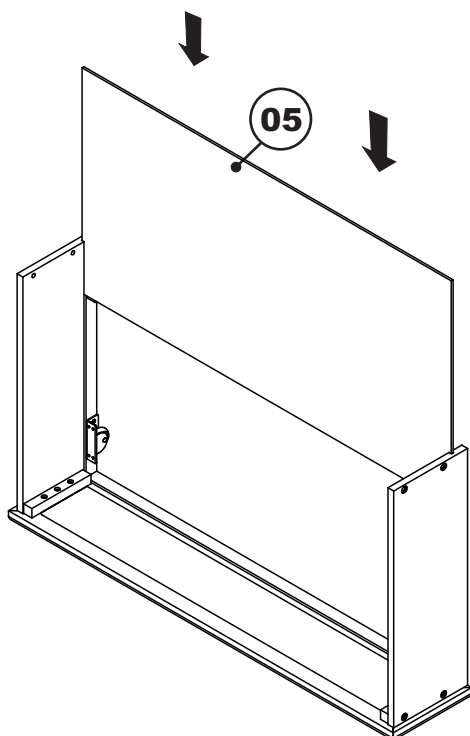**Step 3**


Attach drawer back (04) to bed drawer assembly as shown. Use JCB M6 X 30mm (A). Tighten with Allen wrench (B).




Adult assembly

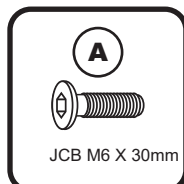

JCB M6 X 30mm

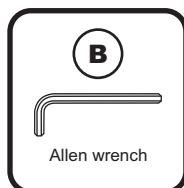


Allen wrench

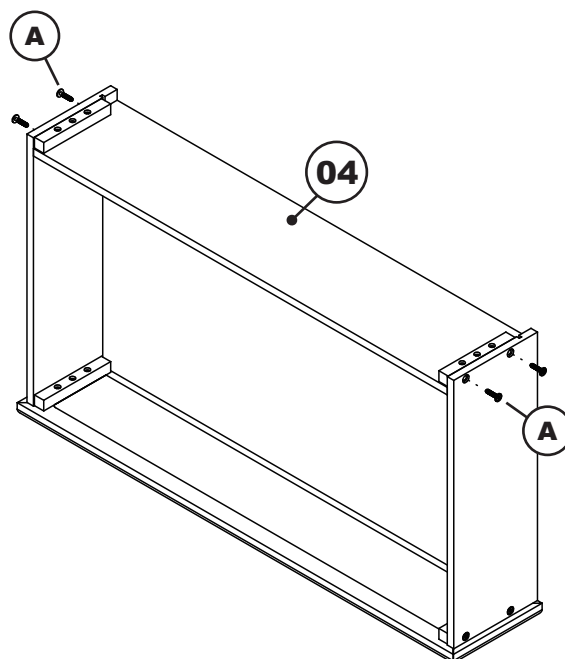**Step 4**

Lastly, insert bed drawer to the bed as shown below.



Adult assembly

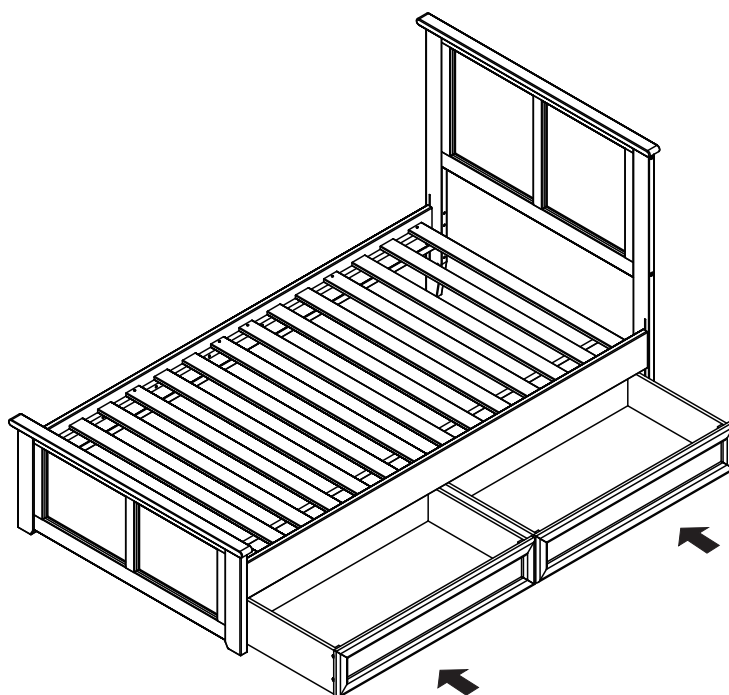

**Congratulations!**

Your bed drawer is now ready for use.

We recommend that you periodically recheck that all screws are tight to ensure lasting safety.