

## TWIN

### ASSEMBLY INSTRUCTIONS

Before assembling your bed frame, please read through these instructions carefully and familiarize yourself with the different parts.






**ATTENTION!** If you receive a damaged or defective item, please contact [afifurnishings.com](mailto:customerservice@afifurnishings.com) or 1-800-955-3726



#### PARTS LIST

- |   |                 |       |
|---|-----------------|-------|
| ① | LEFT LEG        | 2 PCS |
| ② | RIGHT LEG       | 2 PCS |
| ③ | TOP/BOTTOM RAIL | 4 PCS |
| ④ | FB PANEL        | 2 PCS |
| ⑤ | SIDE RAIL       | 2 PCS |
| ⑥ | SLAT KIT        | 2 SET |

#### HARDWARE

- |   |  |
|---|--|
| <br><b>(A)</b> JCB M6 X 80mm (3 1/8") - 16 pcs<br>Spare - 1 pc | <br><b>(D)</b> Wood button - 16 pcs<br>Spare - 1 pc |
| <br><b>(B)</b> Barrel nut - 16 pcs                             | <br><b>(E)</b> Allen wrench M4 - 1pc<br>Spare - 1pc |
| <br><b>(C)</b> Wood screw (1 1/4") - 12 pcs<br>Spare - 1 pc    |  |

NOTE: WE INCLUDE SPARE HARDWARE IN CASE DAMAGE OCCURS DURING ASSEMBLY.

#### Step 1


Attach right leg (2) to top/bottom rail (3), using JCB (A) and barrel nut (B). Tighten with the Allen wrench (E).

#### Step 2

Guide the FB panel (4) in carefully so that it won't jump out of its grooves. Be sure it fits fully into its groove at the leg before fitting the left leg (1).

#### Step 3

Attach left leg (1) to the footboard assemblies as shown bellow. Using JCB (A) and barrel nut (B). Tighten with allen wrench (E). Repeat the other.

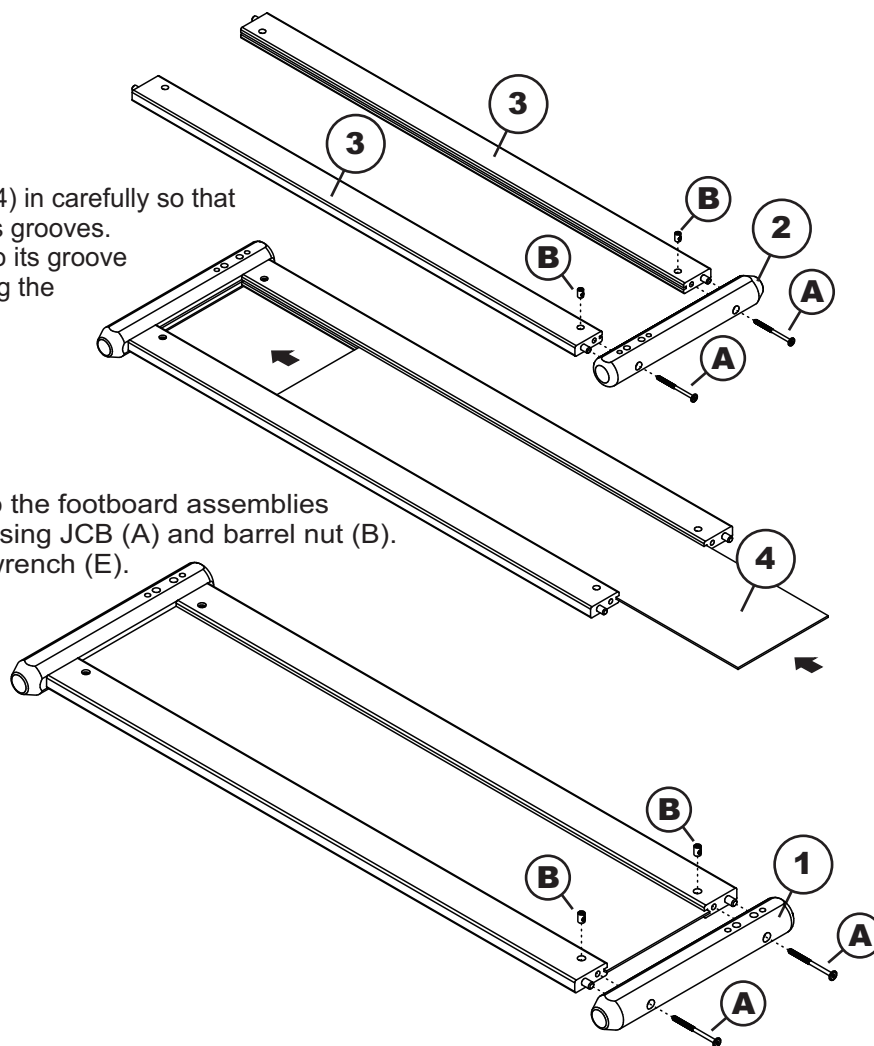

Adult assembly

**(A)**



JCB M6 X 80mm

**(B)**



Barrel nut

**(E)**



Allen wrench

PO:

CODE

FR-BRC-ST


ITEM

R-20132X

# TWIN


## Step 4

Attach side rails (5) to the headboard / footboard as shown below. Using JCB (A) and barrel nut (B) tighten with Allen wrench (E).

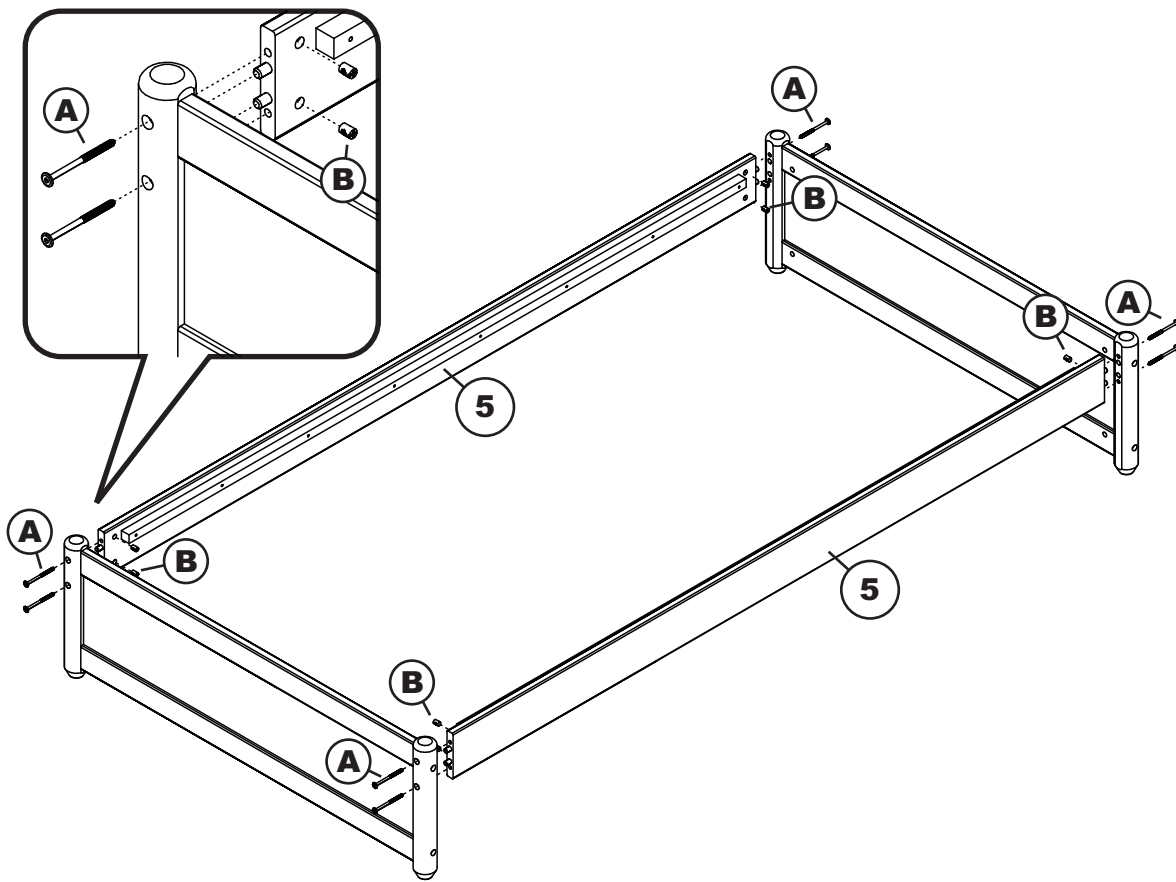

Adult assembly

(A)




JCB M6 X 80mm

(B)



Barrel nut

(C)



Wood screw 1 1/4"

(D)



Wood button


(E)



Allen wrench

## Step 5

Attach slat kit (6) onto the bed. Using wood screw (C) tighten with Phillips head screwdriver. (Customer supplied)  
Lastly, cover holes with wood button (D).

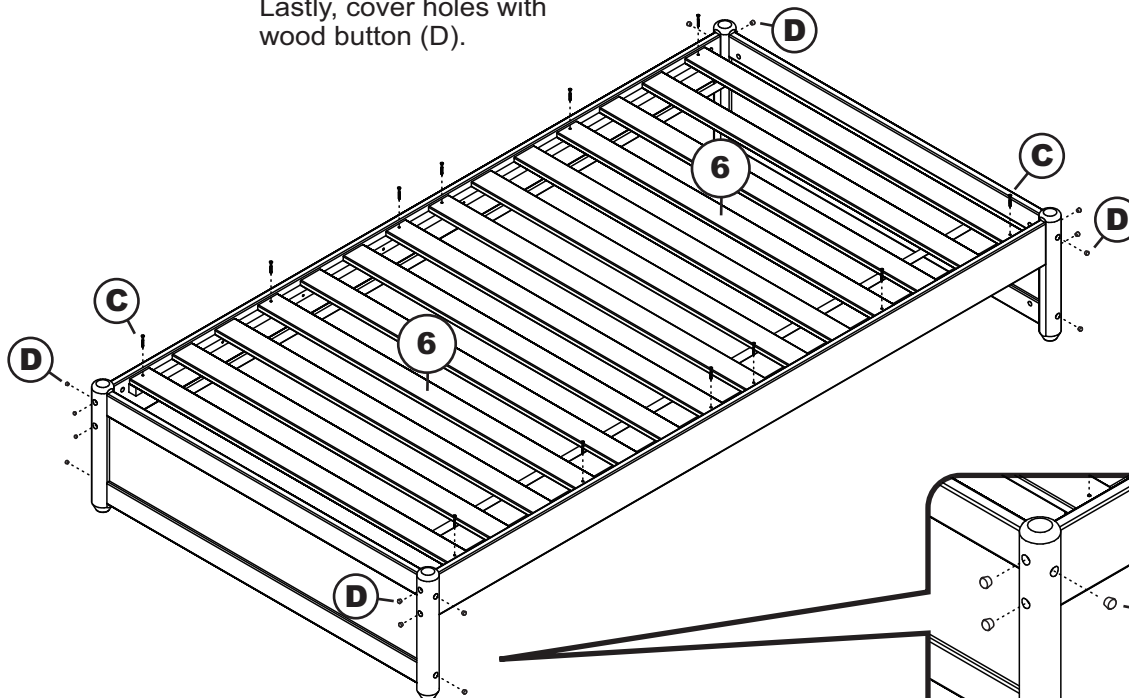

**Congratulations!**

Your bed is now ready for use.

We recommend that you periodically recheck that all screws are tight to ensure lasting safety.





## TWIN ASSEMBLY INSTRUCTIONS

Before assembling your Trundle bed, please read through these instructions carefully. Familiarize yourself with the different parts.



**ATTENTION!** If you receive a damaged or defective item, please contact afifurnishings at [customerservice@afifurnishings.com](mailto:customerservice@afifurnishings.com) or 1-800-955-3726

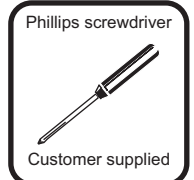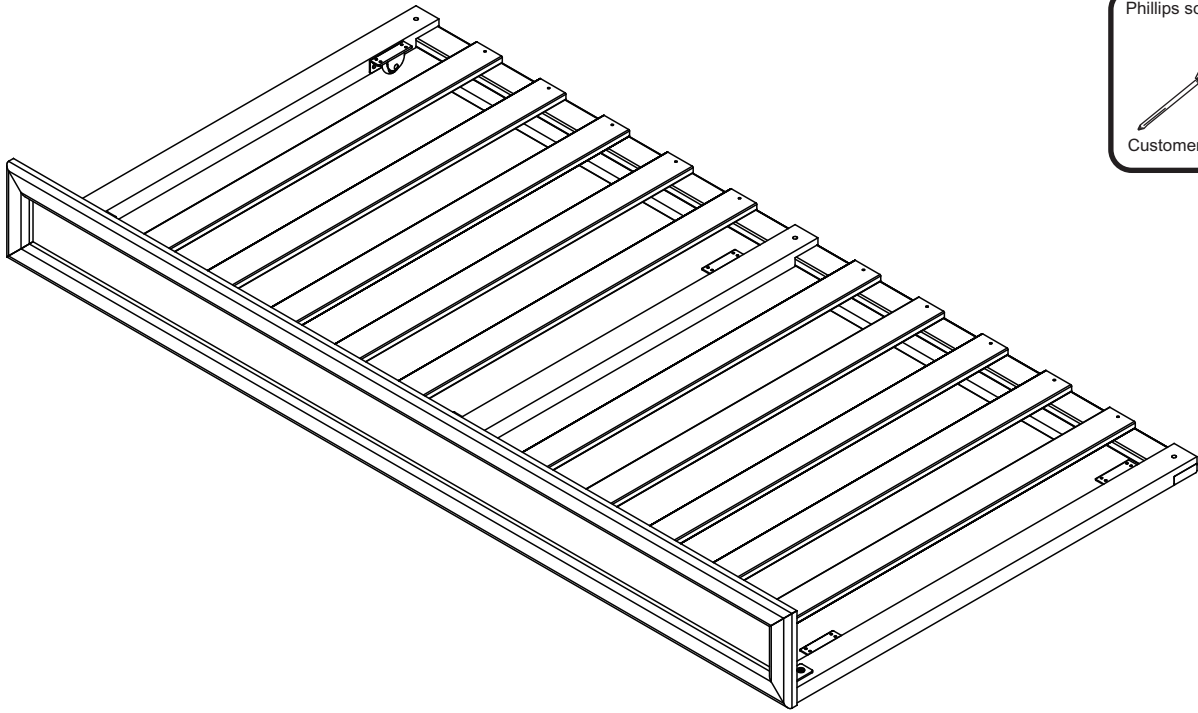



CODE	ITEM
ST-TD-MCM	E-7122X


**PO :**

## HARDWARE


NOTE: WE INCLUDE SPARE HARDWARE IN CASE DAMAGE OCCURS DURING ASSEMBLY.

**A**  JCB M6 X 1 1/4" ( 30mm ) - 3 pcs  
Spare - 1 pc

**B**  JCB M6 X 5/8" ( 15mm ) - 8 pcs  
Spare - 1 pc

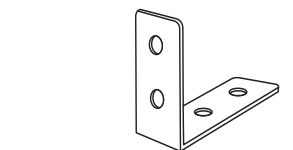

**C** L Bracket - 2 pcs


**D**  Wood screw 1 1/4" - 22 pcs  
Spare - 2 pcs

**E**  Allen wrench - 1 pc  
Spare - 1 pc

# TWIN



## PARTS LIST

01	HARDWARE	1 BOX	05	LEFT RAIL	1 PC
02	FRONT PANEL	1 PC	06	RIGHT RAIL	1 PC
03	BACK RAIL	1 PC	07	SLAT KIT WITH WEBBING	2 SETS
04	MID RAIL	1 PC			

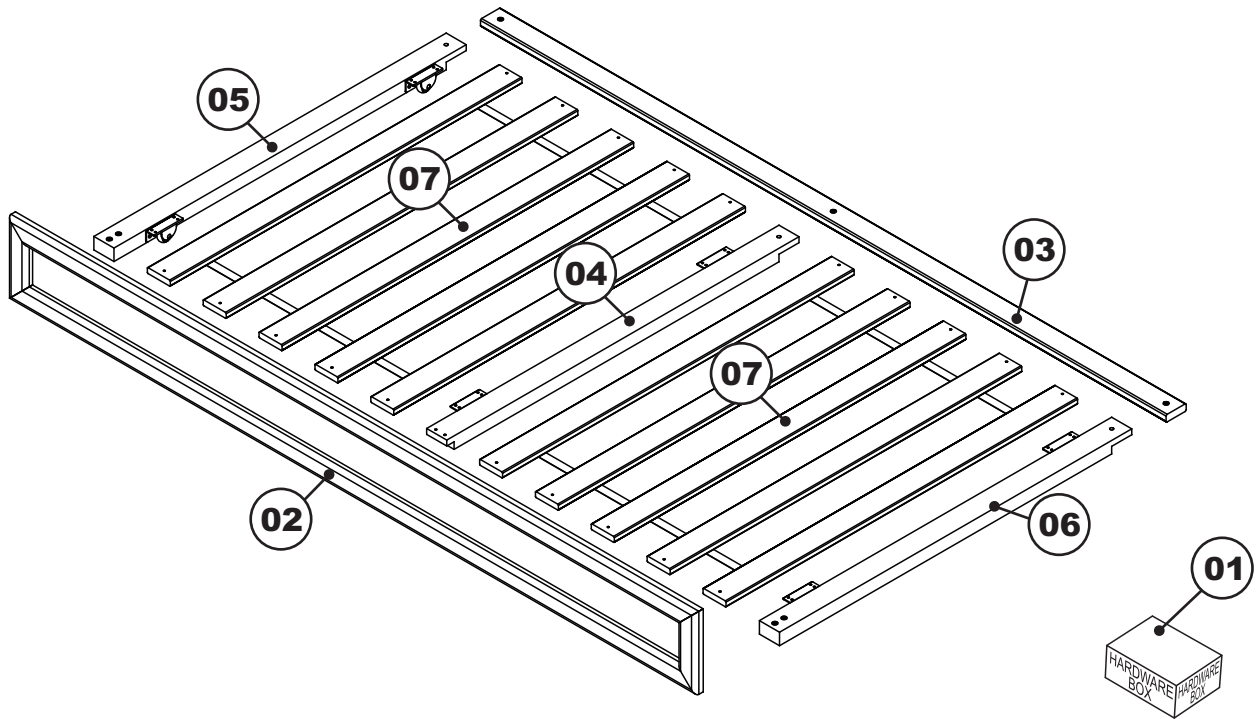

### Step 1

Attach L bracket (C) to the front panel (02) using JCB M6 X 5/8" (B). Tighten with the Allen wrench (E).

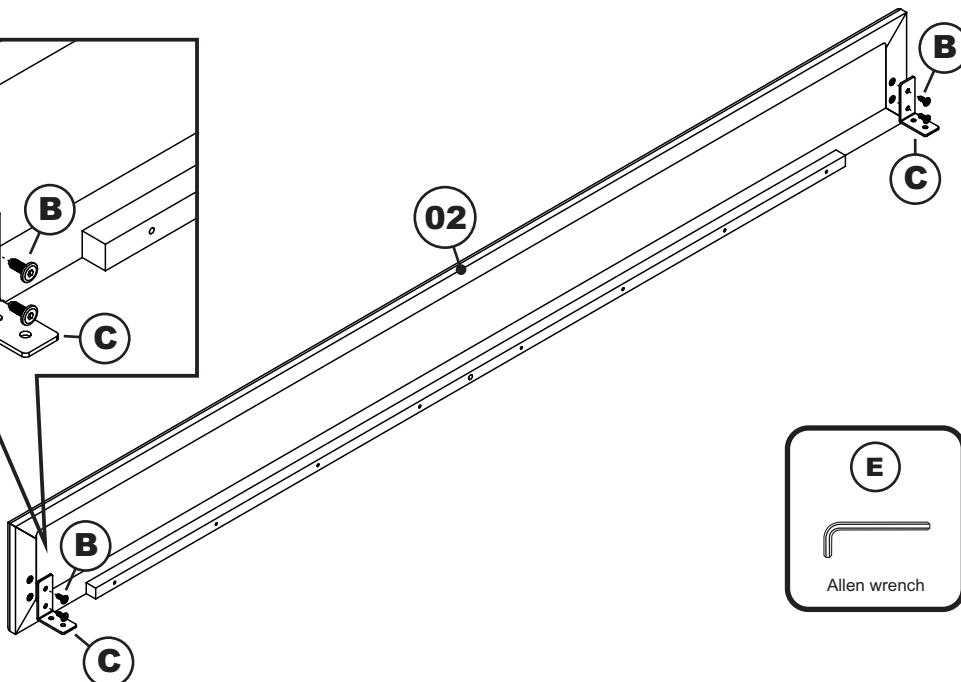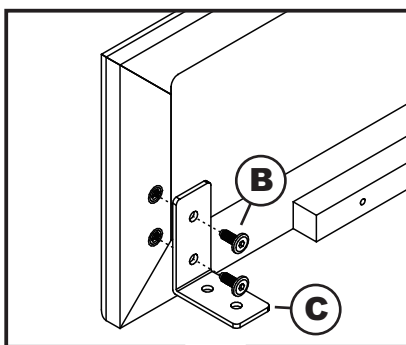

Adult assembly

B



JCB M6 X 5/8"

E



Allen wrench

C




L Bracket

## TWIN


### Step 2

Attach the left, right and mid rail (05)(06)(04) to the front panel (02) and back rail (03) as shown, using JCB M6 X 5/8" (B) M6 X 1 1/4" (A). Tighten with the Allen wrench (E). Using wood screw 1 1/4" (D) tighten with Phillips head screwdriver. (customer supplied)

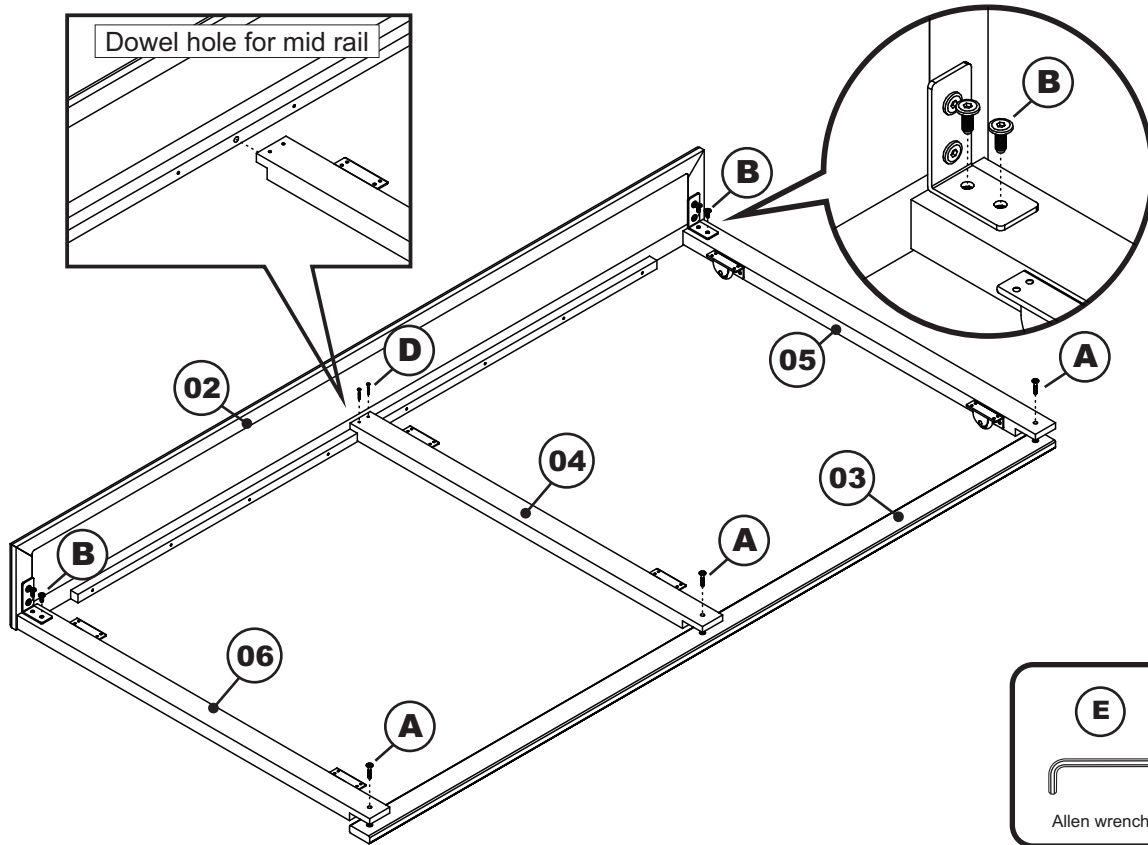

Adult assembly

A



JCB M6 X 1 1/4"

B




JCB M6 X 5/8"

E



Allen wrench


D



Wood screw 1 1/4"

### Step 3

Lay the slat kits (07) webbing side down onto the rail assembly as shown. Attach using wood screw 1 1/4" (D) and tighten with the Phillips head screw driver. (customer supplied)

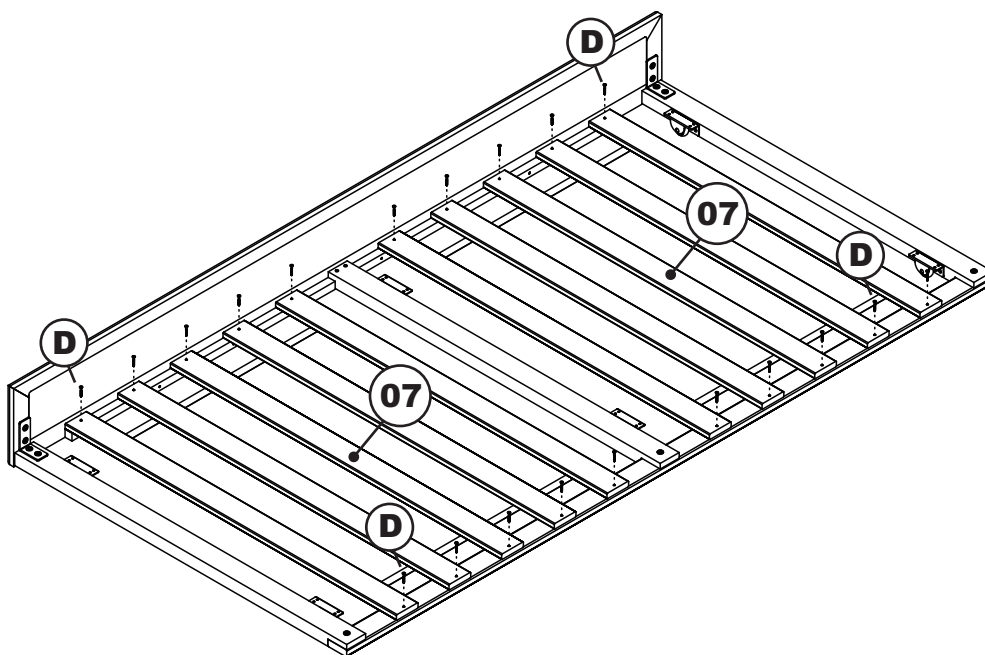

Adult assembly

D




Wood screw 1 1/4"

Phillips screwdriver



Customer supplied

## TWIN

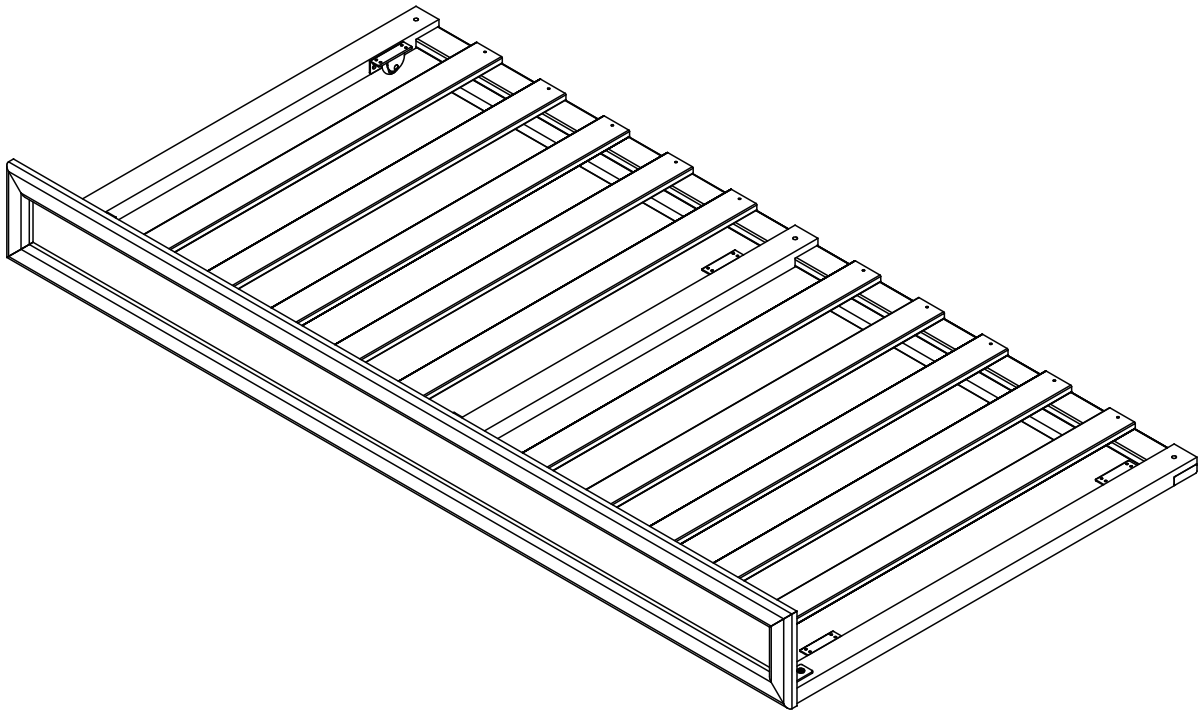


### Congratulations!

Your Trundle bed is now ready for use.  
We recommend that you periodically check that all screws are tight  
and all parts are secure to ensure lasting safety.

### Step 4

Lastly, Insert Trundle bed to the bed as shown below.

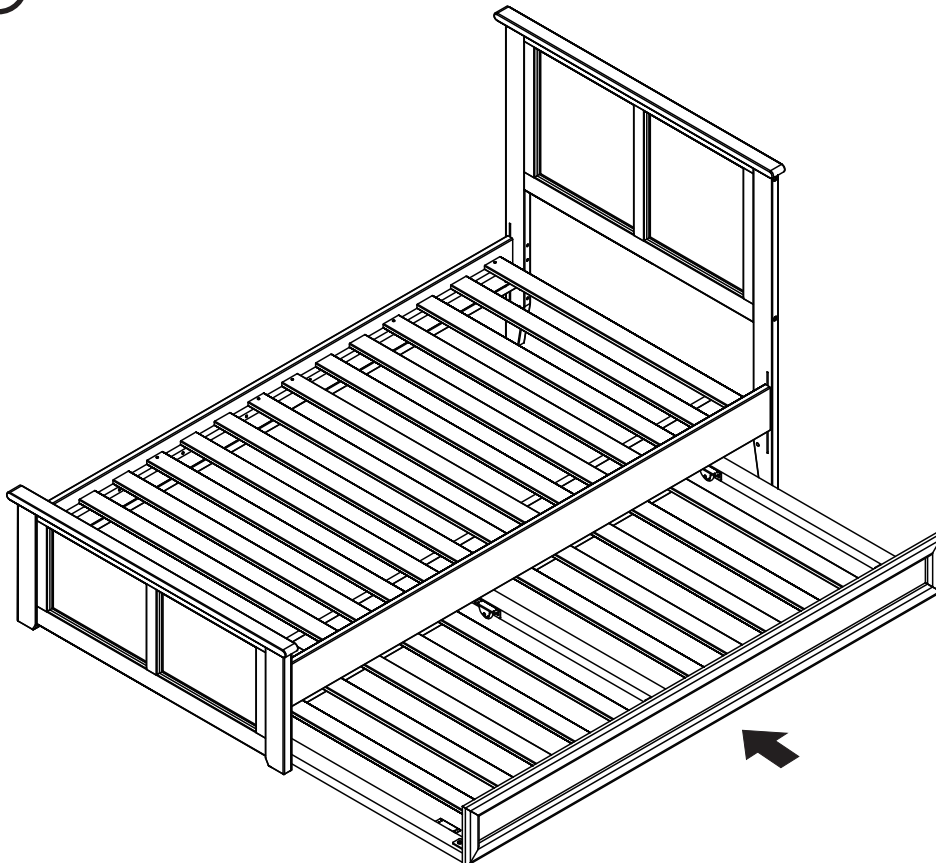

Adult assembly