ASSEMBLY INSTRUCTIONS




Thank you for purchasing this product. Please take time to read and follow instructions below. Check that you have all parts and hardware before assembly. Parts apparently missing are often found in packing matterials. If you do not have all parts listed, call us and they be sent to you immediately




It is recommended to install protective pads under all legs and supports to avoid damage or scratches when placing furniture on a wood floor or other hard surface, and to limit indentation and prevent discoloration if placing on carpet.

PARTS LIST				
NO.	SKETCH	DESCRIPTION	Q'TY	
A	\Diamond	TABLE TOP	1PC	
В	€	LEG	4PCS	

	HARDWARE LIST				
NO.	DESCRIPTION	SIZE	SKETCH	Q'TY	
1	BOLT	Ø5/16" x 2-3/8"		8PCS	
2	LOCK WASHER	Ø5/16"	0	8PCS	
3	FLAT WASHER	Ø5/16" x 1/16"	0	8PCS	
4	ALLEN KEY	1/6" x 2-1/4"		1PC	

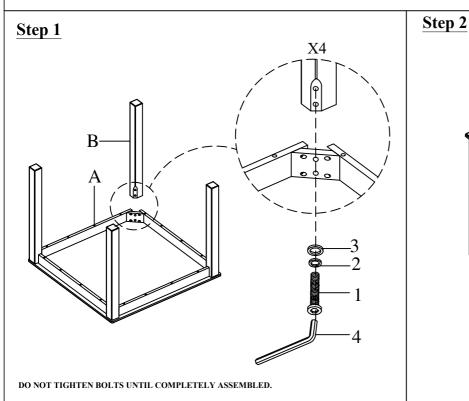

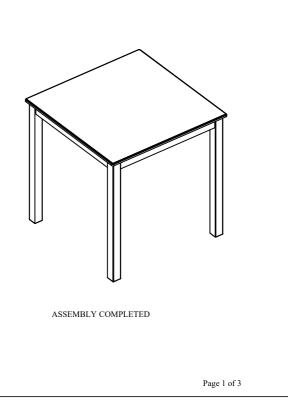

ASSEMBLY INSTRUCTIONS



Thank you for purchasing this product. Please take time to read and follow instructions below. Check that you have all parts and hardware before assembly. Parts apparently missing are often found in packing matterials. If you do not have all parts listed, call us and they be sent to you immediately




It is recommended to install protective pads under all legs and supports to avoid damage or scratches when placing furniture on a wood floor or other hard surface, and to limit indentation and prevent discoloration if placing on carpet.

PARTS LIST				
NO.	SKETCH	DESCRIPTION	Q'TY	
A		CHAIR BACK	1PC	
В		WOODEN SEAT	1PC	
С		RSF LEG	1PC	
D		LSF LEG	1PC	
E	-	RSF STRETCHER	1PC	
F	-	LSF STRETCHER	1PC	
G		FRONT STRETCHER	1PC	

HARDWARE LIST				
NO.	DESCRIPTION	SIZE	SKETCH	Q'TY
1	BOLT	Ø1/4" x 1-1/2"		2PCS
2	BOLT	Ø1/4" x 2-3/8"		4PCS
3	BOLT	Ø1/4" x 3"	(Marie 1997)	4PCS
4	LOCK WASHER	Ø1/4"	0	10PCS
5	FLAT WASHER	Ø1/4"x 1/16"	0	10PCS
6	ALLEN KEY	1/6" x 2-1/4"		1PC
7	WOODEN DOWEL	Ø10 x 30mm		1PC
8	WOOD SCREW	#4*45mm	(S)	6PCS


**SCREW DRIVER(NOT PROVIDED)



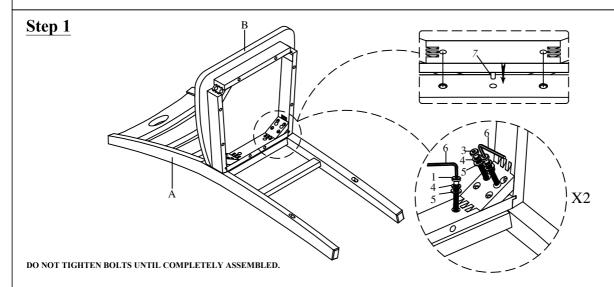


ASSEMBLY INSTRUCTIONS

Step 2

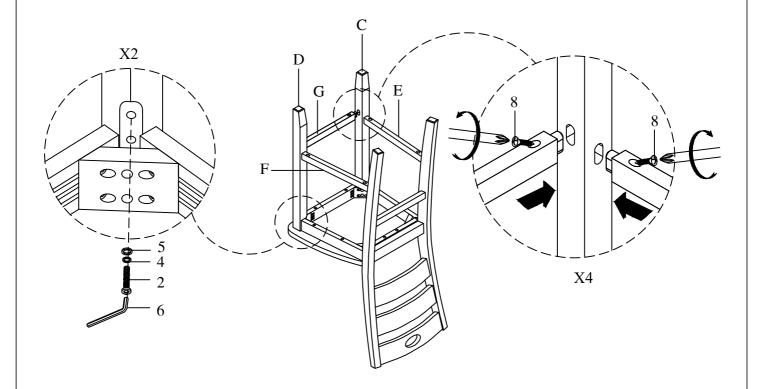

Step 3

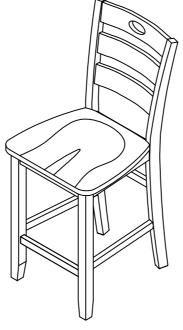

DO NOT TIGHTEN BOLTS UNTIL COMPLETELY ASSEMBLED.

ASSEMBLY COMPLETED