



WF309920
WF309921

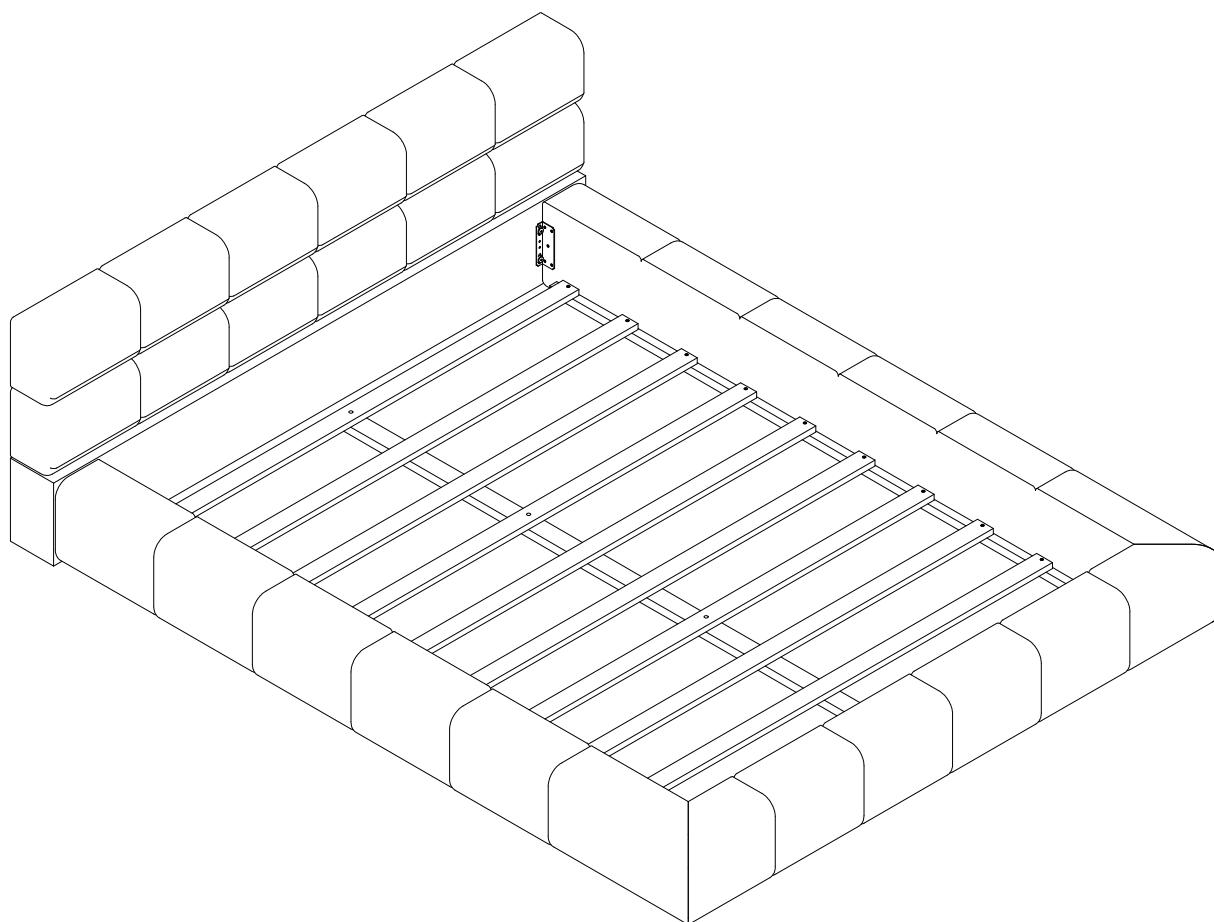

ASSEMBLY INSTRUCTIONS

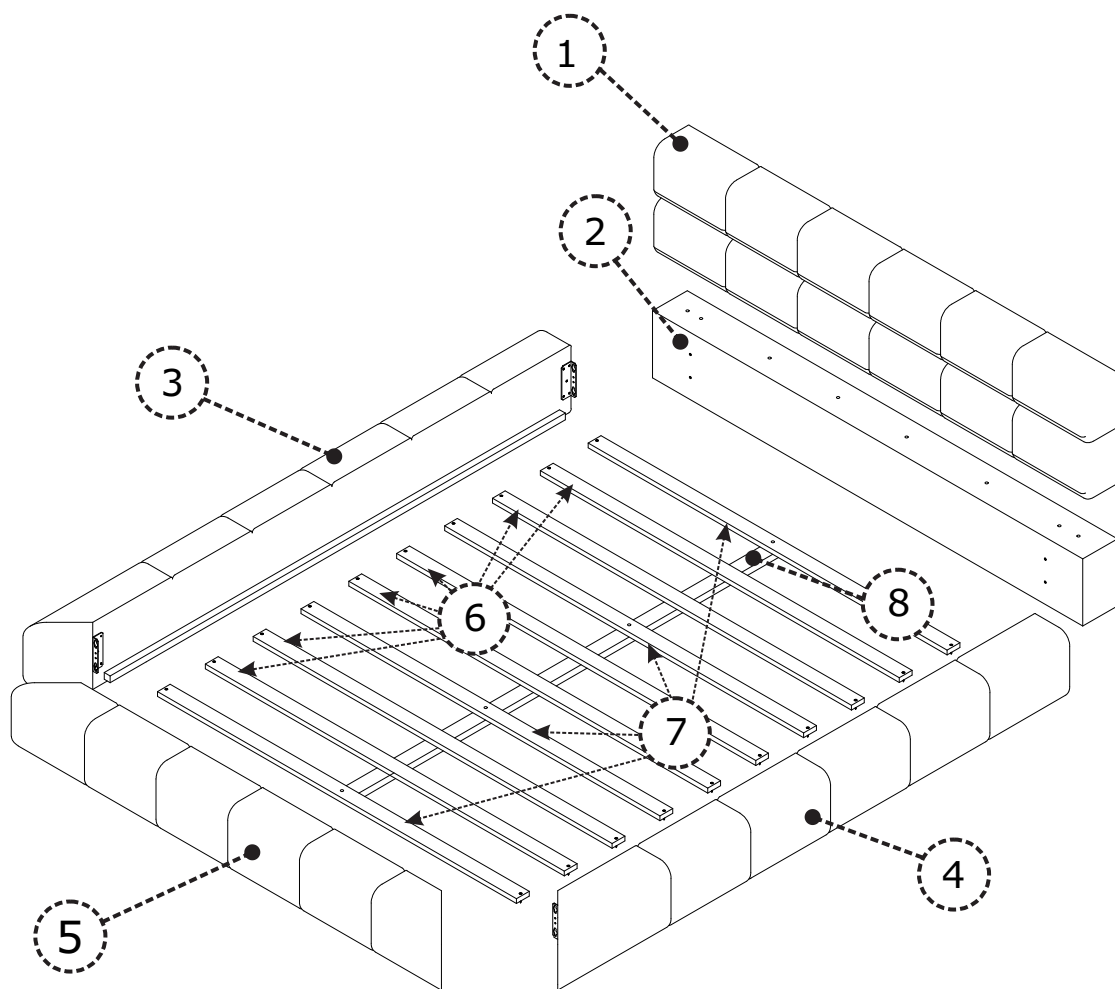

PARTS |

Check that you've received
all parts listed below.

BOX: 1/2
WF309920

① x 1



Head Board

② x 1




Head legs

⑤ x 1




Foot Board

⑥ x 6




Flats

⑦ x 4



Flats

Hardware

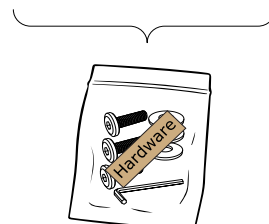

PARTS

Check that you've received
all parts listed below.

BOX: 2/2
WF309921

3 x 1



Side Board Left

4 x 1



Side Board Right

8 x 1



Support Slats



HARDWARE

Check that you've received
all hardware listed below.


Hardware List

No.	OUTLOOK	DESC	QTY
(A)		Bolts $\frac{5}{16}$ "x38 mm	12
(B)		Plain washer Ø19x1.5 mm	18
(C)		Spring washer Ø13x1 mm	18
(D)		Allen key 80x30x4 mm	1
(E)		Bolts $\frac{5}{16}$ "x45 mm	6
(F)		Screws Ø4x30 mm	20
(G)		Dowel Ø10x30 mm	2
(H)		Adjust Foot $\frac{1}{4}$ "x15 mm	3

STEP 1

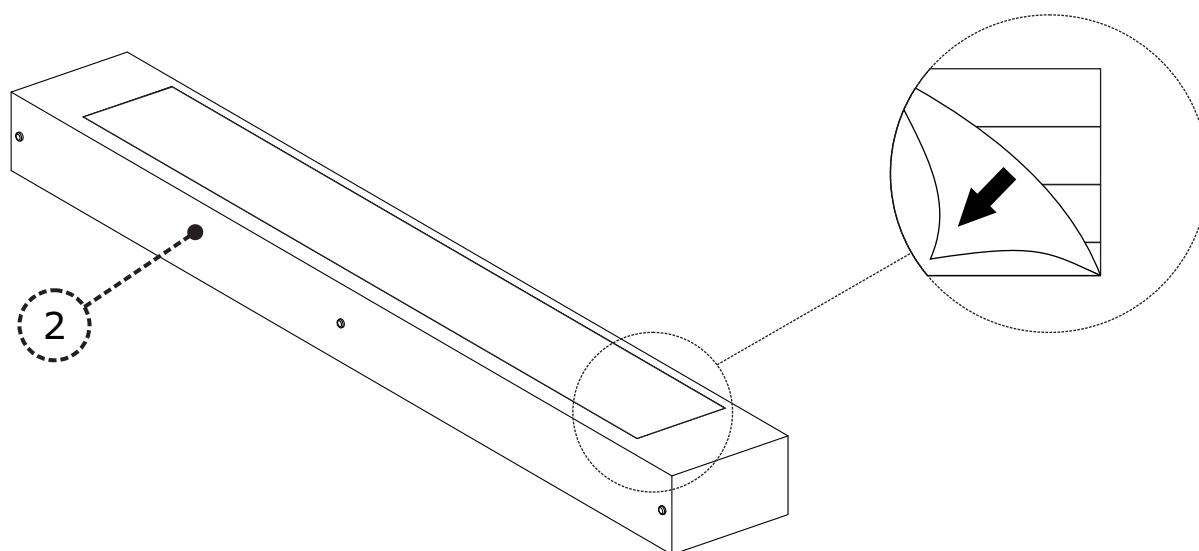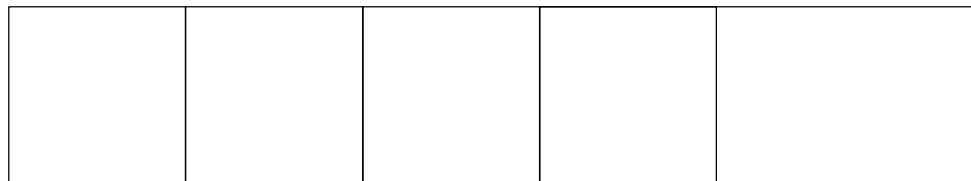


Open up the black fabric and take out details 6+7

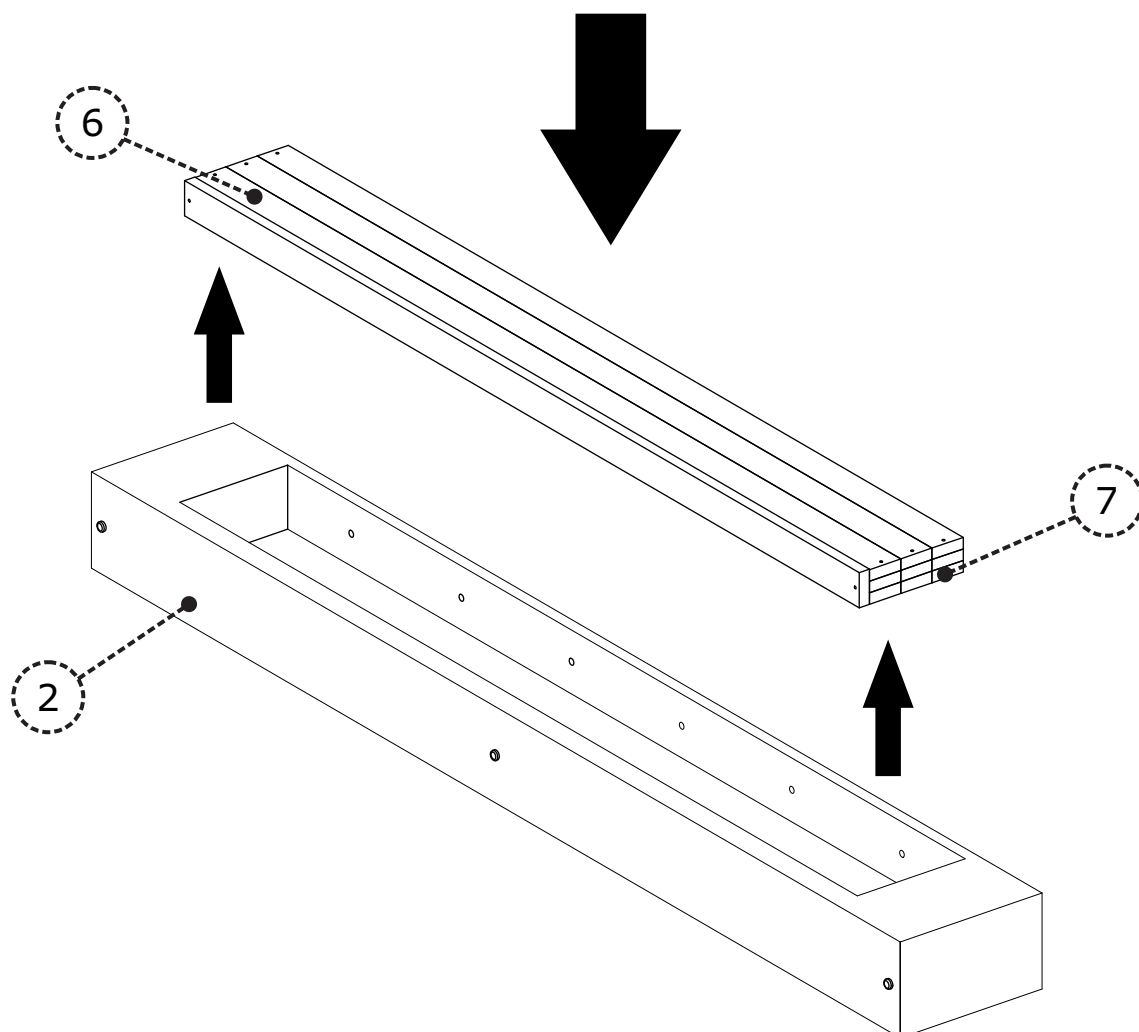


STEP 2

G x 2				
-------	--	--	--	--

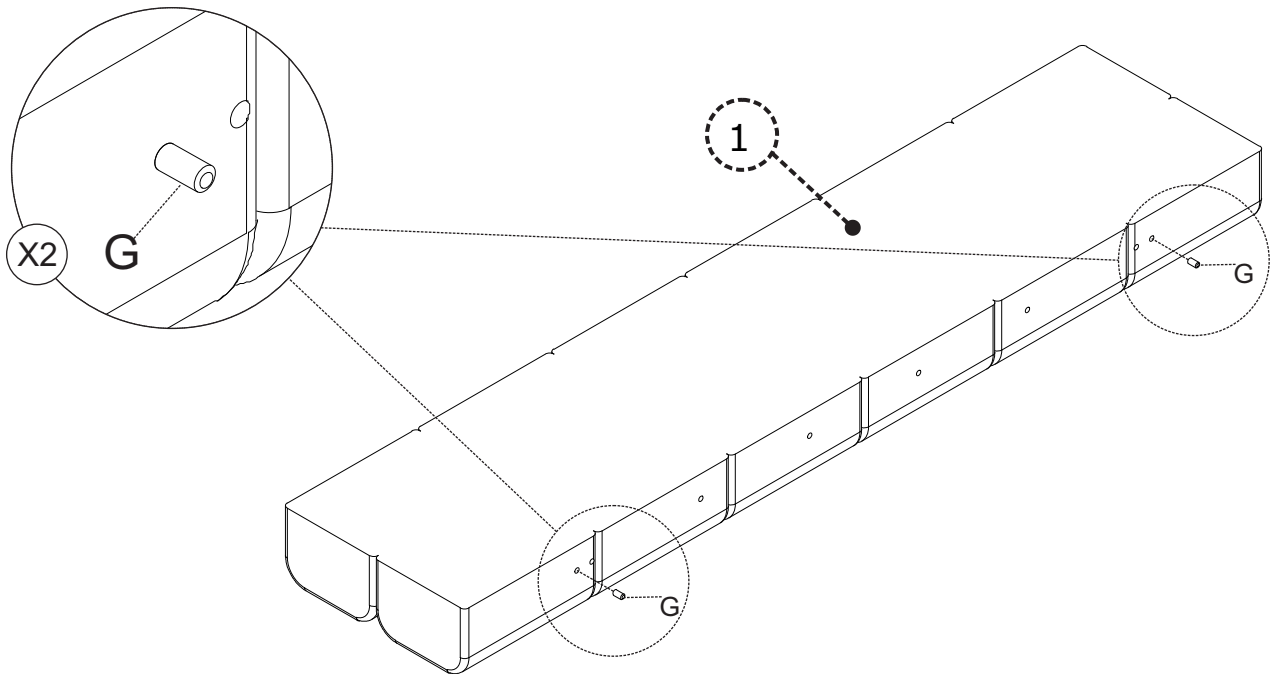


STEP 3

E x 6	B x 6	C x 6	D x 1	
-------	-------	-------	-------	--

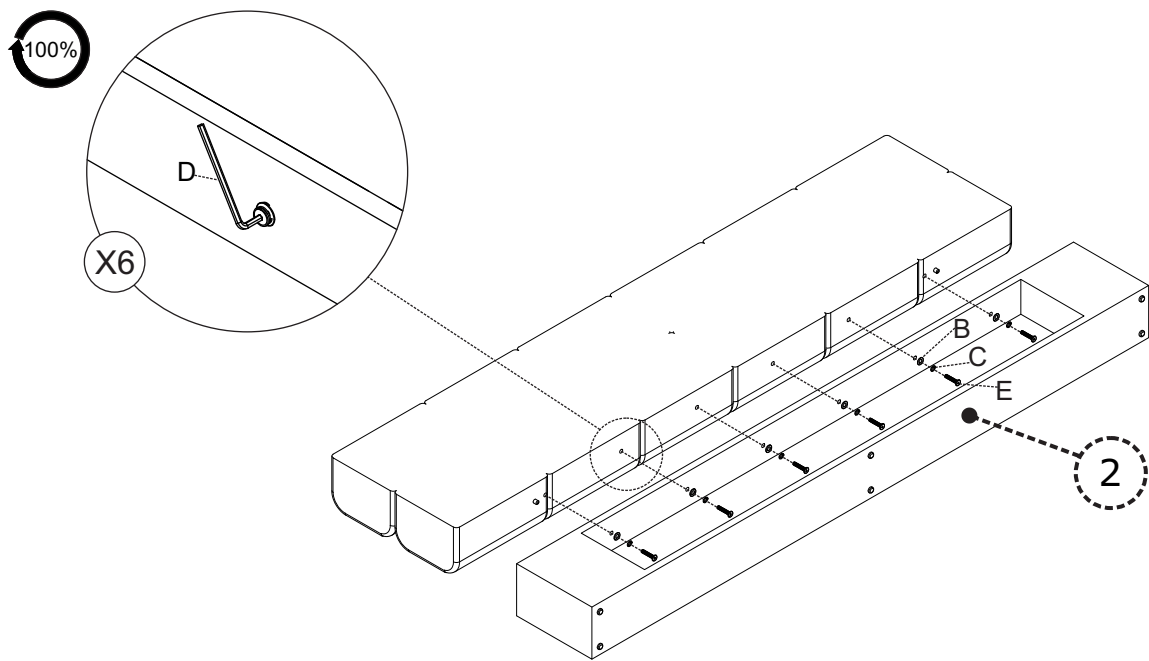


STEP 4

A x 2	B x 2	C x 2	D x 1	
				

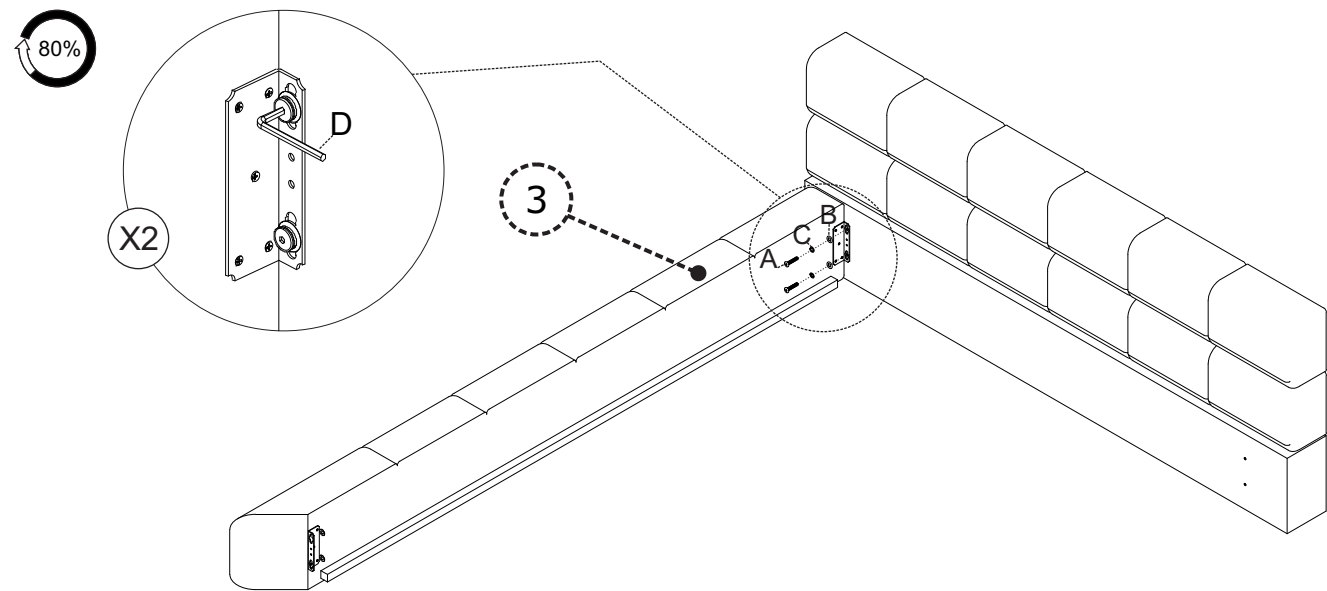


STEP 5

A x 2	B x 2	C x 2	D x 1	
				

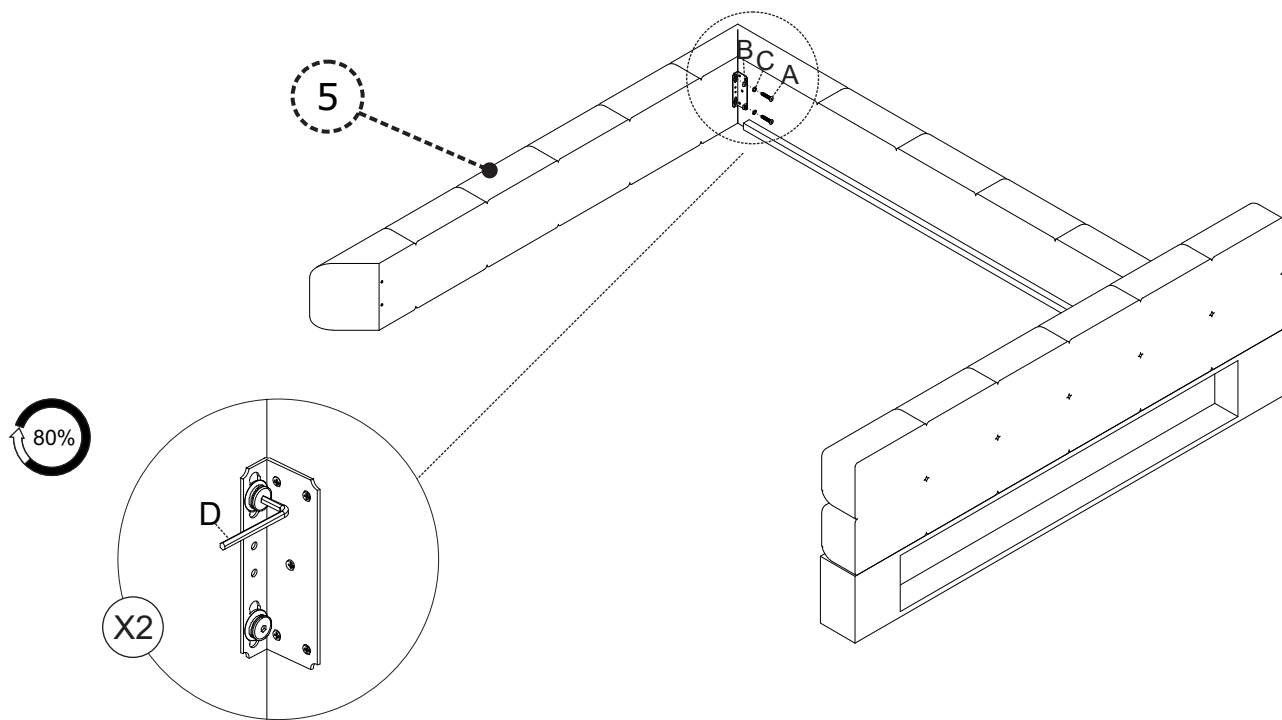


STEP 6

A x 2	B x 2	C x 2	D x 1	
				

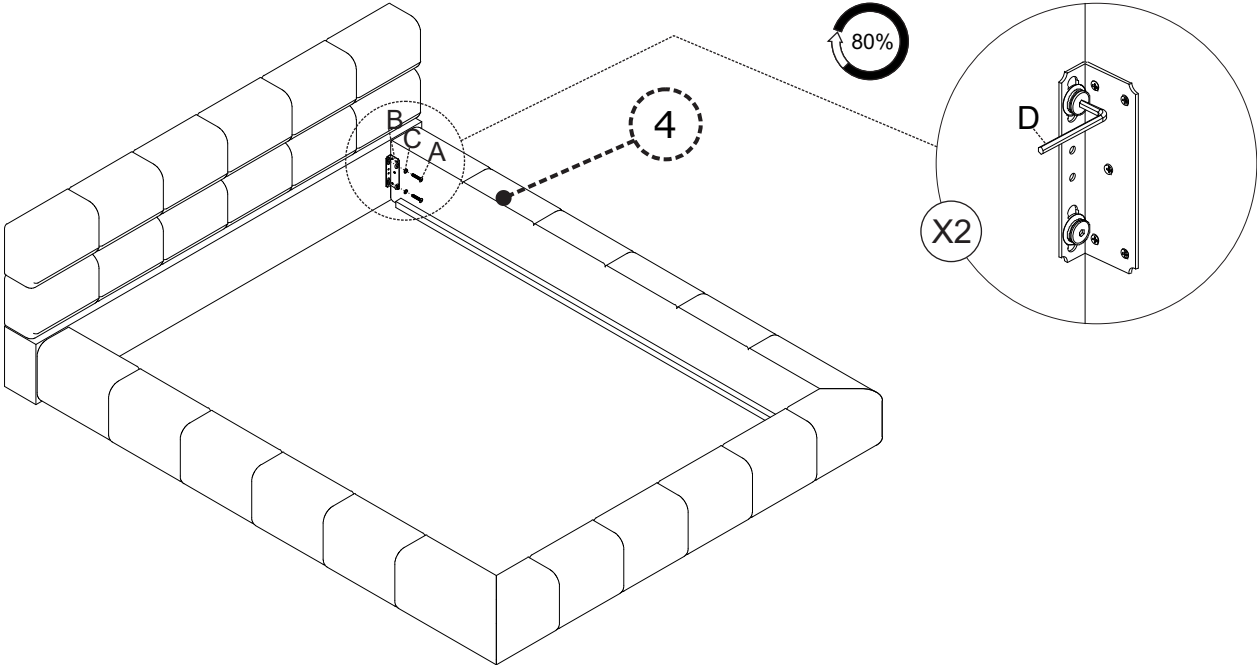


STEP 7

A x 2	B x 2	C x 2	D x 1	
				

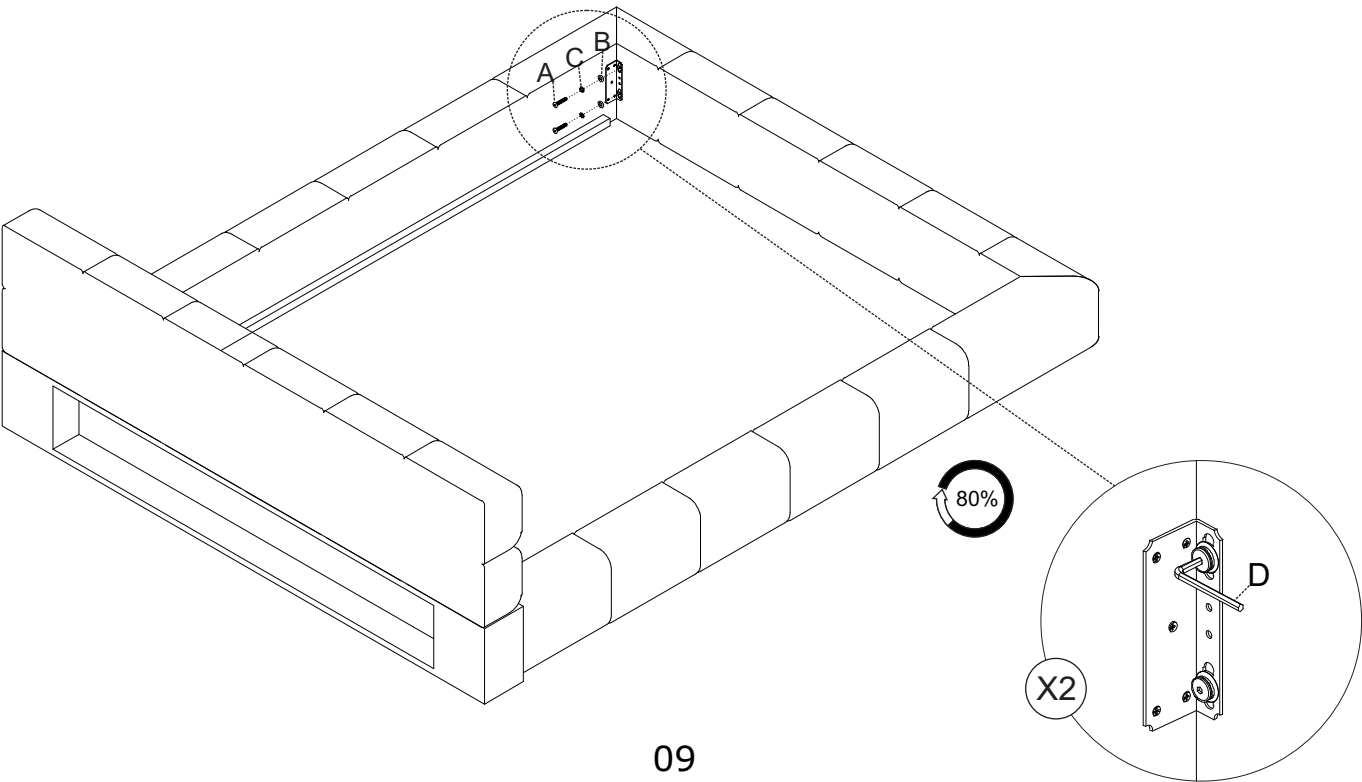

STEP 8

D x 1				
				

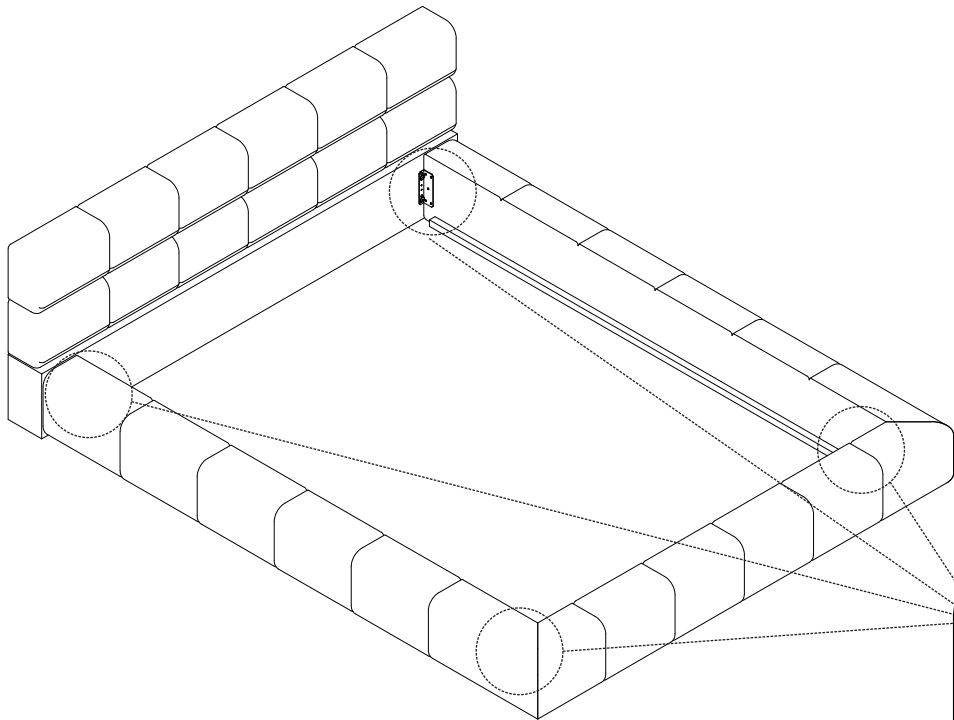


Tighten all screw bolts 100%






STEP 9

H x 3				
				

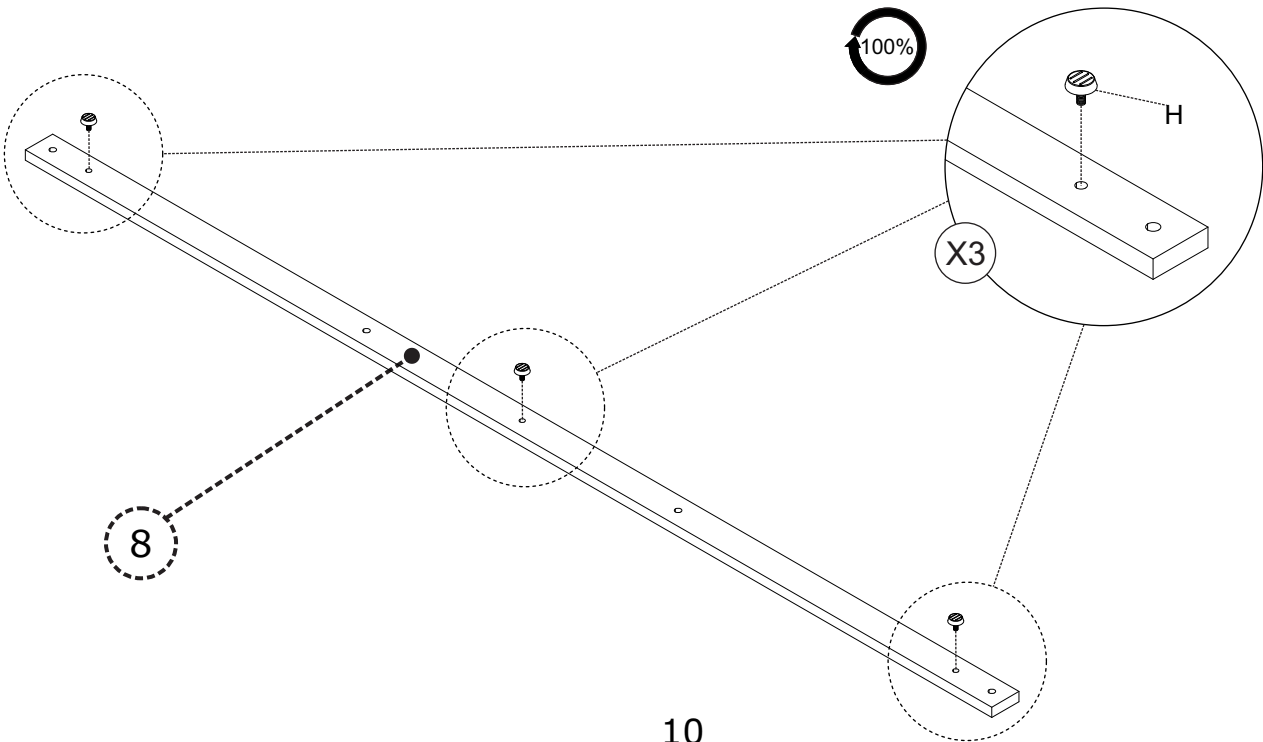


STEP 10

A x 4	B x 4	C x 4	D x 1	
-------	-------	-------	-------	--

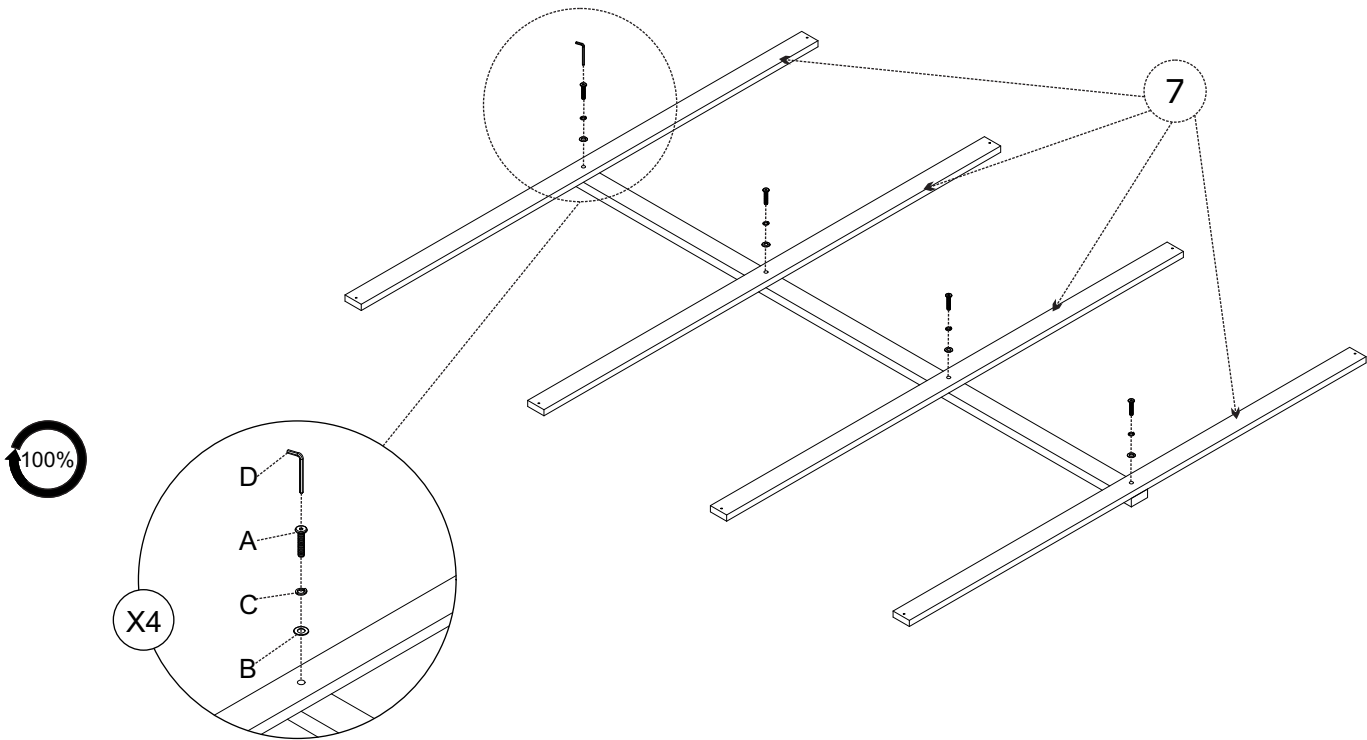



STEP 11

--	--	--	--	--

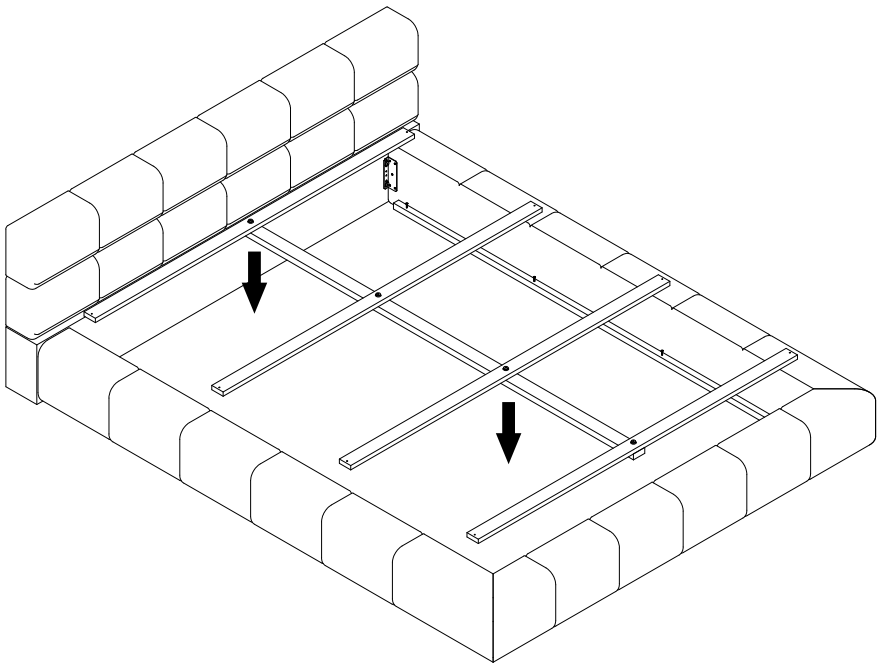

STEP 12

F x 20

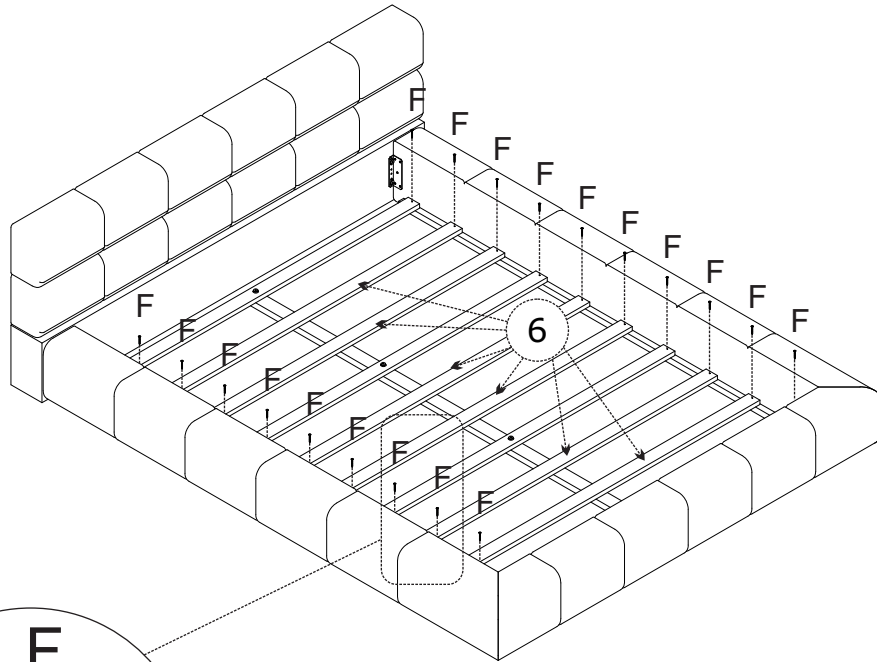

100%

