



1. Rotate end cap 1 to remove out bottom box 2.

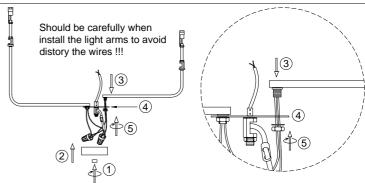


2.Fixed the light arms ③ to the fixture ④ with lock nuts & teeth lock washers ⑤, lock the bottom box ② to the fixture ④ with end cap ①.

(Should be carefully when install the light arms to avoid distory the wires !!!)

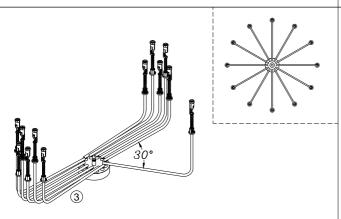


3.Adjust the arms  $\@3$  to suitable position like picture showed. (If the arm loosen, please back to step 2 to lock tighten with lock nuts  $\@3$ .)

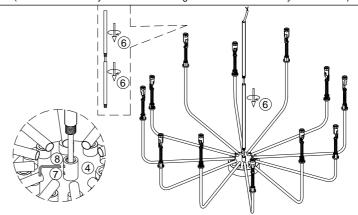


4.Let the wire go through the hanging tube ⑥, rotate to install the tube ⑥ on the connected tube ④,fix it with grub screw ⑦.

(can connect more tube 6 to get suitable height)

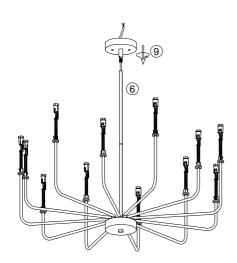

5.Let the wire go through the canopy  $\@$  , rotate to install the canopy on the hanging tube  $\@$ 0.

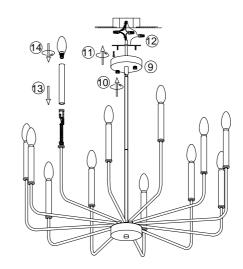

- 6.Install the bracket (1) on the junction box with expansion anchor and screw.
- 7.Connect the wire with connector 12 to your home line.
- 8.Install the fixture on the bracket with nuts (10).
- 9.Put the cylinder tube ③ on the bulb holder and after that install the bulbs ④.

## D0171L-12/D0171XL-16

Please read carefully before installation!!!

Note: Please make sure that the electricity is powered off during installation!

Only a professional electrician should install this kind of product!