
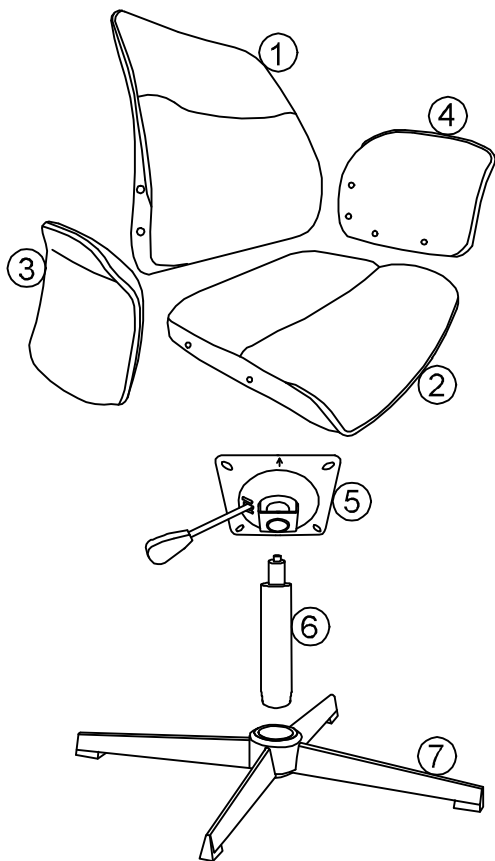





 **A** x8
M6x35mm


 **B** x4
M6x20mm

 **C** x8
M8x22x2mm


 **D** x4
M6x18x1.2mm

 **E** x1
M6


1

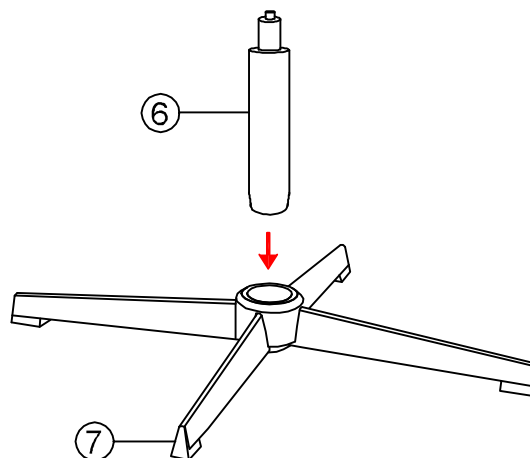

2

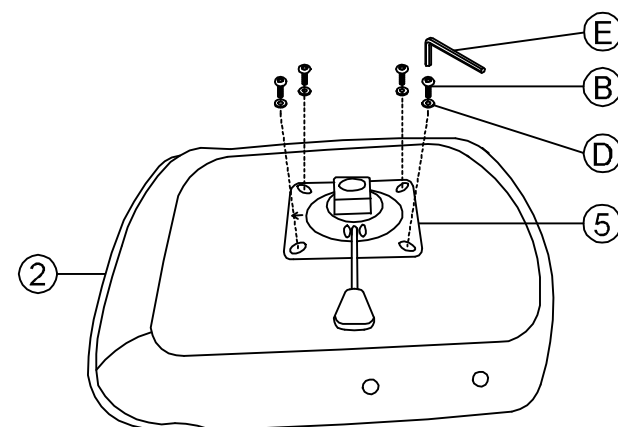


3

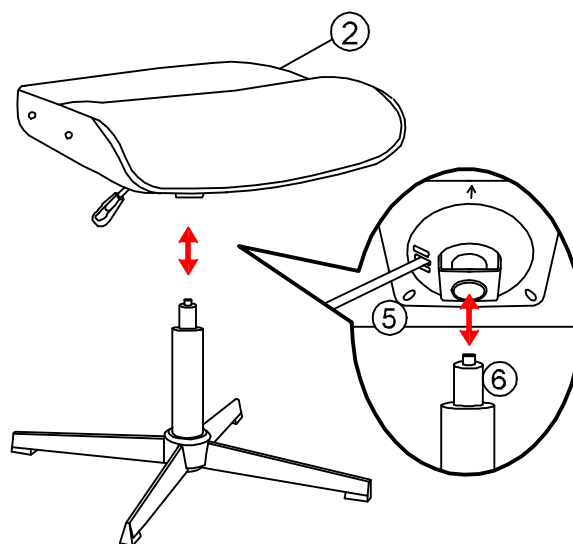


4


FR-Dézippez pour révéler les trous pré-perçés.
EN-Unzip to reveal pre-drilled holes.
DE-Entzippen, um vorgebohrte Löcher freizulegen.
ES-Desabrocha para revelar los agujeros preperforados.
IT-Sbottona per rivelare i fori preforati.

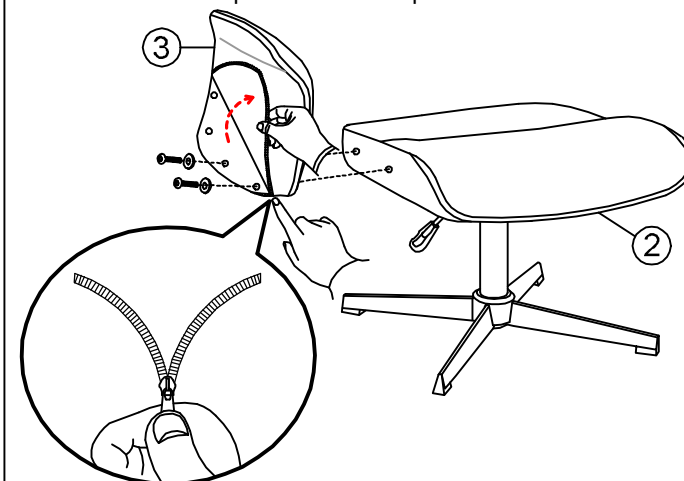


5

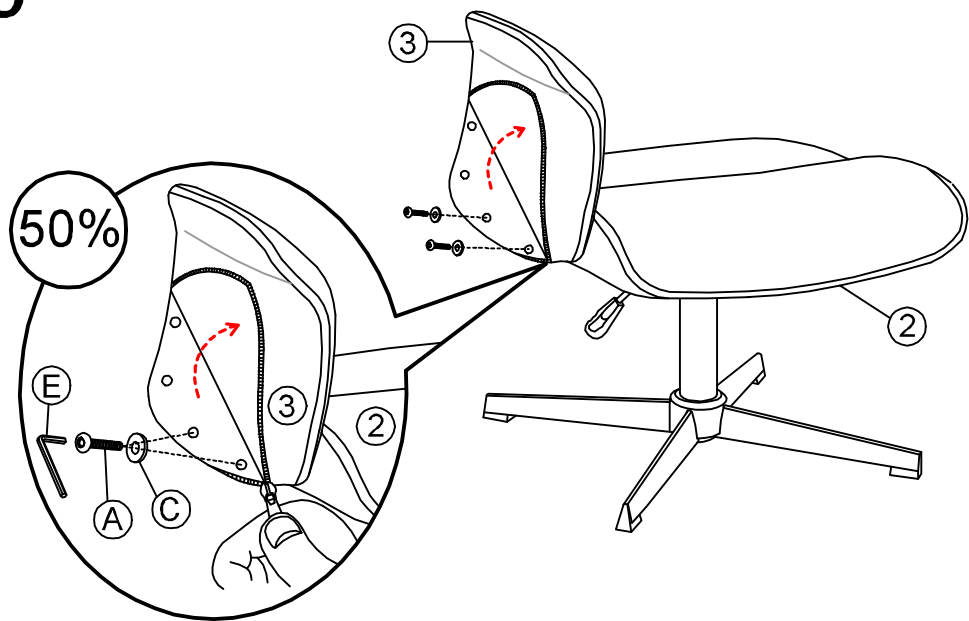


6

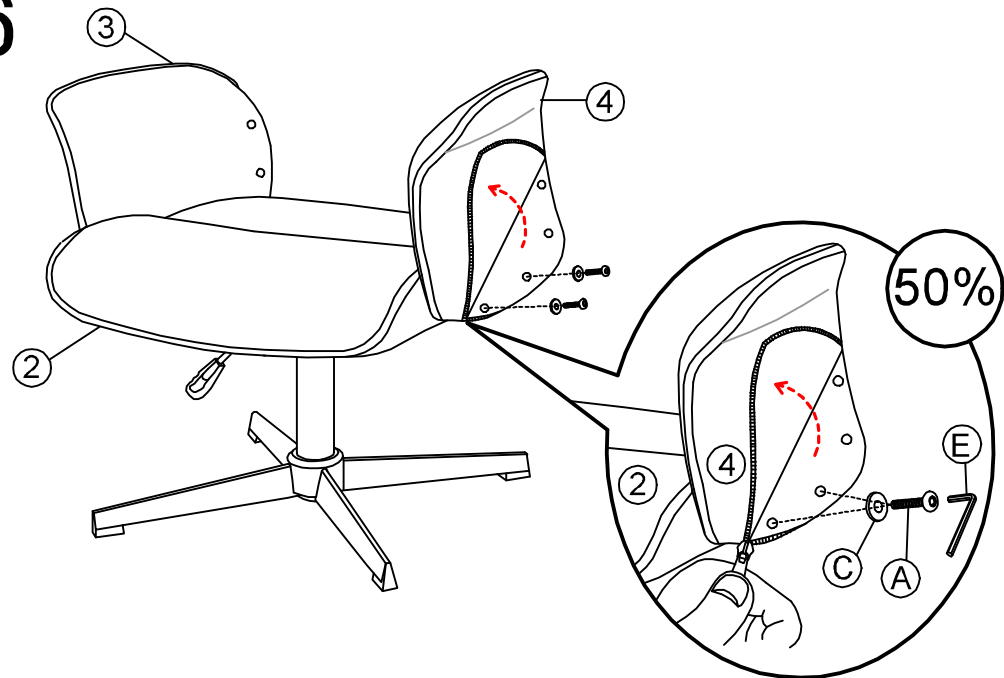


7

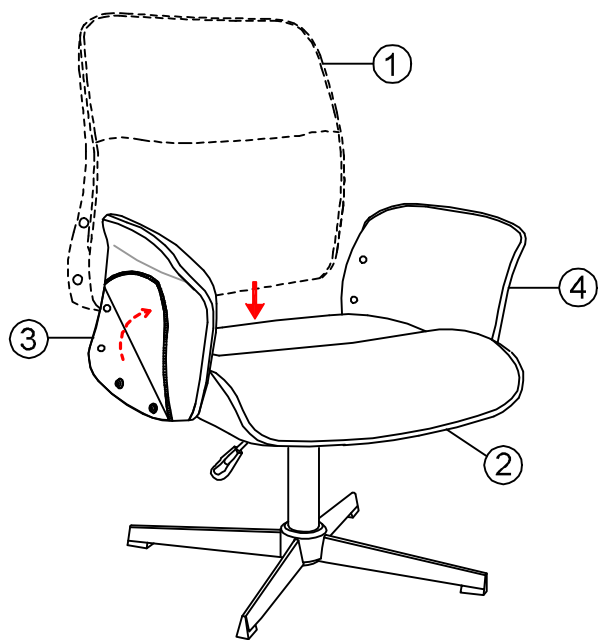


8

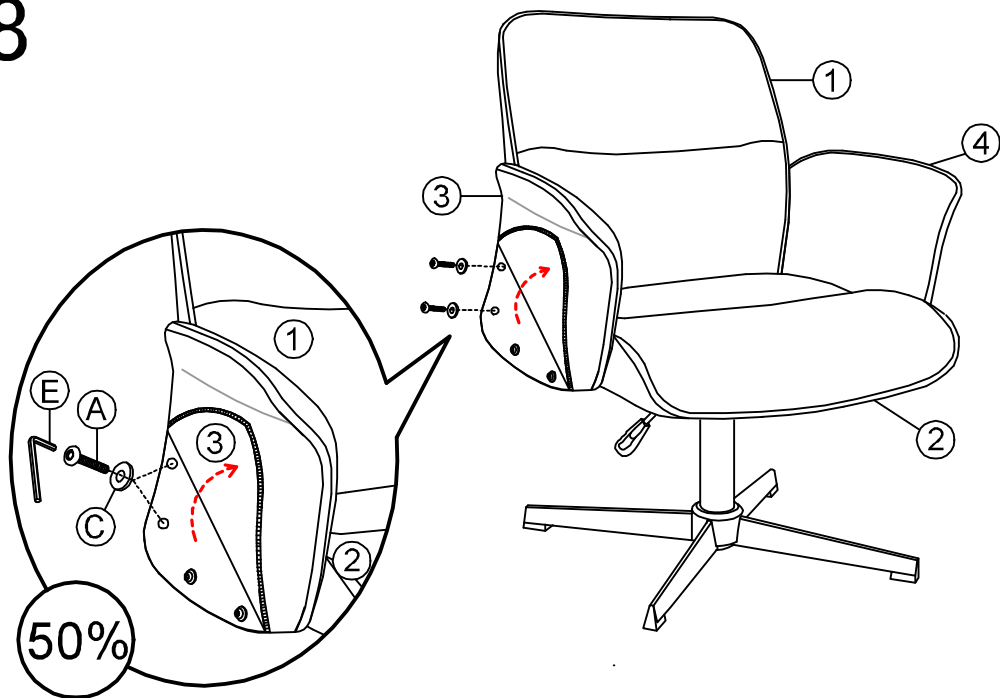


9

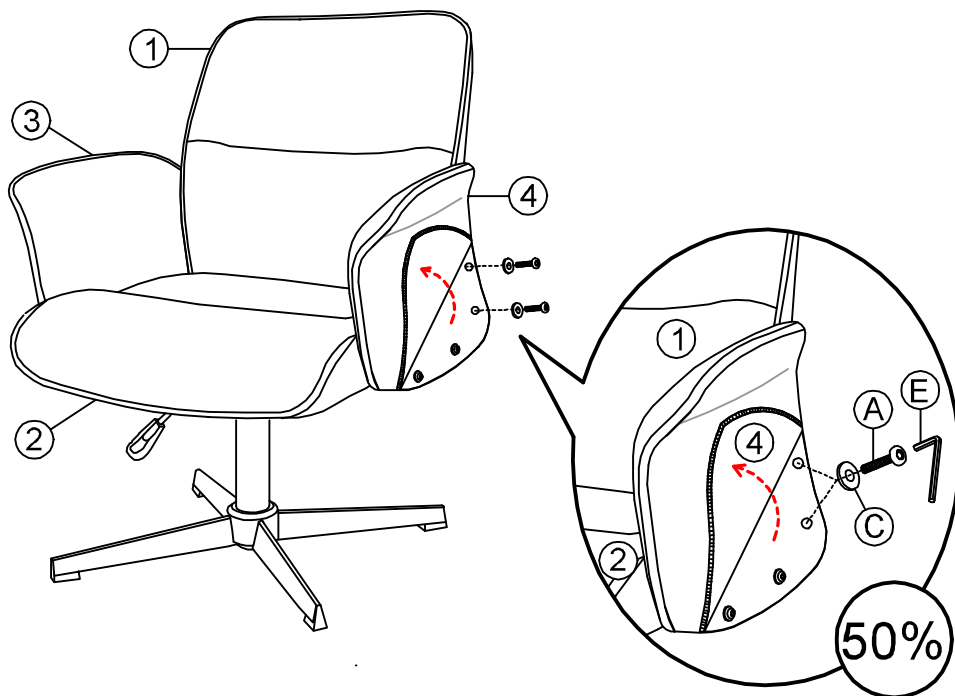

10

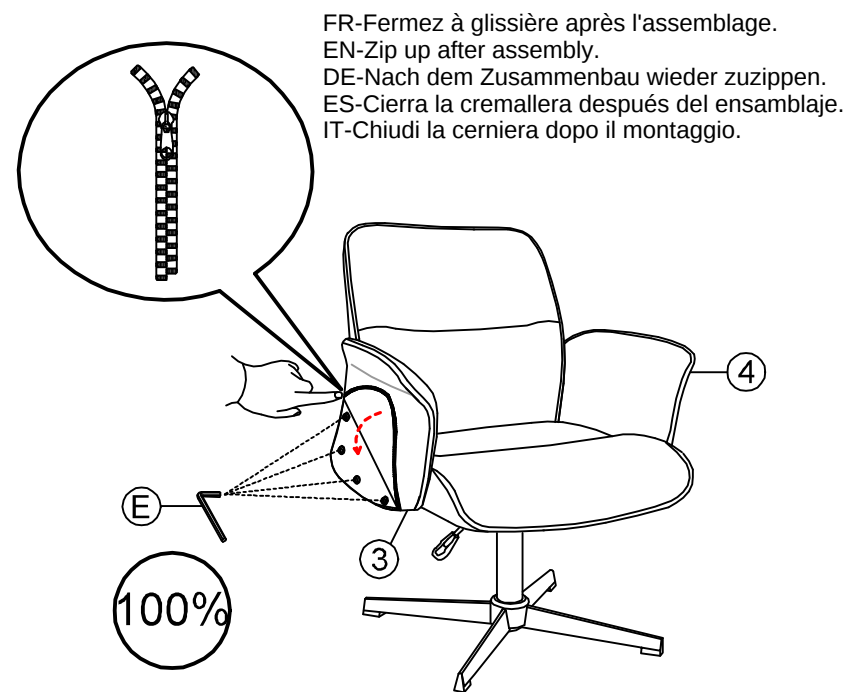

11

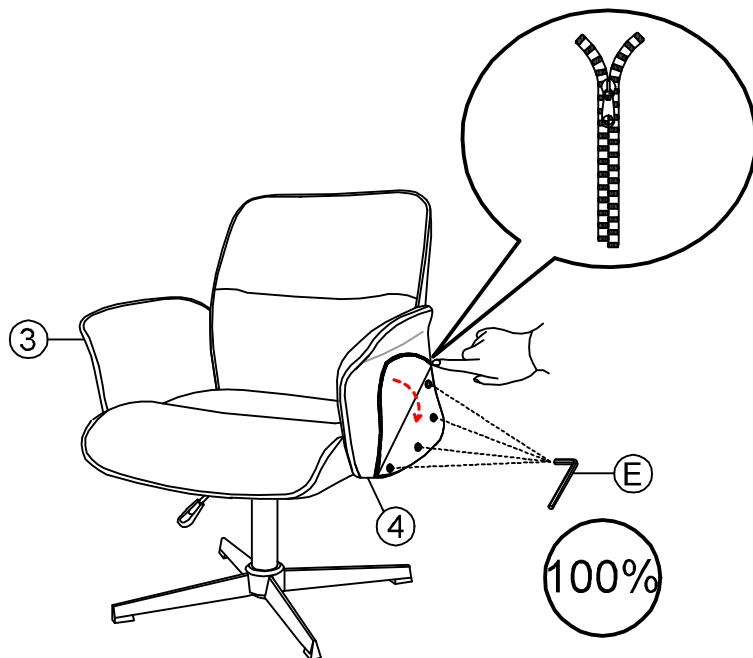

12

