


HULALA

H O M E

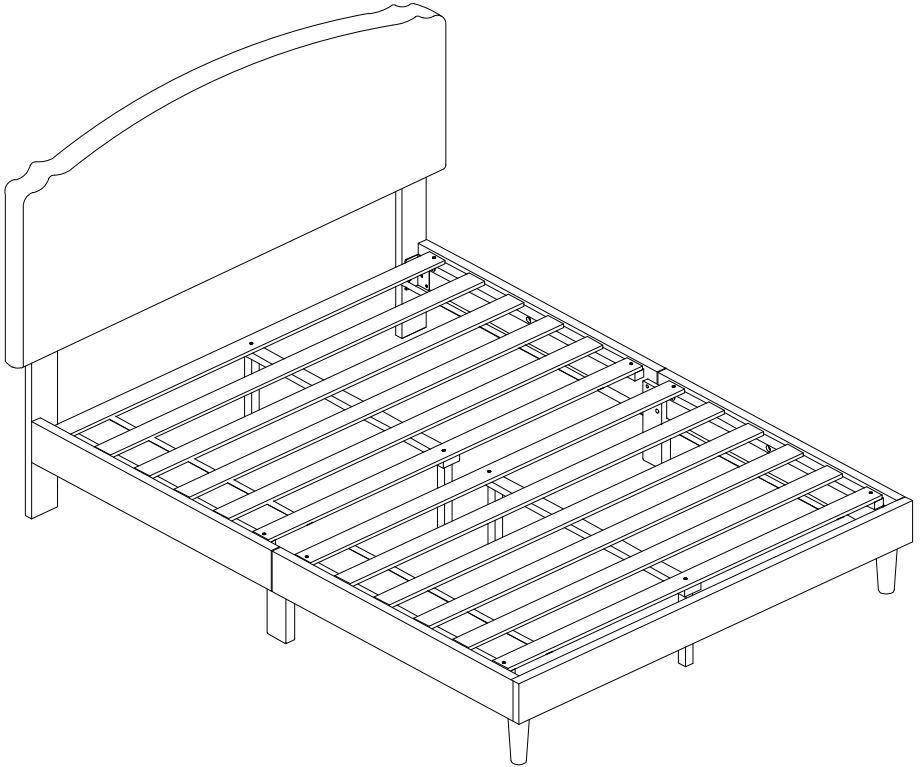

ITEM NO. BDIS0925-QB

NOTE:

This brochure contains IMPORTANT safty info. Please read and keep for future reference.


MAINTAINANCE AND WARNING

- 1.Keep furniture away from heat sources.
- 2.Do not clean furniture with harsh cleaner or polishes.Do not use detergents,solvents,abrasives,spray packs or leather cleaner. Use non-color mild soa with warm water to clean spills(Mix 1:10 soap to water).
- 3.Do not place furniture under direct sunlight,material will possibly fade over time.
- 4.Do not use on site dry cleaning machine.Children should not climb or jump on the furniture.
- 5.Do not write on furniture that is not protectedby a padded barrier.
- 6.Not for commercial use,only for residential use.









EXPLOSIVE VIEW

Reminder : Fabric slip cover is removeable.

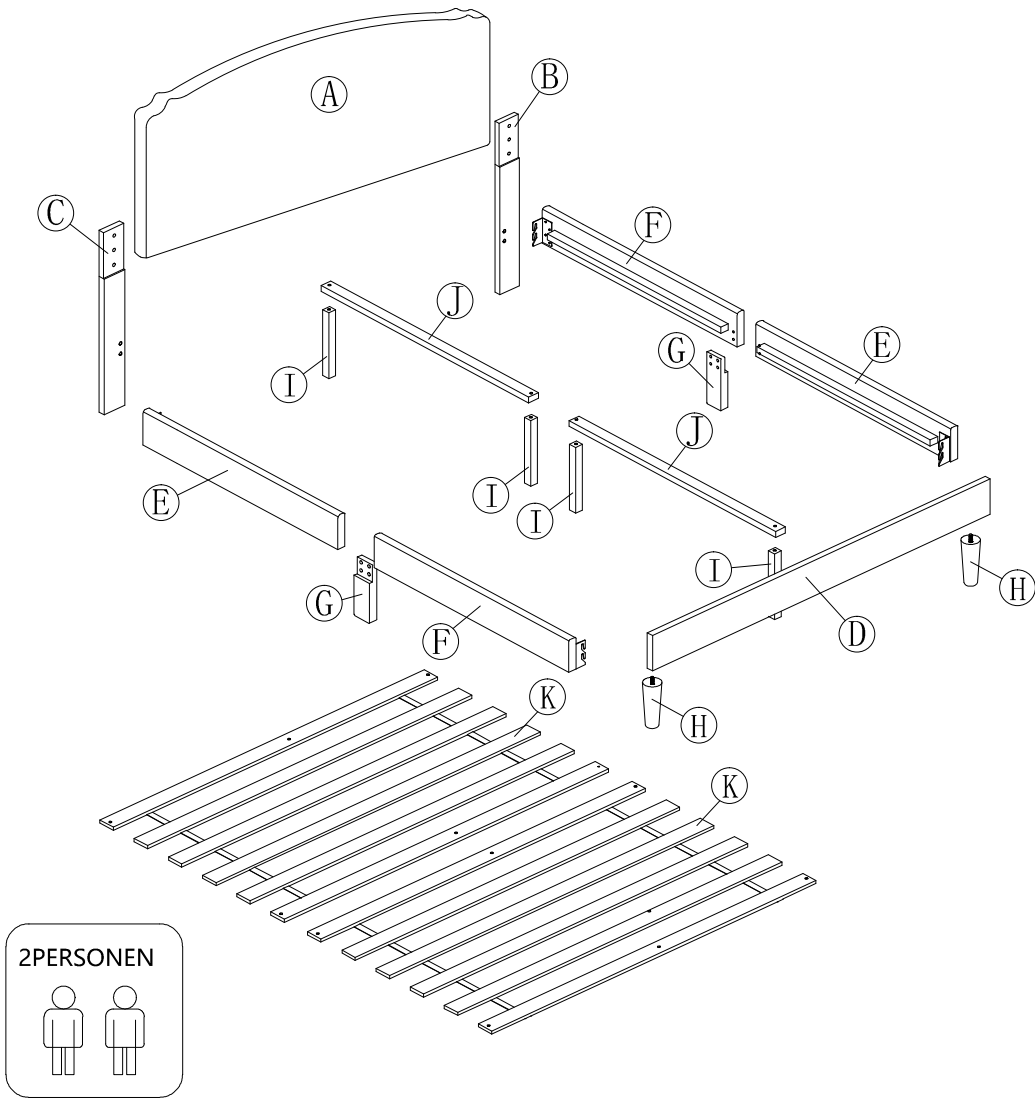

PARTS LIST

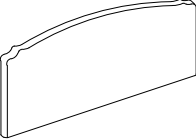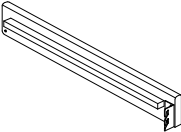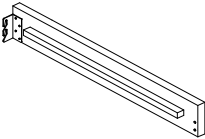A x1 	B x1 	C x1 	D x1 
E x2 	F x2 	G x2 	H x2 
I x4 	J x2 	K x2 	

HARDWARE LIST

#1	x8	#2	x6	#3	x4	#4	x10	#5	x10	#6	x8
											
JCBC M8 X 25MM		JCBC M6 X 40MM		JCBC M6 X 60MM		SPRING WASHER M6 X 12MM		FLAT WASHER M6 X 19MM		SCREW M4 X 32MM	

#7	x8	#8	x16
			
JCBC M8 X 30MM		FLAT WASHER M8 X 19MM	

TOOL LIST

#9	x1	#10	x1	
				
ALLEN WRENCH M5		ALLEN WRENCH M4		
				Provide for oneself

HARDWARE SPARE LIST


#1	x1	#2	x1	#3	x1	#4	x1	#5	x1	#6	x1
											
JCBC M8 X 25MM		JCBC M8 X 40MM		JCBC M6 X 60MM		SPRING WASHER M6 X 12MM		FLAT WASHER M6 X 19MM		SCREW M4 X 32MM	

#7	x1	#8	x1
			
JCBC M8 X 30MM		FLAT WASHER M8 X 19MM	

ASSEMBLY INSTRUCTIONS


STEP-1

NOTE : Insert the fabric slip cover into the part B and part C.

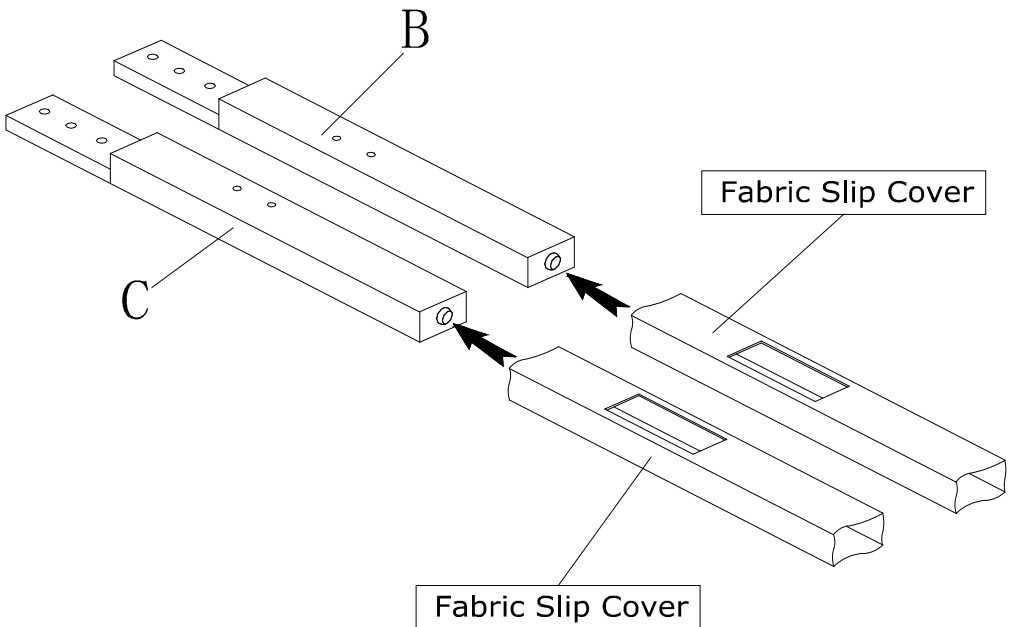

ASSEMBLY INSTRUCTIONS

STEP-2

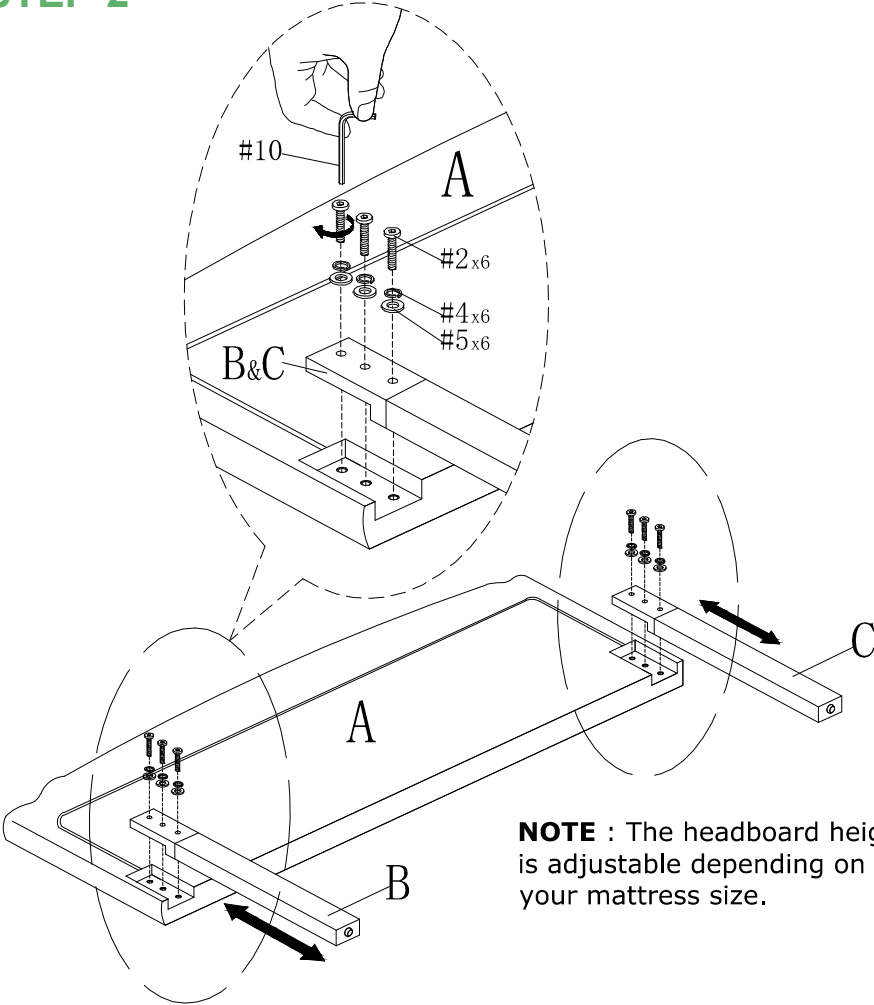


NOTE : The headboard height is adjustable depending on your mattress size.

#2	x6	#4	x6	#5	x6	#10	x1
							
JCBC M6 X 40MM		SPRING WASHER M6 X 12MM		FLAT WASHER M6 X 19MM		ALLEN WRENCH M4	

ASSEMBLY INSTRUCTIONS


STEP-3

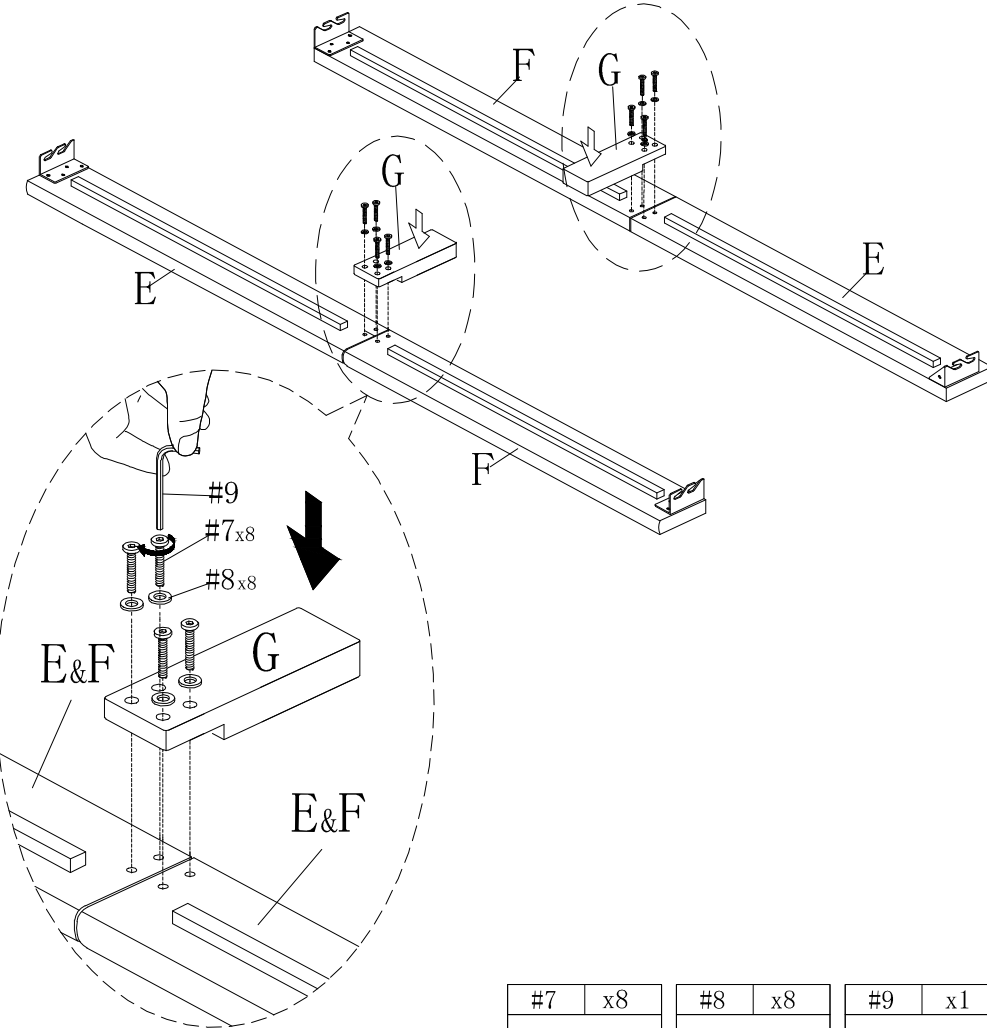

#7	x8	#8	x8	#9	x1
					
JCBC M8 X 30MM		FLAT WASHER M8 X 19MM		ALLEN WRENCH M5	


ASSEMBLY INSTRUCTIONS

STEP-4

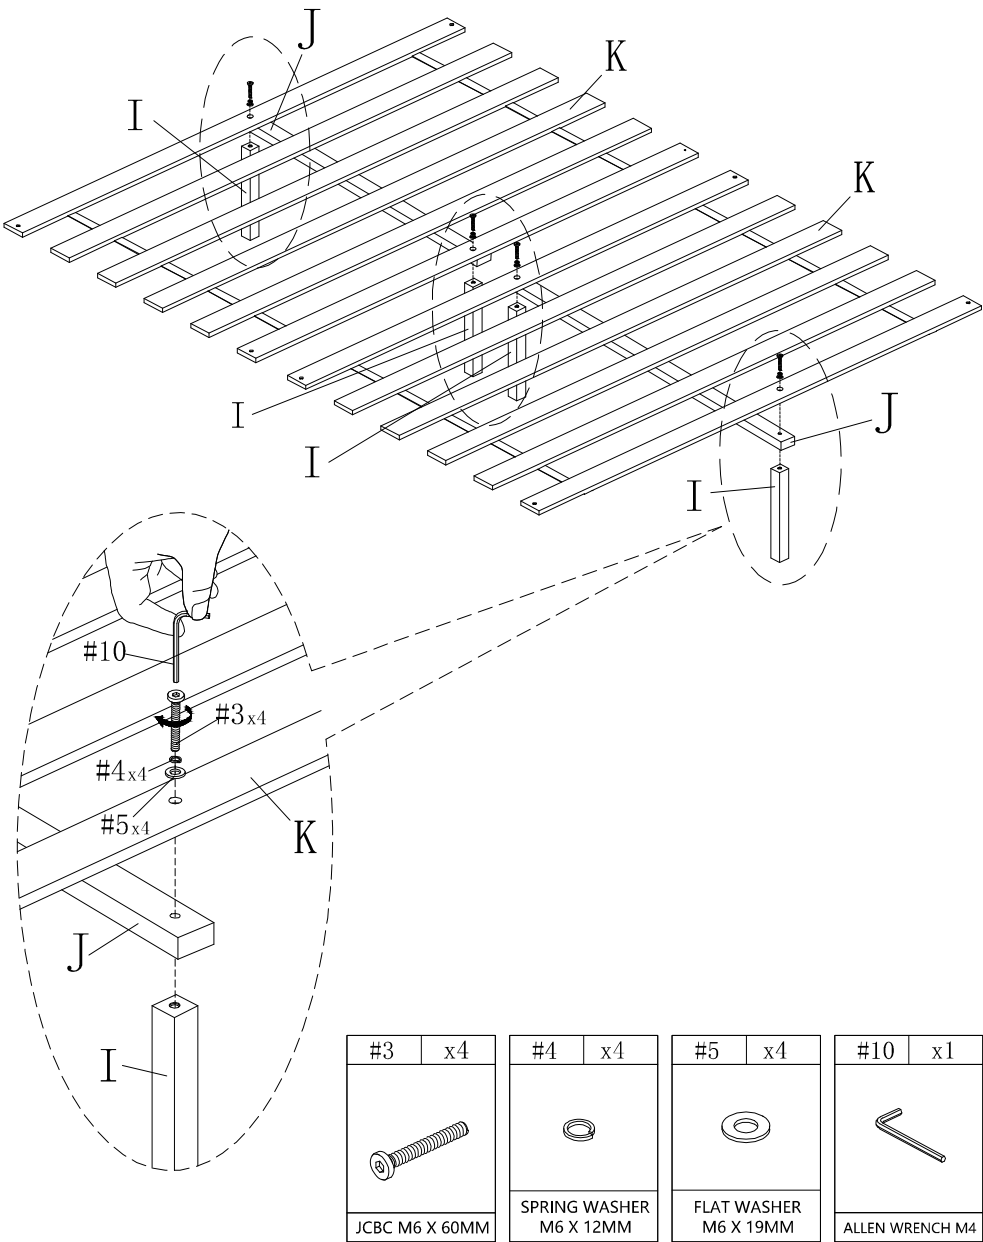

ASSEMBLY INSTRUCTIONS

STEP-5

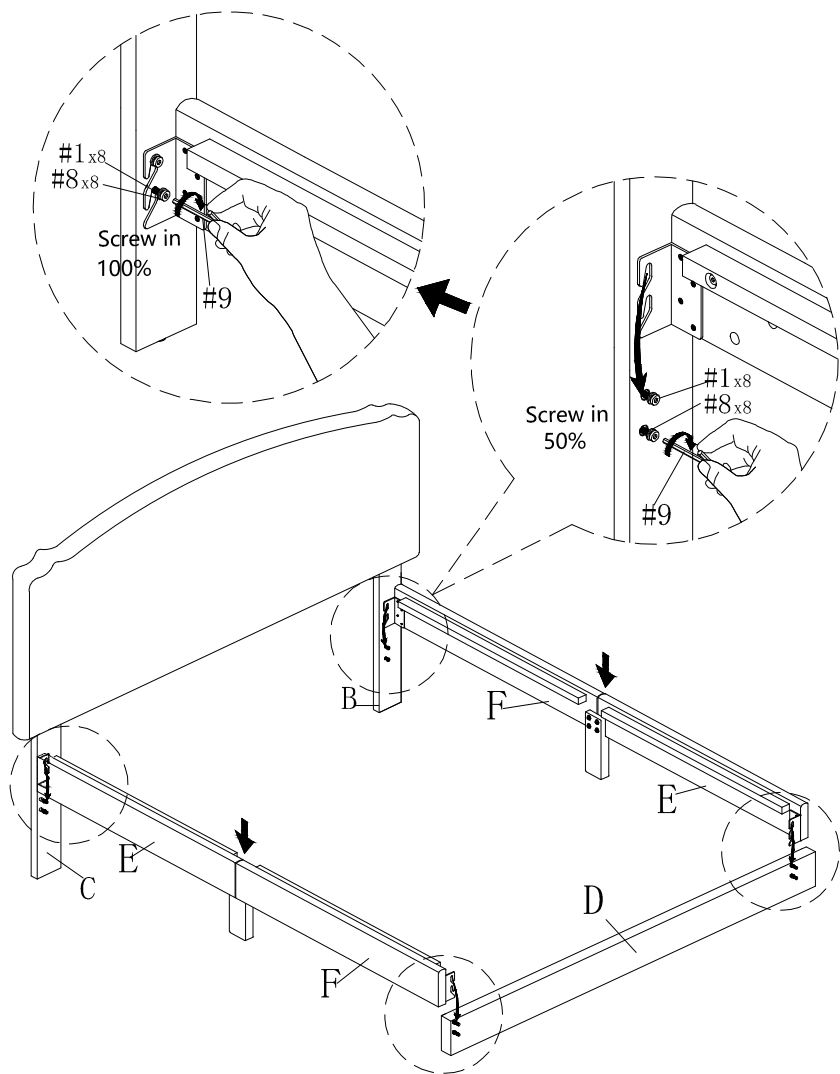


#1	x8
	
JCBC M8 X 25MM	

#8	x8
	
FLAT WASHER M8 X 19MM	

#9	x1
	
ALLEN WRENCH M5	


ASSEMBLY INSTRUCTIONS

STEP-6

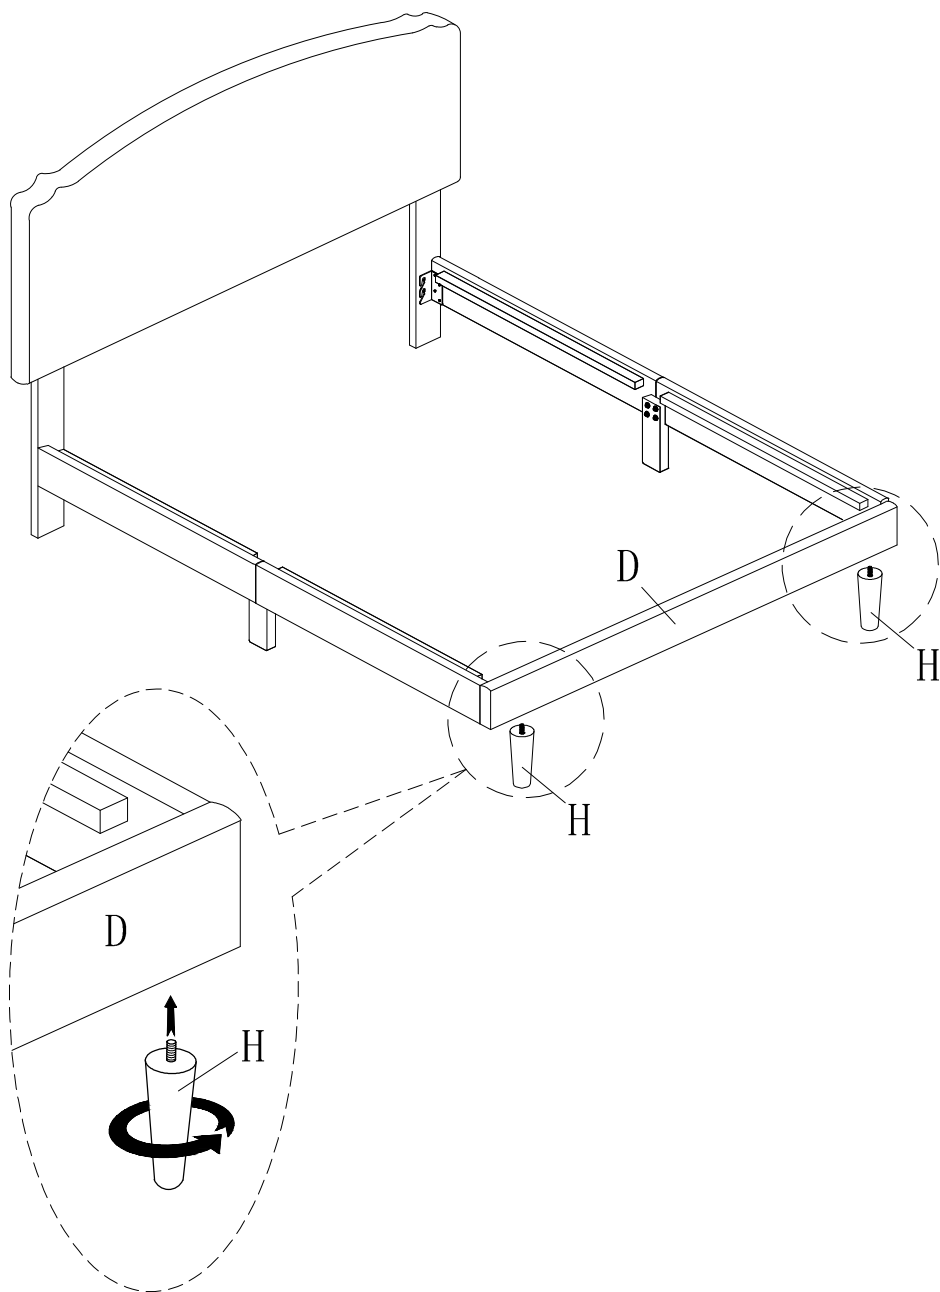

ASSEMBLY INSTRUCTIONS


STEP-7

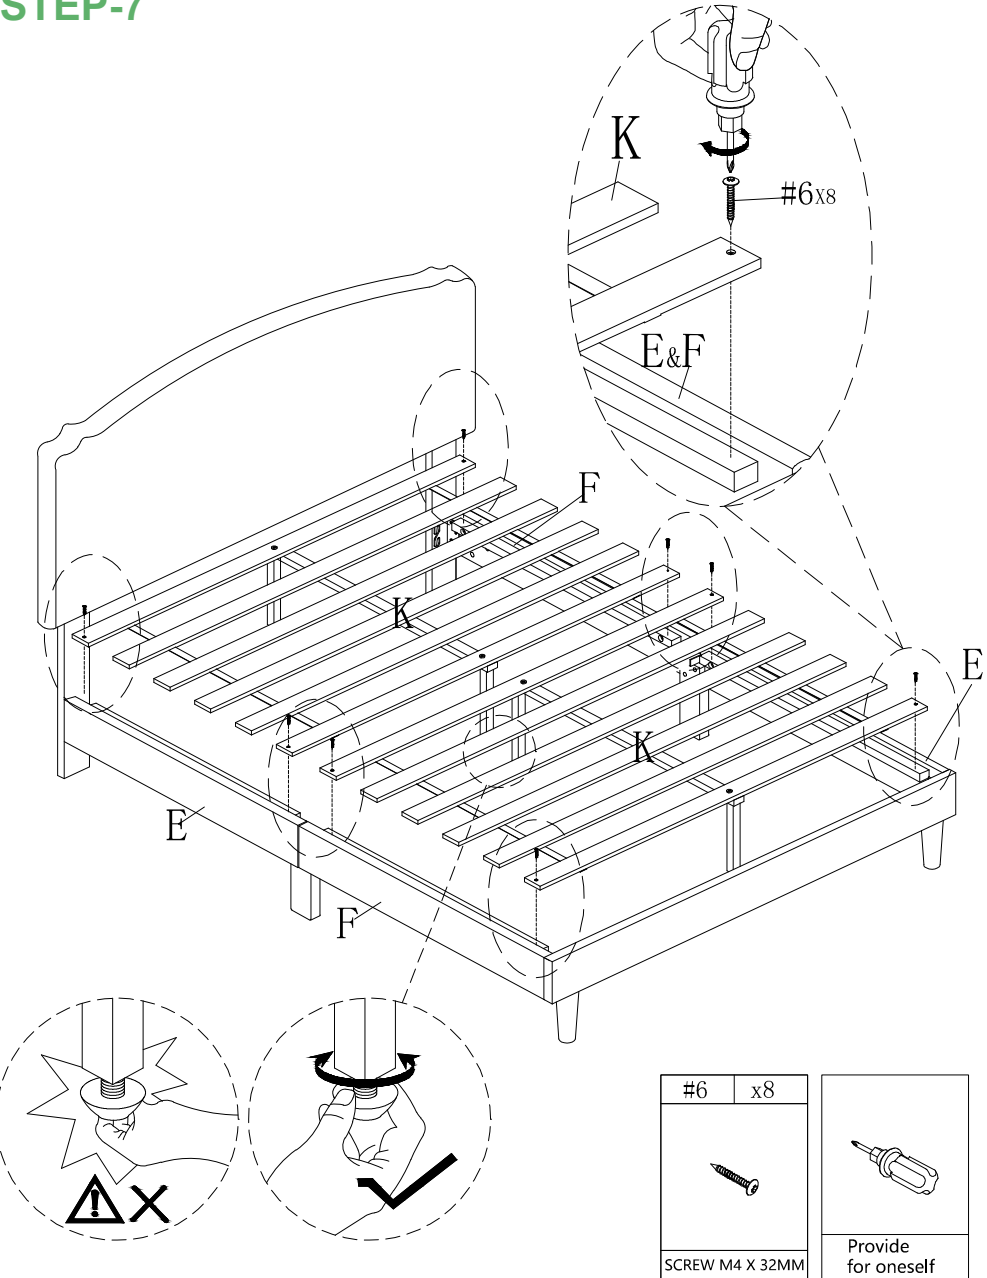

ASSEMBLY INSTRUCTIONS

STEP-8


NOTE : Insert the fabric slip cover into the part A.

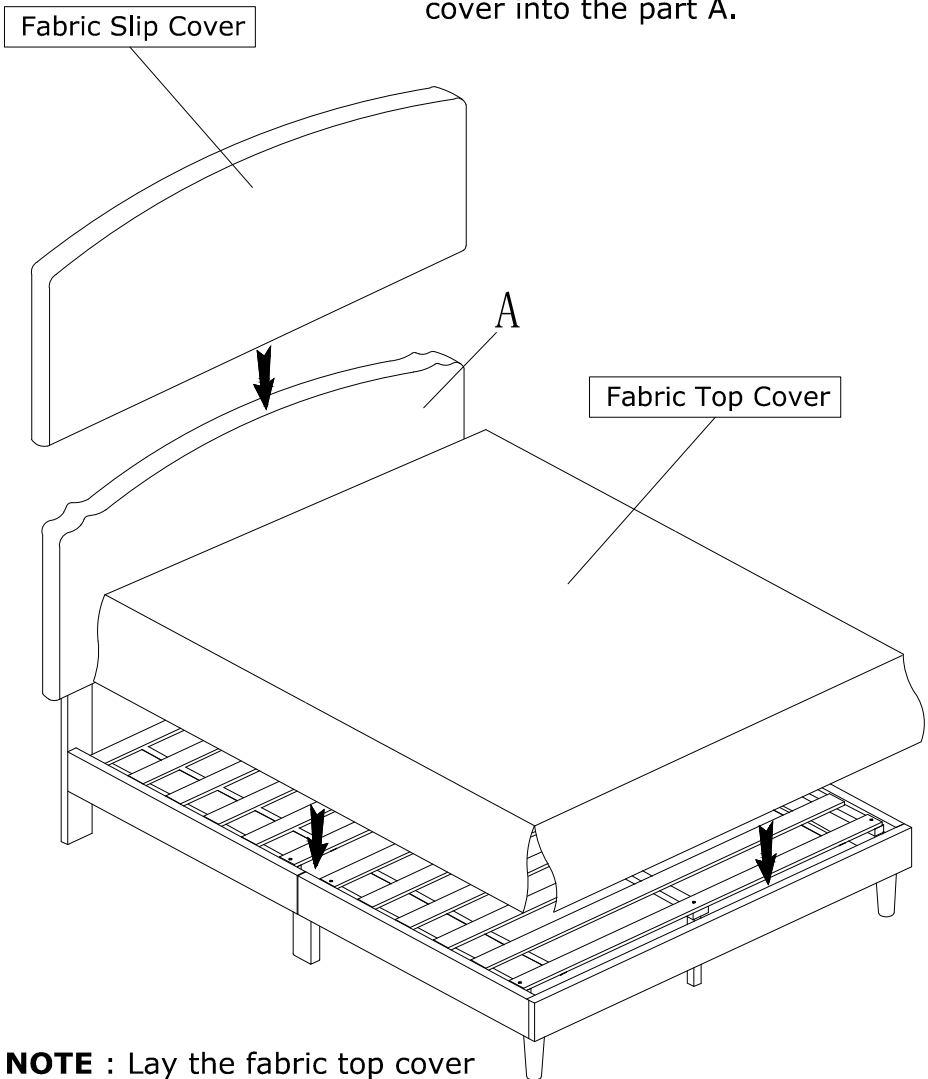

NOTE : Lay the fabric top cover on the footboard, side rail and wooden slat.

ASSEMBLY INSTRUCTIONS

STEP-9

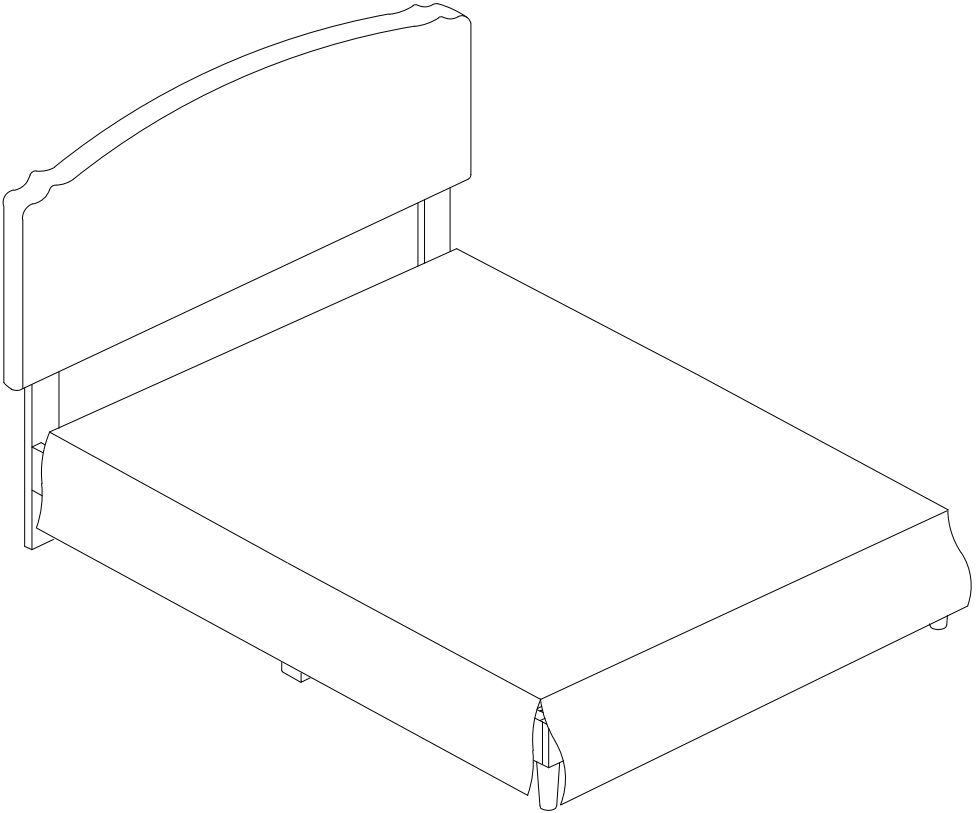

Assembly Completed

WARRANTY

1. We strive to offer high-quality products, and we also try our best to satisfy each and every customer that orders from us with product or service as needed.
2. We provide 30 days warranty starting from the time you receive the item. Each customer must provide a record of their order such as the order number, or item receipt for any items that are out of the warranty period you may also still receive.
3. Replacement parts by purchasing them with our company if they are available.

Are you having difficulty
With assembly? Missing parts?
Please send email with your order No to
customerservice@hulalahome.com
For return, please check the return policy with
the retailer or market place you bought from.

Appreciate your purchasing from us.
Pop up your life by our furniture piece!