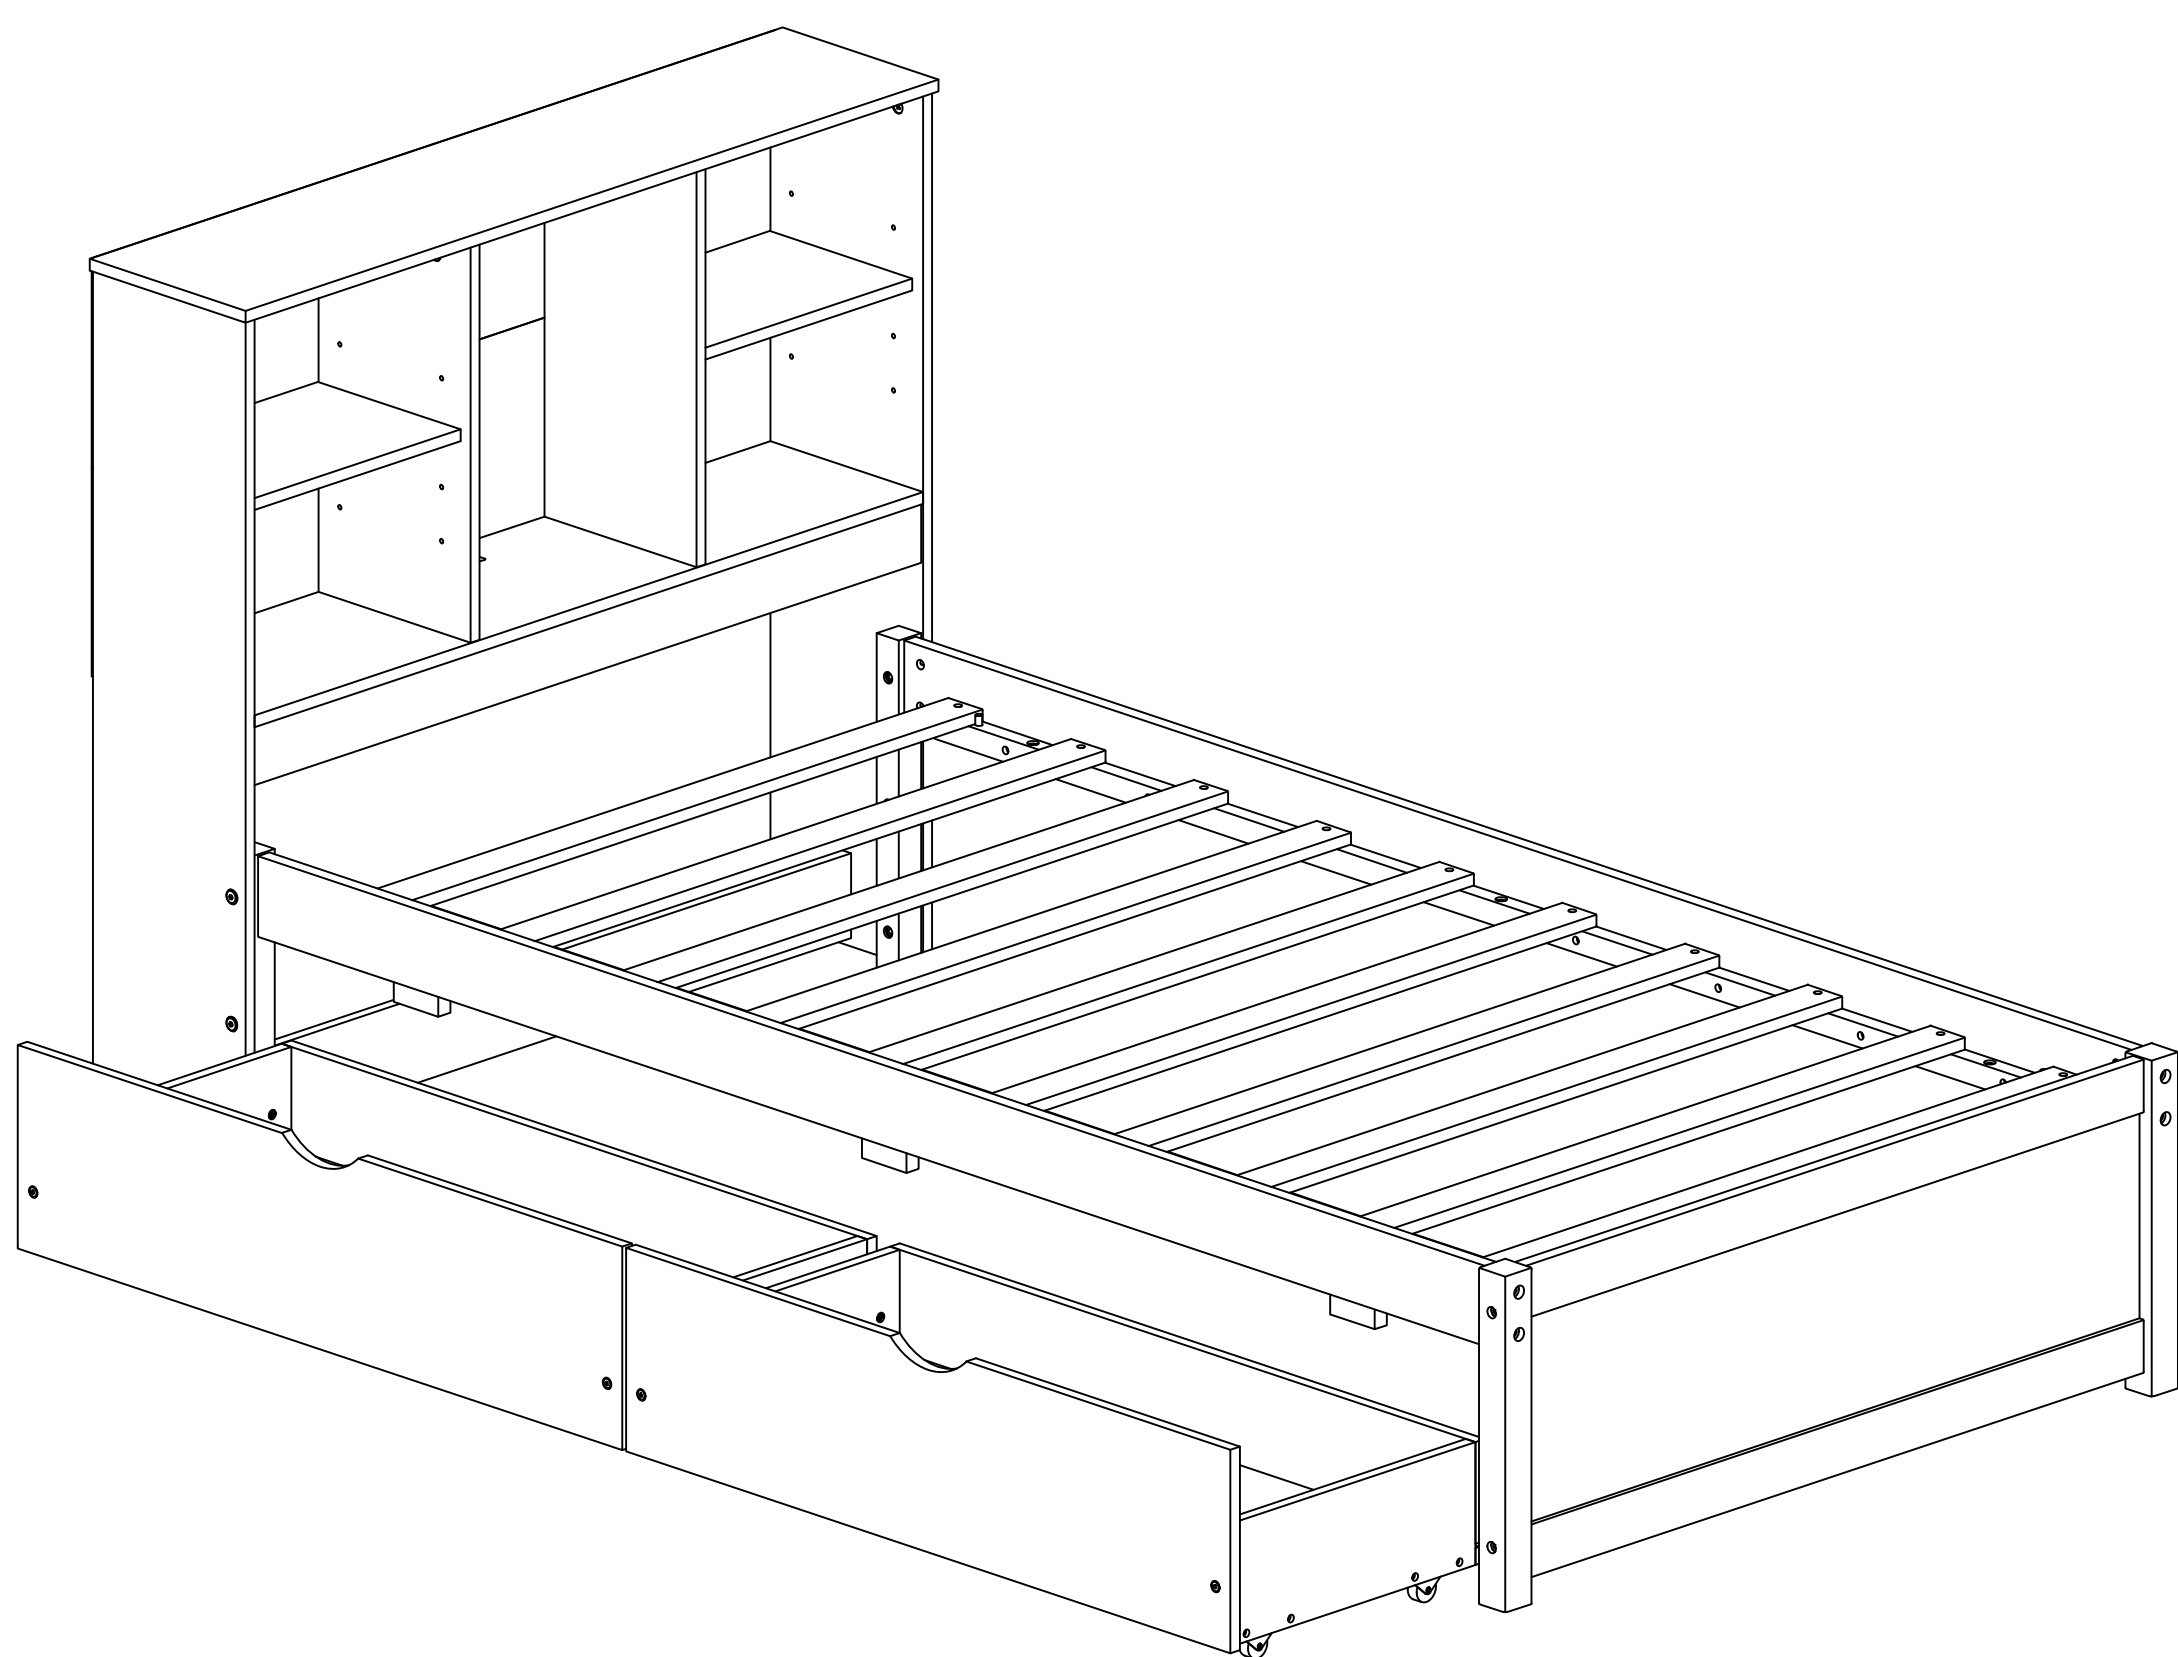
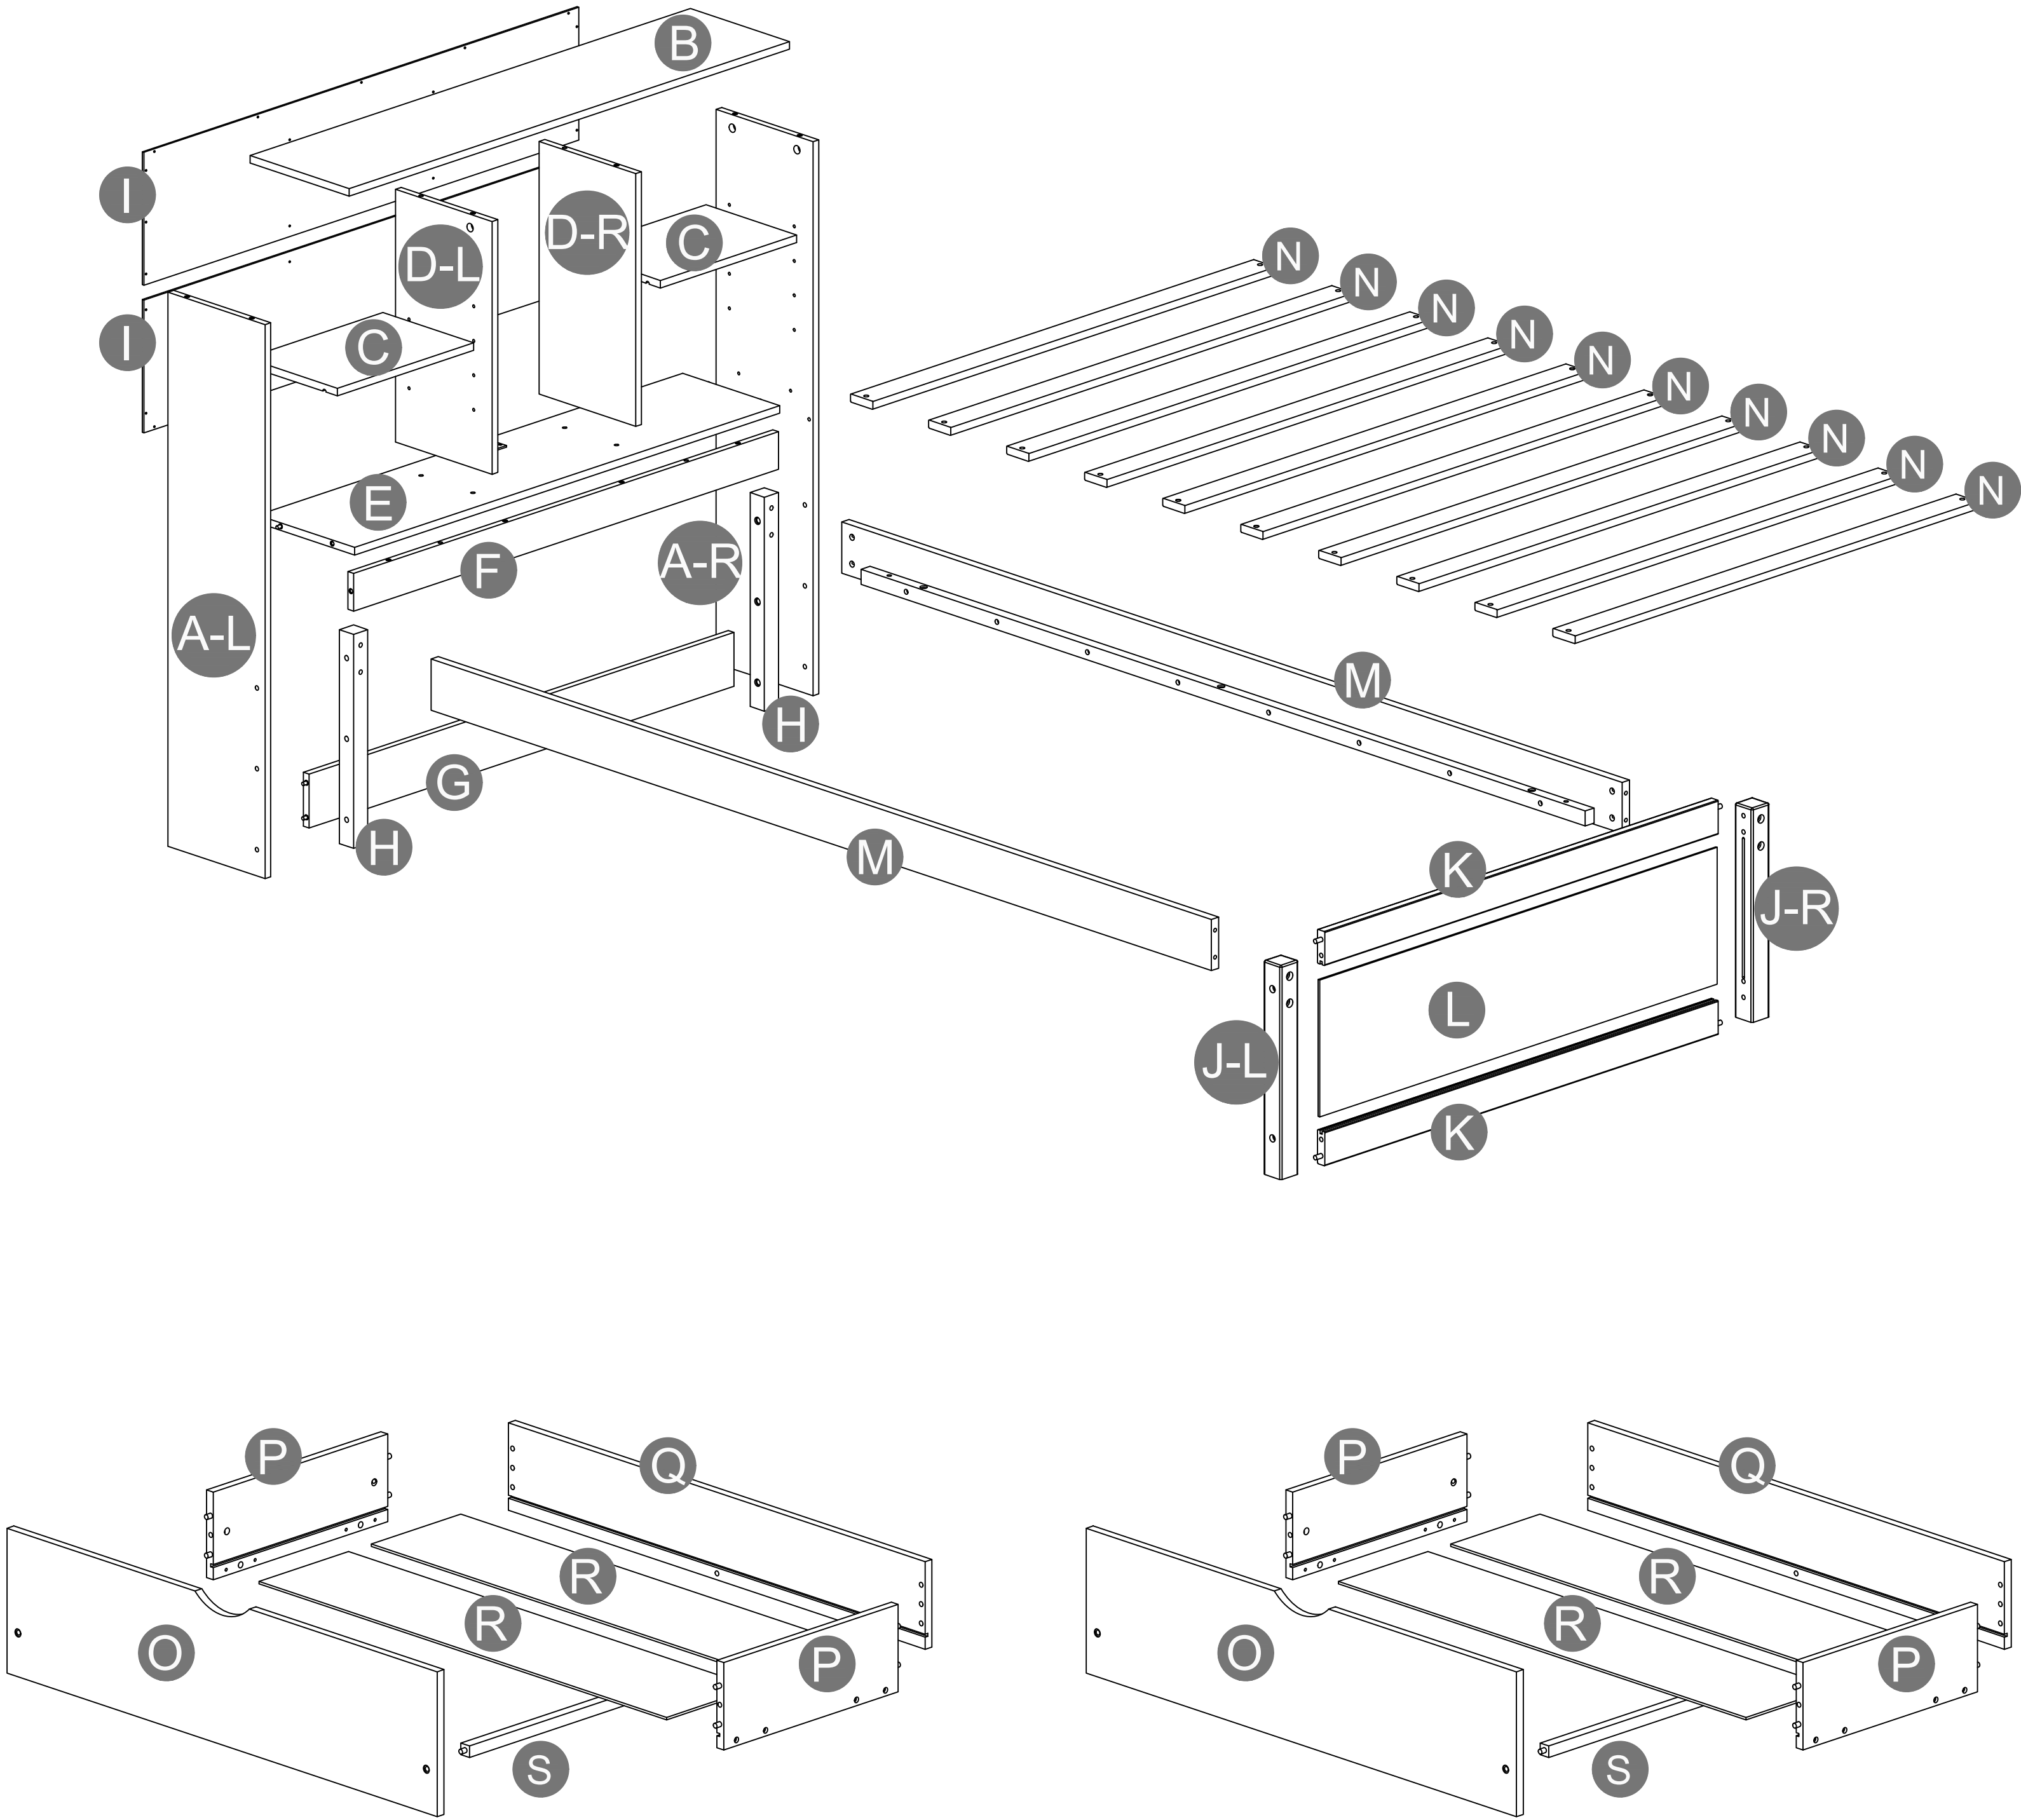


ASSEMBLY INSTRUCTIONS

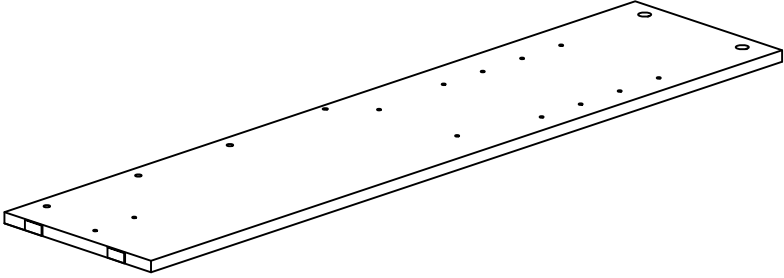
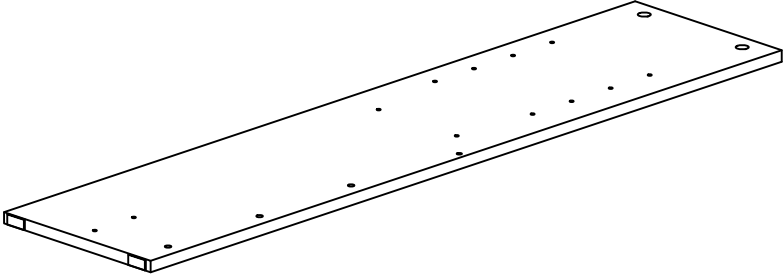
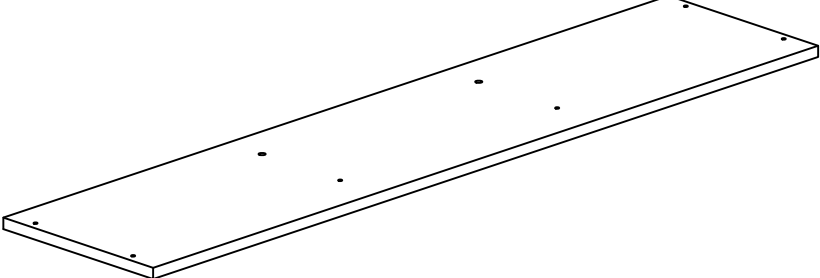
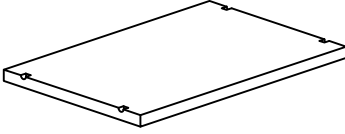
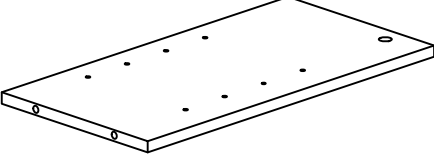
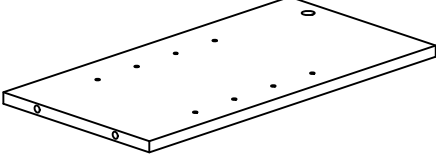
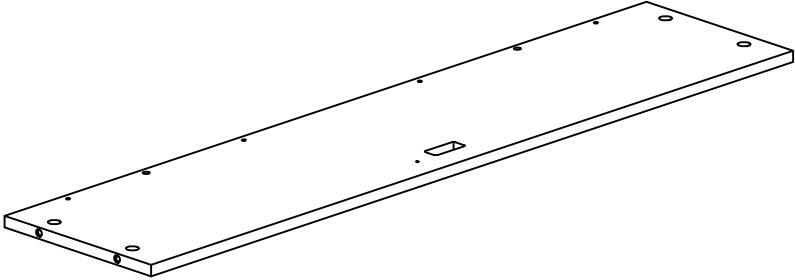
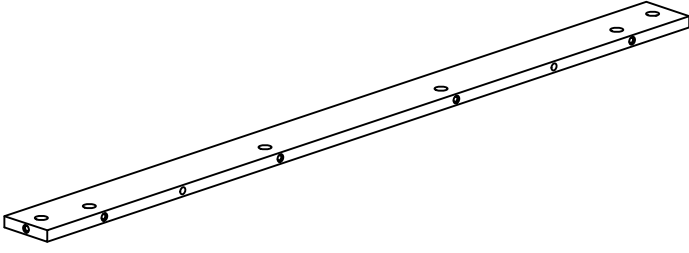
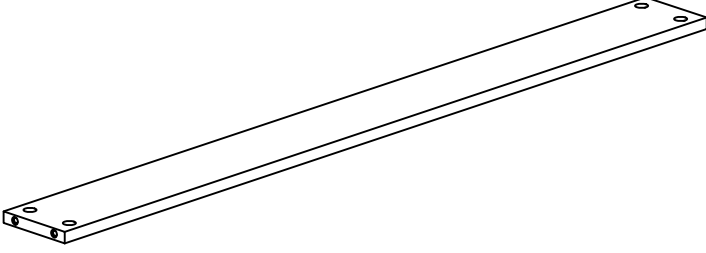
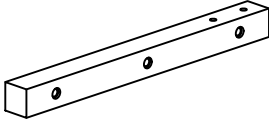
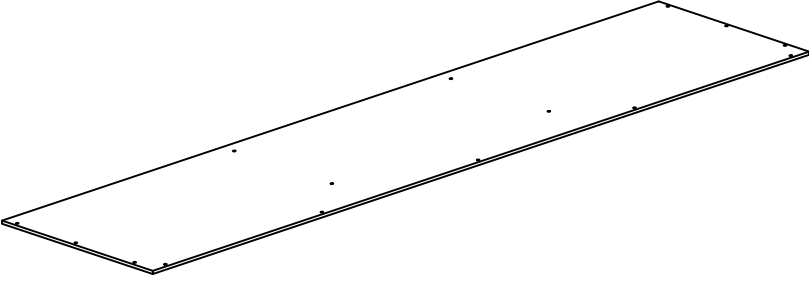
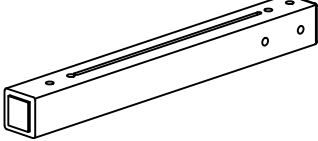
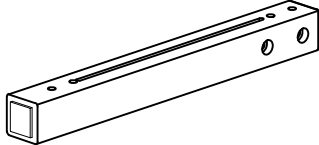
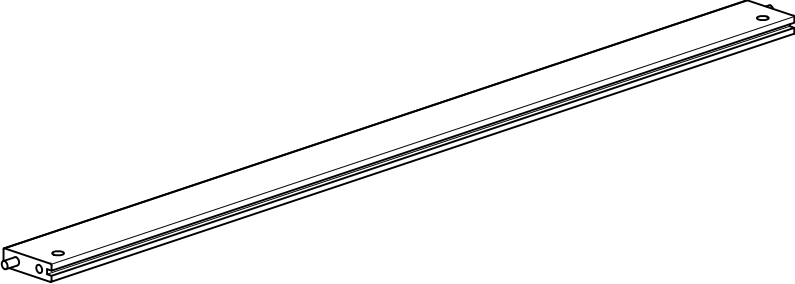
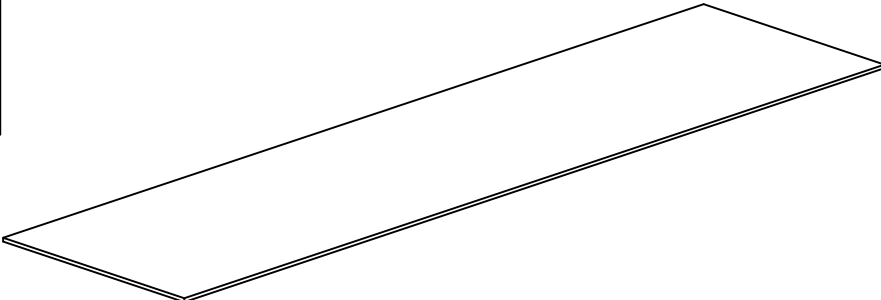
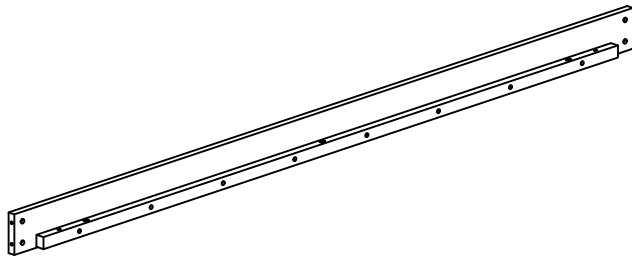
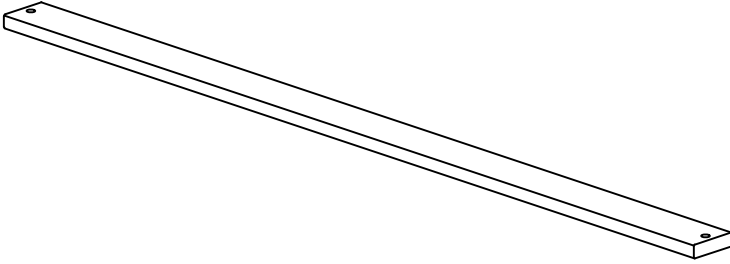
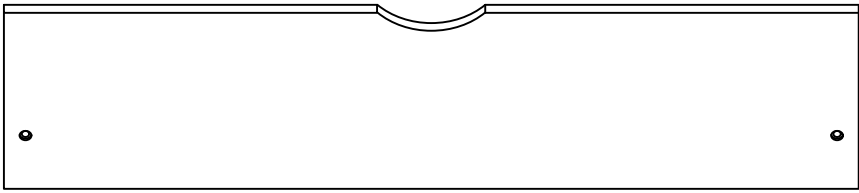

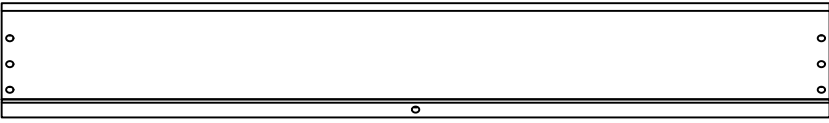




YX7112










Detail View








Part List

A-L  Vertical side panel HB (Left)-1pc	A-R  Vertical side panel HB (Right)-1pc	B  Horizontal upper Panel HB-1pc
C  Shelf Panel HB-2pcs	D-L  Vertical inside Panel (Left)-1pc	D-R  Vertical inside Panel (Right)-1pc
E  Horizontal middle Panel HB-1pc	F  Horizontal middle bar HB-1pc	G  Horizontal bottom bar HB-1pc
H  Vertical bottom bar HB-2pcs	I  Back Panel HB-2pcs	J-L  Footboard leg (Left)-1pc
J-R  Footboard leg (Right)-1pc	K  Horizontal bar FB-2pcs	L  Footboard panel-1pc
M  Side rail-2pcs	N  Slat-10pcs	O  Front panel of drawer - 2pcs
P  Side panel of drawer - 4pcs	Q  Back panel of drawer - 2pcs	R  Bottom panel of drawer-4pcs
S  Crossprece-2pcs		

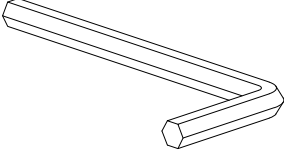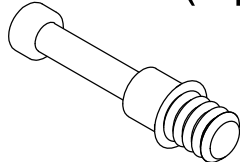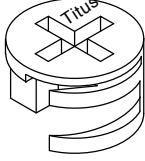
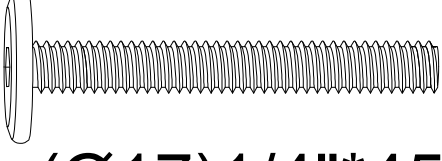

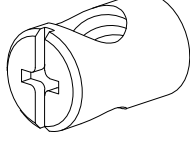


Hardware List of HB

1	 (1/4")4*60mm Allen key (1pc)	2	 (Spare Hardware-2pcs) Ø6*32.5mm Three in one bolts (22pcs)	3	 (Spare Hardware-2pcs) Ø15*9.5mm Three in one lock (22pcs)
4	 (Spare Hardware-1pc) Ø5*16mm Shelf pin (9pcs)	5	 (Ø17)1/4"*45mm Hex-Head bolts (6pcs)	6	 (Ø12)1/4"*70mm Hex-Head bolts (4pcs)
7	 1/4"*15mm Horizontal-Hole bolts(4pcs)	8	 (Spare Hardware-2pcs) Ø3*14mm Wood screws (32pcs)	9	 (Spare Hardware-1pc) Ø8*25mm Wood dowel (9pcs)

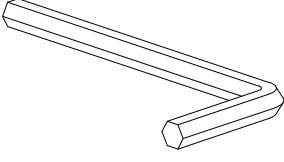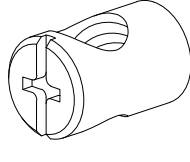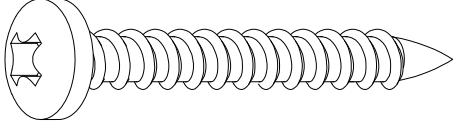

Hardware List of FB+SR+SLAT

10	 (1/4")4*60mm Allen key (1pc)	11	 (Spare Hardware-1pc) (Ø12)1/4"*70mm Hex-Head bolts (9pcs)	12	 (Spare Hardware-1pc) 1/4"*15mm Horizontal-Hole bolts(9pcs)
13	 (Spare Hardware-2pcs) Ø4*25mm Wood screws (22pcs)	14	 Ø8*25mm Wood dowel (4pcs)		

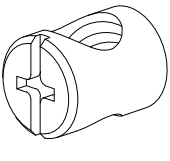
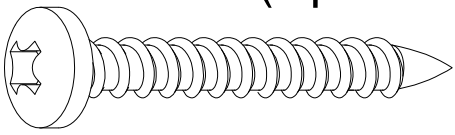


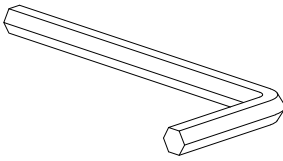
Hardware List of 2 DRAWERS

15	 (Spare Hardware-1pc) (Ø12)1/4"*55mm Hex-Head bolts (12pcs)	16	 (Spare Hardware-1pc) 1/4"*12mm Horizontal-Hole bolts(9pcs)	17	 (Spare Hardware-2pcs) Ø4*25mm Wood screws (18 pcs)
18	 Ø8*25mm Wood dowel (3pcs)	19	 (Spare Hardware-1pc) Ø10*20mm Wood dowel (9pcs)	20	 (1/4")4*60mm Allen key (1pc)

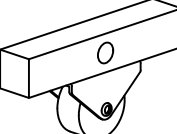
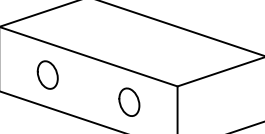
Hardware List (FB+SR+SLAT: 3/3)

21	 100*53*19mm Wheels (8pcs)	22	 70*38*19mm Stopper (3pcs)
----	---------------------------------------------------------------------------------------------------------------------	----	----------------------------------------------------------------------------------------------------------------------

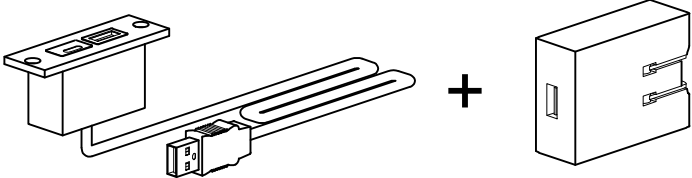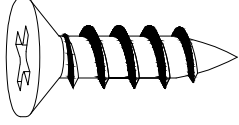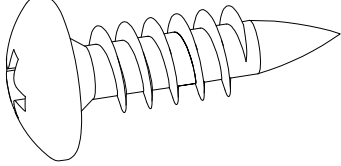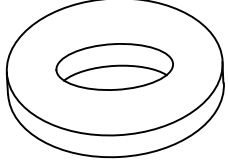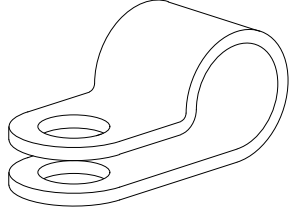Hardware List of USB

<div>22</div> <div></div> <div>68*22*30mm</div> <div>USB +POWER (1pc)</div>	<div>23</div> <div></div> <div>Ø3*12.5mm</div> <div>Wood screws (2pcs)</div>	<div>24</div> <div></div> <div>Ø5*14mm</div> <div>Wood screws (1pc)</div>
<div>25</div> <div></div> <div>1/4"*Ø12.5*1.2mm</div> <div>Flat washer (1pc)</div>	<div>26</div> <div></div> <div>21*10*9mm</div> <div>Cable Clip (1pc)</div>	

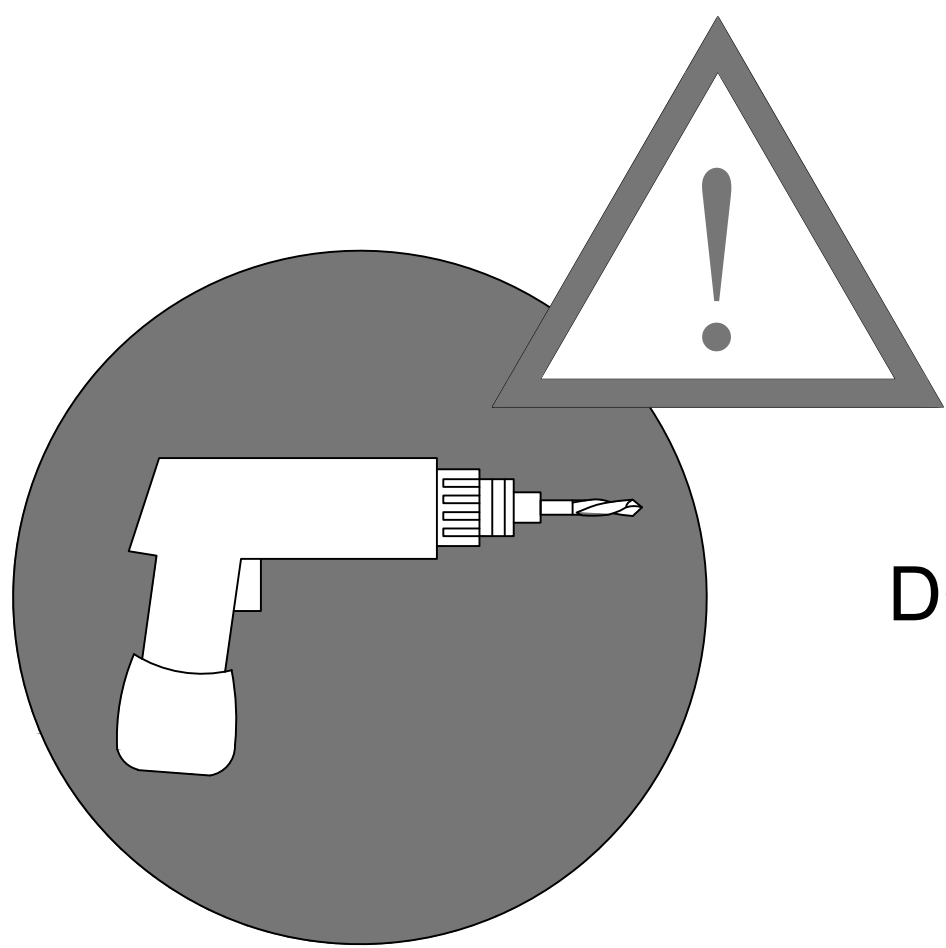
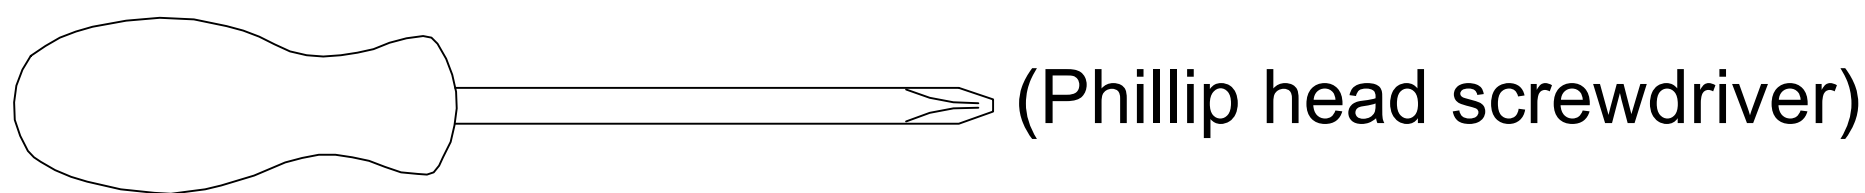
ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)









DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT !



Remark: We recommend you assemble your bed in the flat ground.







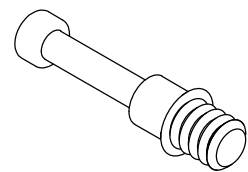
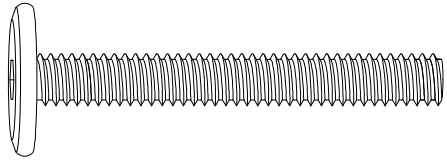
STEP 1:

2		5	
5pcs		3pcs	

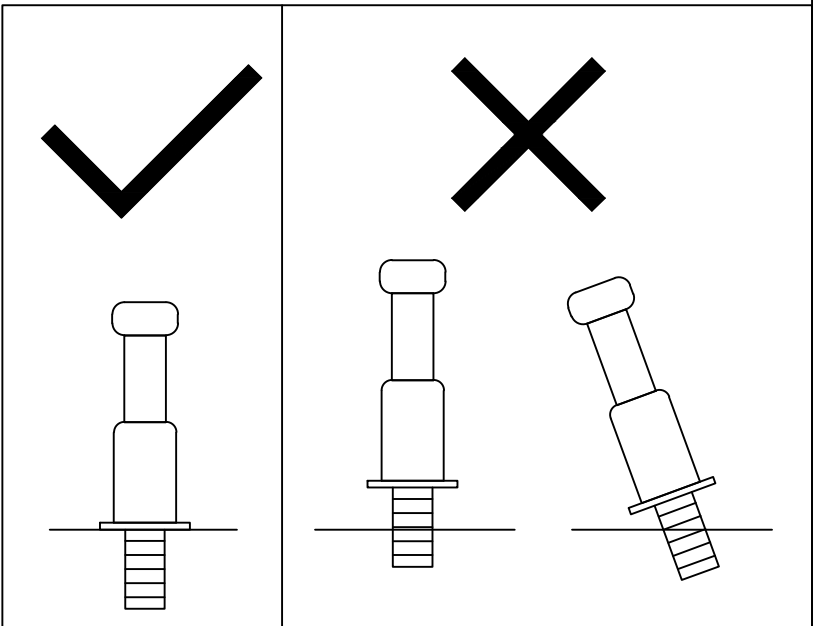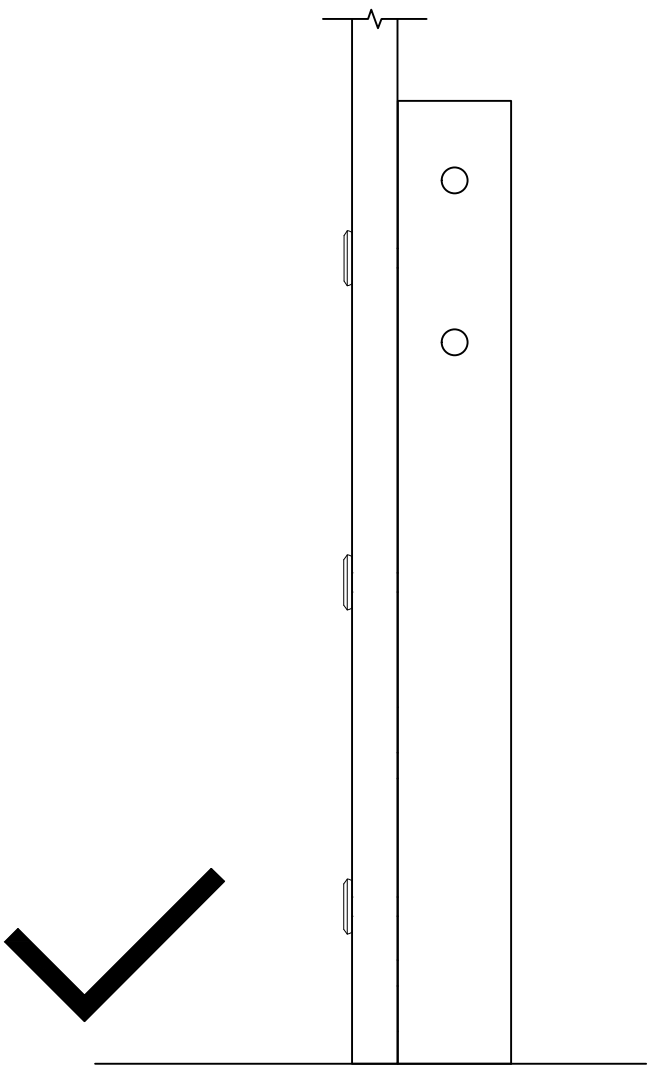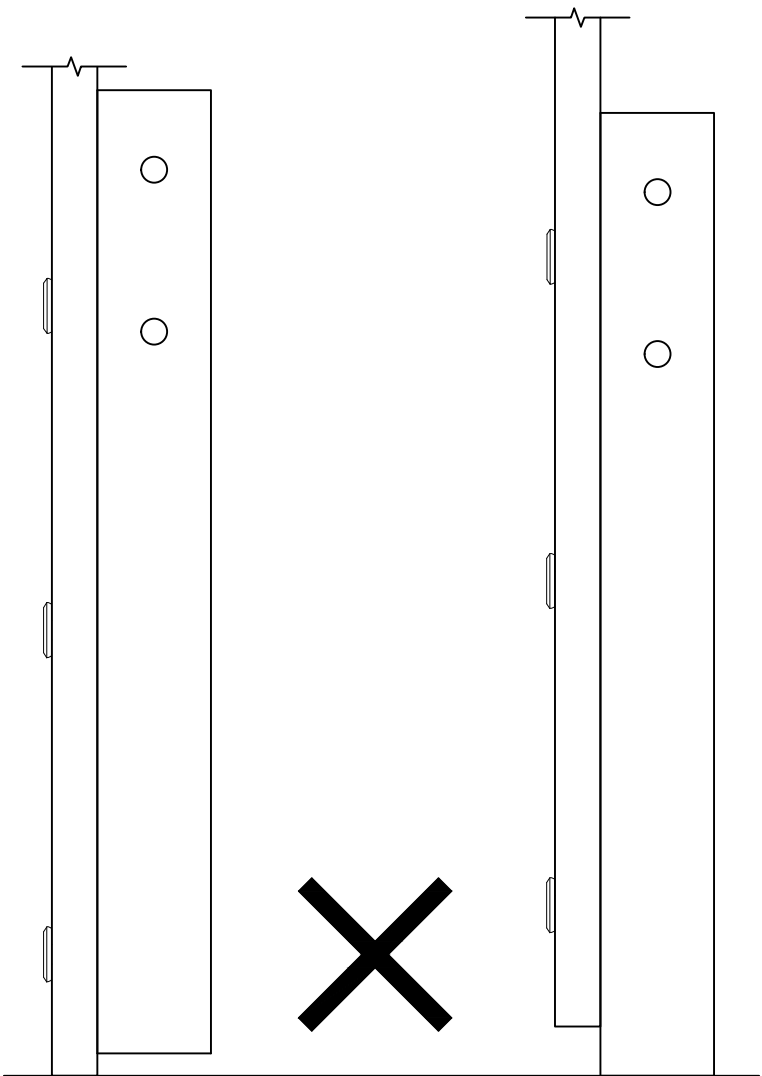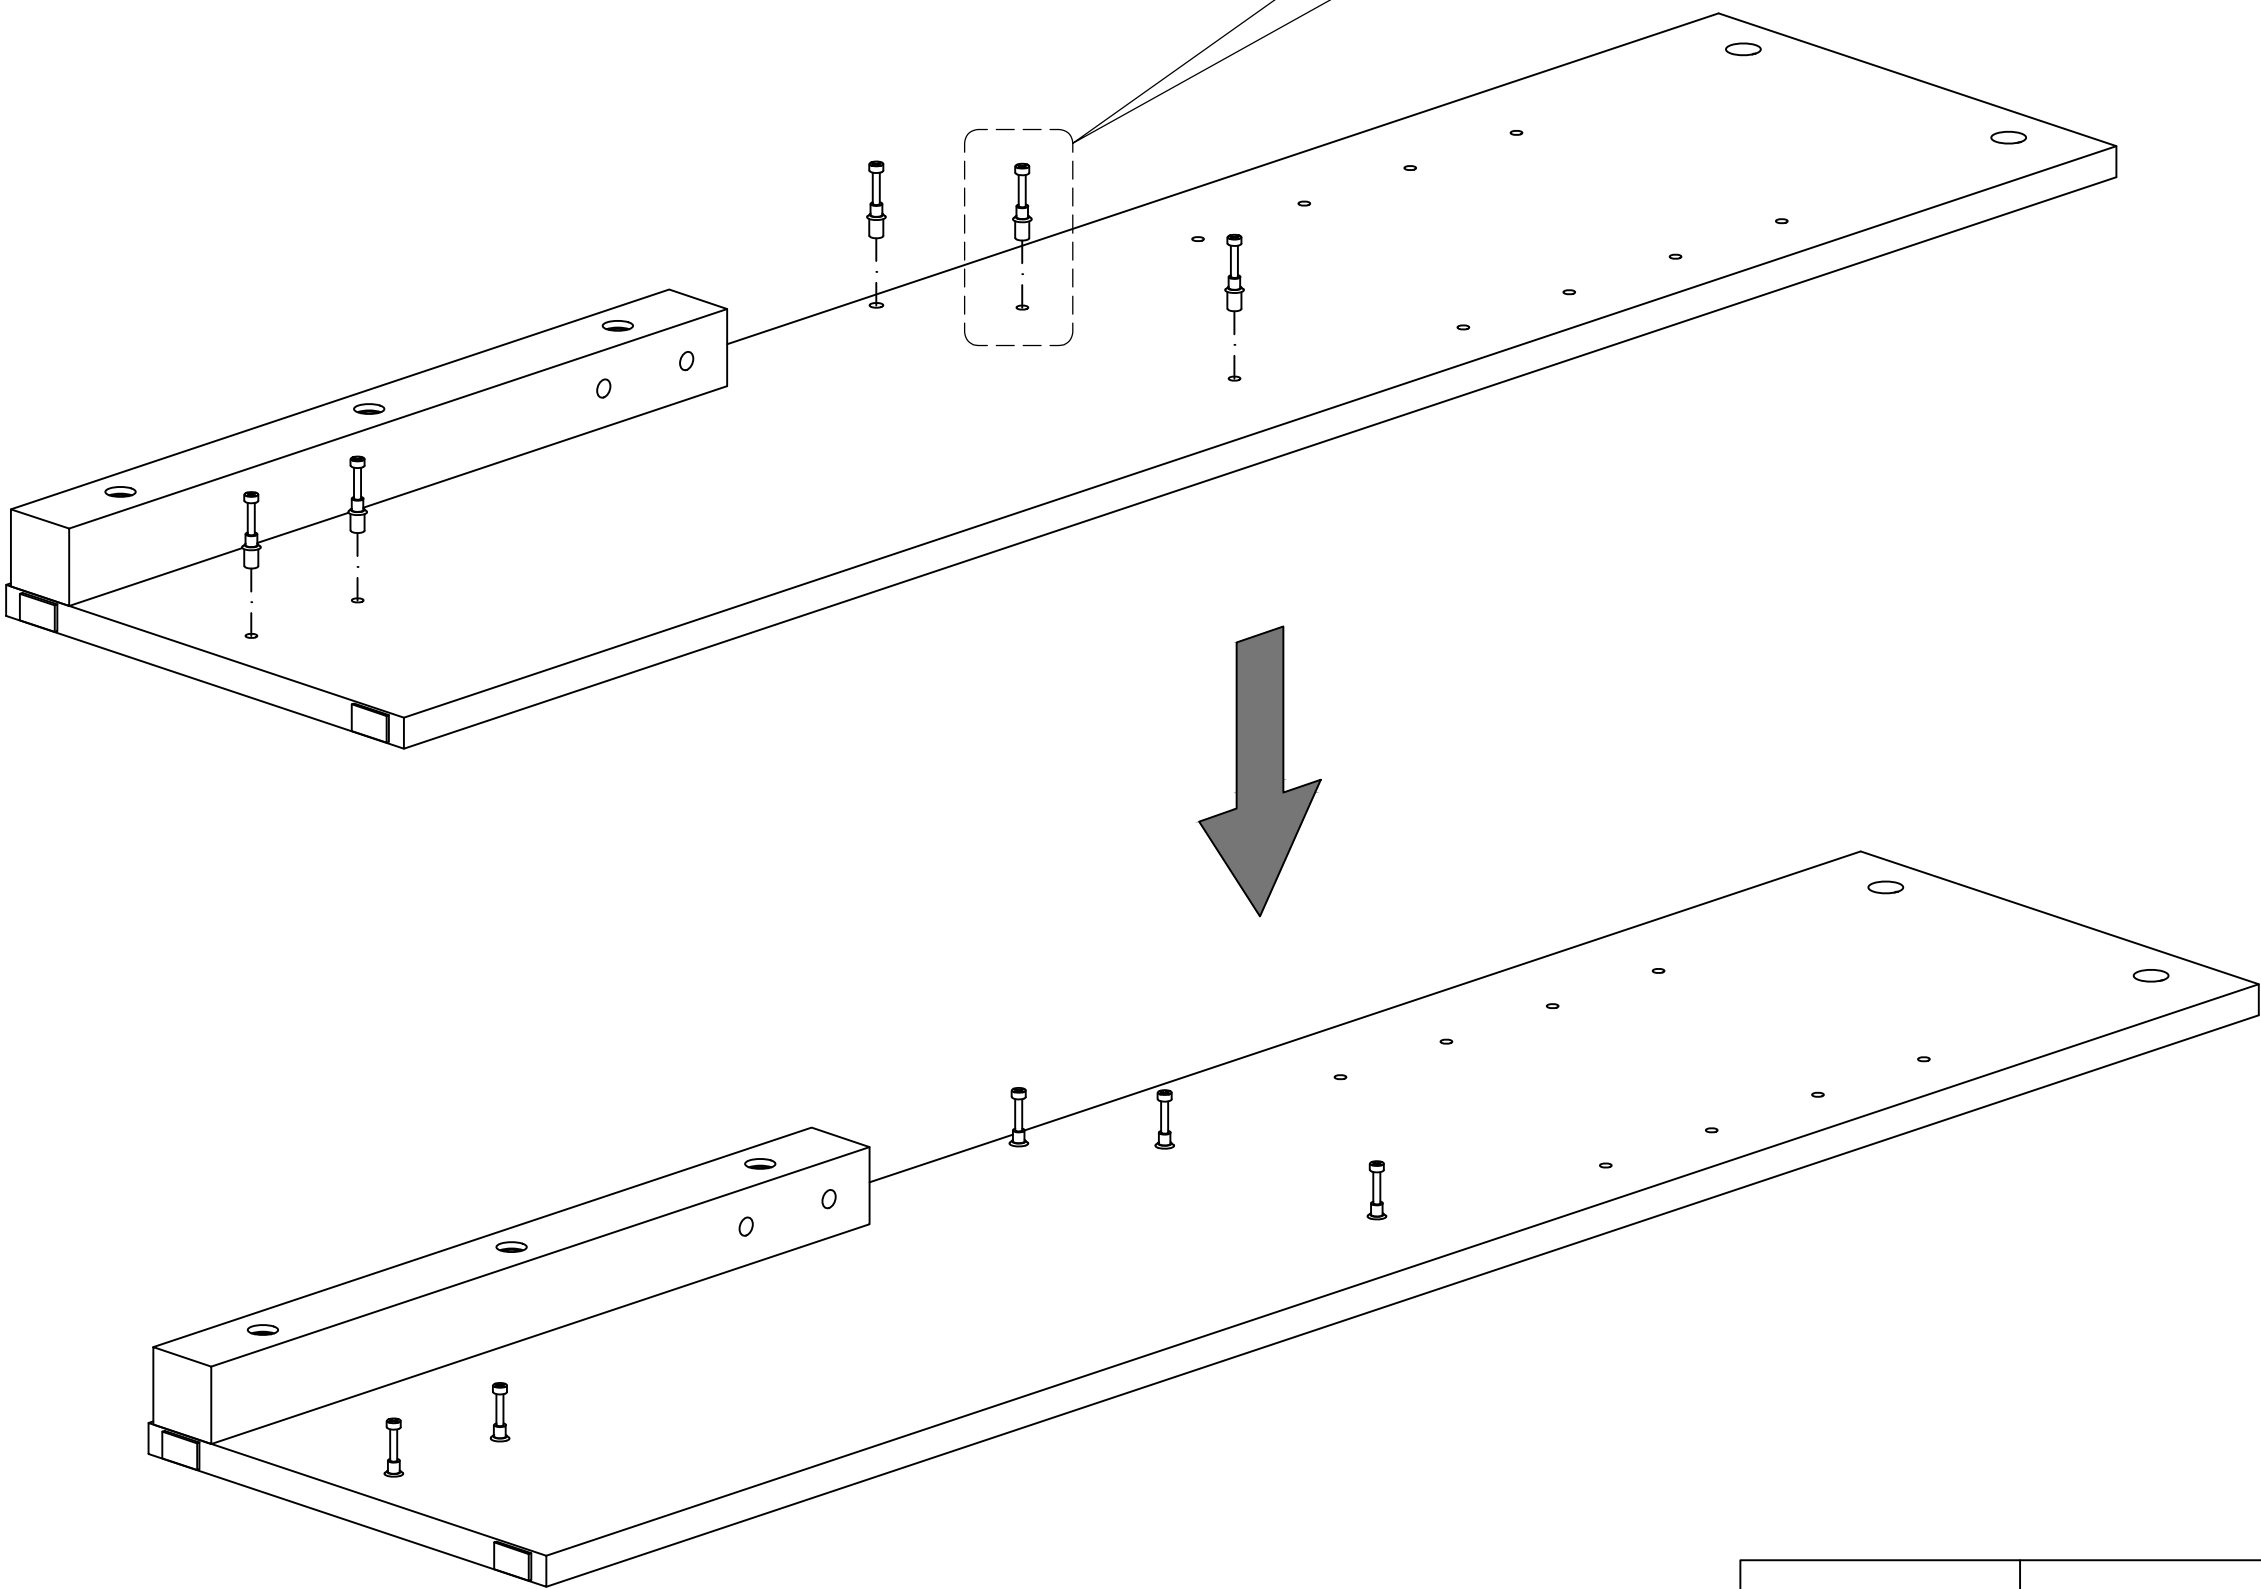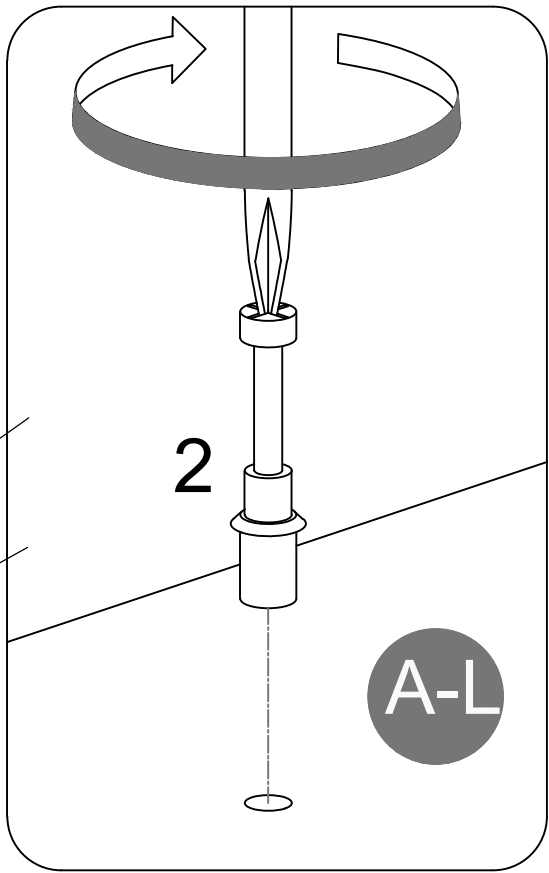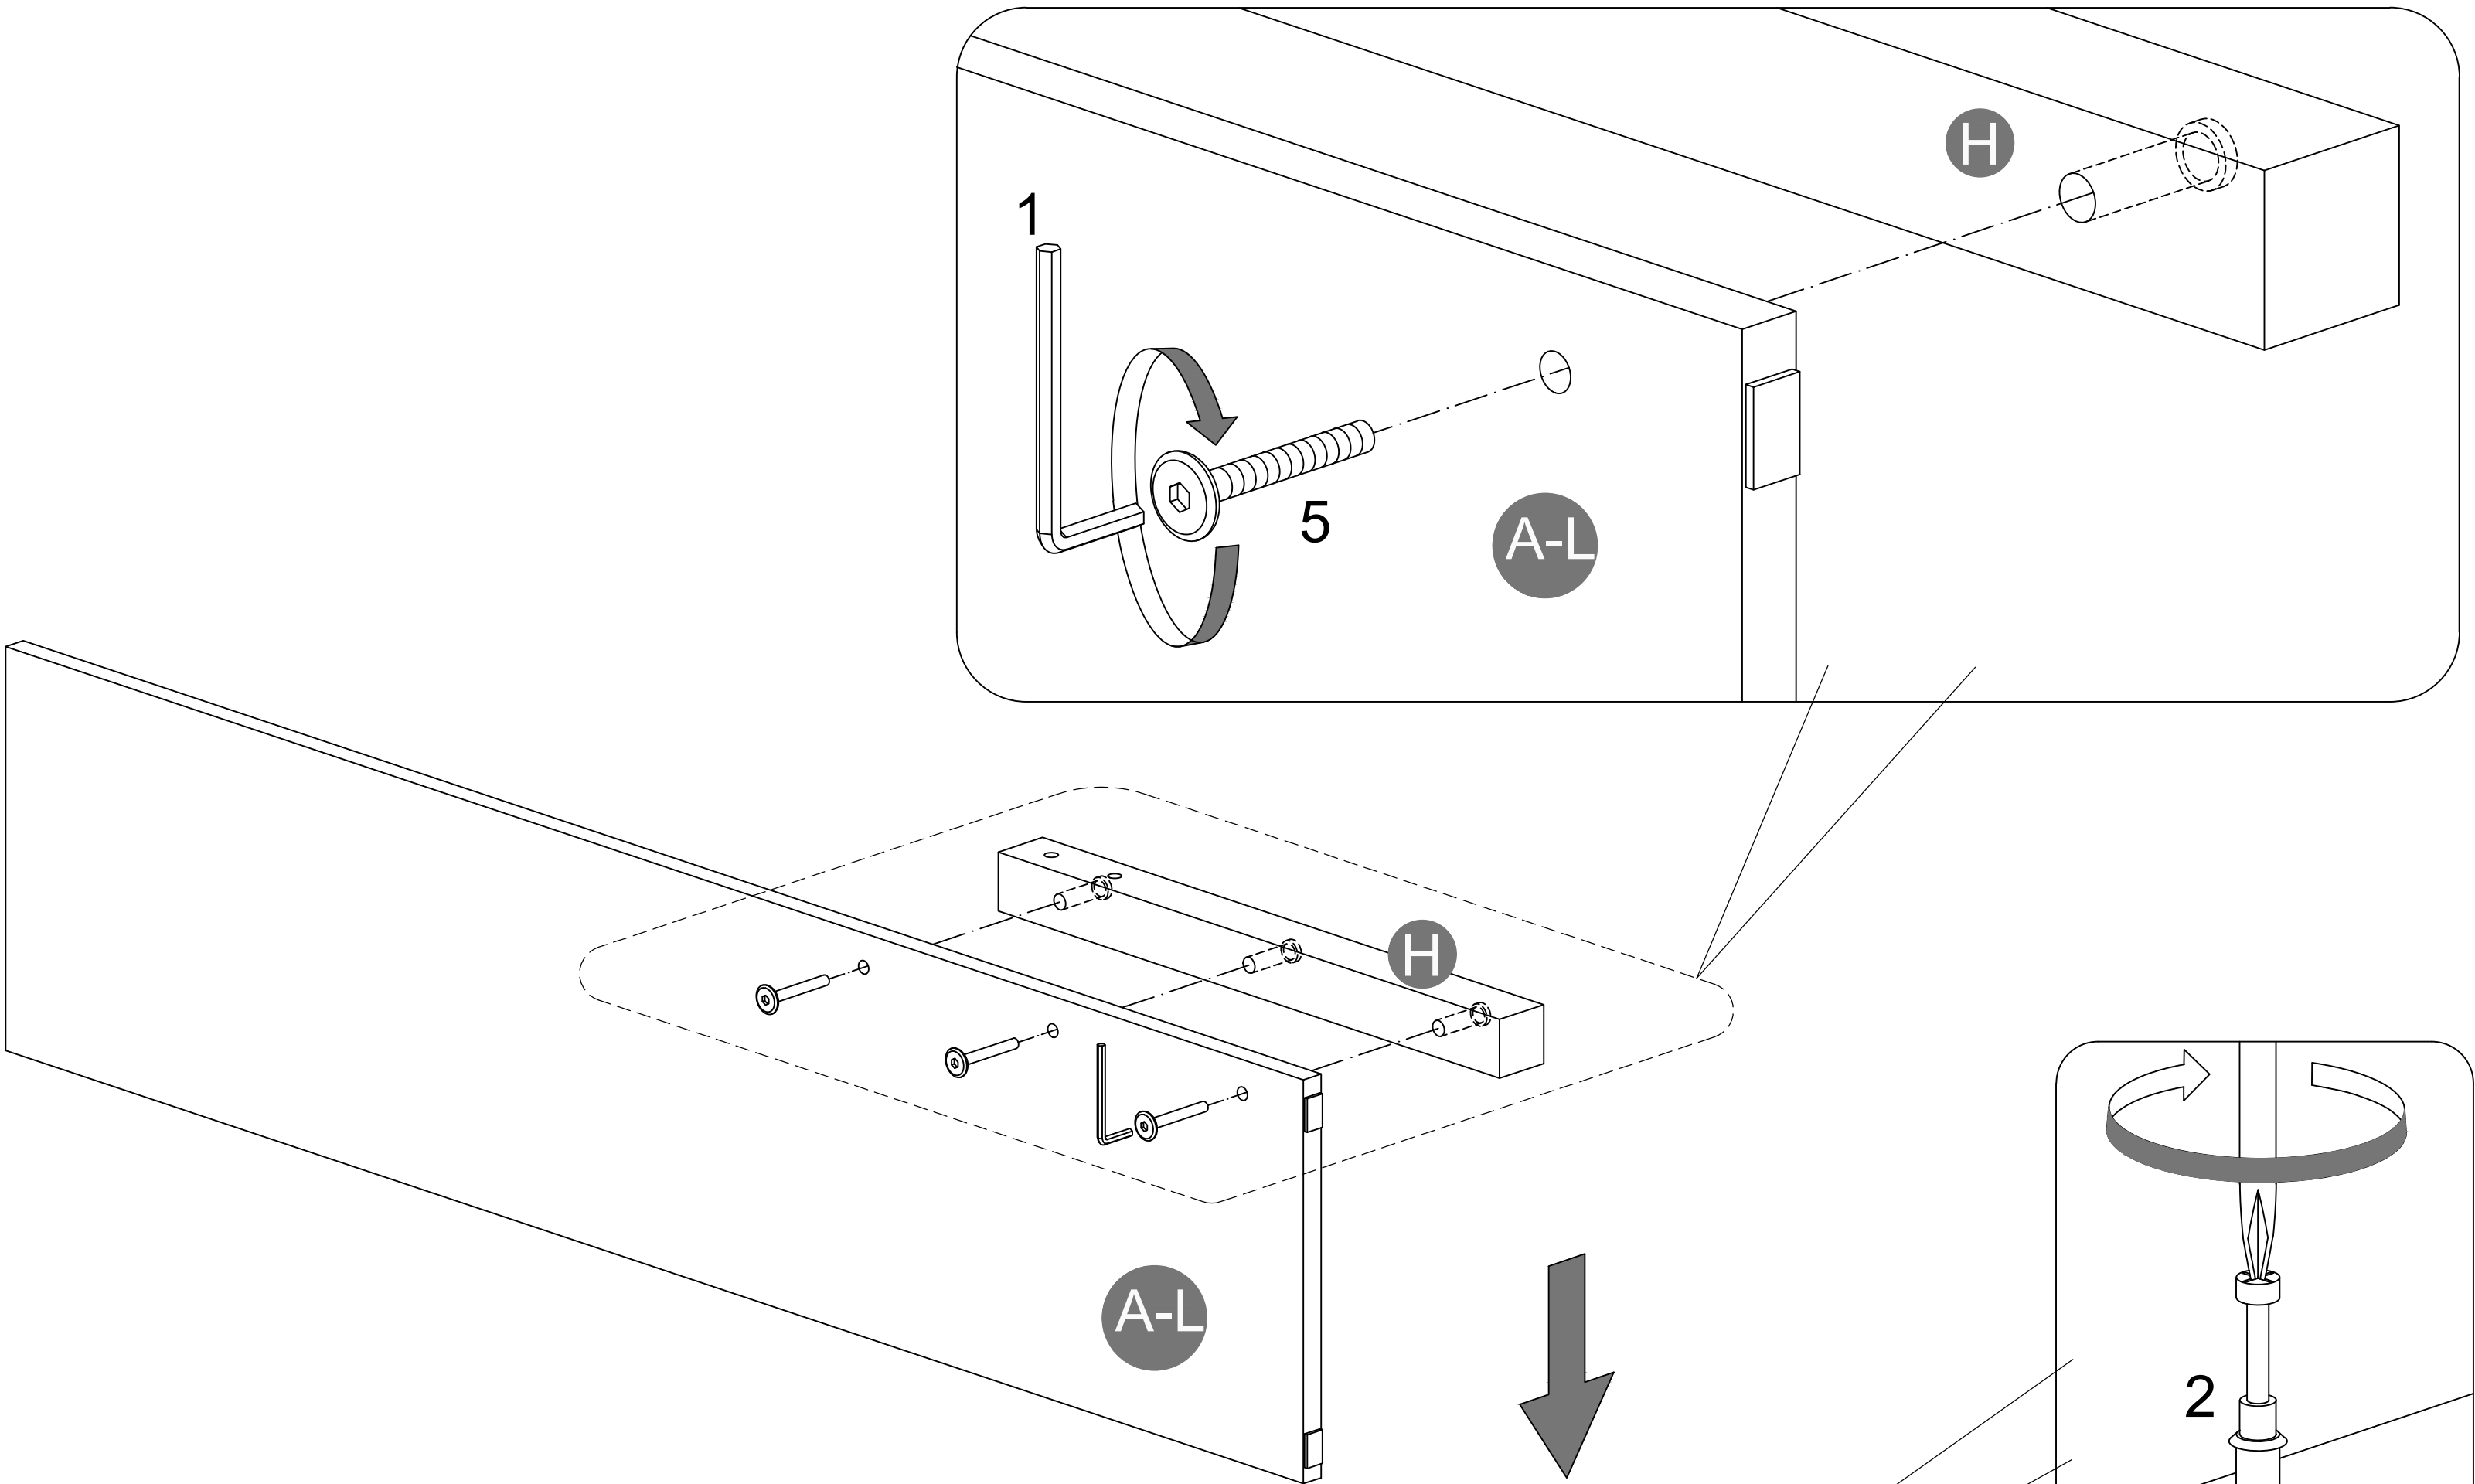

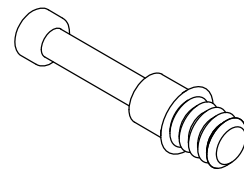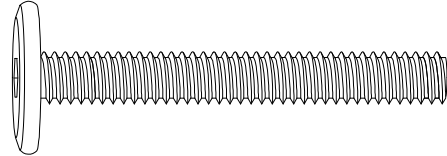
STEP 2:

2		5	
5pcs		3pcs	

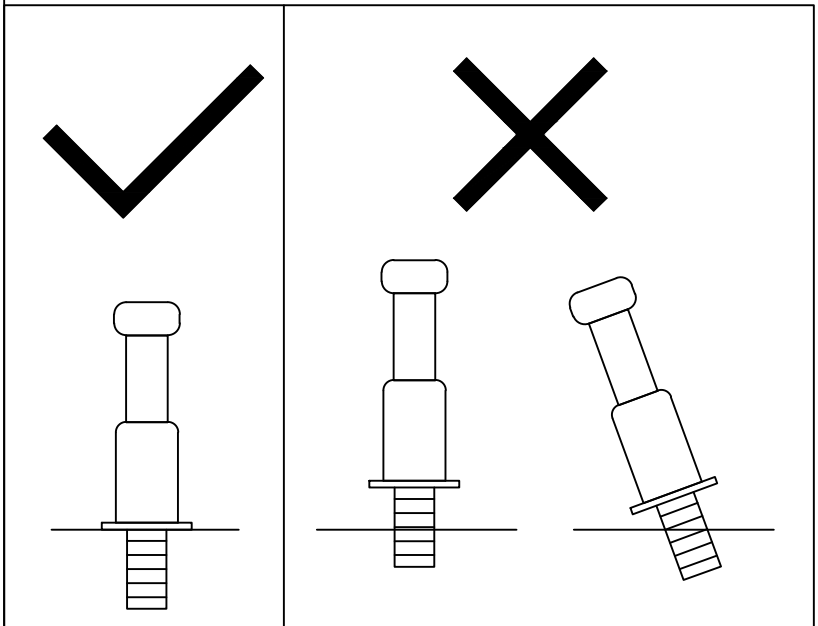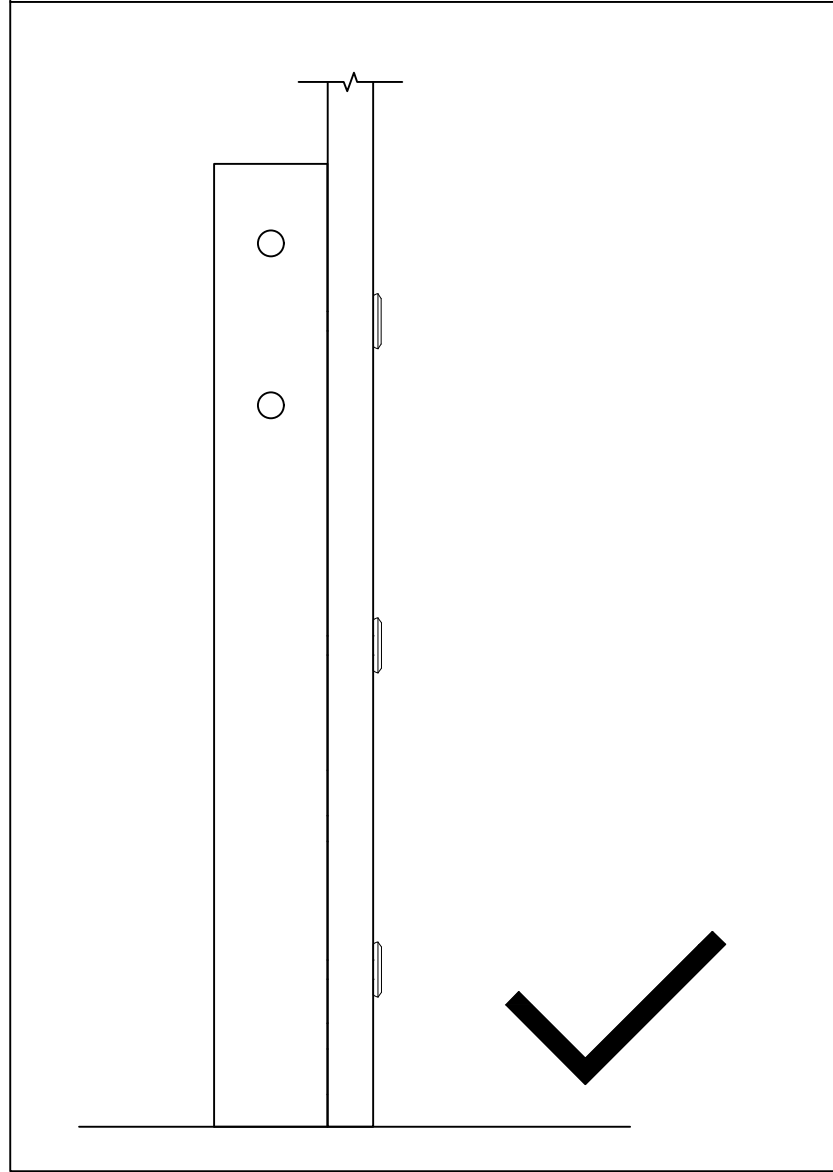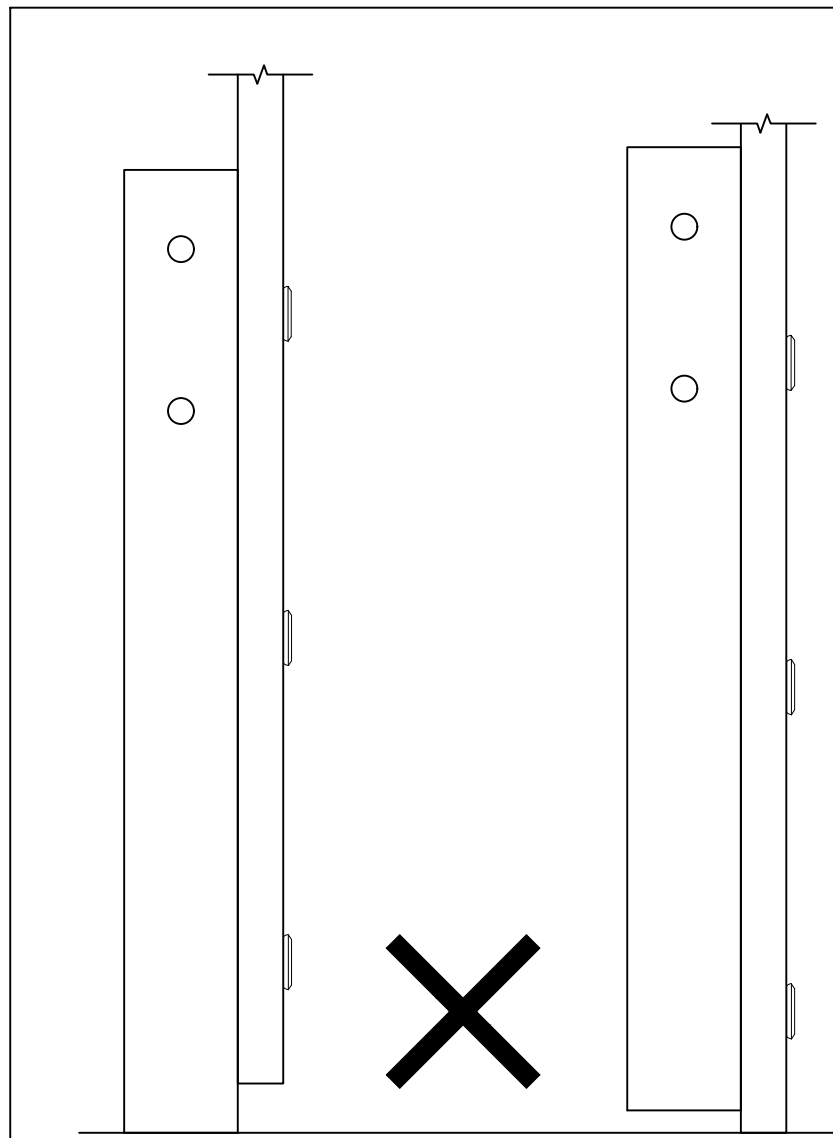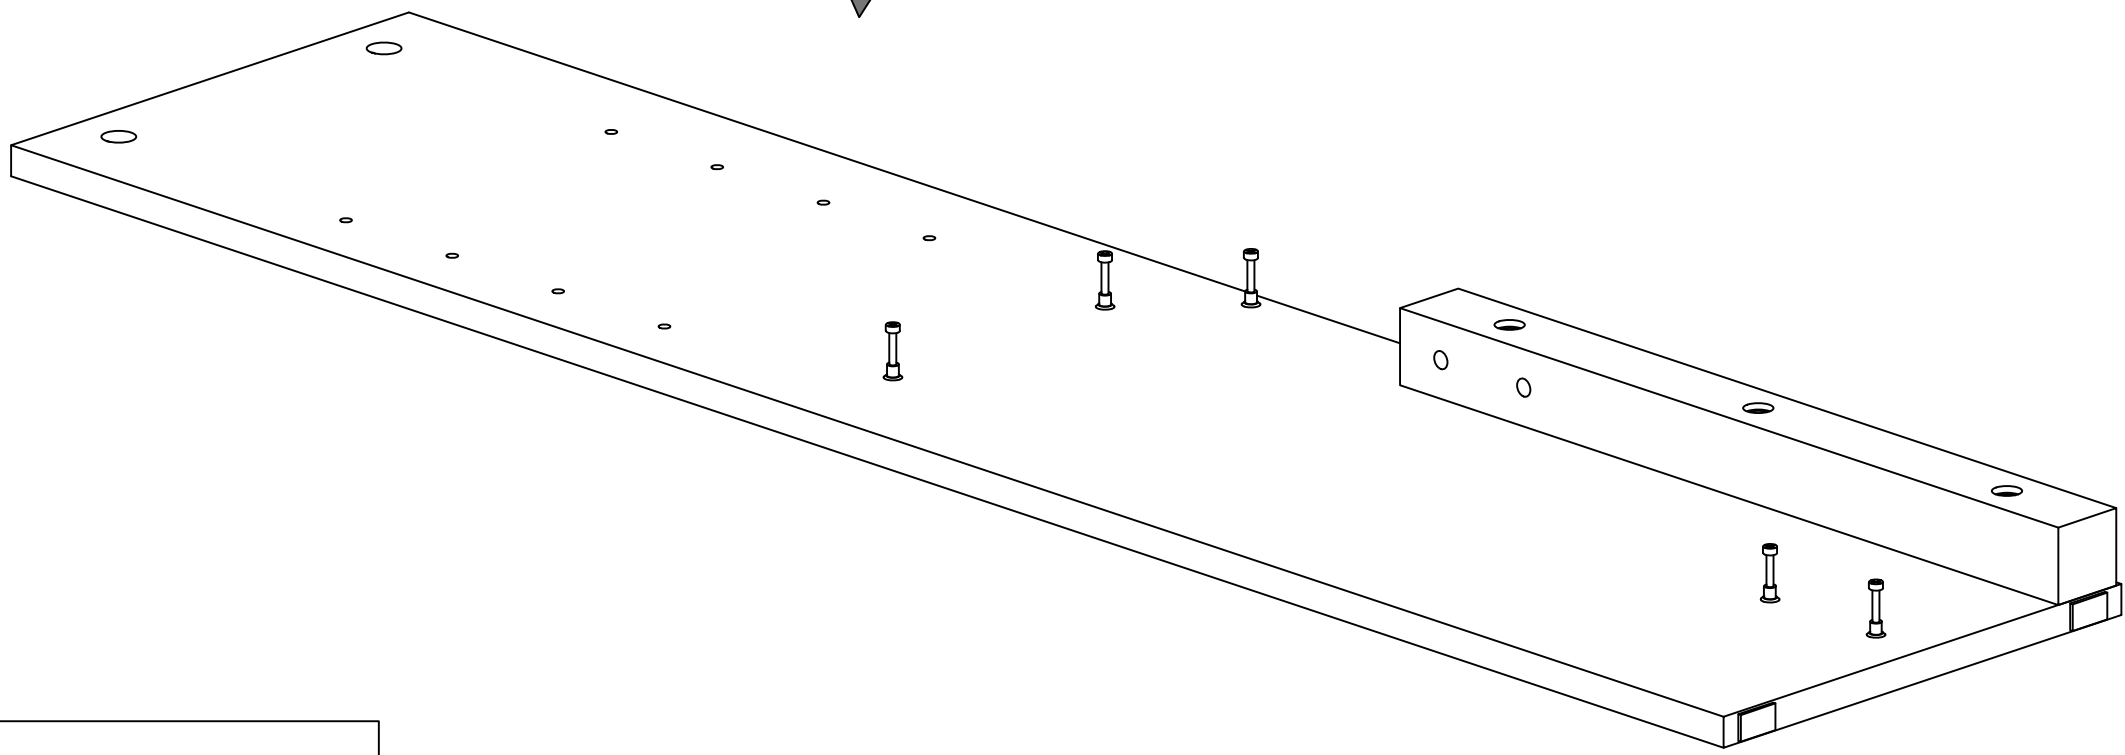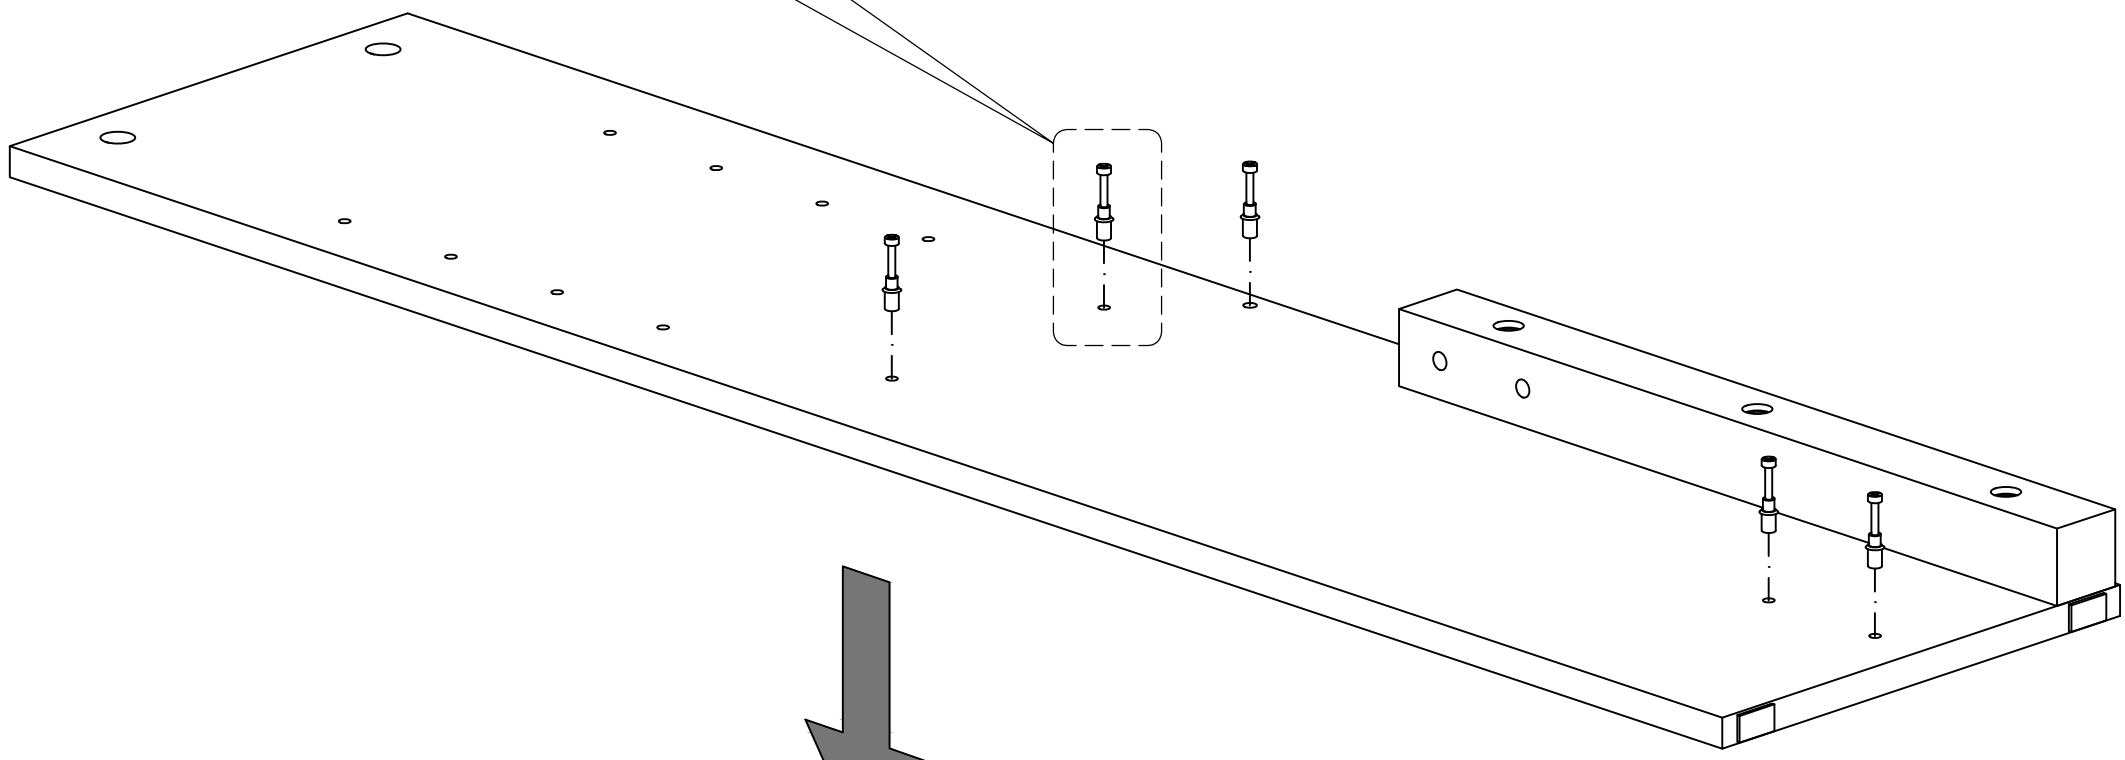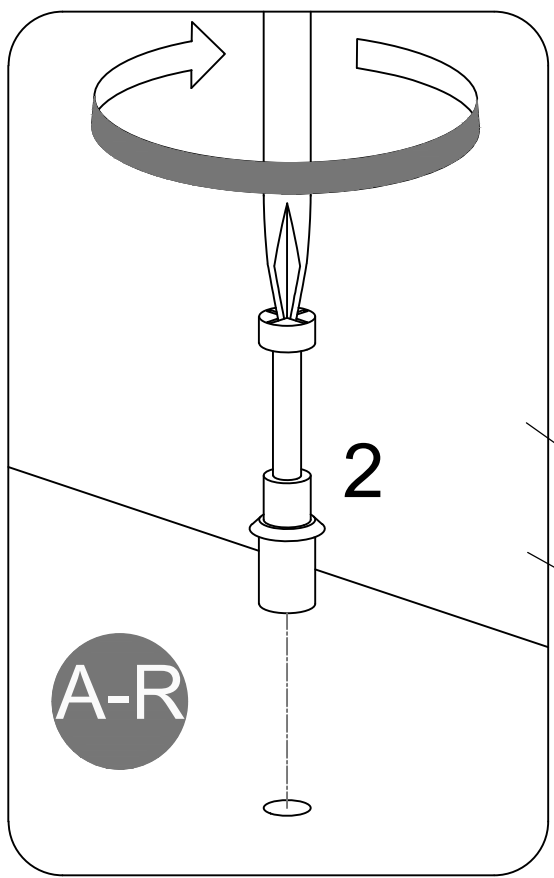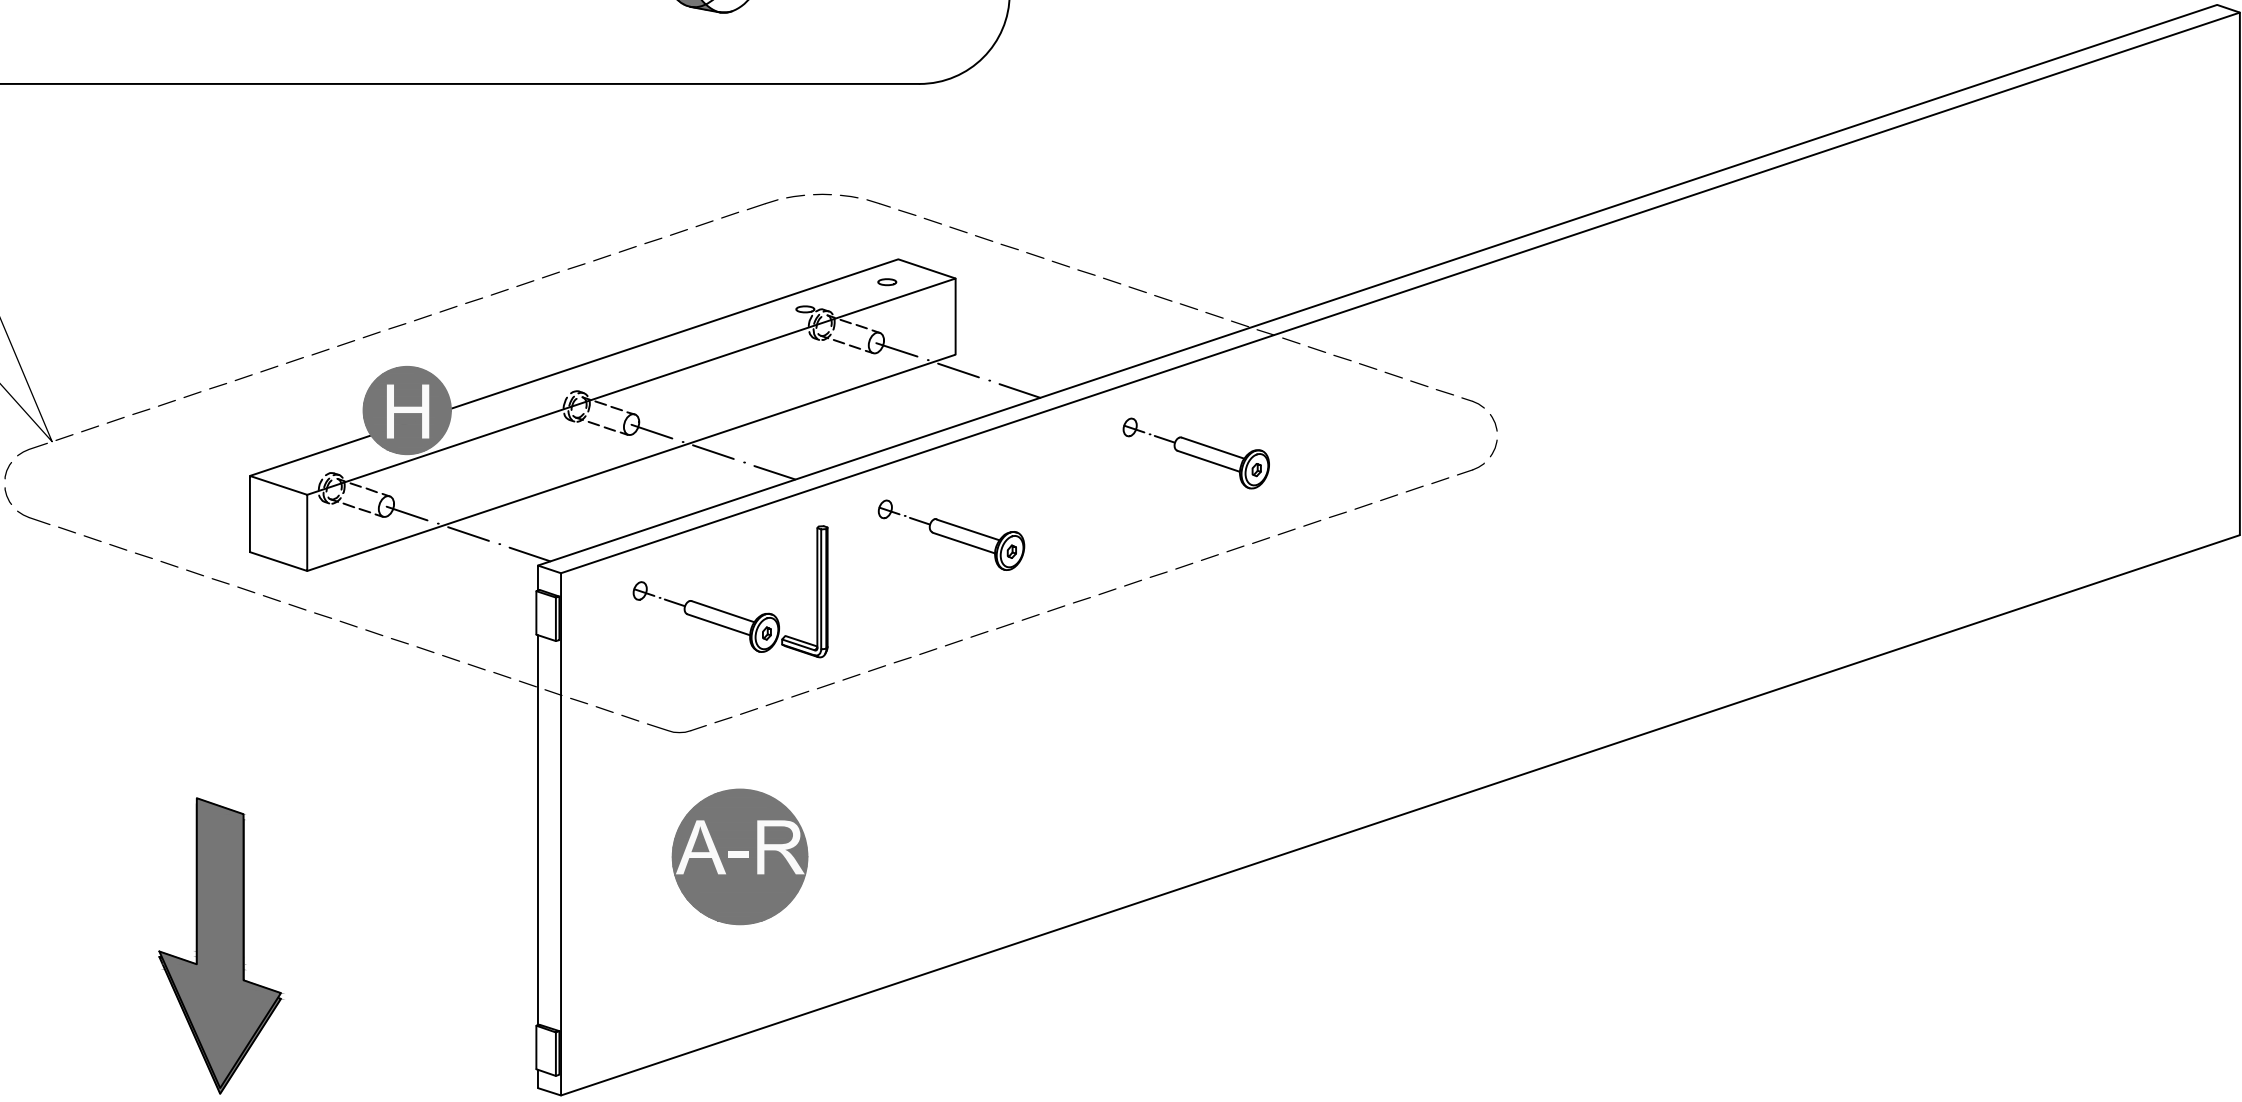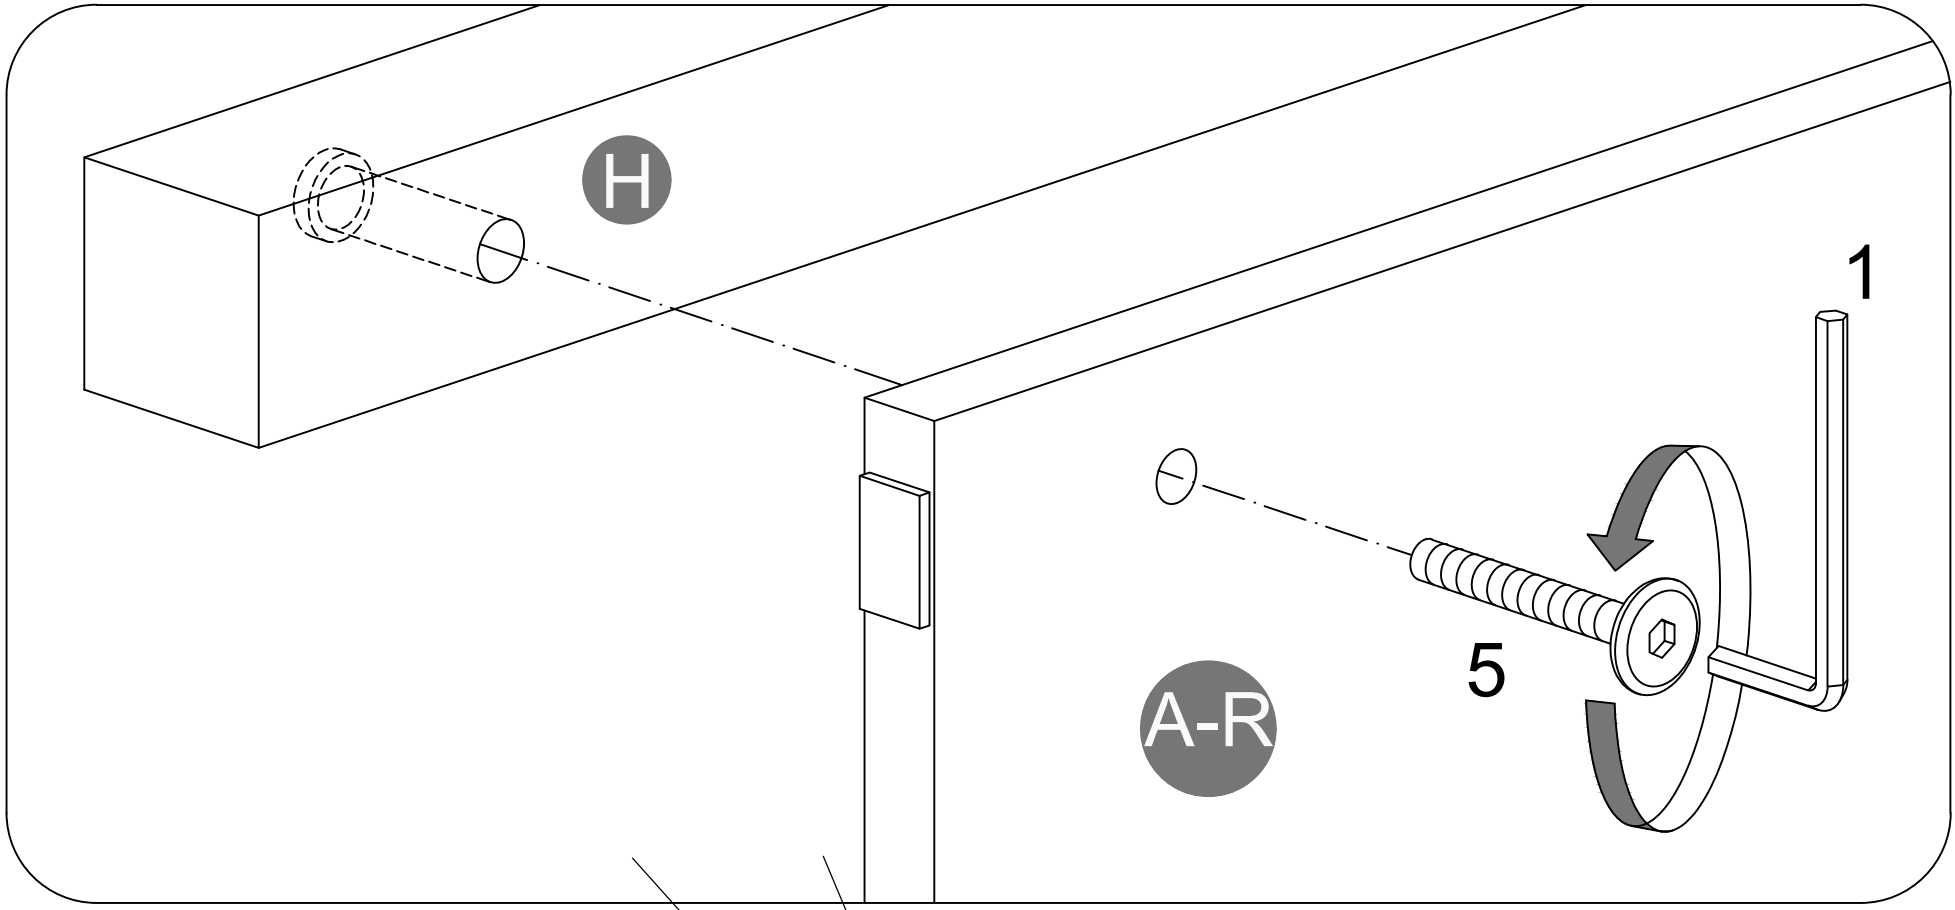


STEP 3:

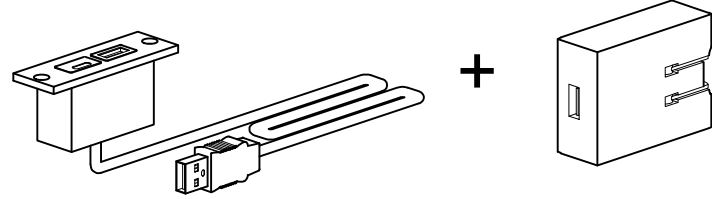22




1pc

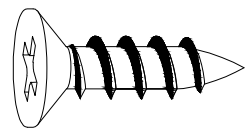23




2pcs

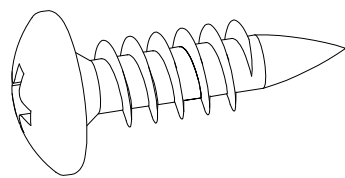24




1pc

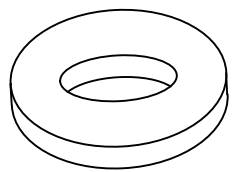25







1pc



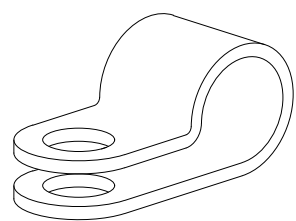
26







1pc

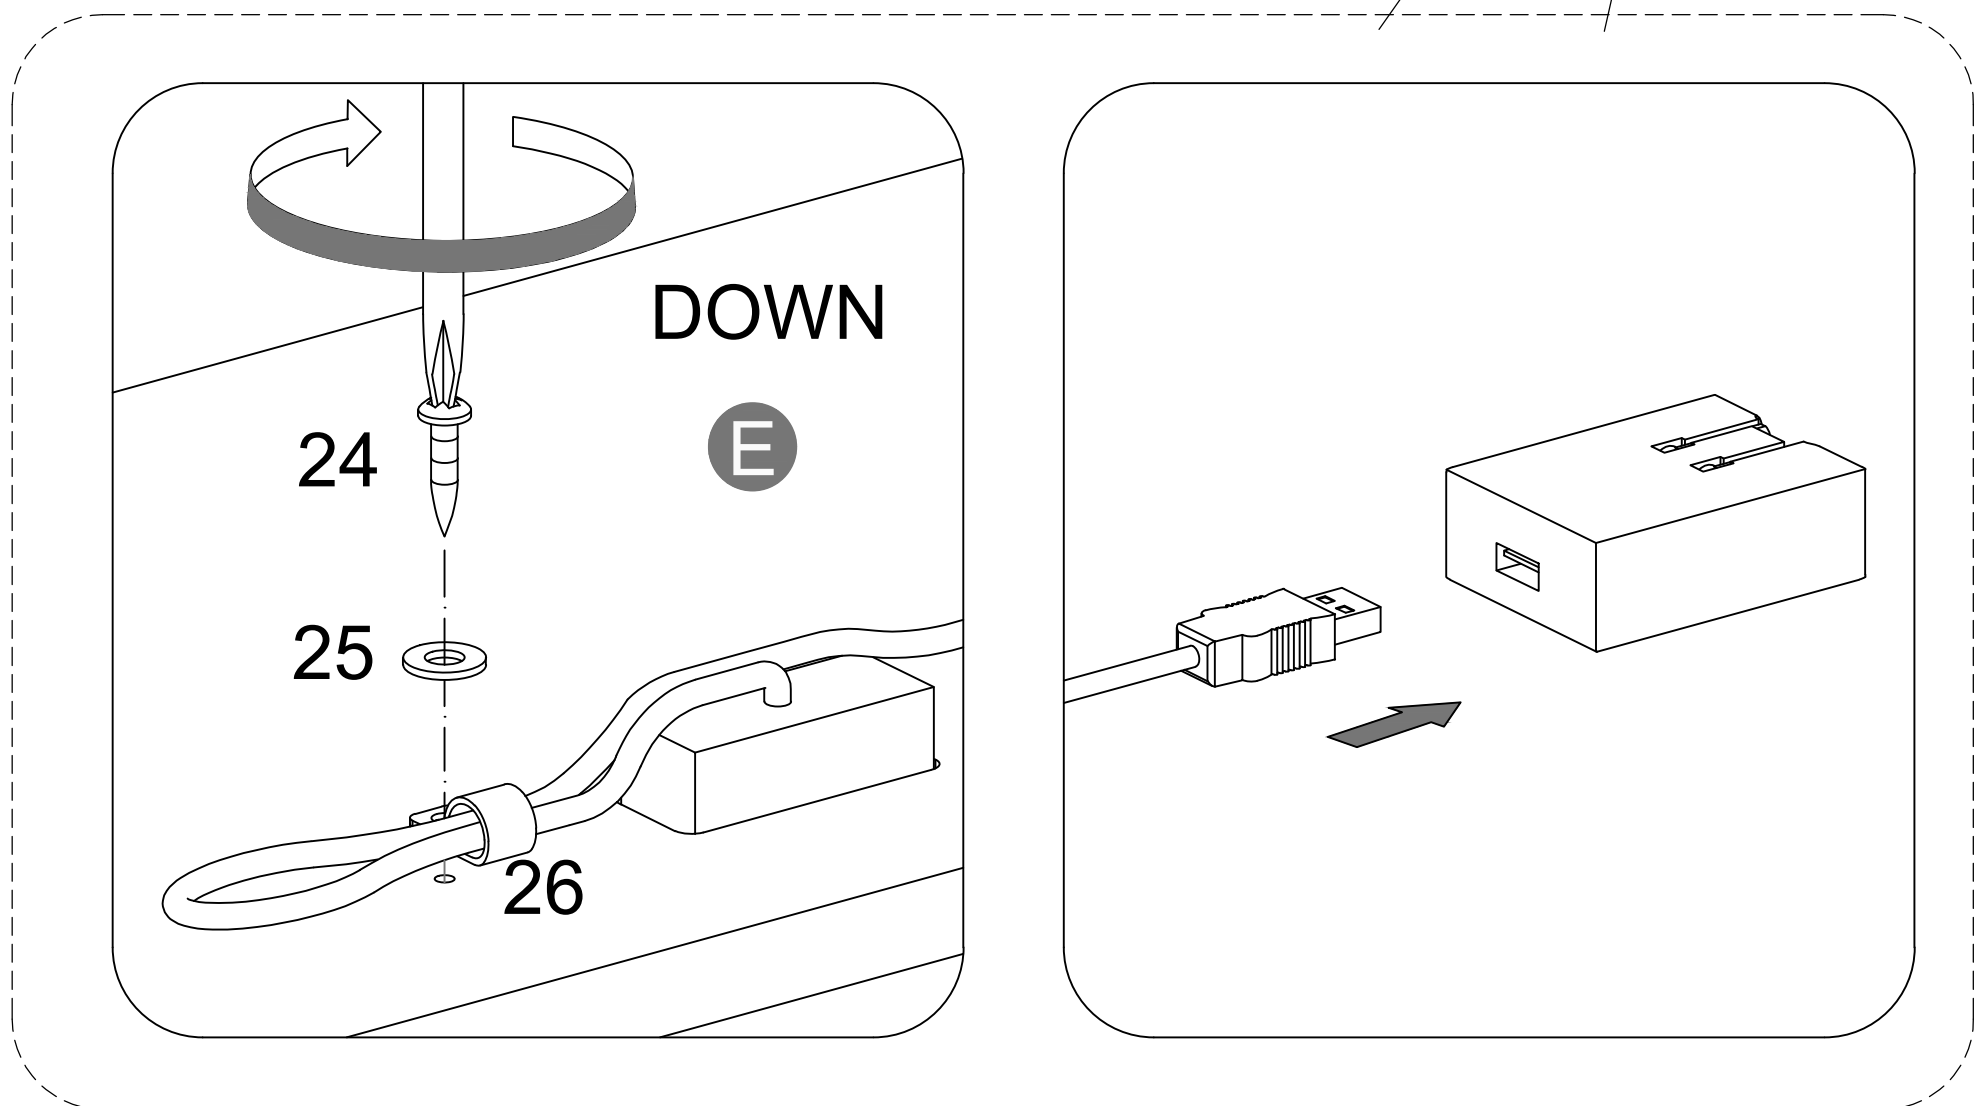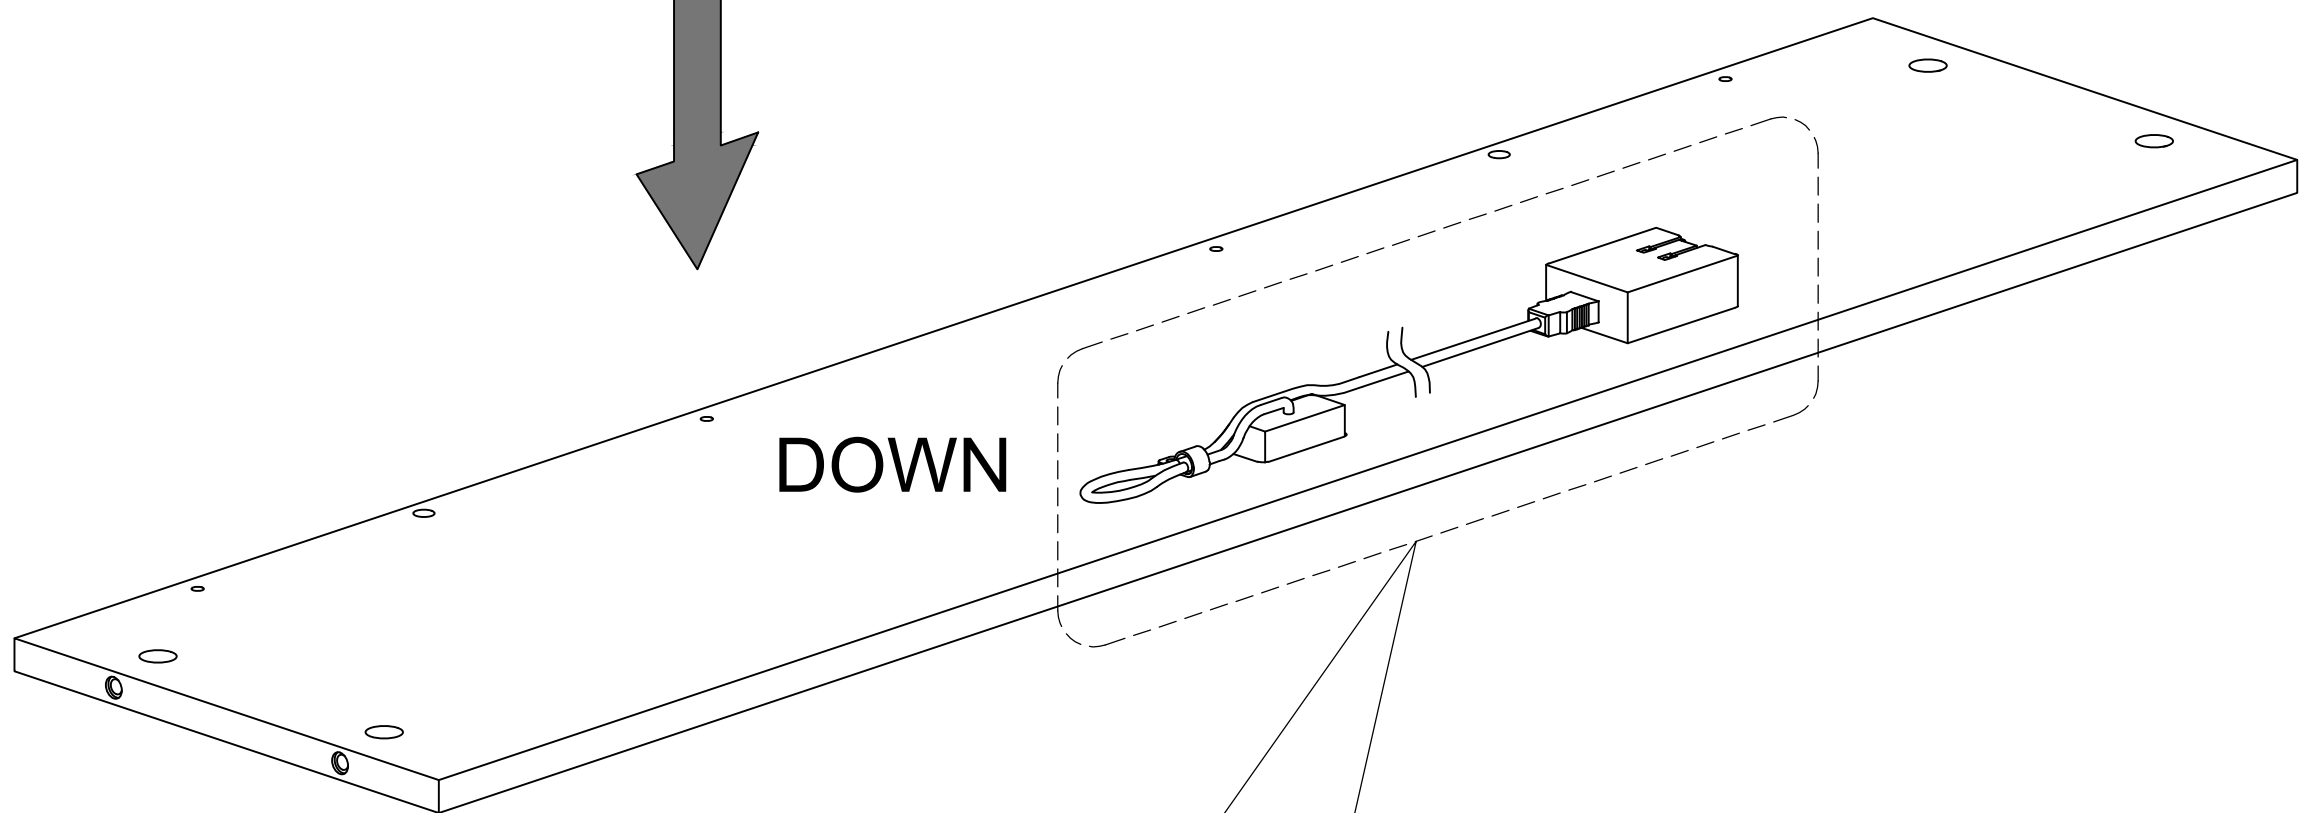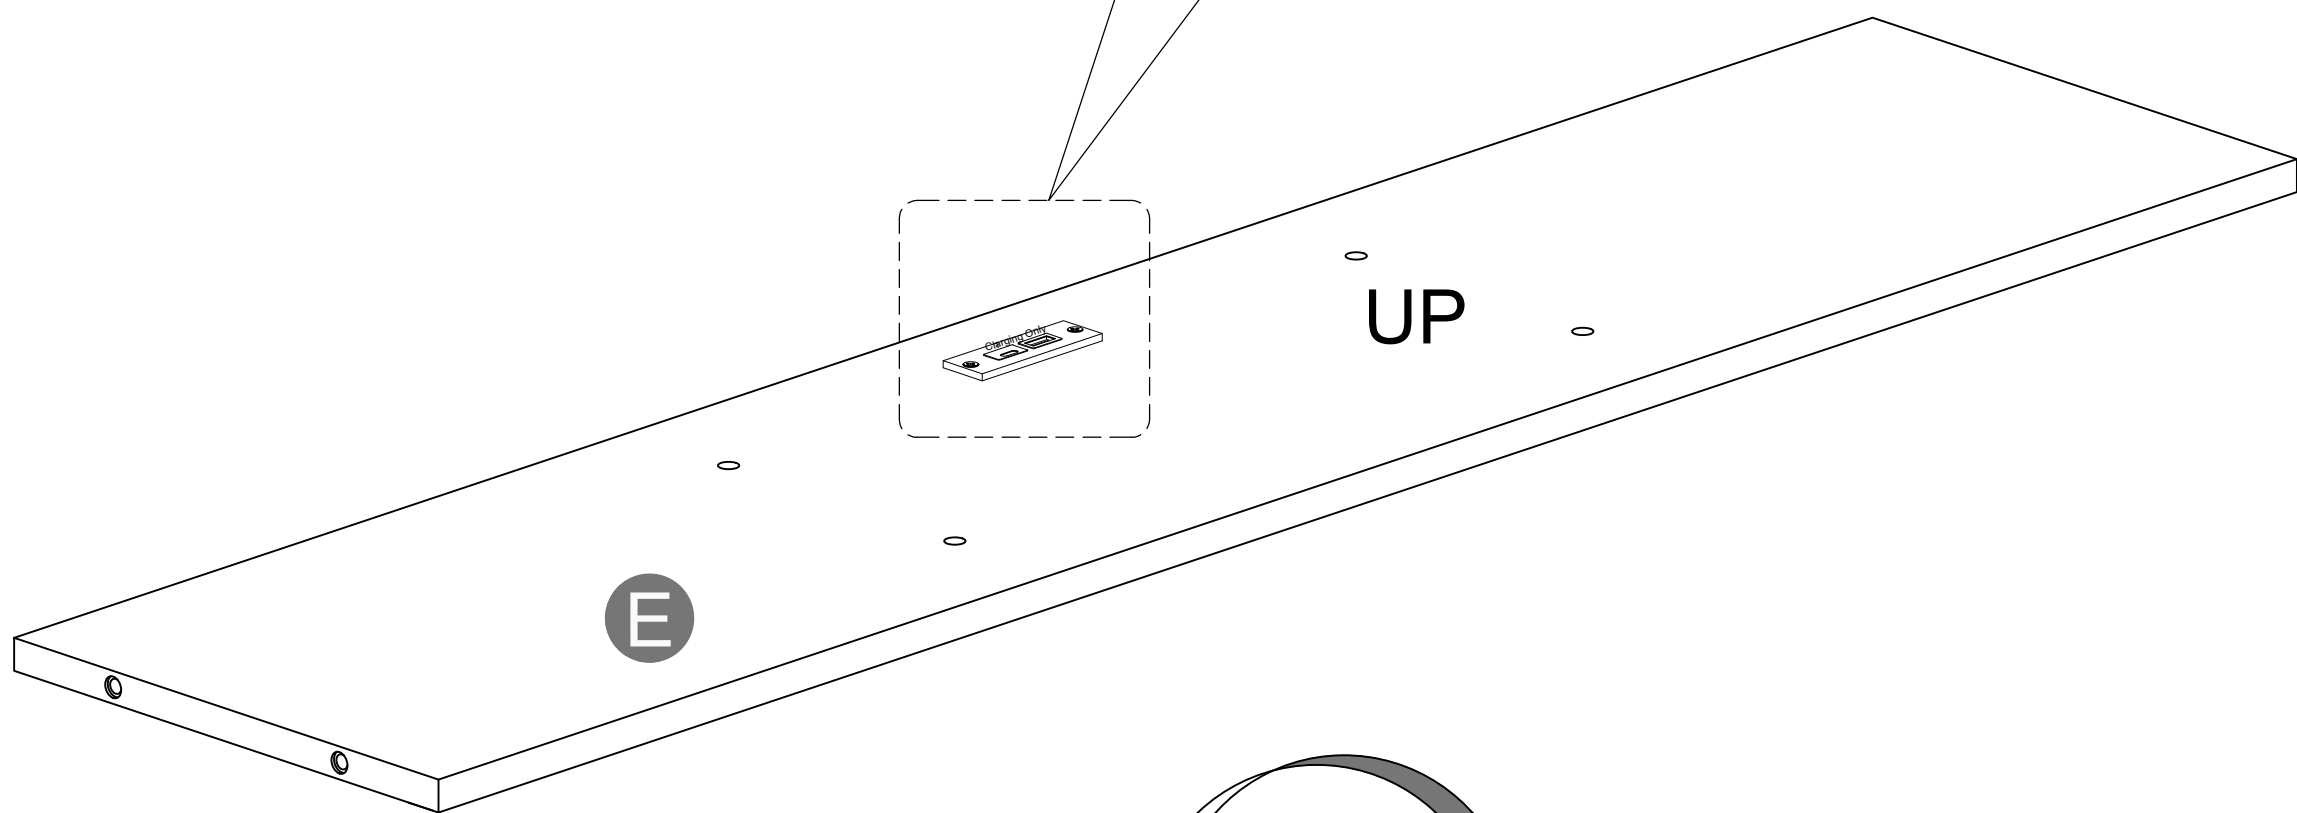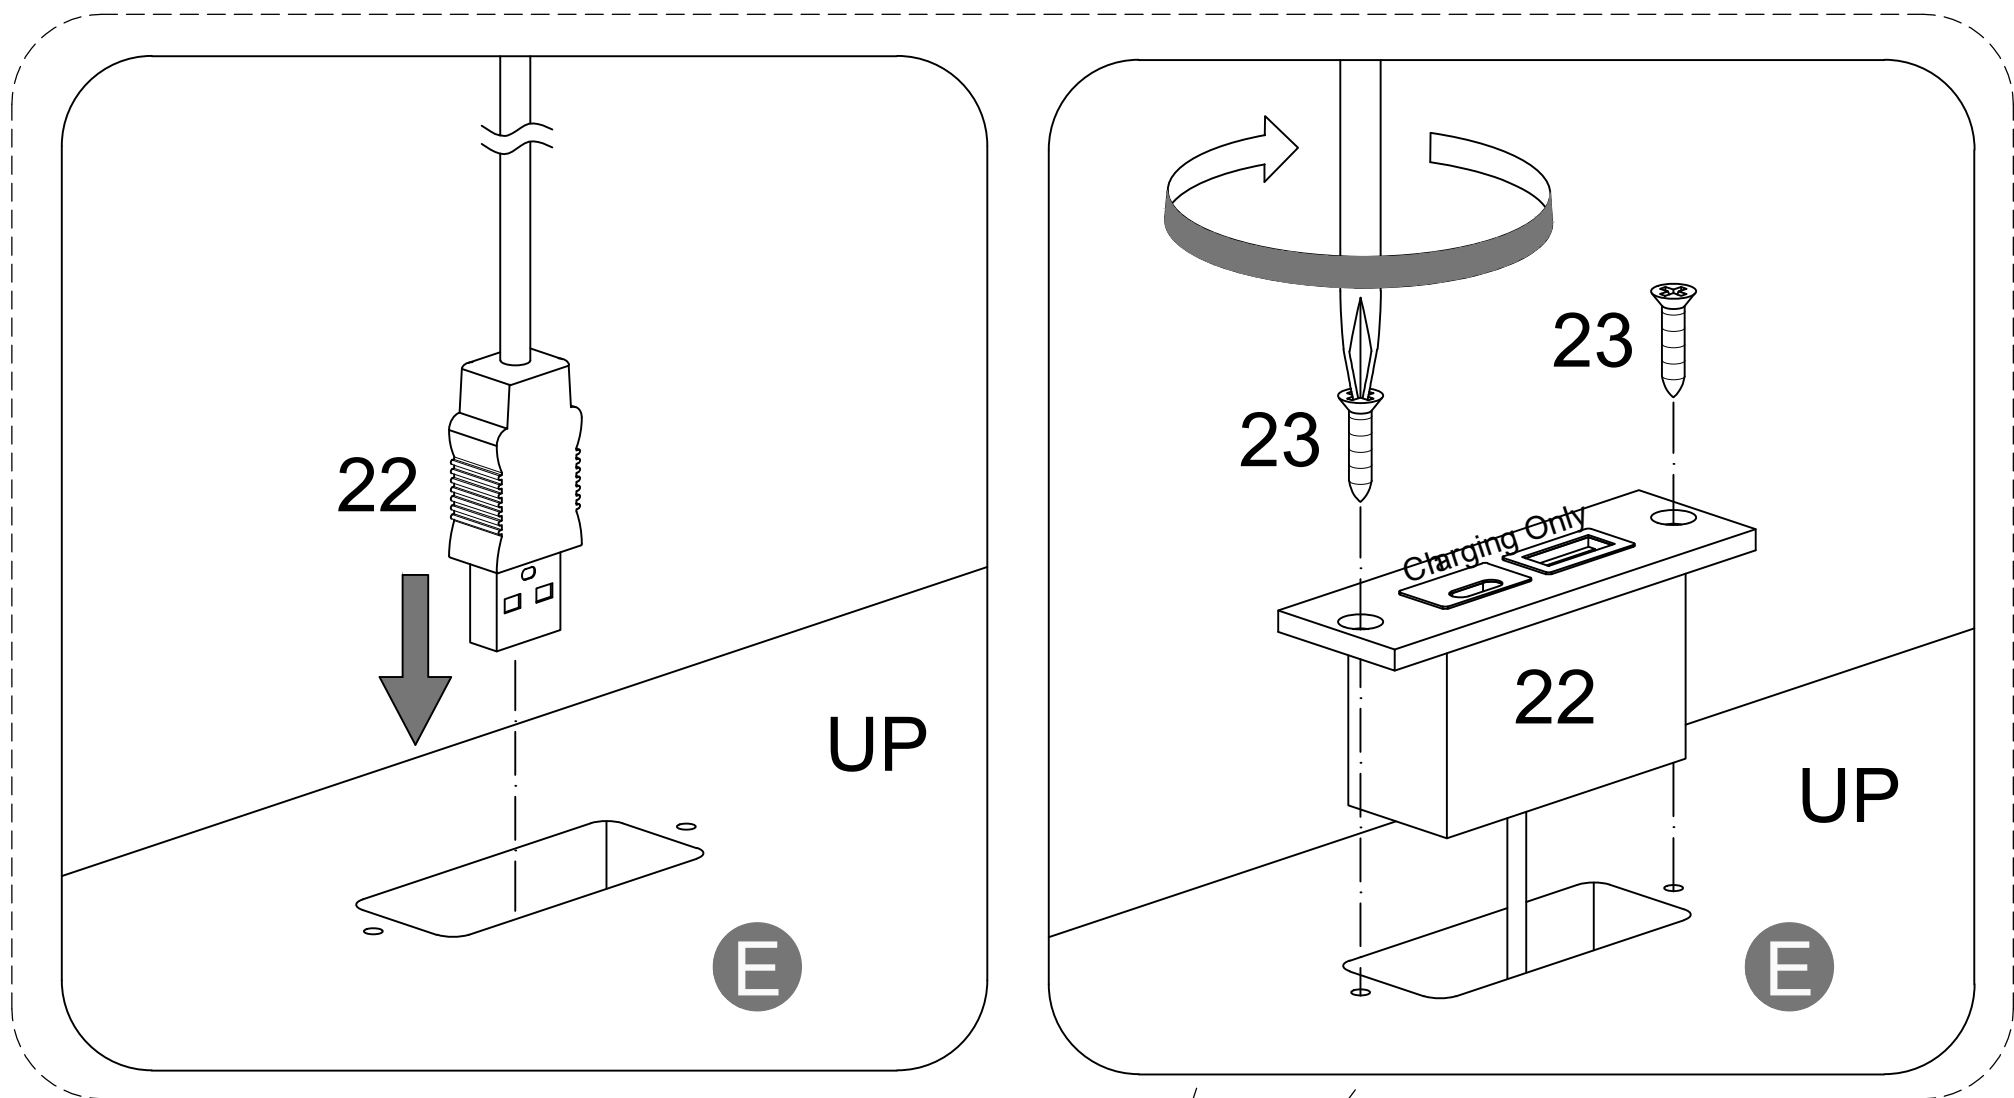


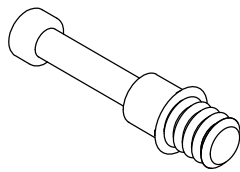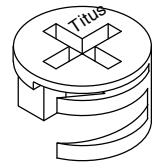
STEP 4:

2		3		9	
4pcs		4pcs		2pcs	

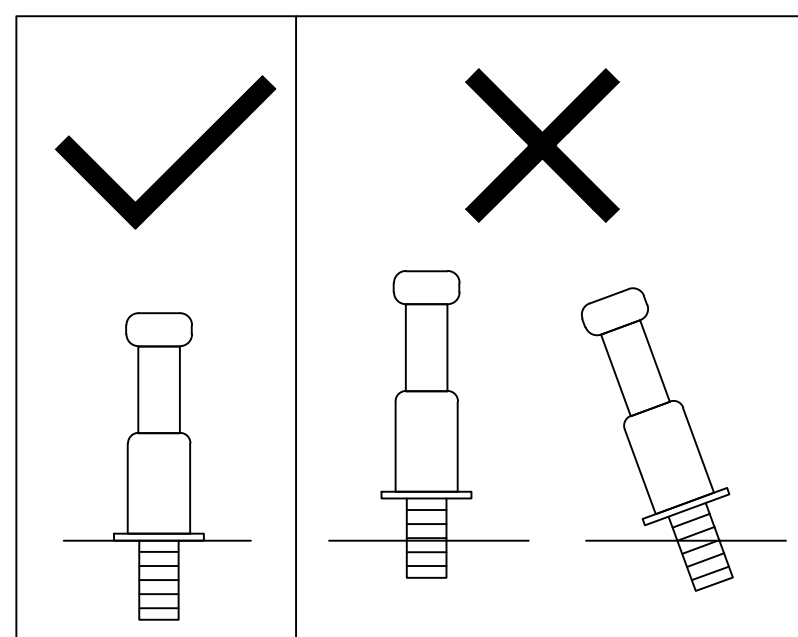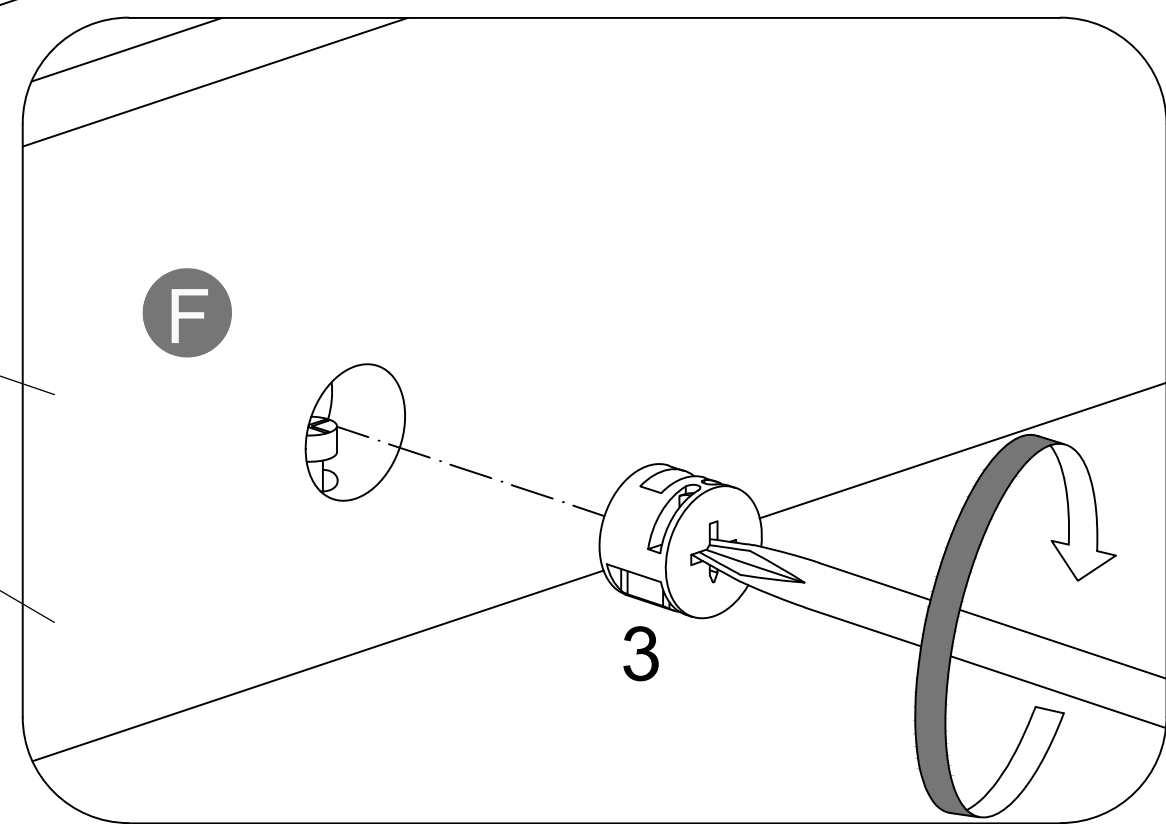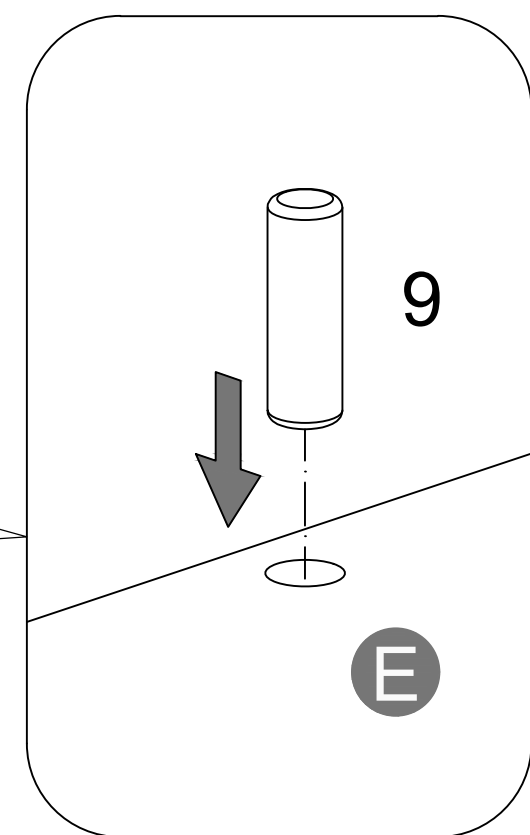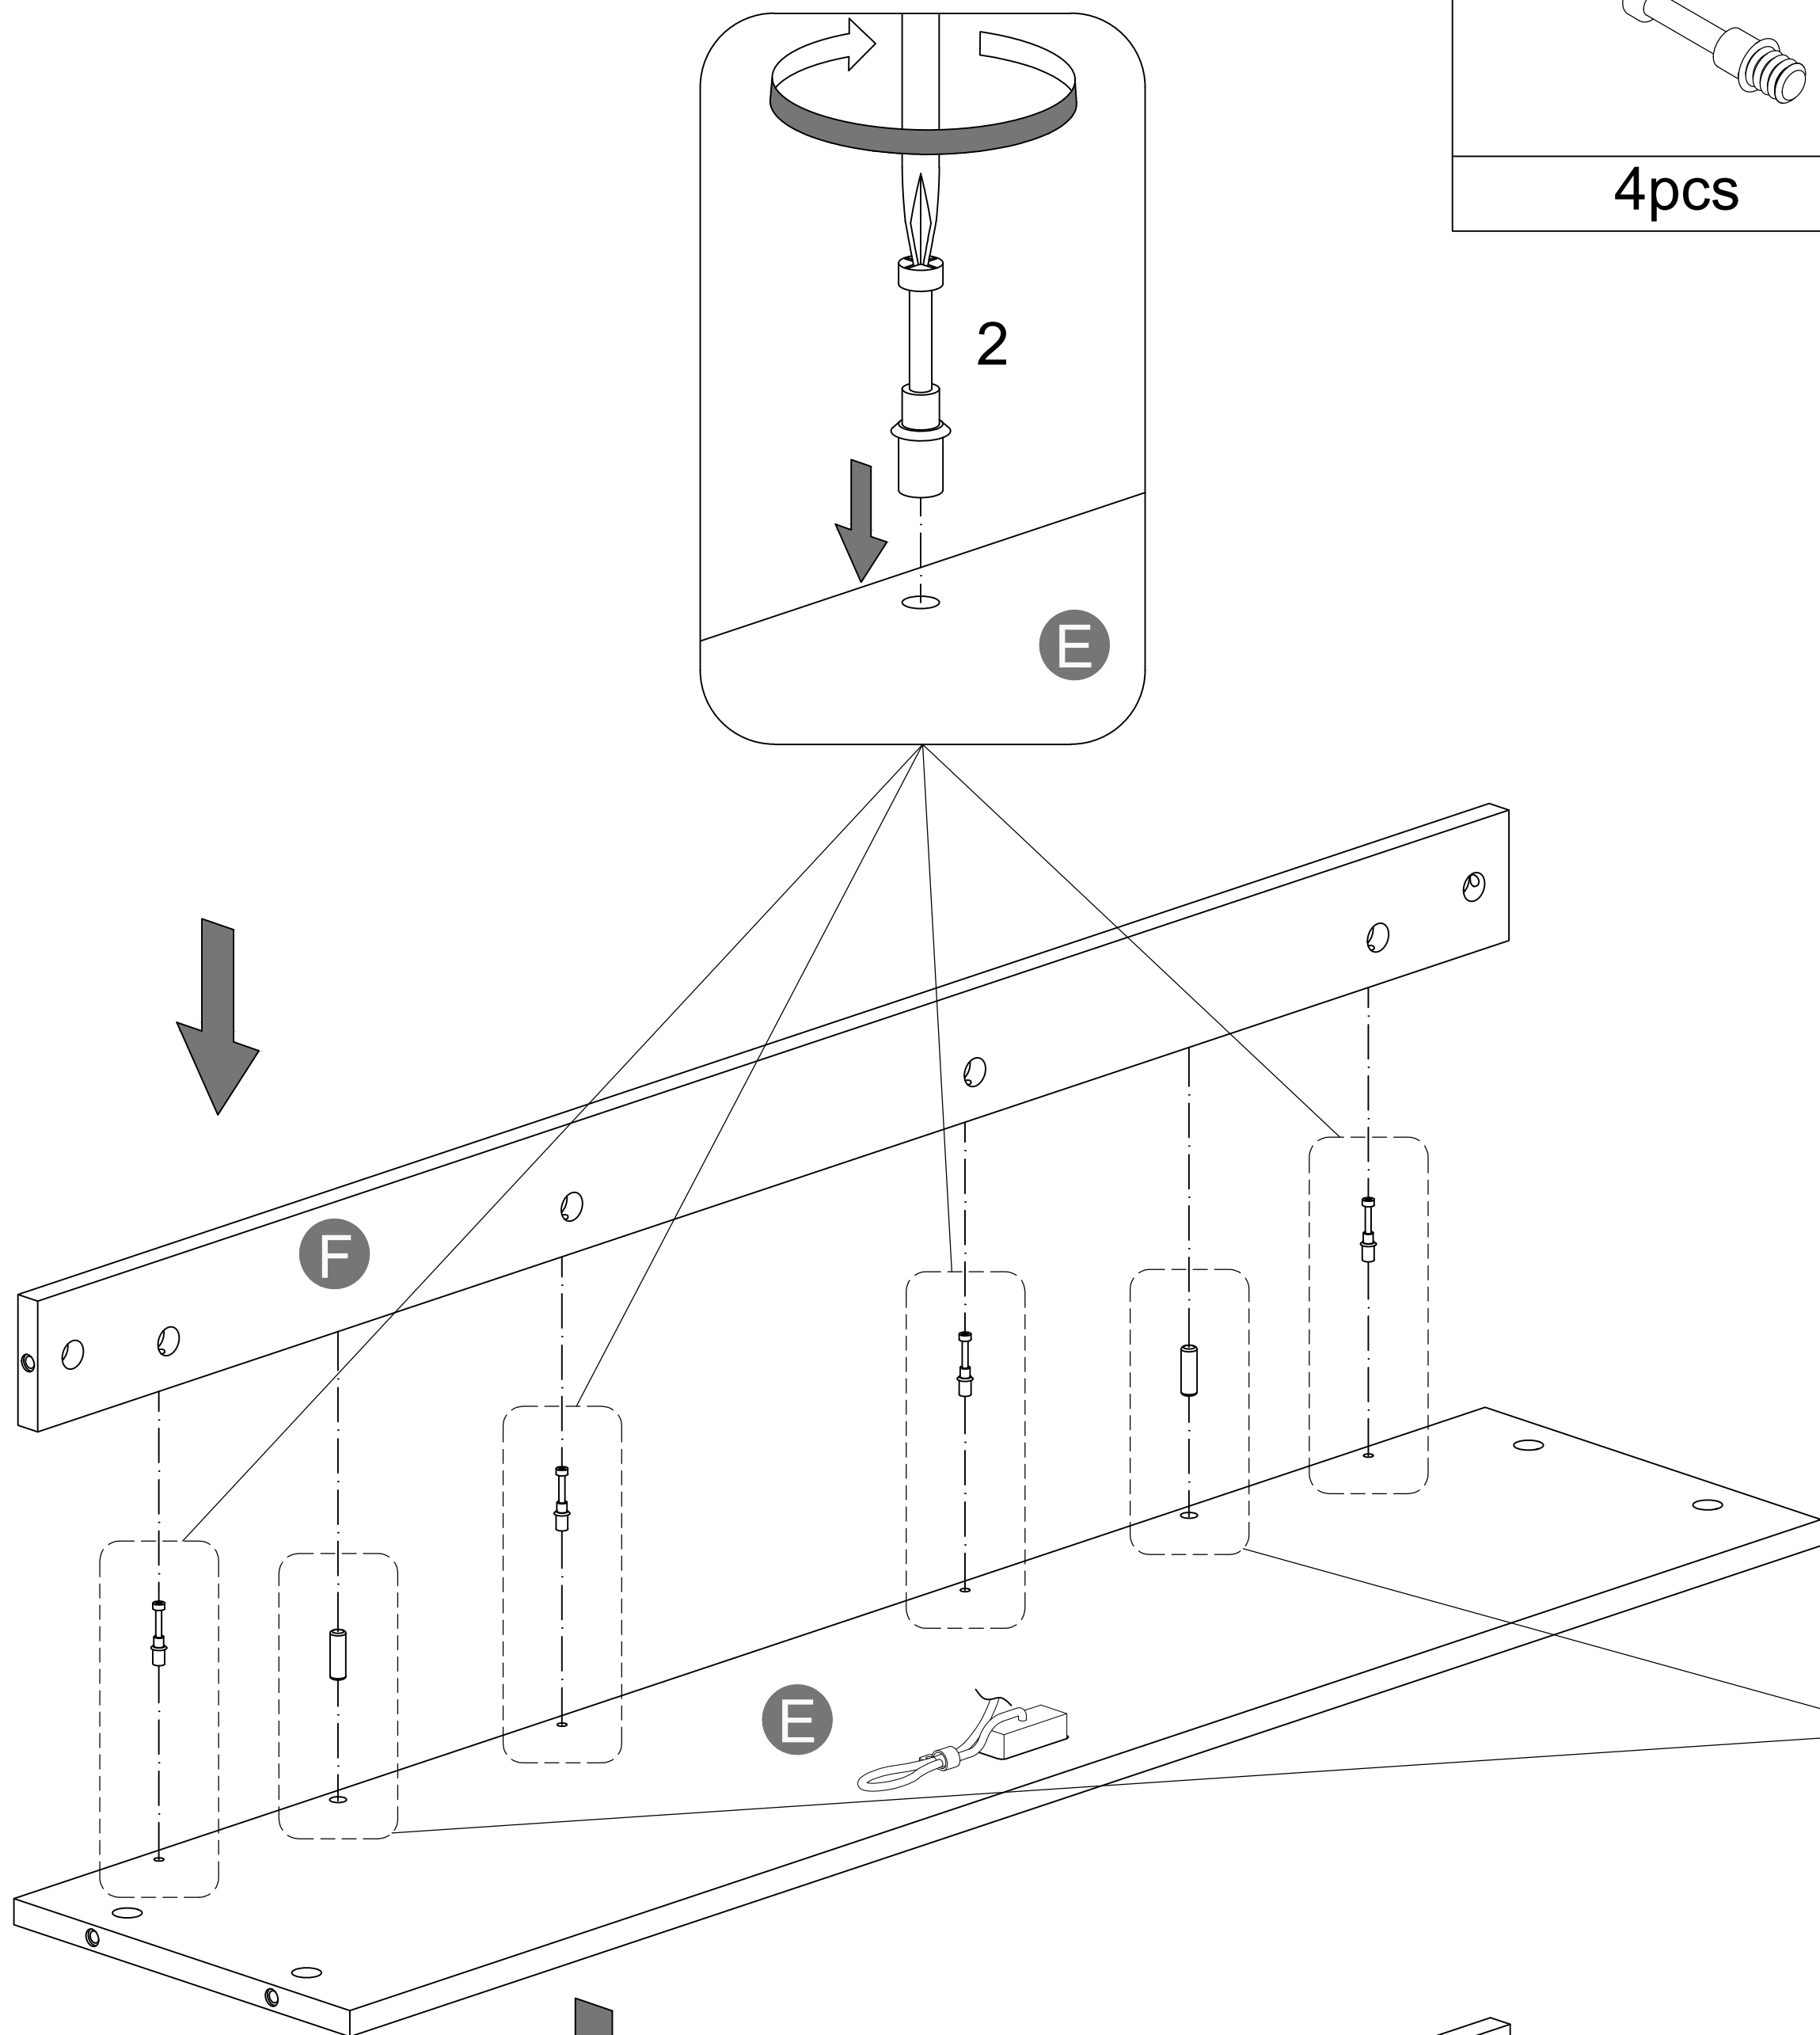

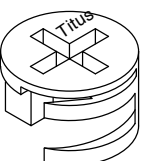
STEP 5:

3	
10pcs	

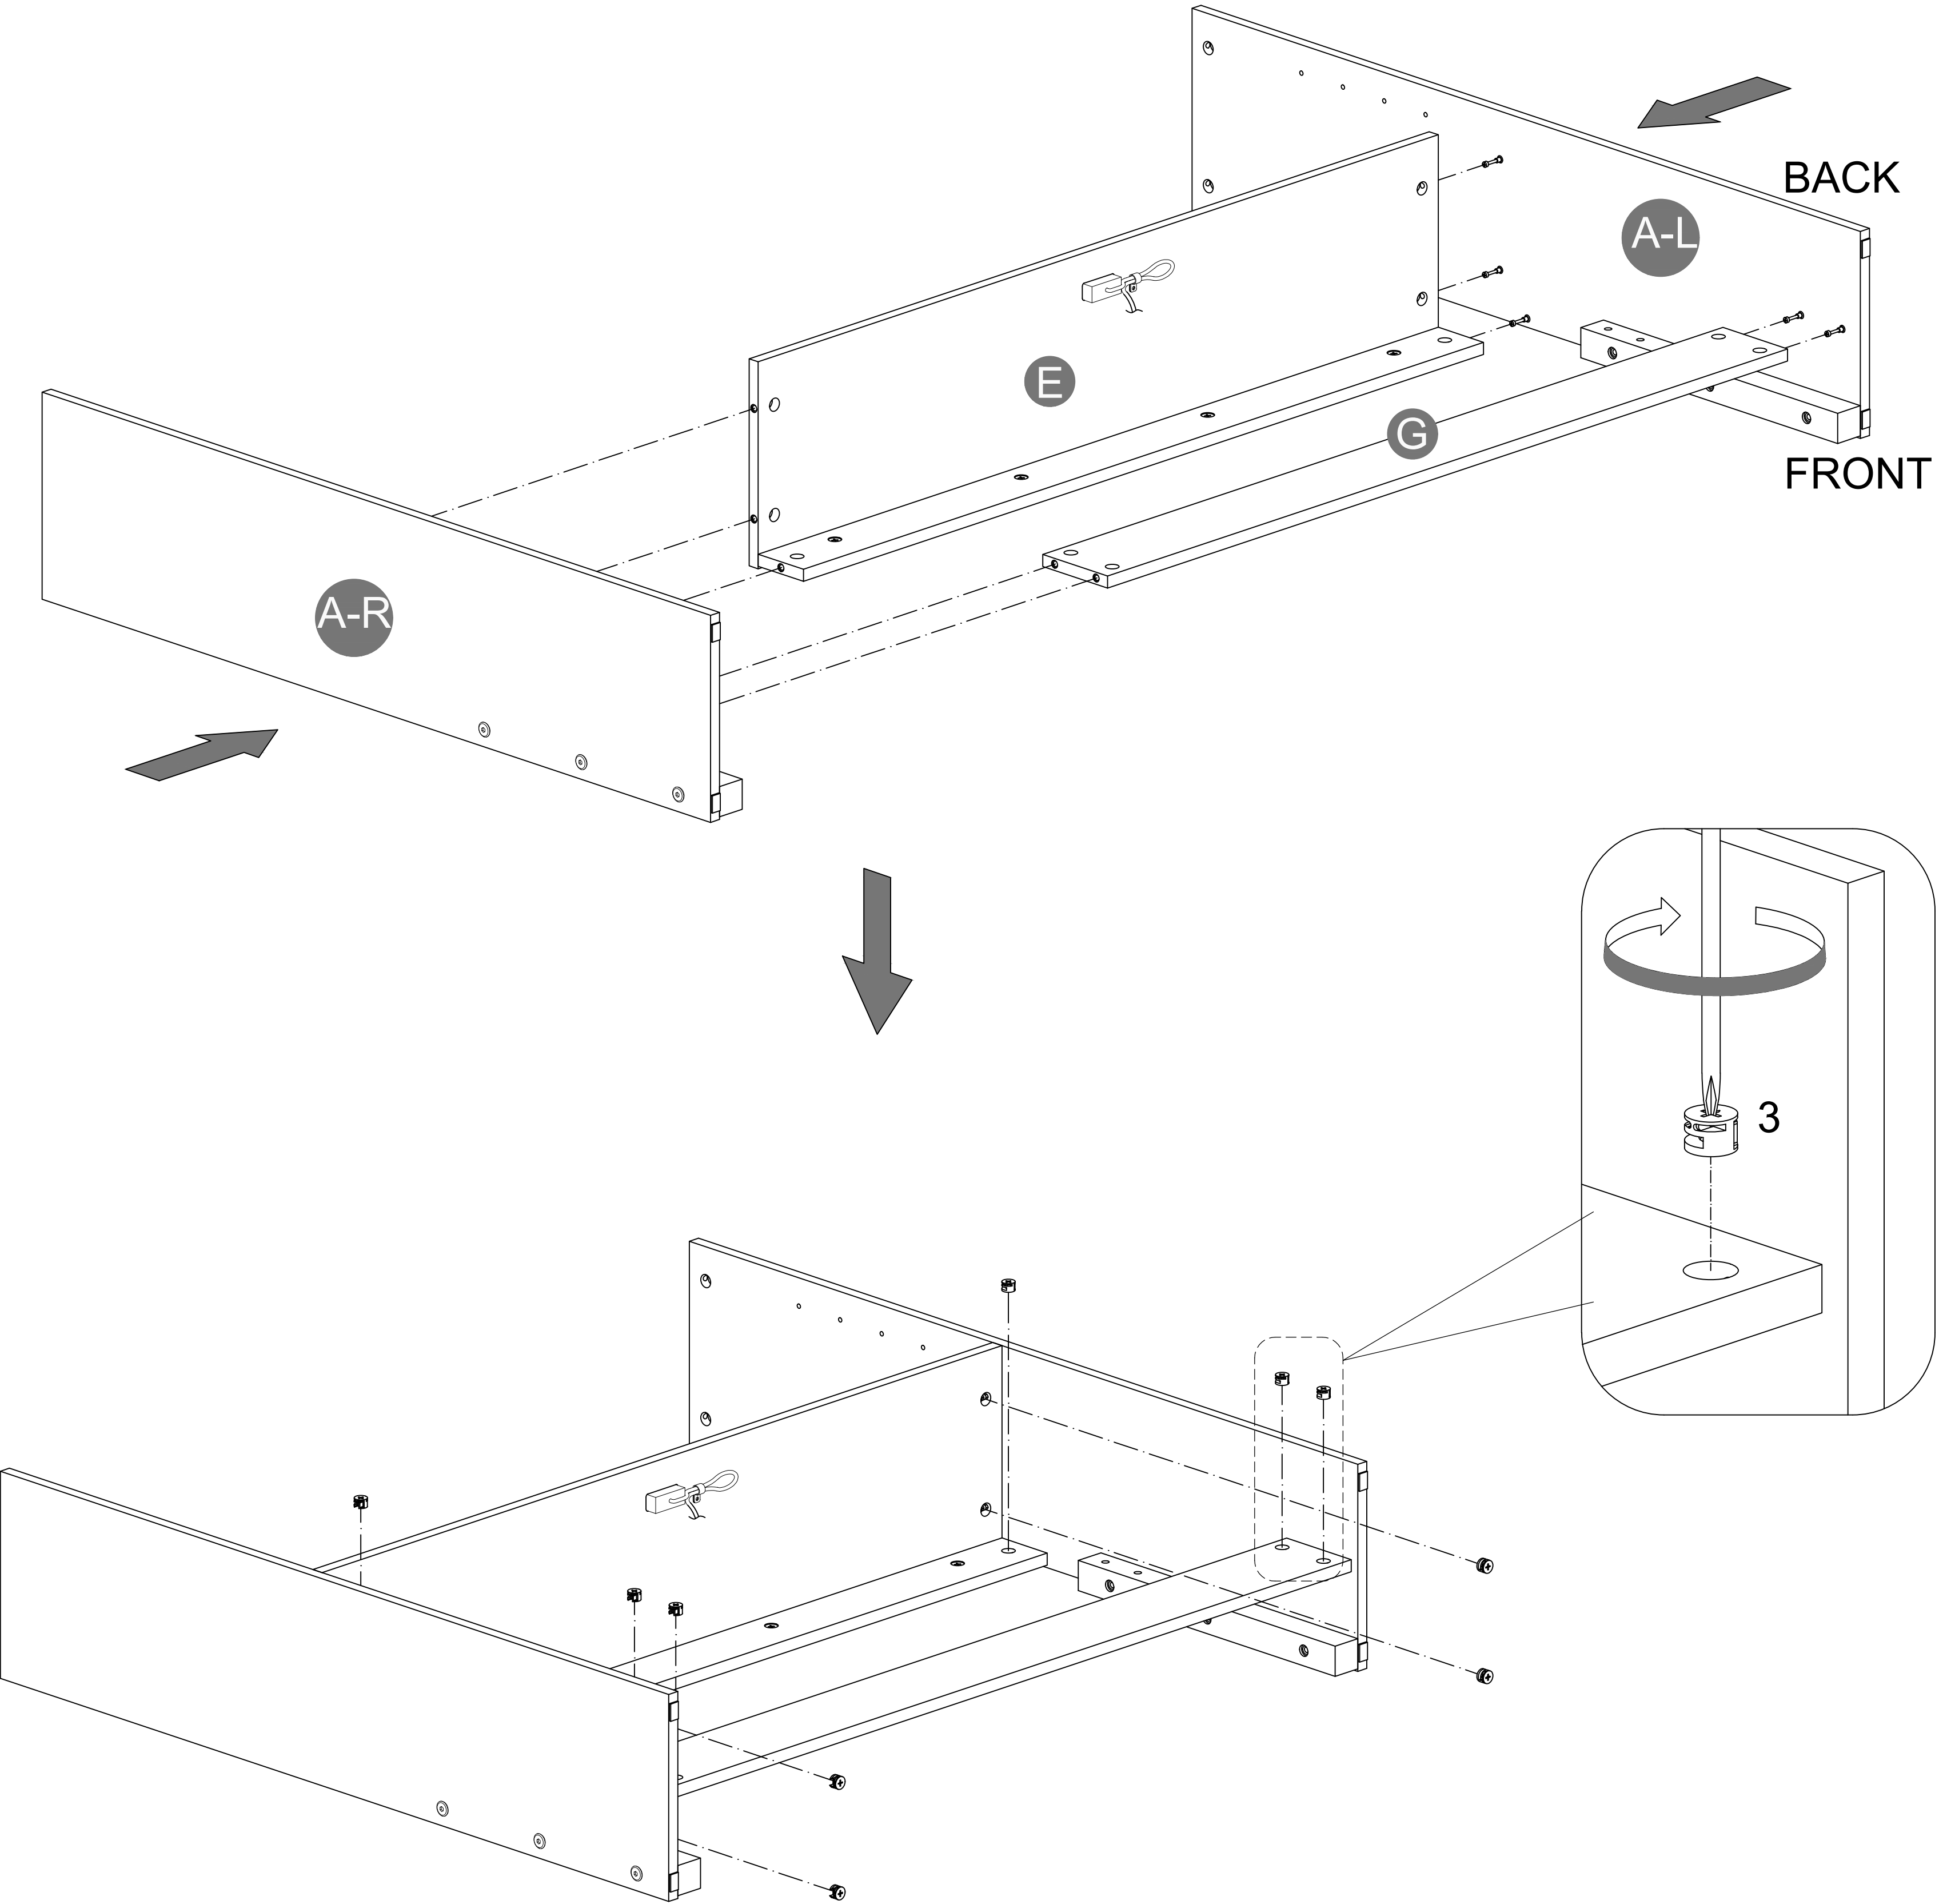


STEP 6:

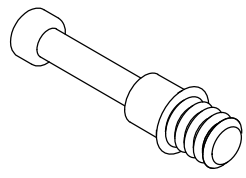2



6pcs

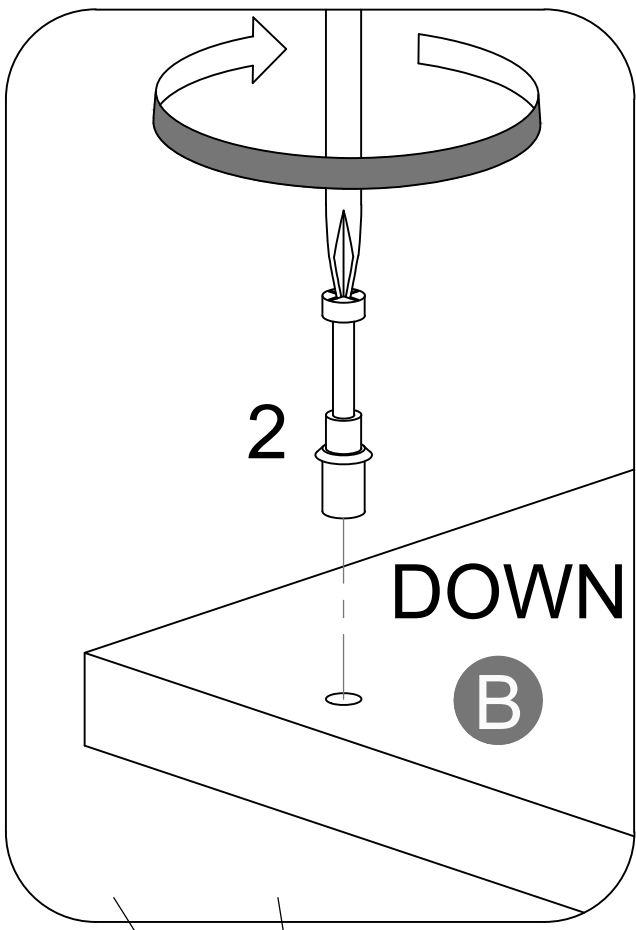

2

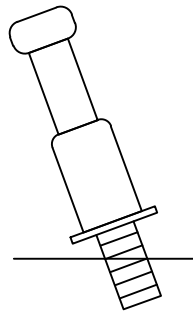
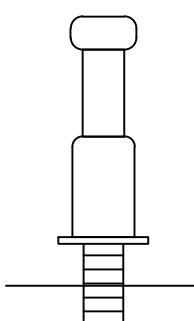
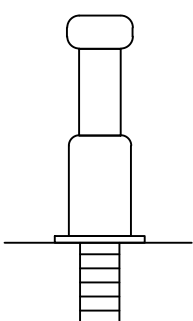
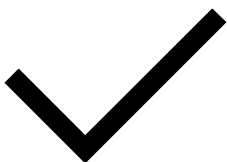
DOWN

B

B


DOWN

B




STEP 7:

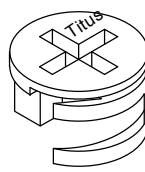3




2pcs

9



2pcs

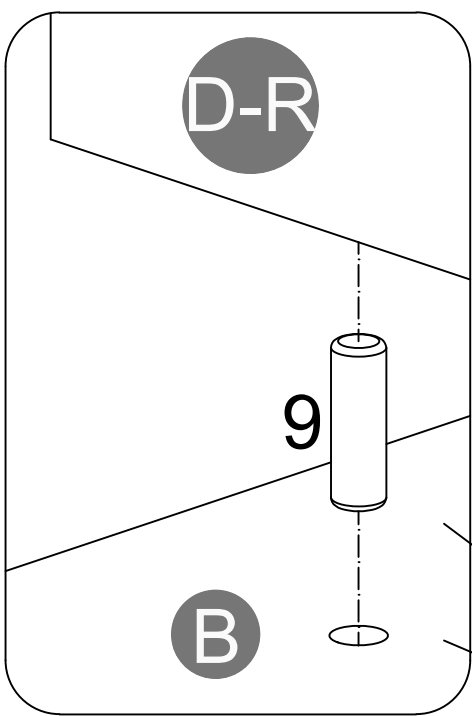

D-R

9

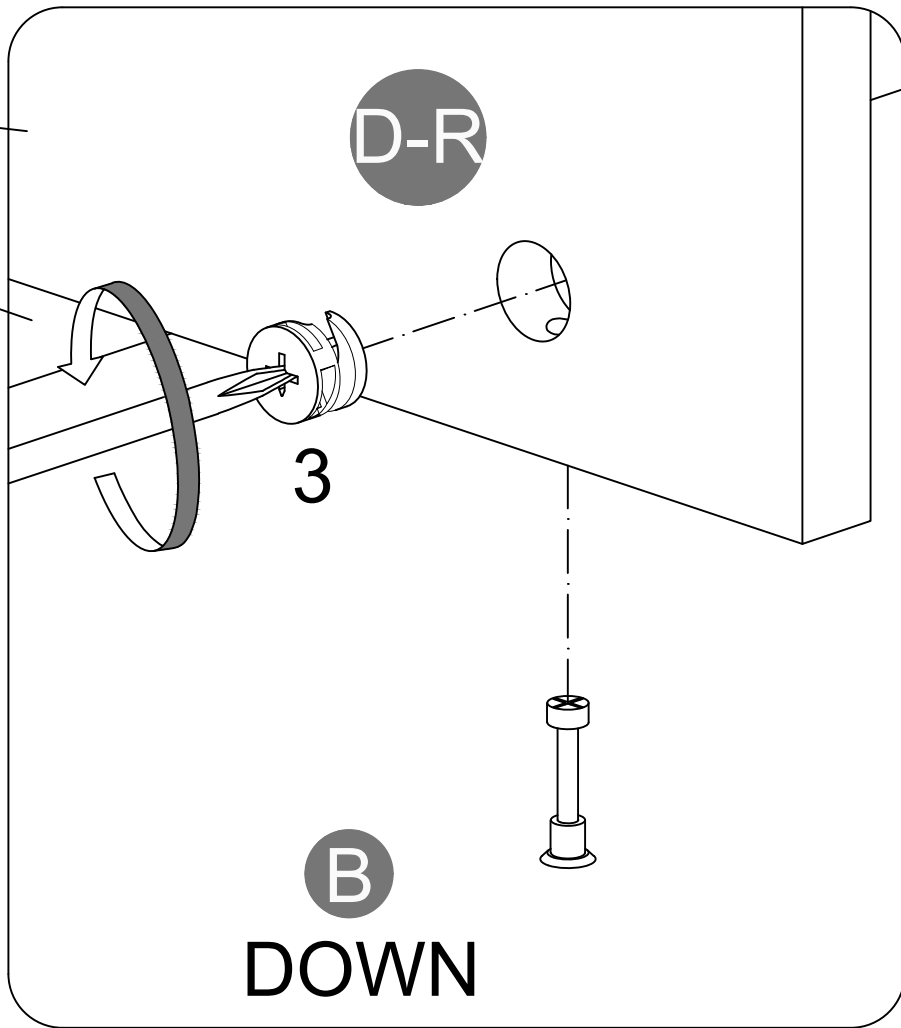
B

BACK

D-R

D-L

FRONT





D-R


3

B


DOWN



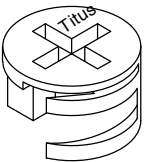

STEP 8:

3		9	
4pcs		4pcs	

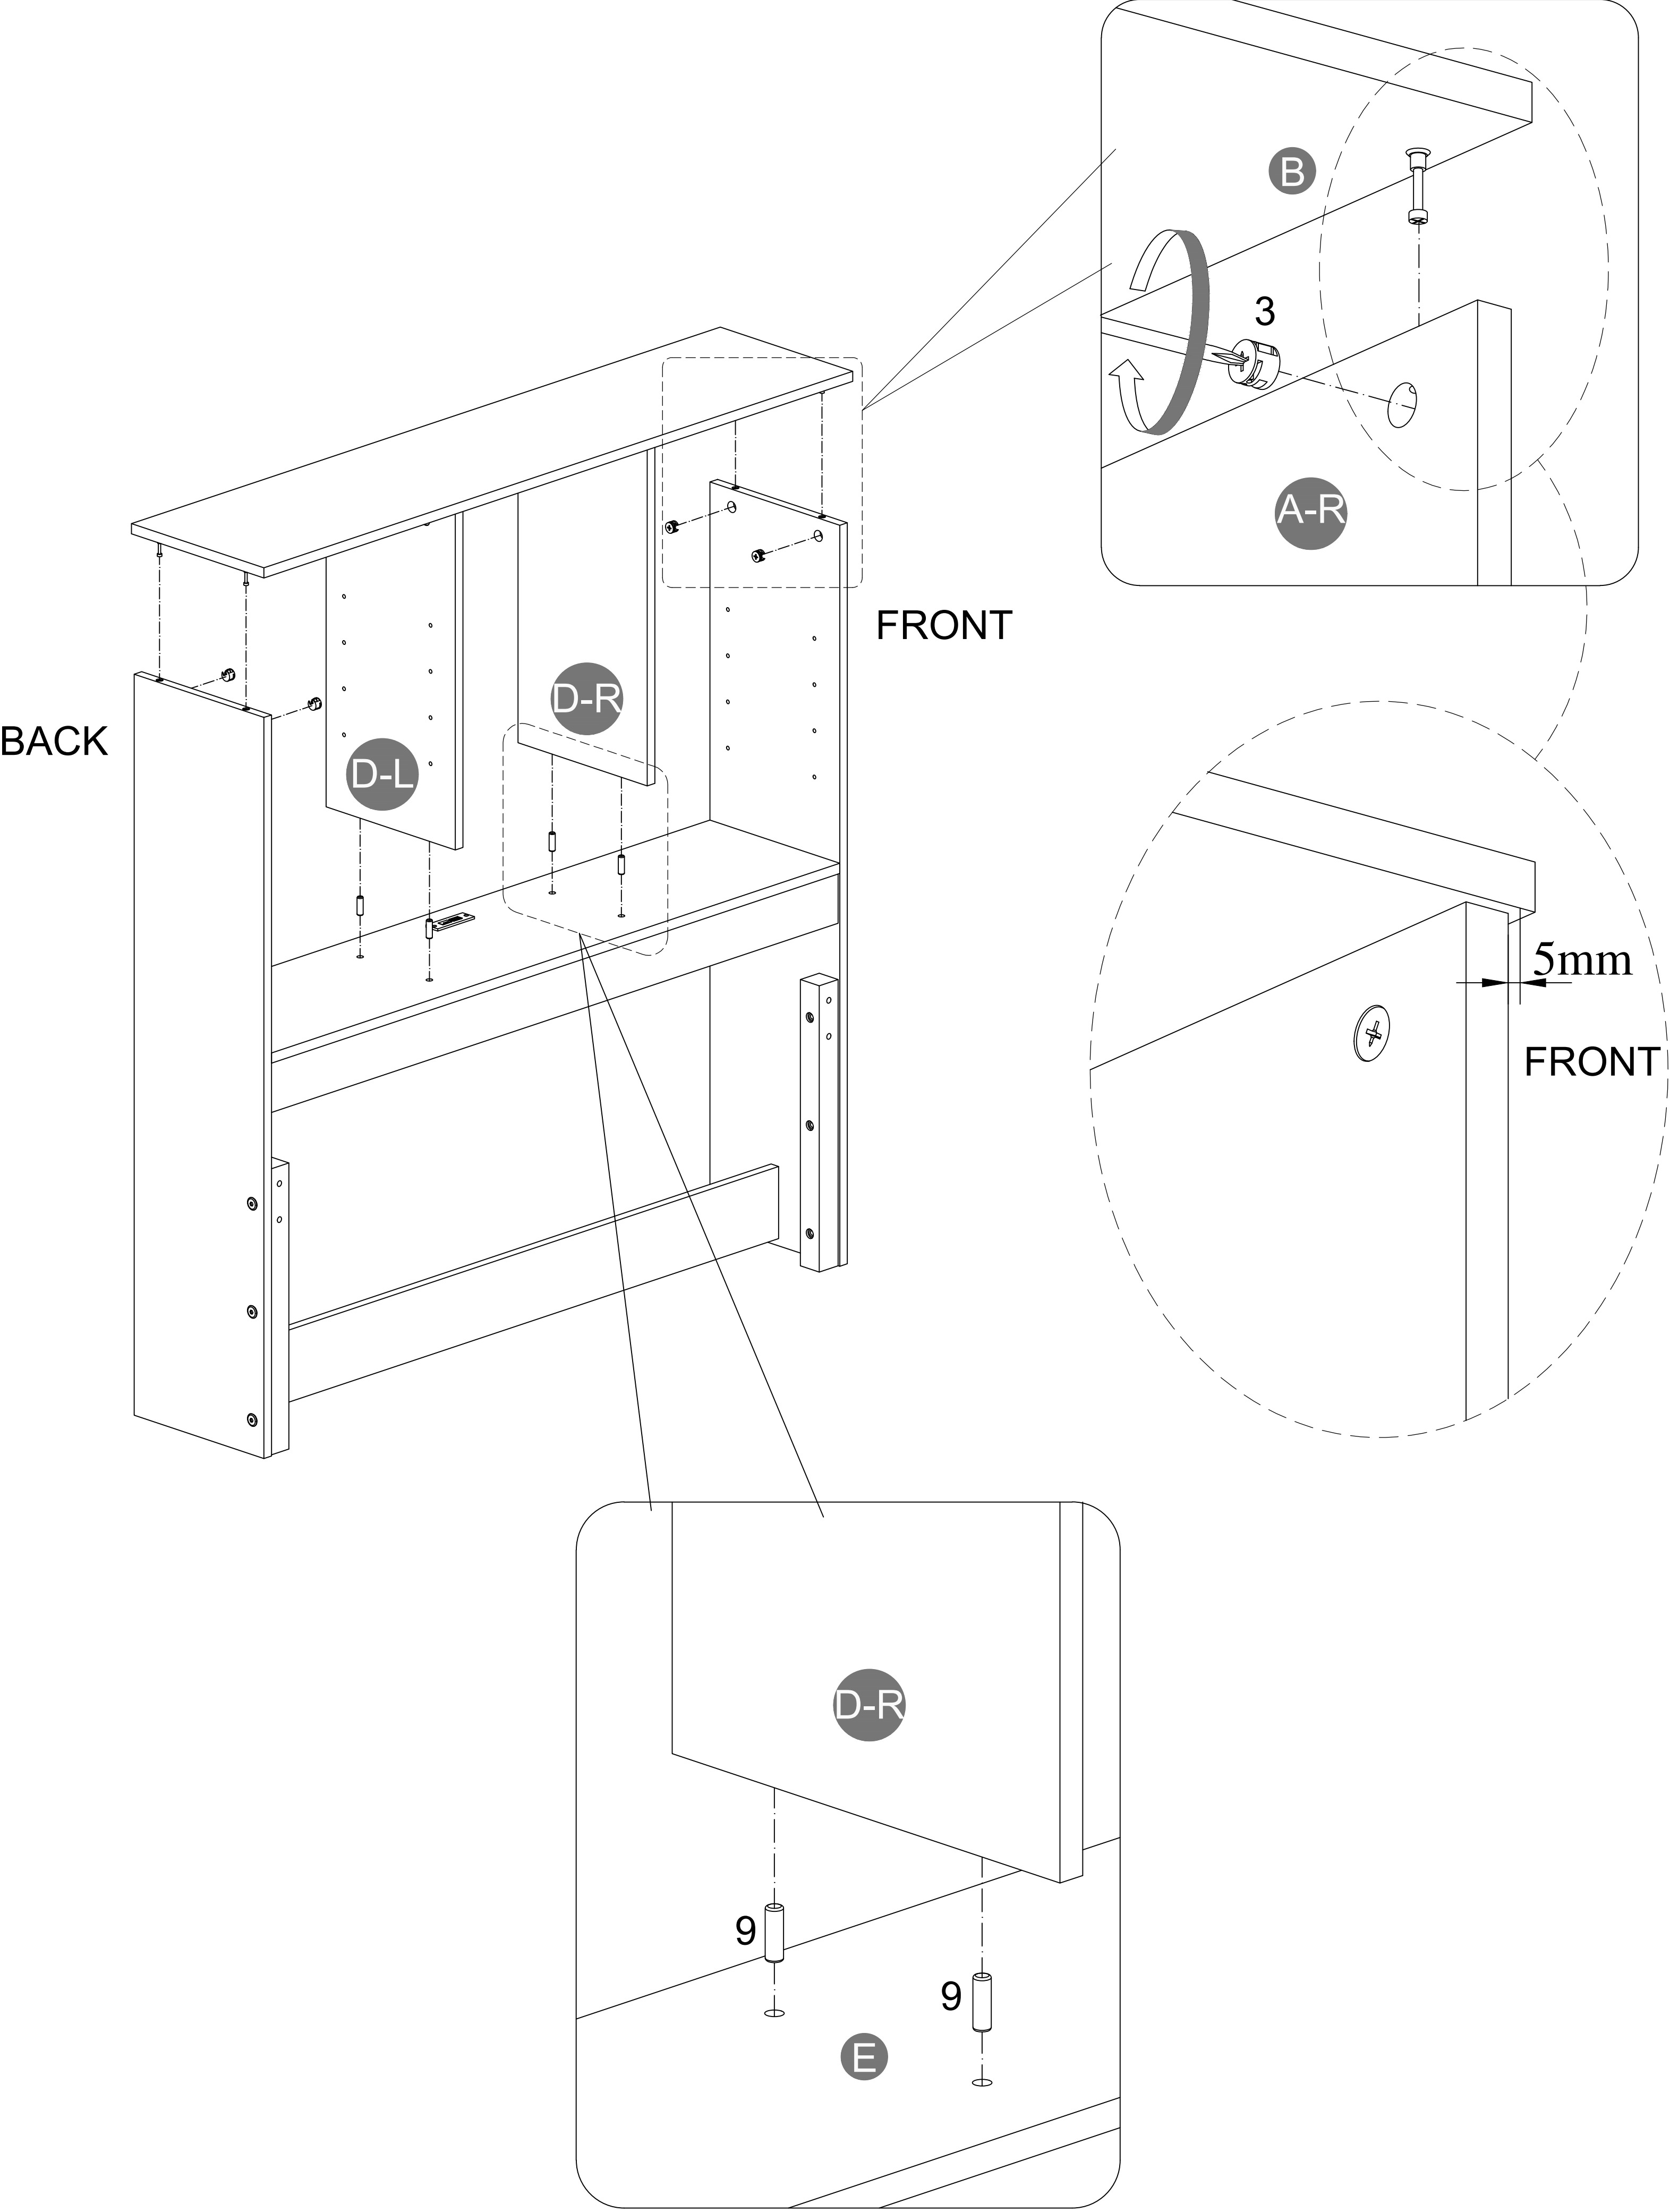


STEP 9:


8	
30pcs	

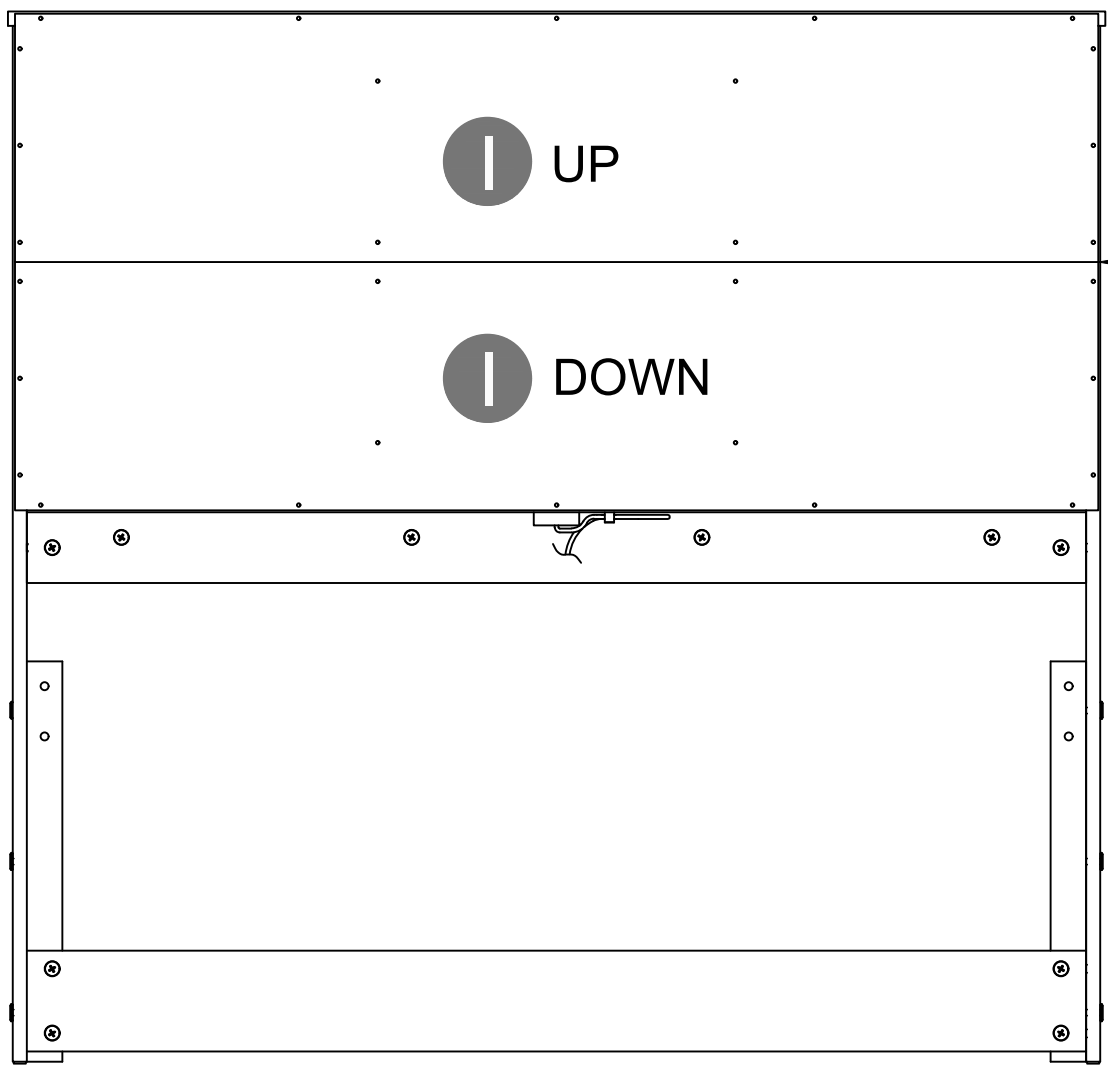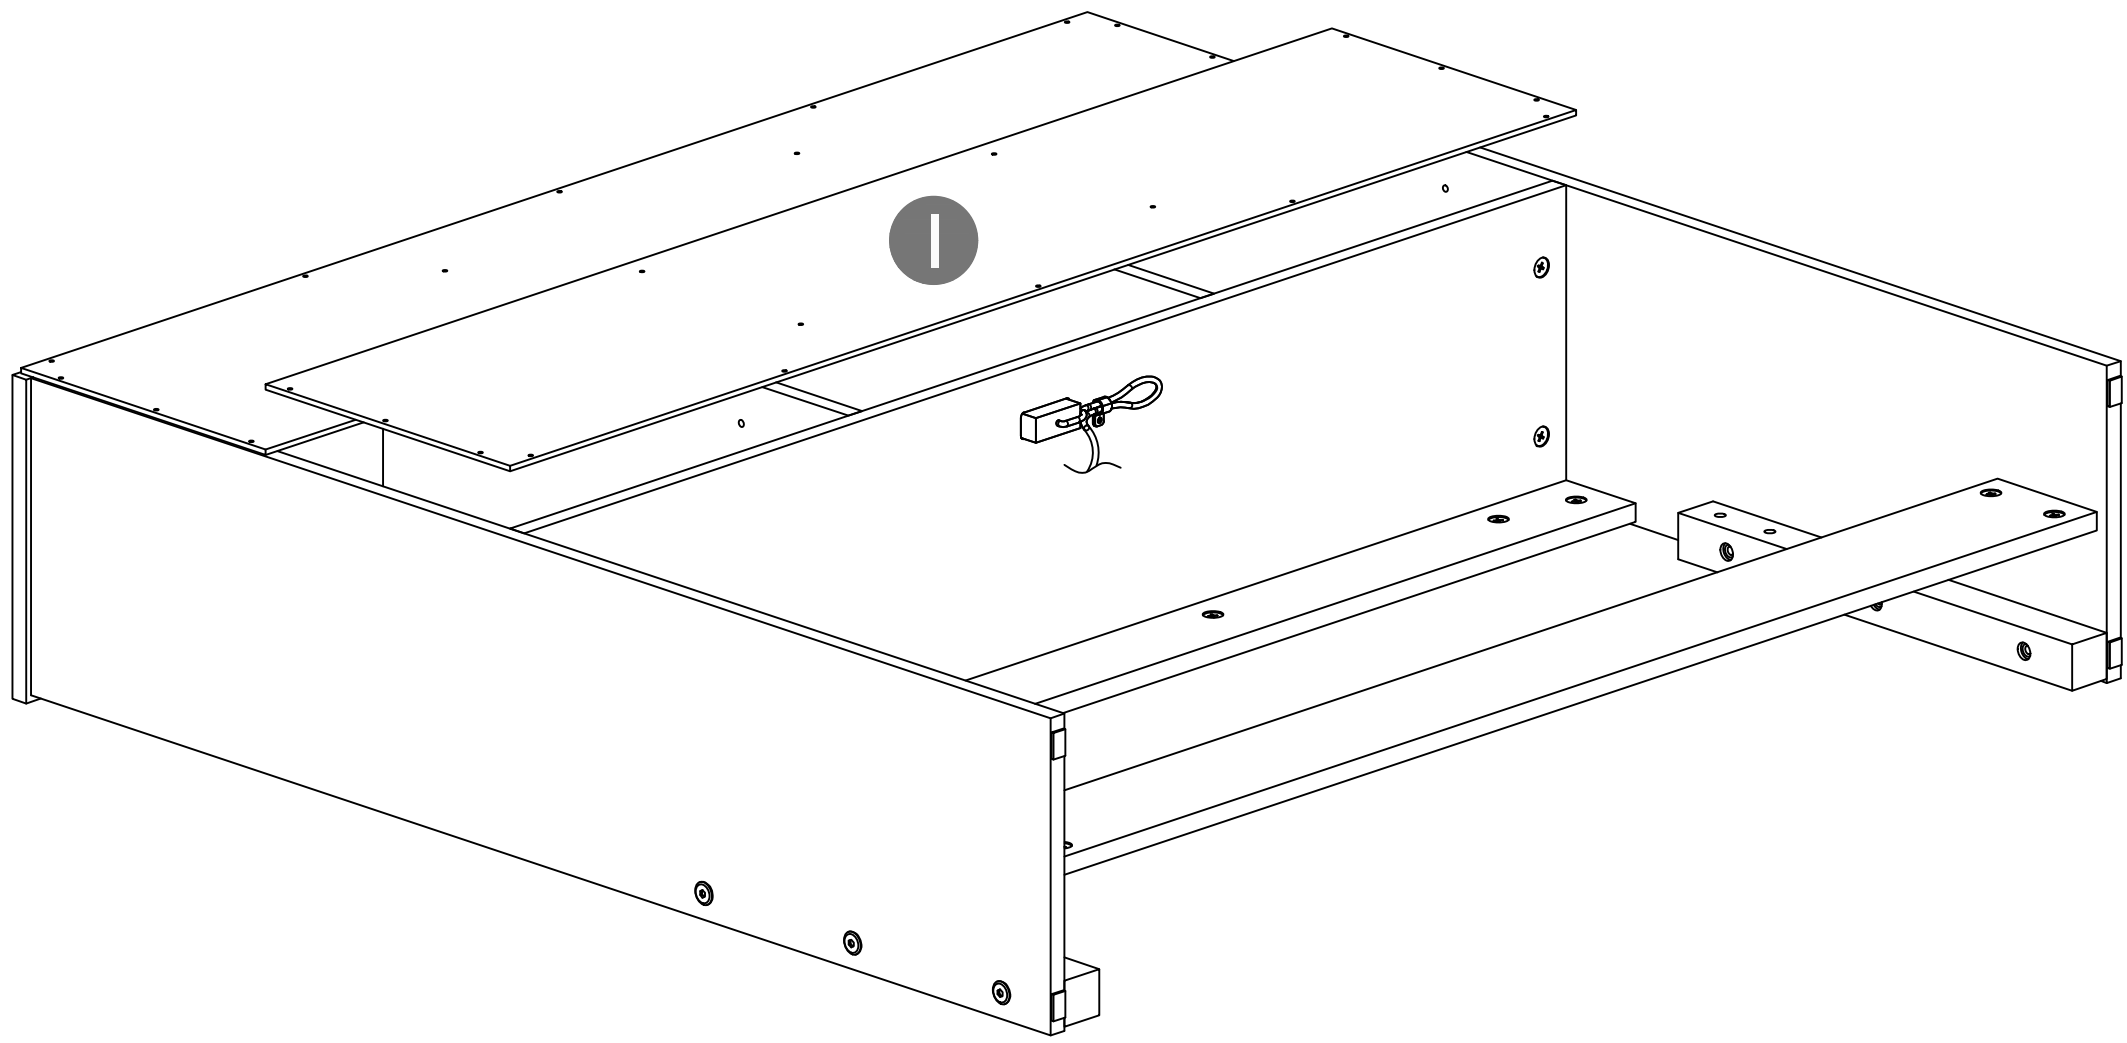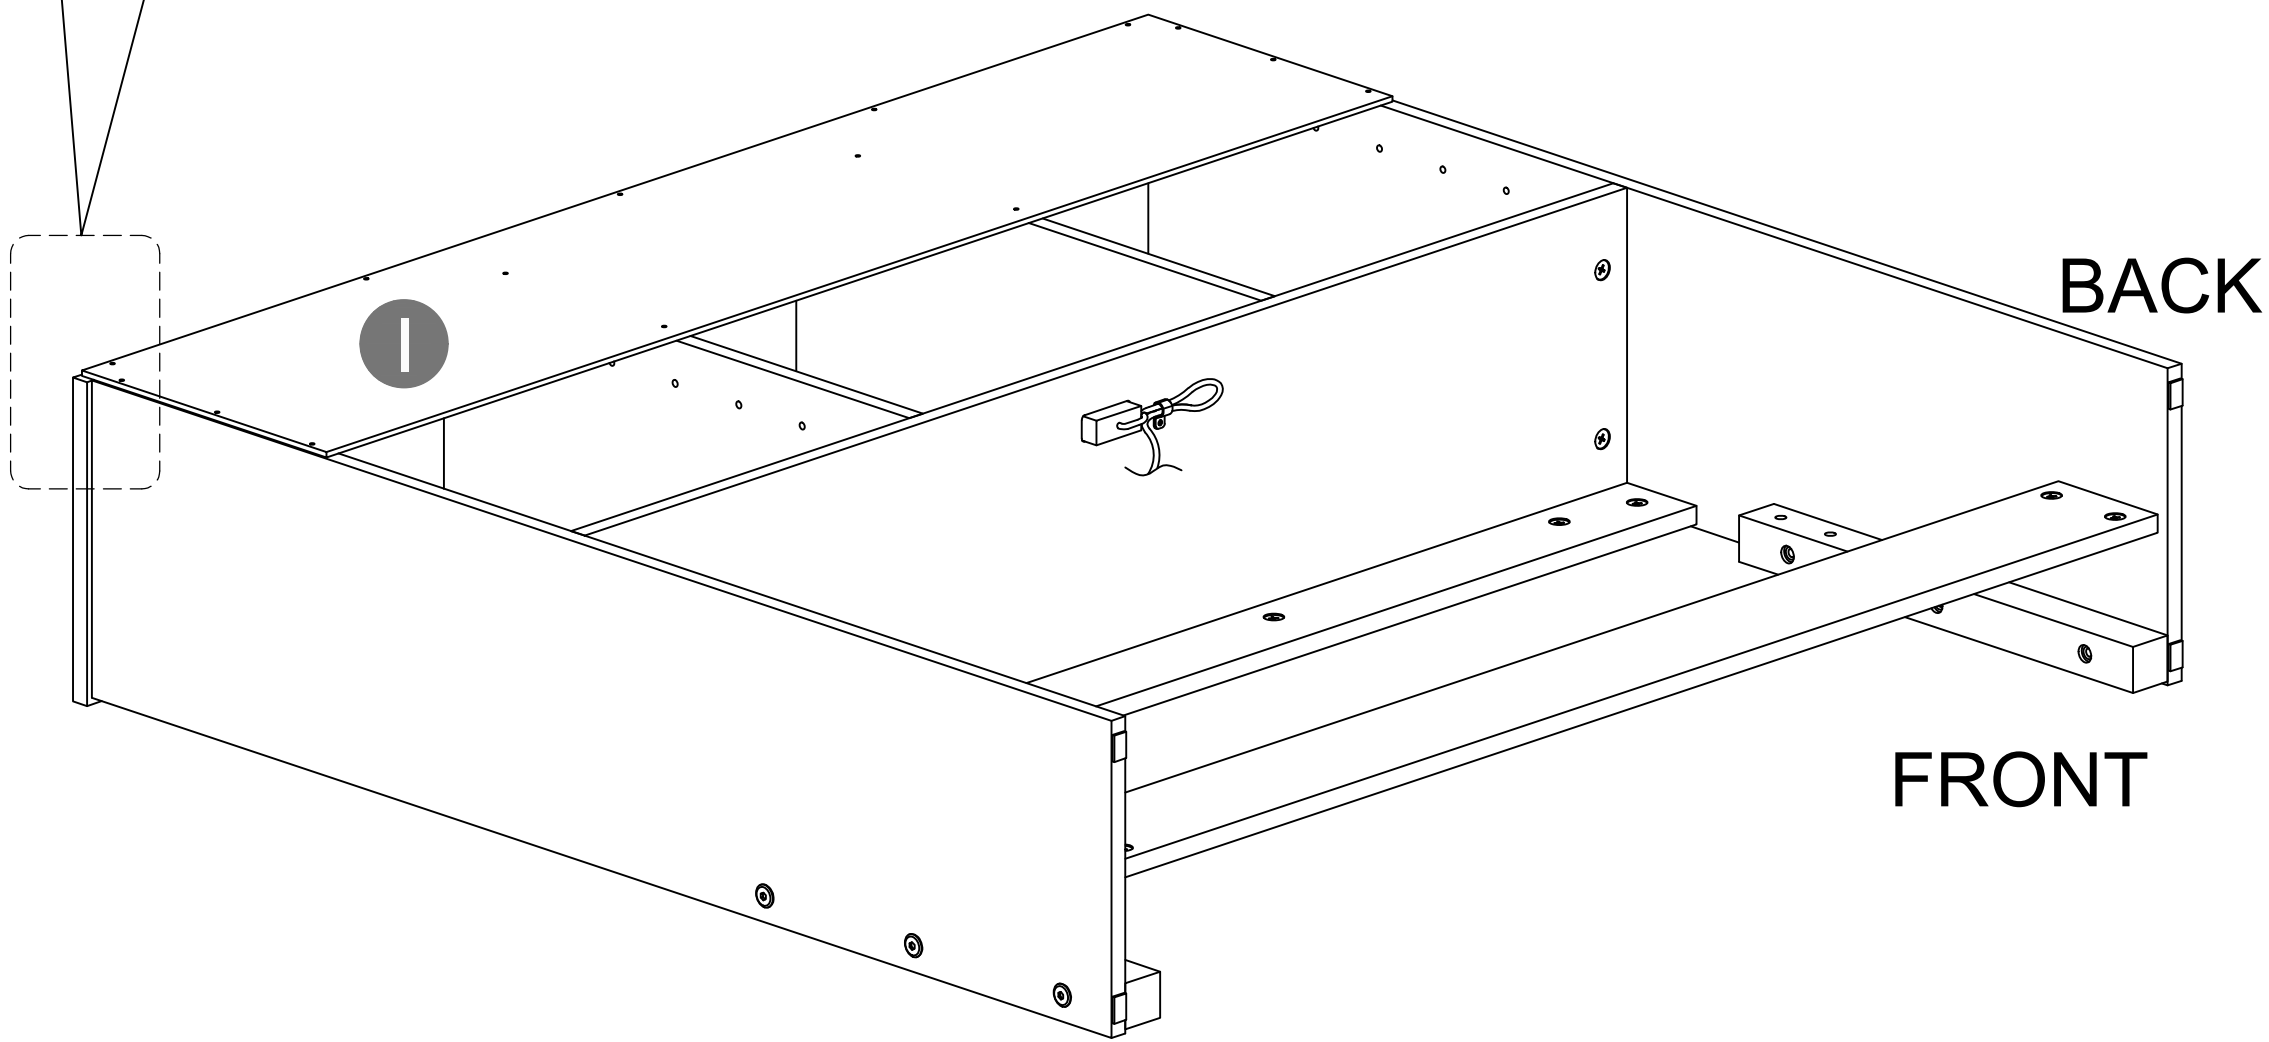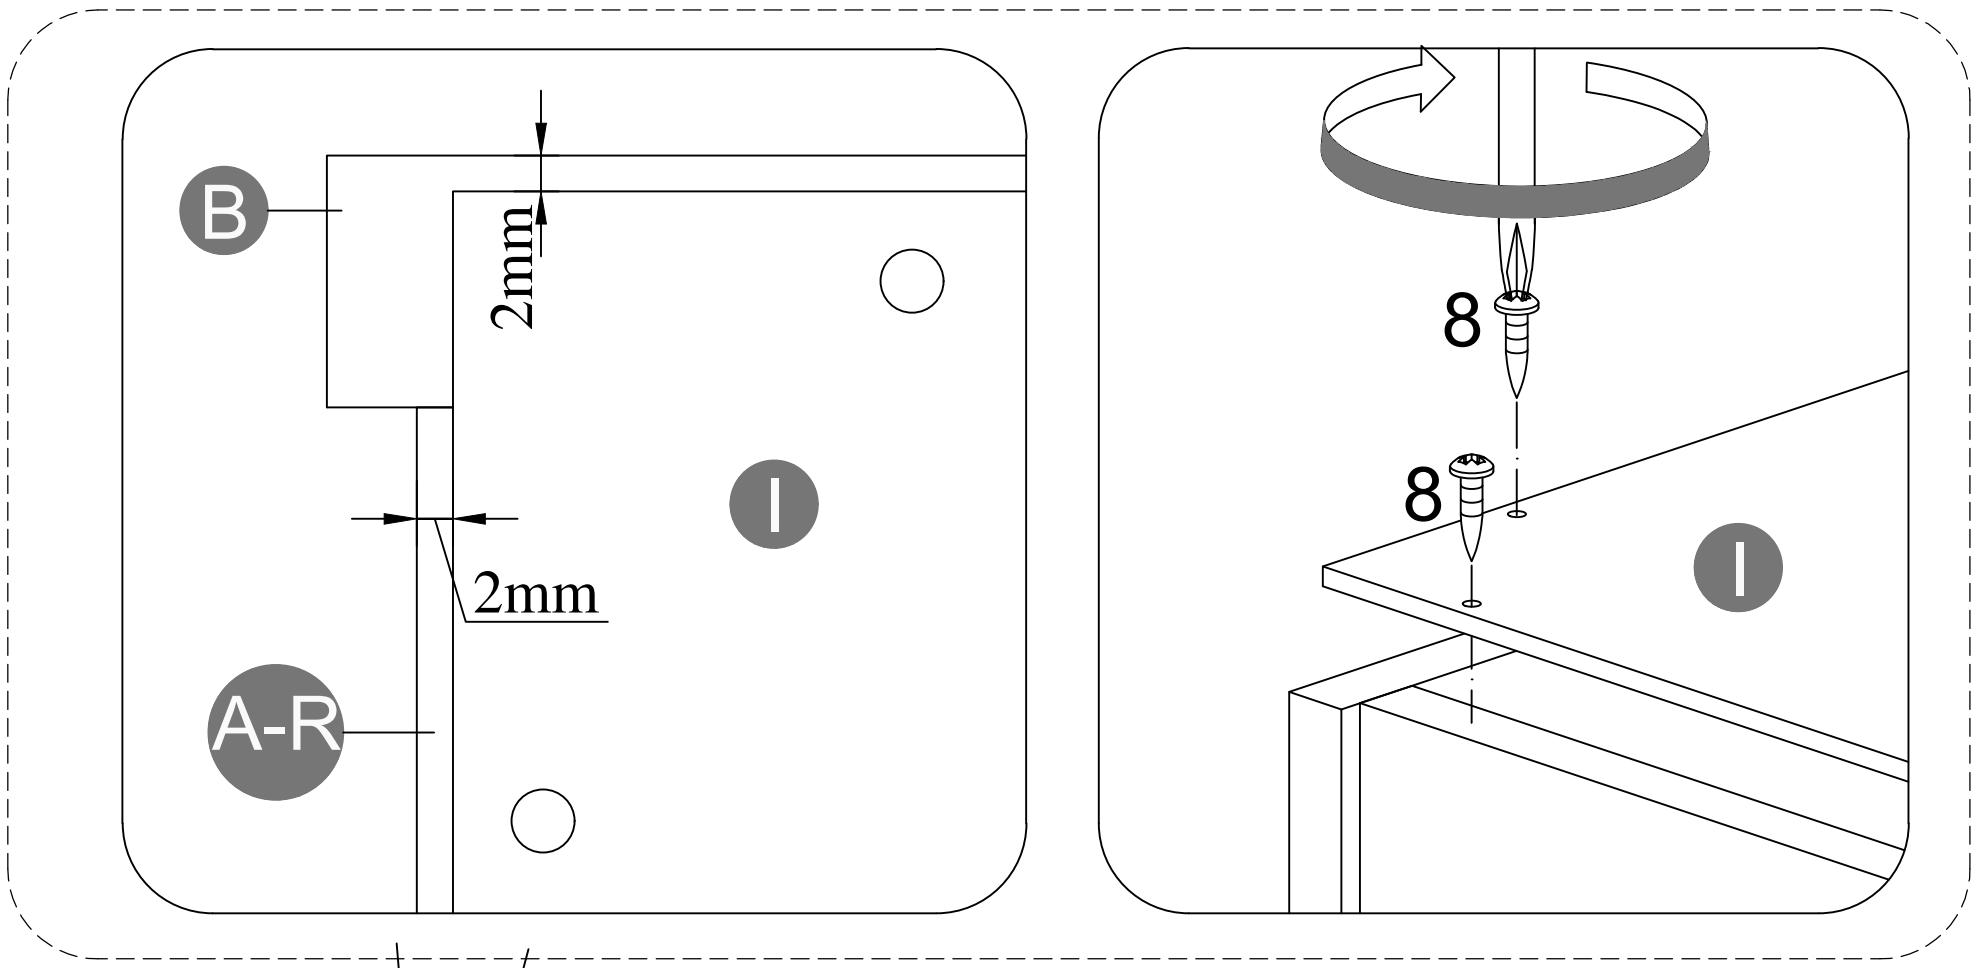


It is the first assemble the upper backboard, and then assemble the lower backboard. The two backboards should be tightly sealed in the middle without leaving any seams

STEP 10:


4	
8pcs	


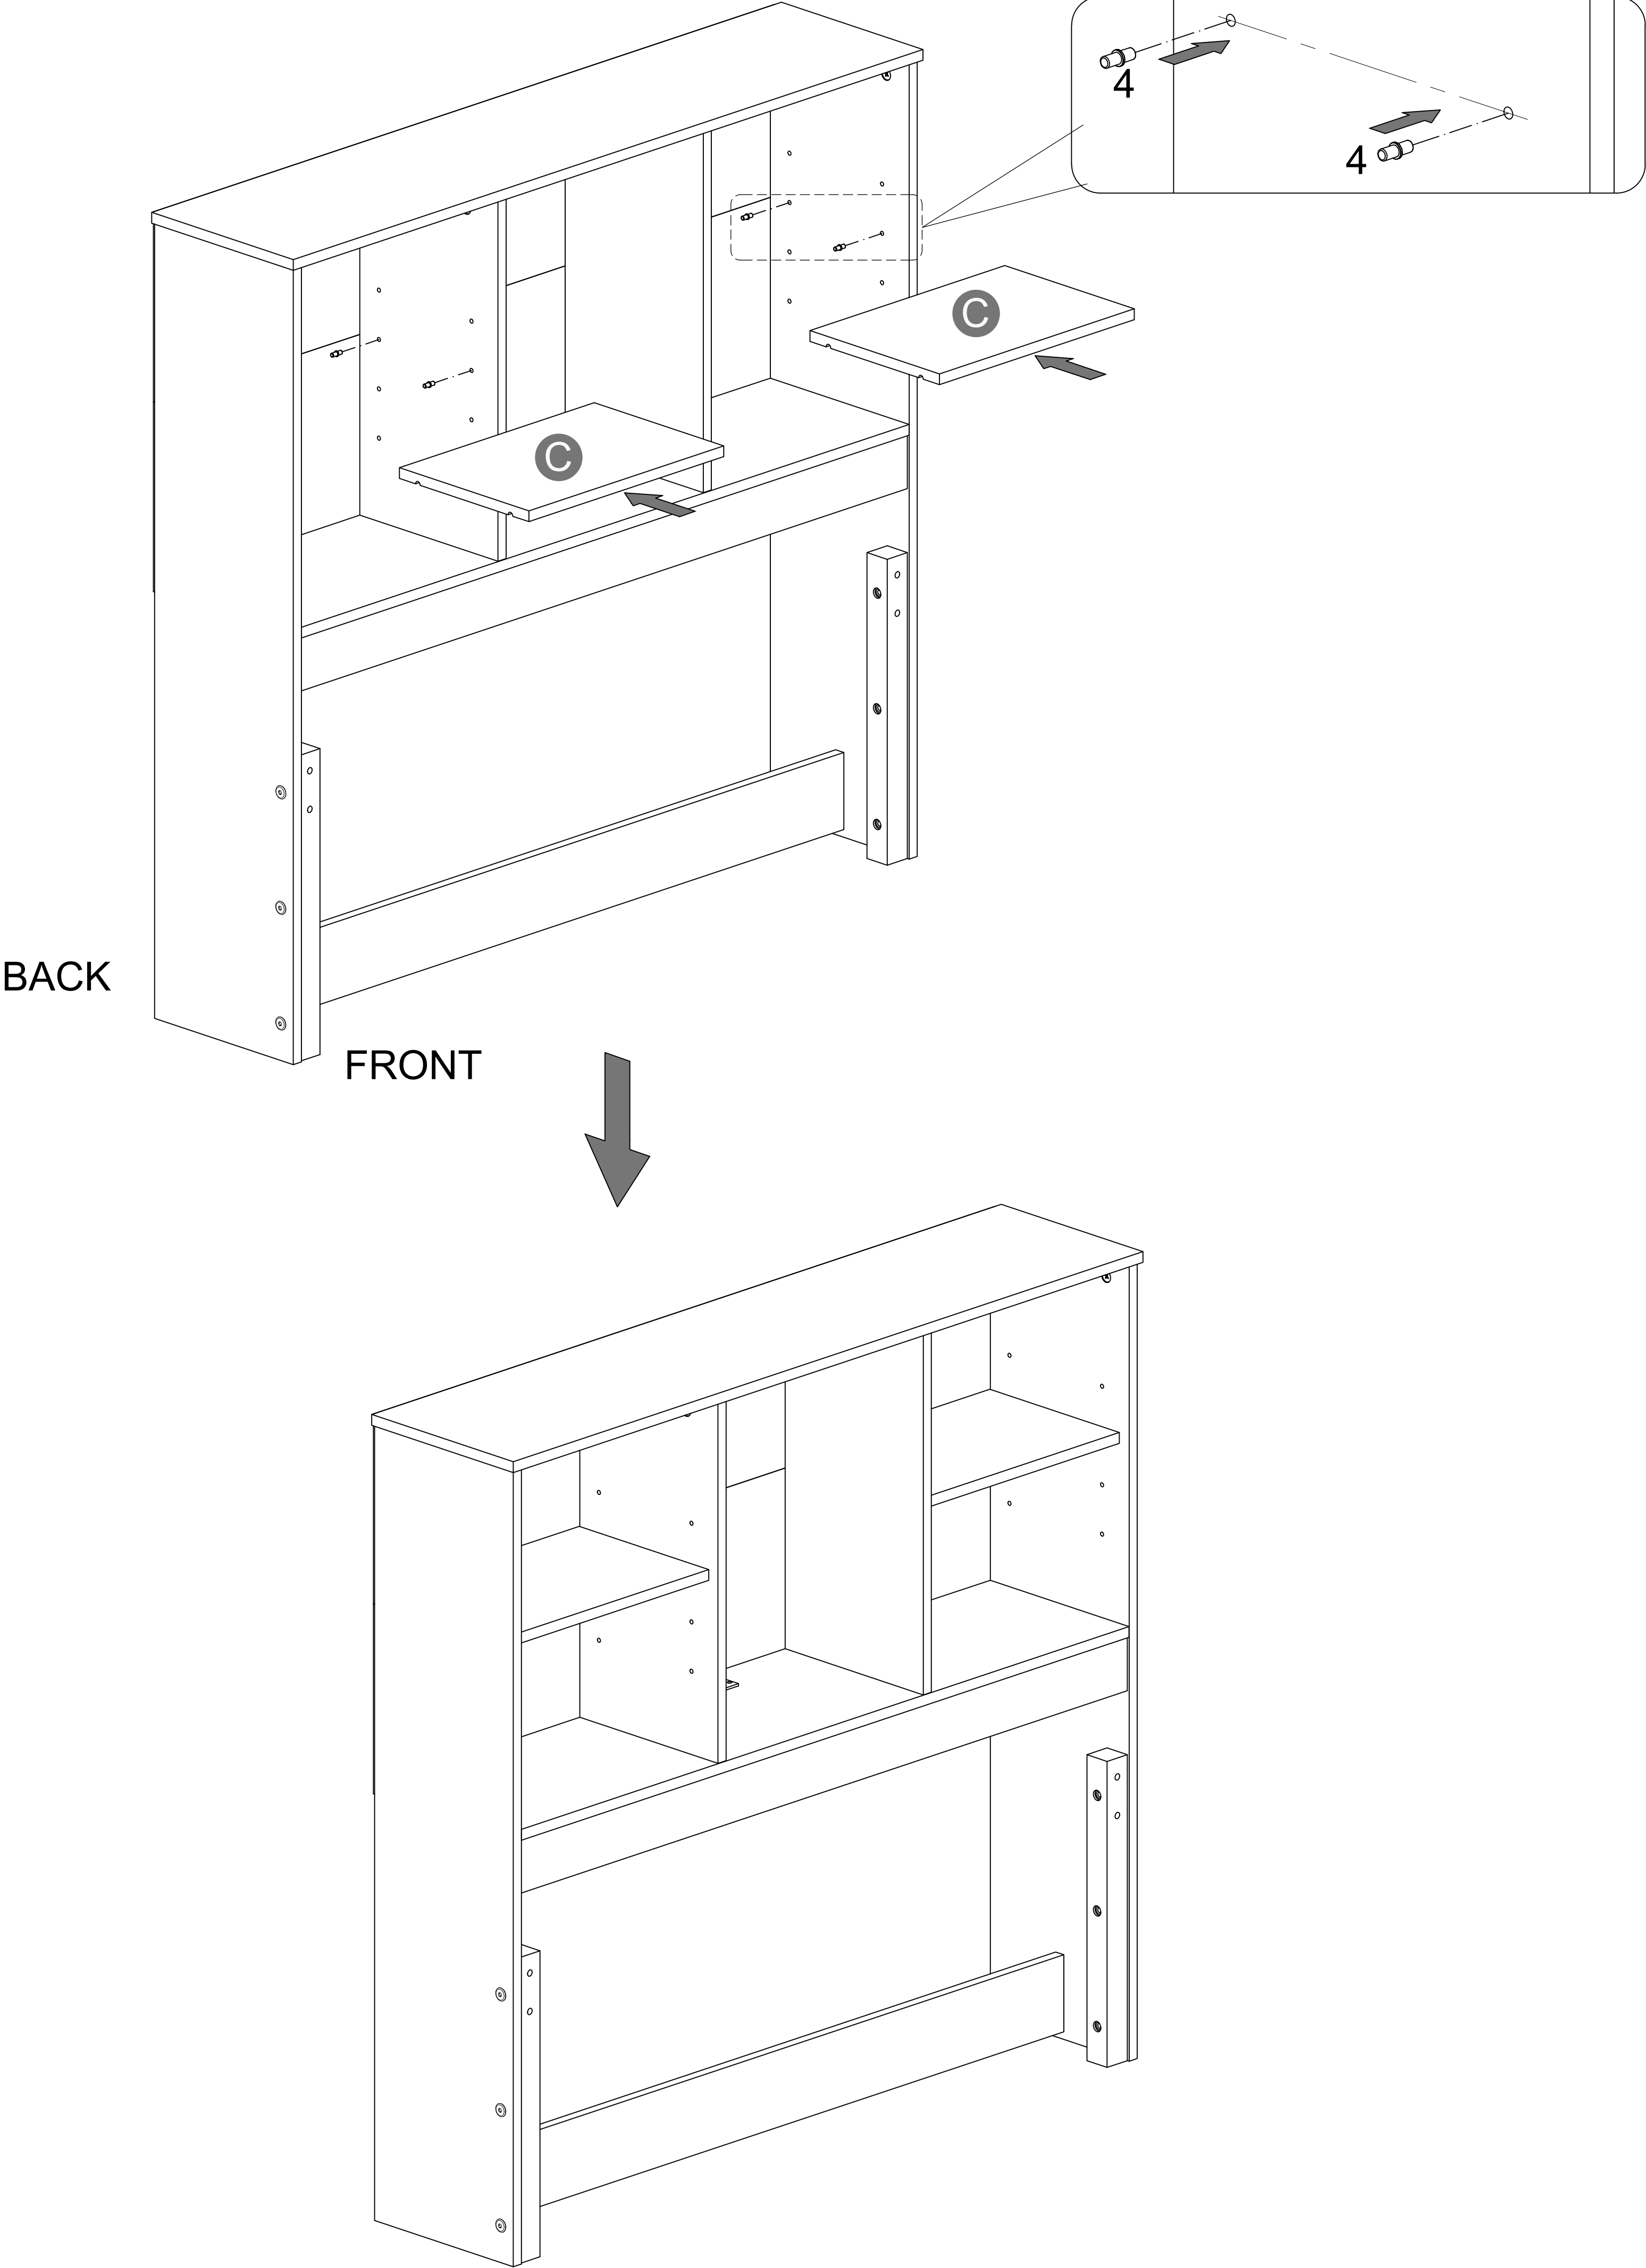



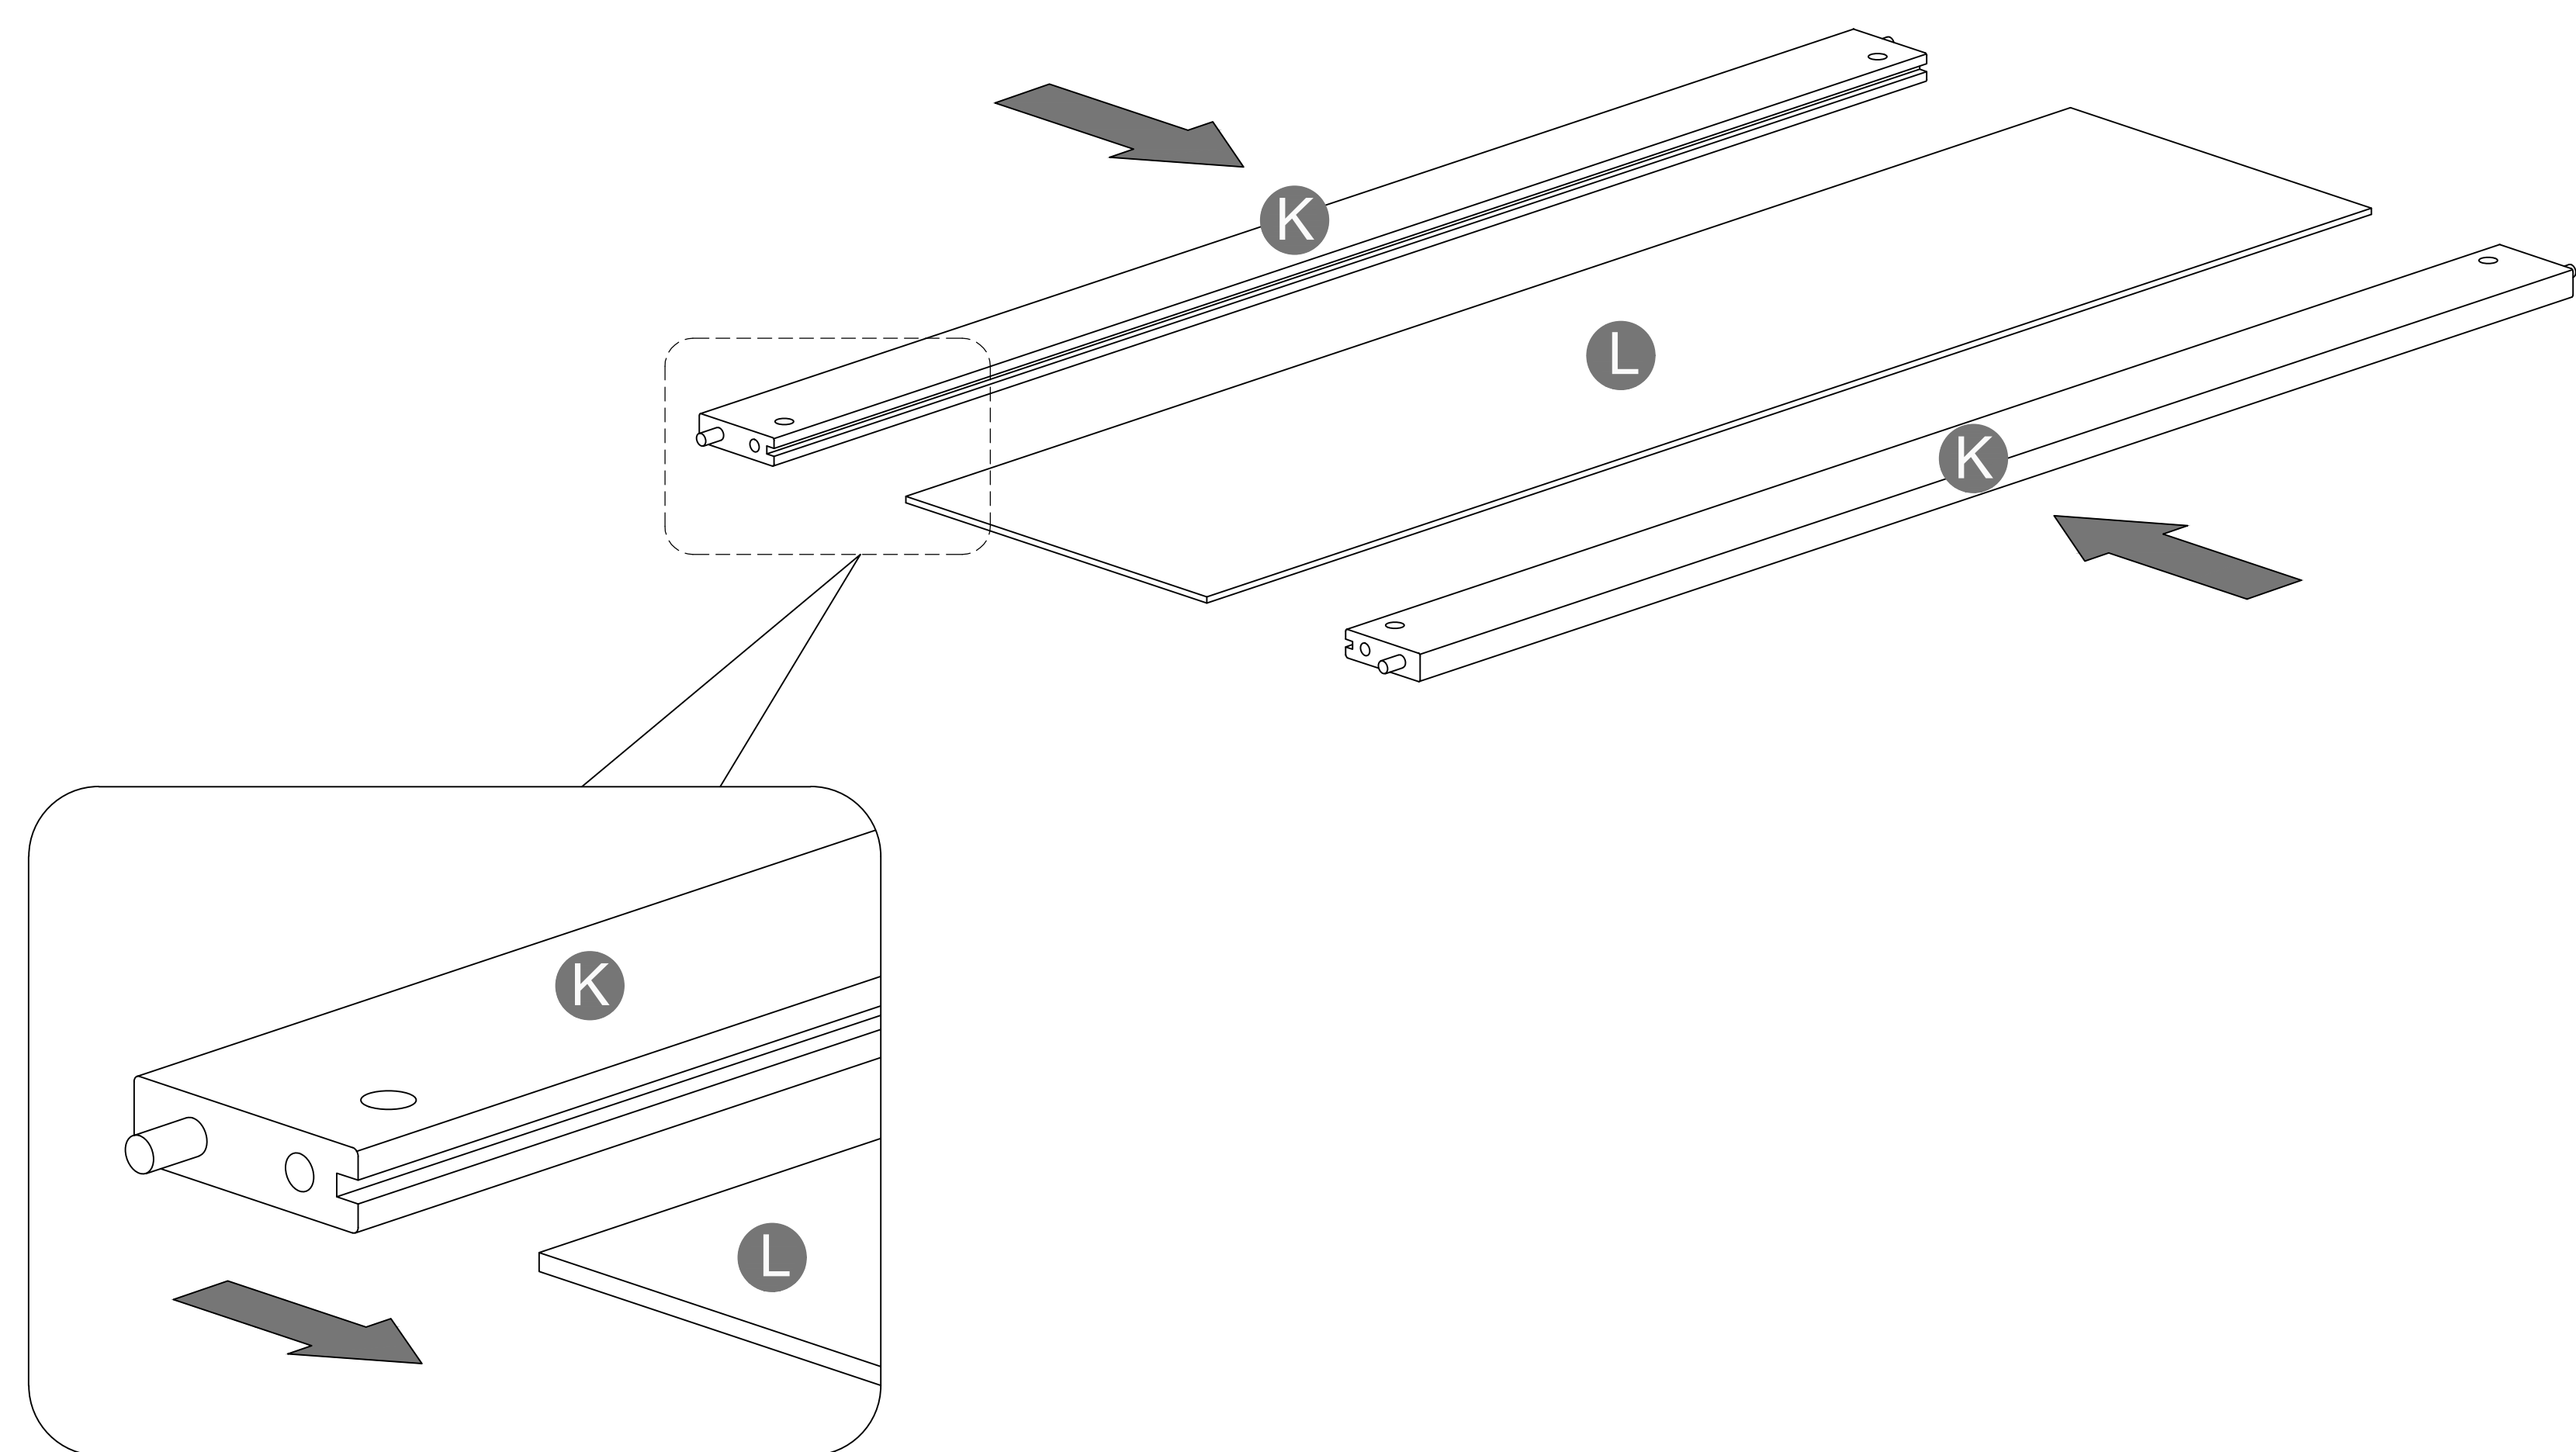
STEP 11:



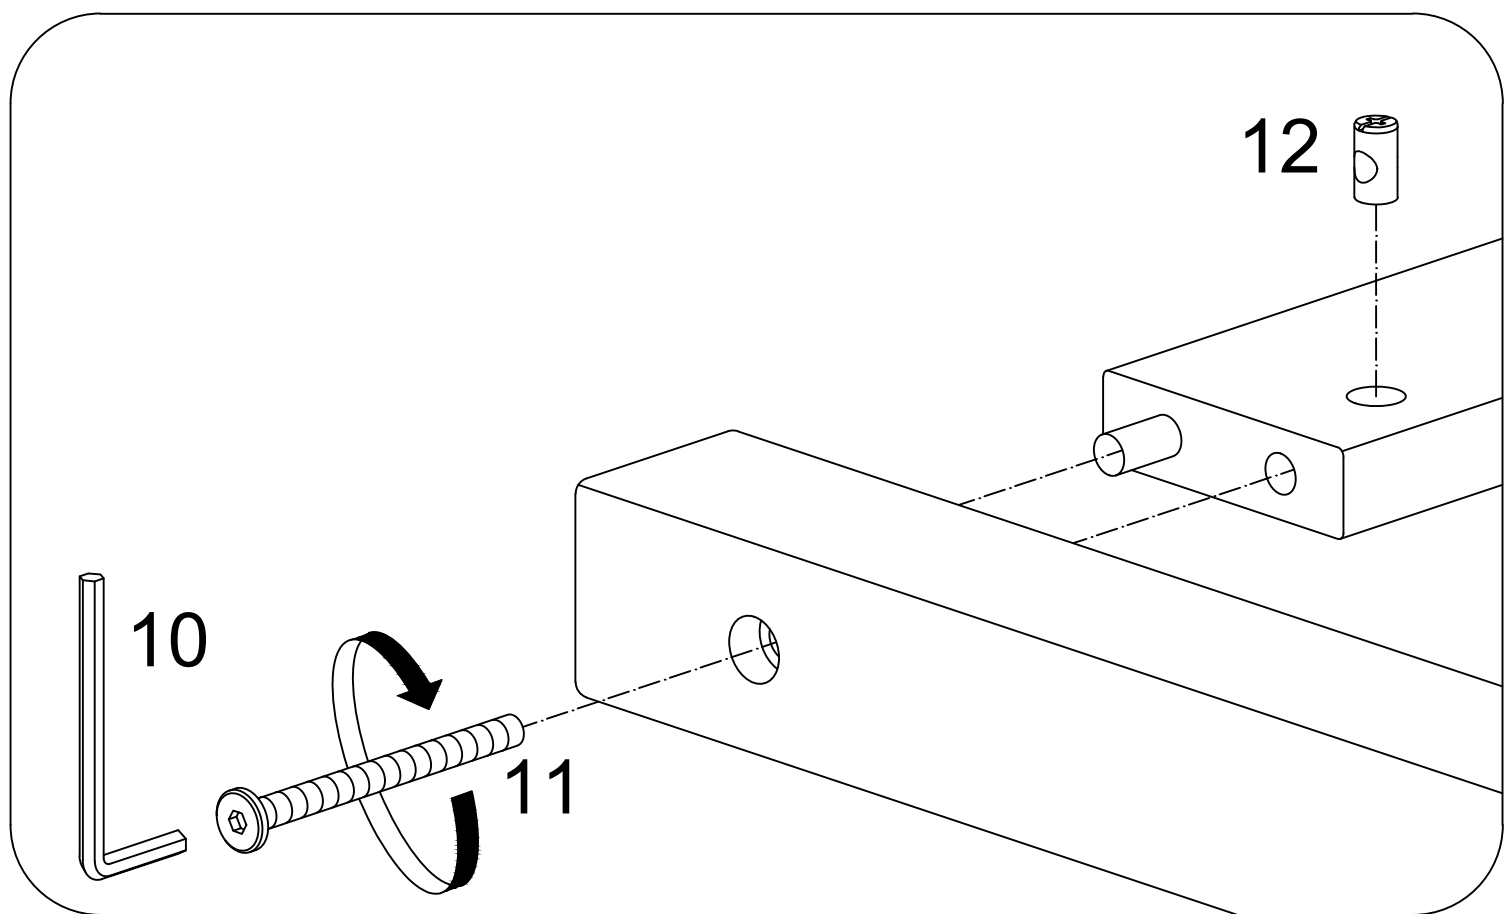STEP 12:




11	12
	
4pcs	4pcs

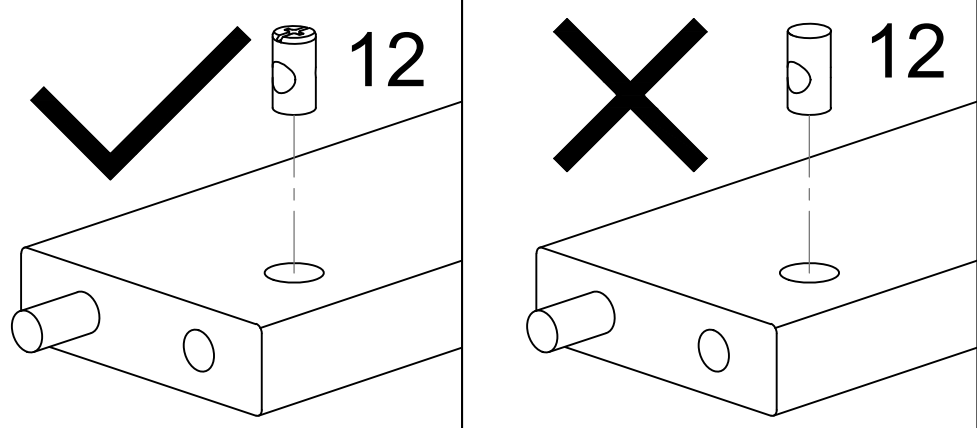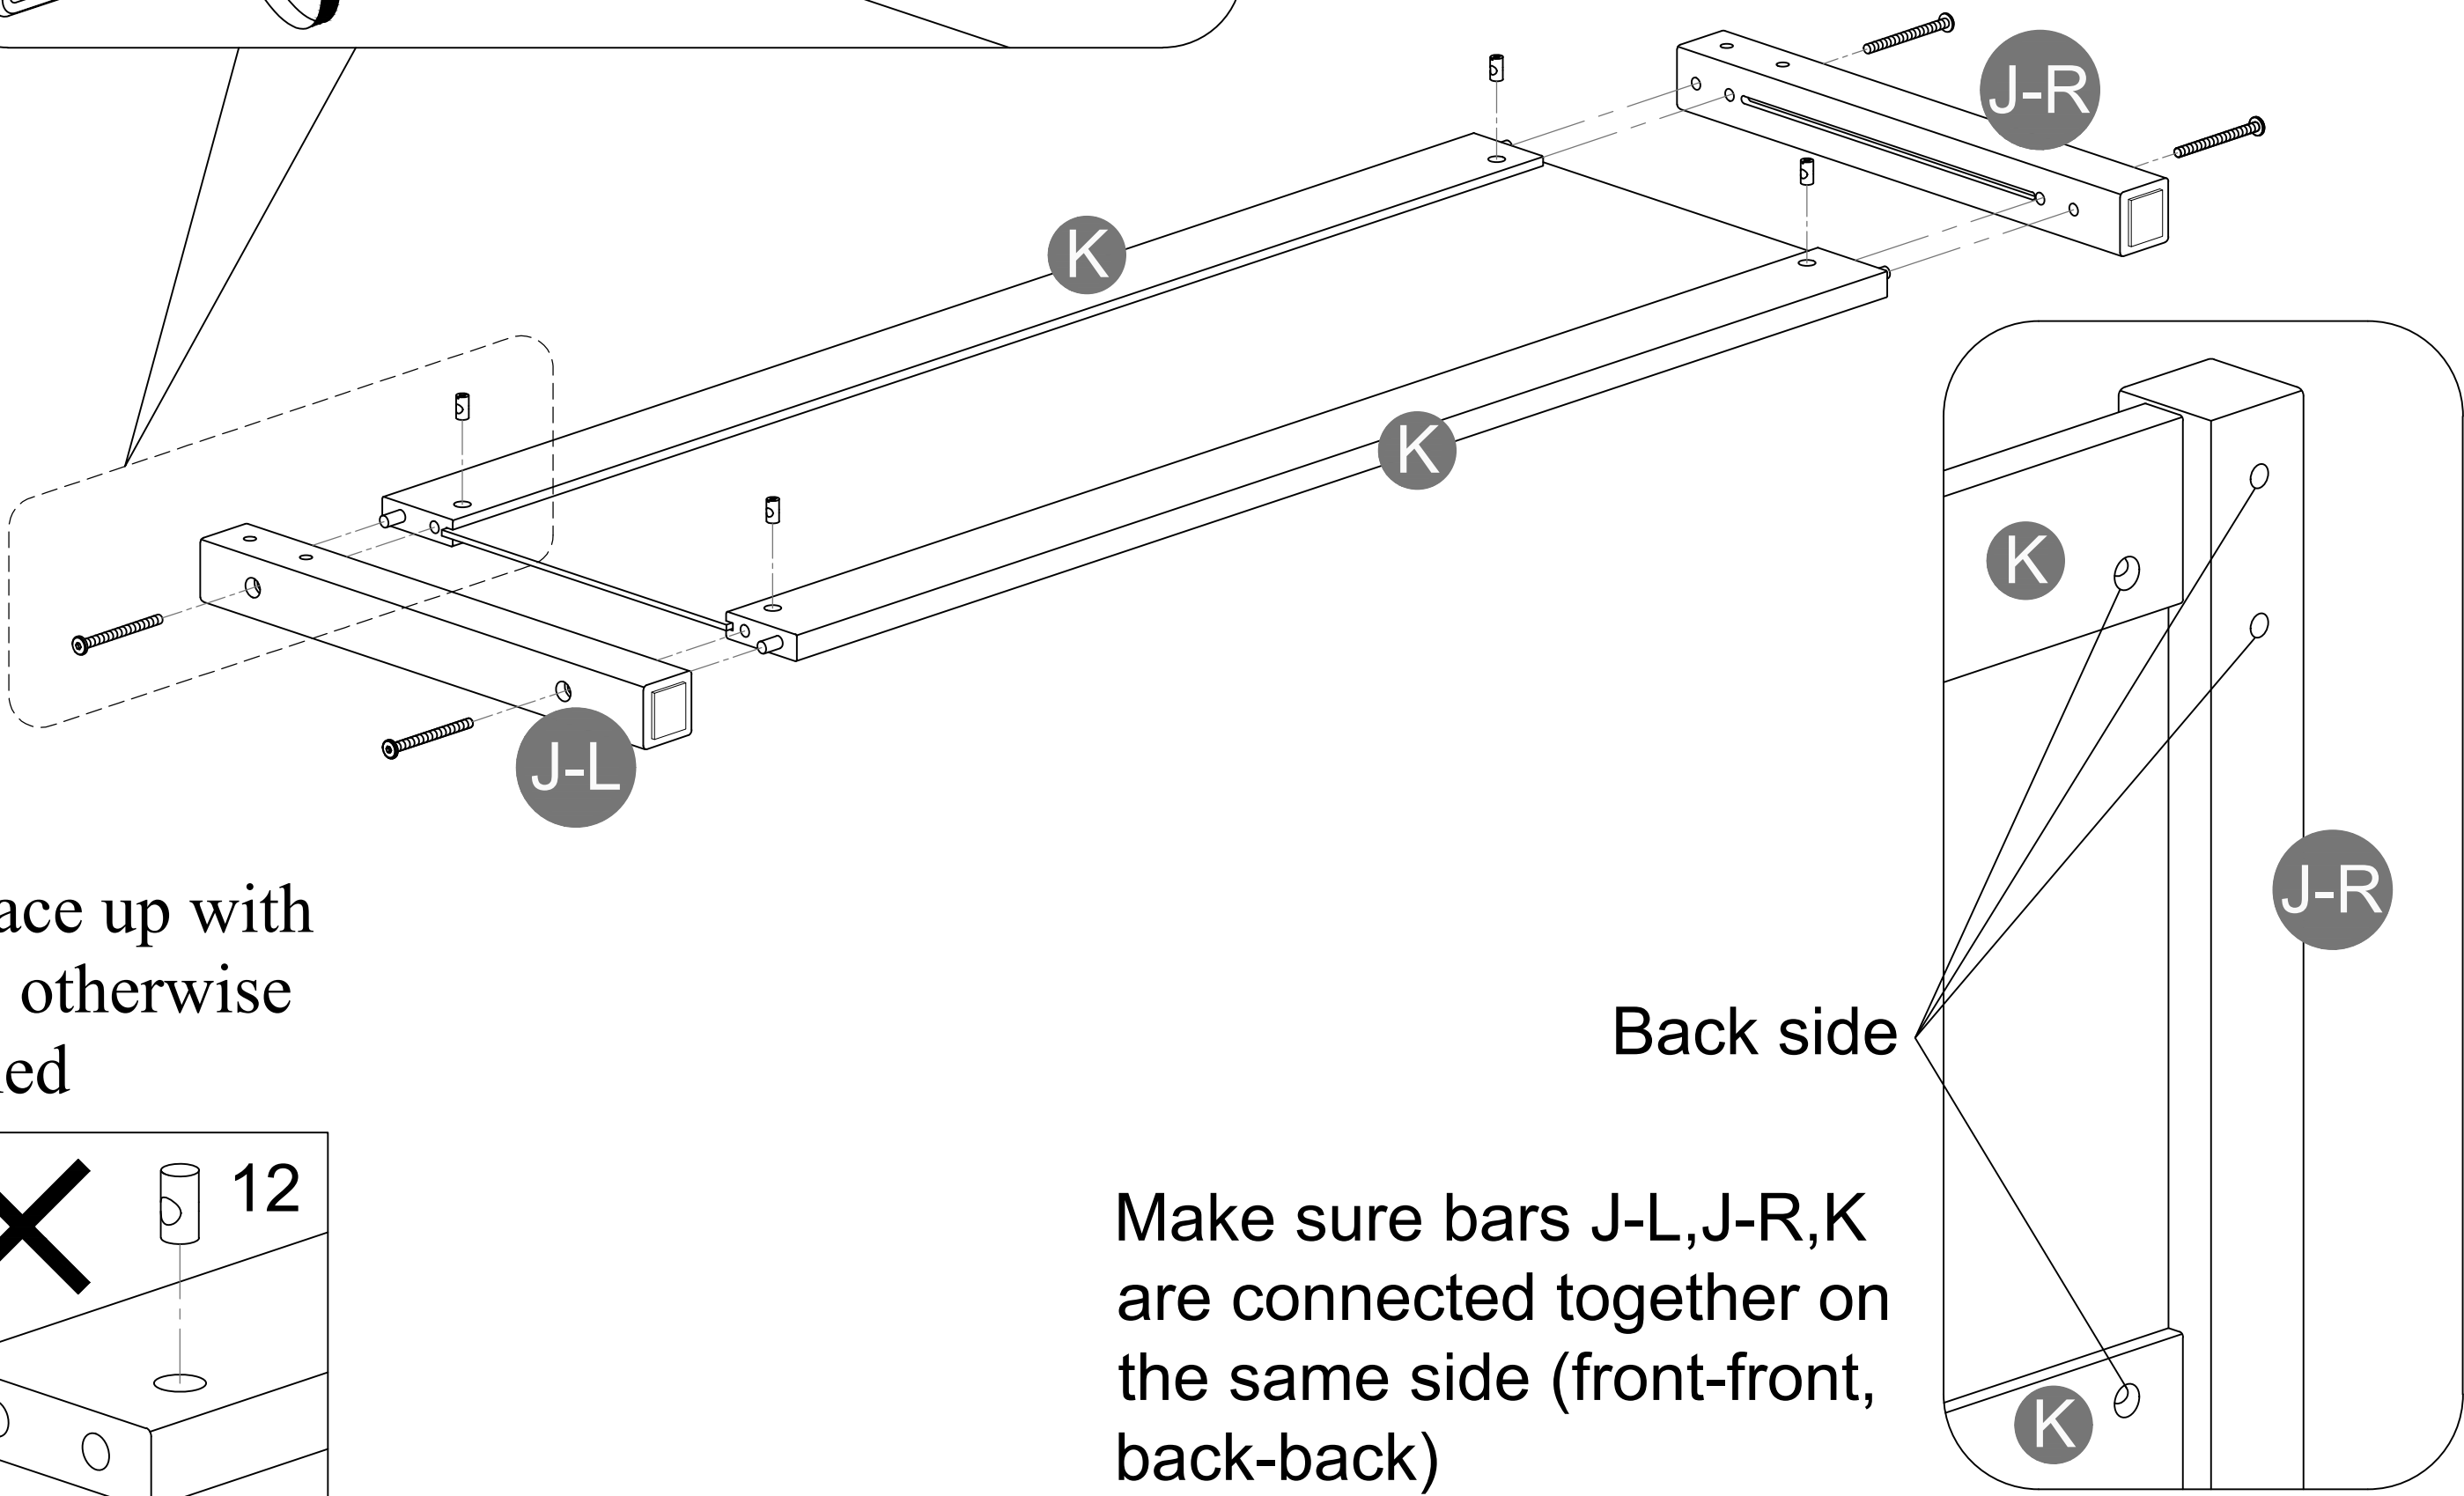


Make sure bars J-L,J-R,K are connected together on the same side (front-front, back-back)


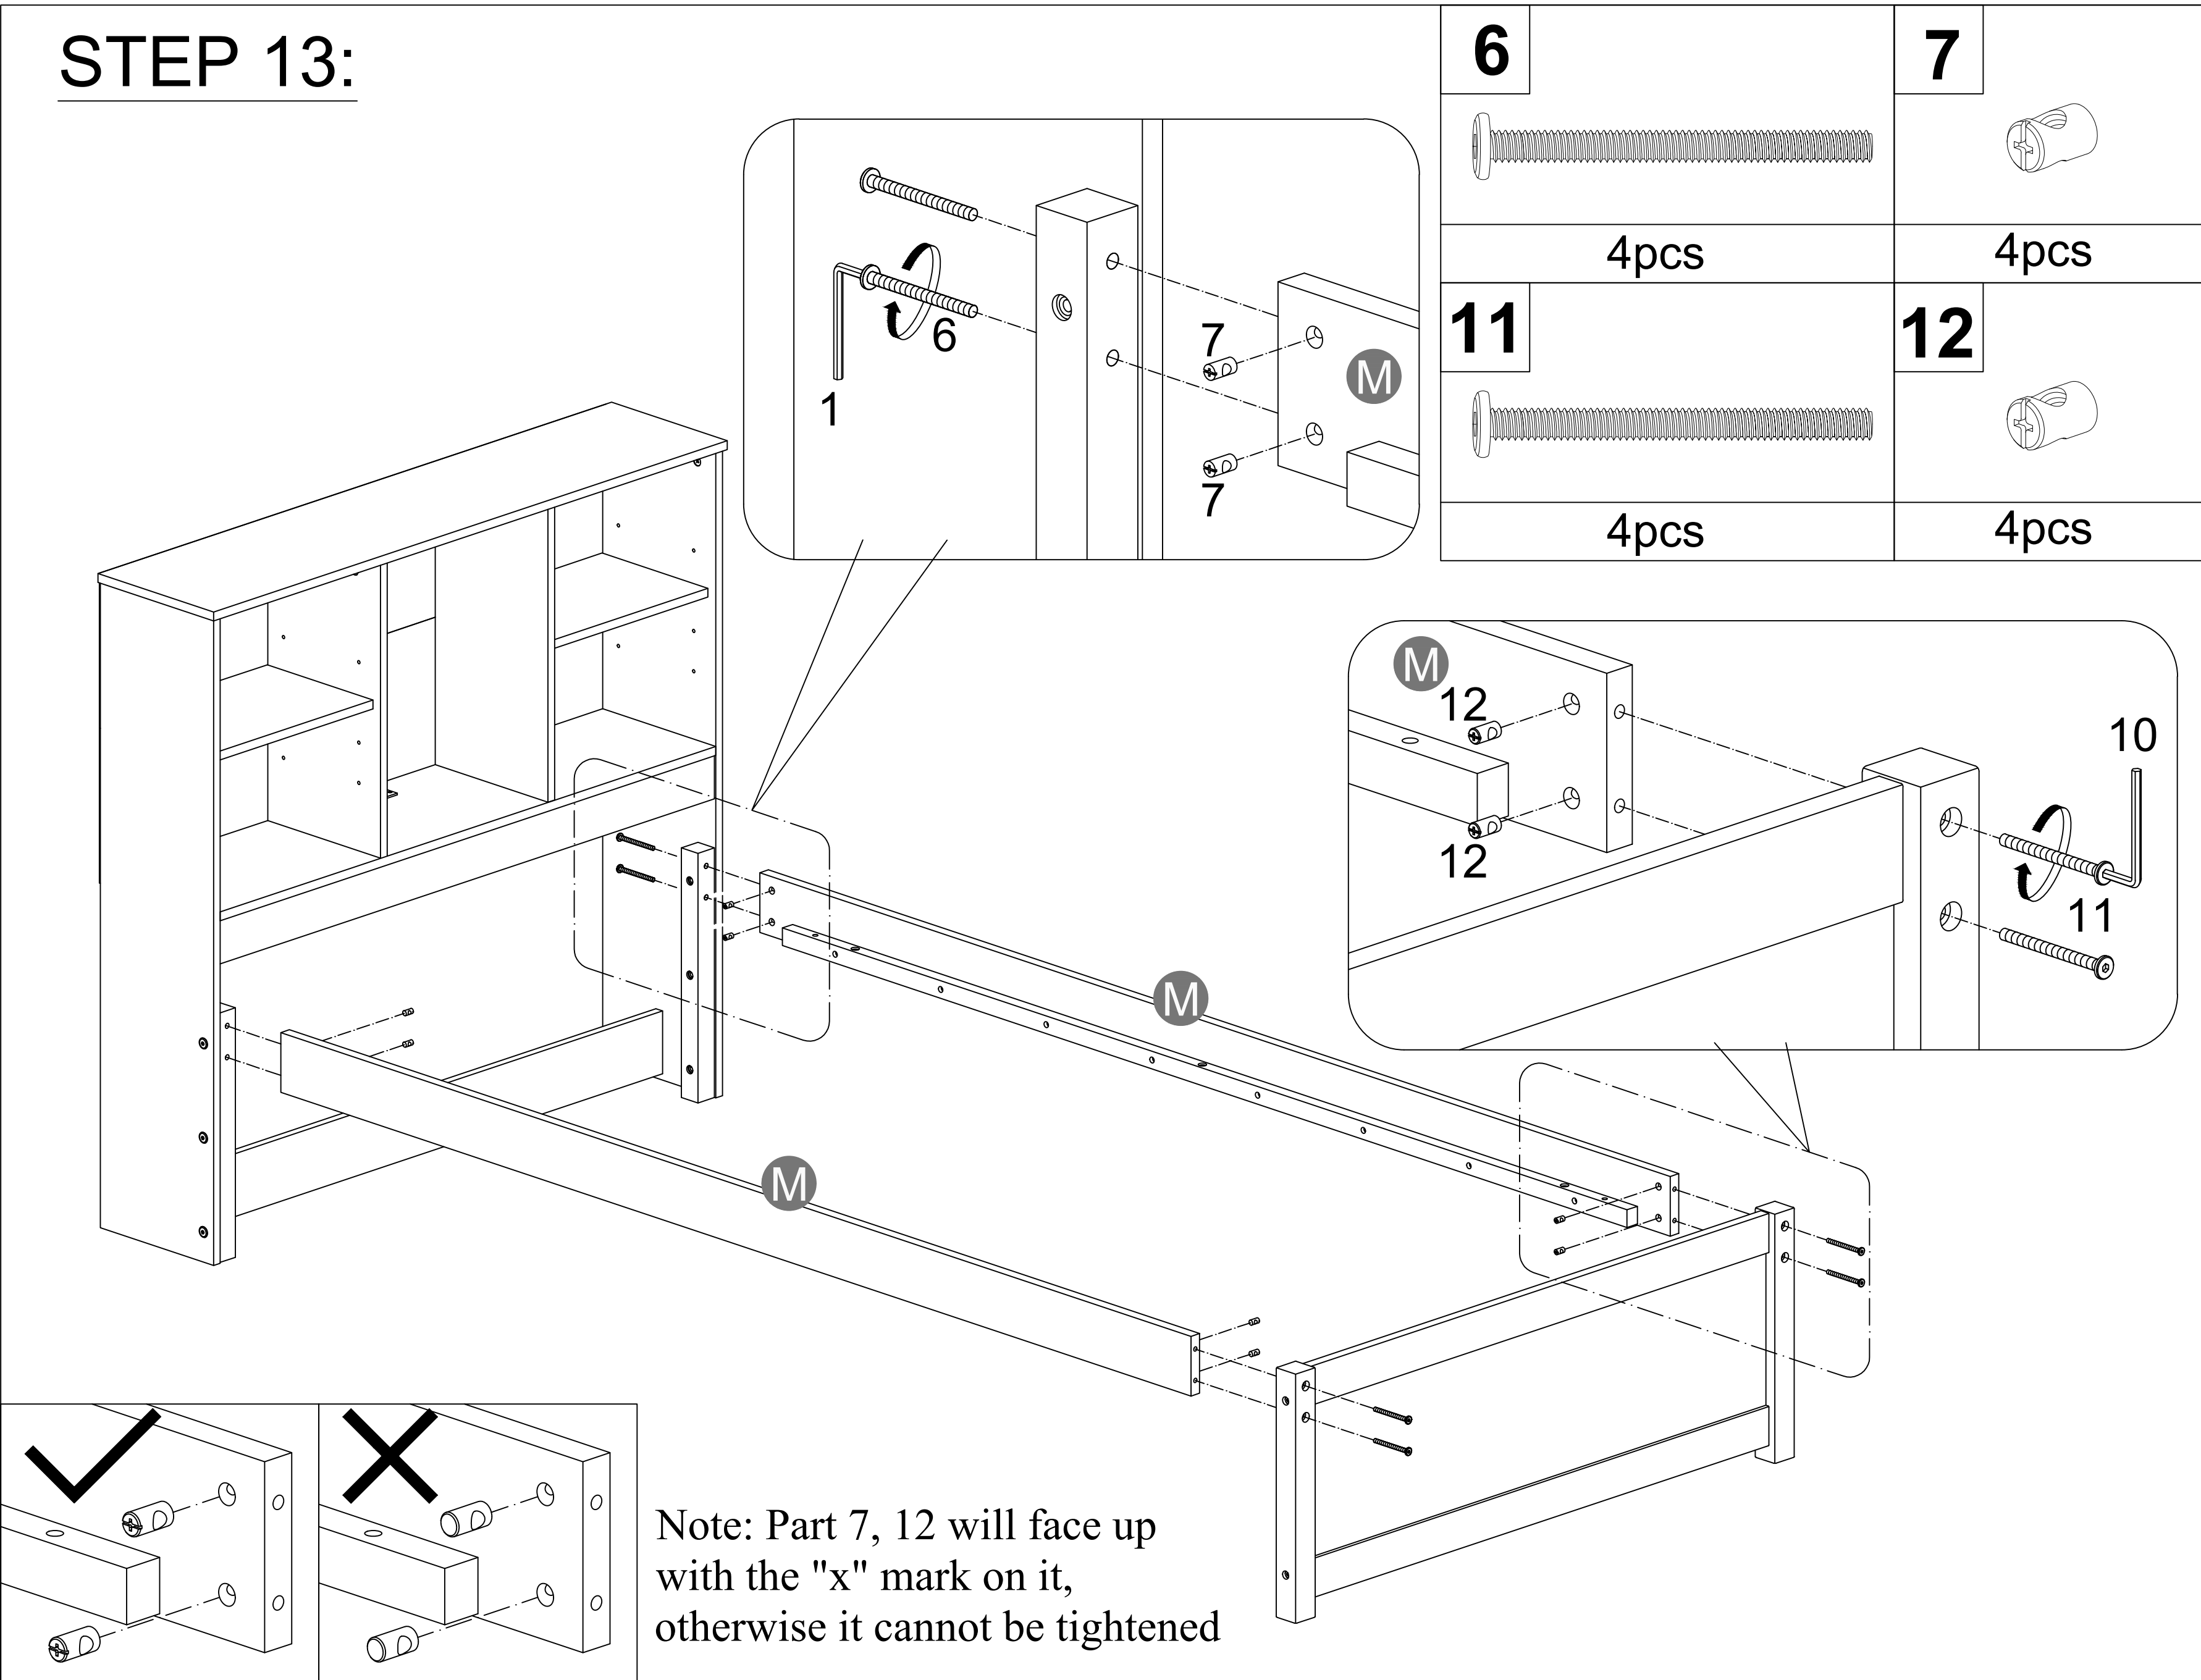
STEP 13:





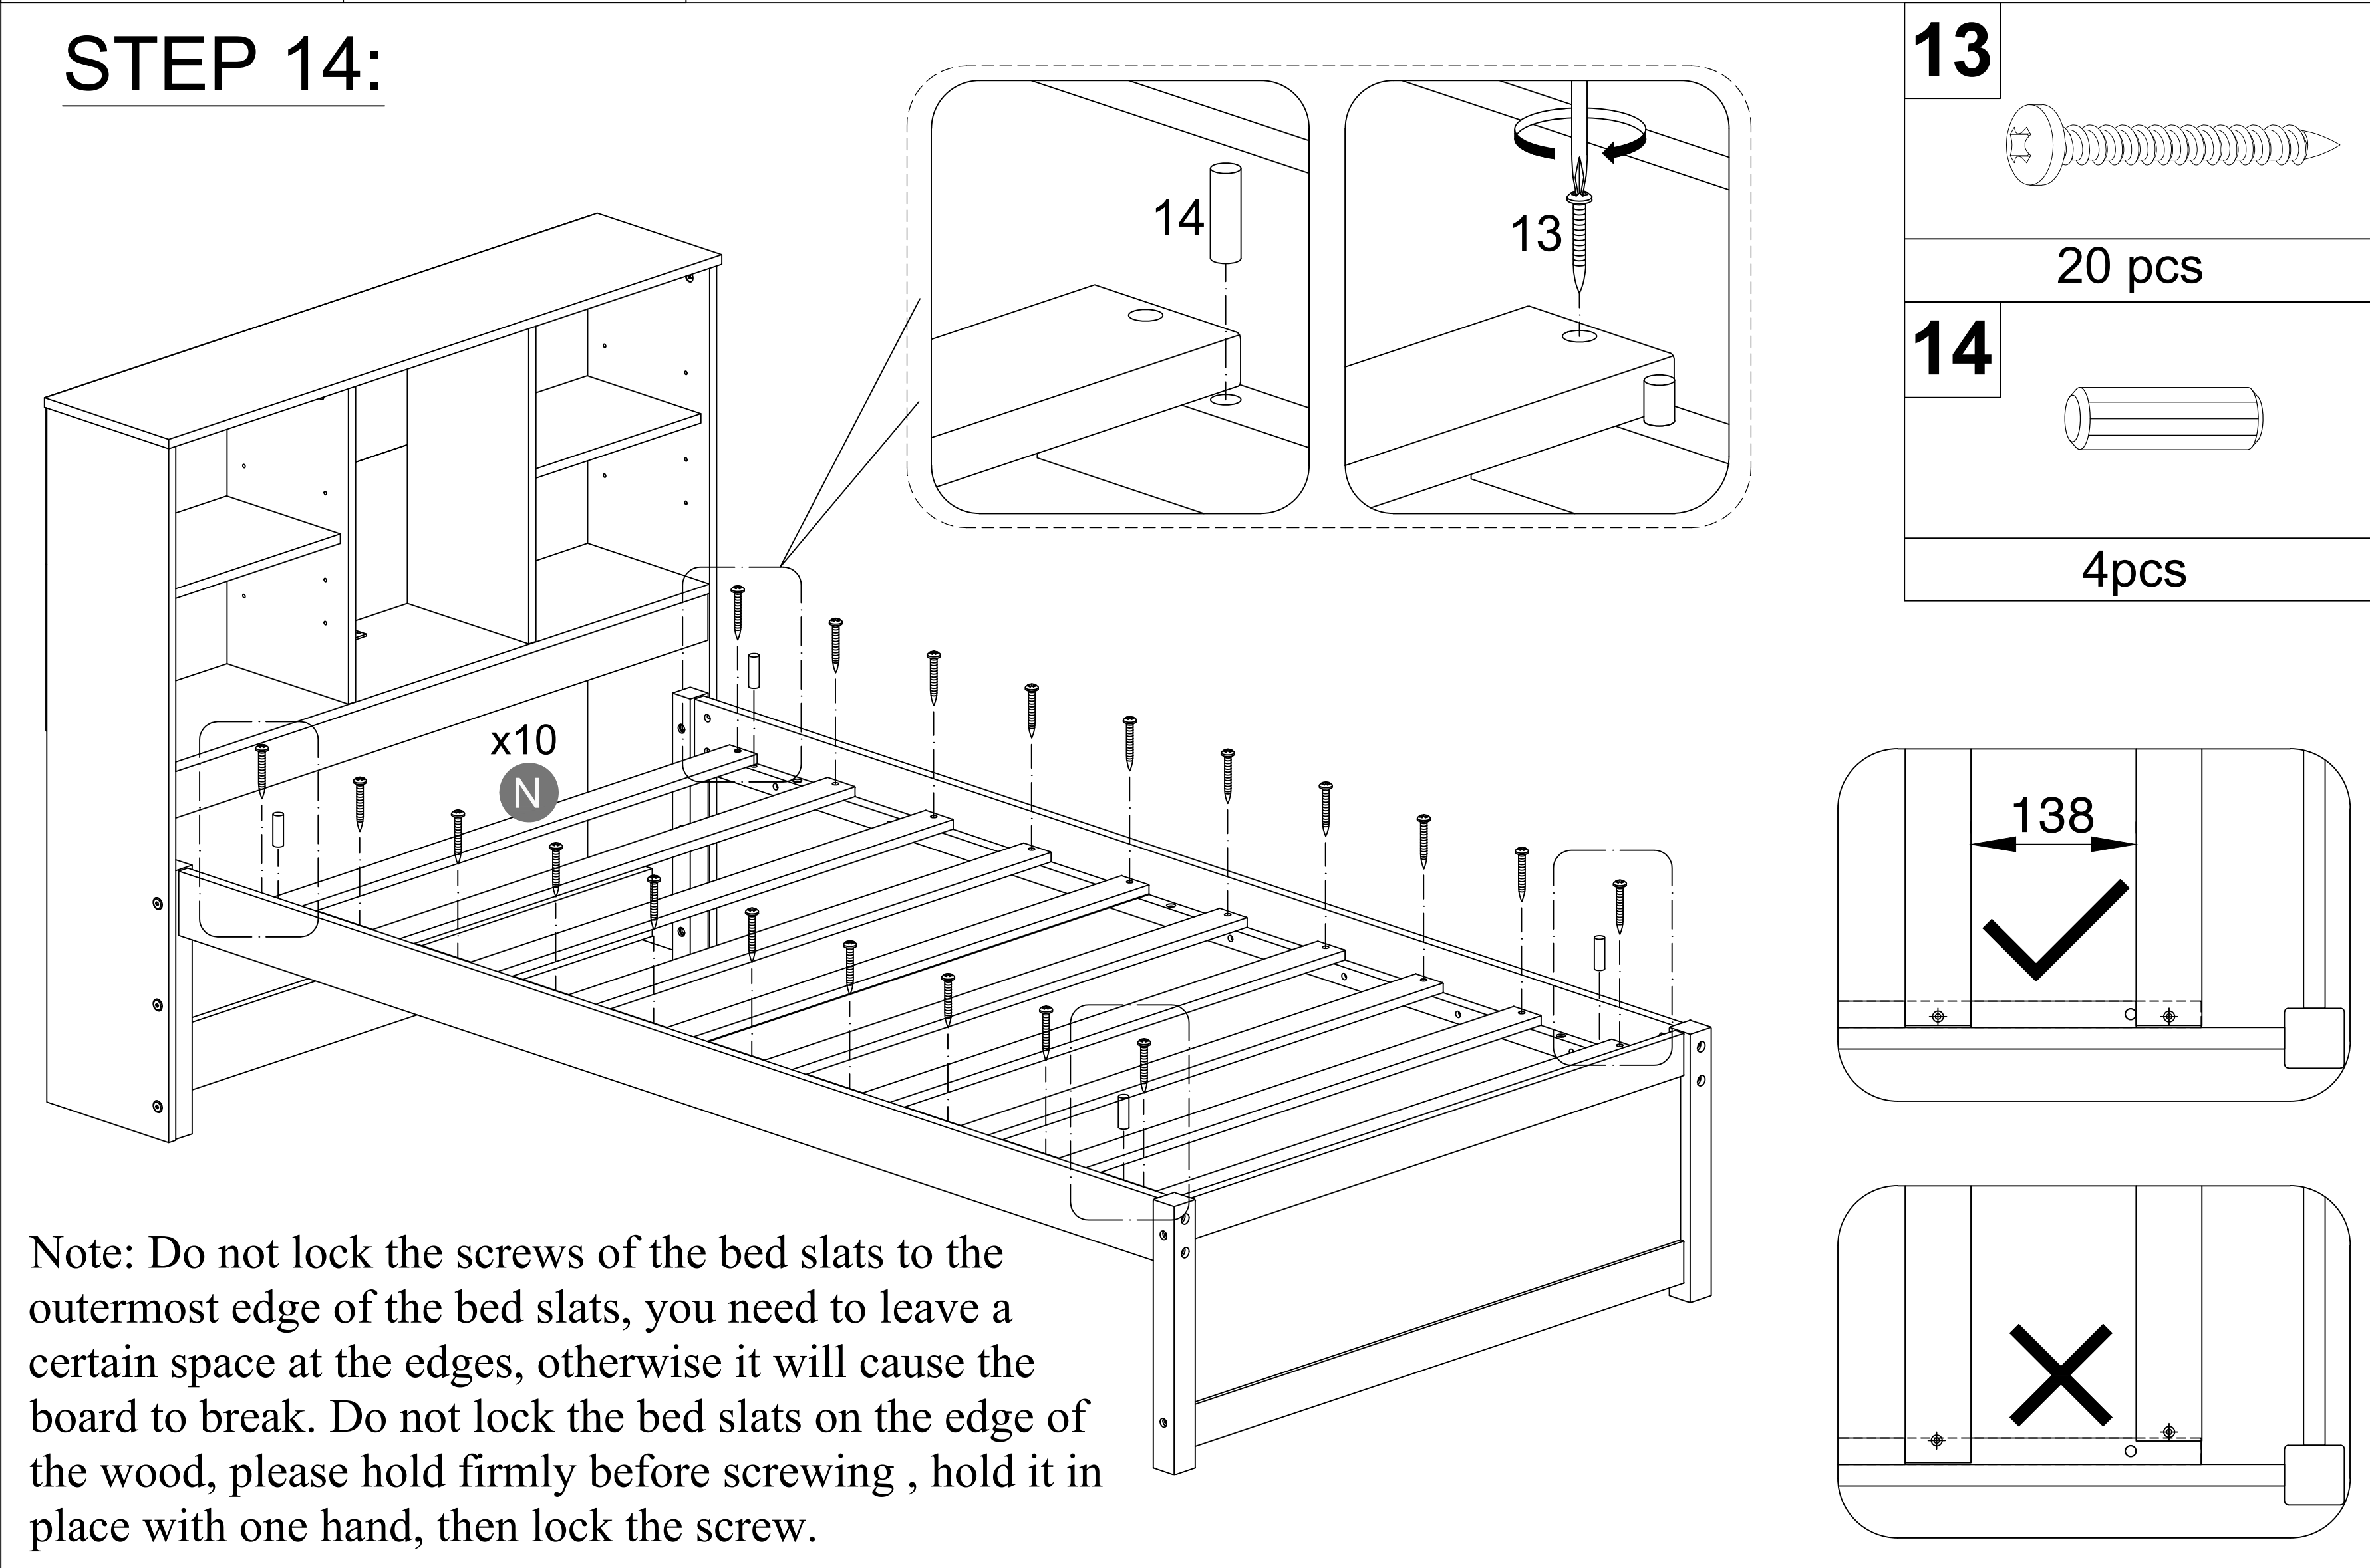STEP 14:




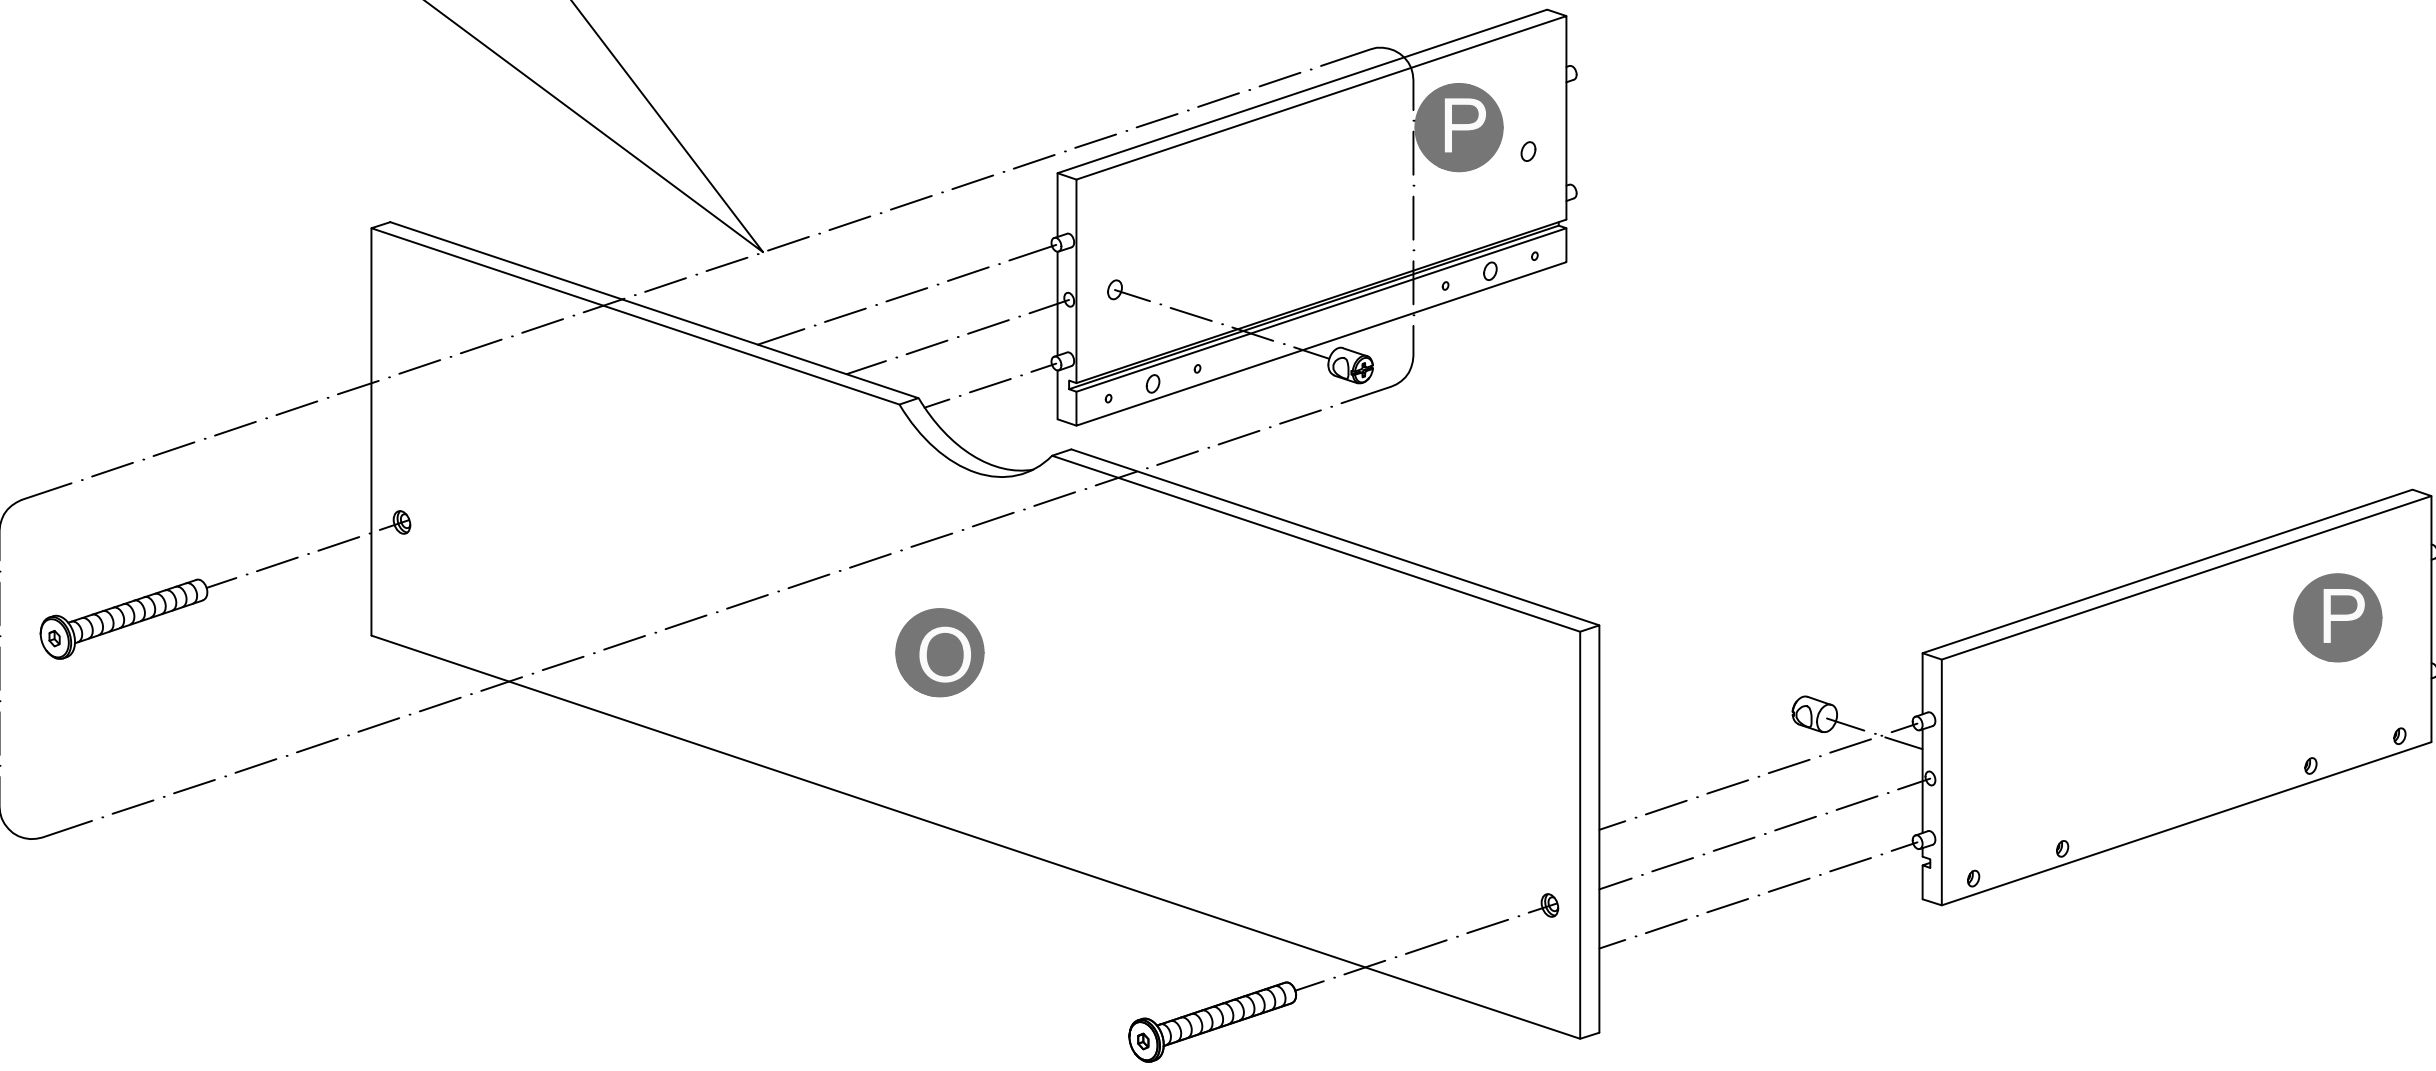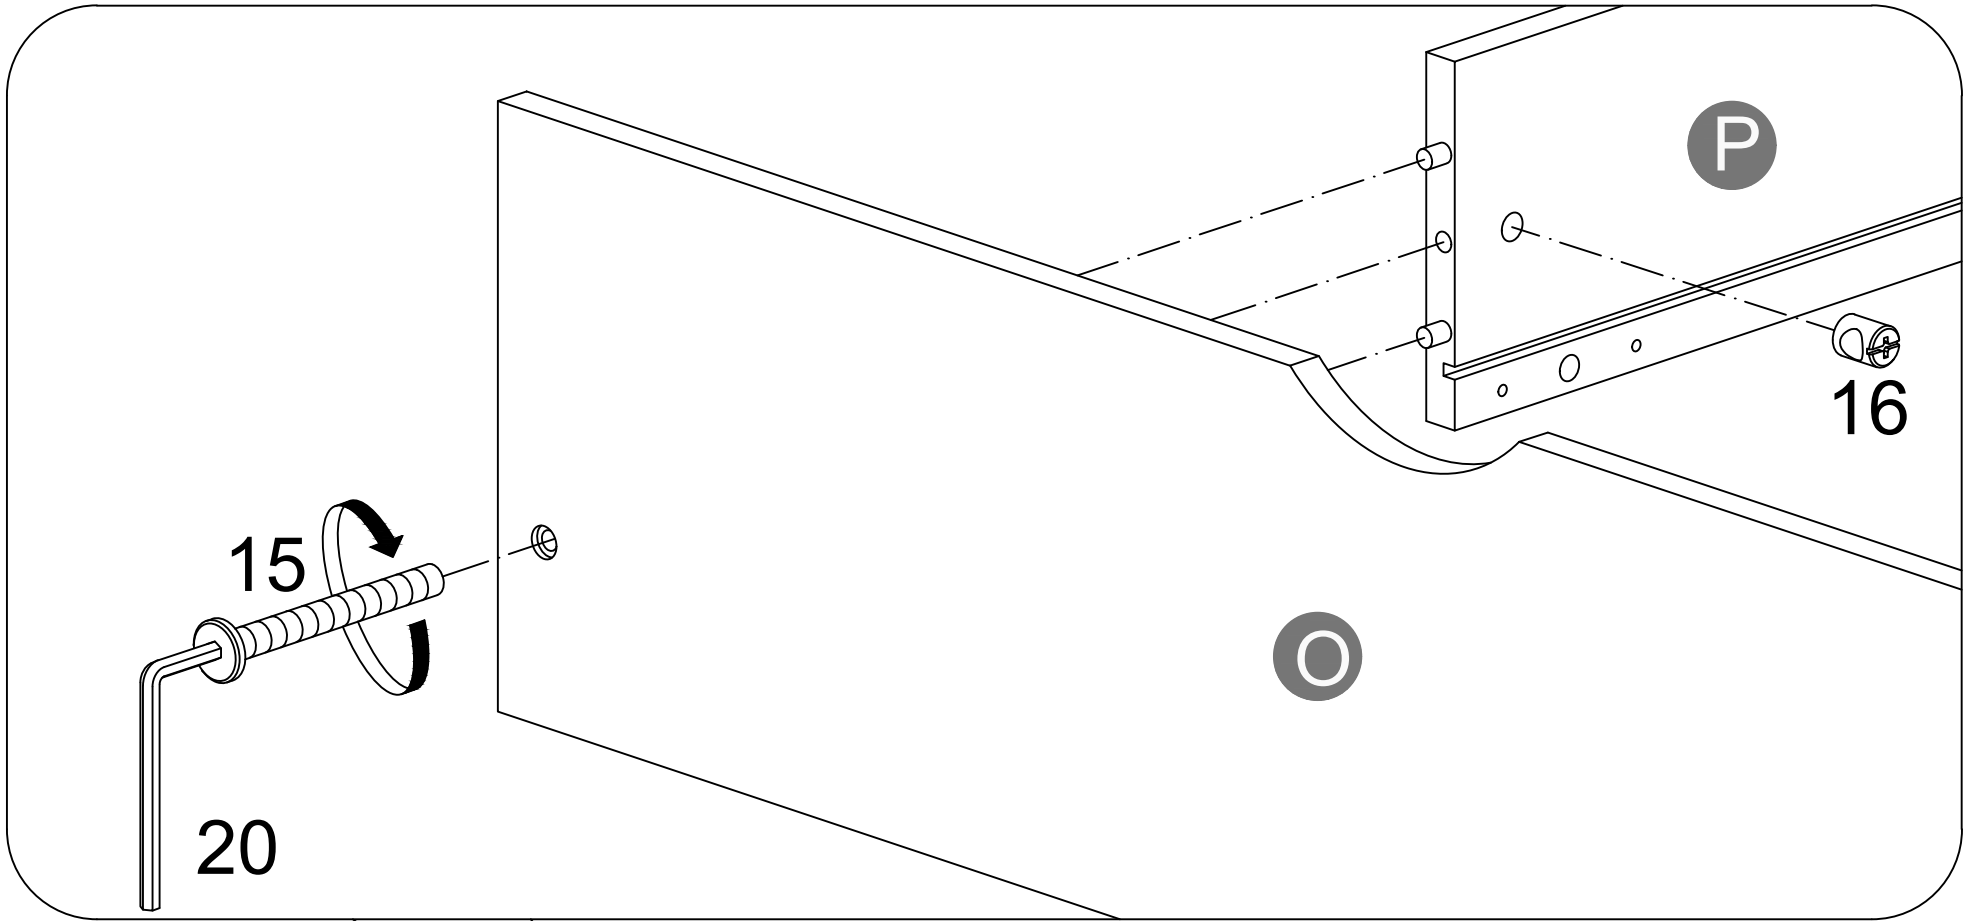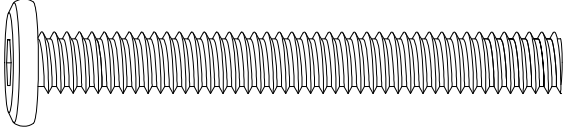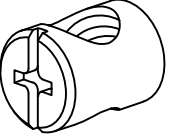STEP 15:






15	16
	
4pcs	4pcs


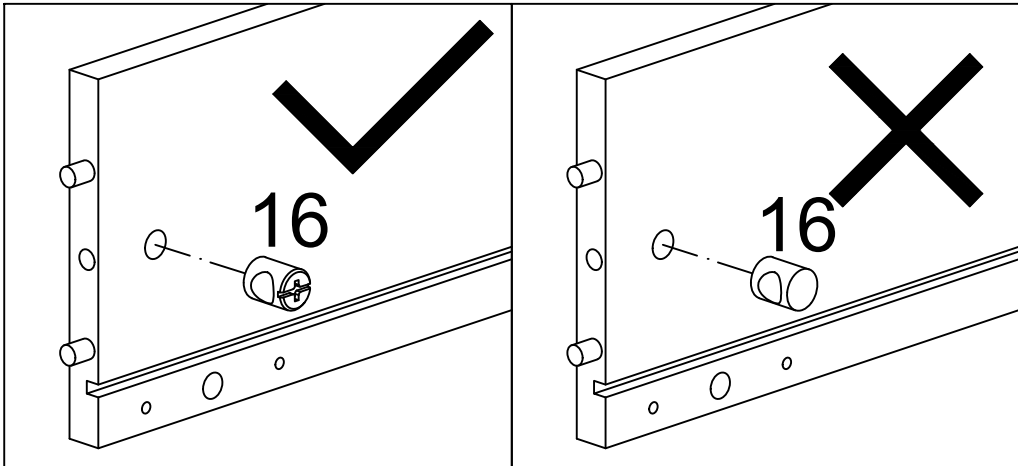
Note:Part 16 will face up with the "x" mark on it, otherwise it cannot be tightened




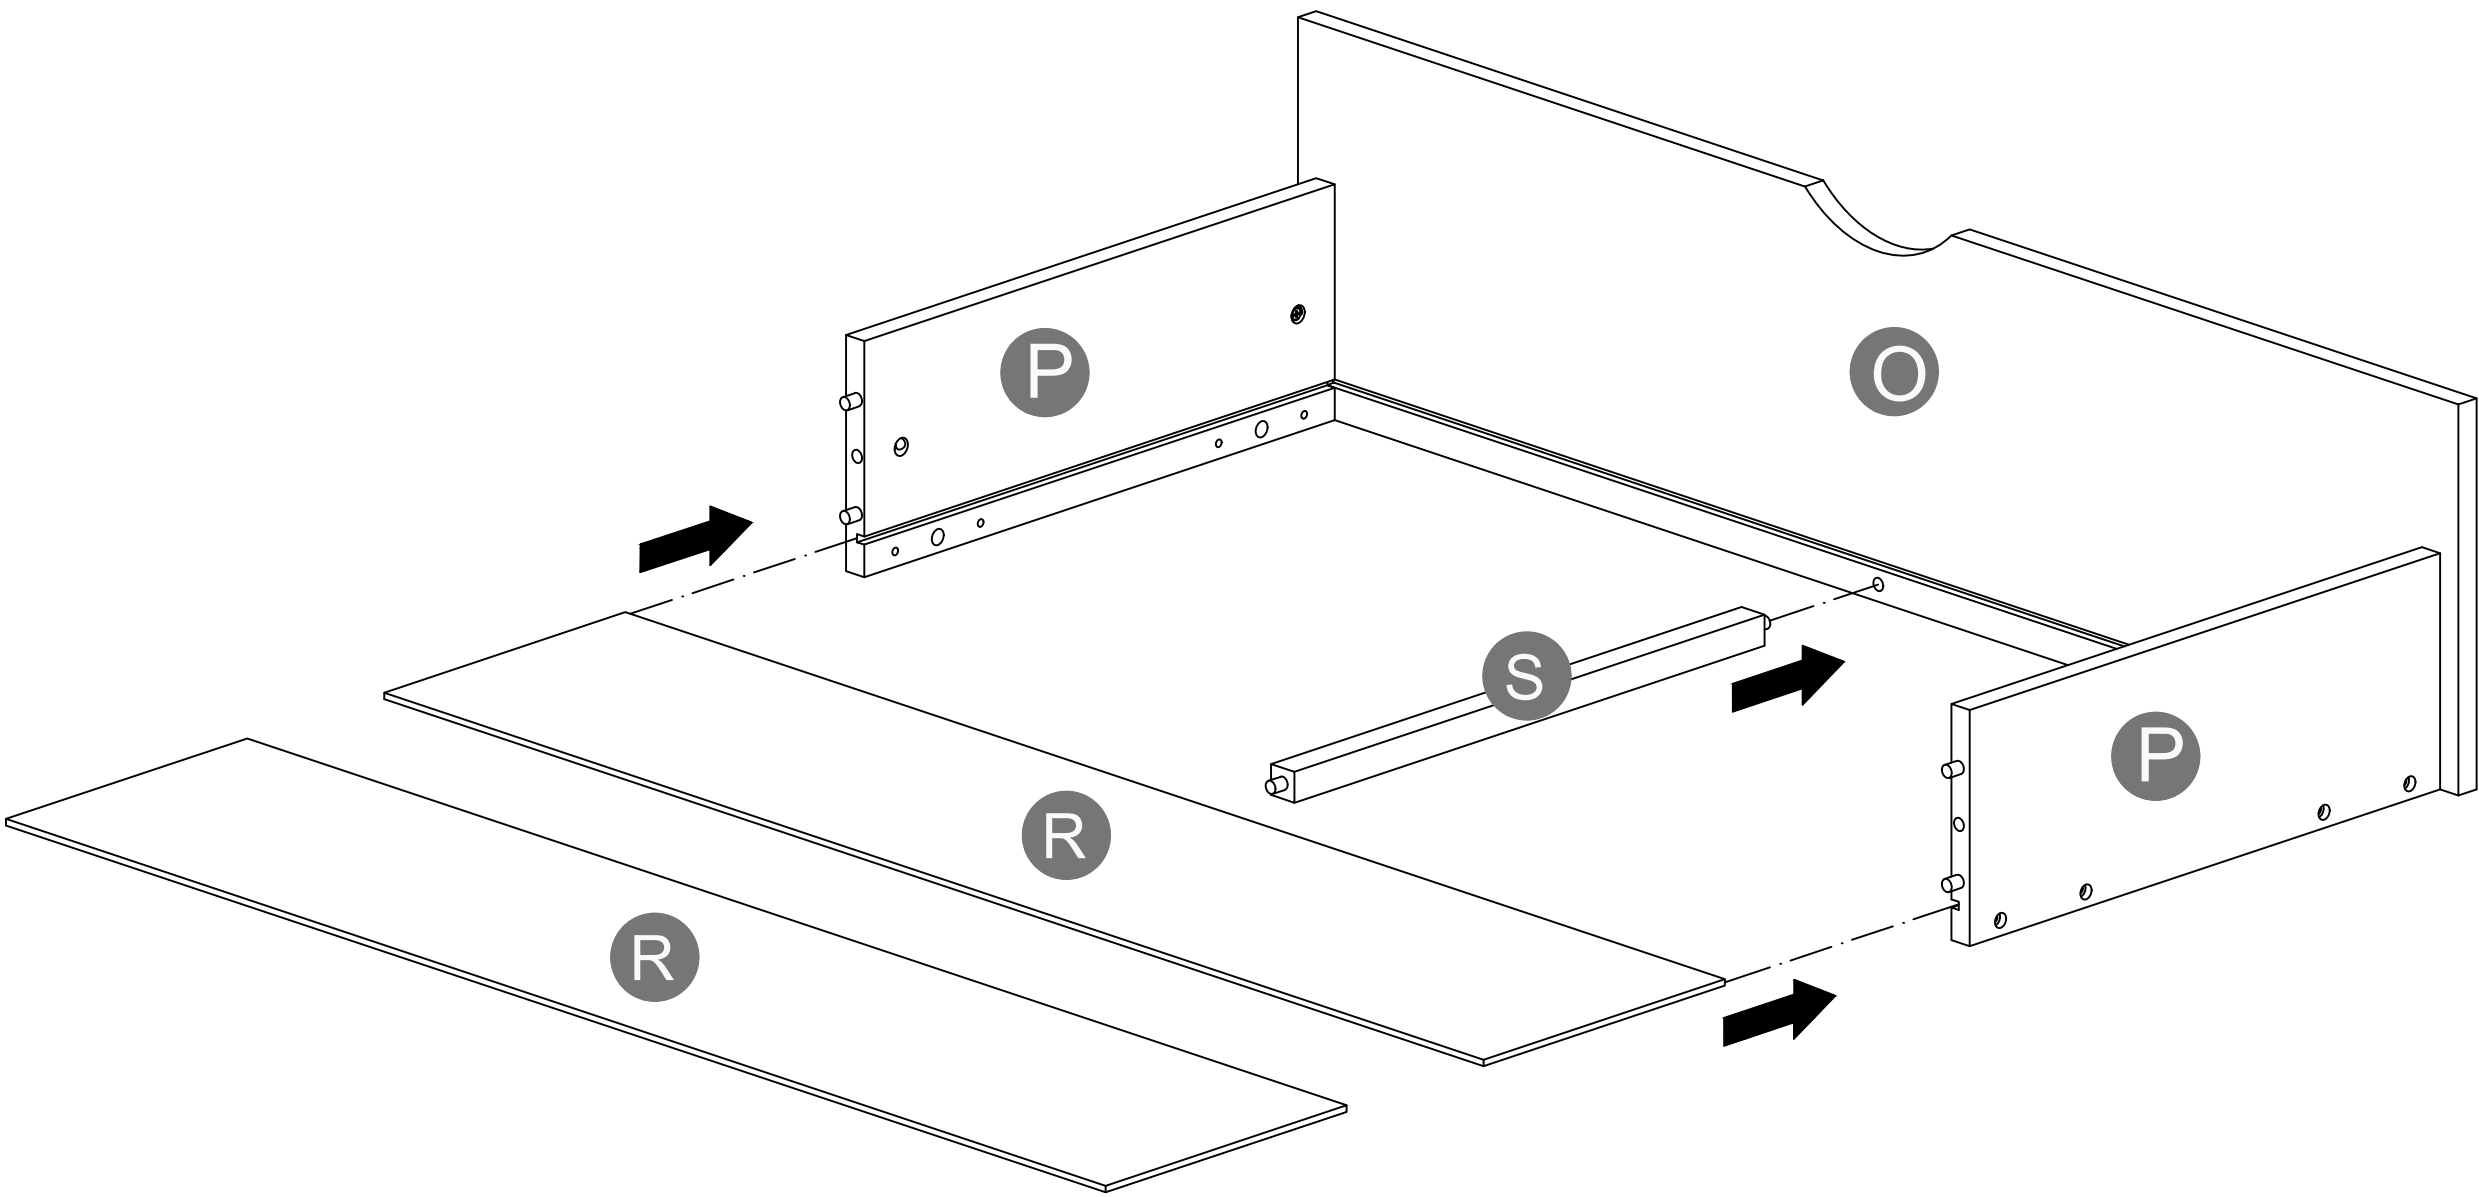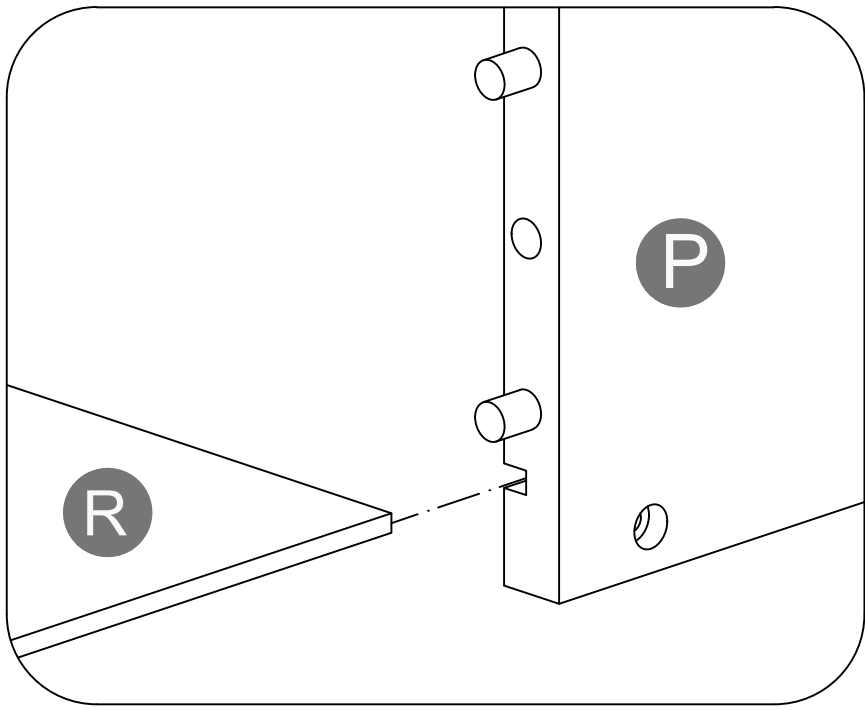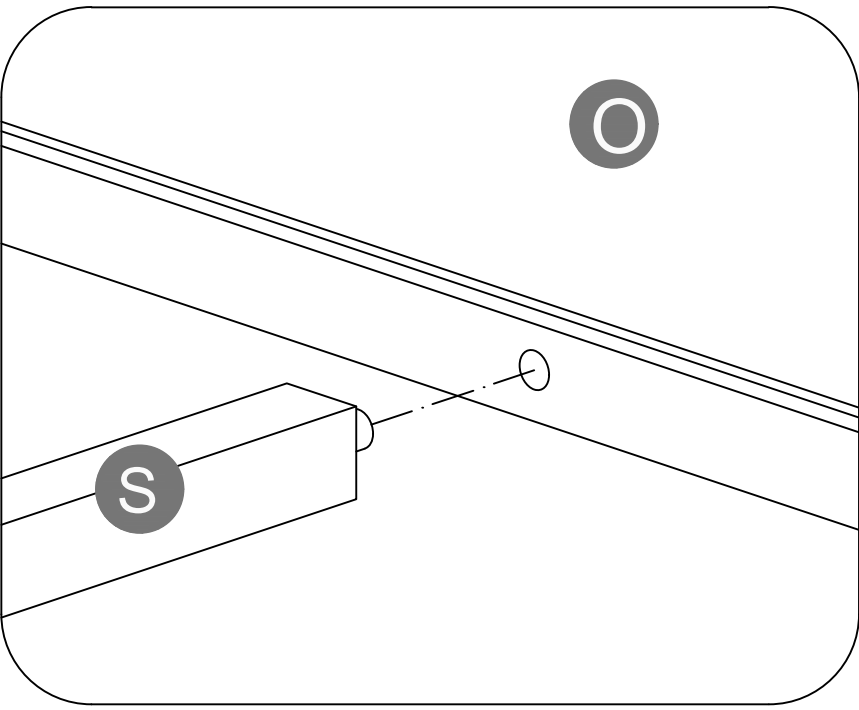STEP 16:





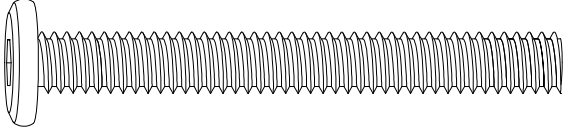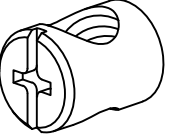STEP 17:




15		16	
4pcs		4pcs	


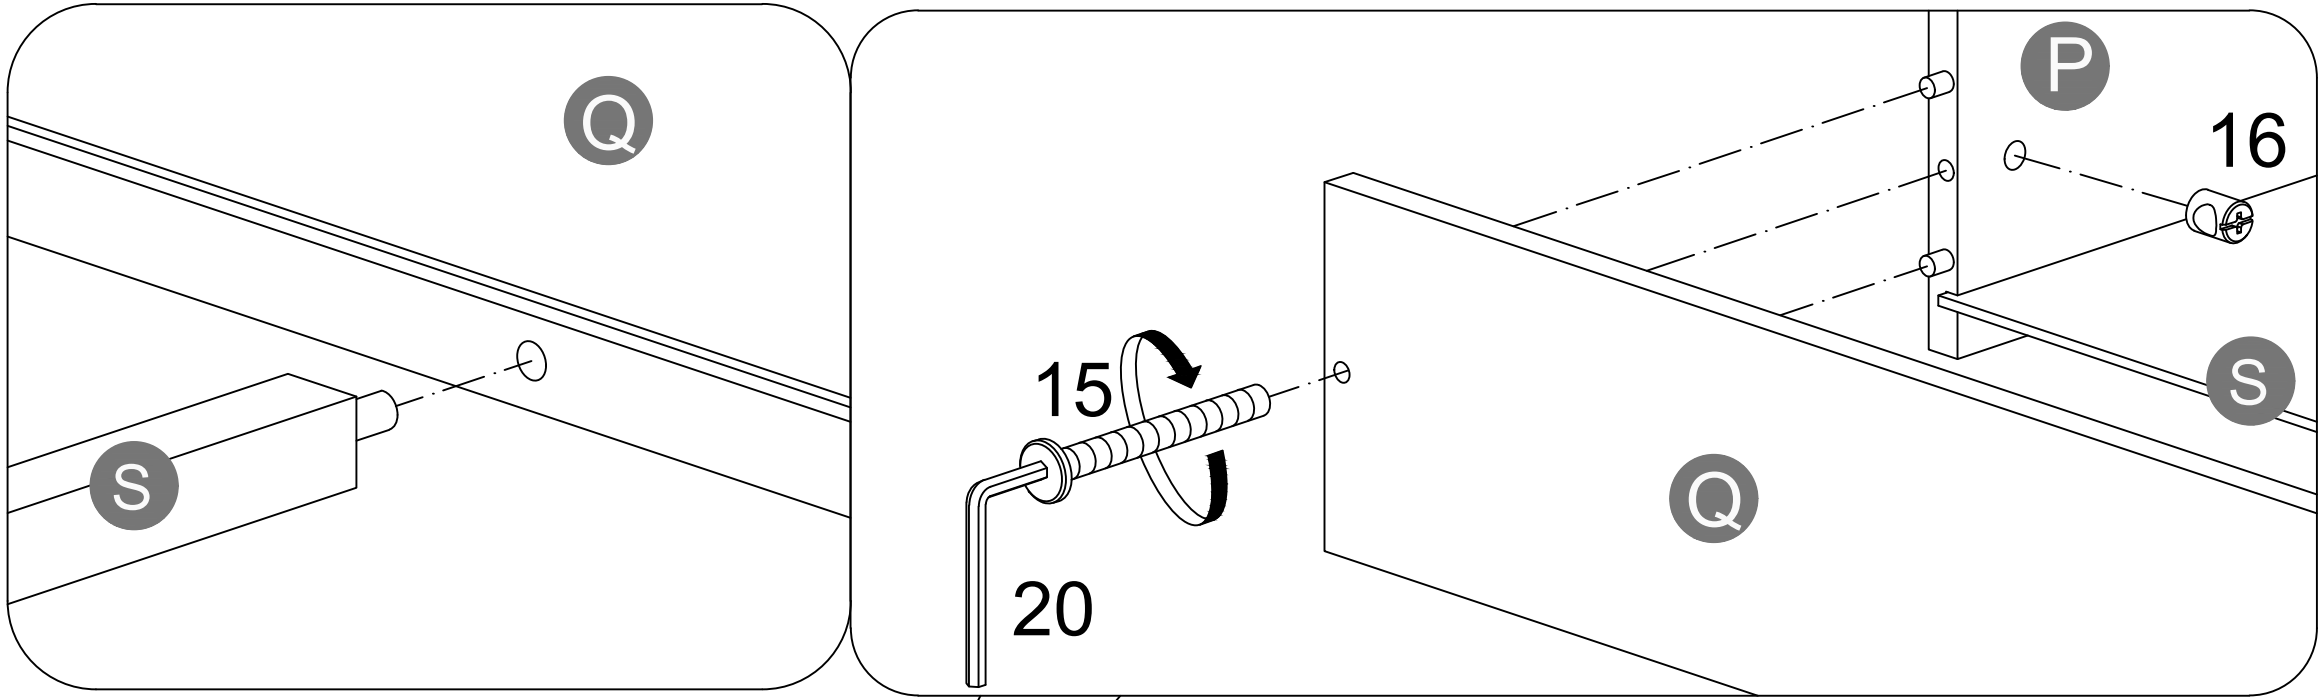


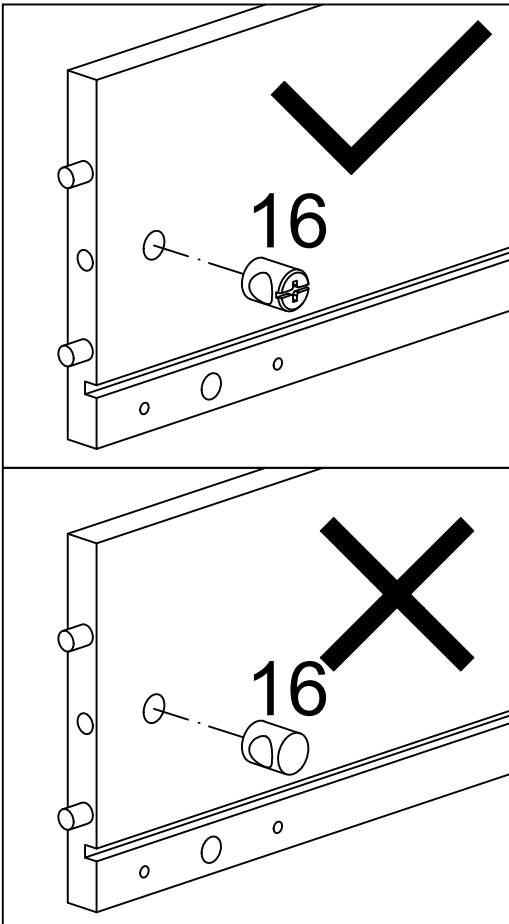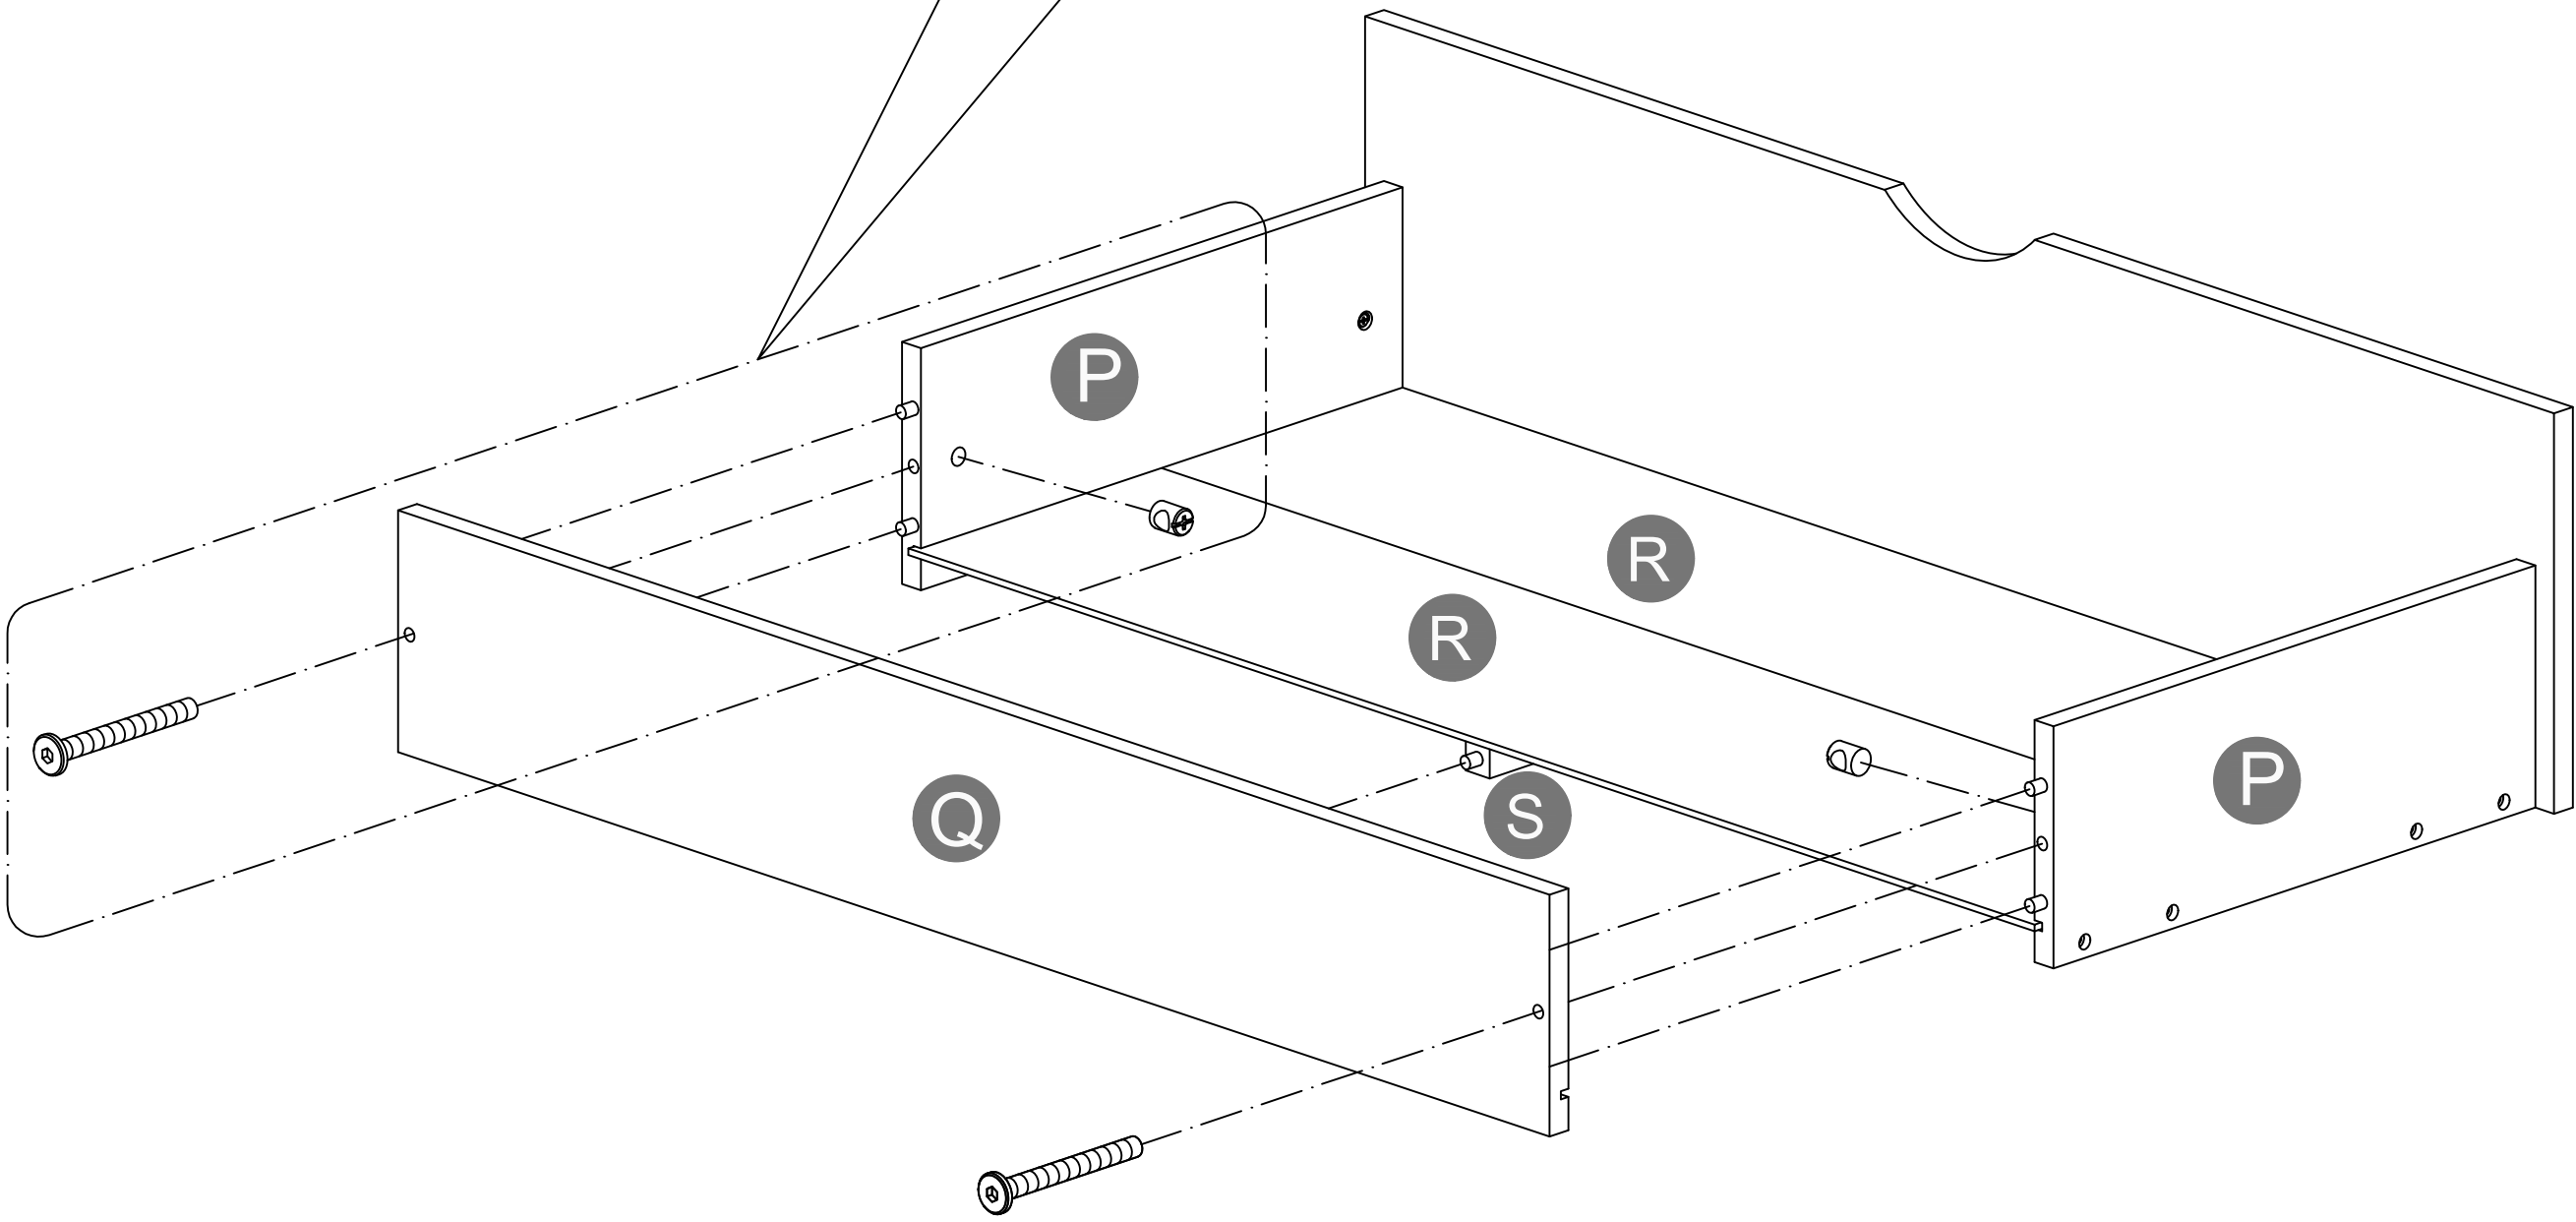Note:Part 16 will face up with the "x" mark on it, otherwise it cannot be tightened






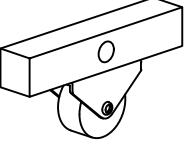
STEP 18:

17	
16 pcs	
19	
8pcs	
21	
8pcs	

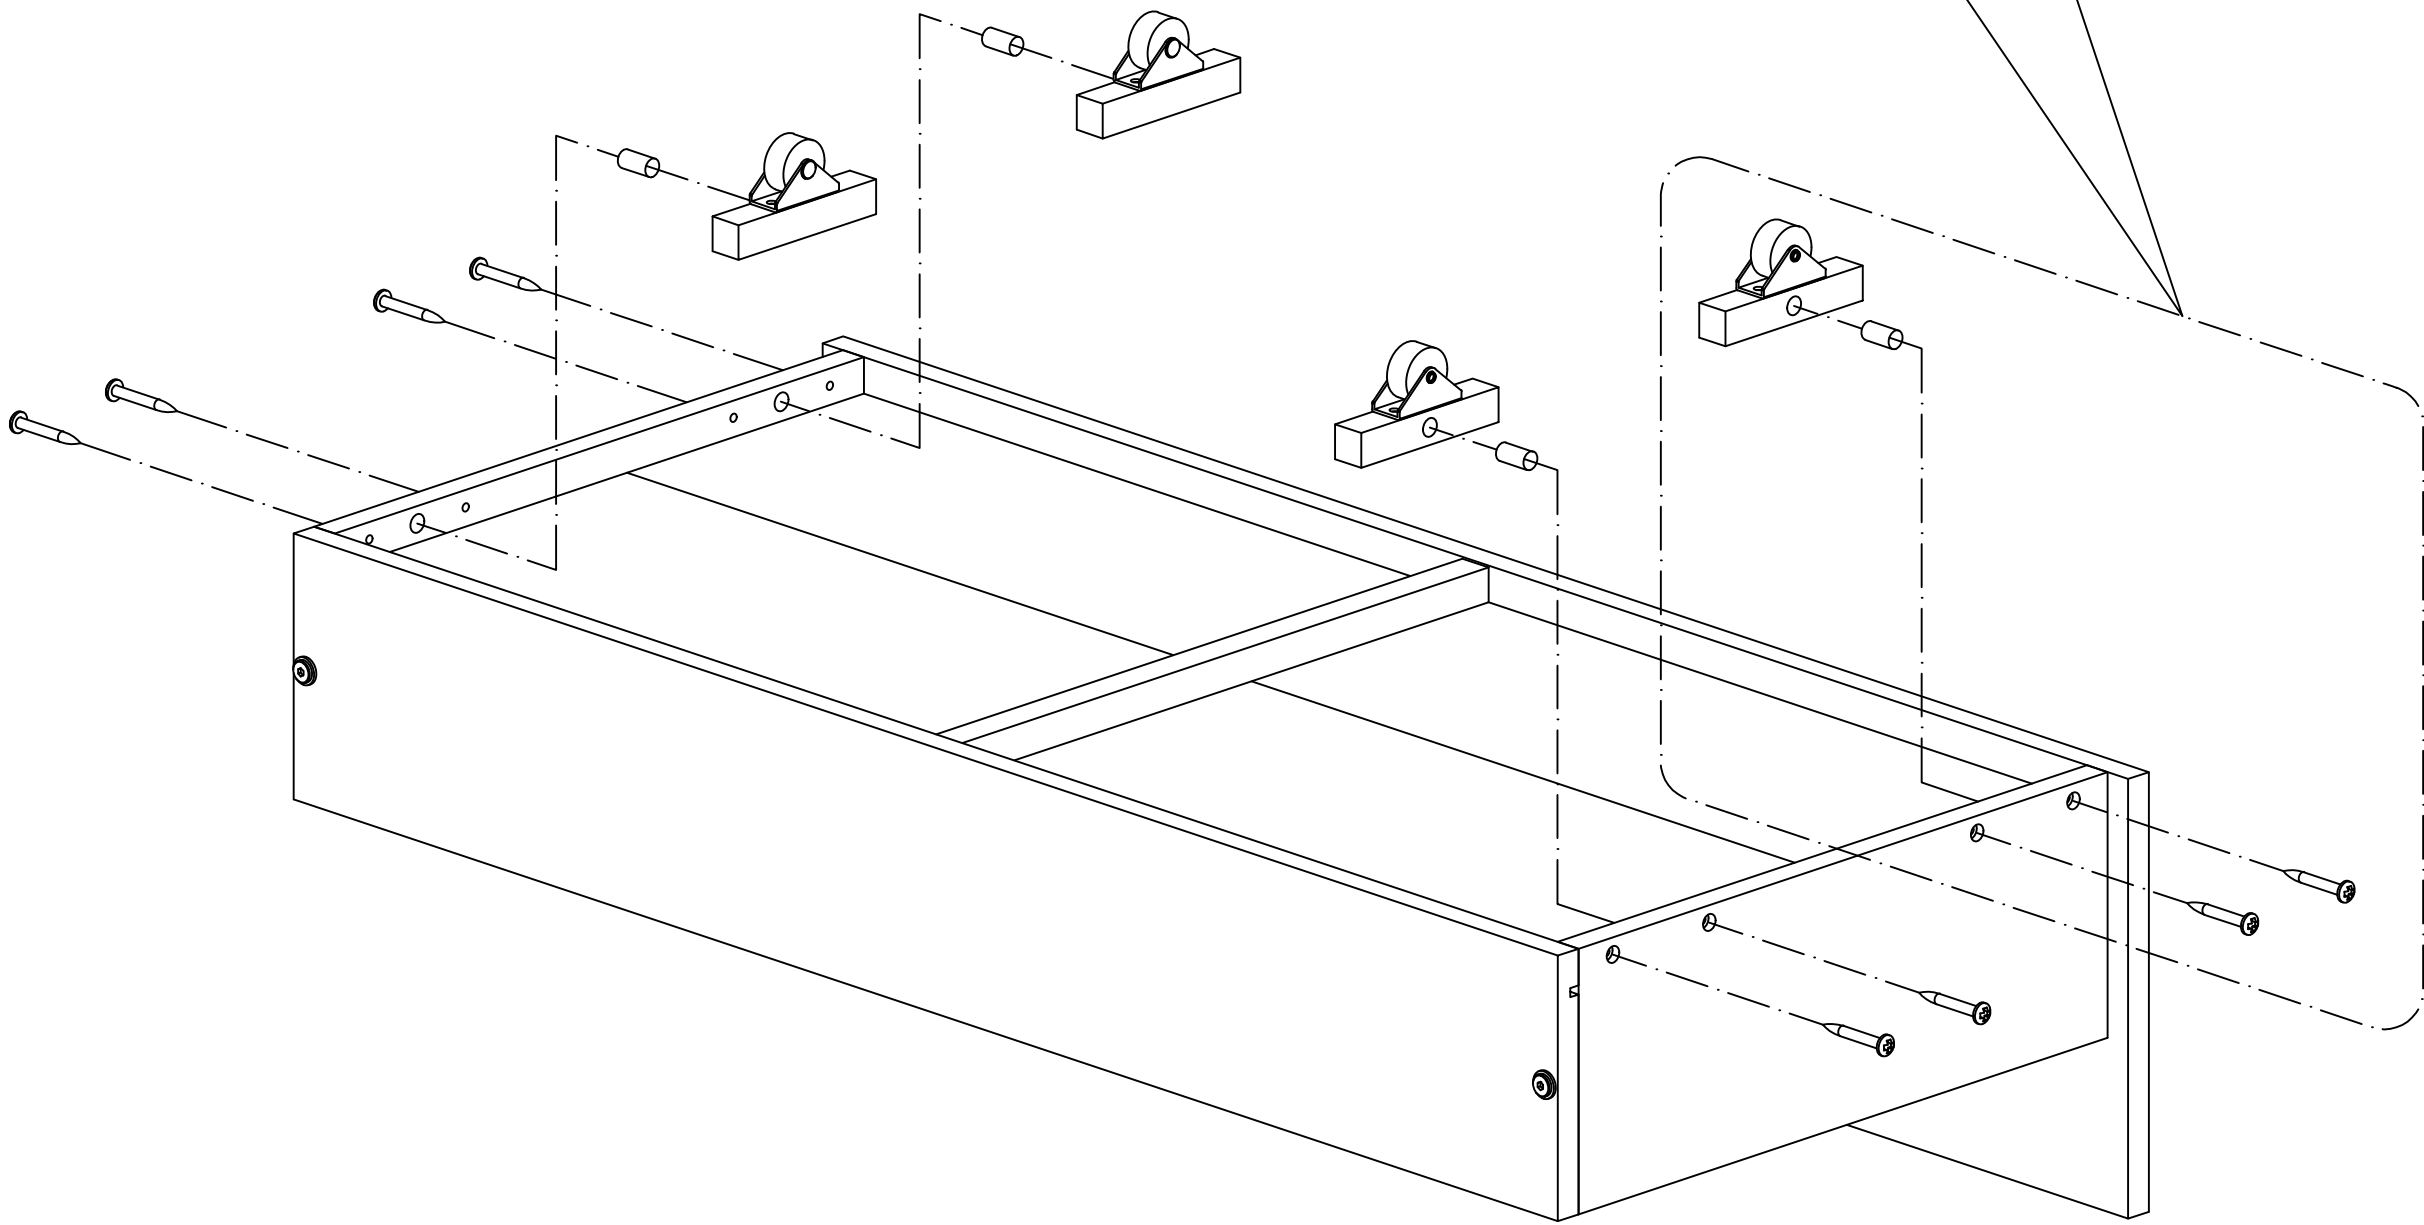
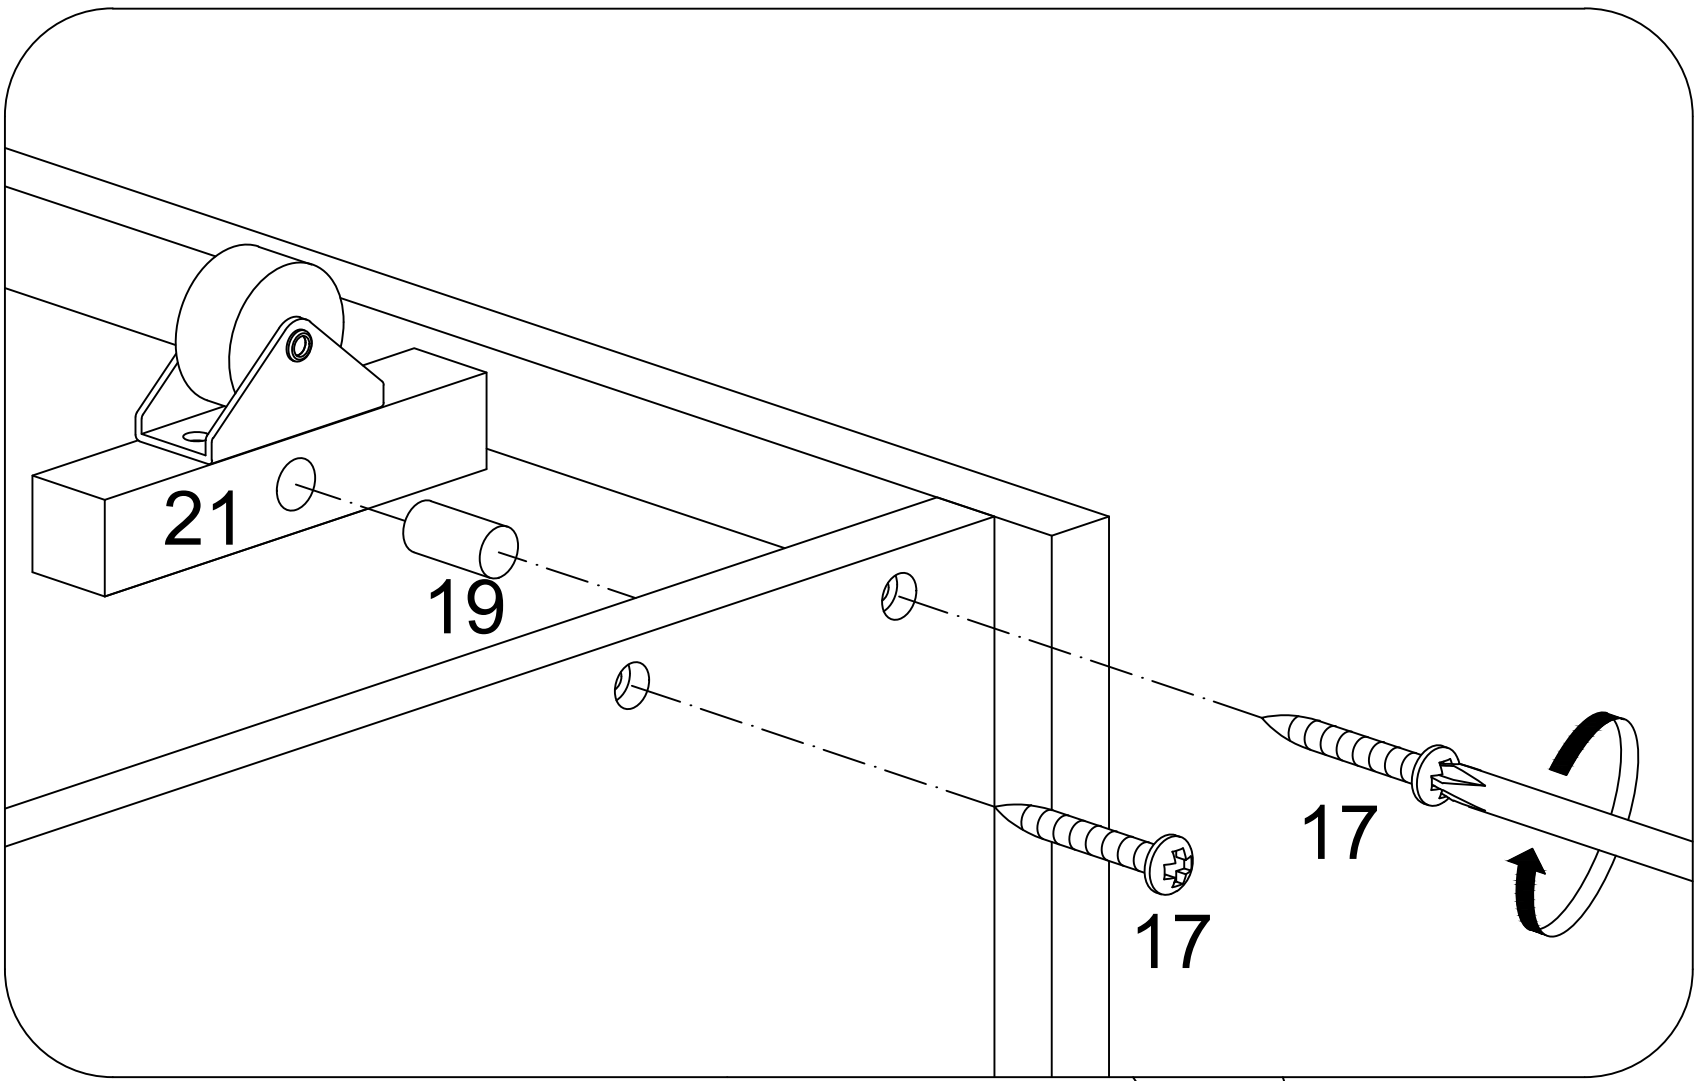


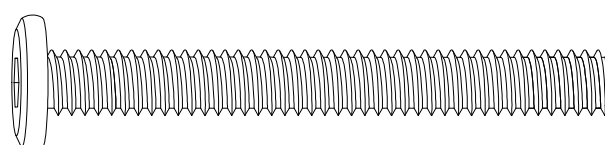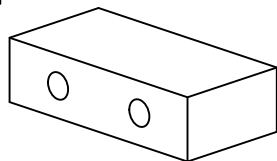STEP 19:

15			
		3pcs	
18		22	
3pcs		3pcs	

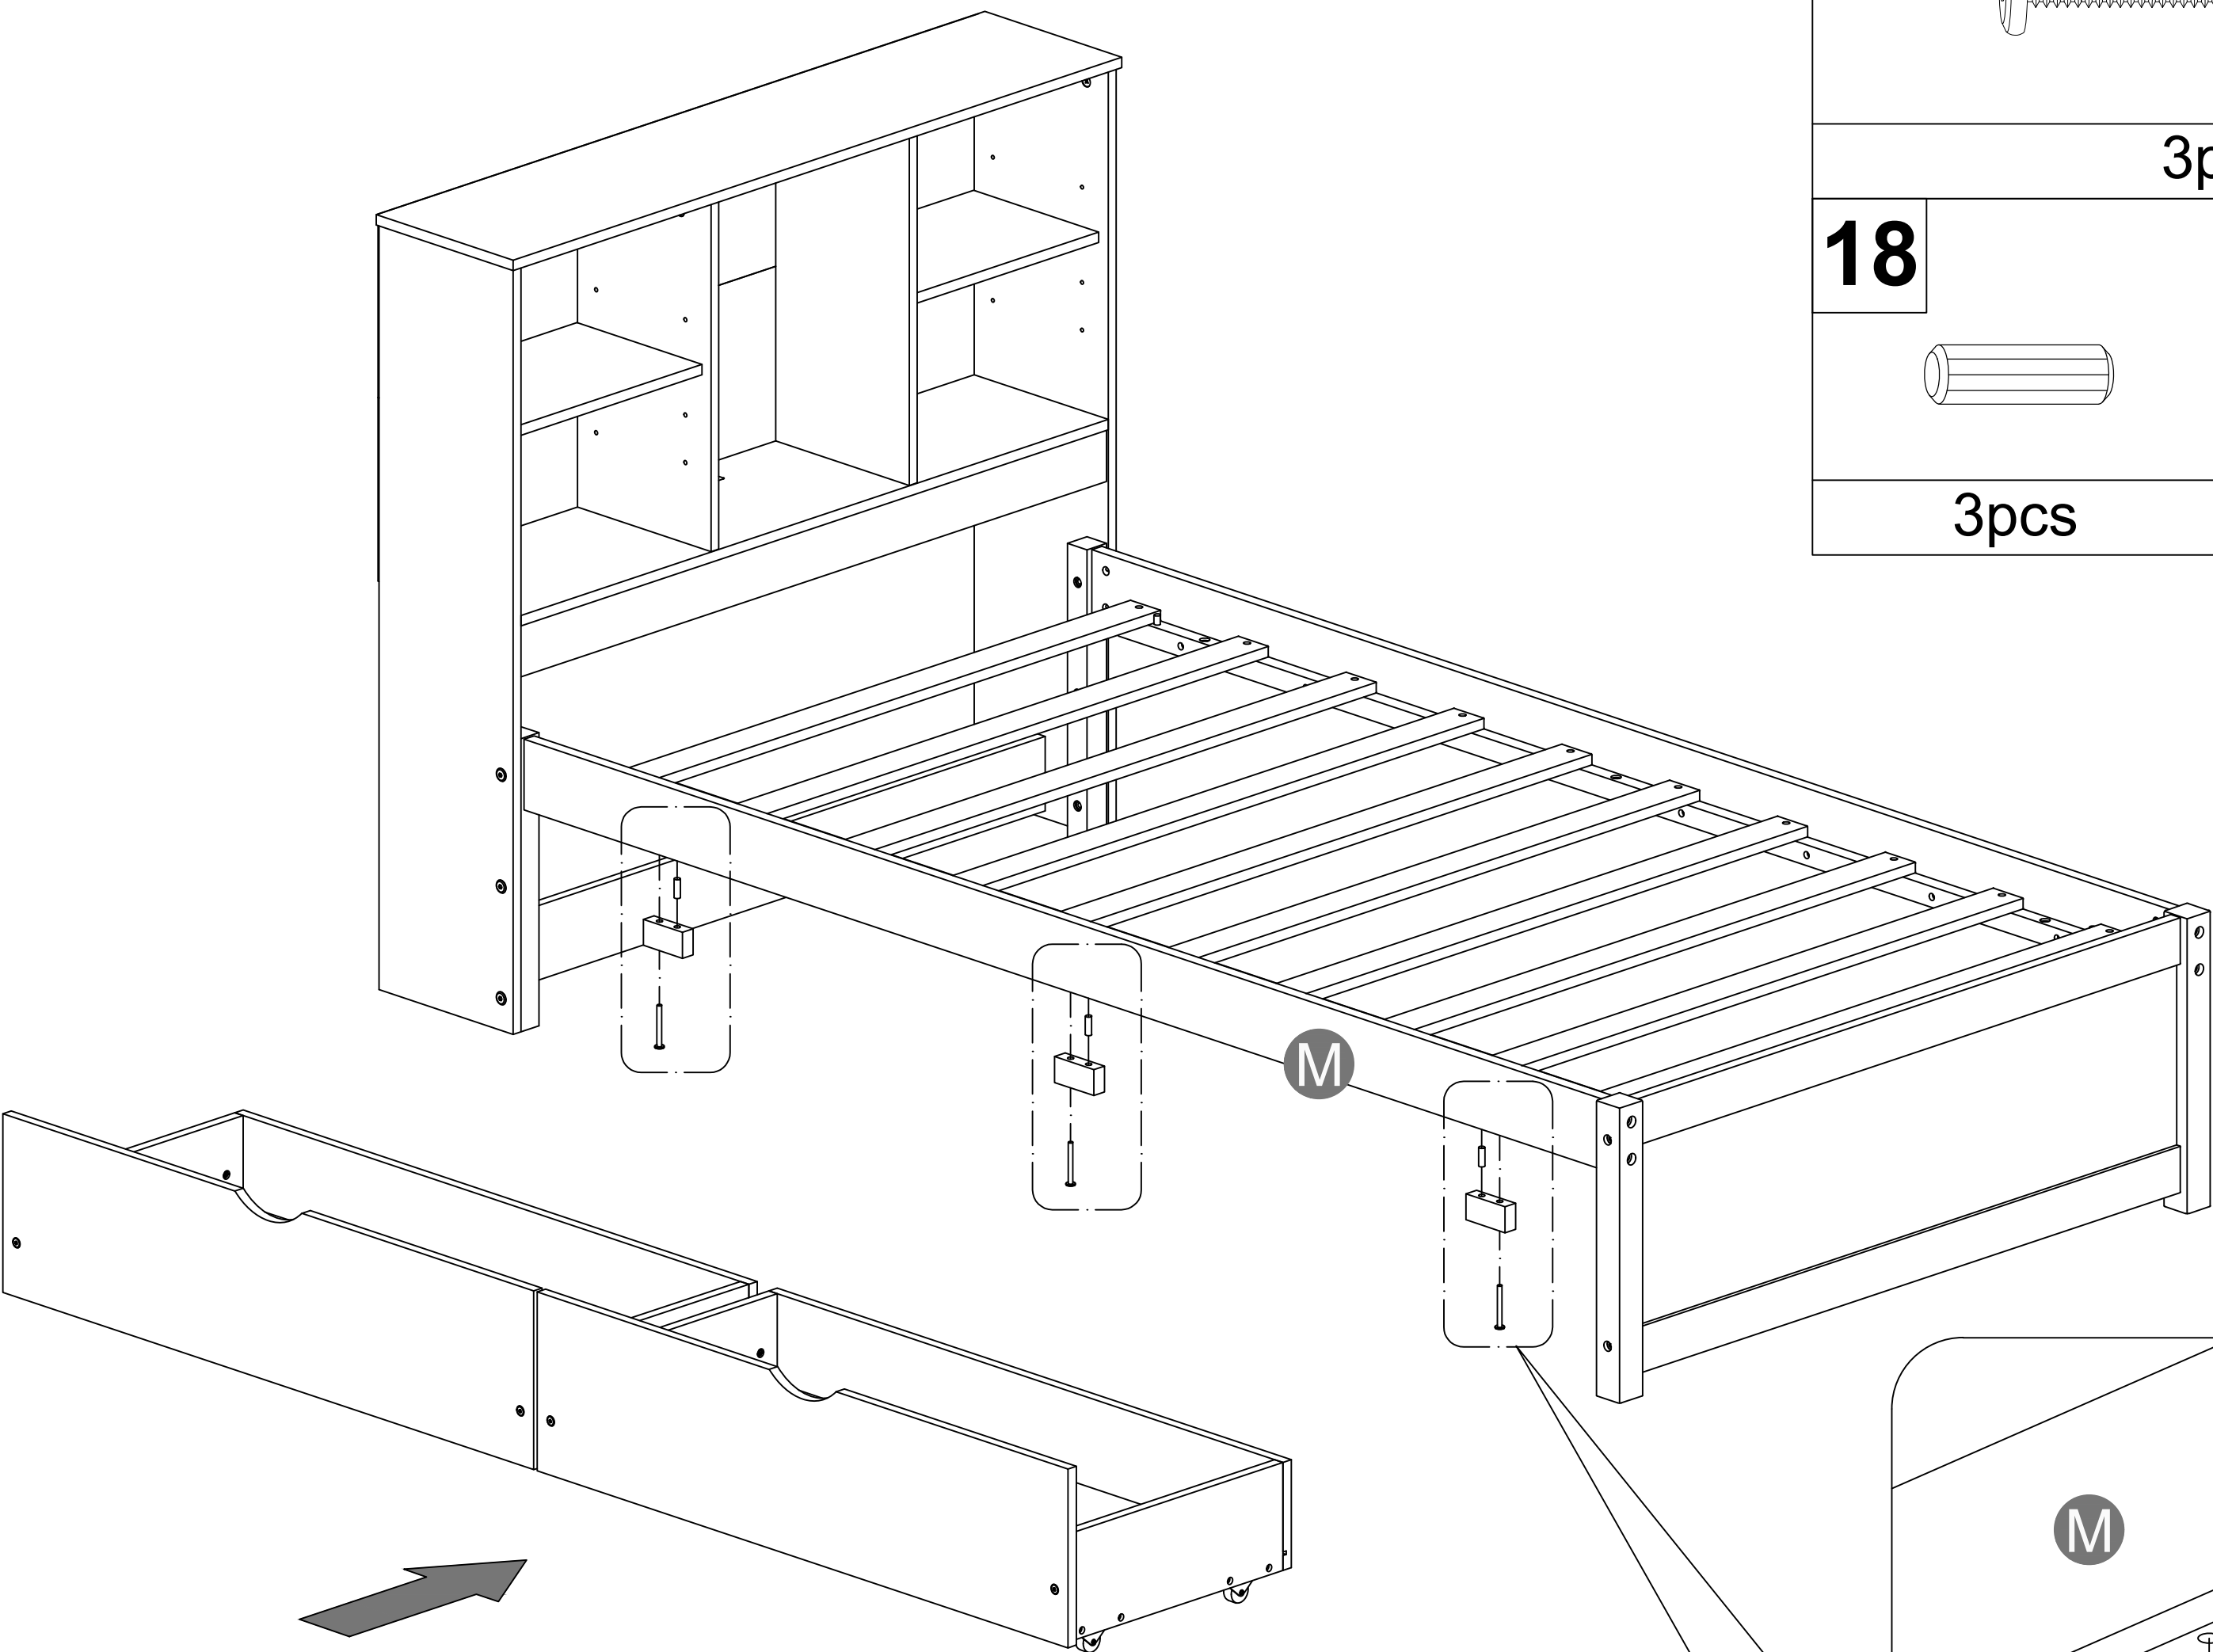

Push Drawers under the bottom of Bed.

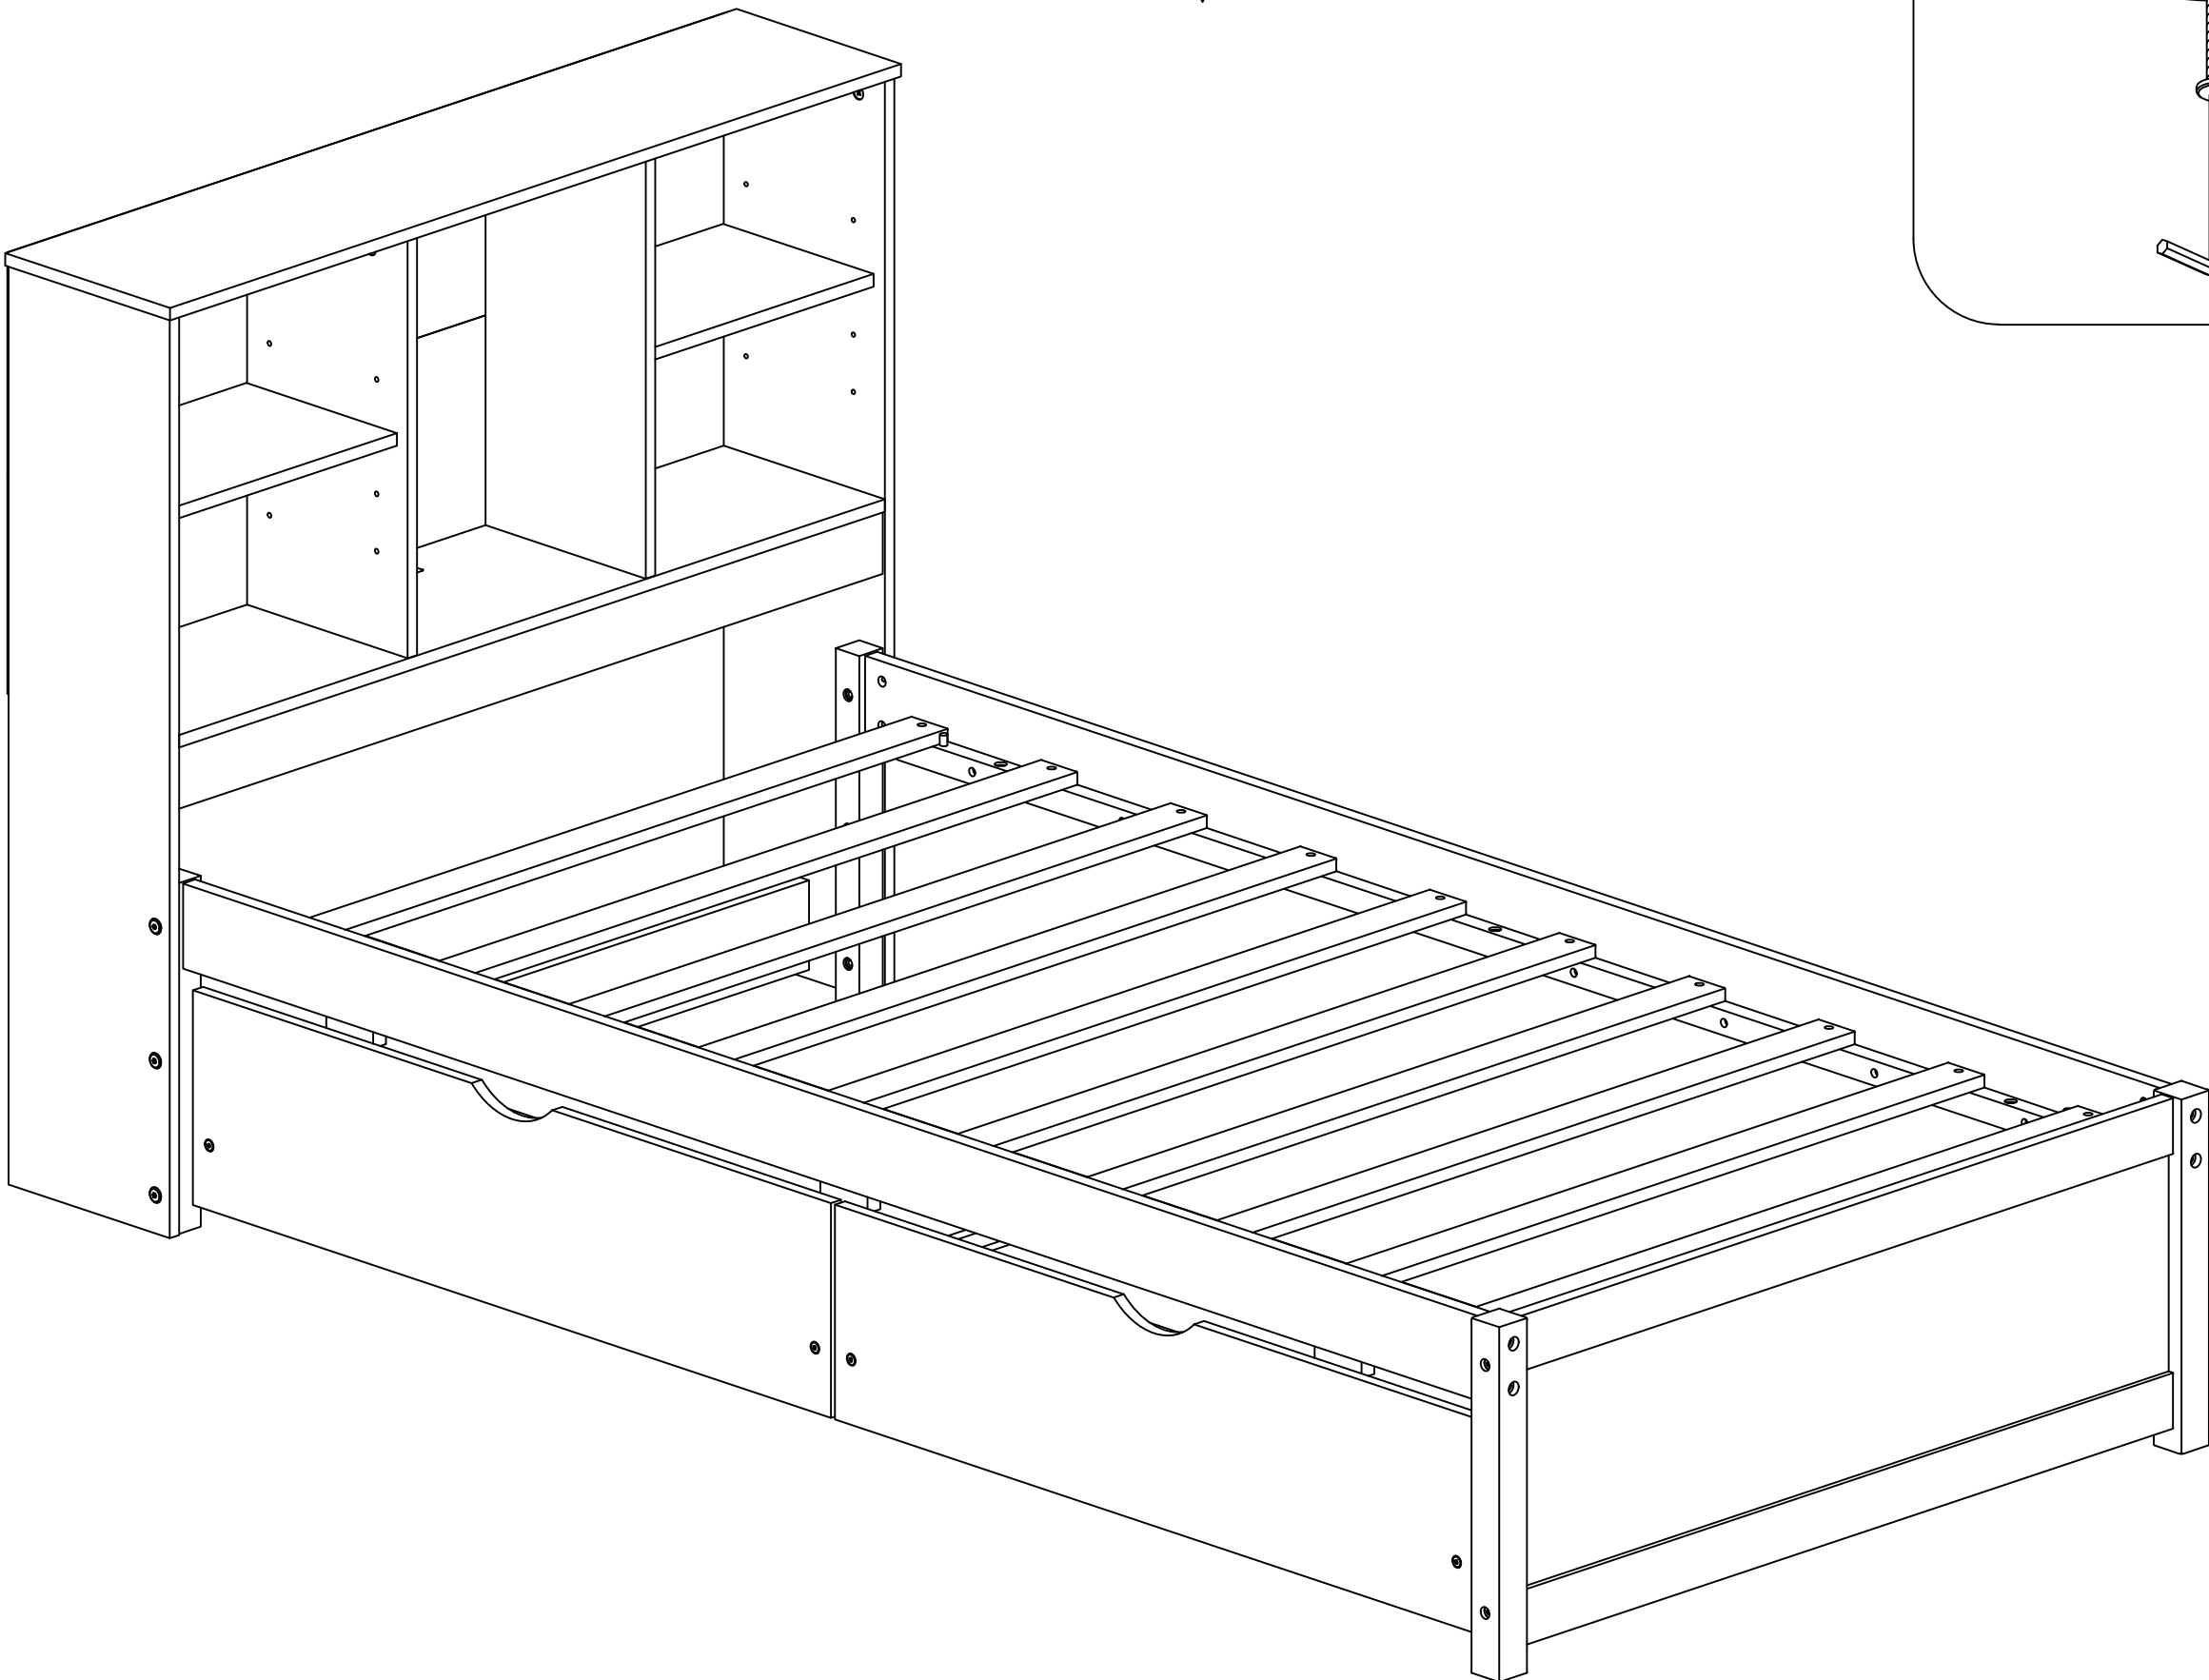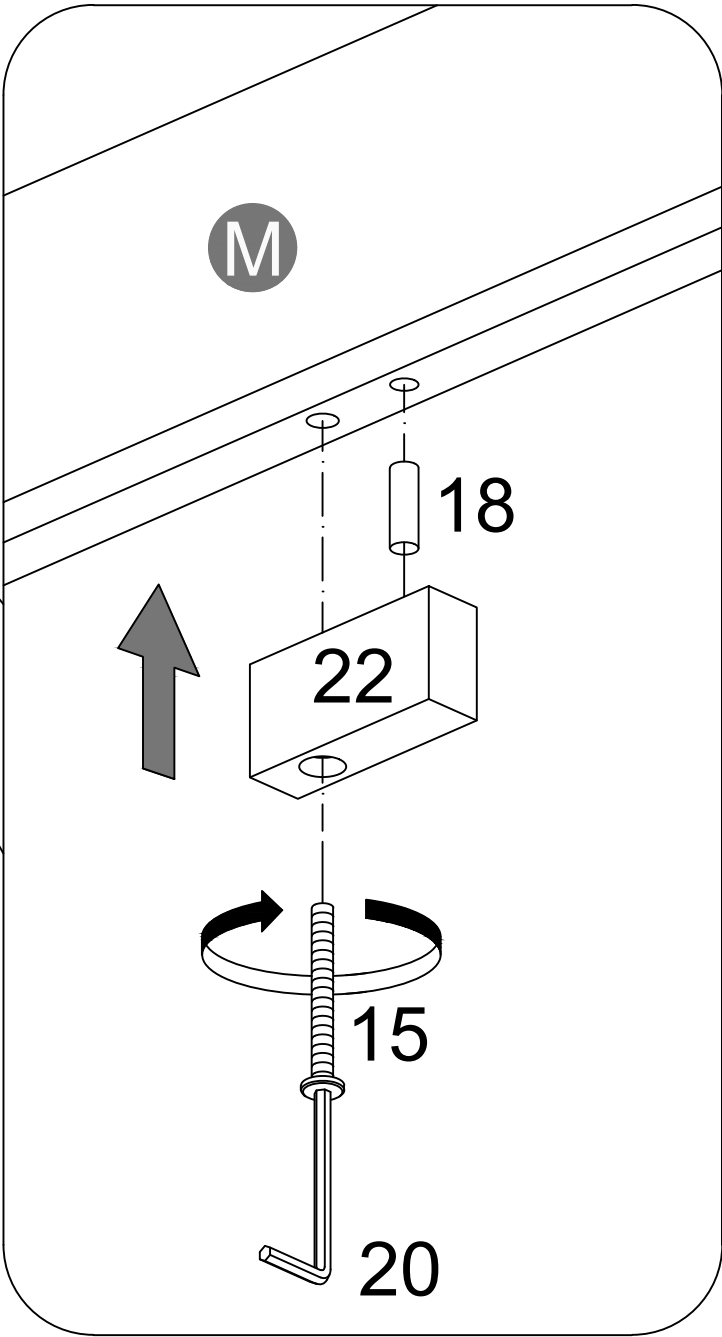

Make sure to tighten all the screws of the bed.