


# ASSEMBLY INSTRUCTION


SKU CODE: (BW00049)

PAGE 1 OF 11






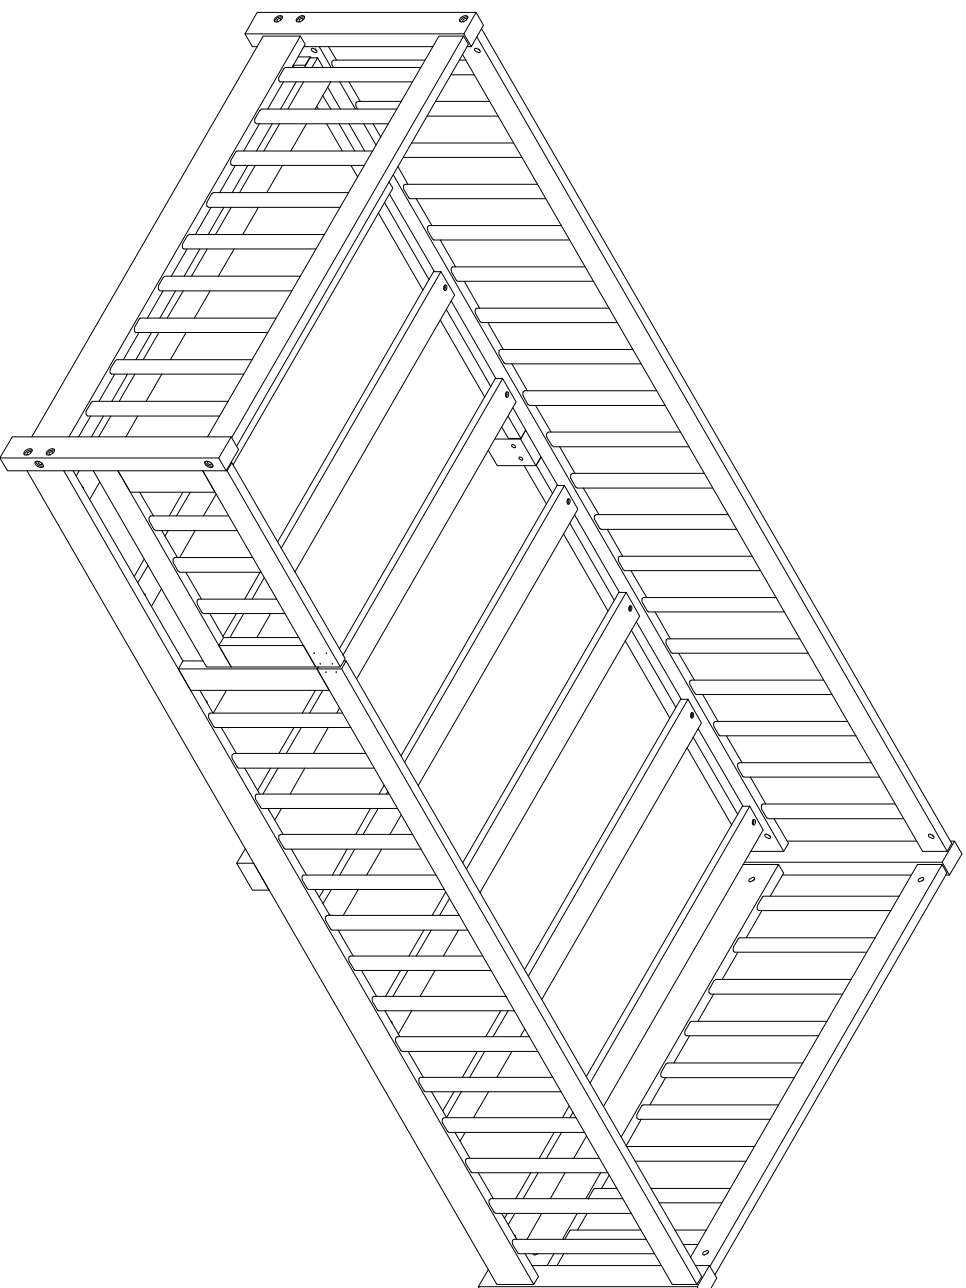





## IMPORTANT NOTE

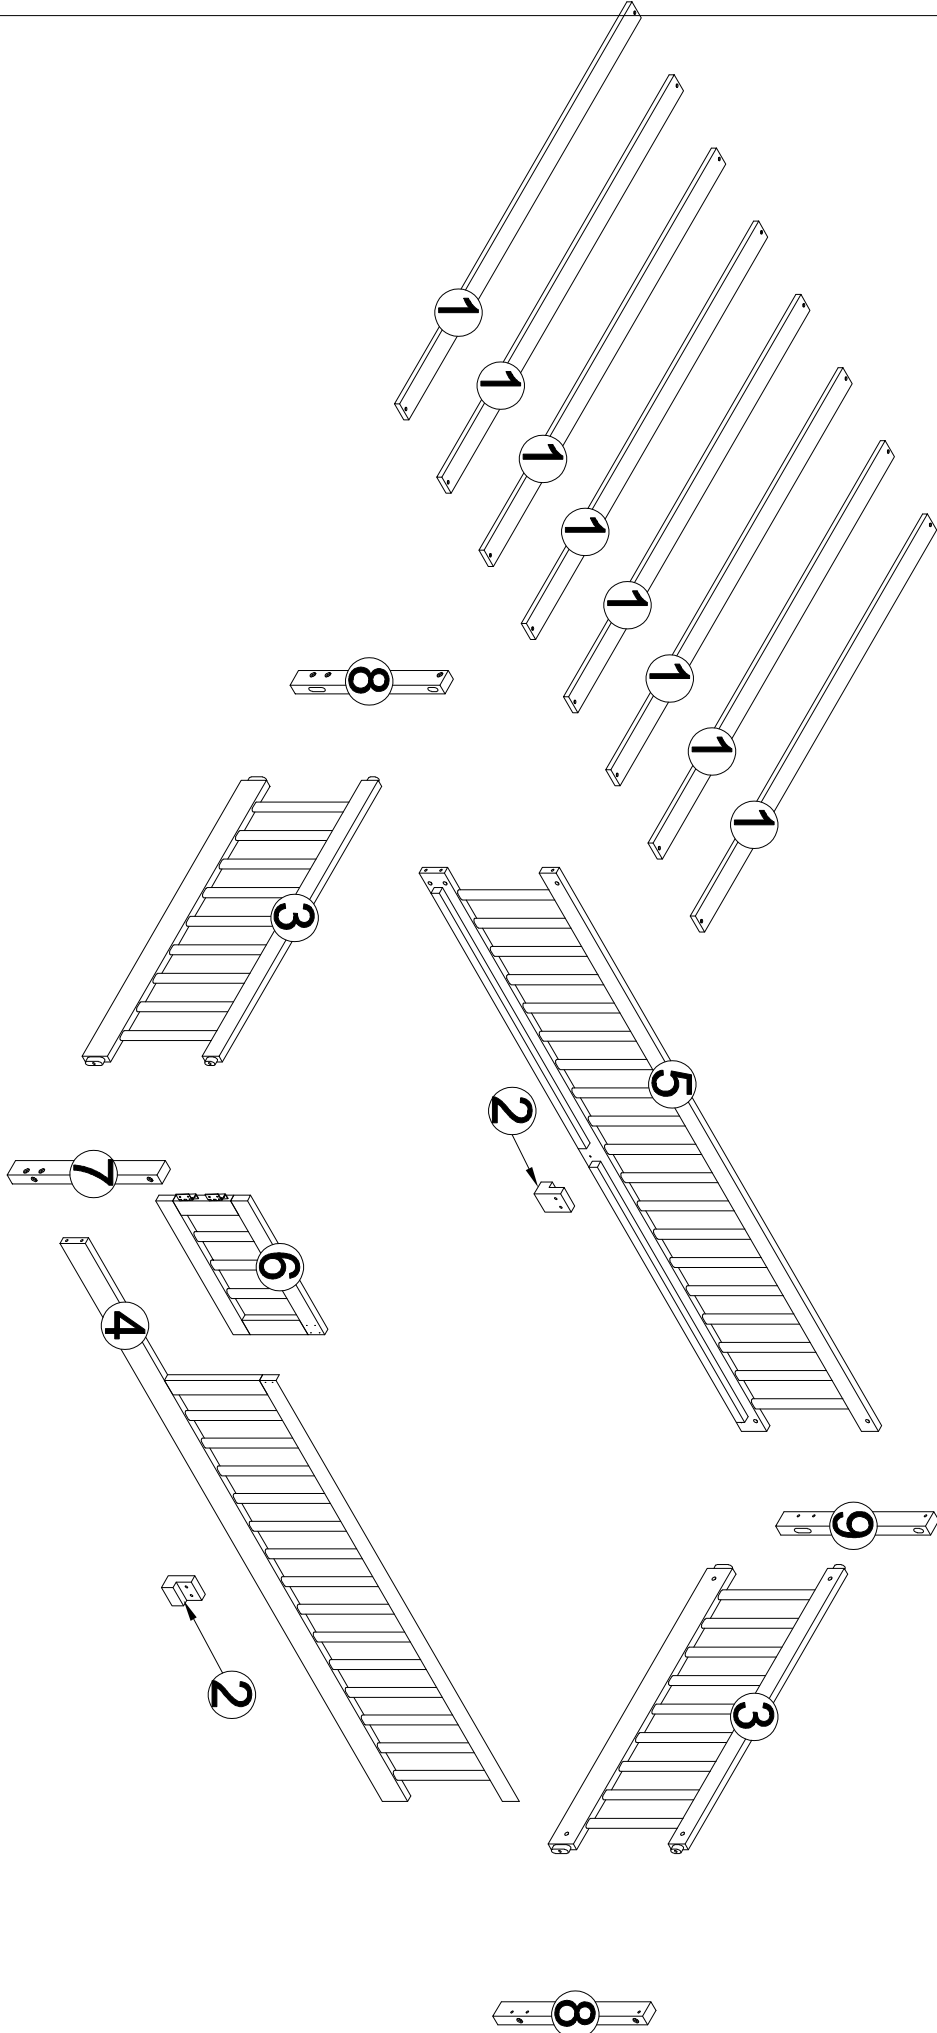

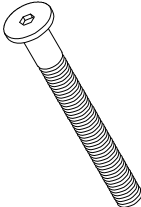

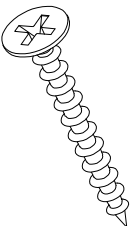
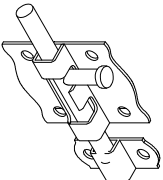
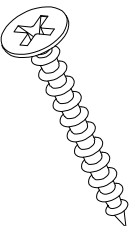
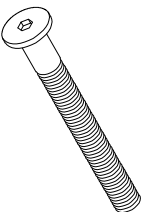
- 1.PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED
- 2.BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP
- 3.DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE BED IS FULLY SET-UP

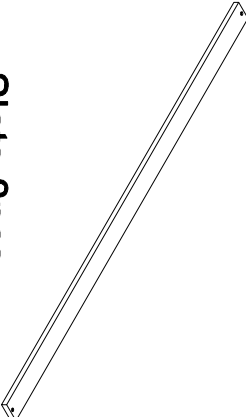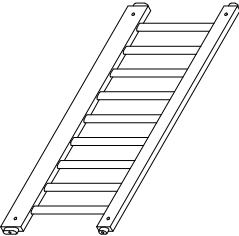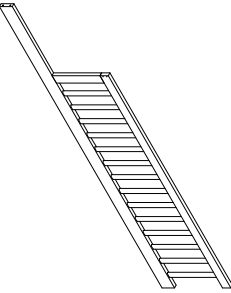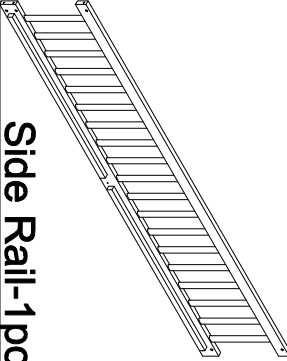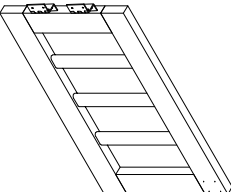


**PART LIST (BW00049)**

<b>1</b>		<b>2</b>		<b>3</b>	
	<b>Slats-8pcs</b>		<b>Support Side Rails-2pcs</b>		<b>Frames(HB+FB)-2pcs</b>
<b>4</b>		<b>5</b>		<b>6</b>	
	<b>Side Rail-1pc</b>		<b>Side Rail-1pc</b>		<b>Door Fram-1pc</b>
<b>7</b>		<b>8</b>		<b>9</b>	
	<b>Leg-1pc</b>		<b>Legs-2pcs</b>		<b>Leg-1pc</b>



**HARDWARE LIST (BW00049)**

A	B	C
  Screws 1/4"x35 mm 4pcs	  Ø1/4" x 13 mm Horizontal-Hole bolts 19pcs	  Ø1/4" x 90 mm Hex-Head bolts 8pcs
D	E	F
  Allen Key 1pc	  M3 x 15mm Wood Screws 10pcs	  Catch(20x38x38) 1pc
K	L	
  M4 x 30mm Wood Screws 16pcs	  Ø1/4" x 80 mm Hex-Head bolts 11pcs	



**Assembly Tools Required (Not Included)**


STEP 1:

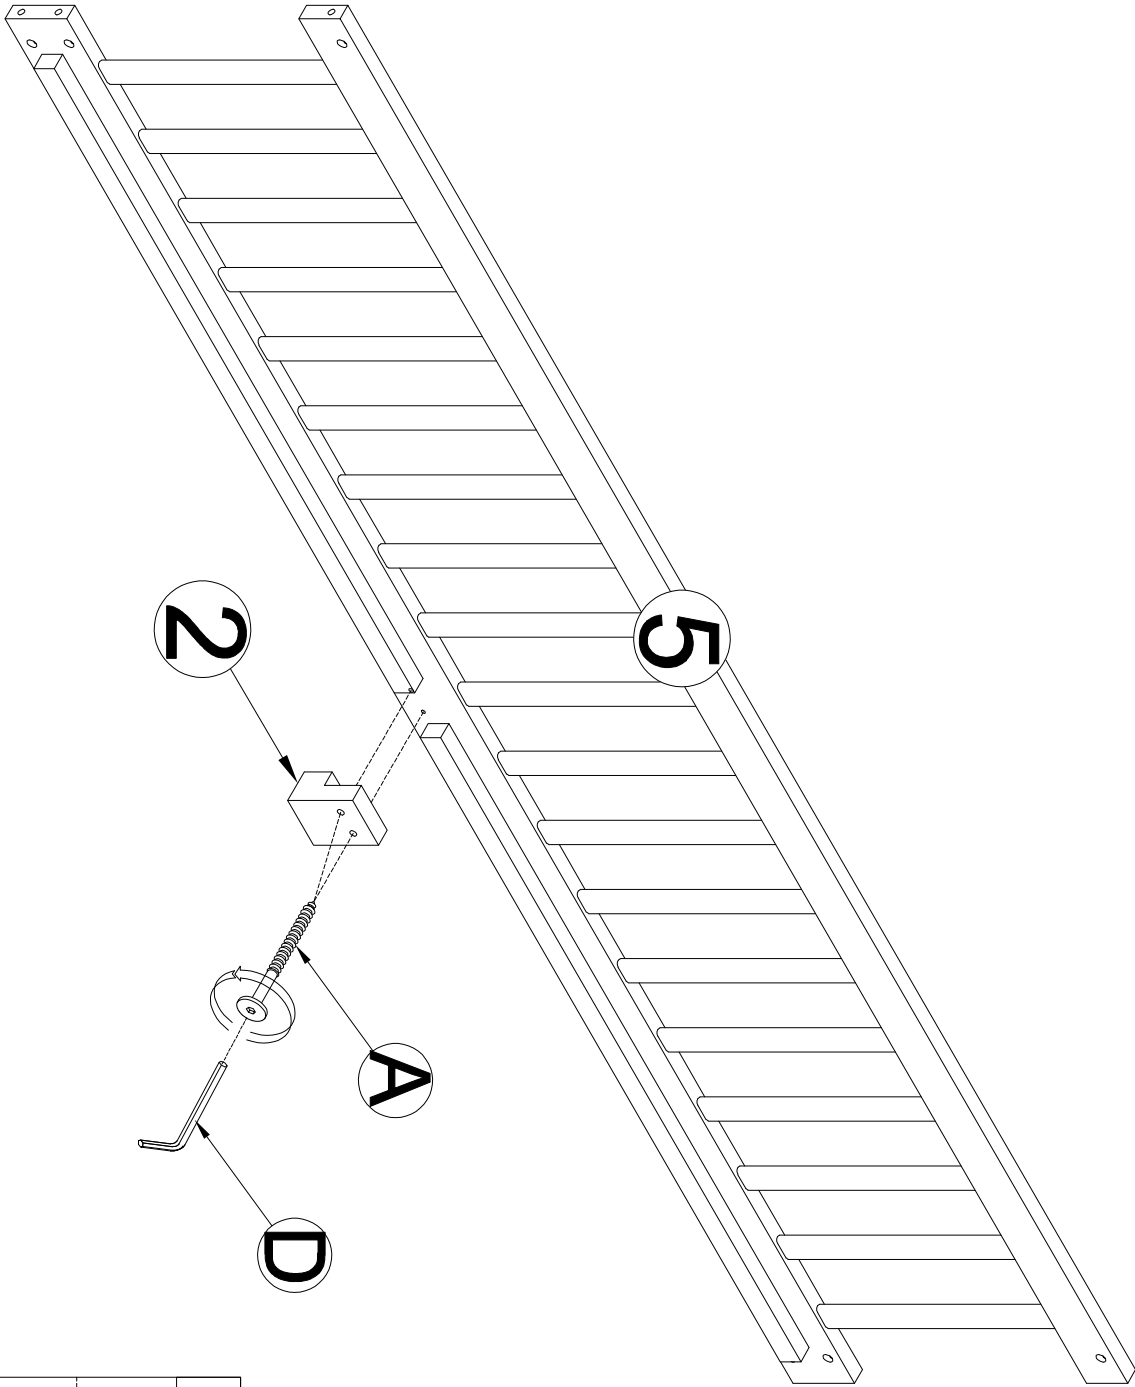


A

Screws 1/4"x35 mm  
2pcs

STEP 2:

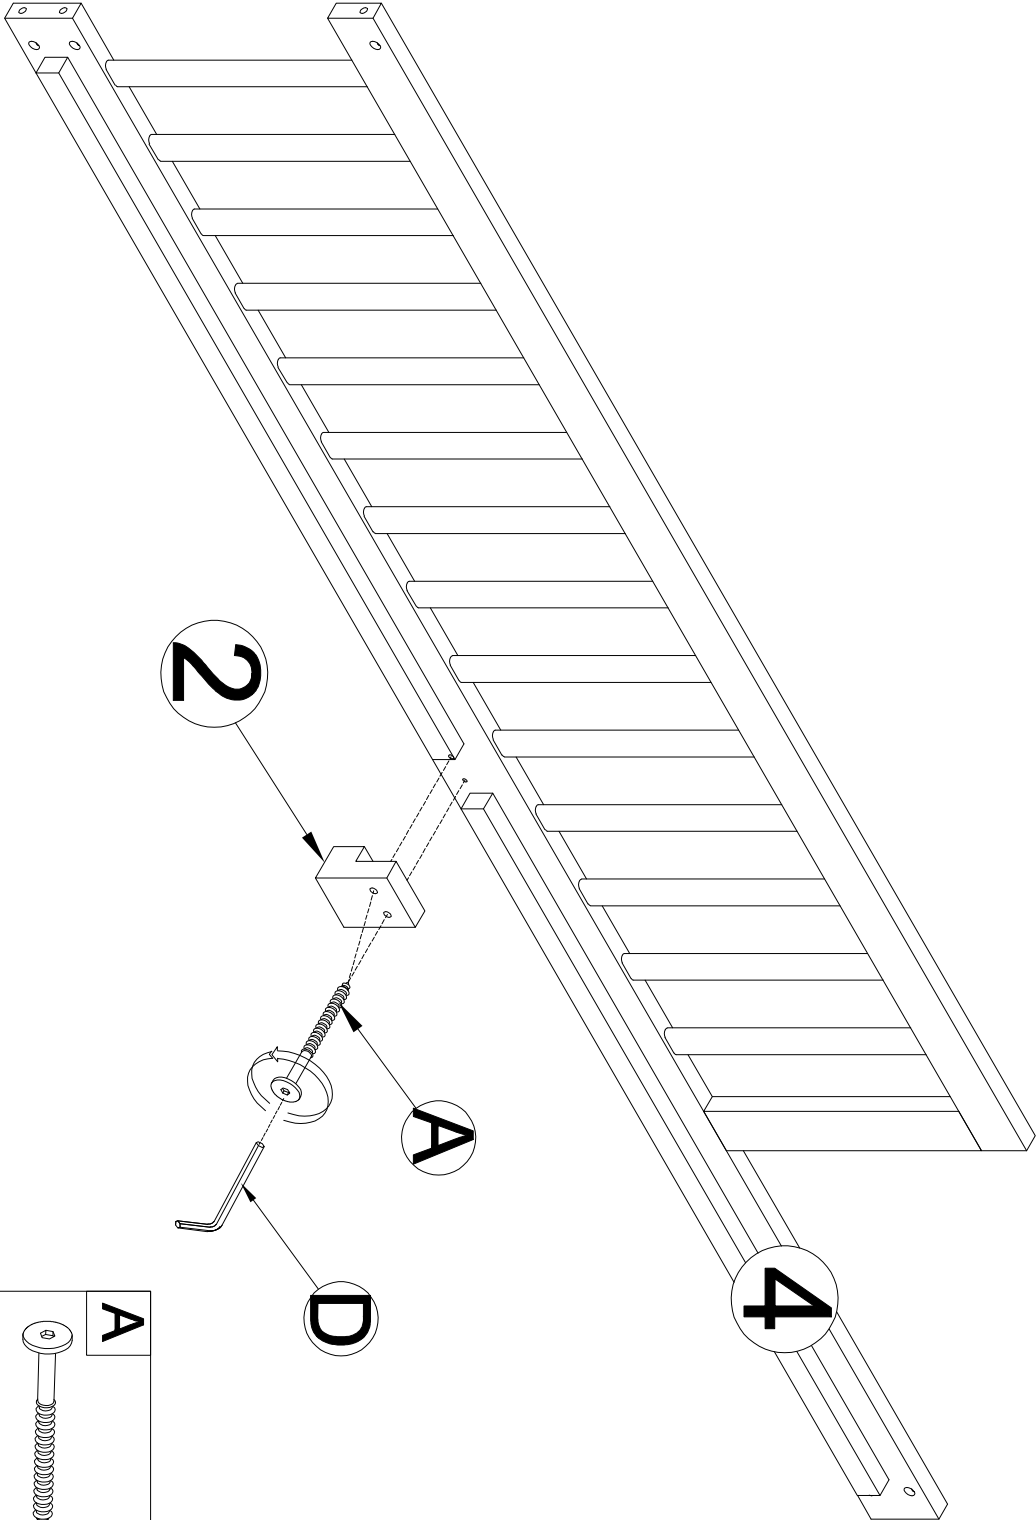


A




Screws 1/4"x35 mm  
2pcs

STEP 3:

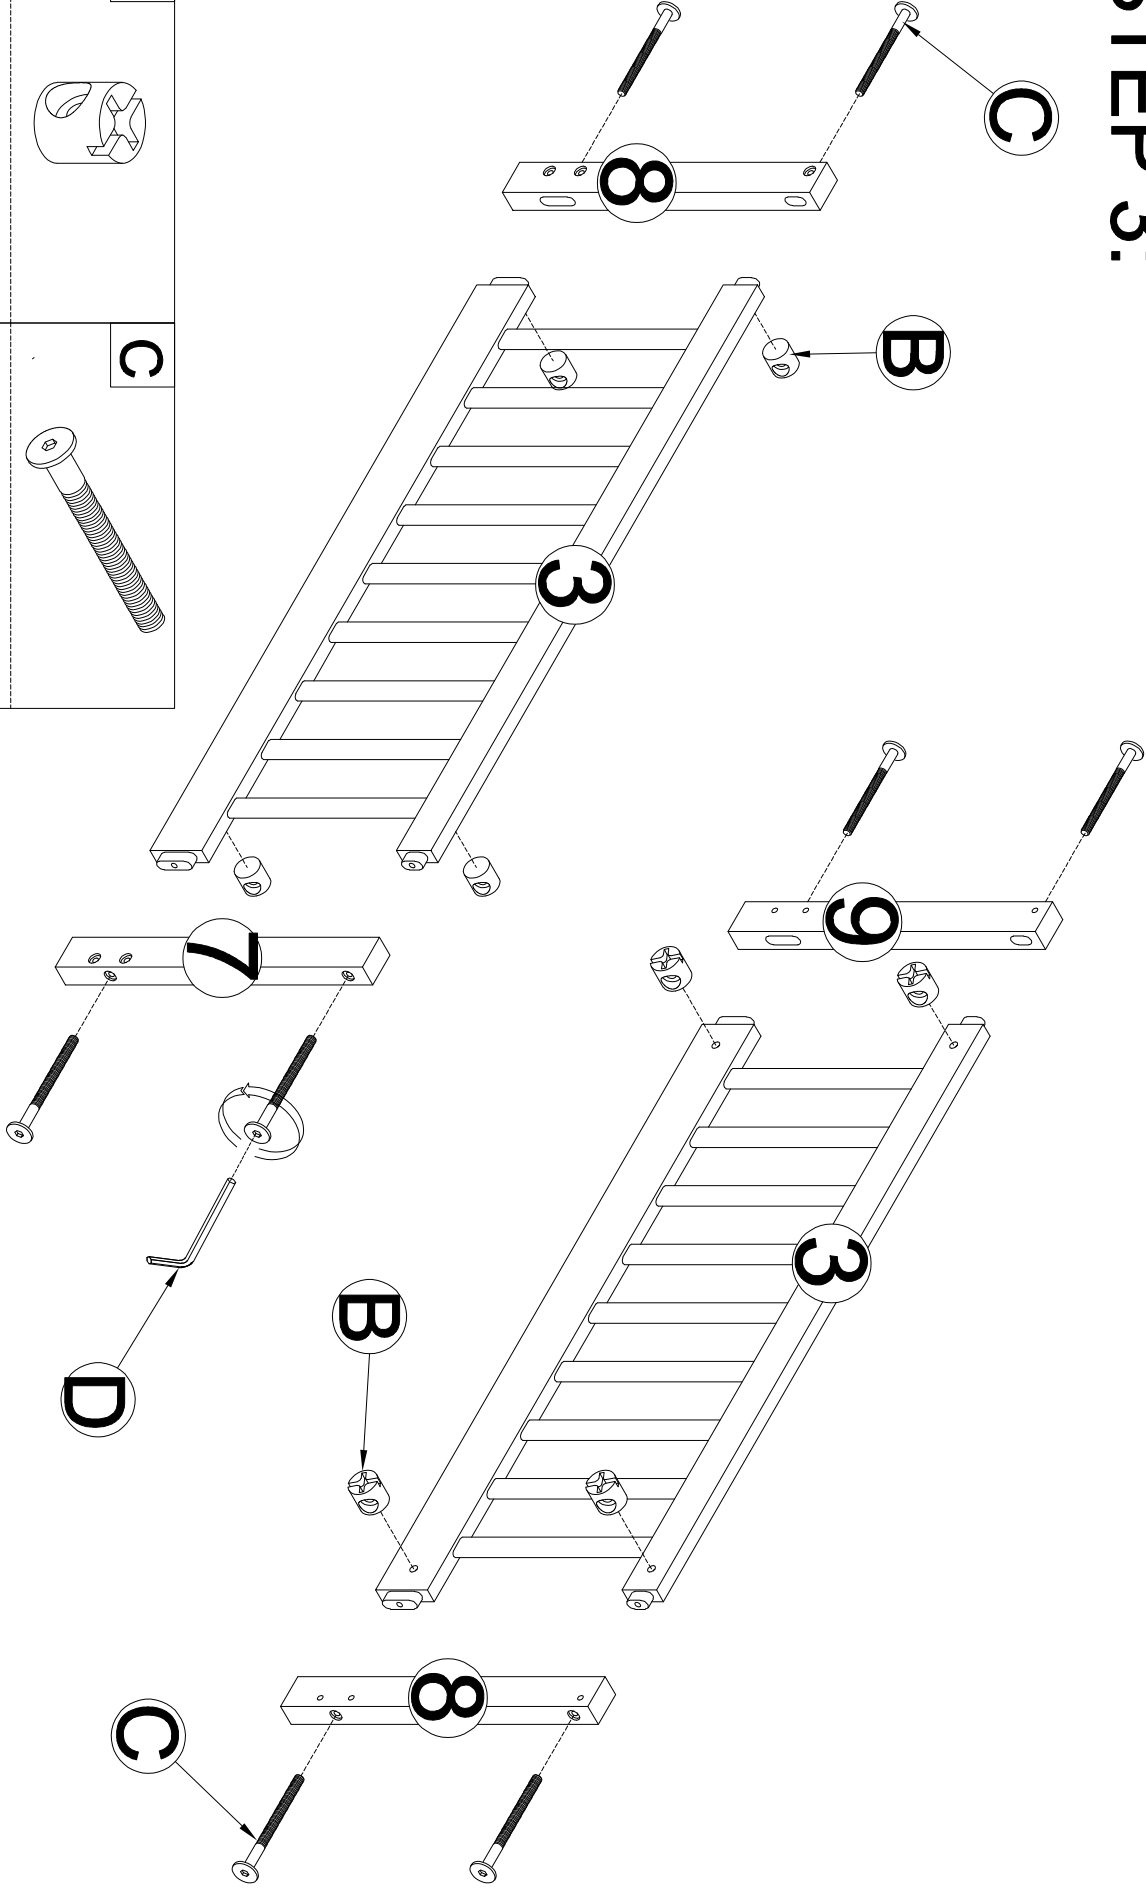


Ø1/4" x 13 mm  
Horizontal-Hole bolts 8pcs

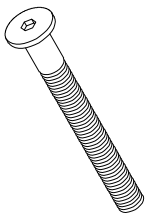

Ø1/4" x 90 mm  
Hex-Head bolts 8pcs

STEP 4:

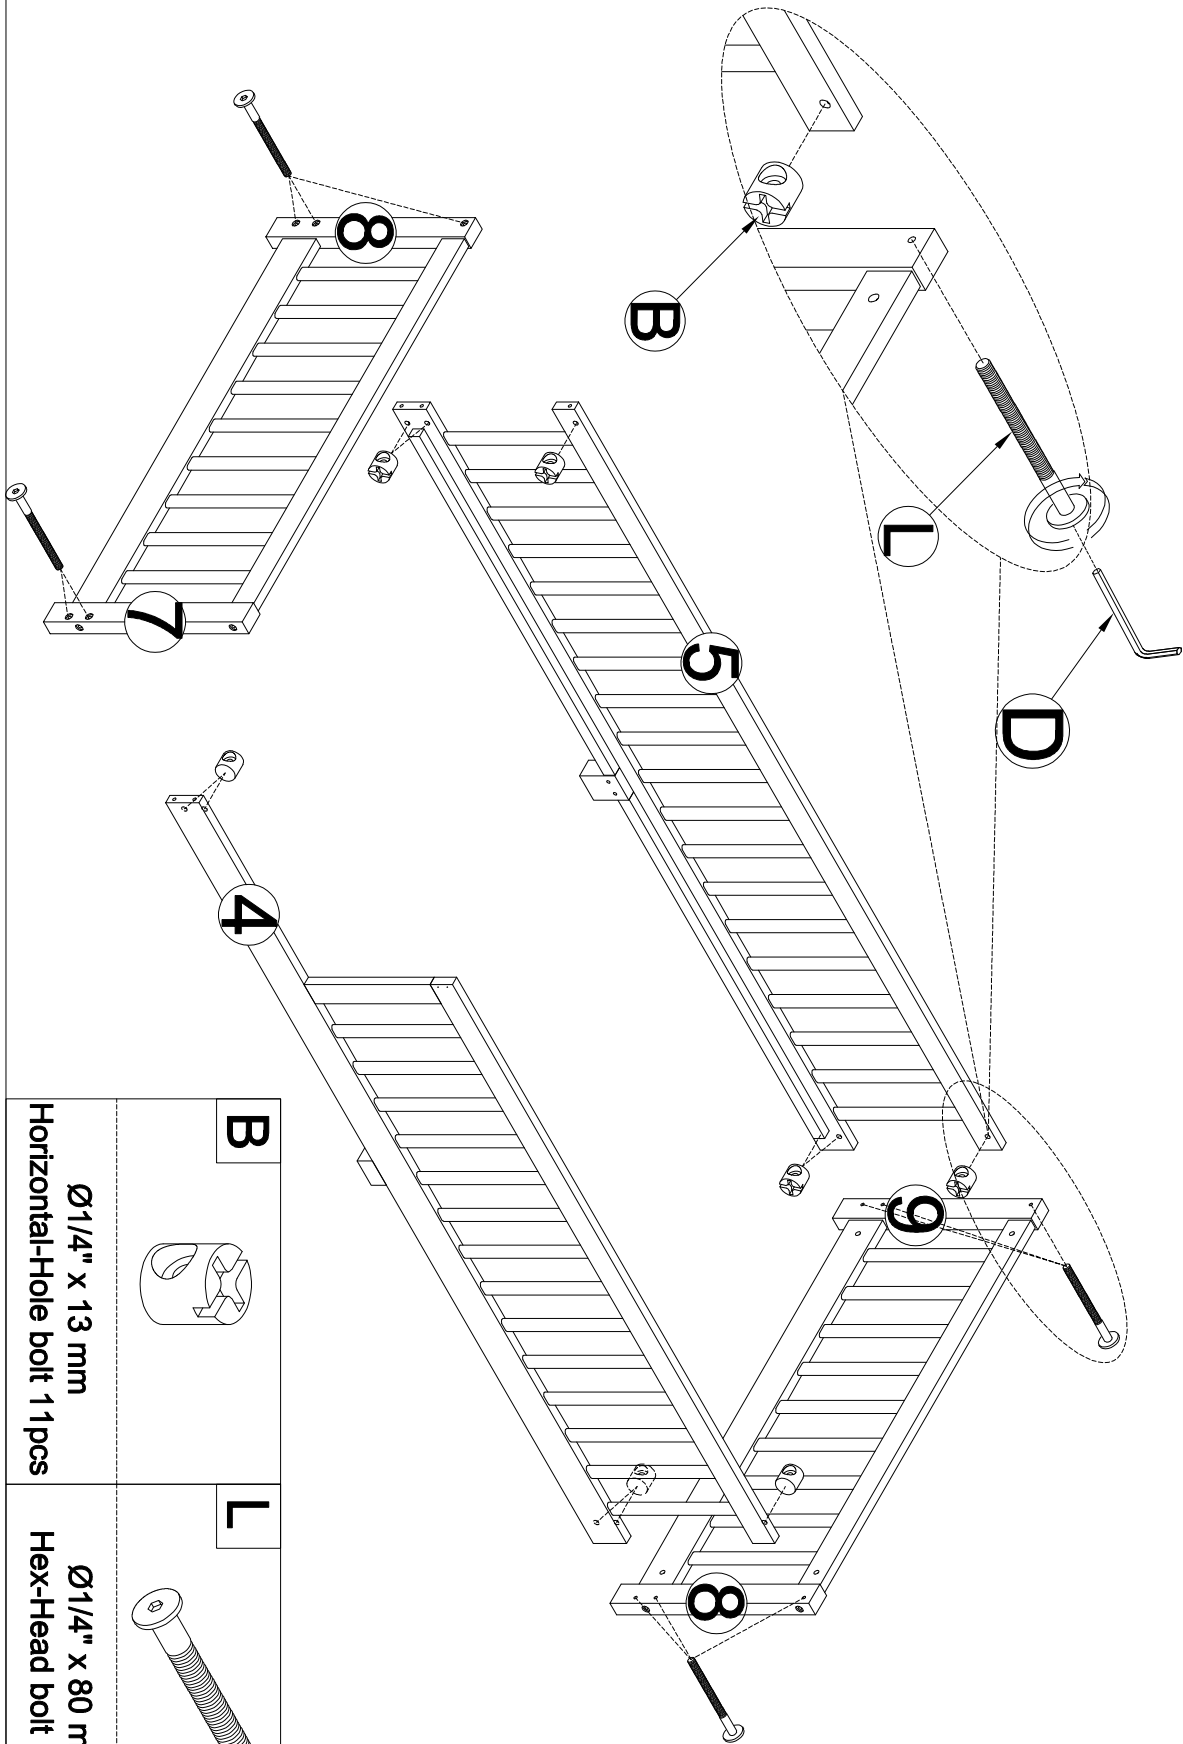


B



Ø1/4" x 13 mm  
Horizontal-Hole bolt 11pcs


L

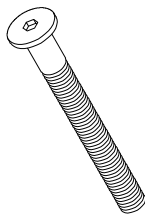


Ø1/4" x 80 mm  
Hex-Head bolt 11pcs



STEP 5:

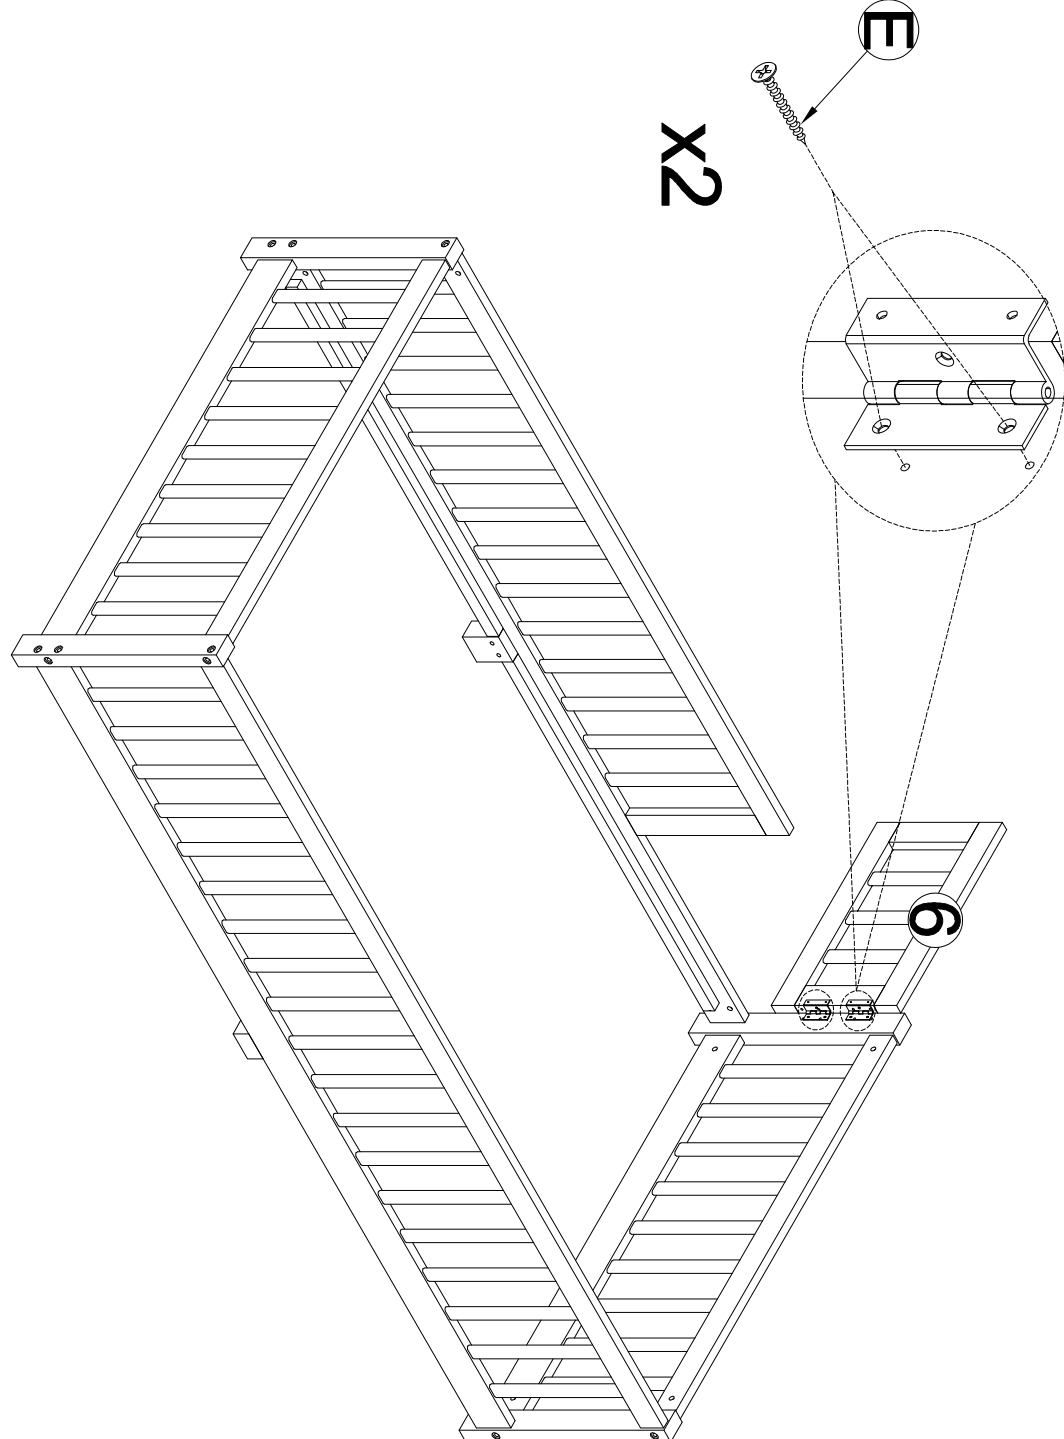


**E**

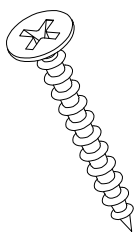


M3 x 15 mm  
Wood Screws 4pcs


STEP 6:

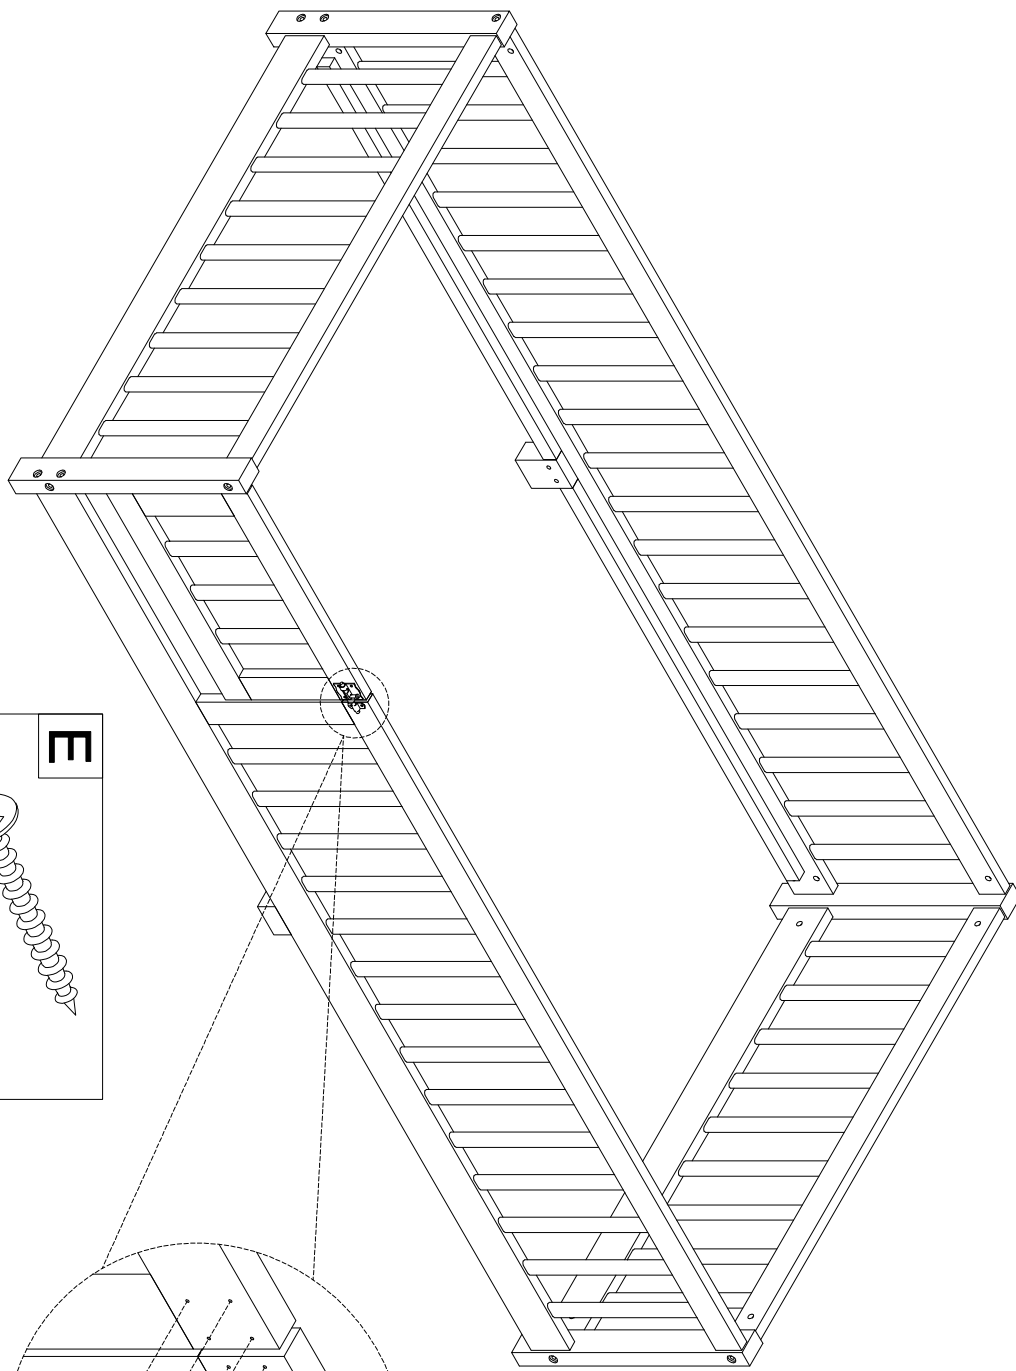


E

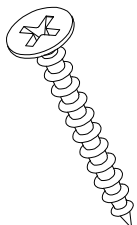


M3 x 15 mm  
Wood Screws 6pcs

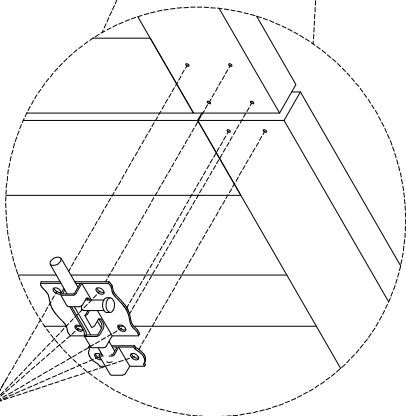


E



STEP 7:

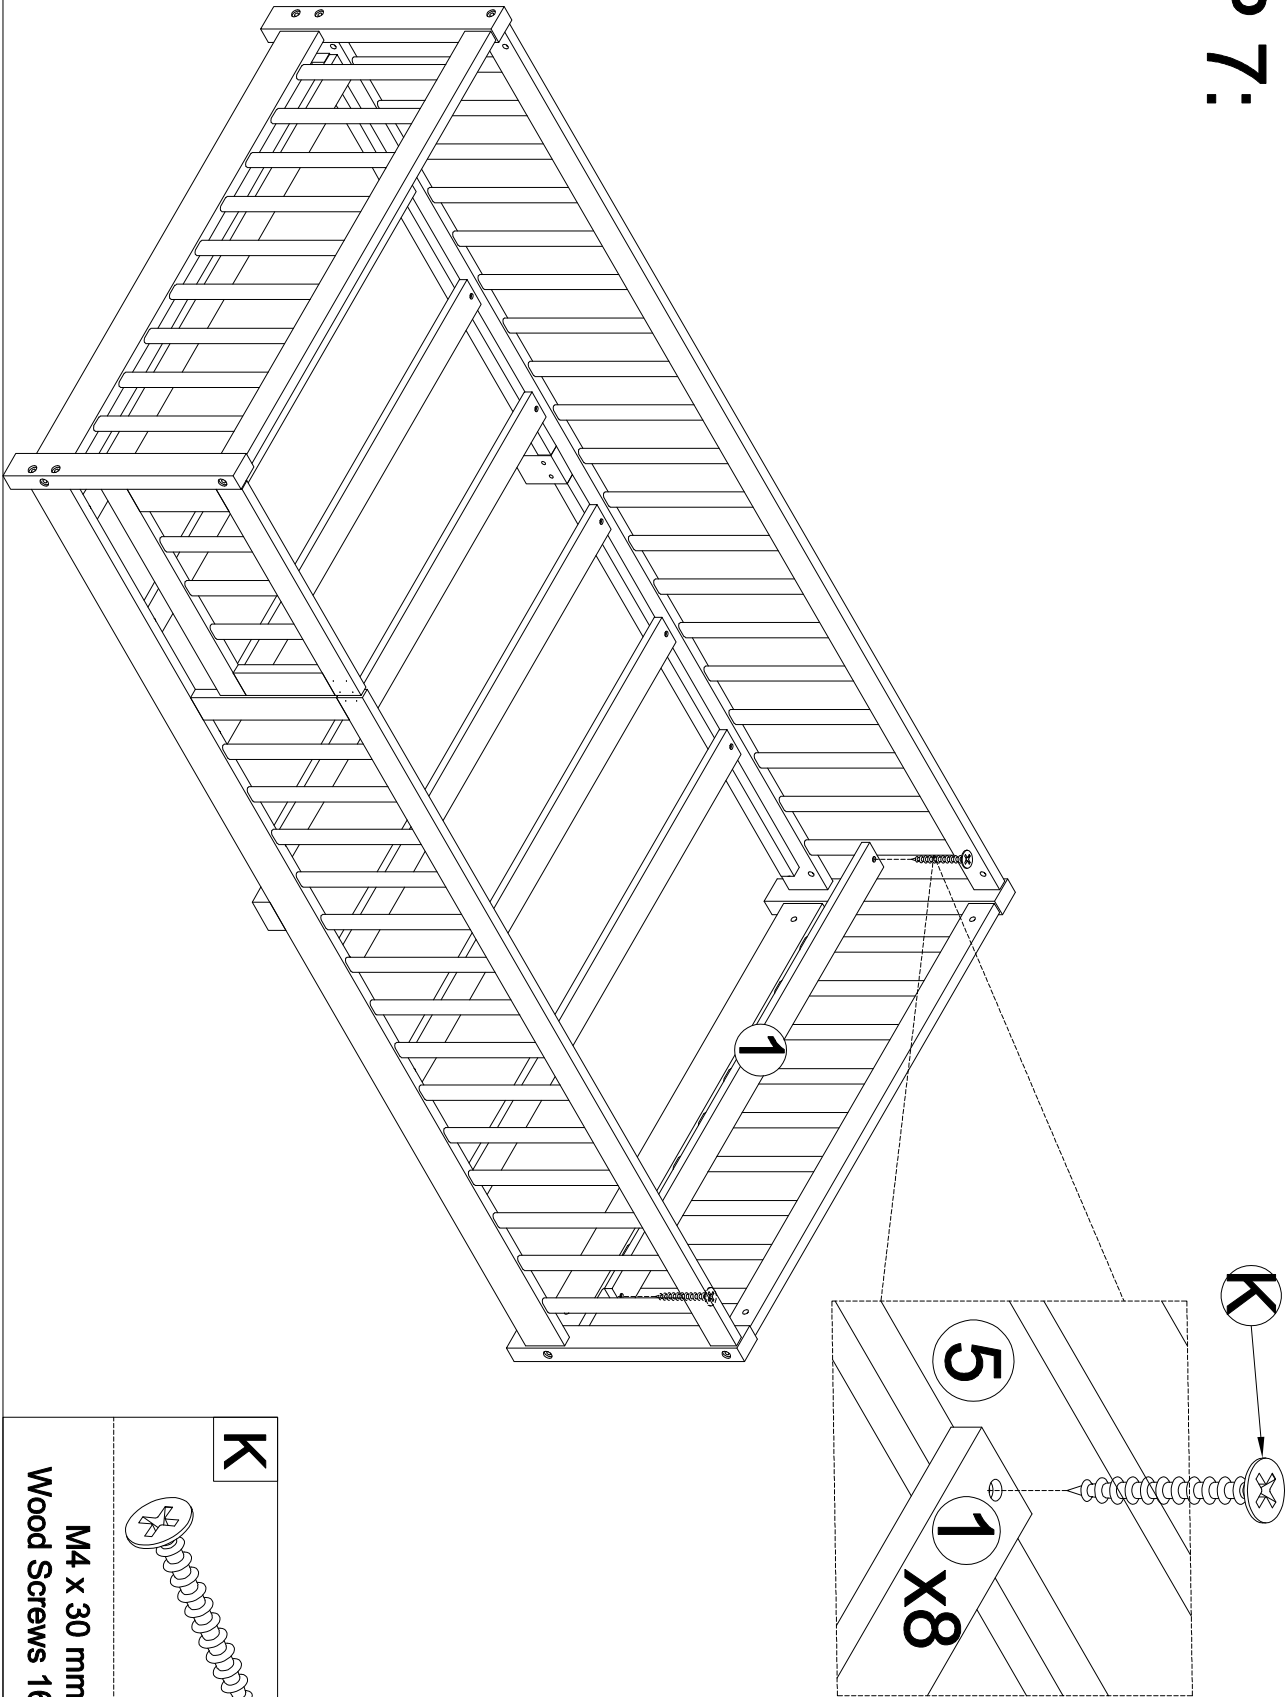

K

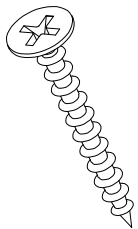

M4 x 30 mm  
Wood Screws 16pcs