
ASSEMBLY INSTRUCTION

SKU CODE: (BW00050)


PAGE 1 OF 13

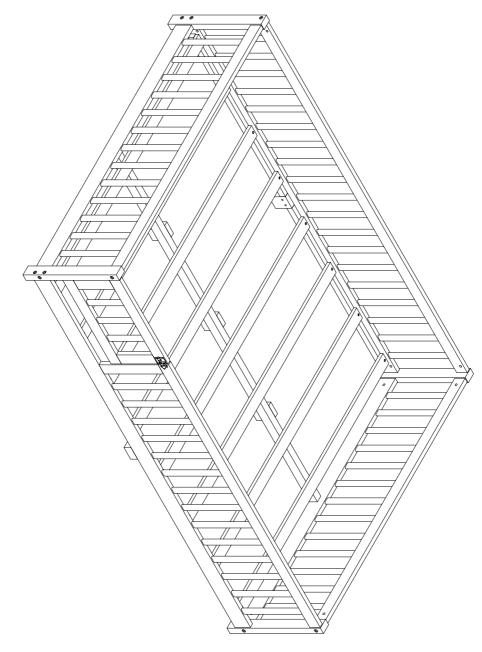


IMPORTANT NOTE

1.PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED 2.BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP

3.DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE BED IS FULLY SET-UP

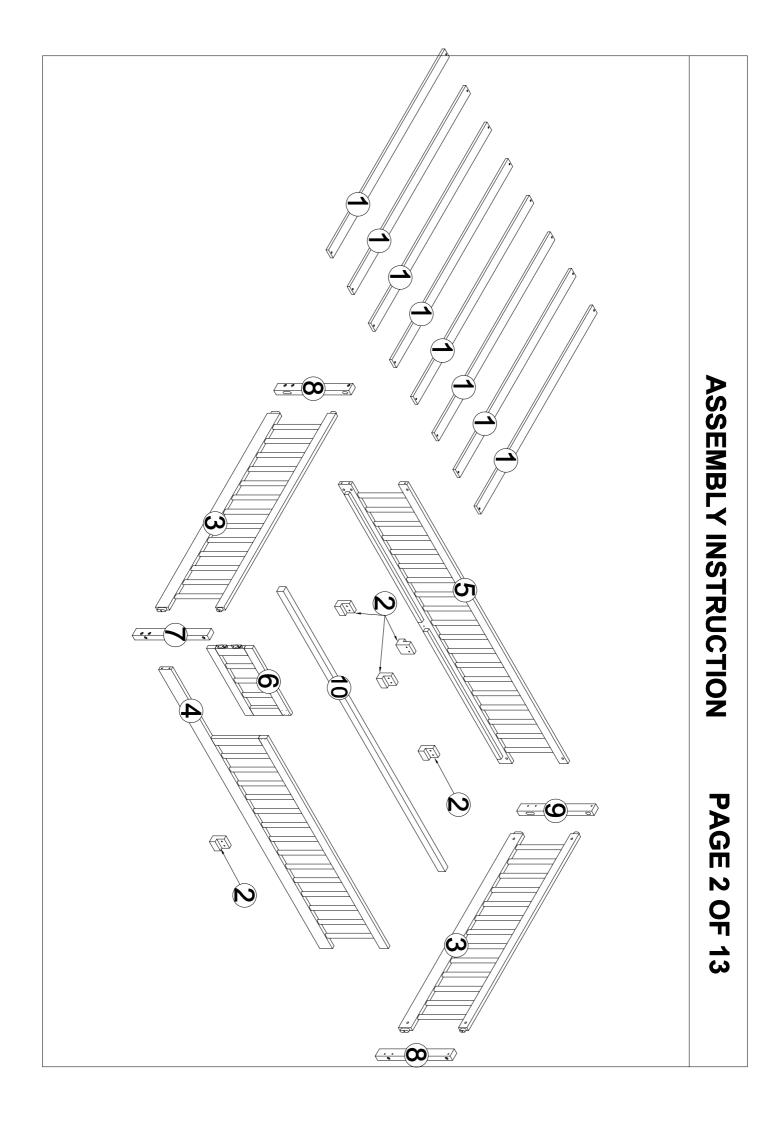

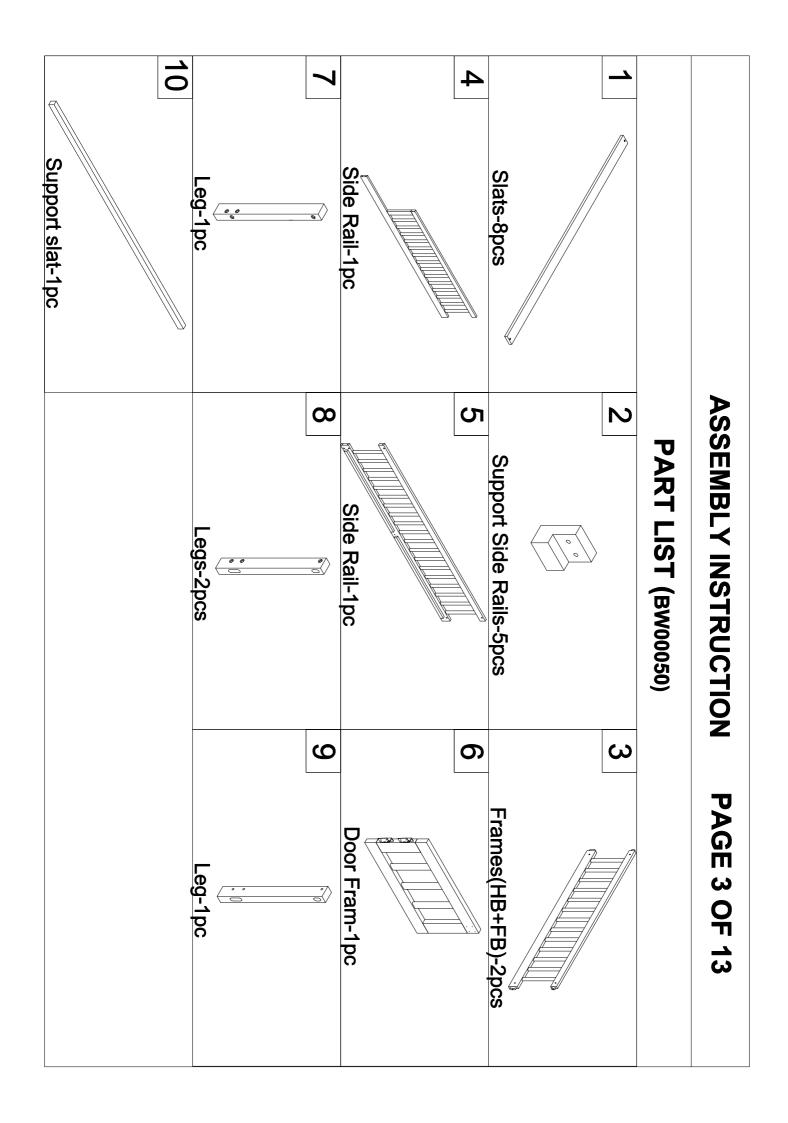

→ G Hex-Head bolts 11pcs Wood Screws 8pcs Screws 1/4"x35 mm Allen Key 1pc Ø1/4" x 80 mm M4 x 20mm 10pcs HARDWARE LIST (BW00050) **ASSEMBLY INSTRUCTION** W Ш I Horizontal-Hole bolts 19pcs Wood Screws 10pcs Ø1/4" x 13 mm M3 x 15mm Steel Bracket 2pcs **Assembly Tools Required (Not Included)** 0 不 П **PAGE 4 OF 13** Catch(20x38x38) Wood Screws 16pcs Hex-Head bolts 8pcs Ø1/4" x 90 mm M4 x 30mm

