



# Assembly Instruction

SKU CODE : WF320948 / WF320949

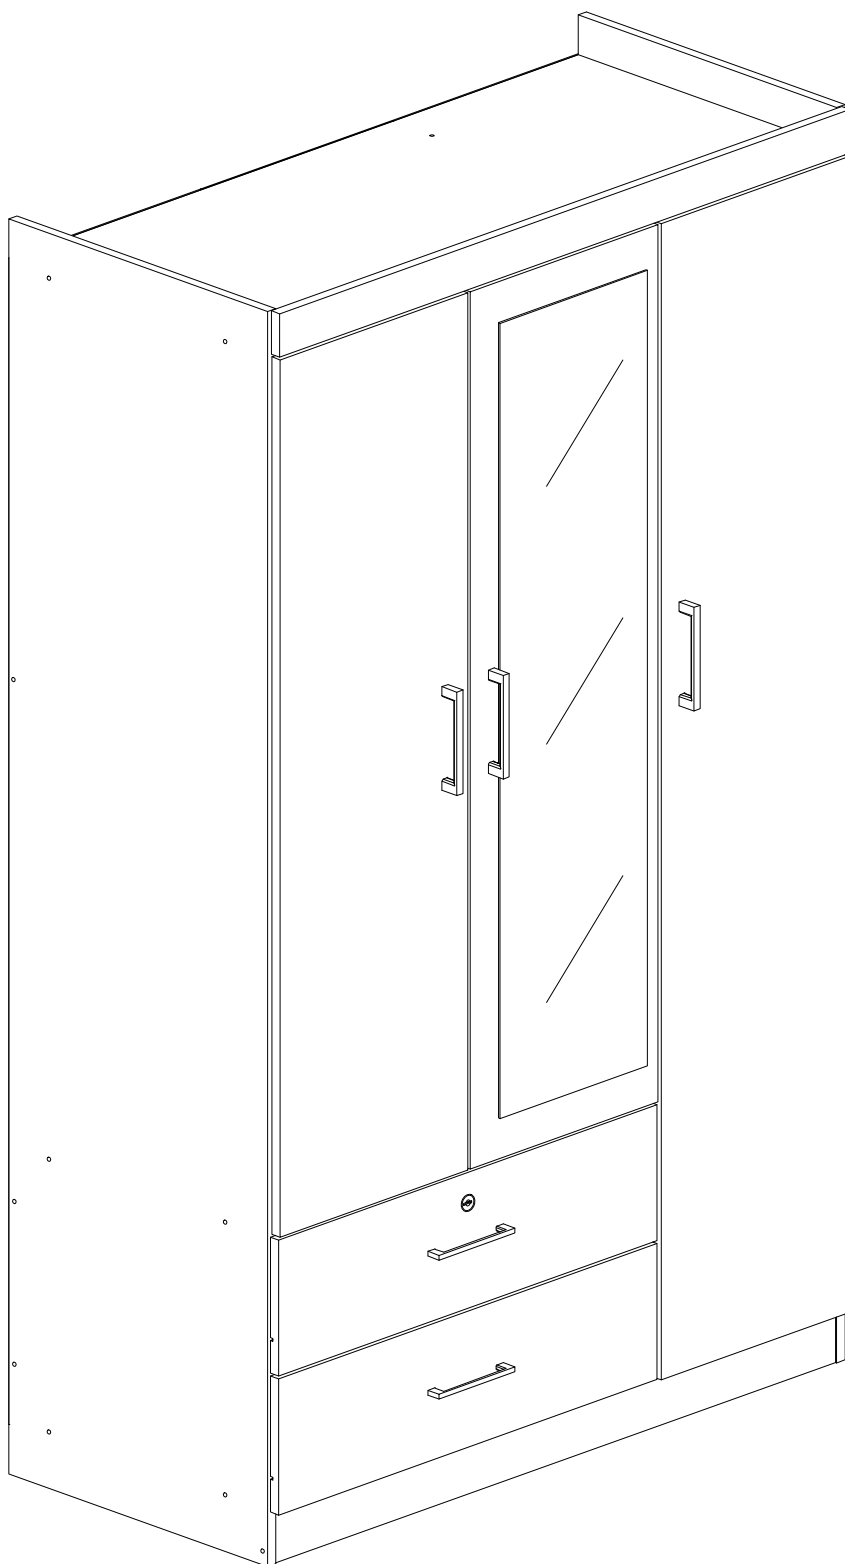

# Assembly Instruction


Detail :

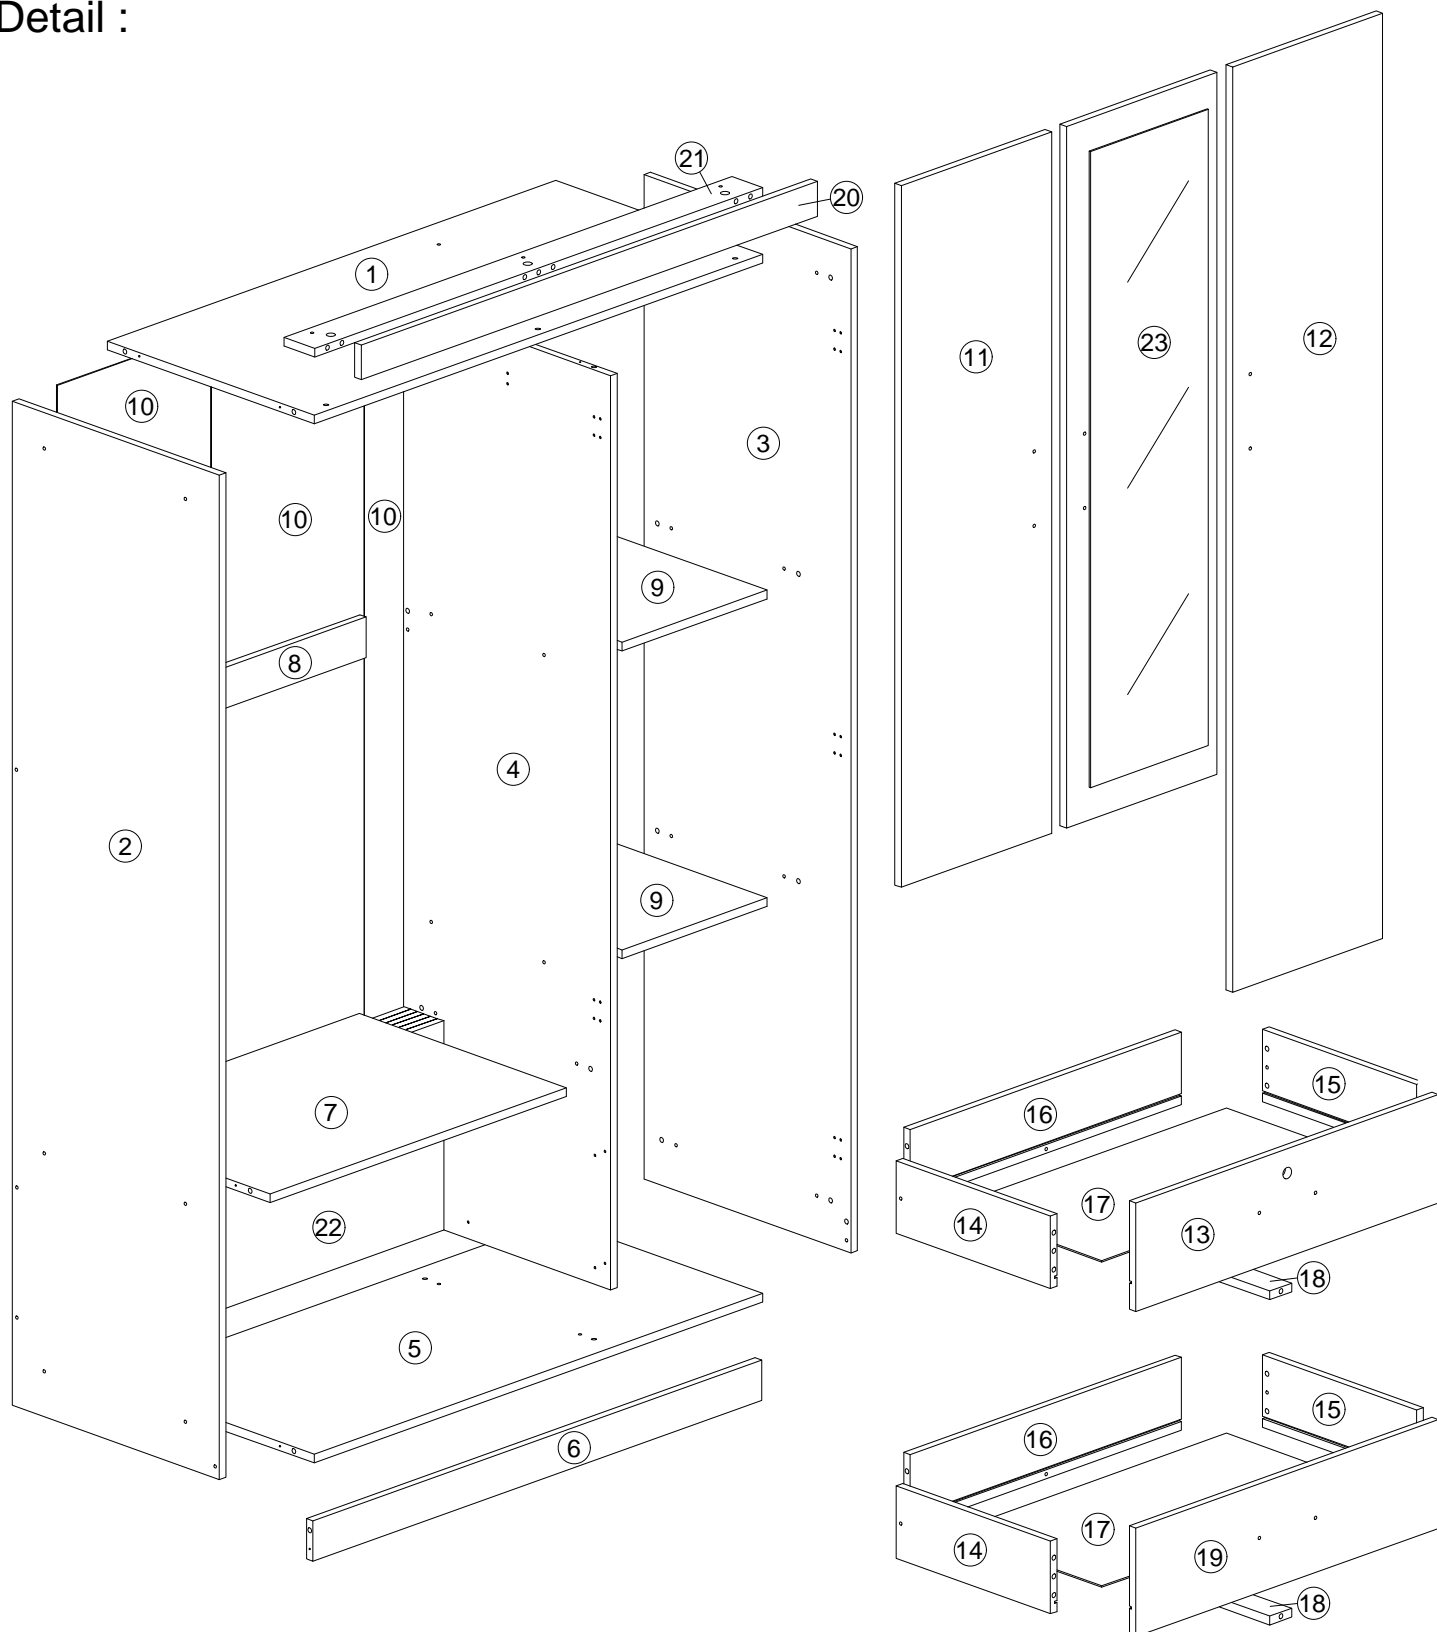

# Assembly Instruction


## Part List (WF320948)

② X 1

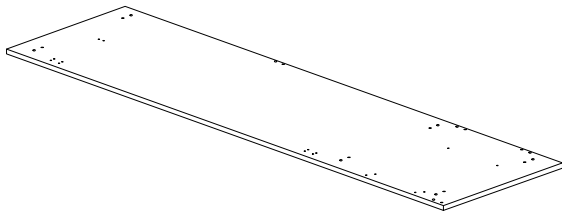


Side Left Panel

③ X 1

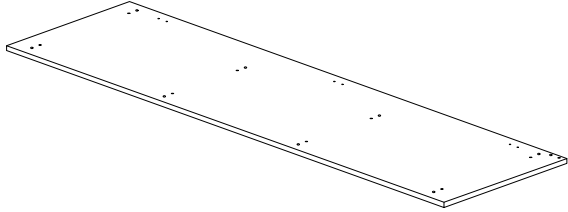


Side Right Panel

④ X 1

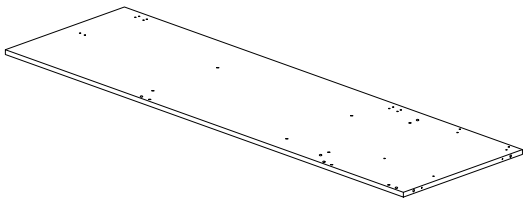


Center Panel

⑩ X 3

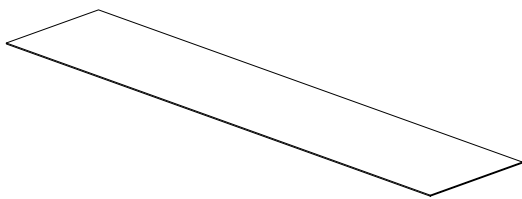


Back Panel

⑫ X 1

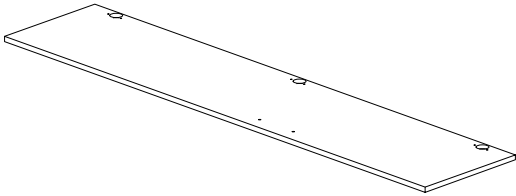

Door Panel - Big















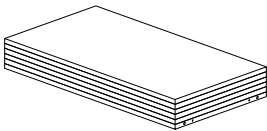
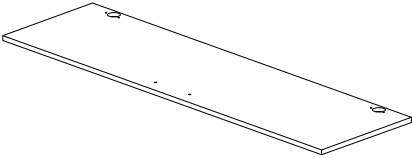
⑳ X 1

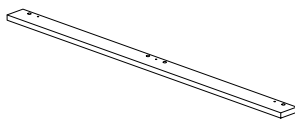

Front Panel

# Assembly Instruction

## Part List (WF320949)

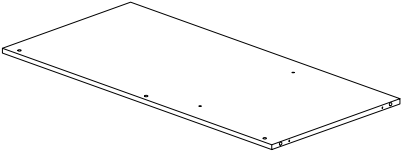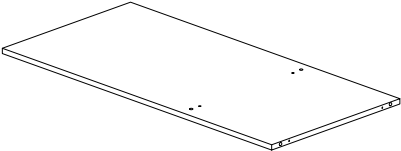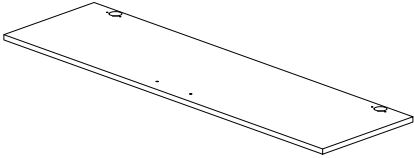



|   |   |
|---|---|
| ① X 1<br><br>Top Panel                 | ⑤ X 1<br><br>Bottom Panel               |
| ⑥ X 1<br><br>Bottom Support Panel      | ⑦ X 1<br><br>Partition Big Panel        |
| ⑧ X 1<br><br>Back Support Panel        | ⑨ X 2<br><br>Partition Small Panel     |
| ⑪ X 1<br><br>Top Support Panel        | ⑬ X 1<br><br>Drawer Up Front Panel    |
| ⑪ X 1<br><br>Door Panel - Small Left | ⑰ X 2<br><br>Drawer Bottom Panel     |
| ⑭ X 2<br><br>Drawer Side Left Panel  | ⑱ X 1<br><br>Drawer Down Front Panel  |
| ⑮ X 2<br><br>Drawer Side Right Panel | ⑲ X 2<br><br>Drawer Support Panel    |
| ⑳ X 1<br><br>Back Panel - Small      | ㉓ X 1<br><br>Door Panel - Small Right |

# Assembly Instruction

## Hardware List (WF320949)

| No. | SHAPE   | DESCRIPTION               | Qty.  |
|-----|---|---------------------------|-------|
| A   |    | 8x25mm Dowel (Wood)       | 52Pcs |
| B   |    | 8x20mm Dowel (Wood)       | 3Pcs  |
| C   |    | 15mm Myfix Minifix        | 9Sets |
| D   |    | M3.5x16mm Screw           | 80Pcs |
| E   |    | M4x45mm Screw             | 38Pcs |
| F   |    | V Bracket                 | 2Pcs  |
| G   |    | L Bracket                 | 1Pc   |
| H   |    | Handle KT179.128mm        | 5Pcs  |
| I   |  | M4x28mm Screw             | 13Pcs |
| J   |  | Hinges 2/8                | 7Pcs  |
| K   |  | 5/8 Nail With Pin         | 6Pcs  |
| L   |  | 6/8 Power Pin             | 50Pcs |
| M   |  | Drawer Lock               | 1Pc   |
| N   |  | Drawer Lock Support H10.9 | 1Pc   |
| O   |  | Drawer Slide (350mm)      | 2Sets |
| P   |  | Aluminium Pipe(667mm)     | 1Pc   |
| Q   |  | Sticker                   | 19Pcs |


## Anti Tipping Hardware (WF320949)

| No. | SHAPE   | DESCRIPTION        | Qty. |
|-----|---|--------------------|------|
| a   |            | Mounting Bracket   | 2Pcs |
| b   |  | TP 6# x 5/8" Screw | 1Pc  |
| c   |  | TP 8# x 2" Screw   | 1Pc  |
| d   |            | Restraint Strap    | 1Pc  |

# Assembly Instruction


## Left Drawer Silde (O)

Flat Shaped - Left

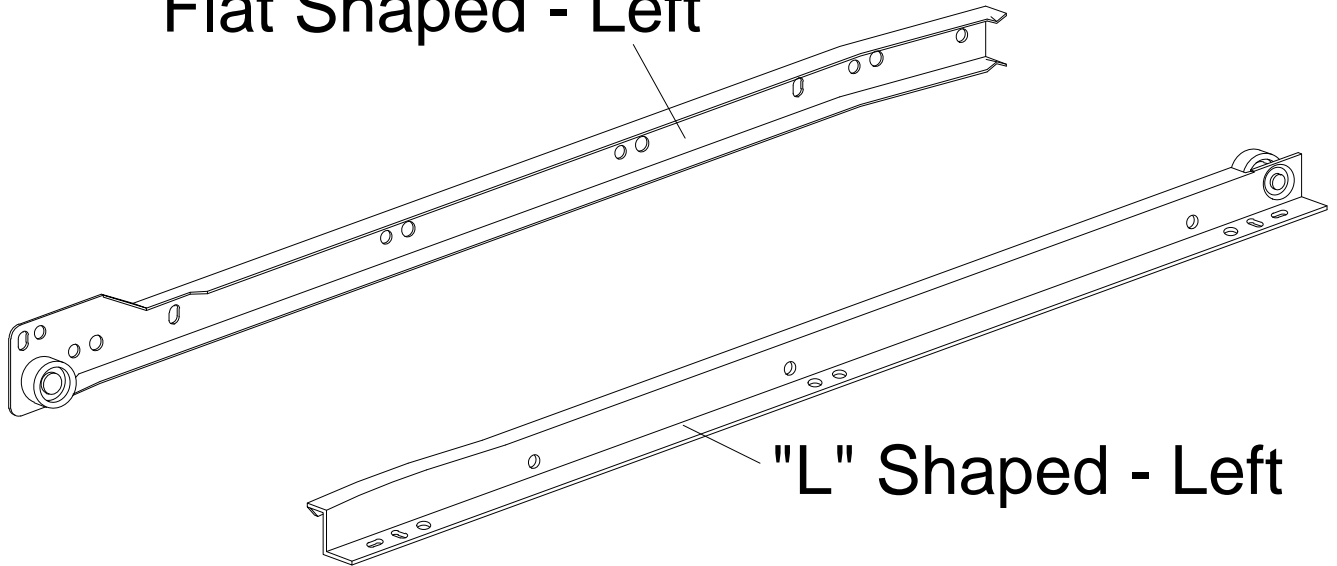

## Right Drawer Silde (O)


"L" Shaped - Right

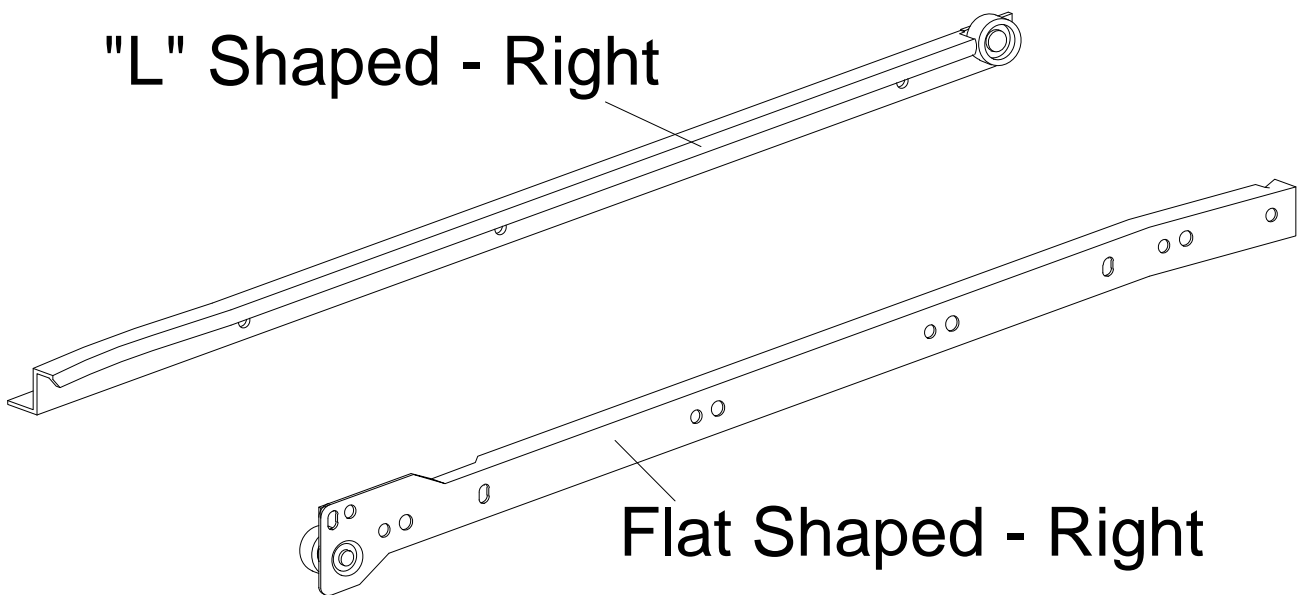

# Assembly Instruction


## Step 1

|   |  |                     |       |
|---|--|---------------------|-------|
| A |  | 8x25mm Dowel (Wood) | 52Pcs |
|---|--|---------------------|-------|

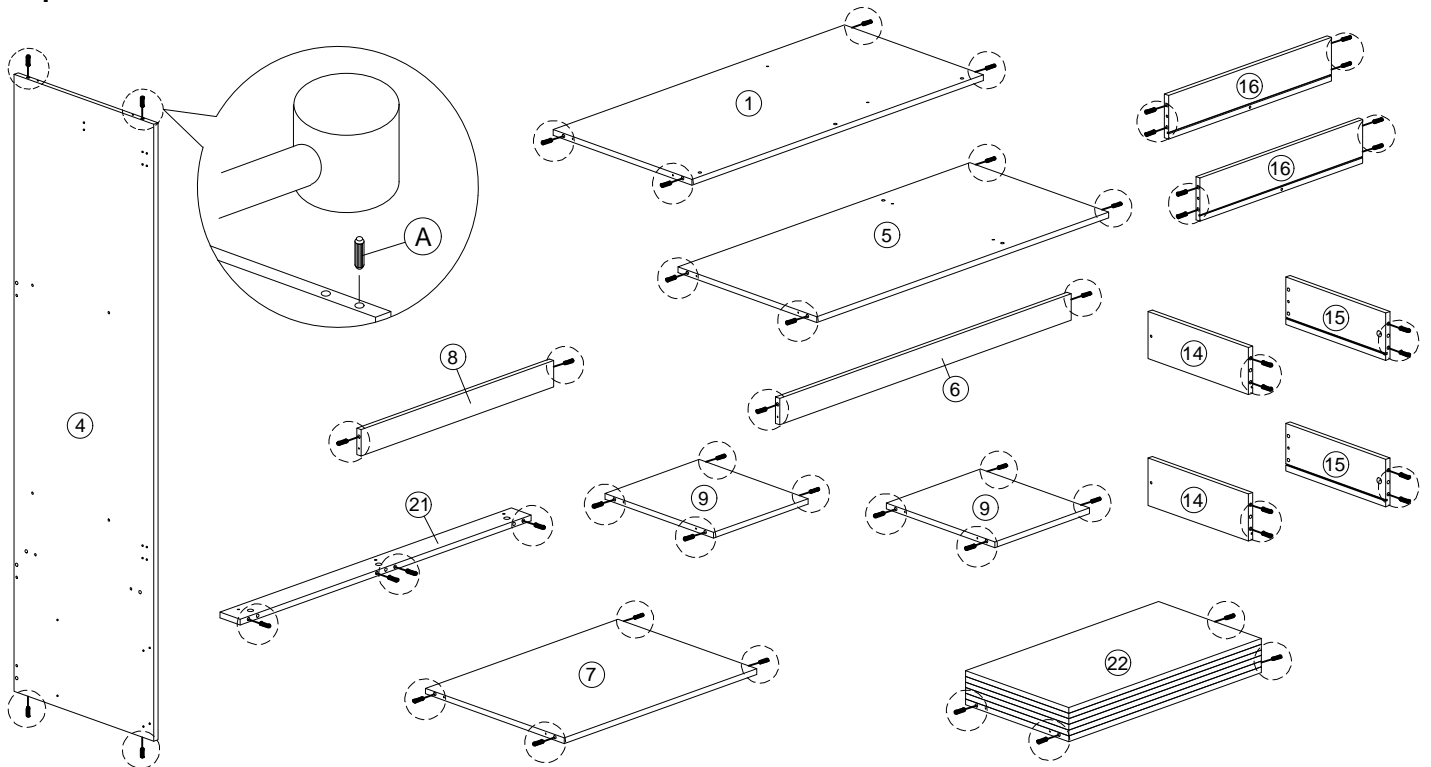


## Step 2

|   |  |                     |      |
|---|--|---------------------|------|
| B |  | 8x20mm Dowel (Wood) | 3Pcs |
|---|--|---------------------|------|

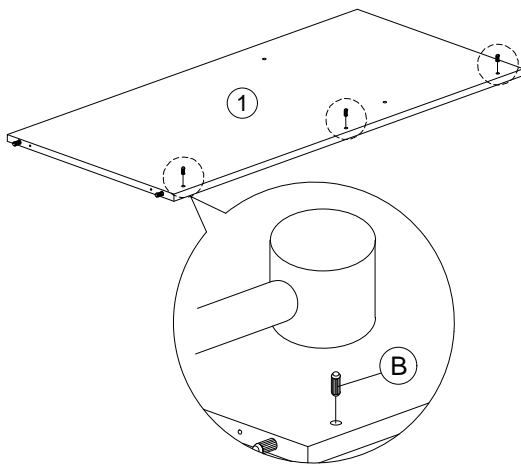



## Step 3


|   |  |       |      |
|---|--|-------|------|
| C |  | Myfix | 9Pcs |
|---|--|-------|------|


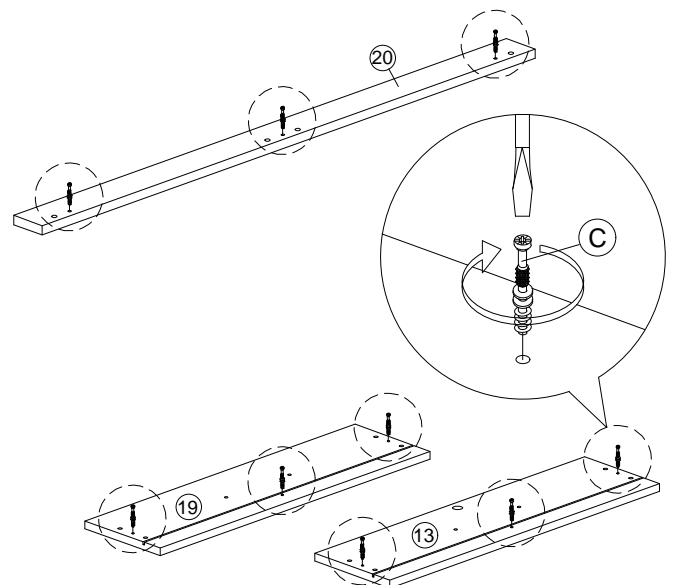


# Assembly Instruction



## Step 4


|   |   |                        |       |
|---|---|------------------------|-------|
| D |  | M3.5x16mm Screw        | 12Pcs |
| O |  | Drawer Slide 350mm - R | 2Pcs  |

|   |   |                        |      |
|---|---|------------------------|------|
| O |  | Drawer Slide 350mm - L | 2Pcs |
|---|---|------------------------|------|

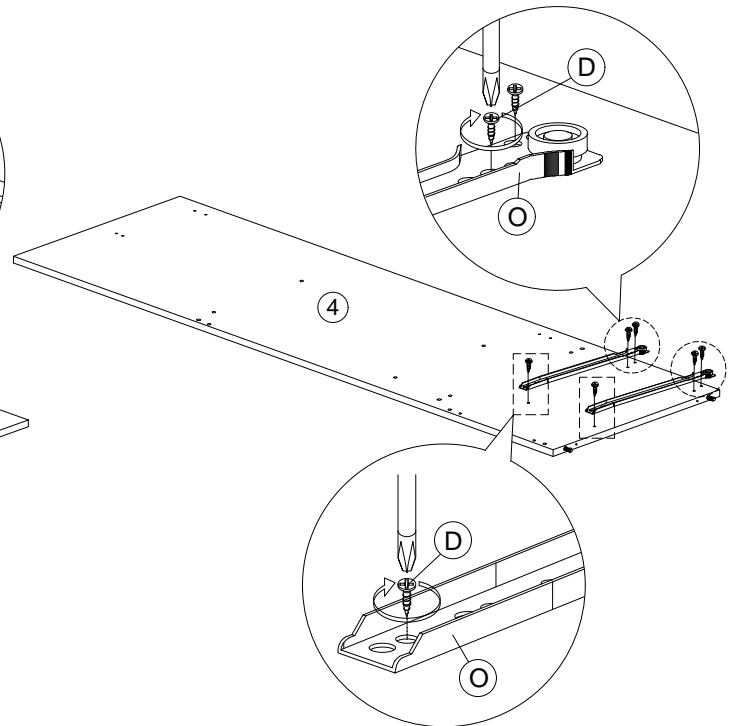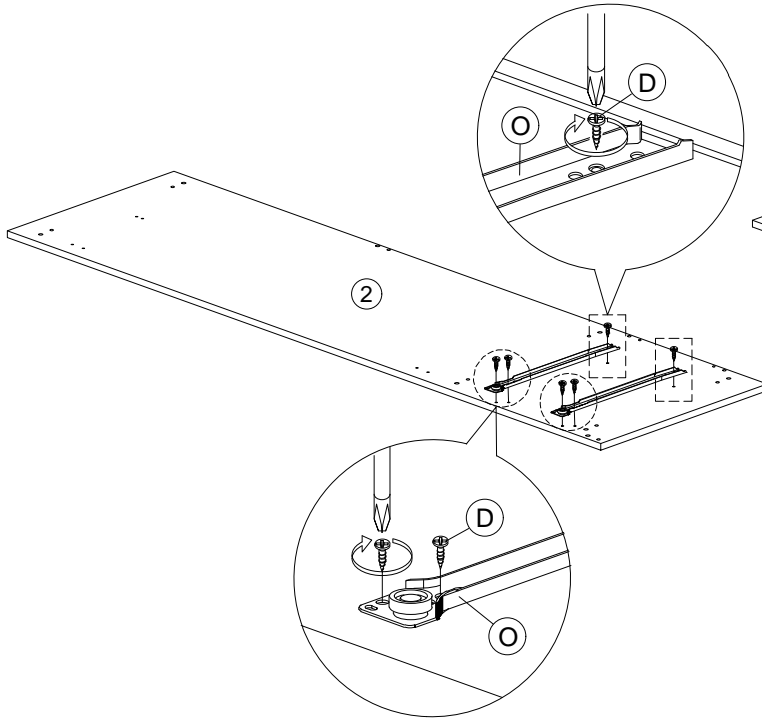



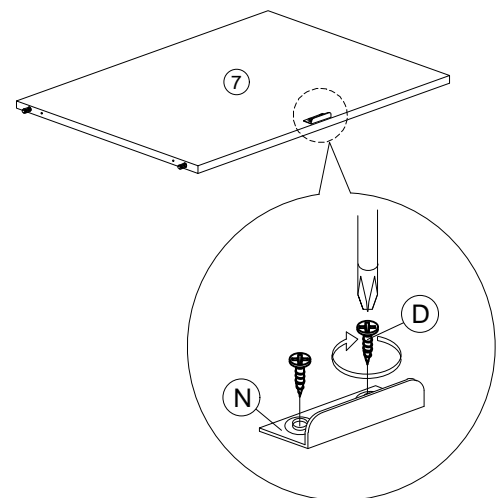
## Step 5

|   |   |                 |      |
|---|---|-----------------|------|
| D |  | M3.5x16mm Screw | 4Pcs |
| F |  | V Bracket       | 2Pcs |

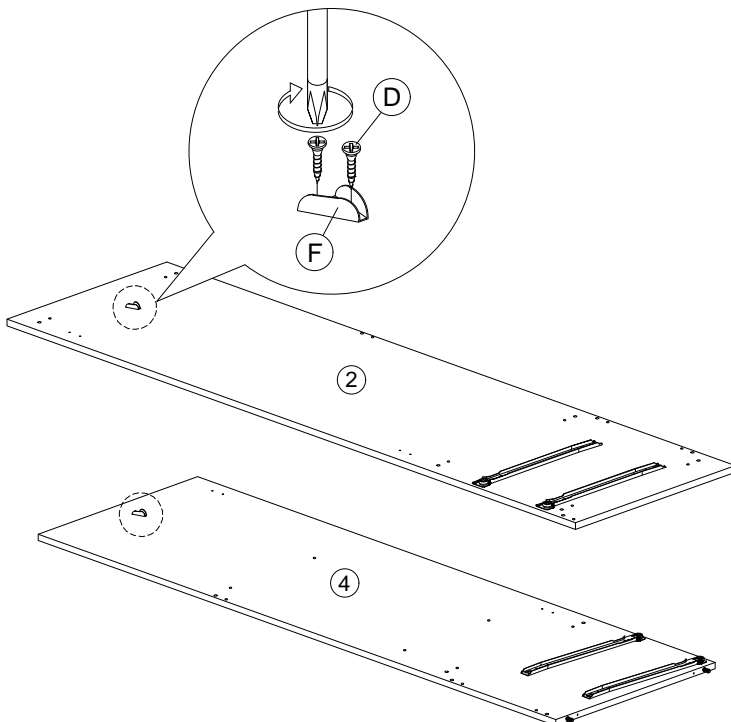

## Step 6


|   |   |                           |      |
|---|---|---------------------------|------|
| D |  | M3.5x16mm Screw           | 2Pcs |
| N |  | Drawer Lock Support H10.9 | 1Pc  |







# Assembly Instruction


## Step 7

|   |   |               |      |
|---|---|---------------|------|
| E |  | M4x45mm Screw | 2Pcs |
|---|---|---------------|------|

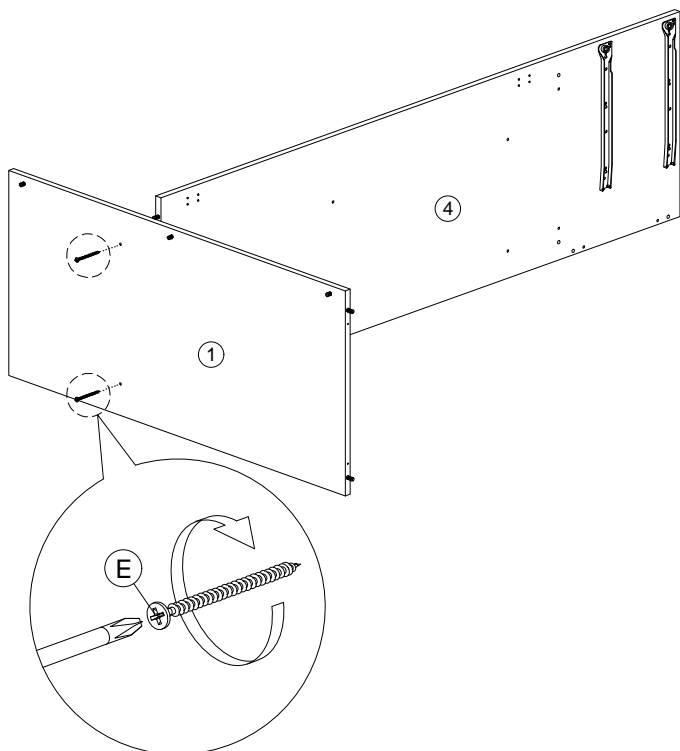


## Step 8

|   |   |               |      |
|---|---|---------------|------|
| I |  | M4x28mm Screw | 3Pcs |
|---|---|---------------|------|

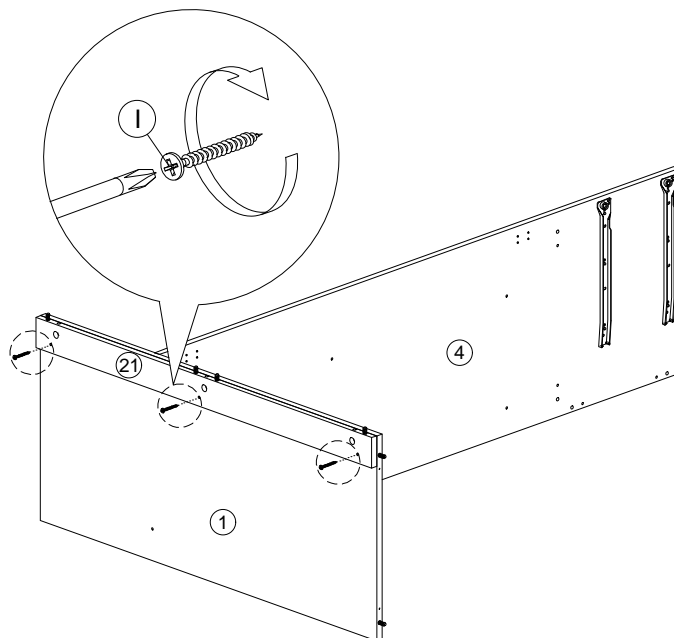


## Step 9


|   |   |         |      |
|---|---|---------|------|
| C |  | Minifix | 3Pcs |
|---|---|---------|------|

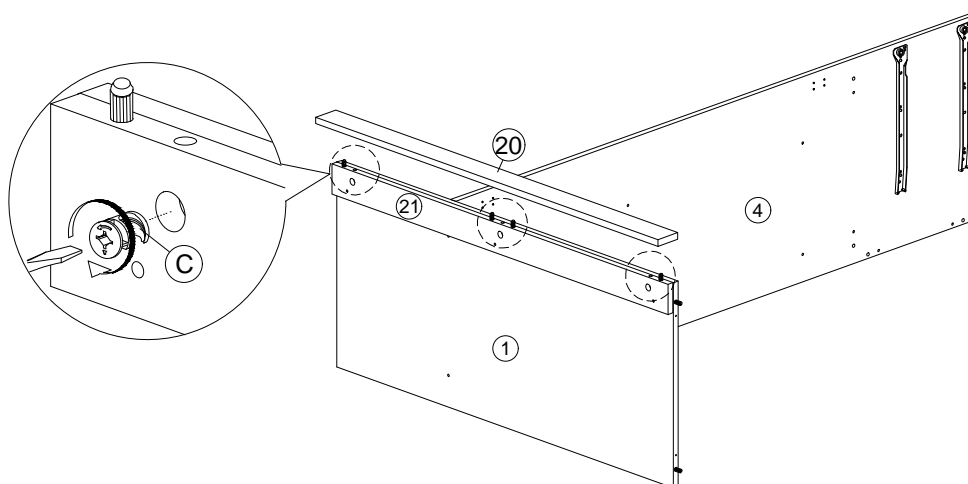


# Assembly Instruction


Step 10

|   |   |               |      |
|---|---|---------------|------|
| E |  | M4x45mm Screw | 4Pcs |
|---|---|---------------|------|

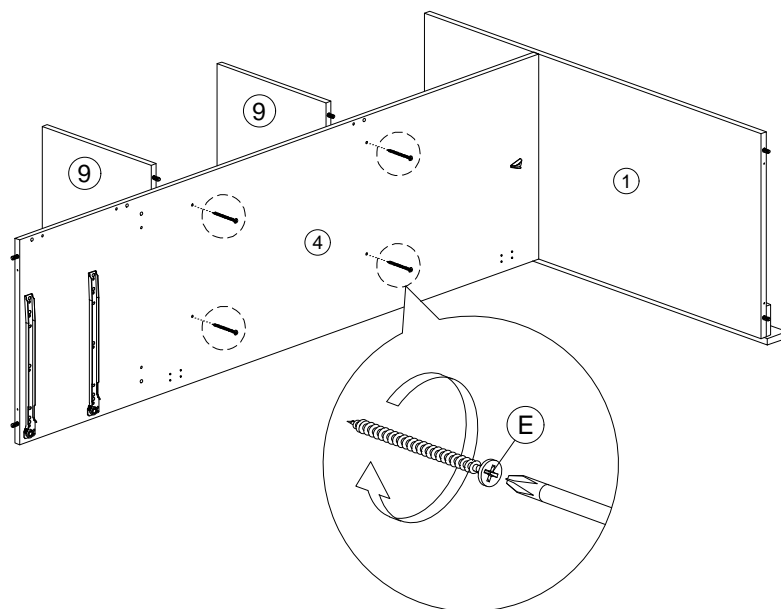


Step 11


|   |   |               |      |
|---|---|---------------|------|
| E |  | M4x45mm Screw | 5Pcs |
|---|---|---------------|------|

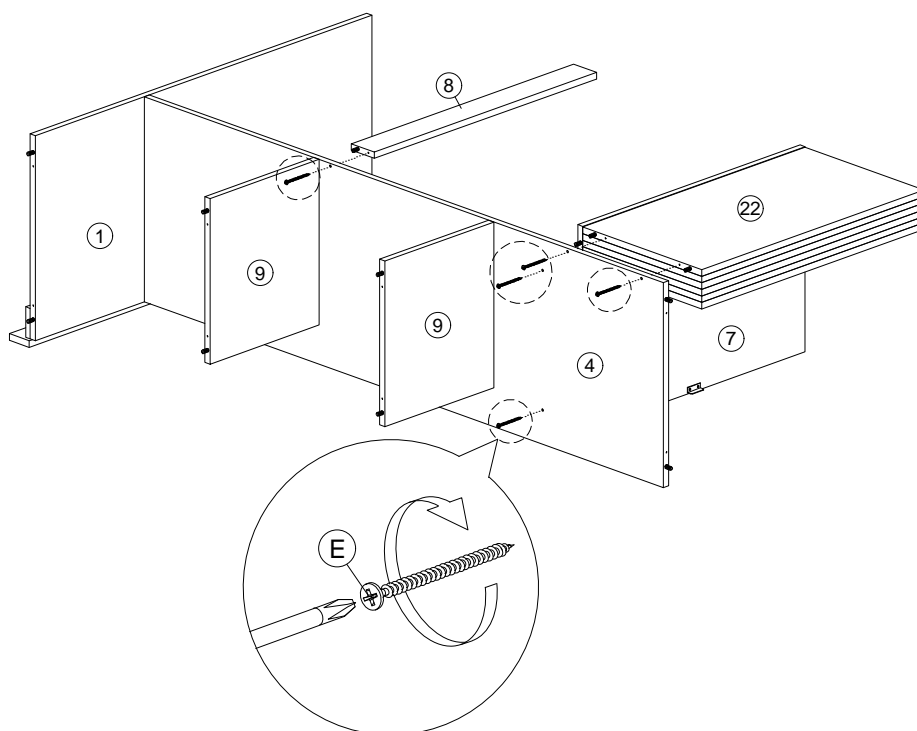


# Assembly Instruction

## Step 12


|   |   |               |      |
|---|---|---------------|------|
| E |  | M4x45mm Screw | 2Pcs |
|---|---|---------------|------|

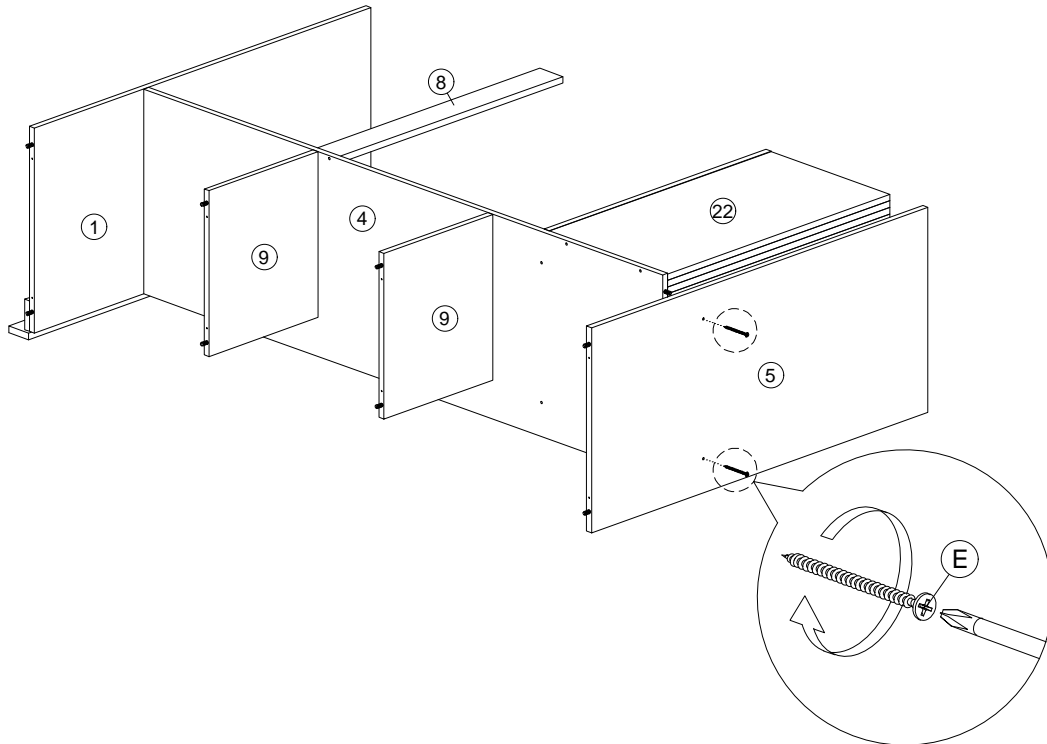

## Step 13


|   |   |               |      |
|---|---|---------------|------|
| E |  | M4x45mm Screw | 9Pcs |
|---|---|---------------|------|

|   |   |         |      |
|---|---|---------|------|
| Q |  | Sticker | 9Pcs |
|---|---|---------|------|

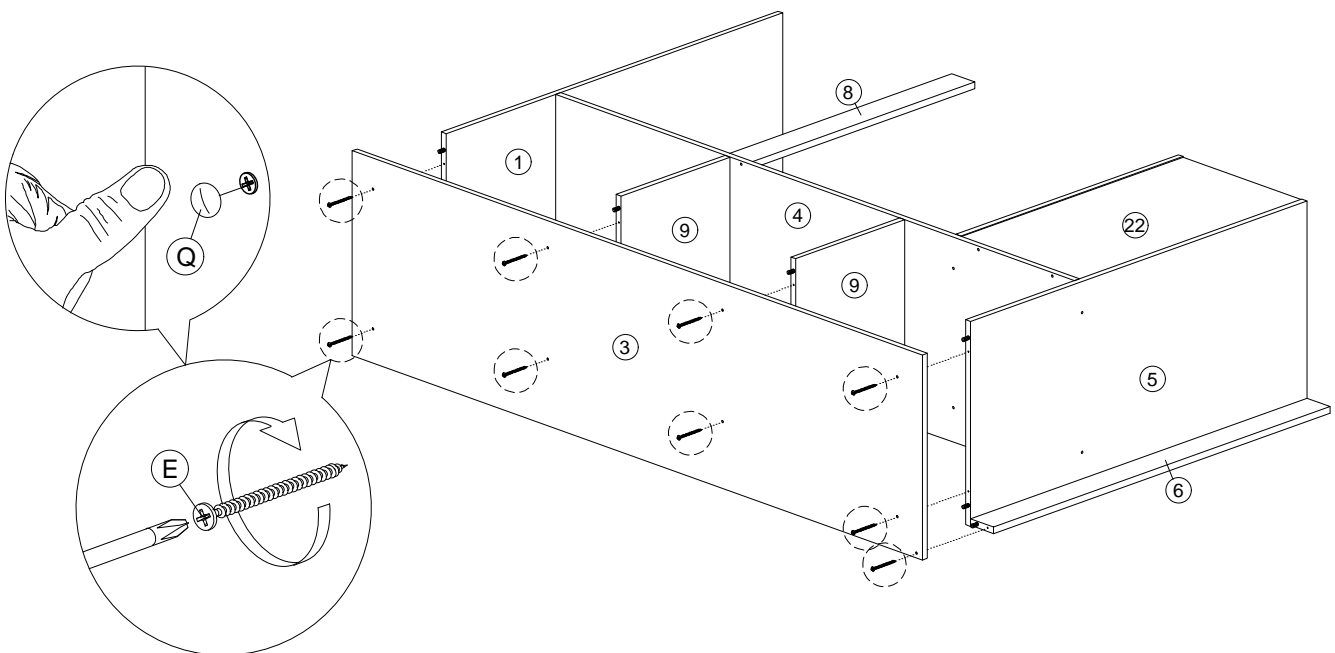


# Assembly Instruction

## Step 14


|   |   |               |       |
|---|---|---------------|-------|
| E |  | M4x45mm Screw | 10Pcs |
|---|---|---------------|-------|

|   |   |         |       |
|---|---|---------|-------|
| Q |  | Sticker | 10Pcs |
|---|---|---------|-------|

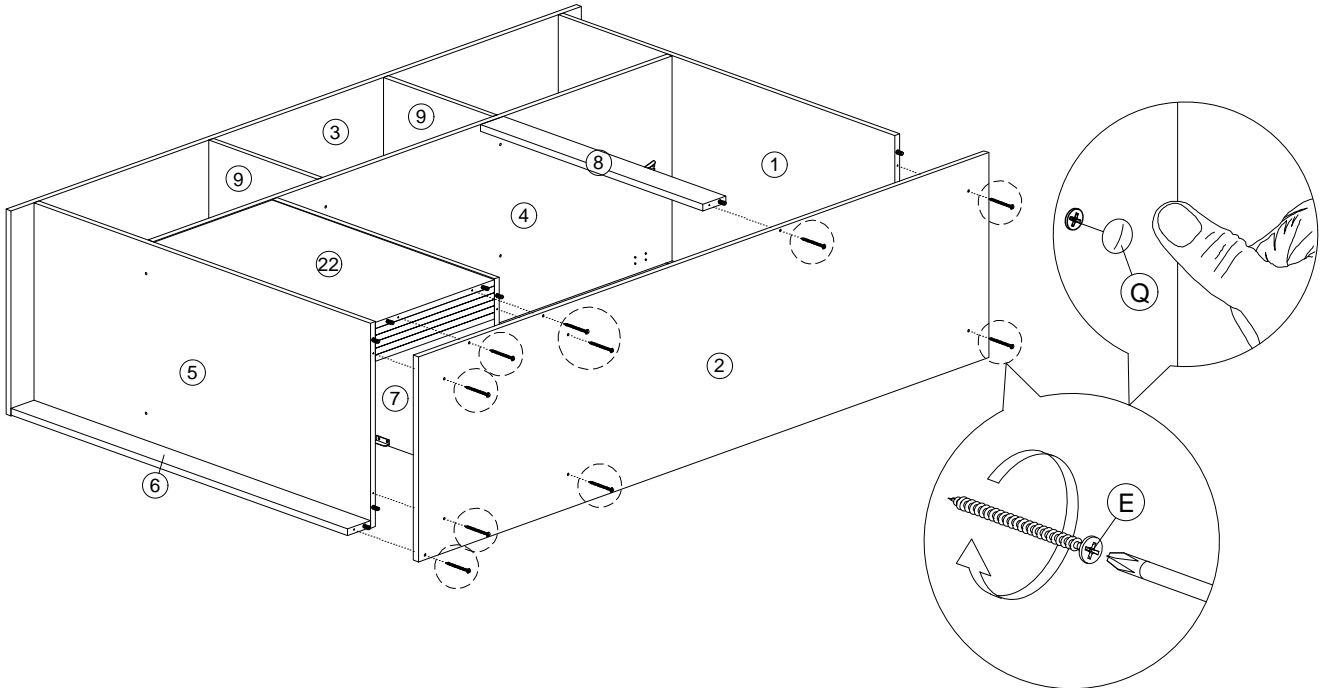


## Step 15

|   |   |               |       |
|---|---|---------------|-------|
| L |  | 6/8 Power Pin | 50Pcs |
|---|---|---------------|-------|

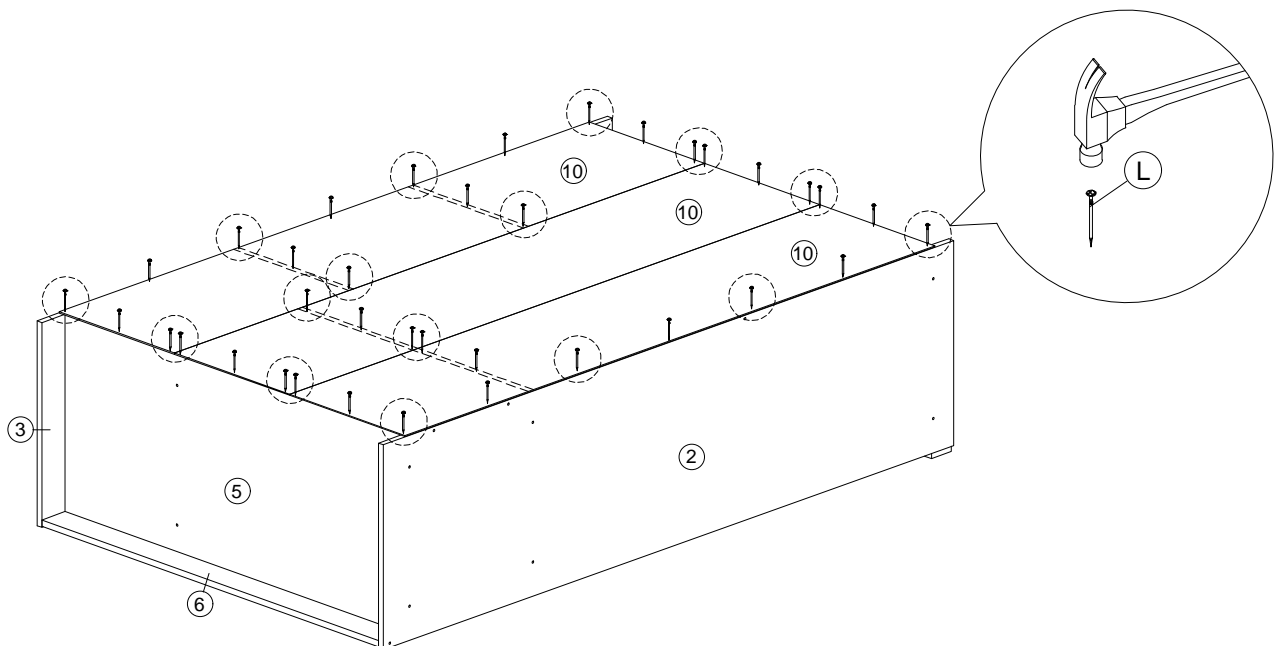


# Assembly Instruction


## Step 16


|   |   |                 |      |
|---|---|-----------------|------|
| D |  | M3.5x16mm Screw | 4Pcs |
|---|---|-----------------|------|

|   |   |           |     |
|---|---|-----------|-----|
| G |  | L Bracket | 1Pc |
|---|---|-----------|-----|

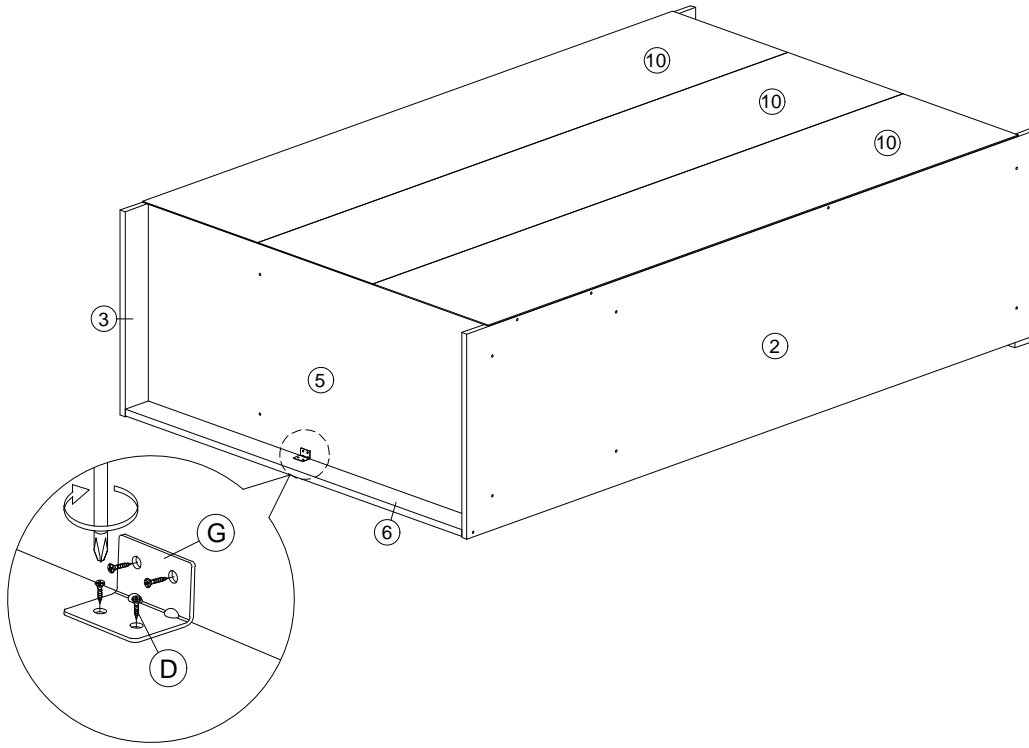

## Step 17


|   |   |                   |      |
|---|---|-------------------|------|
| K |  | 5/8 Nail With Pin | 6Pcs |
|---|---|-------------------|------|

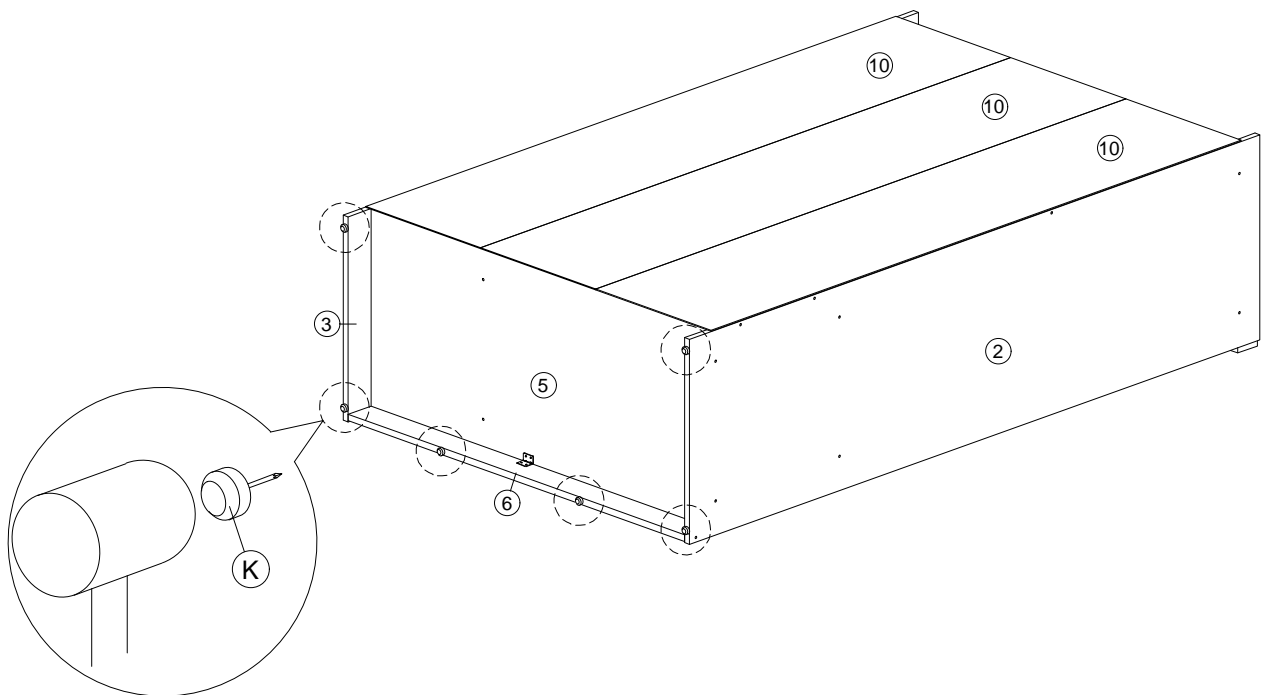



# Assembly Instruction


Step 18 

|   |   |                      |     |
|---|---|----------------------|-----|
| P |  | Aluminium Pipe 667mm | 1Pc |
|---|---|----------------------|-----|

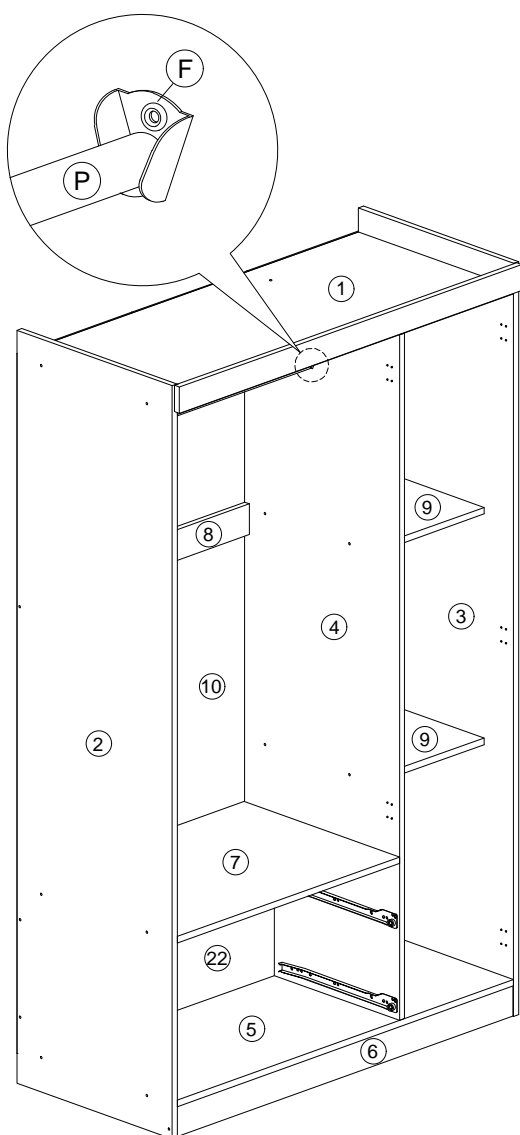



Step 19 

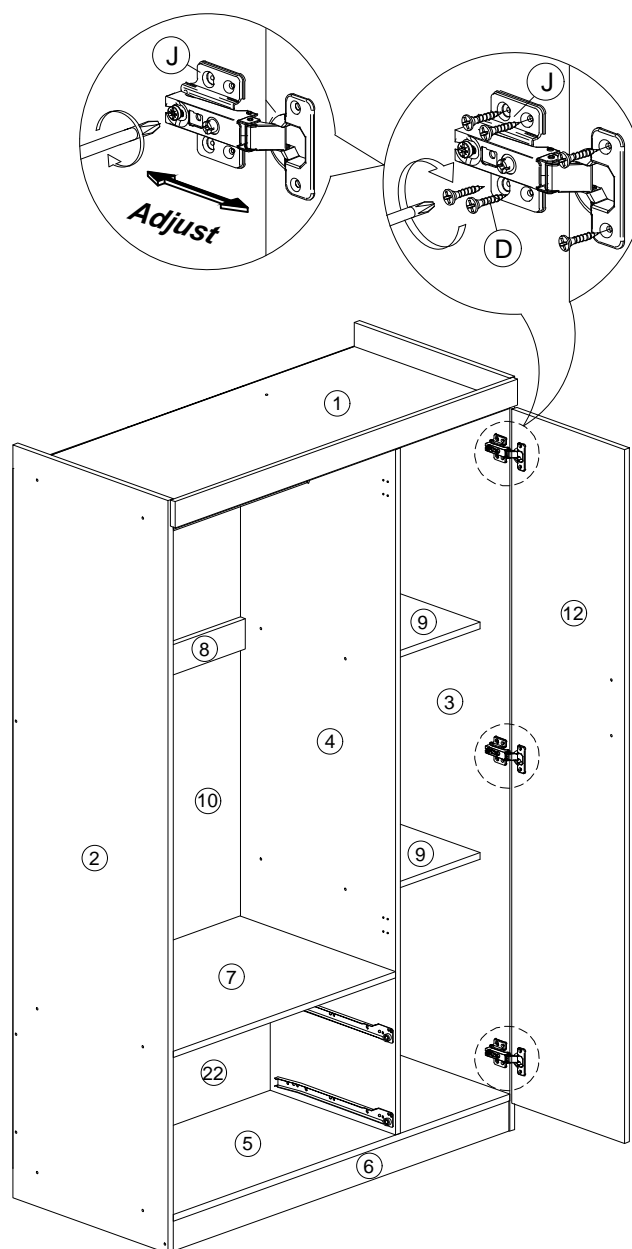
|   |   |                 |       |
|---|---|-----------------|-------|
| D |  | M3.5x16mm Screw | 18Pcs |
| J |  | Hinges 2/8      | 3Pcs  |





# Assembly Instruction


## Step 20

|   |   |                    |      |
|---|---|--------------------|------|
| H |  | Handle KT179.128mm | 1Pc  |
| I |  | M4x28mm Screw      | 2Pcs |

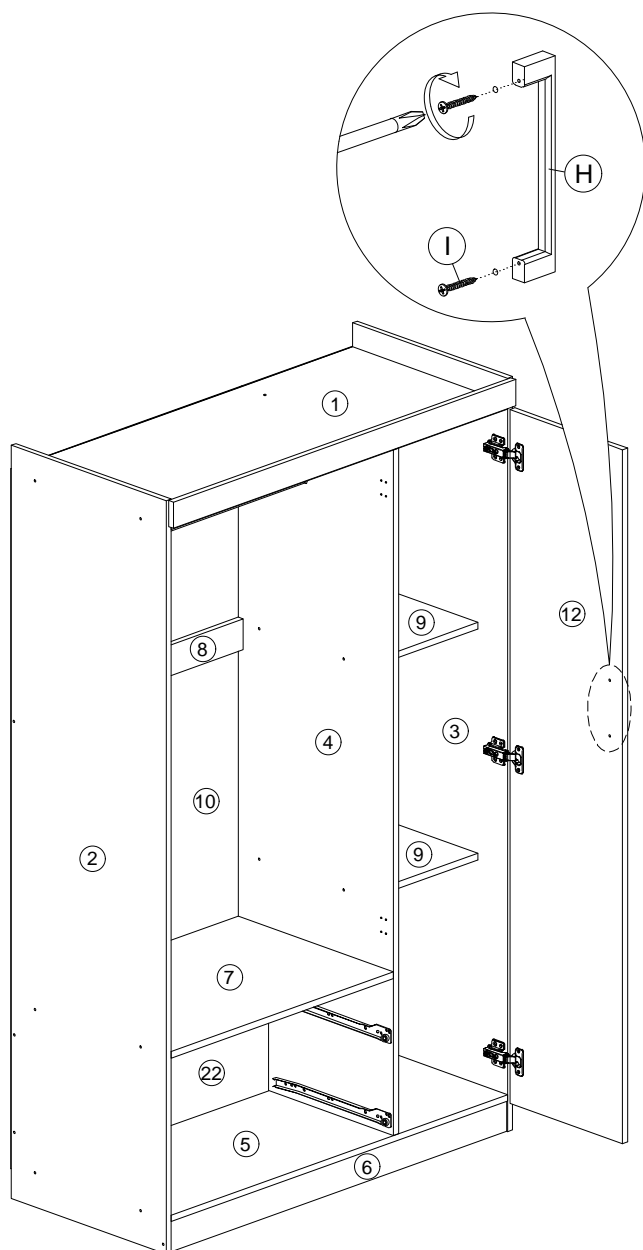



## Step 21

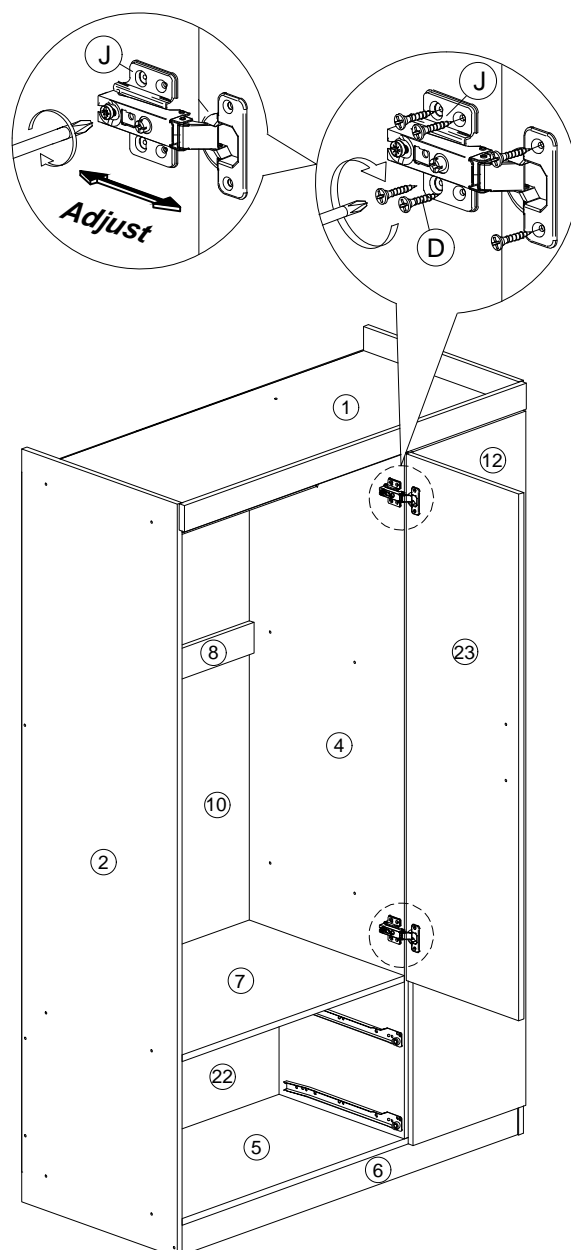
|   |   |                 |       |
|---|---|-----------------|-------|
| D |  | M3.5x16mm Screw | 12Pcs |
| J |  | Hinges 2/8      | 2Pcs  |





# Assembly Instruction


## Step 22

|   |   |                    |      |
|---|---|--------------------|------|
| H |  | Handle KT179.128mm | 1Pc  |
| I |  | M4x28mm Screw      | 2Pcs |

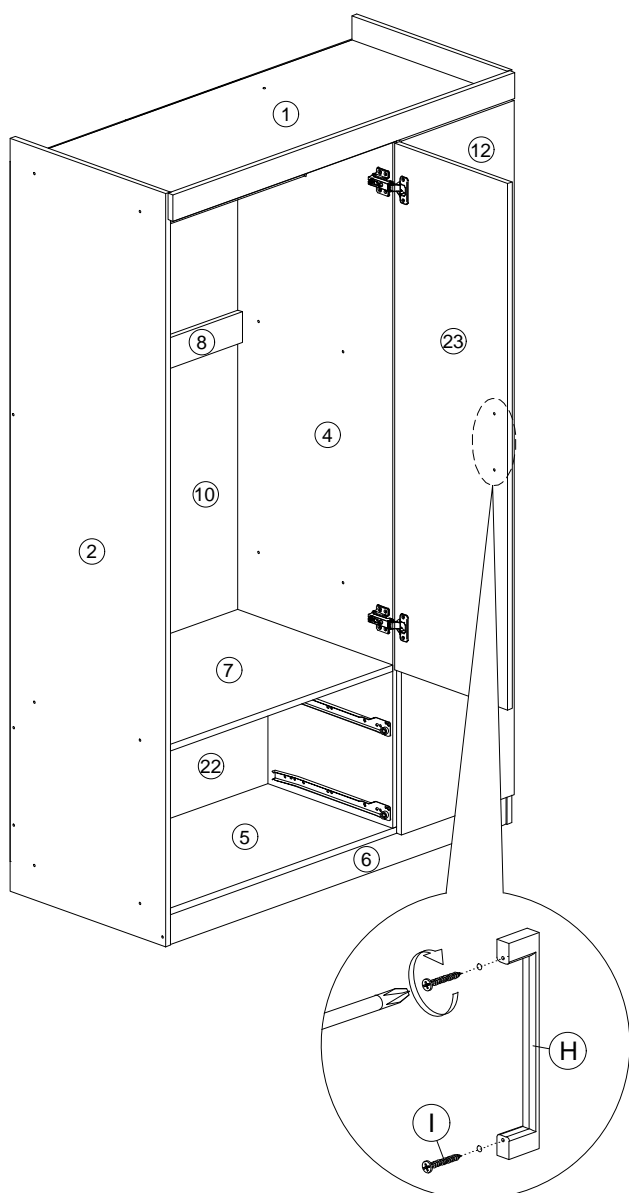

## Step 23


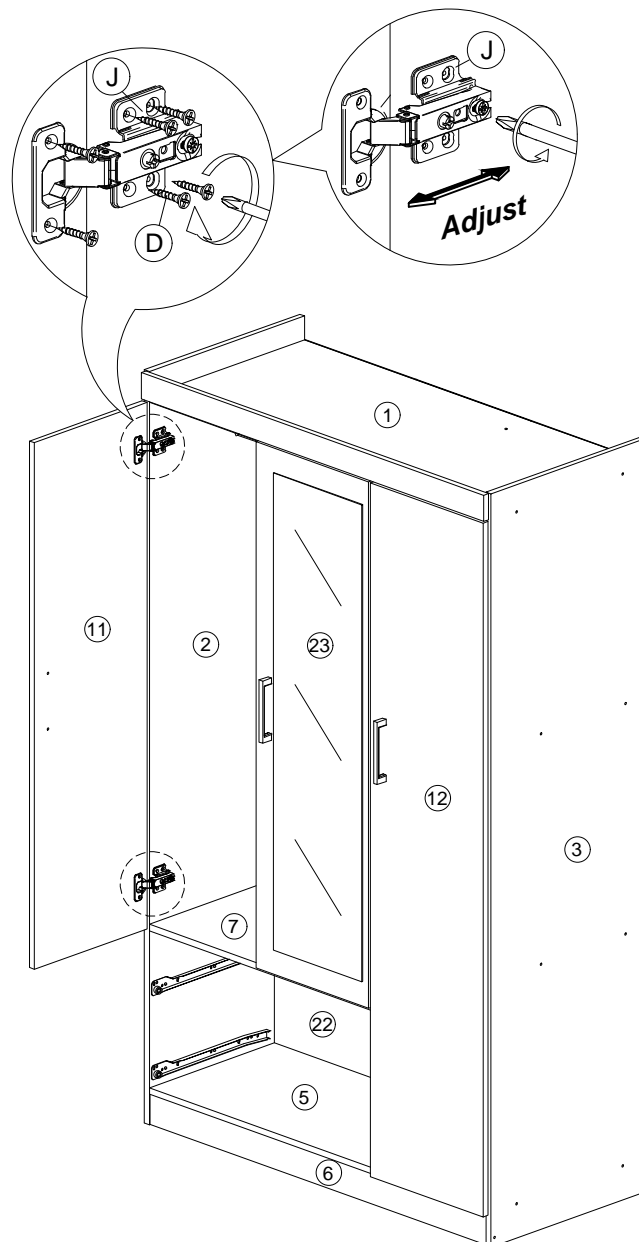
|   |   |                 |       |
|---|---|-----------------|-------|
| D |  | M3.5x16mm Screw | 12Pcs |
| J |  | Hinges 2/8      | 2Pcs  |







# Assembly Instruction


## Step 24

|   |   |                    |      |
|---|---|--------------------|------|
| H |  | Handle KT179.128mm | 1Pc  |
| I |  | M4x28mm Screw      | 2Pcs |

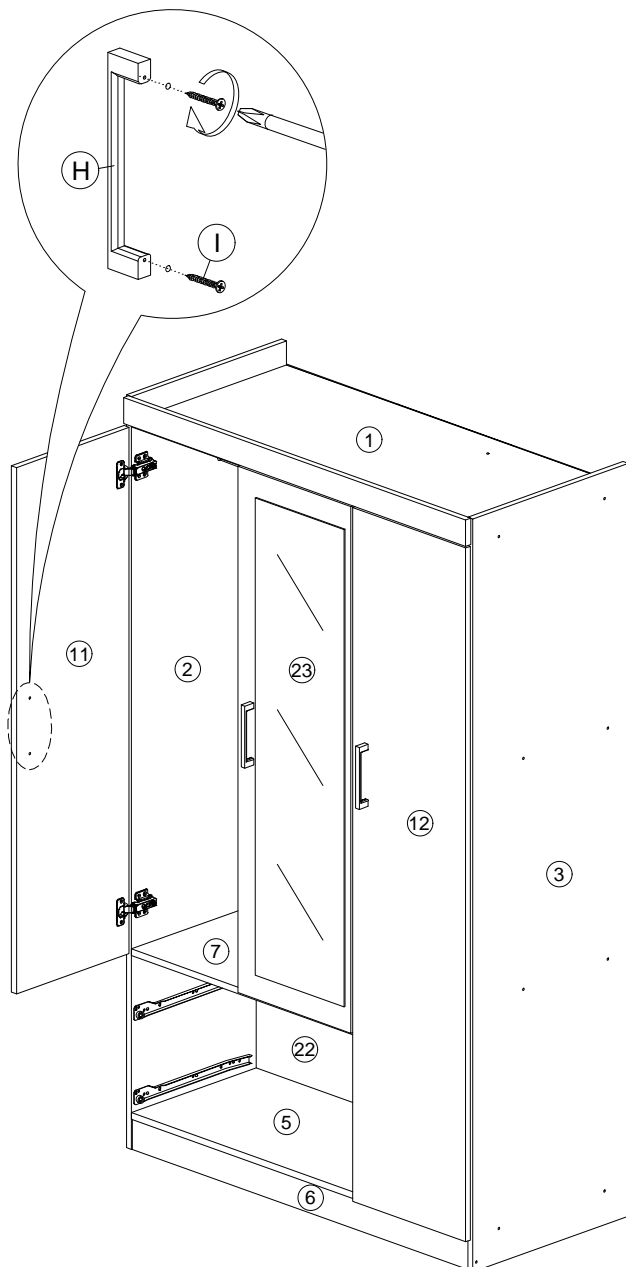


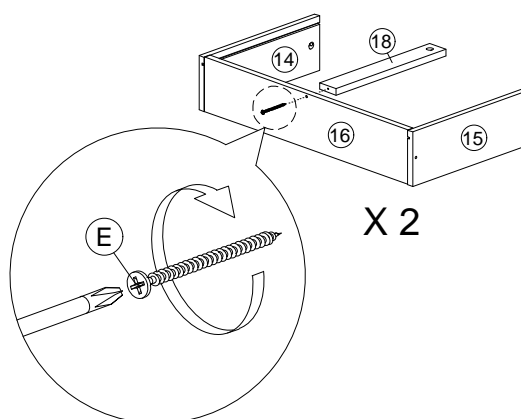
## Step 25

|   |   |               |      |
|---|---|---------------|------|
| E |  | M4x45mm Screw | 4Pcs |
|---|---|---------------|------|

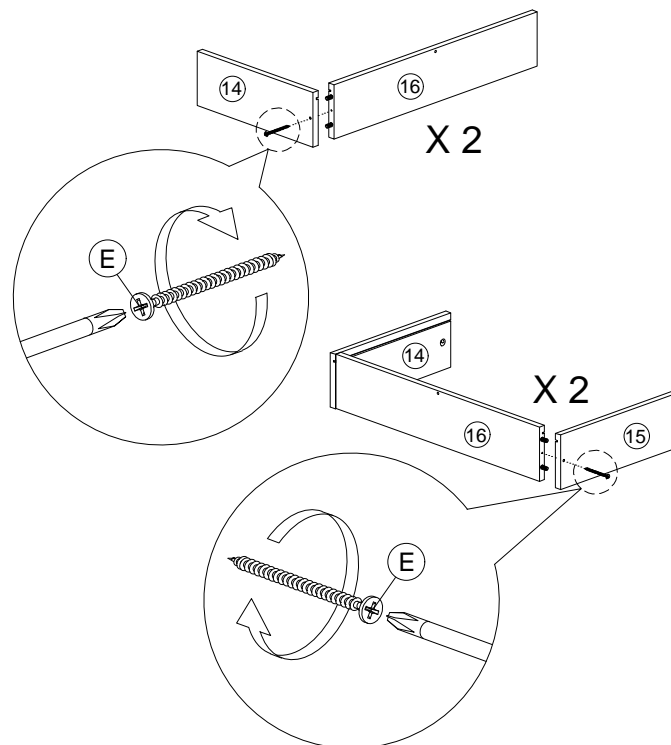


## Step 26

|   |   |               |      |
|---|---|---------------|------|
| E |  | M4x45mm Screw | 2Pcs |
|---|---|---------------|------|




# Assembly Instruction

## Step 27

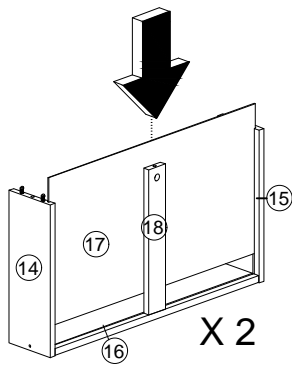


## Step 28

|   |  |         |      |
|---|--|---------|------|
| C |  | Minifix | 2Pcs |
|---|--|---------|------|

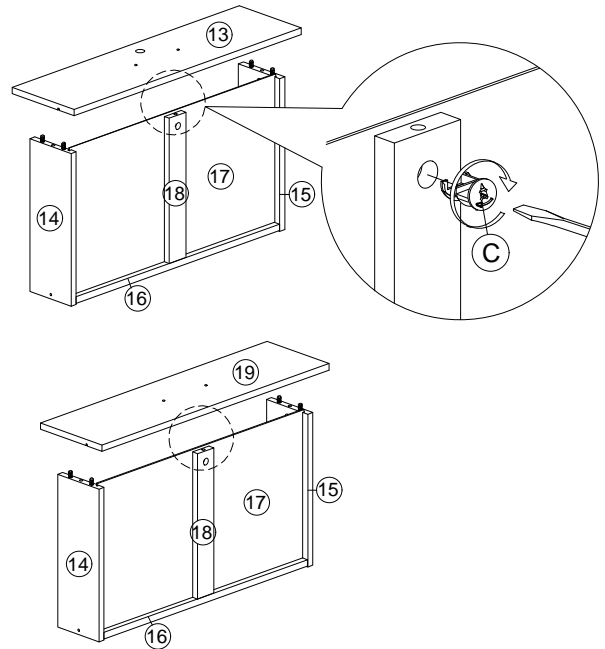


## Step 29

|   |  |         |      |
|---|--|---------|------|
| C |  | Minifix | 2Pcs |
|---|--|---------|------|

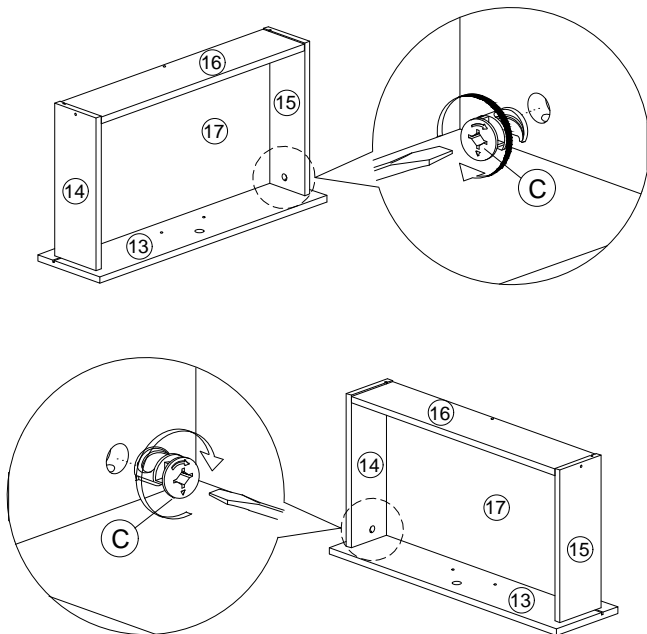



## Step 30

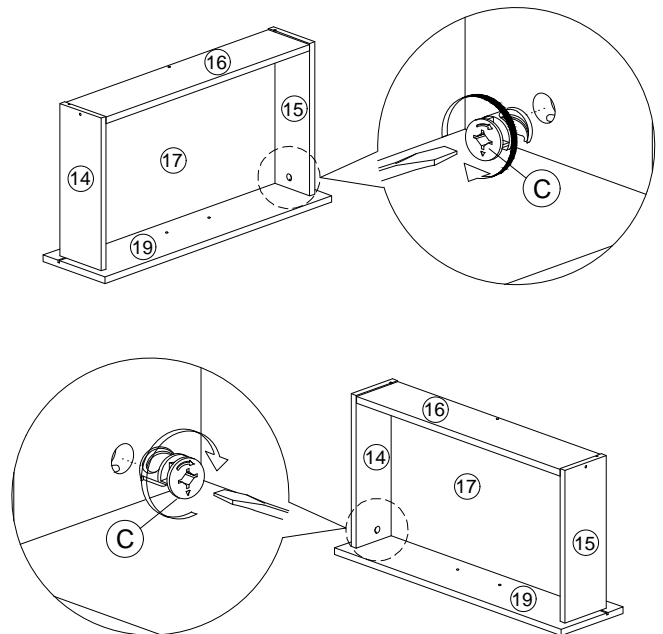
|   |  |         |      |
|---|--|---------|------|
| C |  | Minifix | 2Pcs |
|---|--|---------|------|





# Assembly Instruction


## Step 31
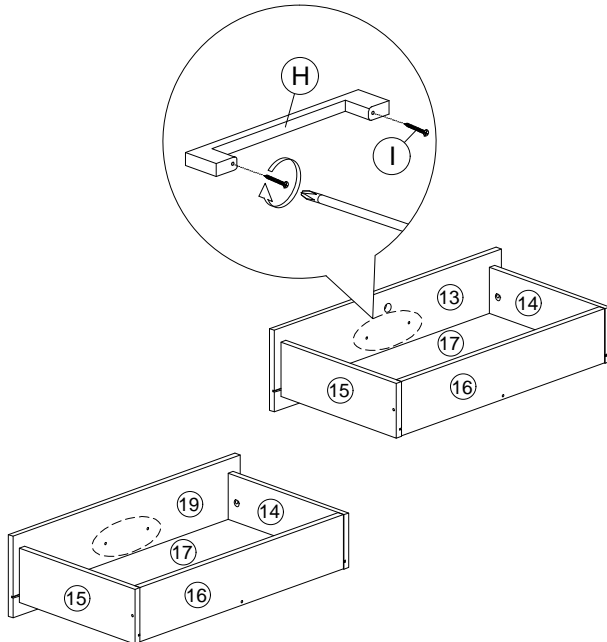
|   |   |                    |      |
|---|---|--------------------|------|
| H |  | Handle KT179.128mm | 2Pcs |
| I |  | M4x28mm Screw      | 4Pcs |





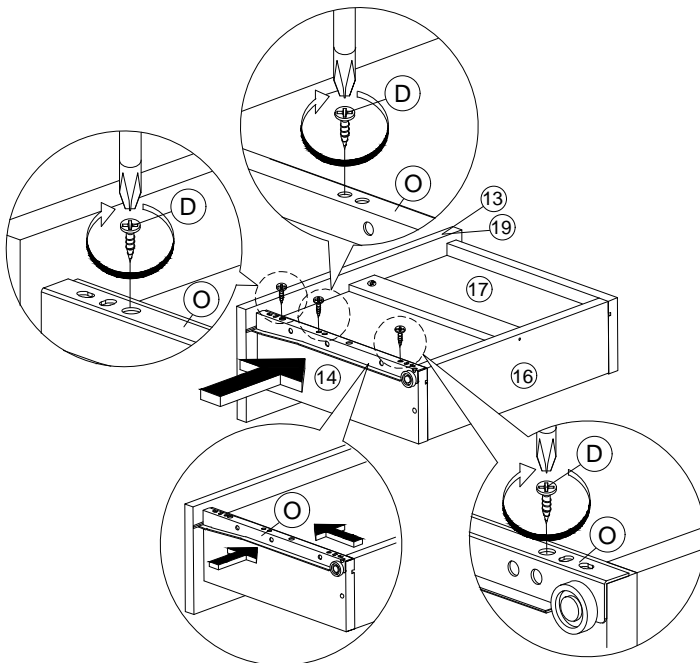
## Step 32

|   |   |                 |      |
|---|---|-----------------|------|
| D |  | M3.5x16mm Screw | 4Pcs |
| M |  | Drawer Lock     | 1Pc  |

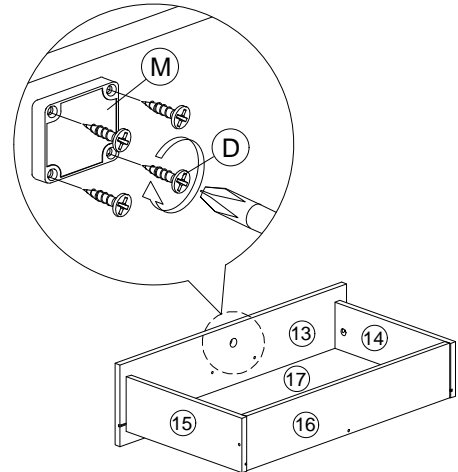



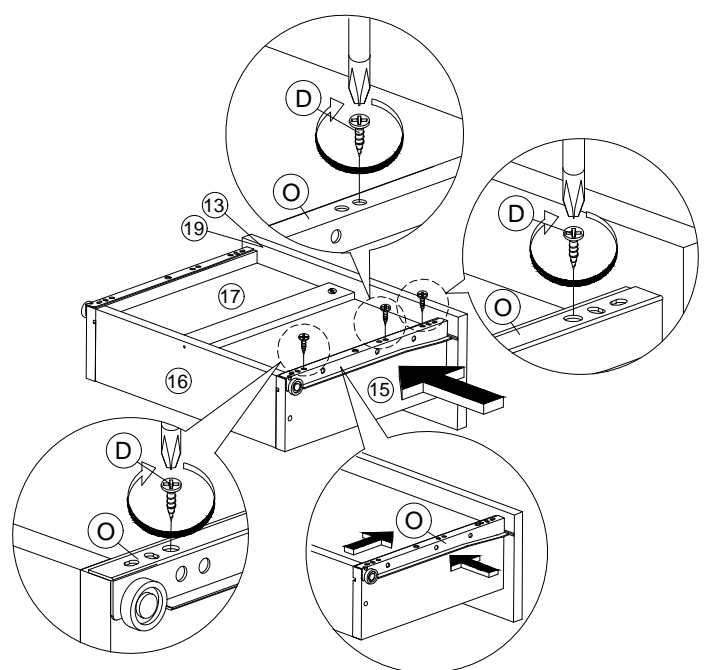
## Step 33

|   |   |                        |      |
|---|---|------------------------|------|
| D |  | M3.5x16mm Screw        | 6Pcs |
| O |  | Drawer Slide 350mm - R | 2Pcs |




## Step 34

|   |   |                        |      |
|---|---|------------------------|------|
| D |  | M3.5x16mm Screw        | 6Pcs |
| O |  | Drawer Slide 350mm - L | 2Pcs |



# Assembly Instruction

## Step 35

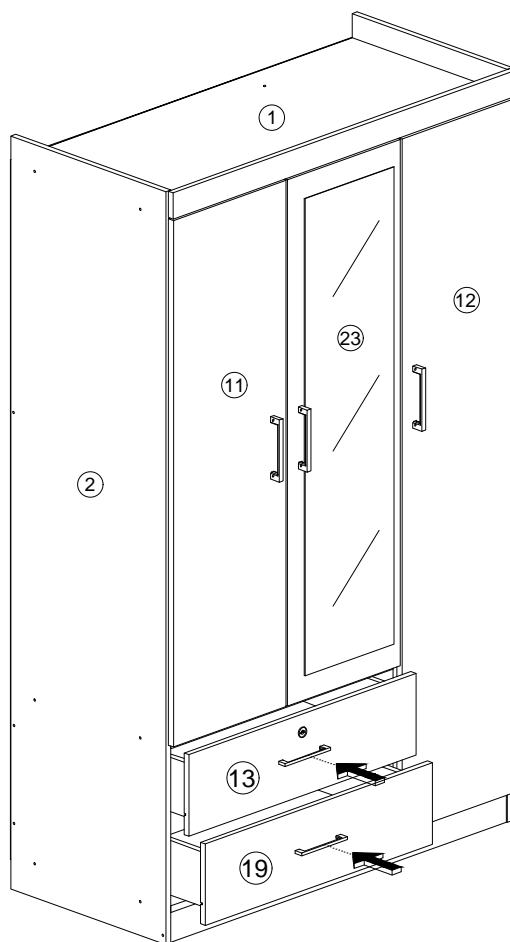

# FITTING OF ANTI-TIP SAFETY STRAP

## STEP 1:

- Attach the mounting bracket (a) to the furniture in the solid part below the top panel a few inches away from the side of the unit.
- Screw (b) through the smallest hole of (a).

## STEP 2:

- Locate a stud in behind the have to
- Place the other mounting bracket (a) on the wall stud 2 inches below the mounting bracket secured to the back of your unit.
- Attach to the wall stud using (c) through the smaller hole of (a).

## STEP 3:

- Repeat the same step a few inches away from the other side of the unit.
- Place the furniture into position so both mounting brackets are vertically in line.
- Lace the end of the restraint strap through the larger holes in each mounting bracket.
- Secure the straps and lock into place.

