



9773-1 Full / Queen Headboard

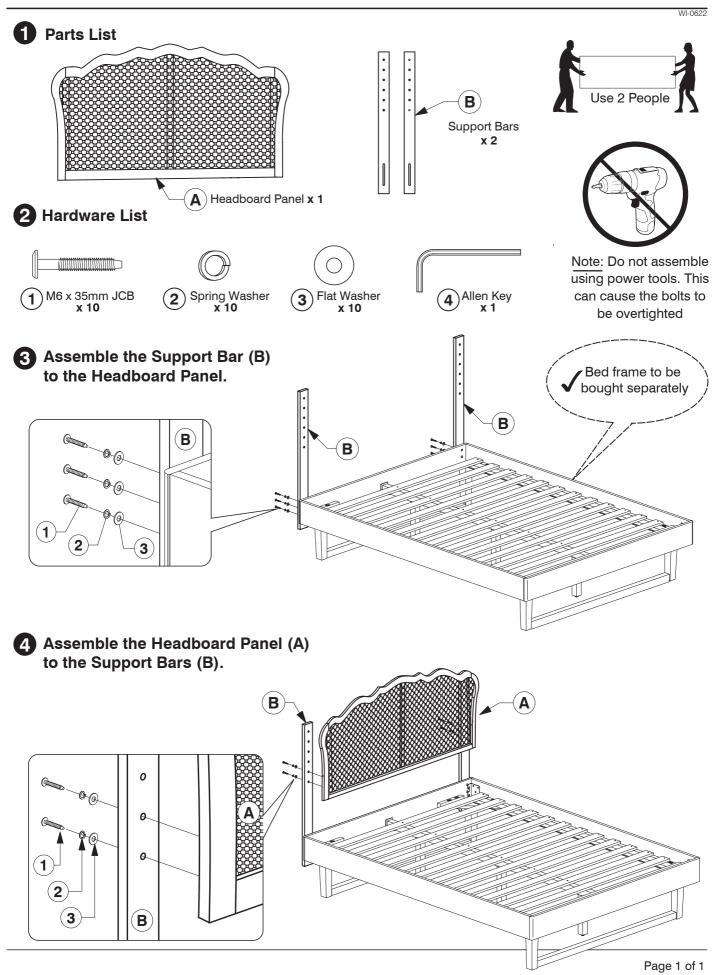


9773-1 King Headboard

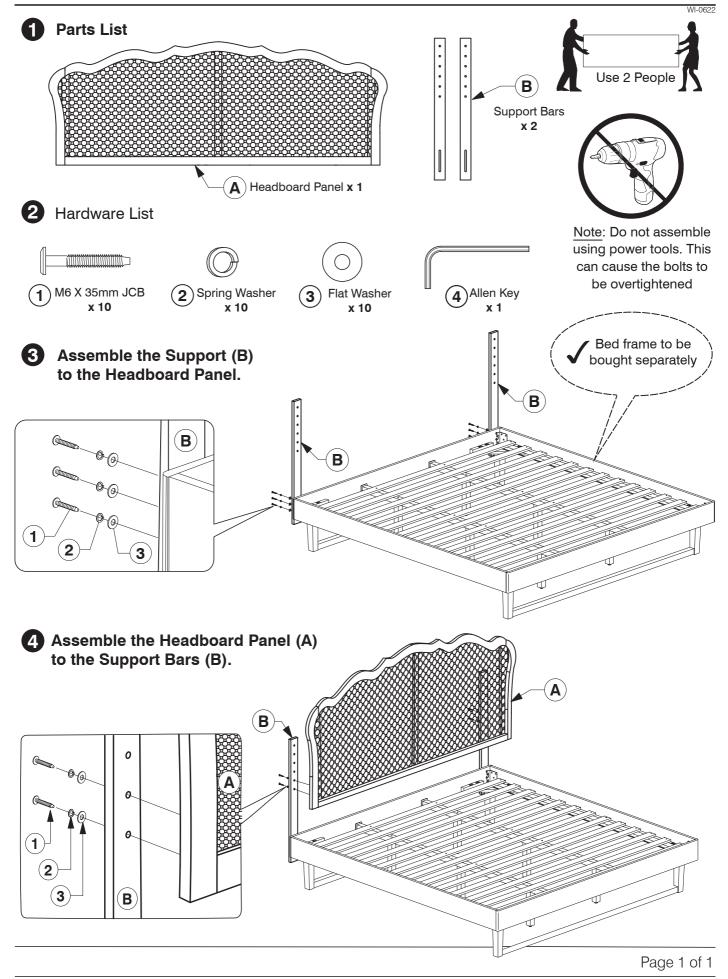


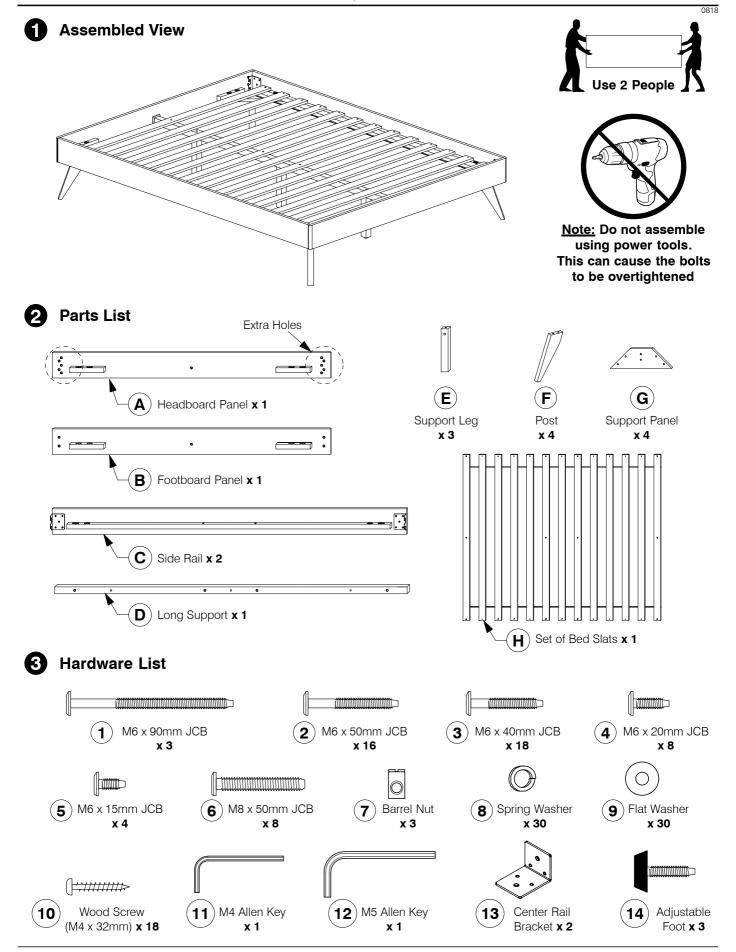


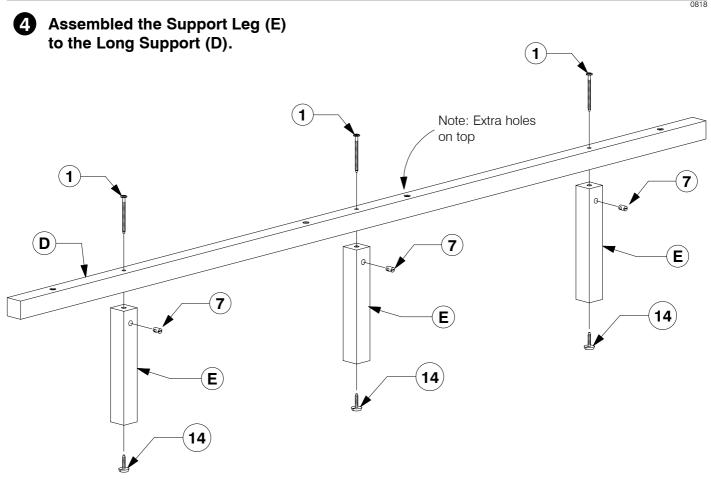

5 Fit the Post (F) to the Support Panel (G).

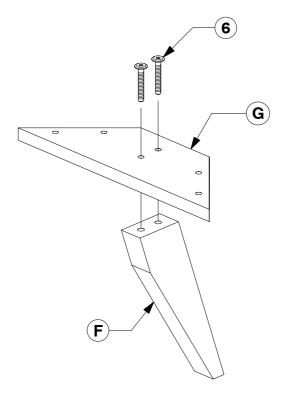

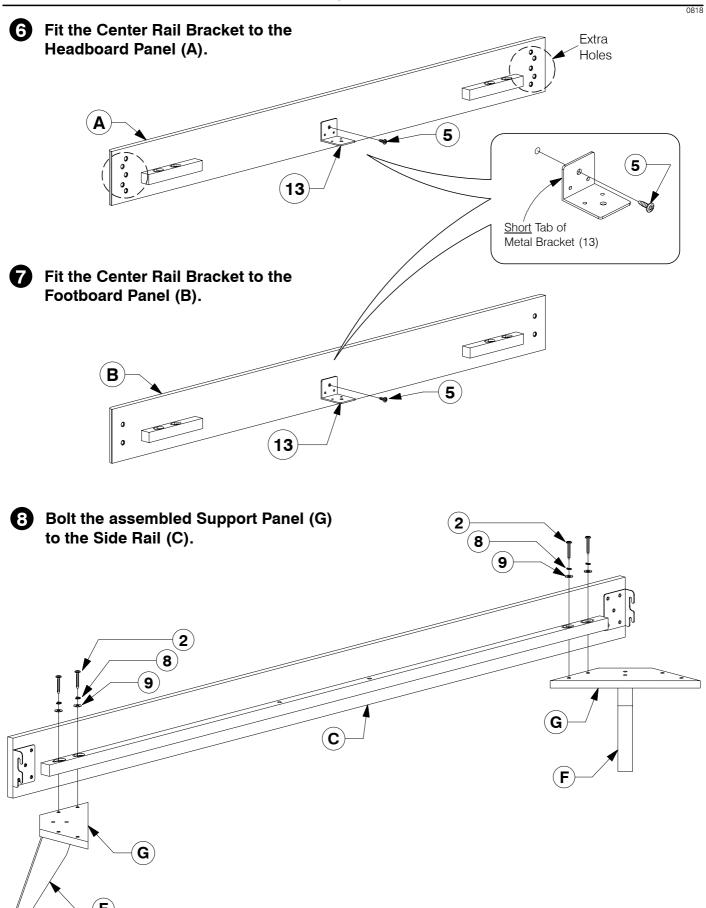

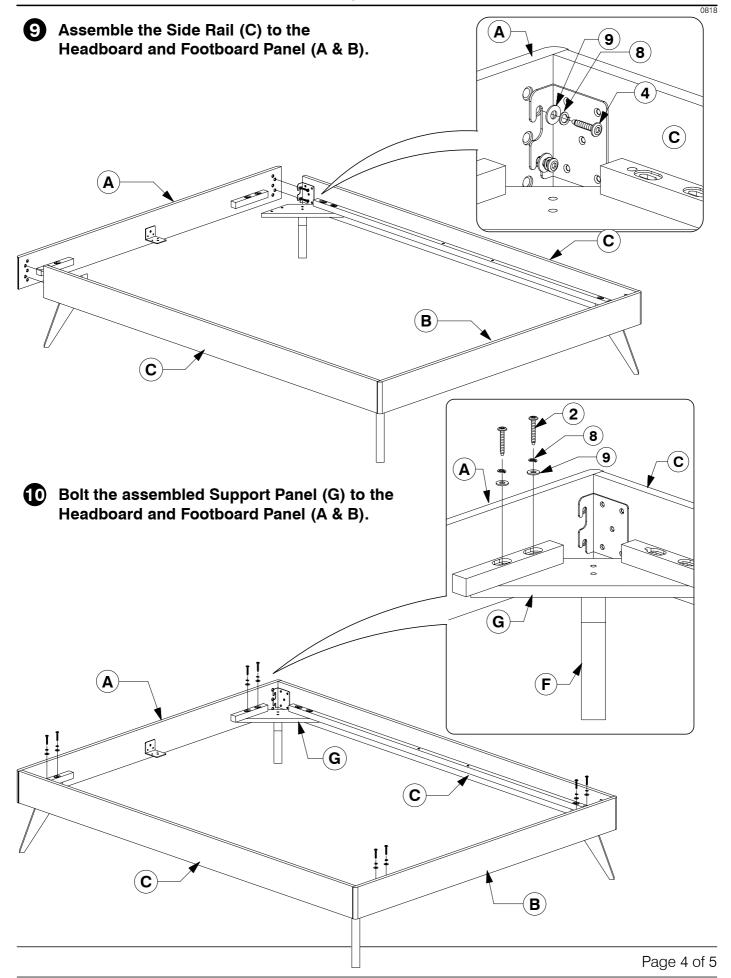

Assembly Instructions

Bolt the Long Support (D) to the Center Rail Brackets (13) on the Headboard and Footboard Panel (A & B).

Bolt & screw the Bed Slats (H) to the Side Rail (C).

