ASSEMBLY INSTRUCTION



Thank you for purchasing the product. Please take time to read and follow the instructions below. Check that you have all parts and hardware before assembly. Parts apparently missing are often found in the packing materials. If you do not have all the parts listed, have your dealer contact us and they will be sent to you immediately.

It is recommended to install protective pads under all legs and supports to avoid damage or scratches when placing furniture on a wood floor or other hard surface, and to limit indentation and prevent discoloration if placing on carpet.


Hardware may loosen over time. Periodically check to make sure all connections are tight. Re-tighten if necessary.

| PARTS LIST | | | | | | |
|------------|------------------|--------------------------------------|------------|--|--|--|
| No | Sketch | Description | Quantity | | | |
| 1 | | Chair Back | 1PC | | | |
| 2 | | Cushion Seat With Frame | 1PC | | | |
| 3A 3B | LEFT SIDE FACING | 3A-LSF Leg 3B-RSF Leg | 1PC 1PC | | | |
| 4 | (0 | Front Stretcher | 1PC | | | |
| 5A 5B | | 5A-LSF Stretcher 5B-RSF Stretcher | 1PC 1PC | | | |


| | HARDWARE LIST | | | | | | |
|----|---------------|---------|--|----------|--|--|--|
| No | Description | Size | Sketch | Quantity | | | |
| А | JCBC Bolt | M6X80mm | 0 | 4PCS | | | |
| В | JCBC Bolt | M6X60mm | () | 4PCS | | | |
| С | JCBC Bolt | M6X40mm | 0 | 3PCS | | | |
| D | Spring Washer | M8X13mm | 0 | 11PCS | | | |
| E | Flat Washer | M8X18mm | 0 | 11PCS | | | |
| F | Wood Screw | M5X38mm | () <u>::::::::::::::::::::::::::::::::::::</u> | 6PCS | | | |
| G | Allen Key | M4 | | 1PC | | | |
| | _ | _ | | | | | |

STEP 1

PAGE 1 of 3

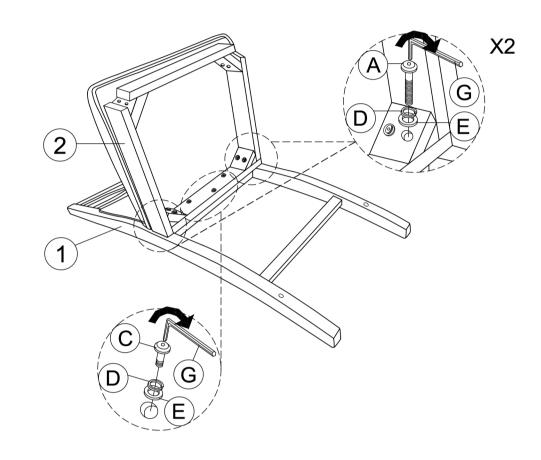

STEP 2

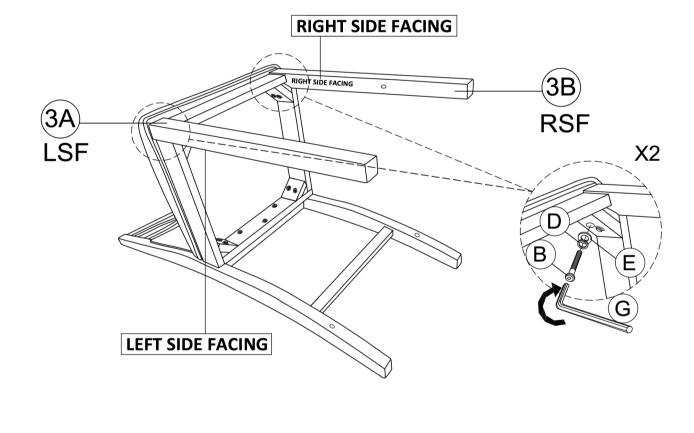

PAGE 2 of 3

STEP 3

