
FZJNT-V2

FTLFCT-6015 FTLFCT-6033 FTLFCT-0002

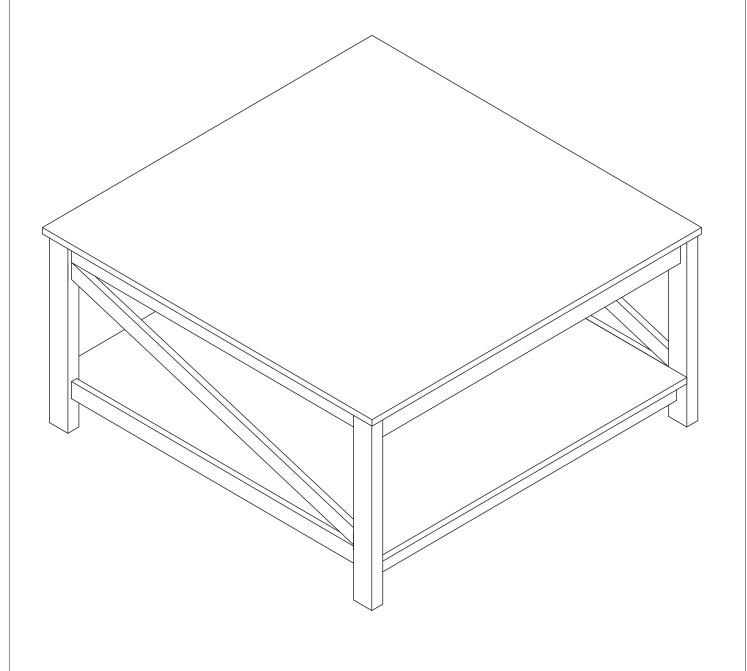

IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY



- 1. Gather and organize all required parts prior to assembly.
 - 2. Assemble on a flat, clean and soft surface.
 - 3. Two or more people are needed for the assembly.

Item no.	Reference Image	Qty.
A		X36
B		X36
G	Ø8x30	X20
D	M7x50	X16
•		-

IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY


Item no.	Reference Image	Qty.
1		X1
2		X1
3		X2
4		X1
5		X1
6		X1

Item no.	Reference Image	Qty.
7		X1
8		X2
9		X1
10		X1
1	(coo	X2
12		X2


IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

Use the Cam Lock and Eccentric Wheel ECCENTRIC WHEEL


Tighten the bolt until the shoulder is aligned with the panel. Be sure not to tighten too much or too little.

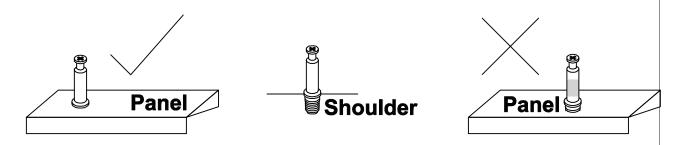


The pre-inserted nut should align with the center of the cam lock when joining two panels. The cam lock should be inserted before the eccentric wheel.

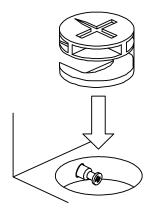

Turn the cam lock clockwise to tighten.

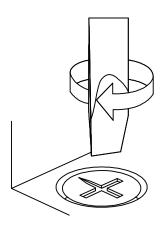

IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY **Explosion Diagram**

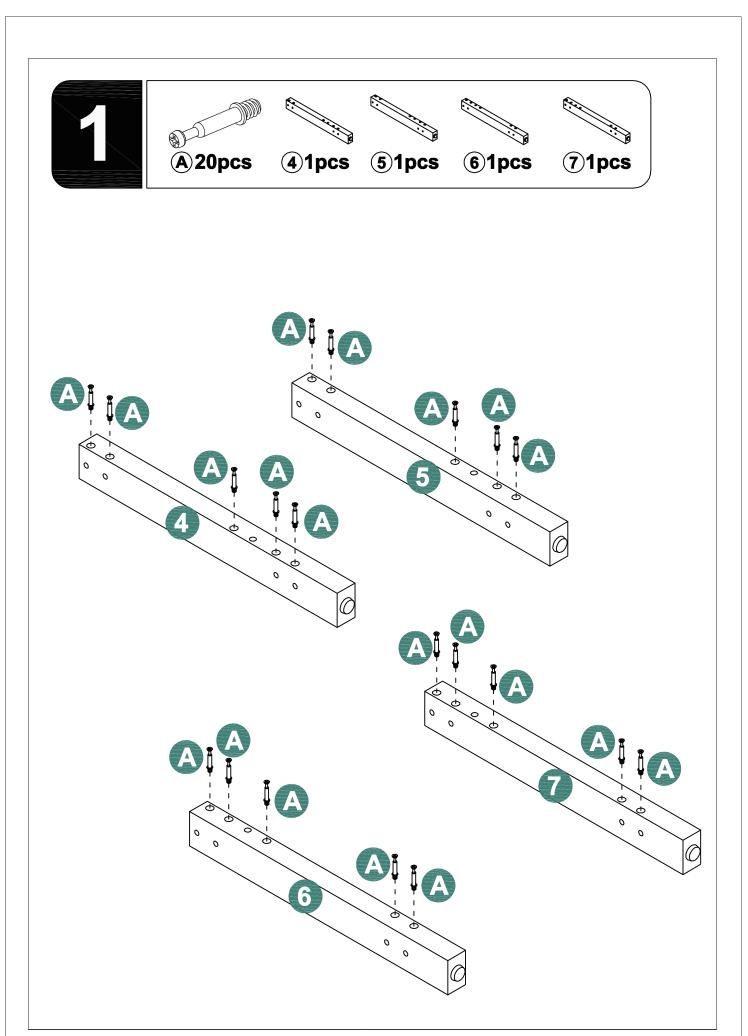



















82pcs


91pcs


101pcs

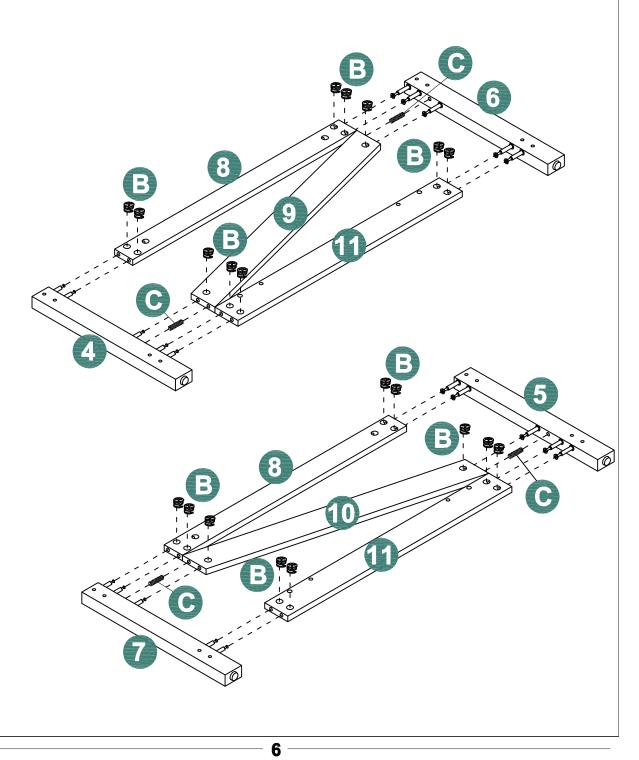








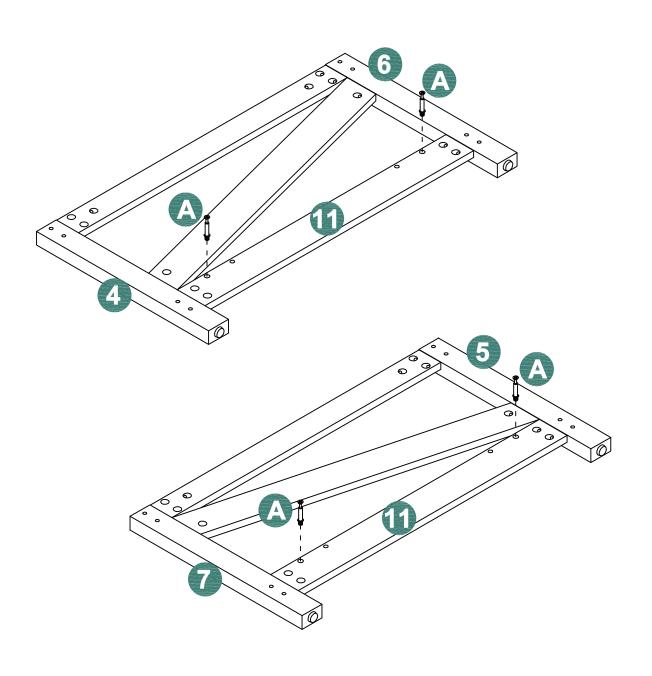


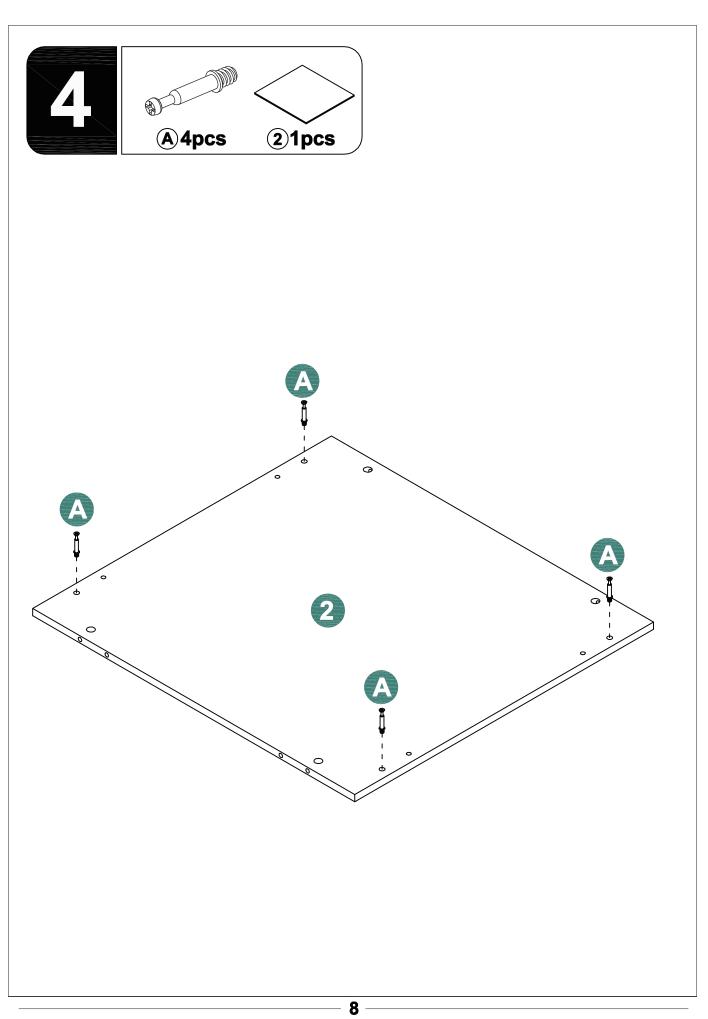


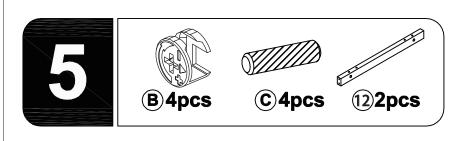

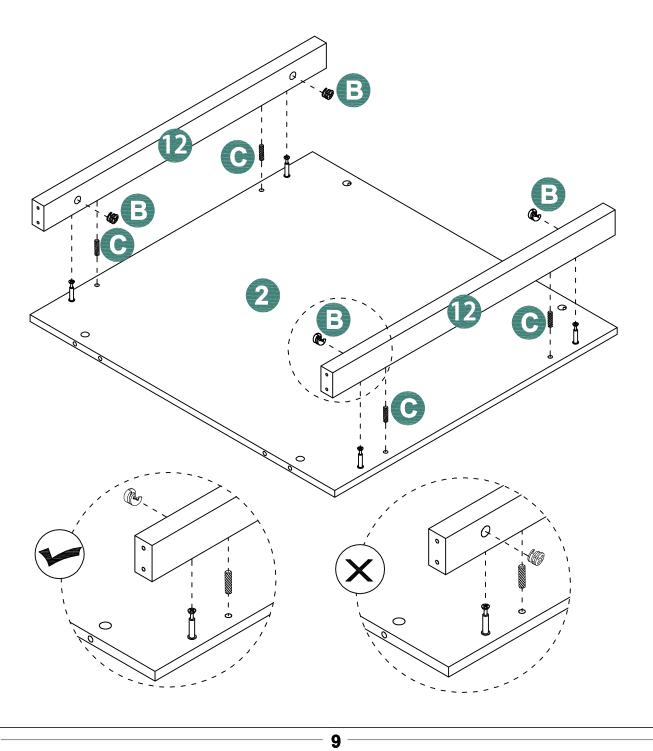

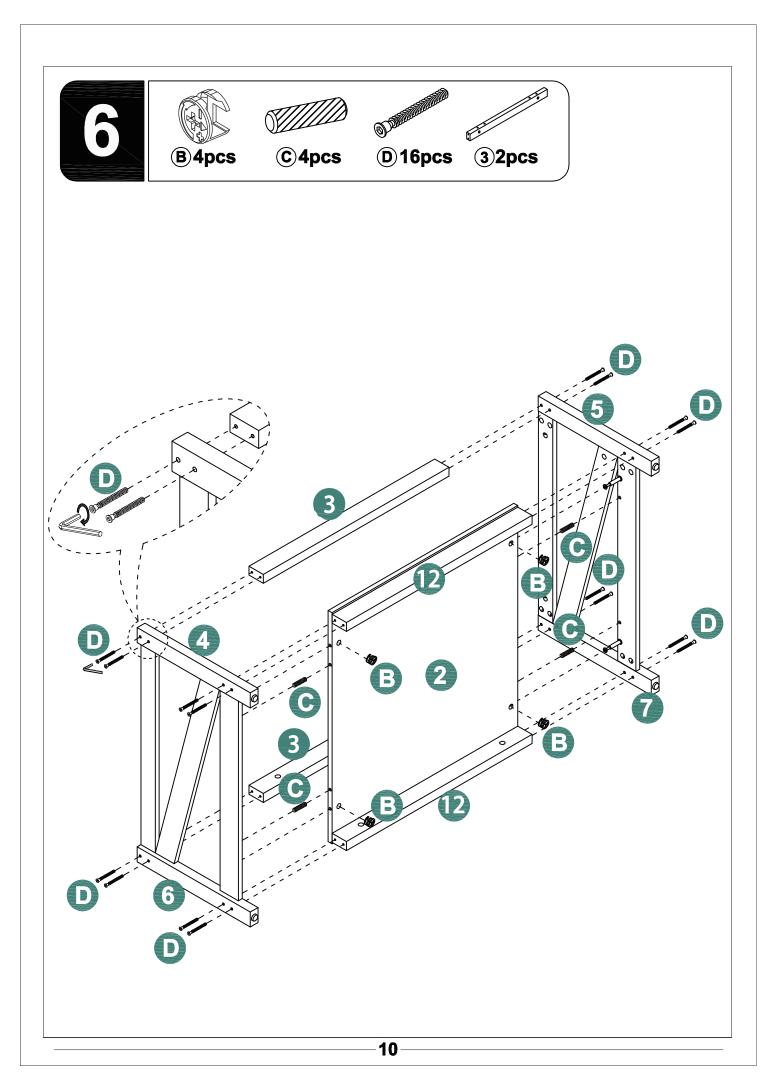


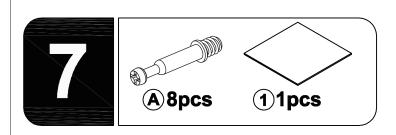

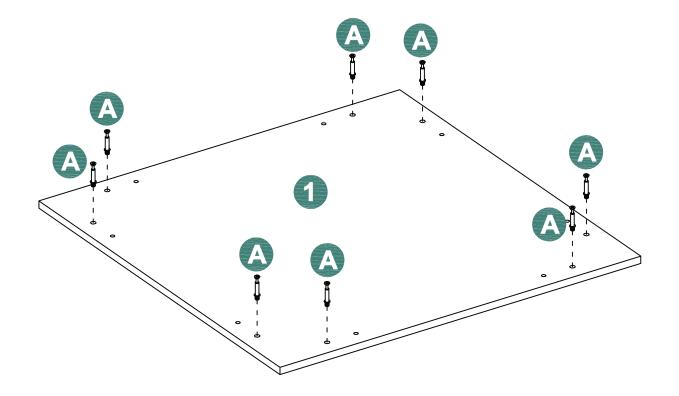







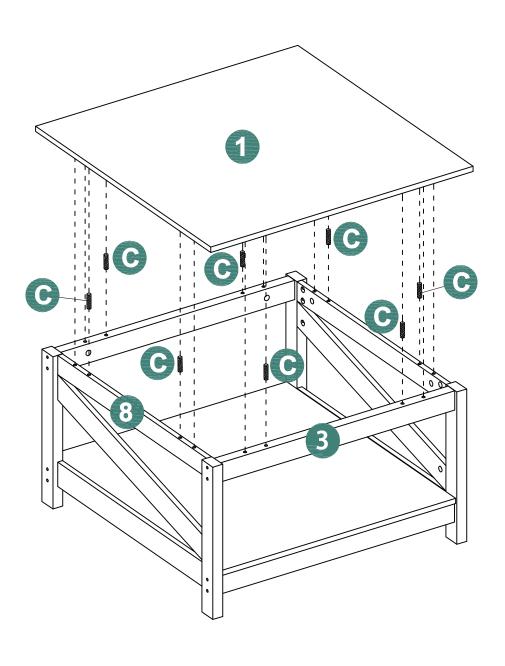






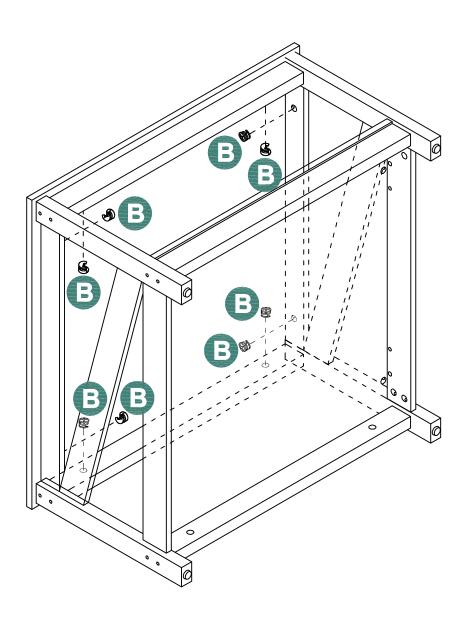

10

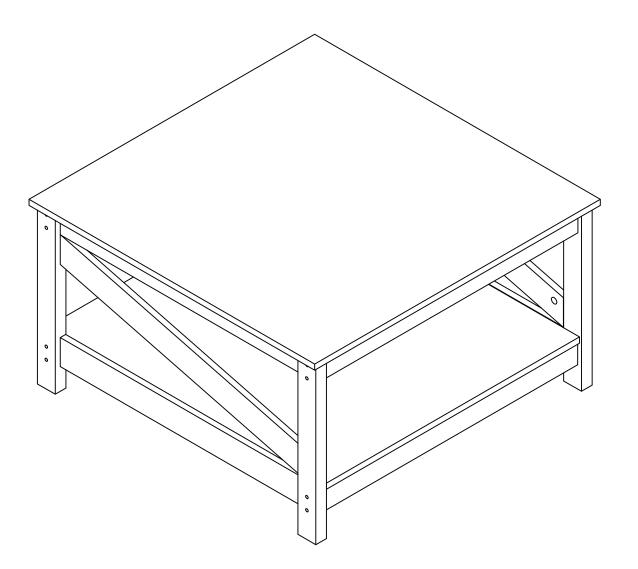

Installation Completed