

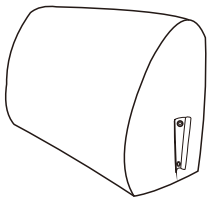
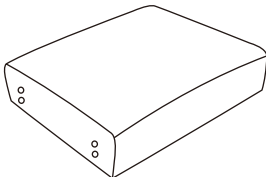
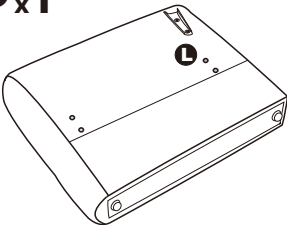
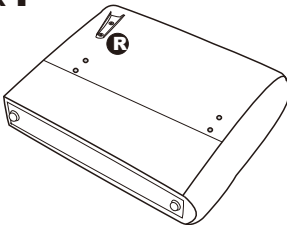
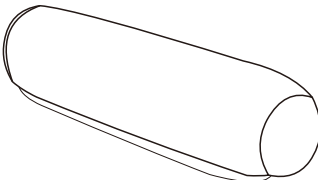
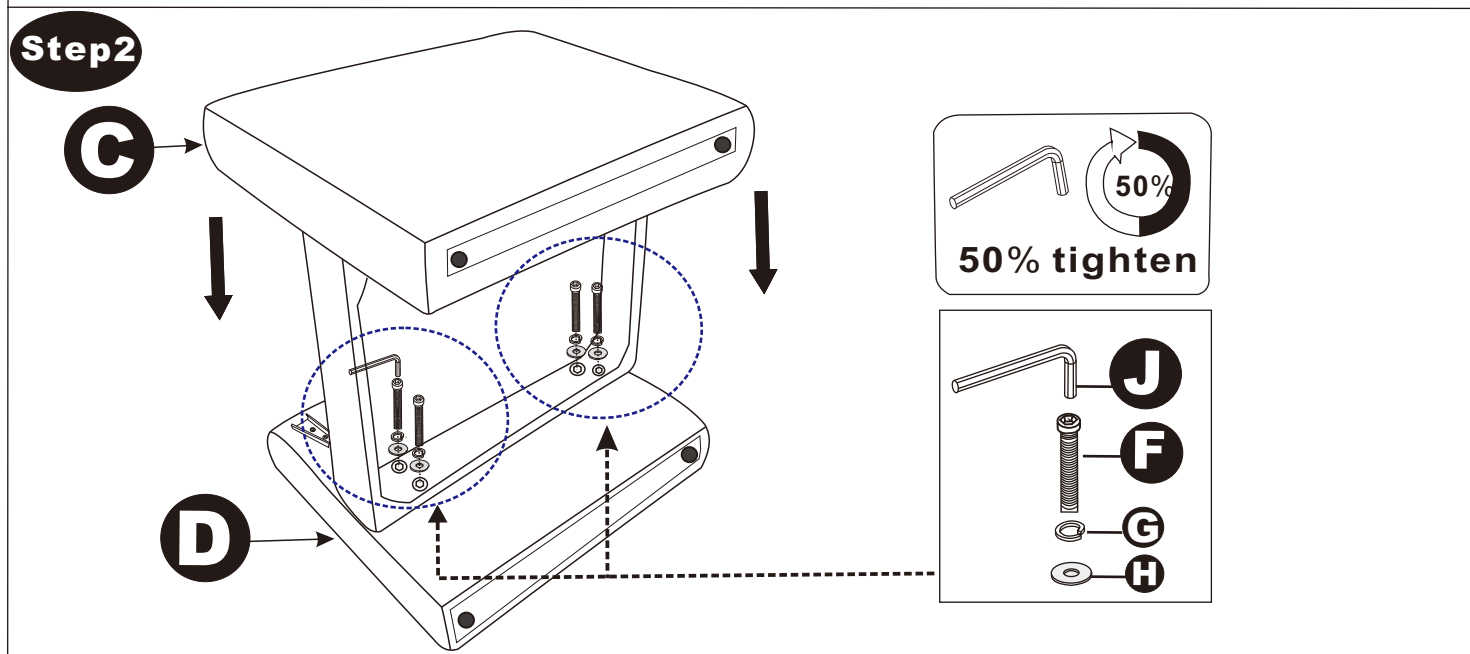


Assembly Instruction


A_{x1} 	B_{x1} 	C_{x1} 	D_{x1} 
Backrest	Seat	Left Armrest	Right Armrest
E_{x1} 	F_{x8}  M8x75MM	G_{x4}  M8	J_{x1}  6mm
Back cushion	Screws	H_{x1}  Ø 22mm	

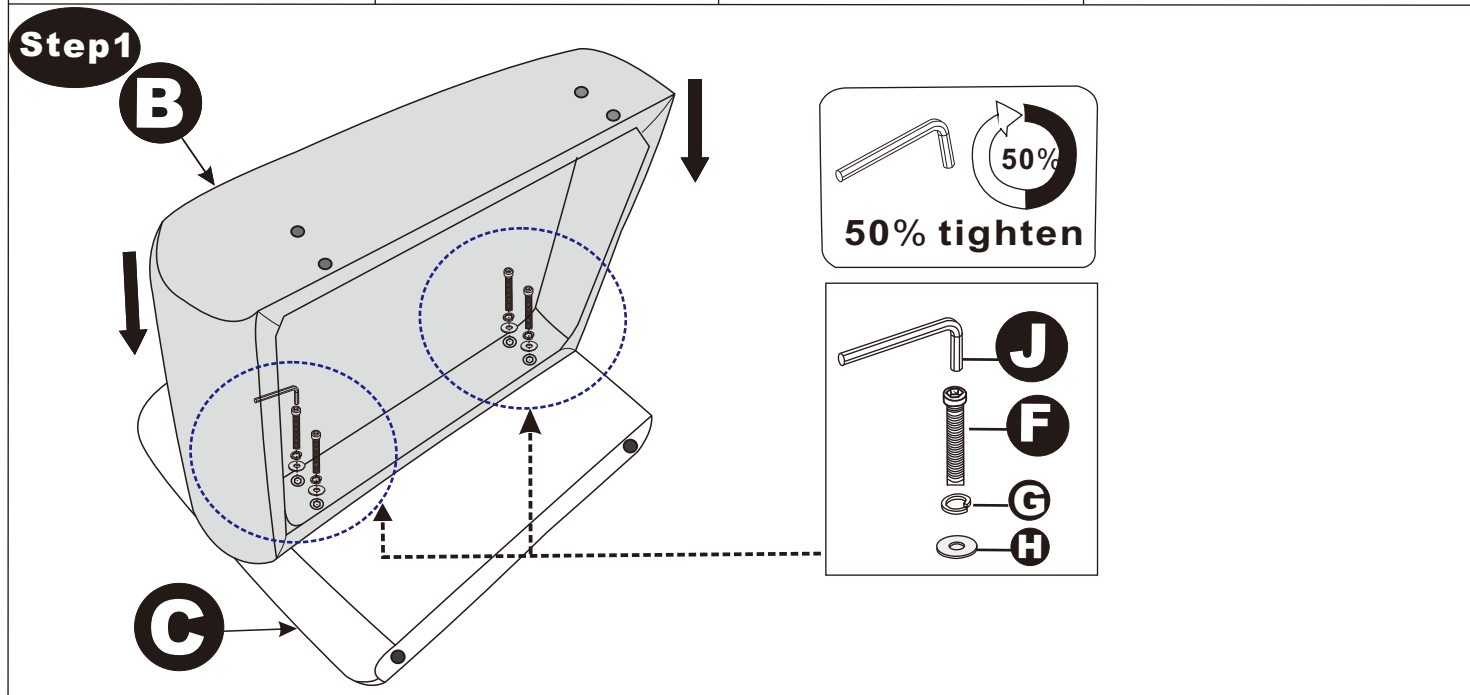

Step3

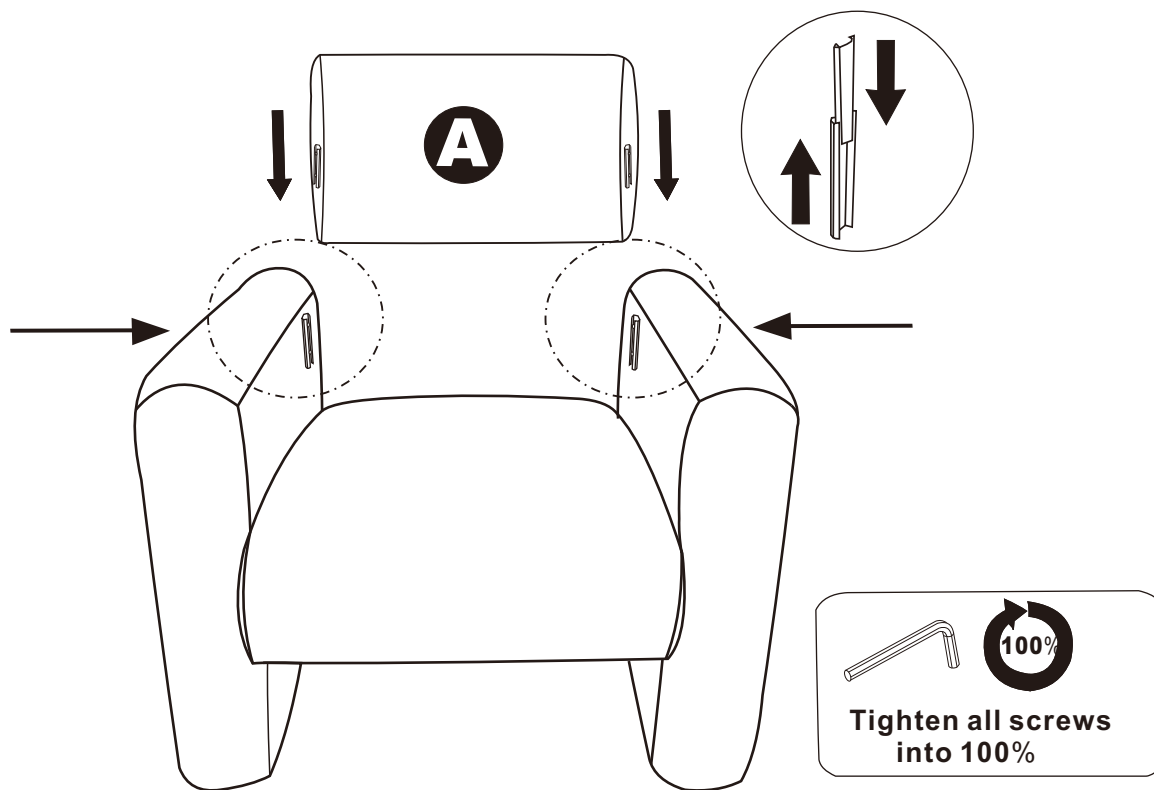

Step4

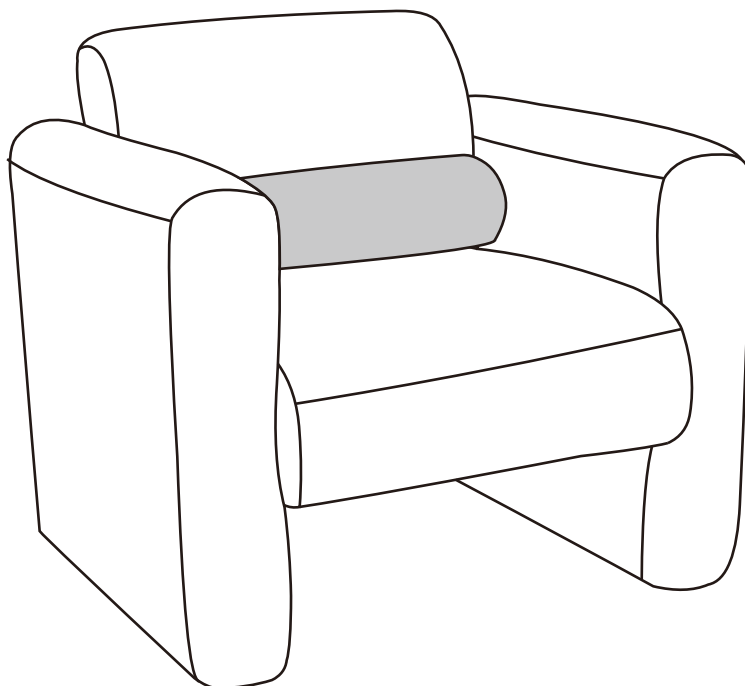

Finished