








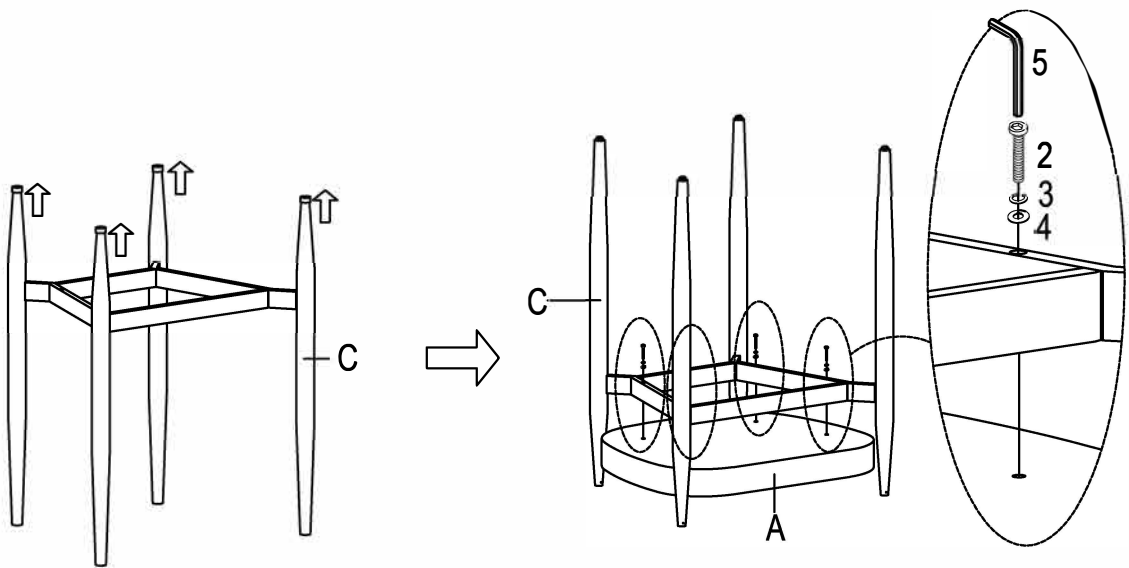



# Assembly Instruction

PART LIST				HARDWARE LIST				
A	CHAIR SEAT		1 PC	1	BOLT		5/32"*5/32"	4PCS
				2	BOLT		1/4"*2-1/8"	4PCS
B	CHAIR BACK		1 PC	3	LOCK WASHER		1/4"	4PCS
				4	FLAT WASHER		1/4"	4PCS
C	LEG FRAME		1 PC	5	ALLEN KEY		4mm	1 PC
				6	ALLEN KEY		2mm	1 PC

## STEP 1




STEP 2

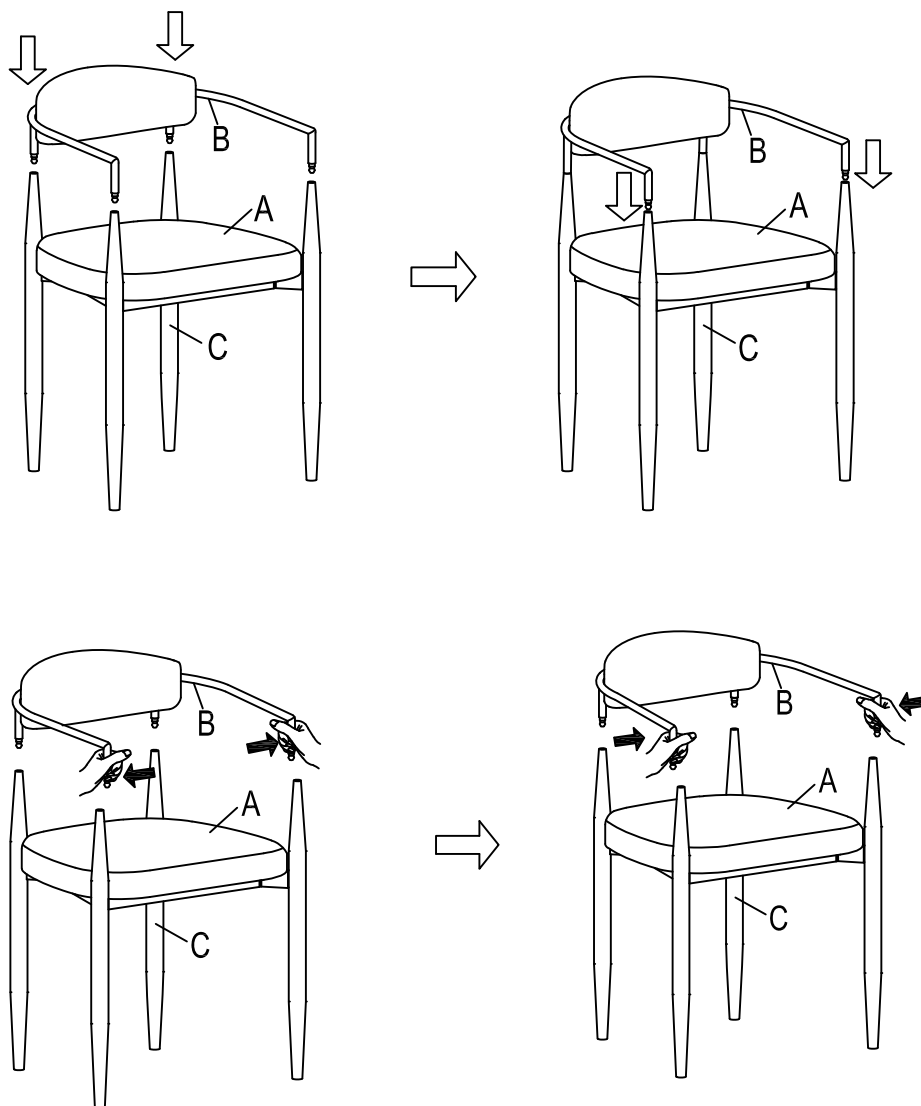


**Note: If the metal tube on both sides of the armrest of the Chair Back(B) is not aligned with the holes on the Leg Frame(C), please gently use your hand to force them inward or outward to align and insert them.**

### STEP 3

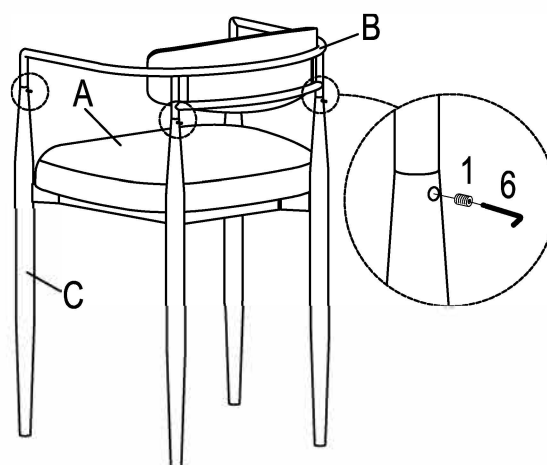

### STEP 4

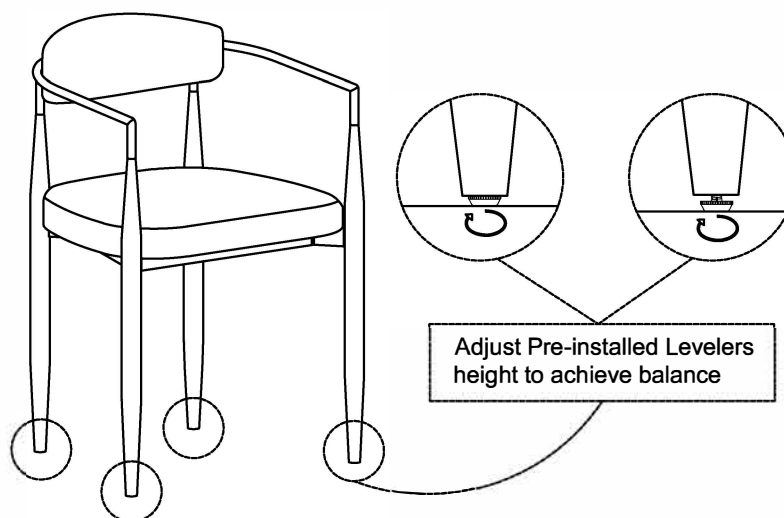

- For items use on wooden floor, hard surfaces or carpets, it is recommended to install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration.
- Hardware may loosen over time. Periodically check to make sure all connections are tight. Re-tight if necessary.