

FJFL-V1

FTLFCT-0021


FTLFCT-6008

FTLFCT-6017


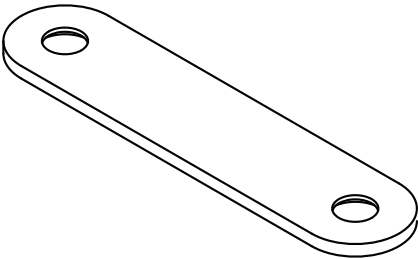
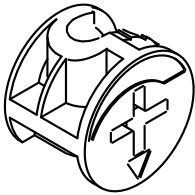
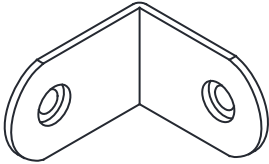
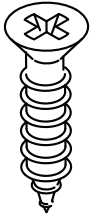

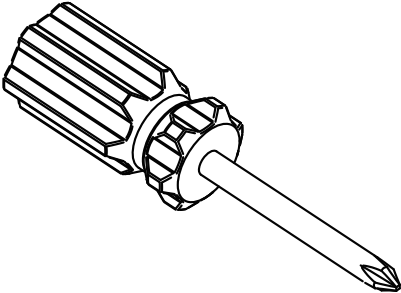
FTLFCT-6040






FTLFCT-6041

FTLFCT-6042

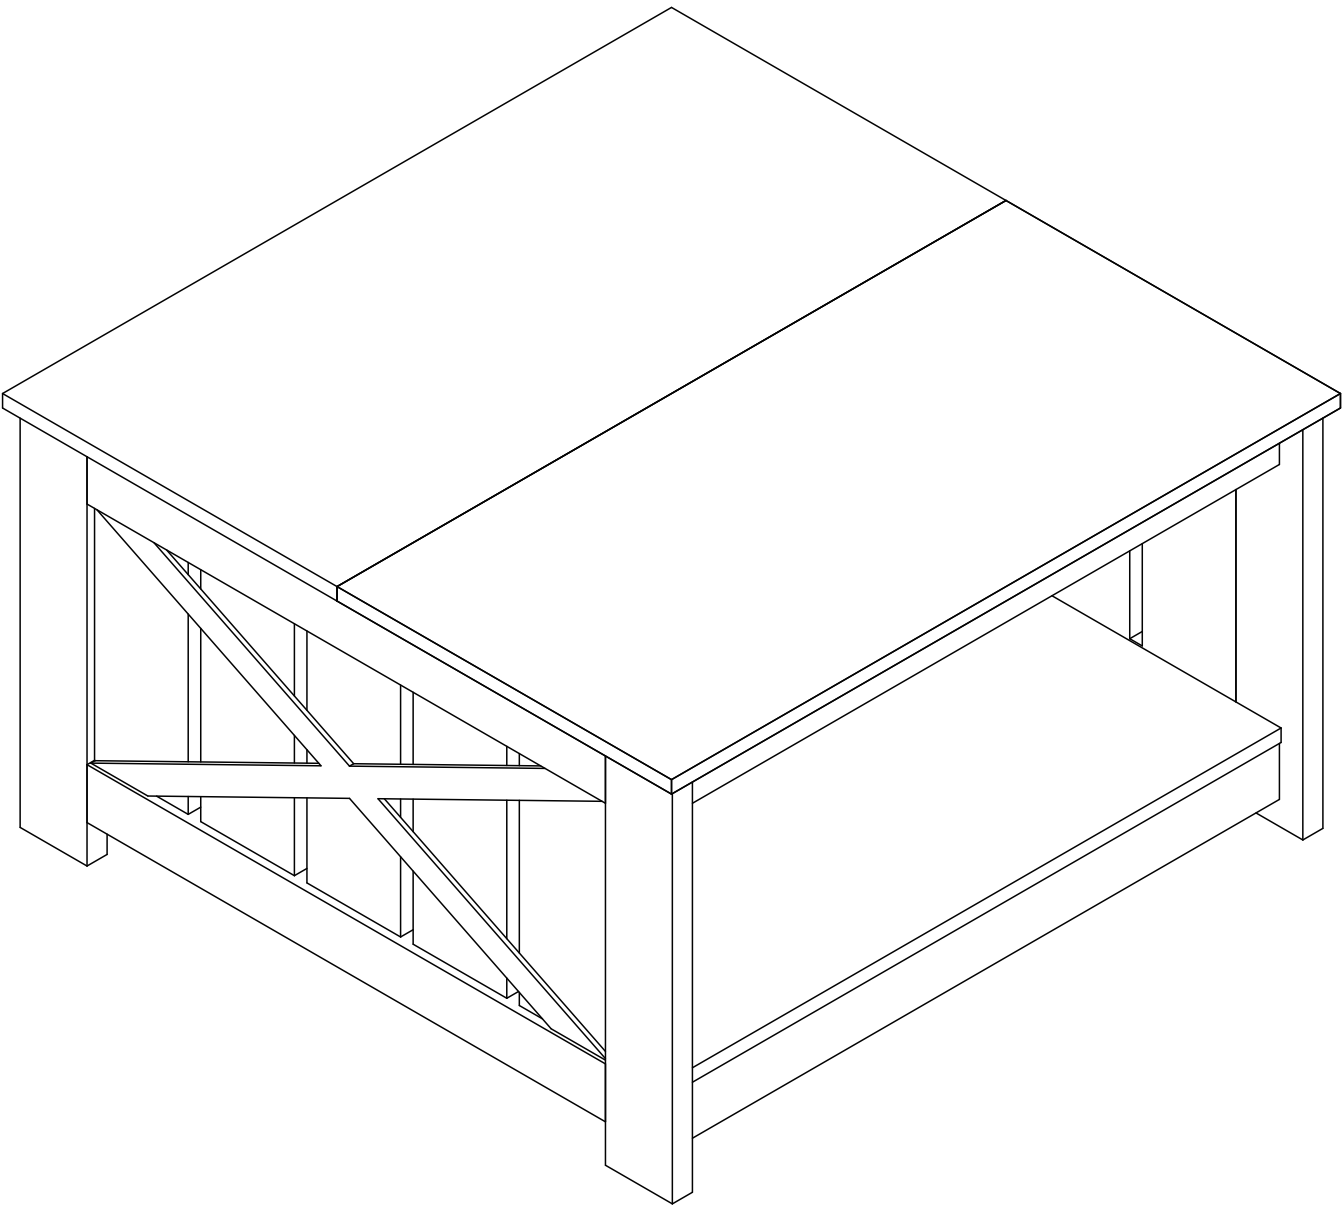


IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY


Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
<div>A</div>	<div> M6×35</div>	X46	<div>E</div>	<div></div>	X2
<div>B</div>	<div></div>	X46	<div>F</div>	<div></div>	X2
<div>C</div>	<div> M4×14</div>	X8			
<div>D</div>	<div> ∅ 8×40</div>	X2		<div></div>	X1

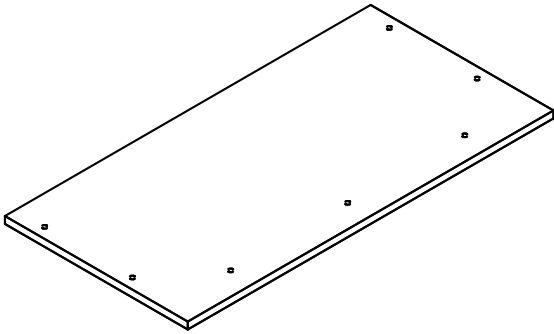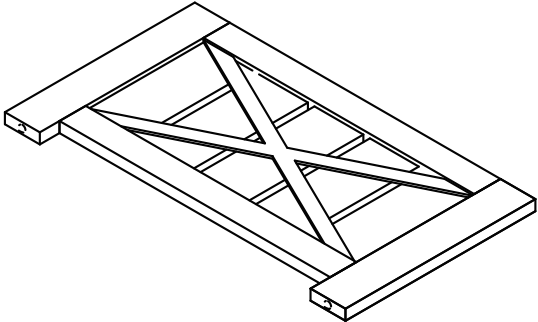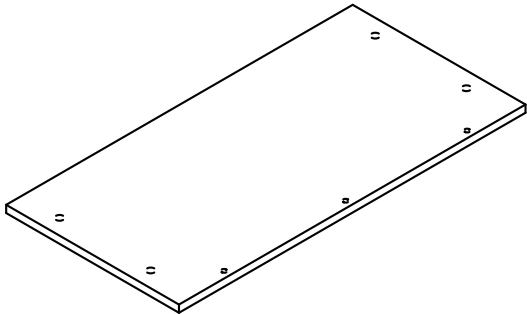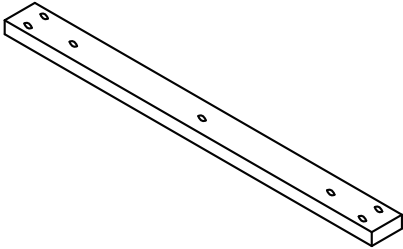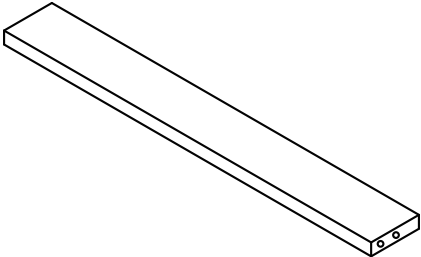Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
1		X2	3		X2
2		X2	4		X4
			5		X1


Explosion Diagram

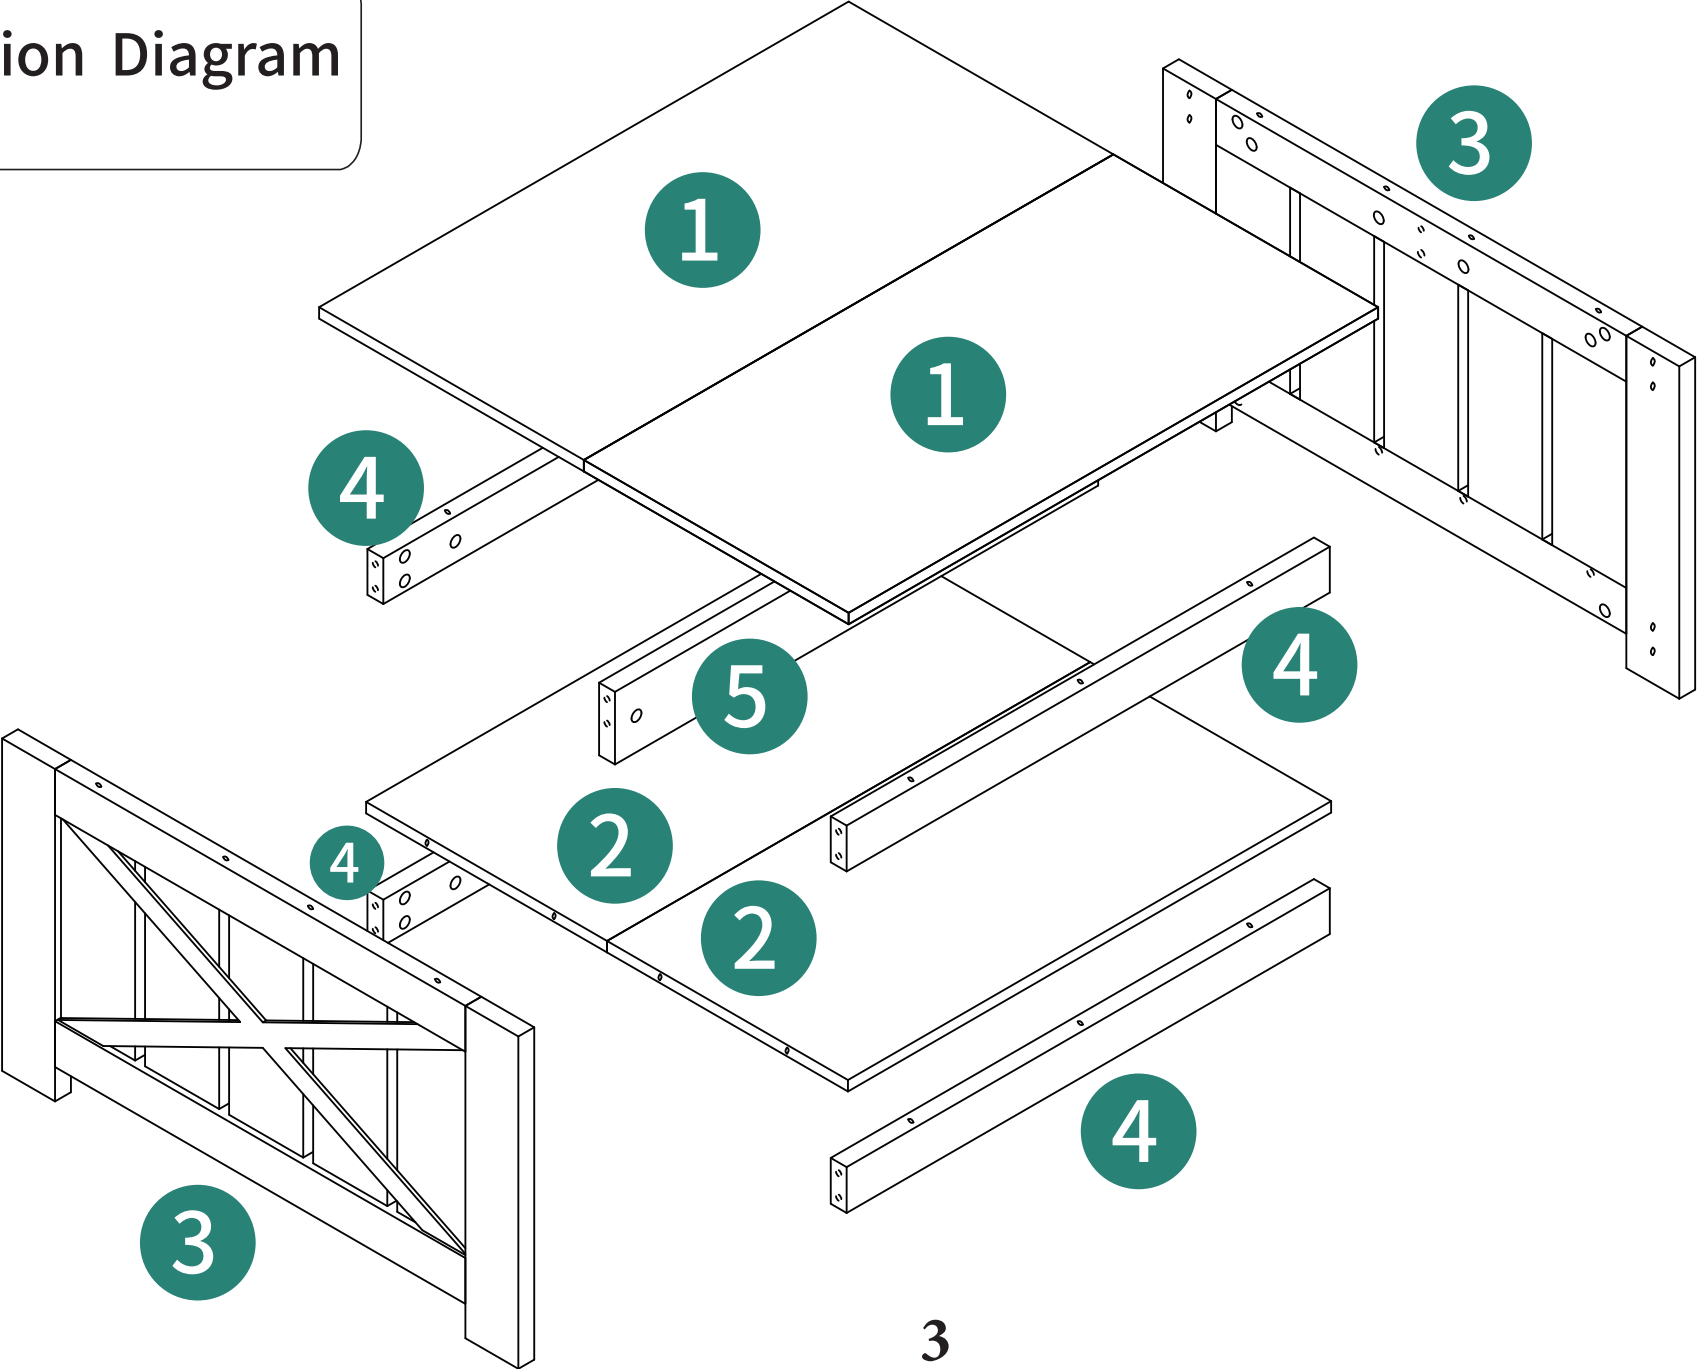


1




Ⓐ 6pcs




Ⓑ 6pcs

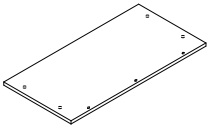


② 2pcs

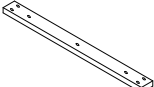


④ 2pcs

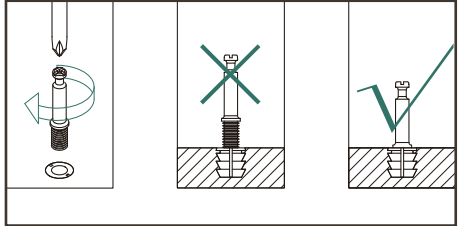


Tighten Ⓐ clockwise until all of their threads are engaged.

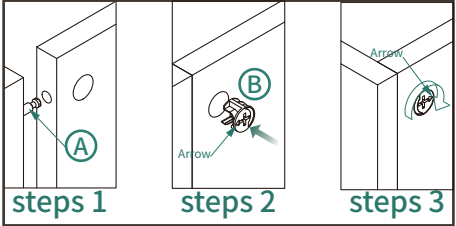


The two boards fit vertically, place Ⓑ and match their holes with Ⓐ then tighten Ⓑ clockwise.

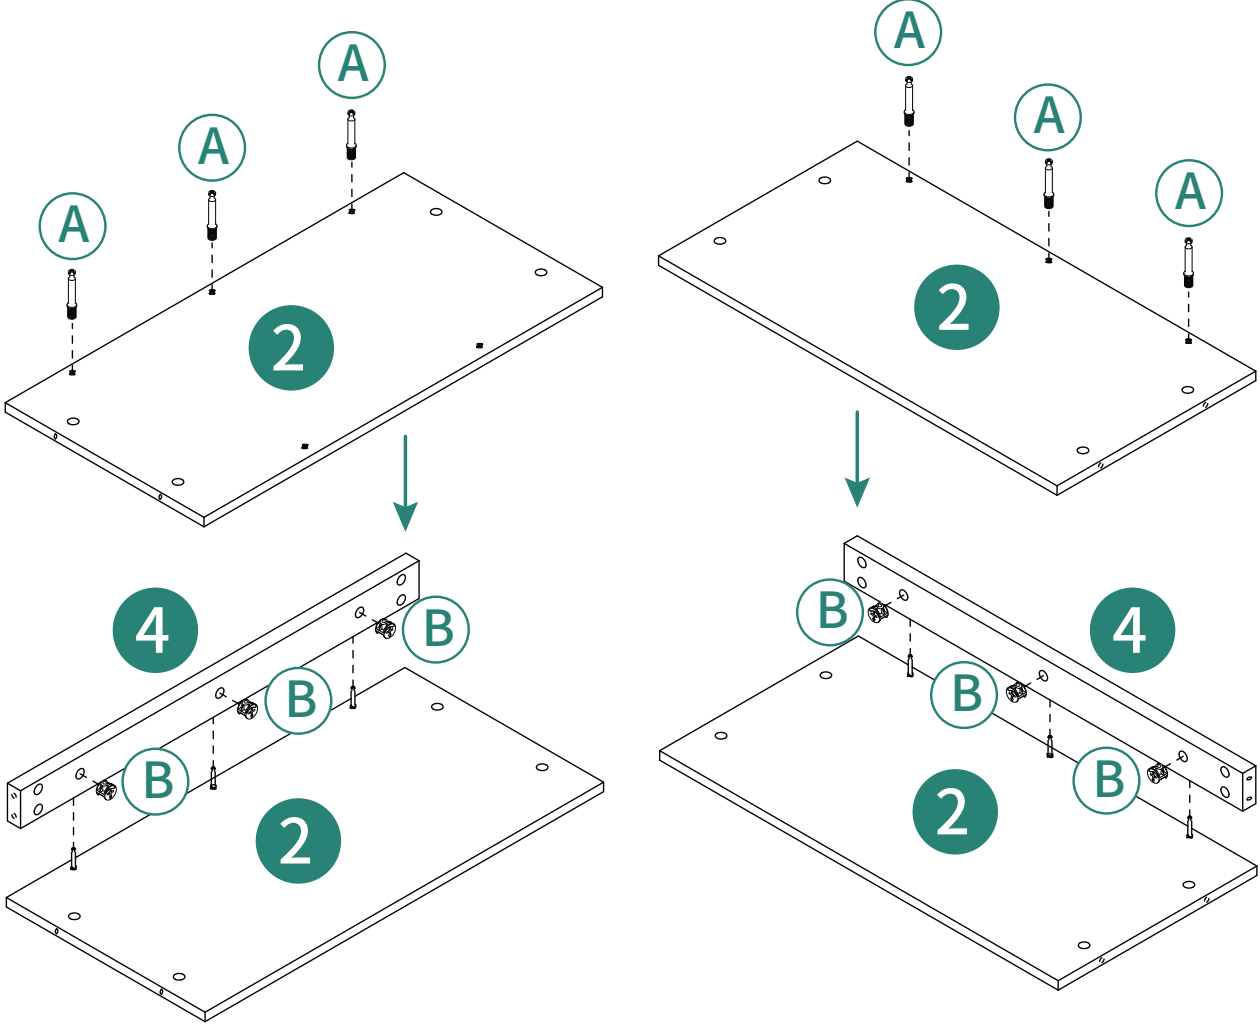


2




Ⓐ 13pcs





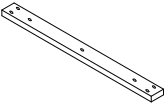
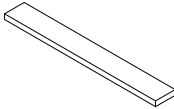
Ⓑ 8pcs

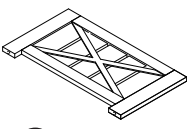


③ 1pcs

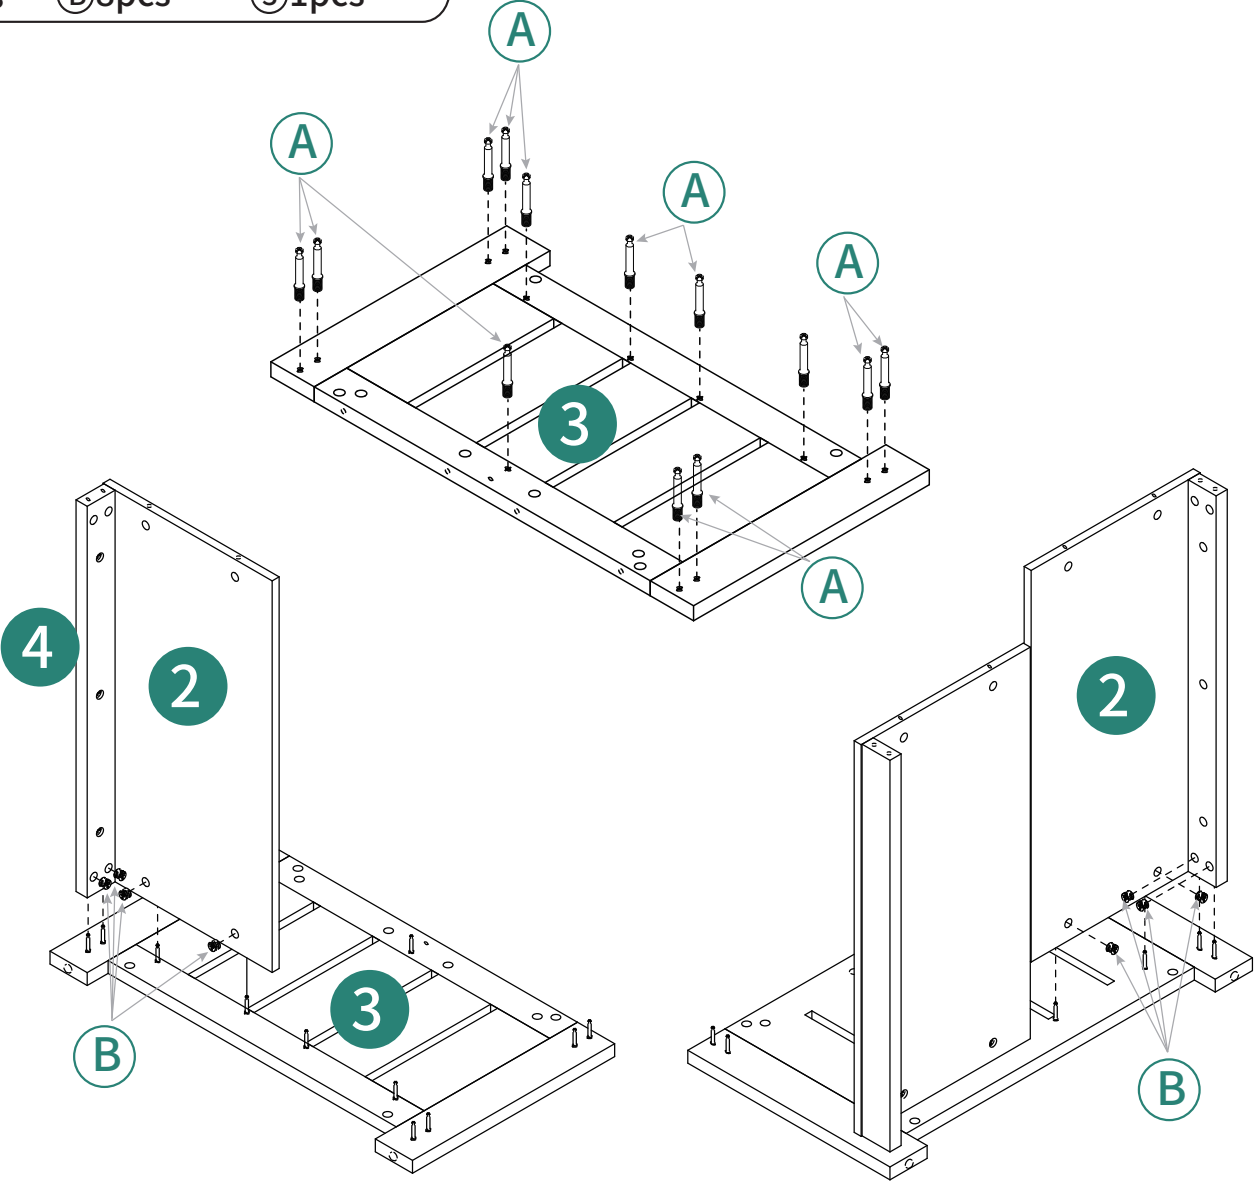


3

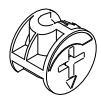-  ③ 5pcs
-  ④ 1pcs
-  ④ 2pcs
-  ⑤ 1pcs


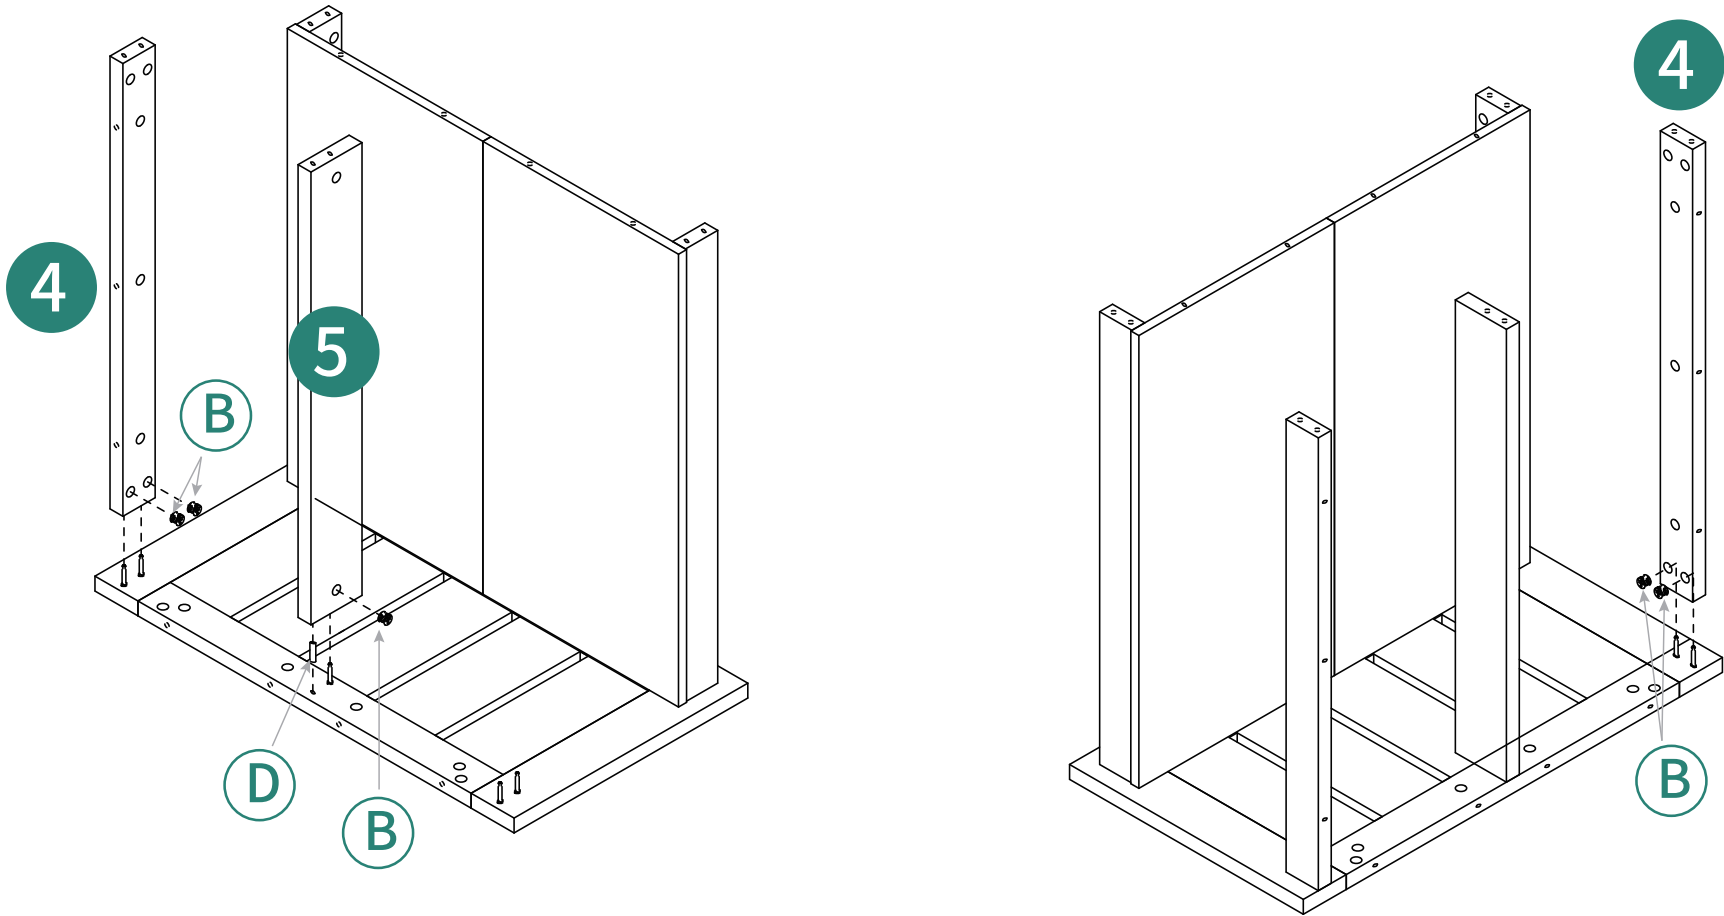


4




-  ① 13pcs
-  ② 13pcs
-  ④ 1pcs
-  ③ 1pcs

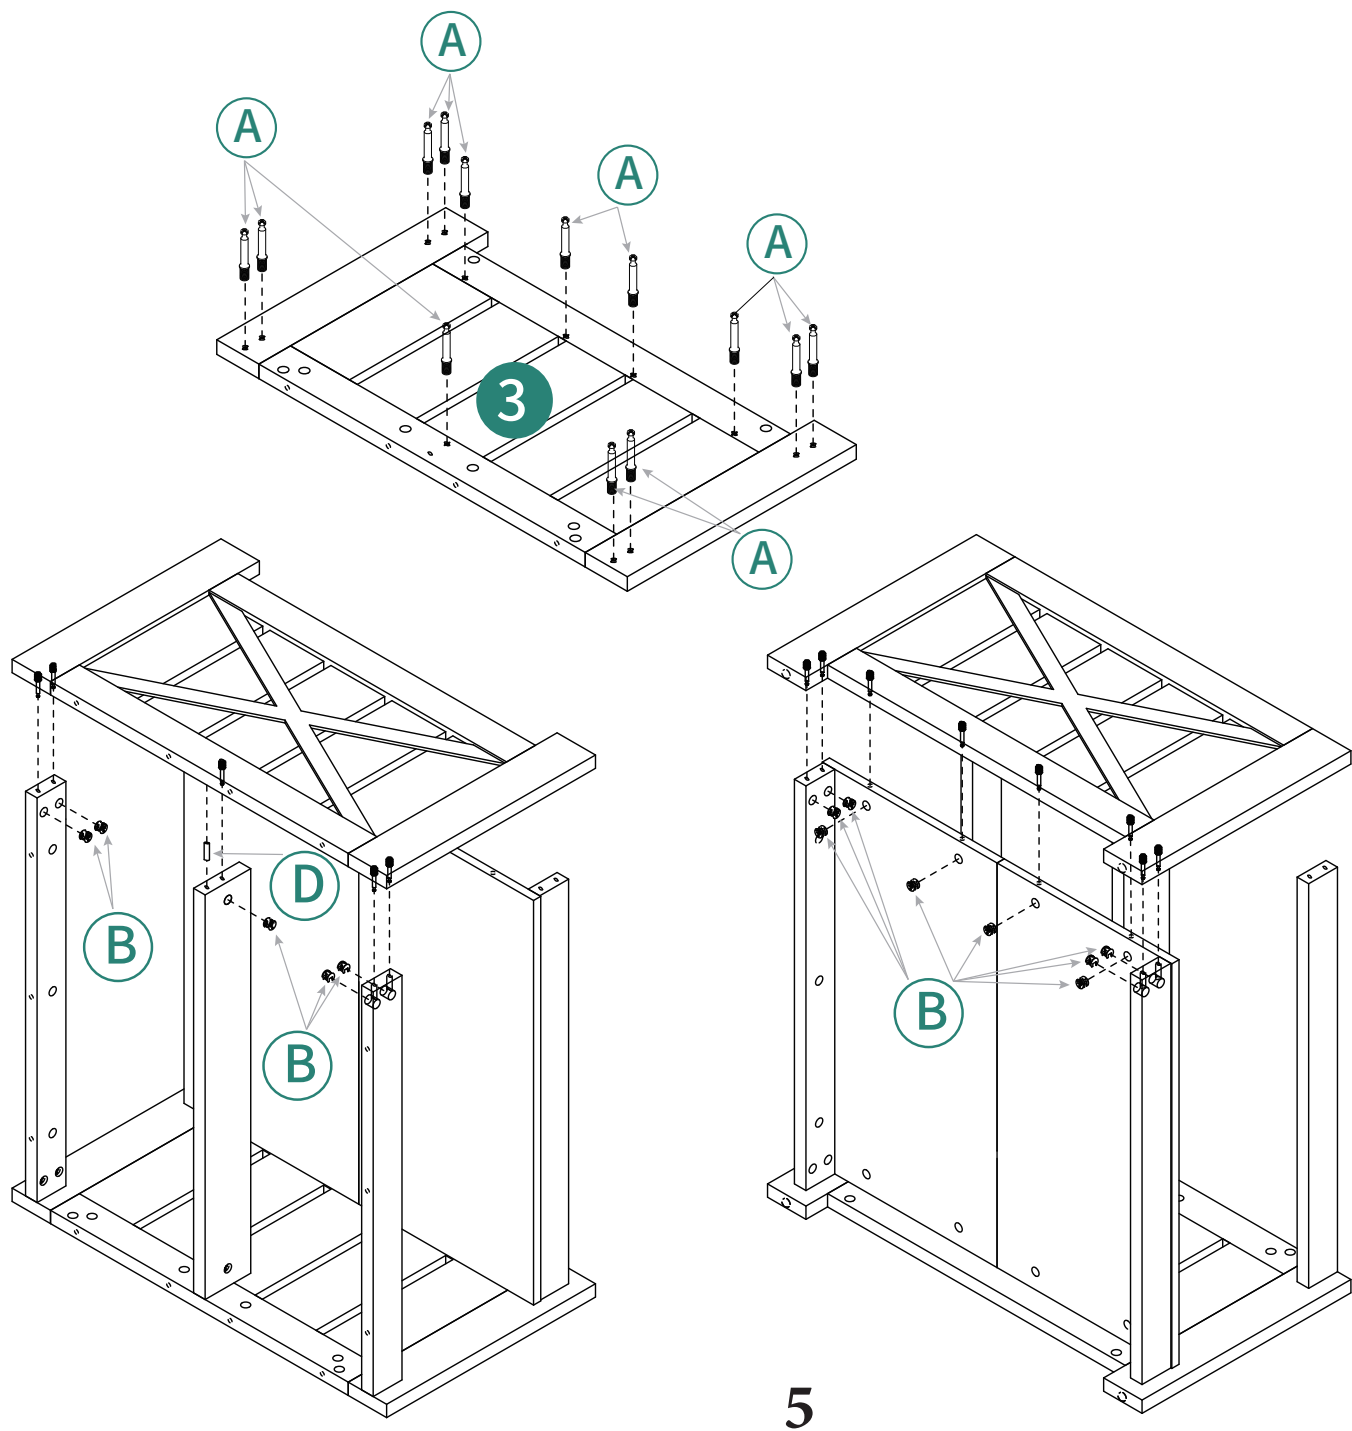


5

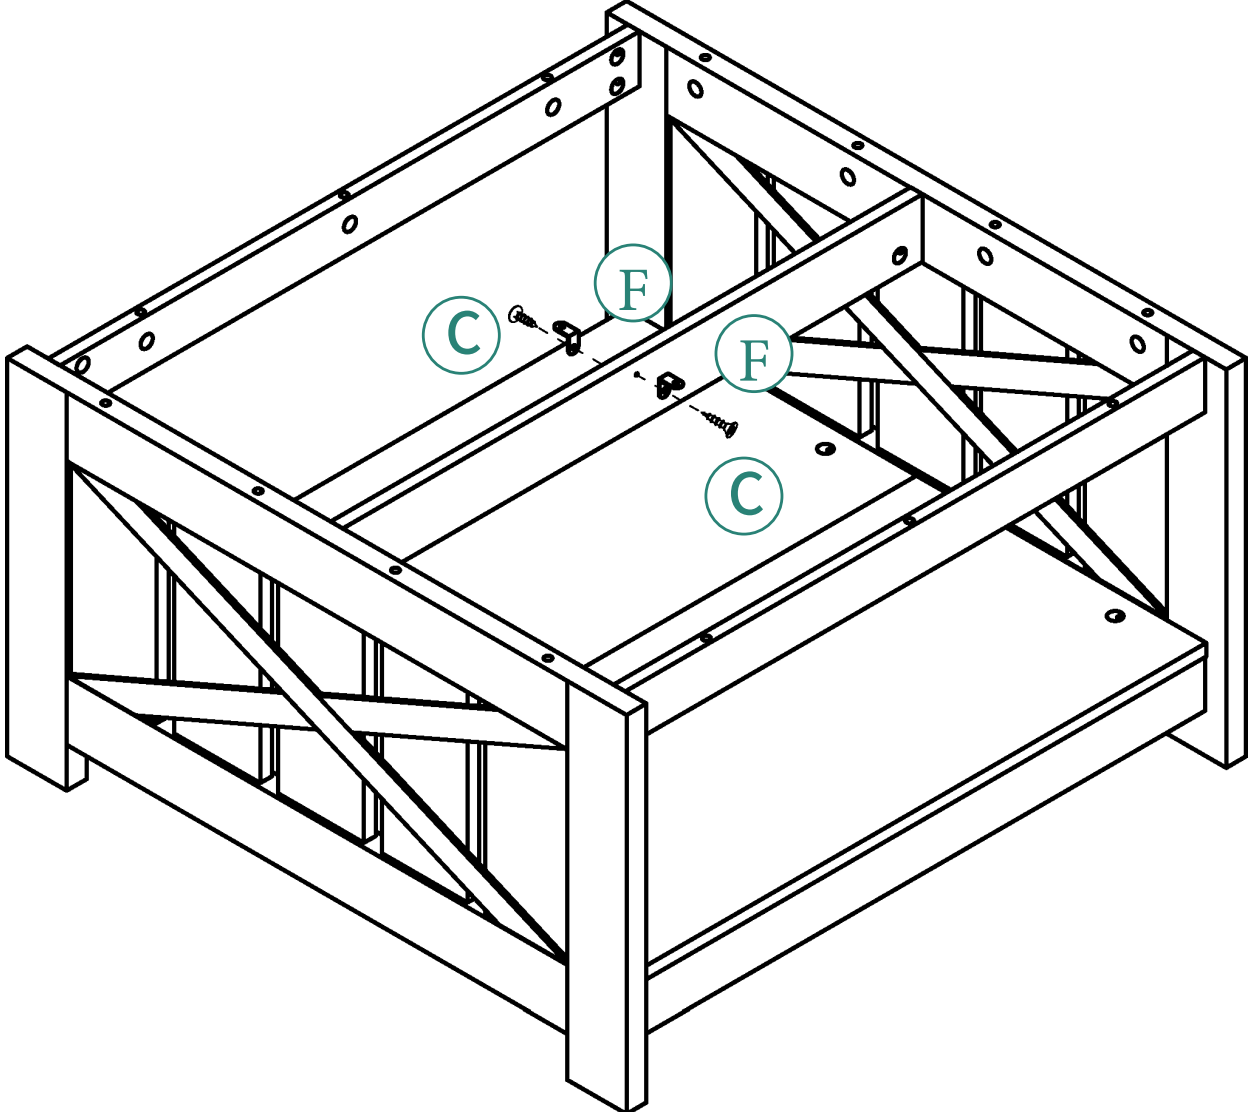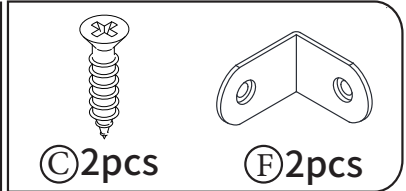


6

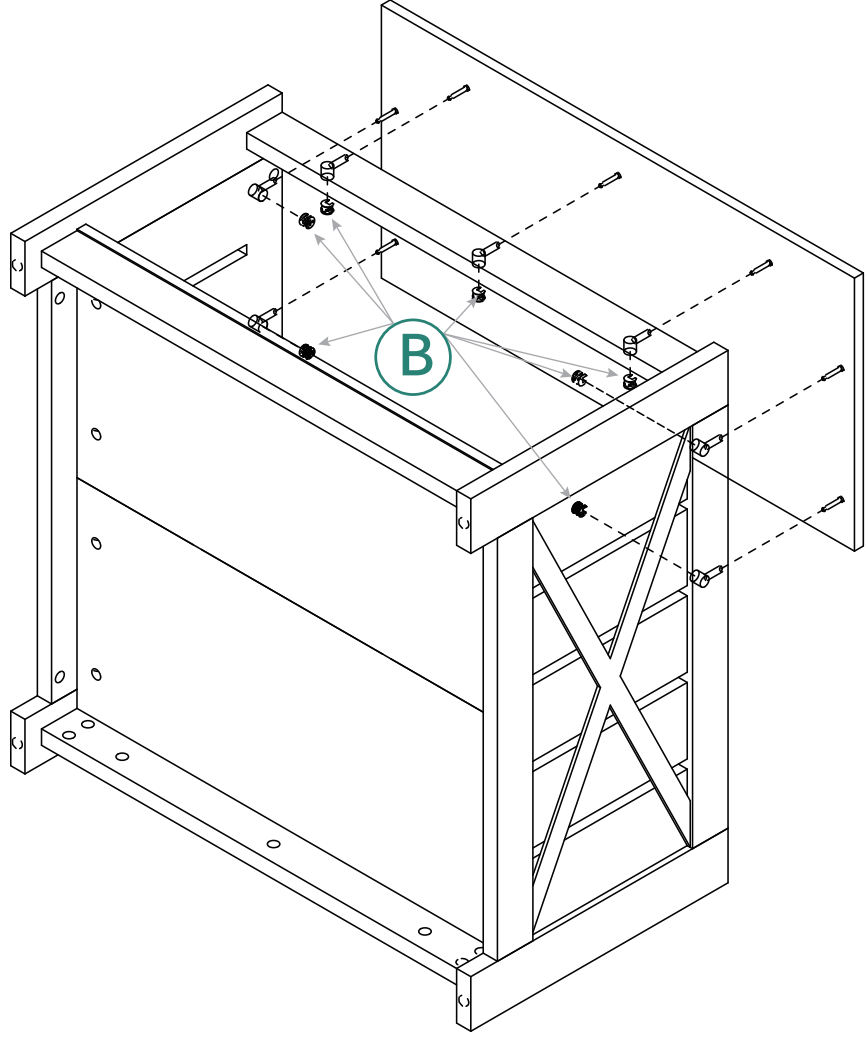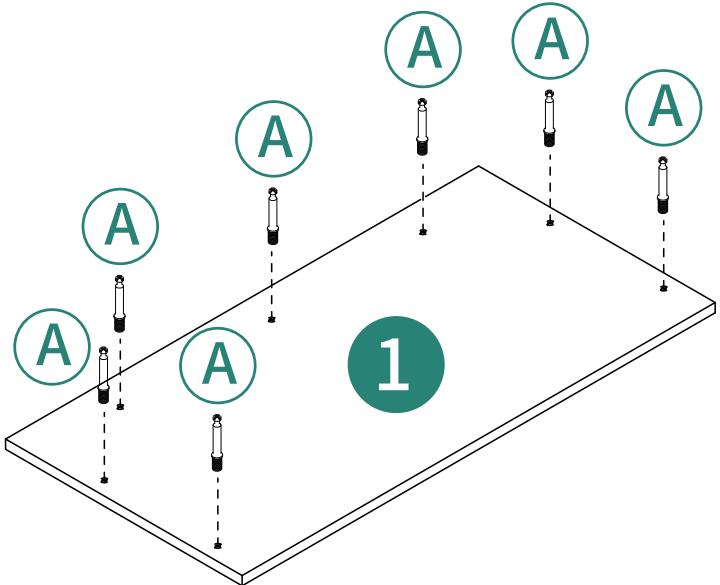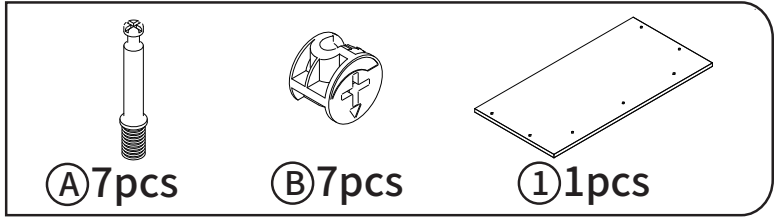


7





A 7pcs




B 7pcs

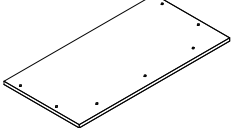


1 1pcs

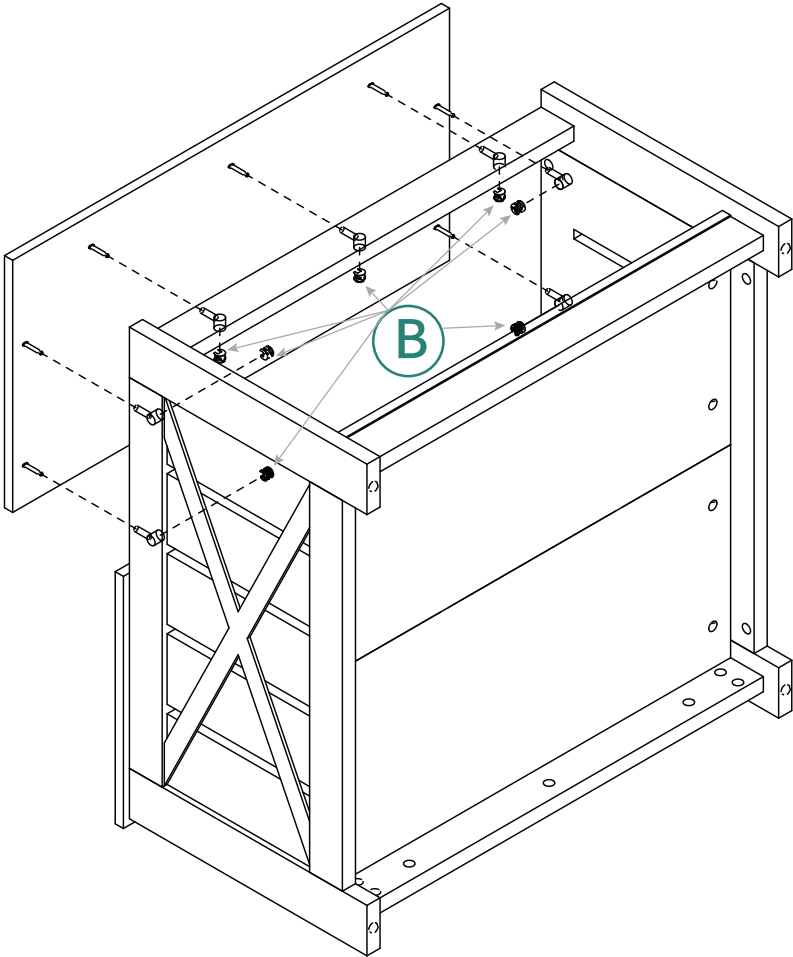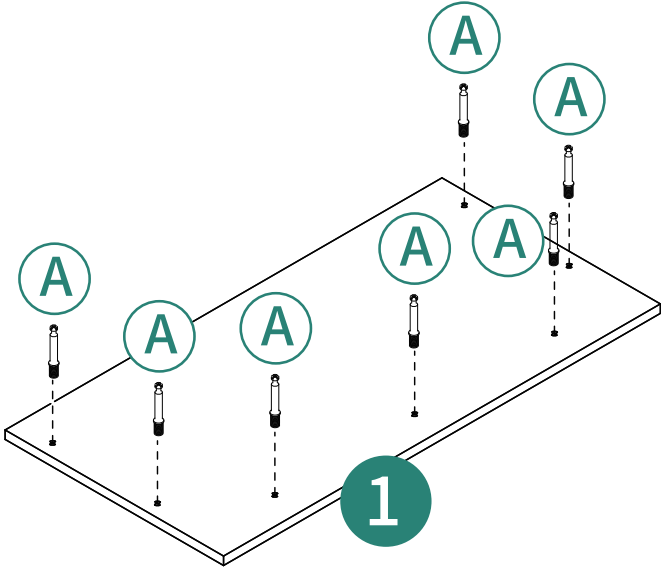


8




C 4pcs

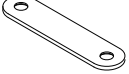


E 2pcs

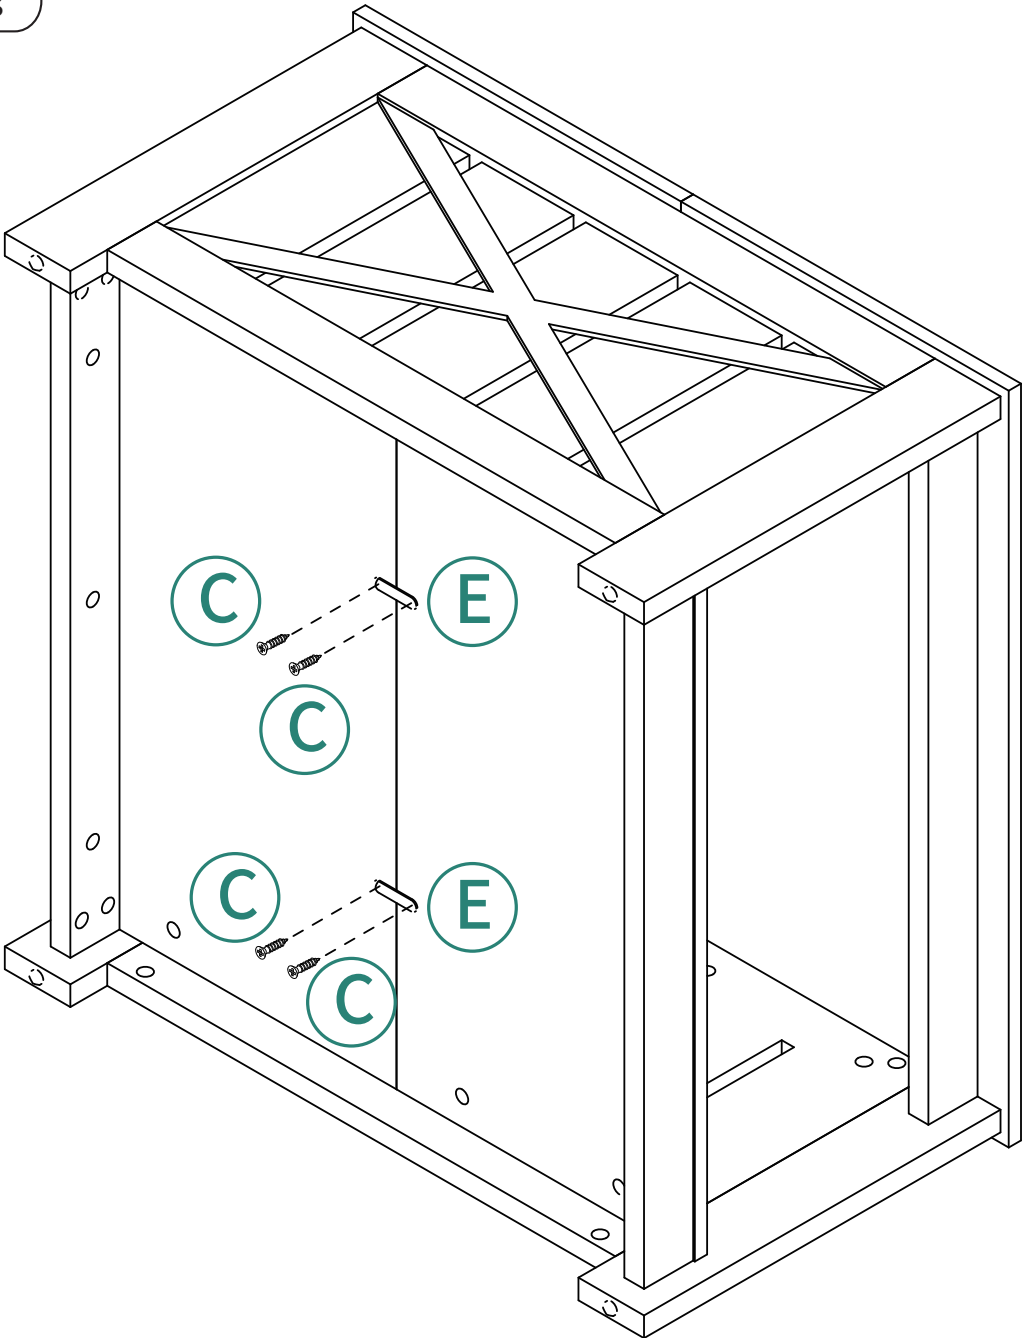

9

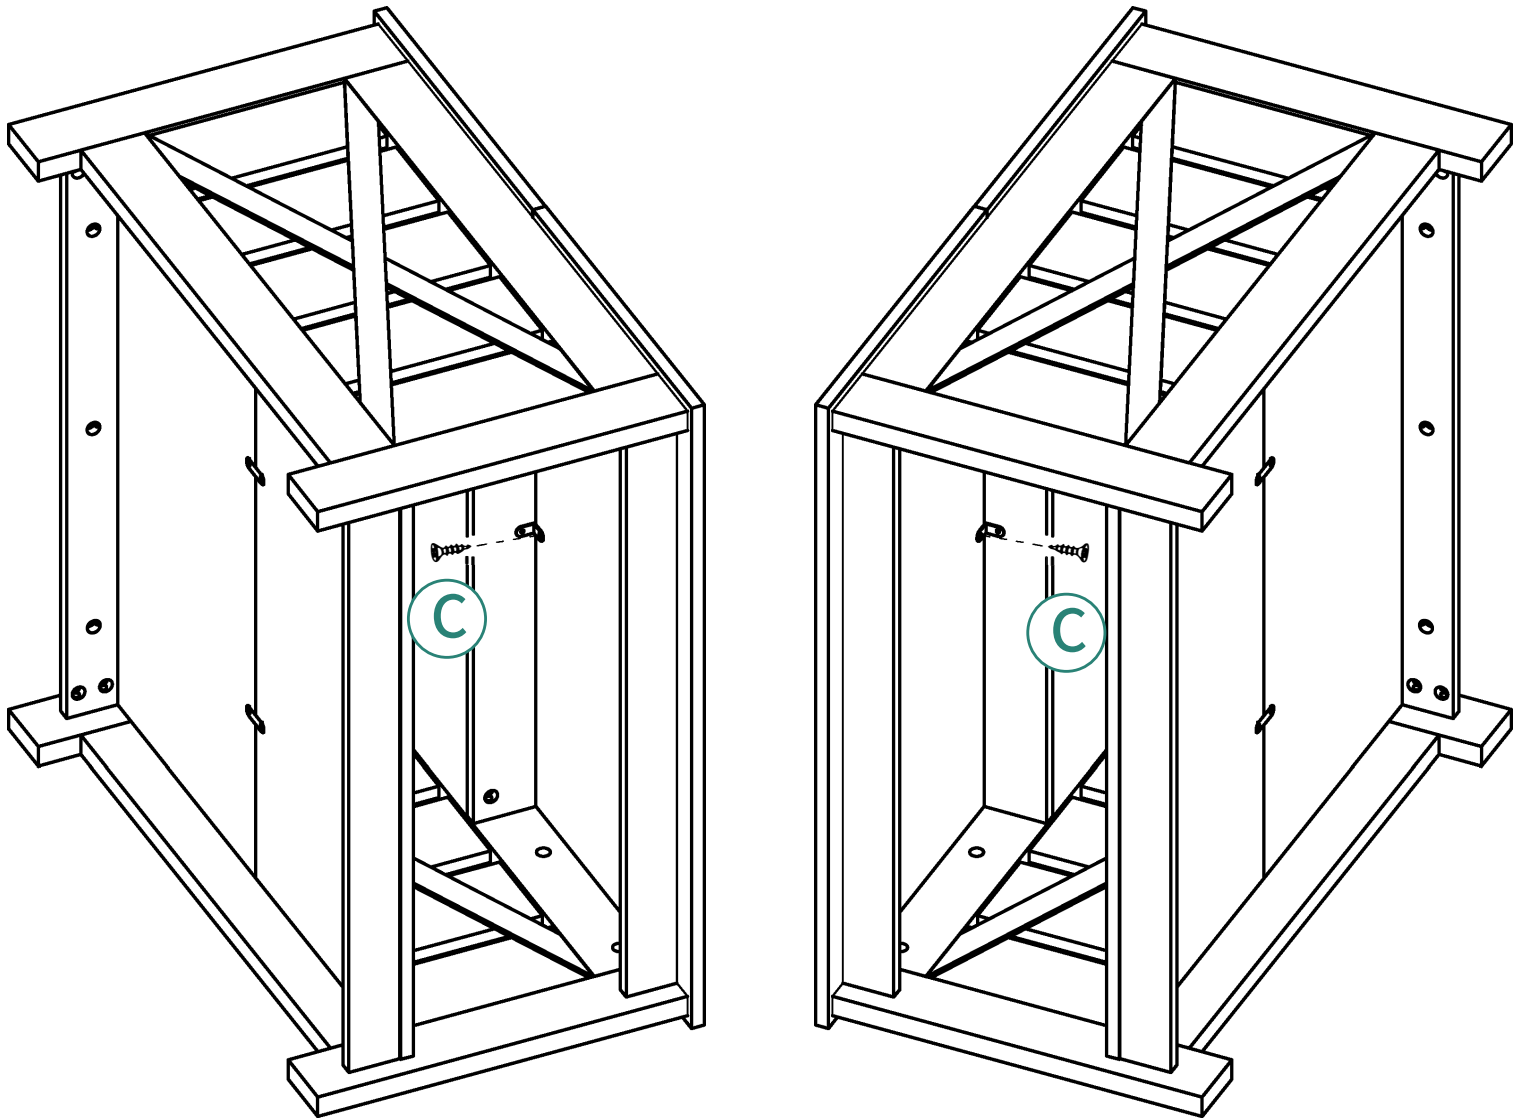

10

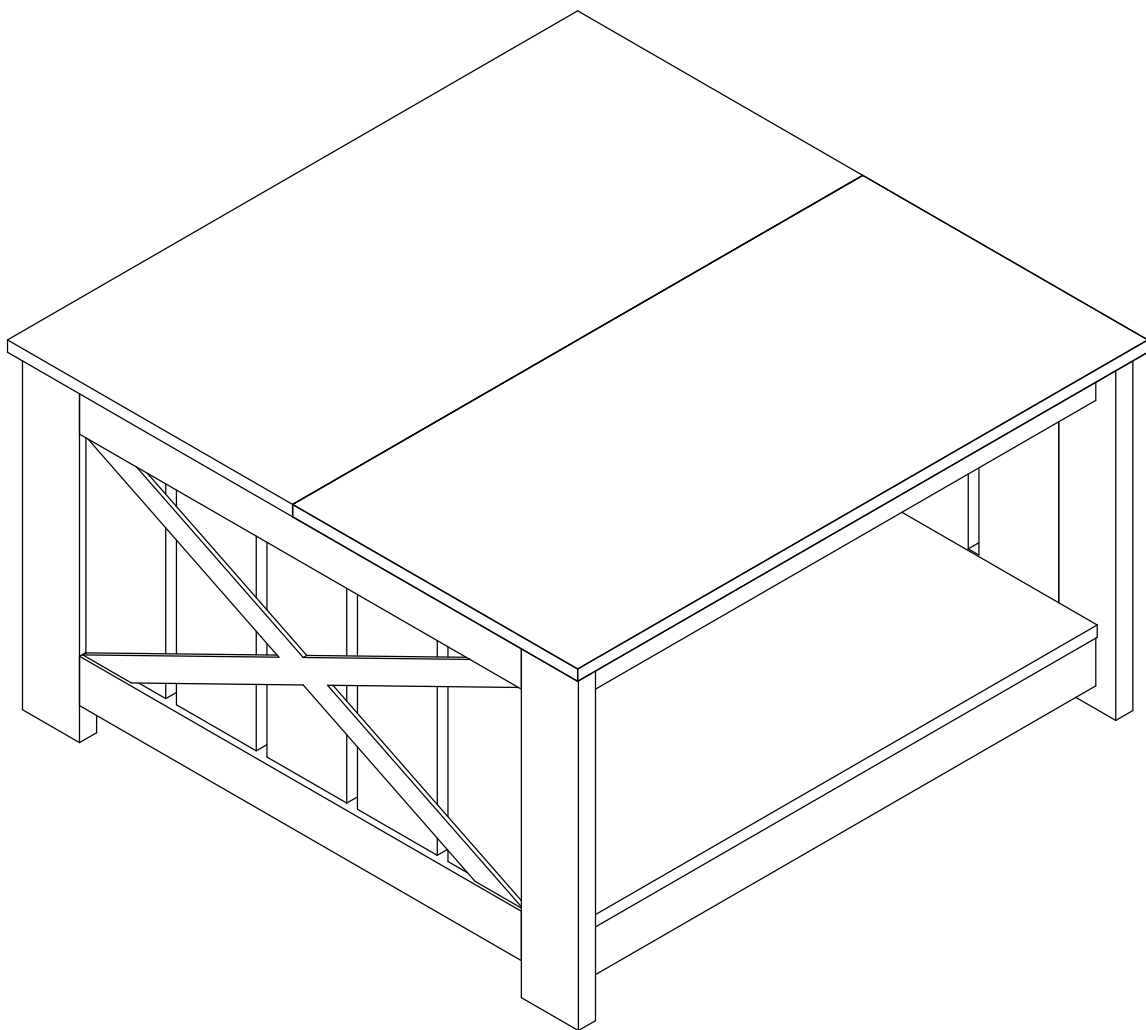

Installation Completed