


AI-FPSC6DRSC


Assembly Instructions

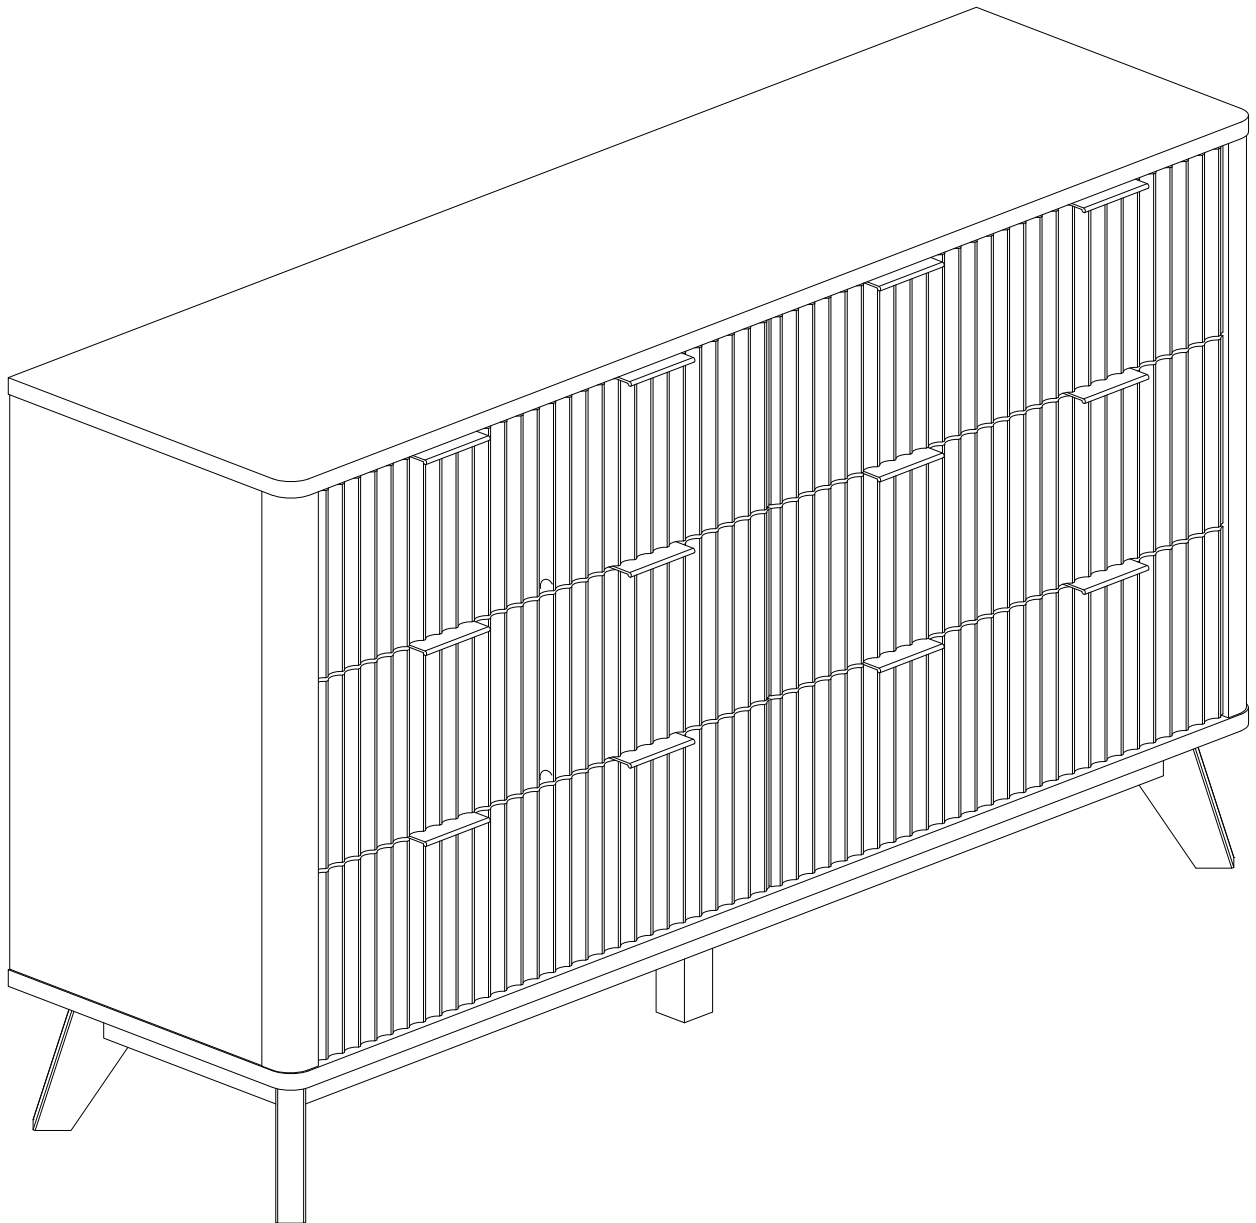


Customer Service E-mail Address: xiuxiumaoyius@163.com

General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are : wood dowels , screws and bolts.
- V. The provided glue is to secure wood dowels in place . When first inserting dowels , locate the appropriate hole for the dowel , place a small amount of glue in the hole and insert the dowel . Wipe away excess glue immediately.

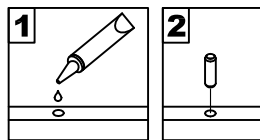


In future assembly steps when dowels are necessary to attach assembly parts together , place a small amount of glue on the end of the dowel before attaching parts together . Wipe away excess glue immediately.

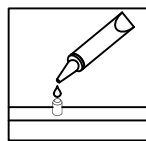




- VI. A Phillips head screwdriver is required for the assembly of this product .

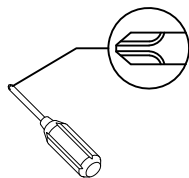





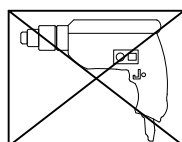












- VII. Power tools should not be used to assemble this product .

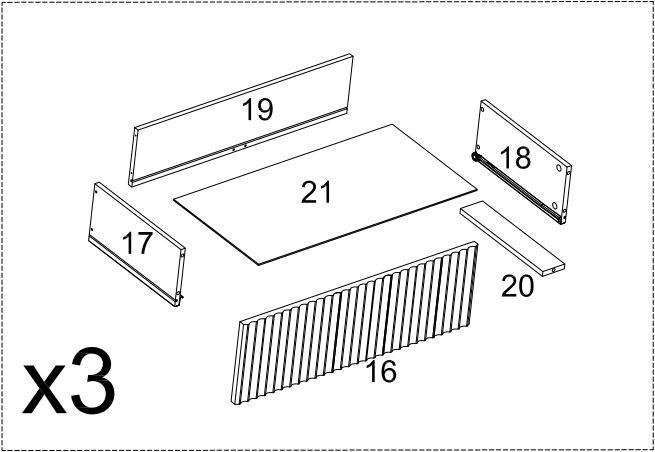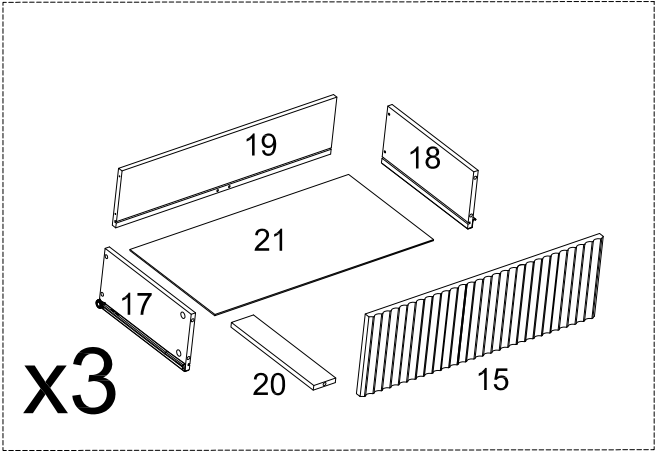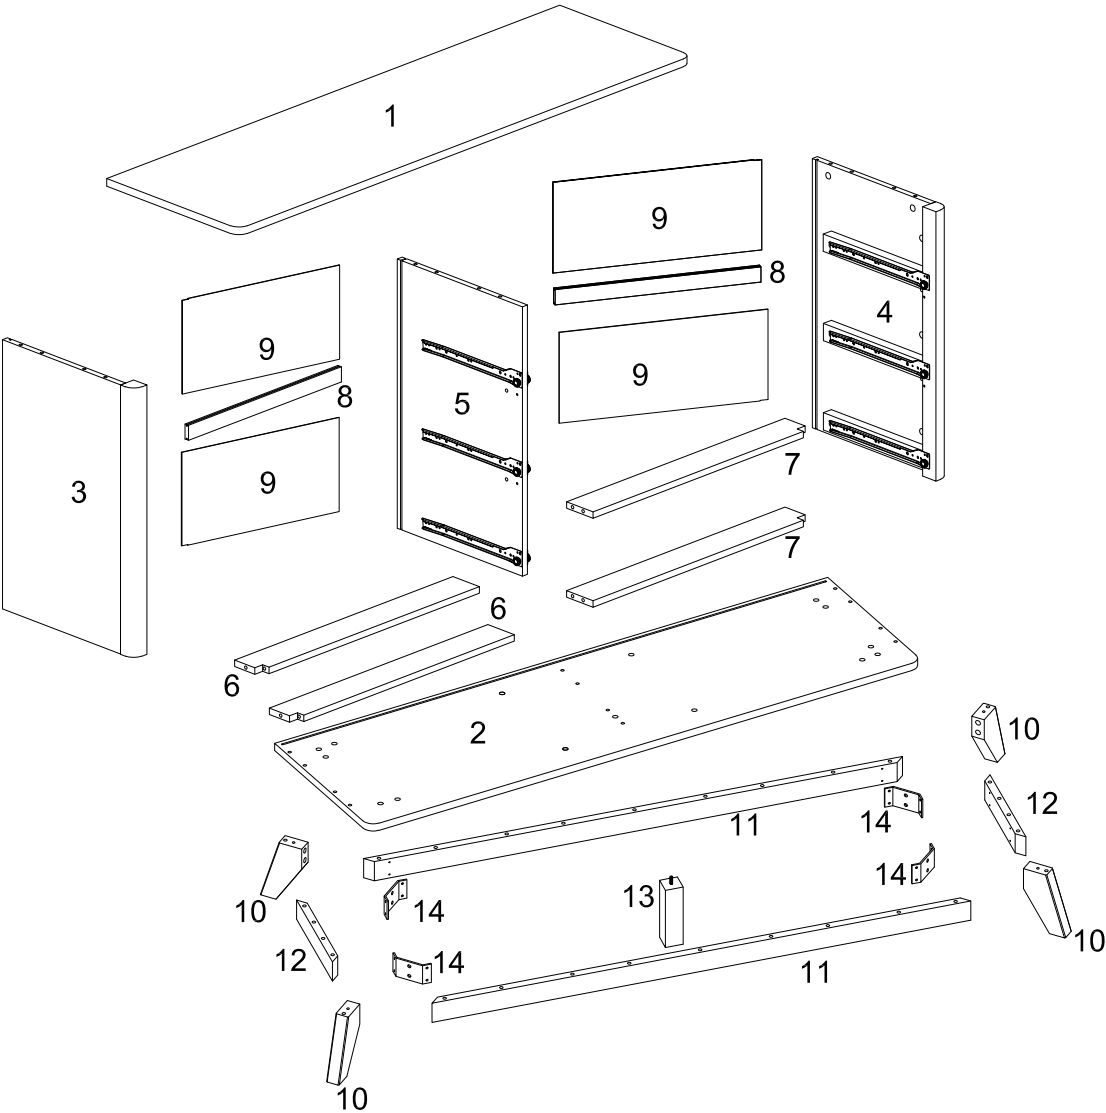


Parts List




Hardware List

A		Ø8x30mm	Dowel	38 pcs
B		Ø6x35mm	Cam bolt	44 pcs
C		Ø15x11mm	Long cam lock	14 pcs
D		Ø30mm	Cam cover	24 pcs
E		Ø15x10mm	Short cam lock	30 pcs
F		Ø4x38mm	Screw	36 pcs
G		Ø3x12mm	Screw	24 pcs
H		Ø5x15mm	Screw	16 pcs
I		1/4x28mm	Bolt	8 pcs
J		1/4x50mm	Bolt	12 pcs
K		M4	Allen Wrench	1 pcs
L			Handle	12 pcs
M			Glue tube	1 pcs
N			Plastic wedge	16 pcs
O		Ø3x17mm	Flat-head screw	16 pcs
P		Ø6x50mm	Screw	10 pcs
Q			Tipping Restraint Hardware	1 set

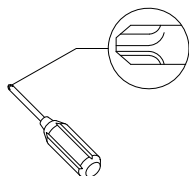


Philips head screwdriver required for assembly
(not included)


Step 1

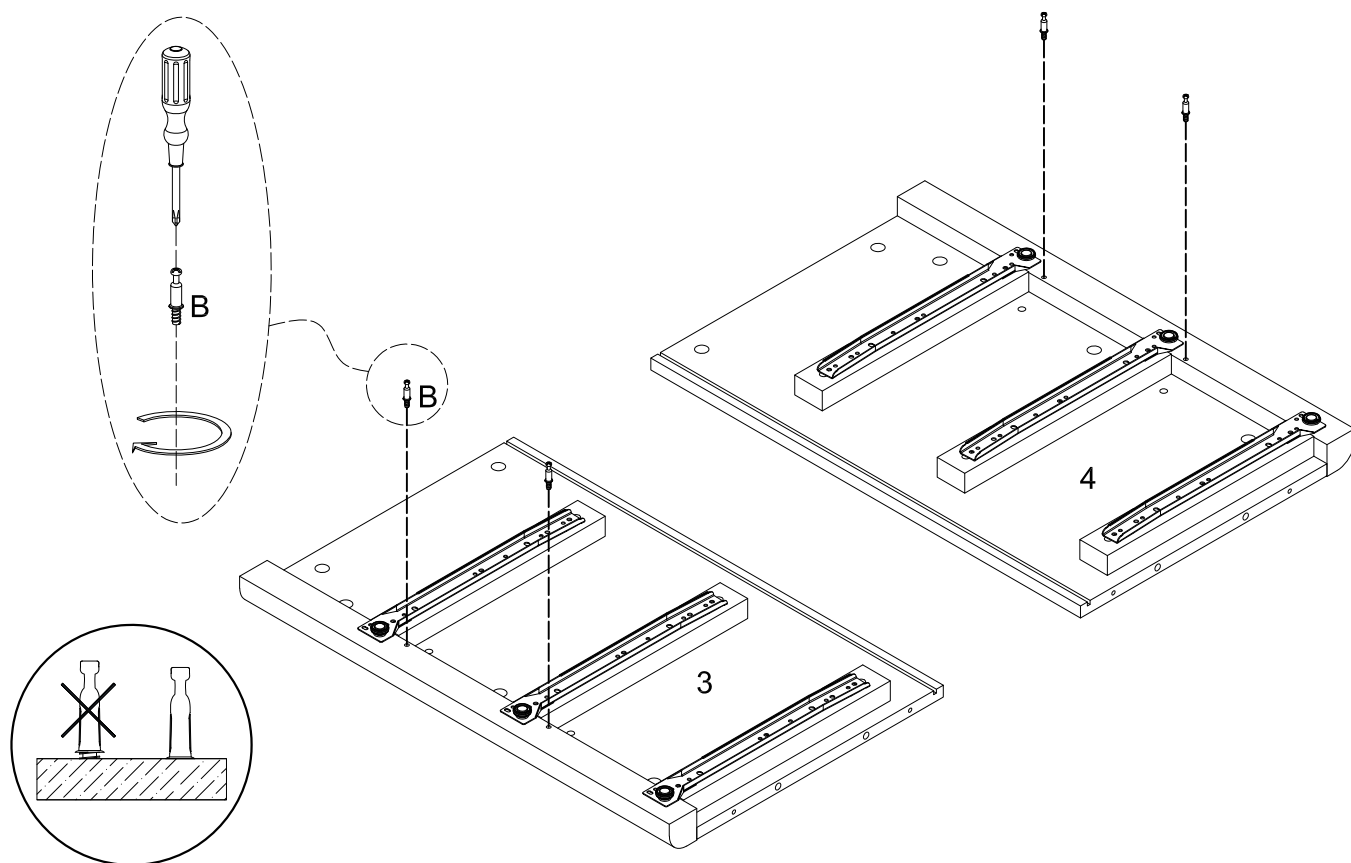


Step 2

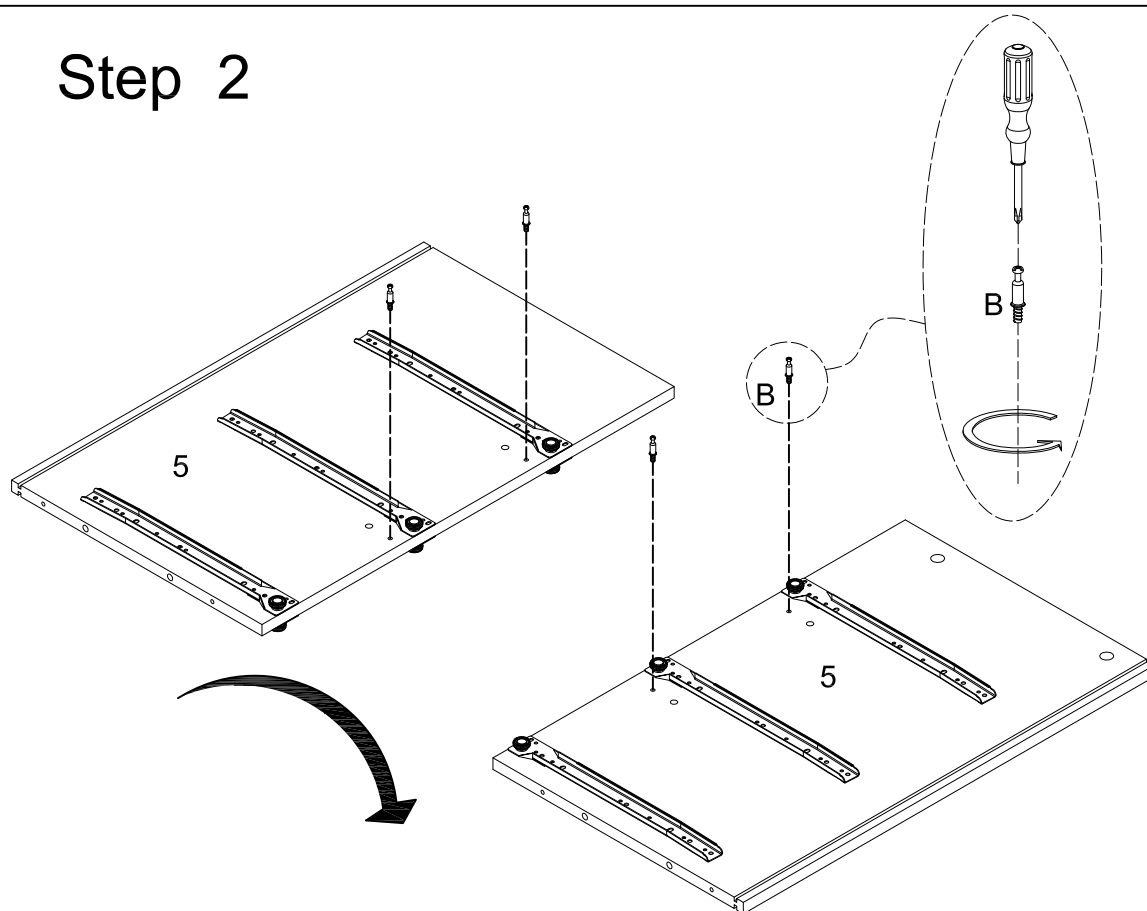


Step 3

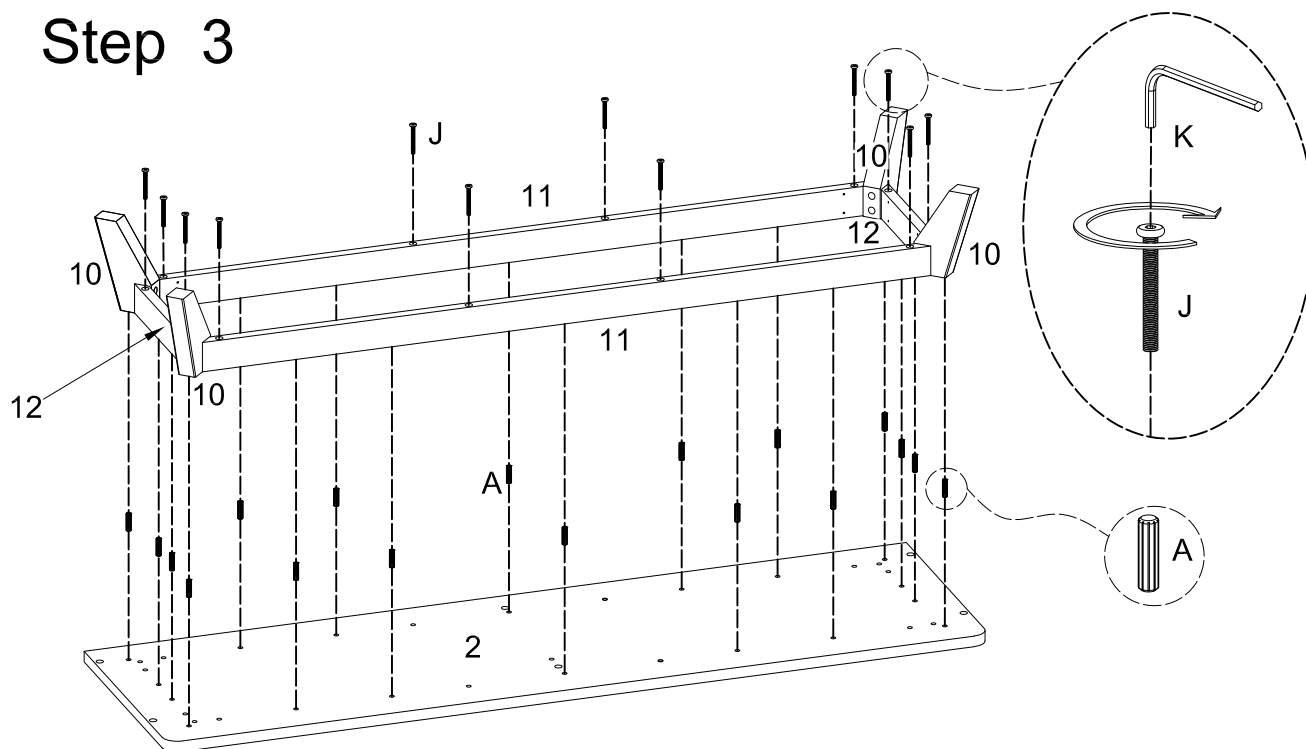


Step 4

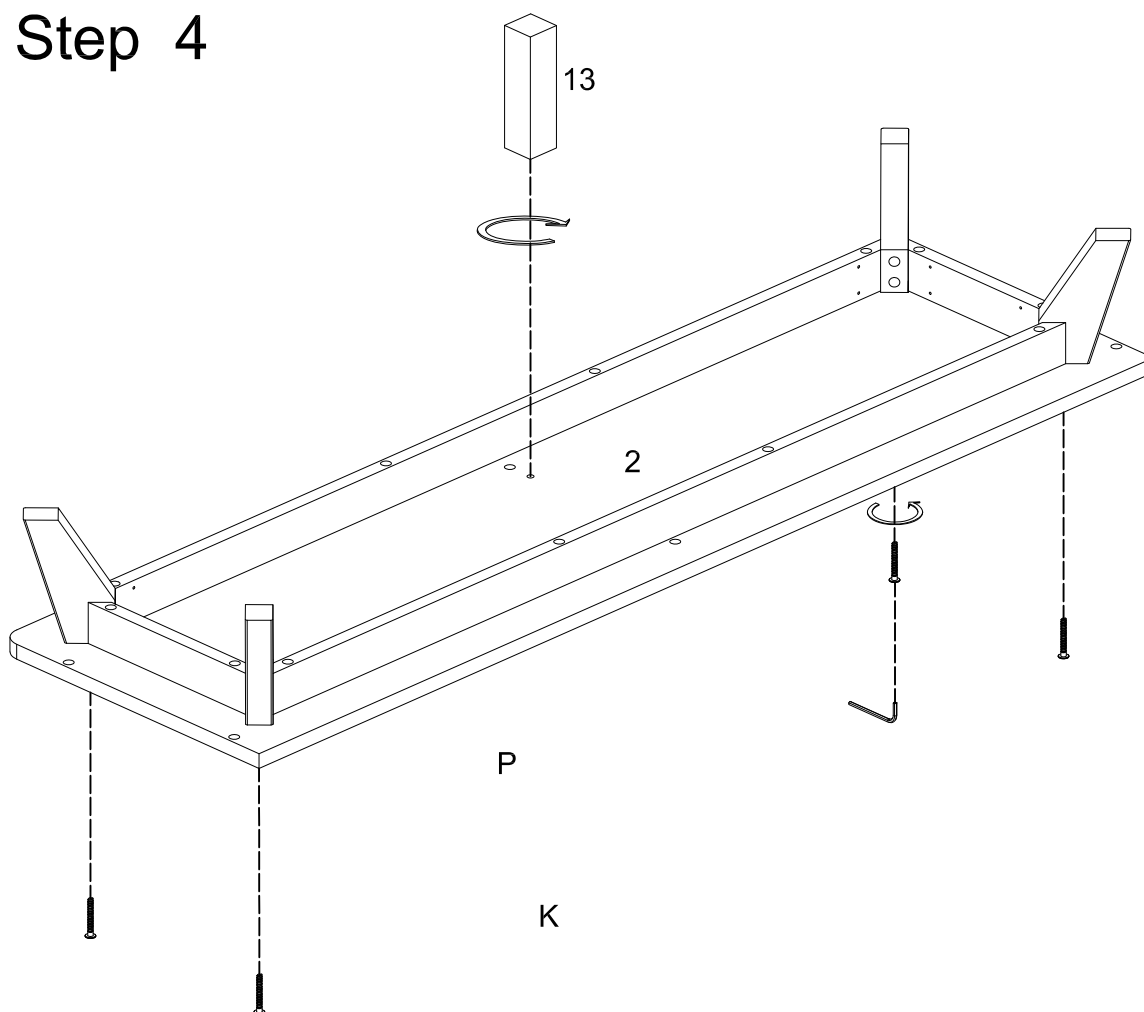



Step 5

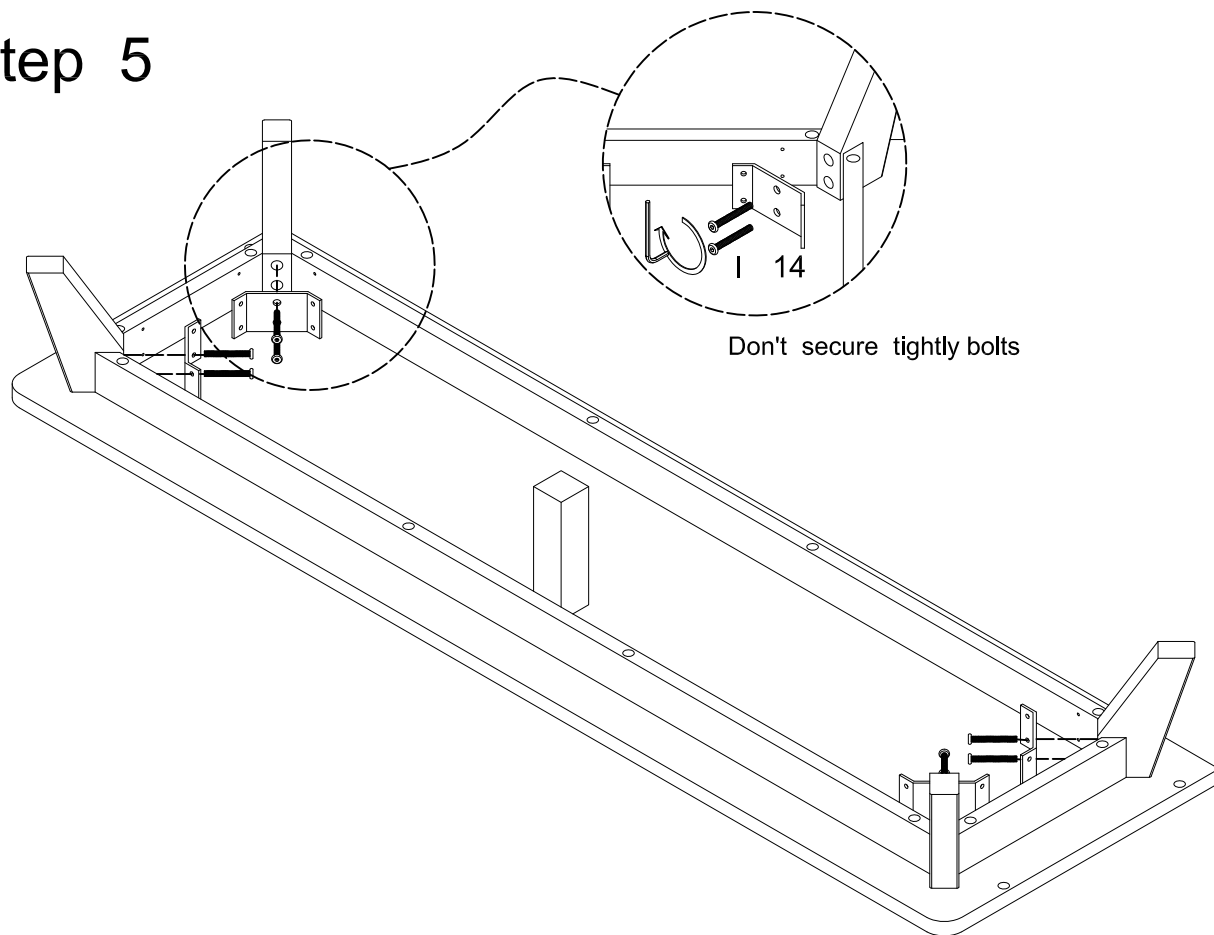



Step 6

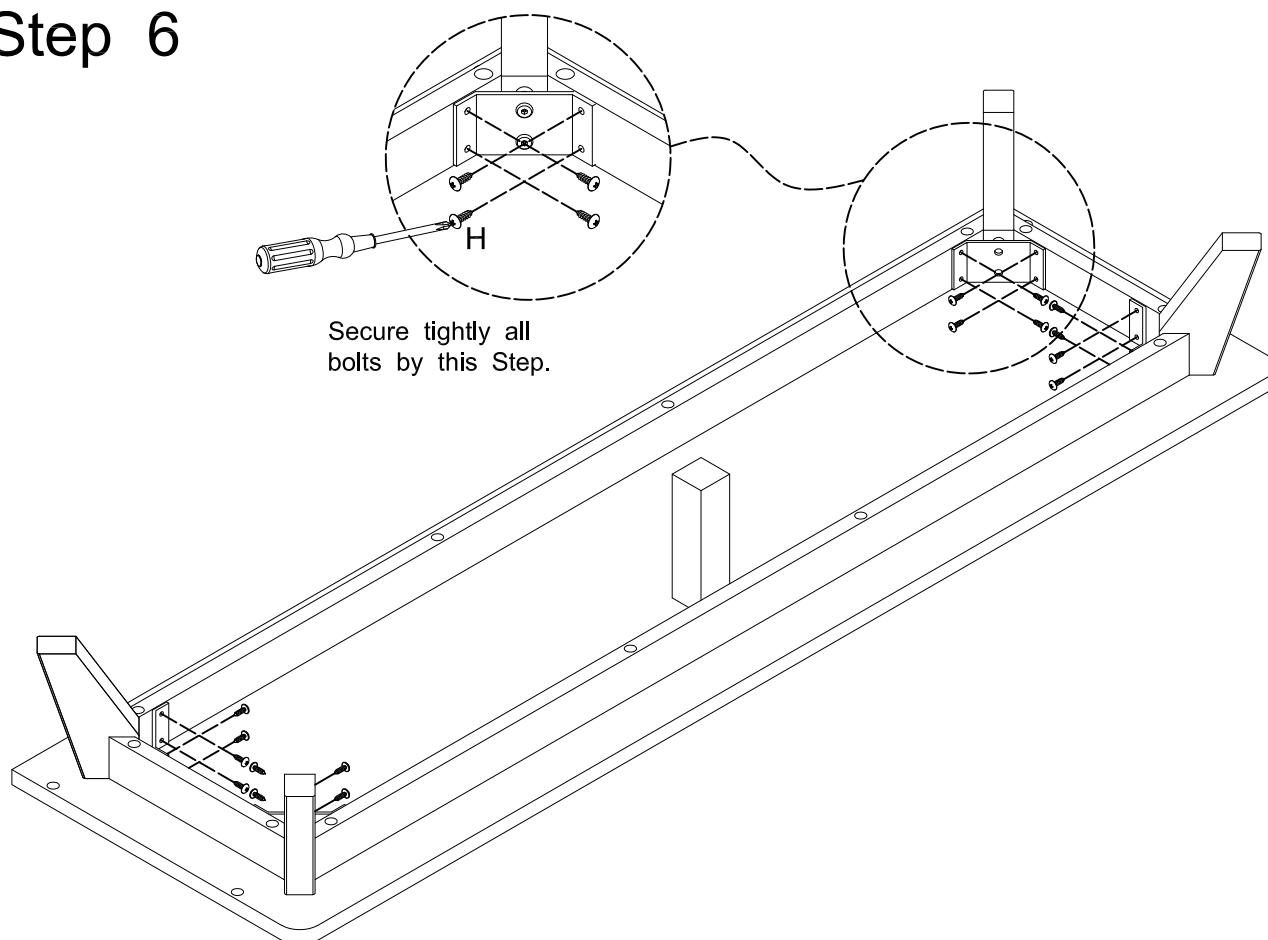



Step 7

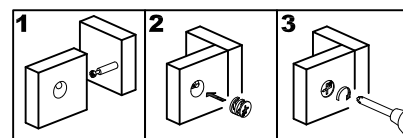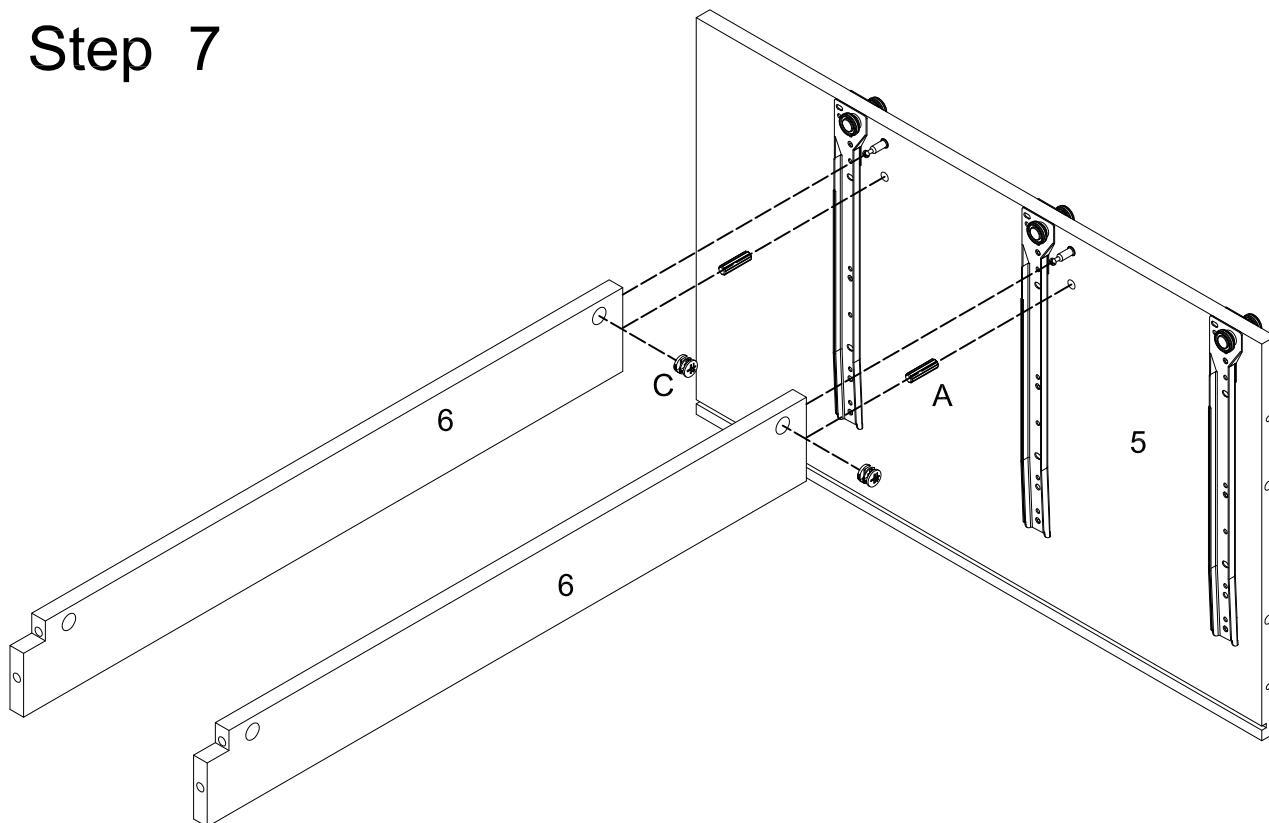



Step 8

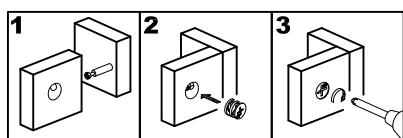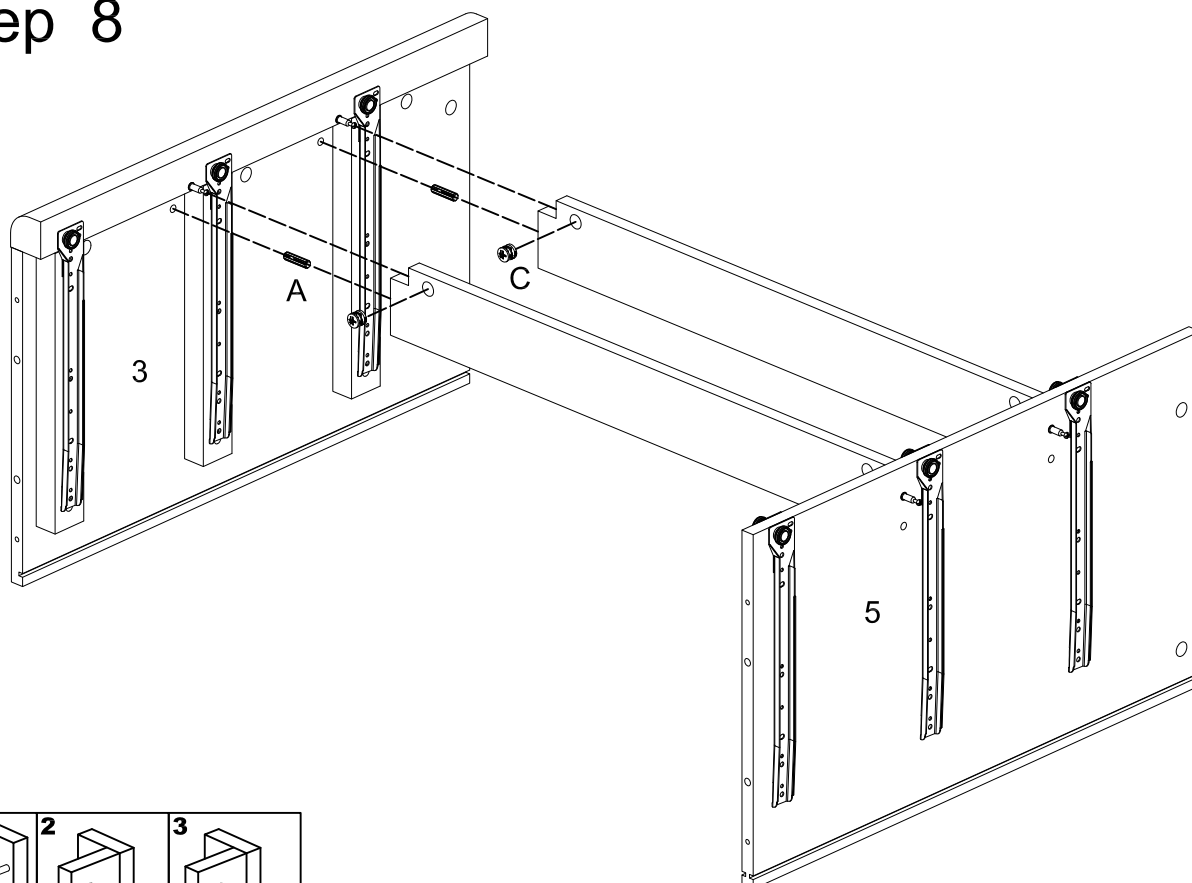


Step 9

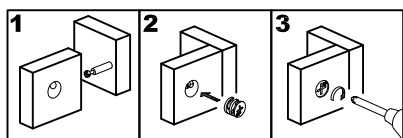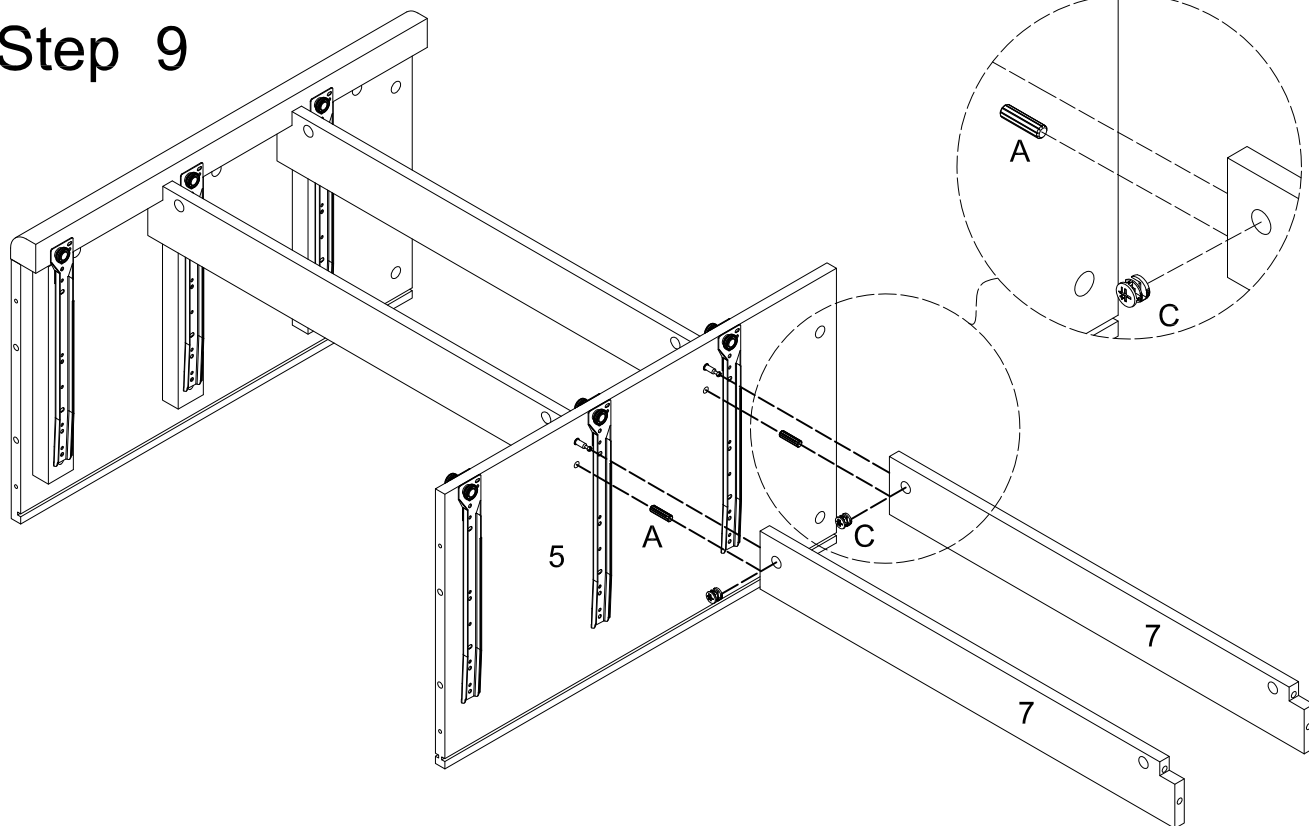


Step 10

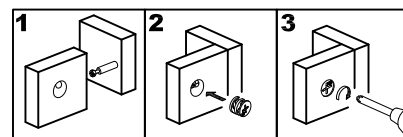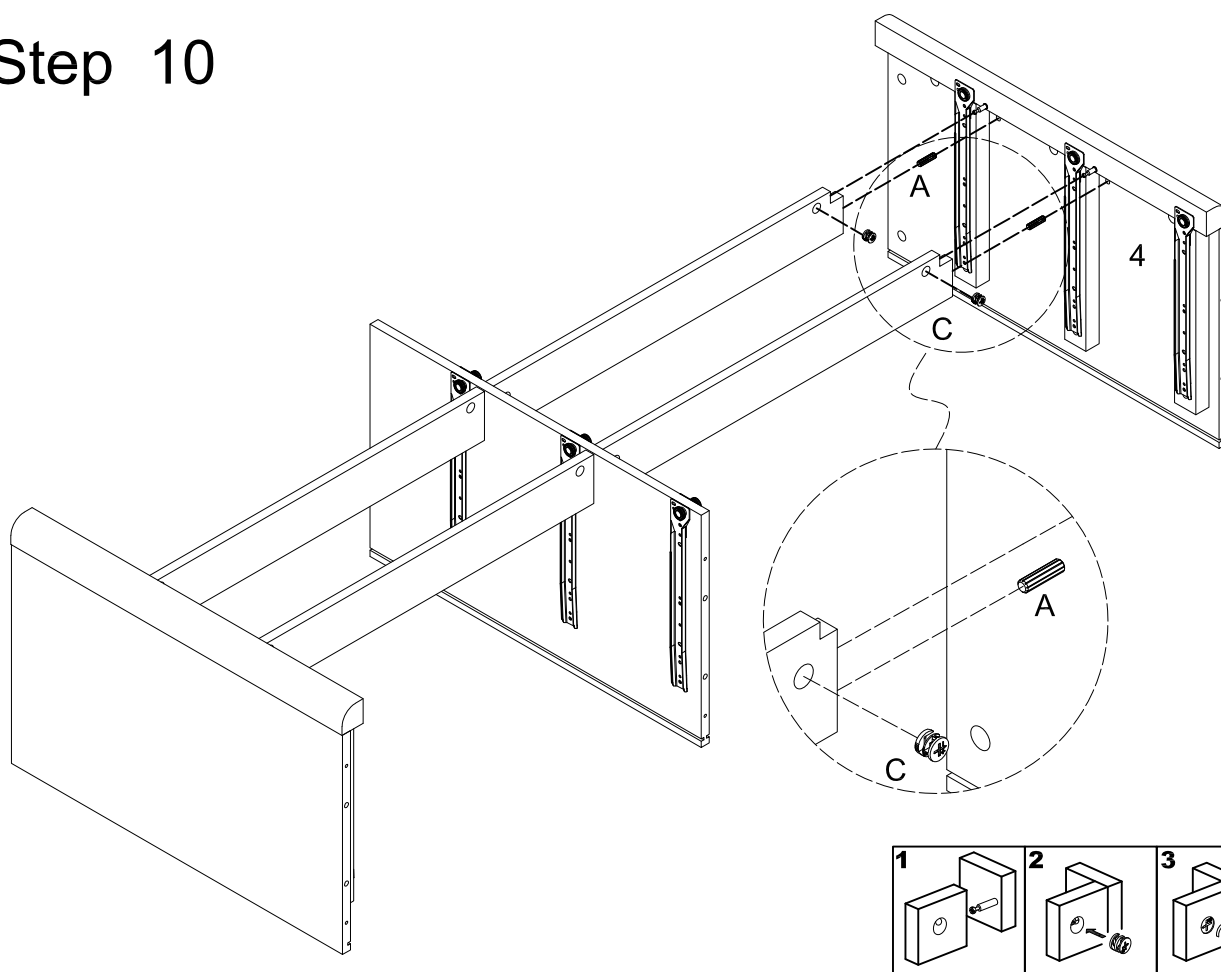


Step 11

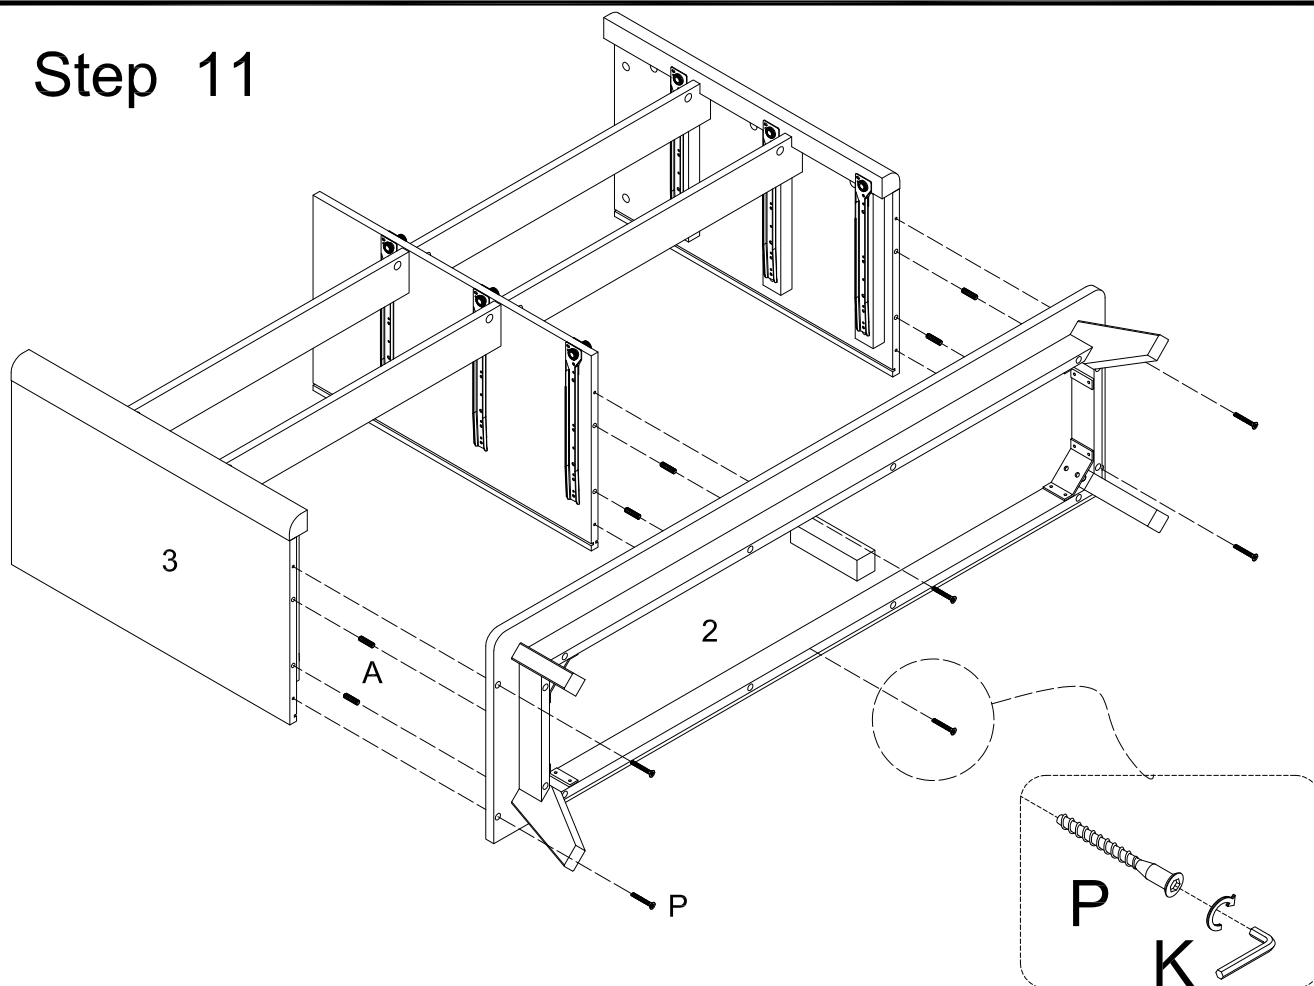



Step 12

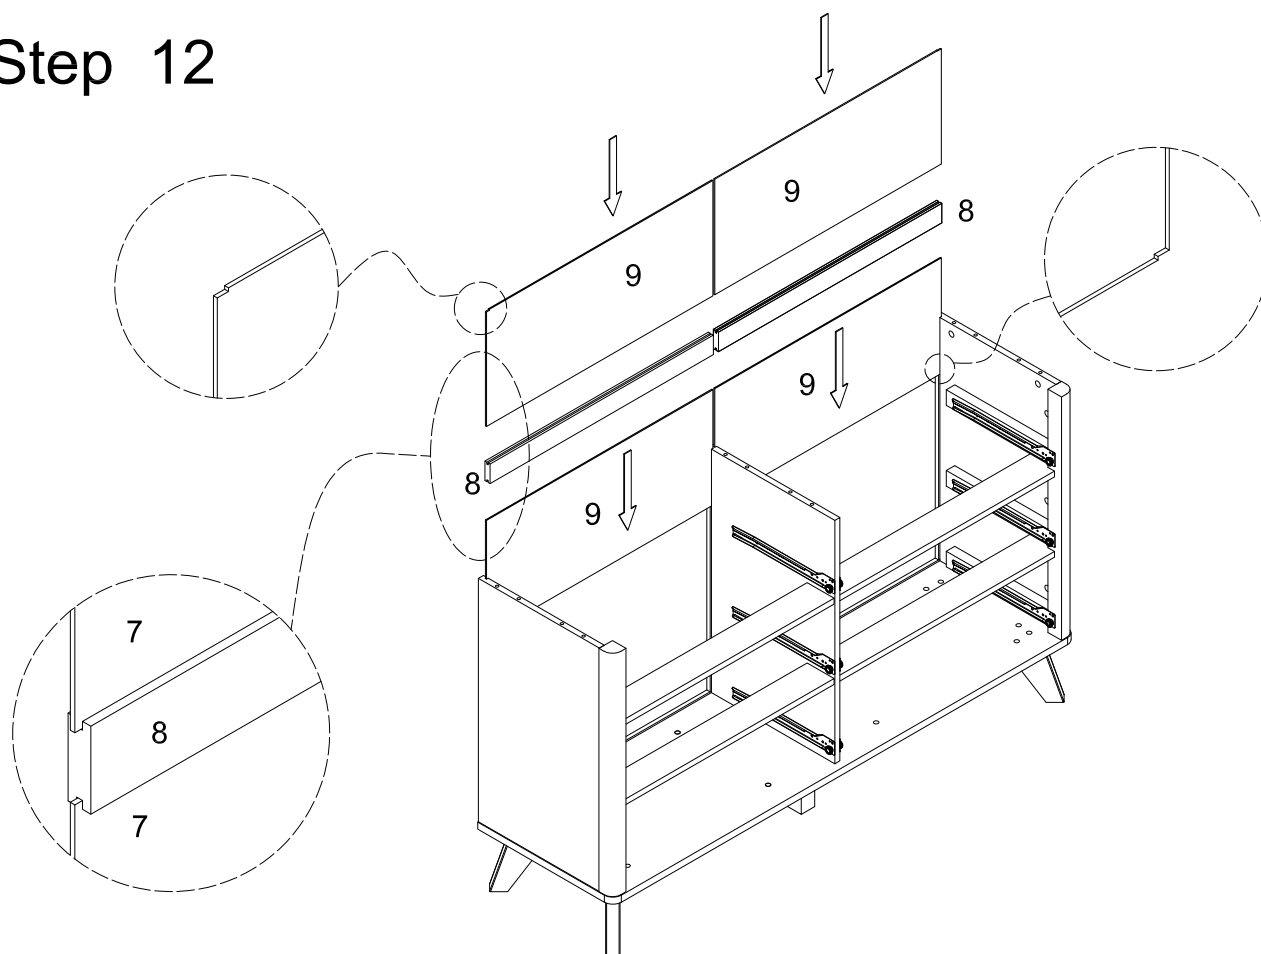


Step 13

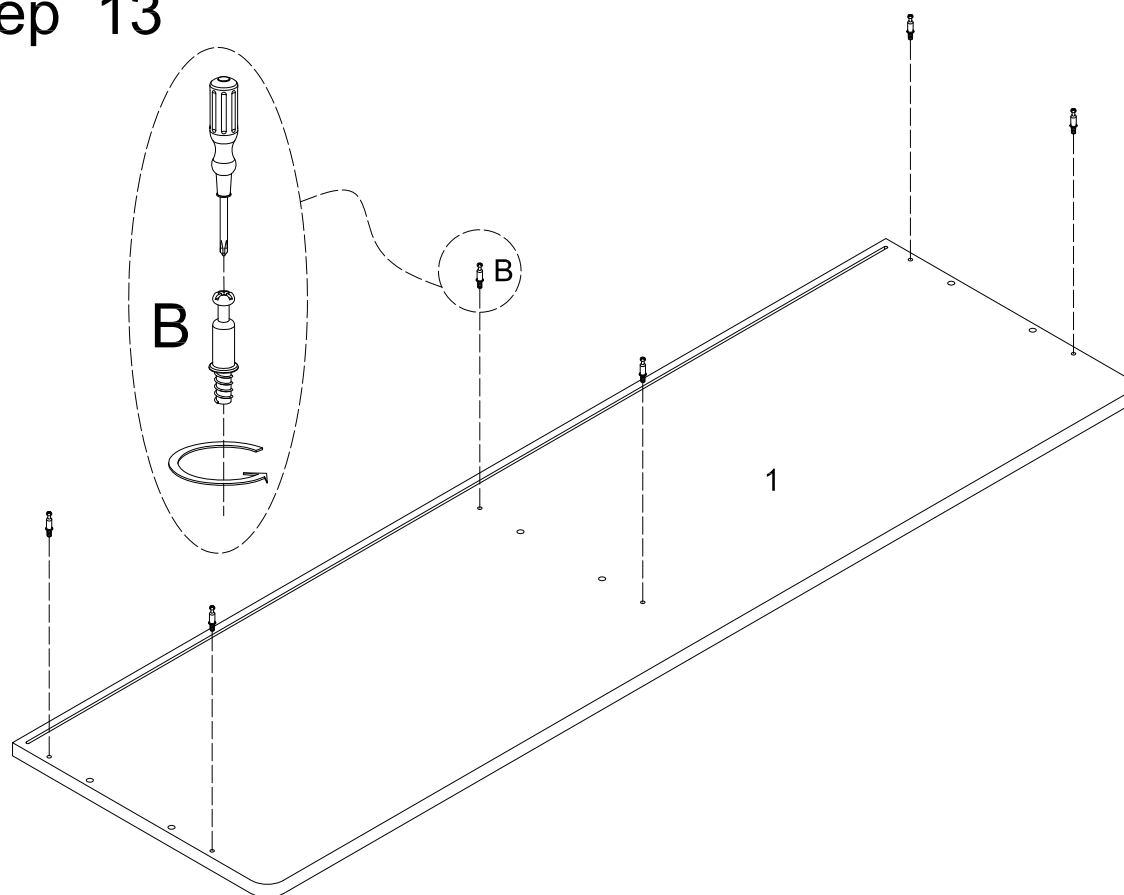


Step 14

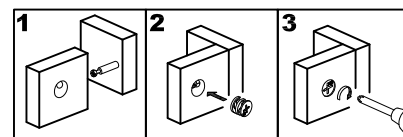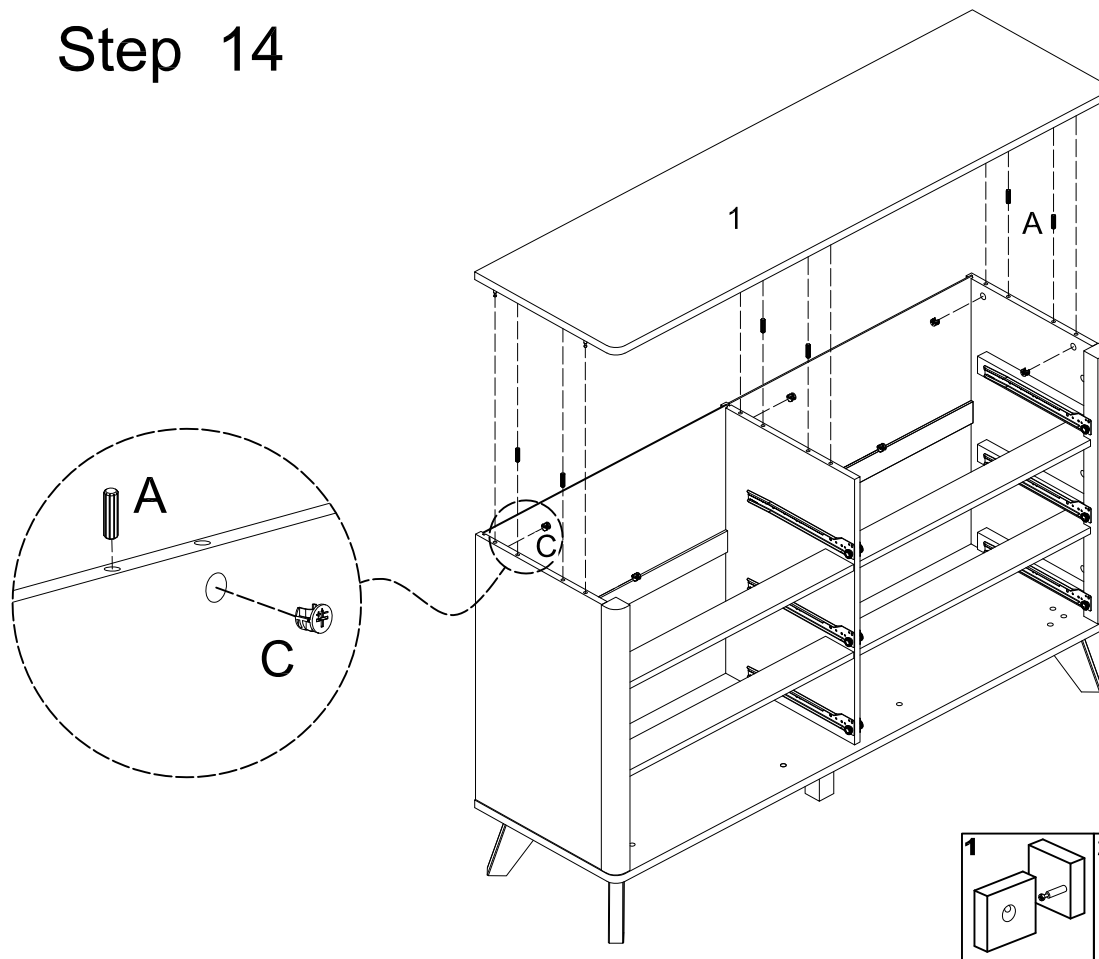

Step 15

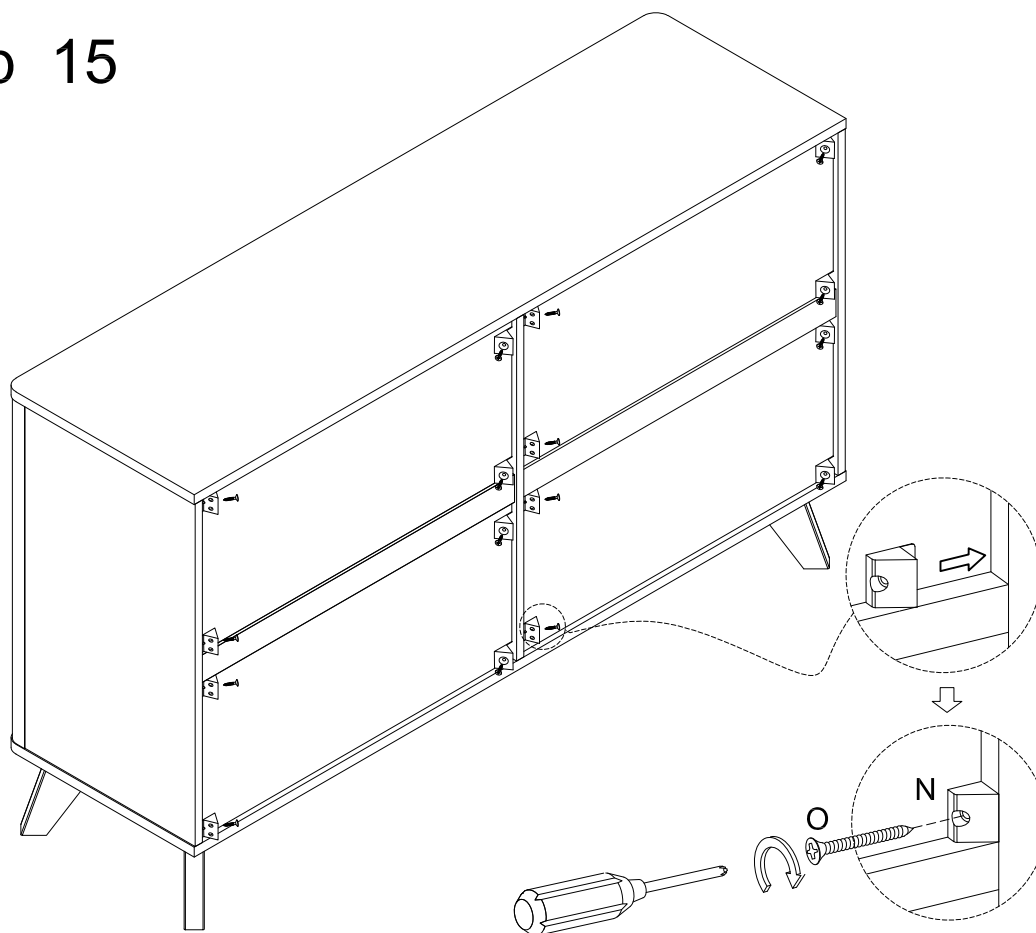


Step 16

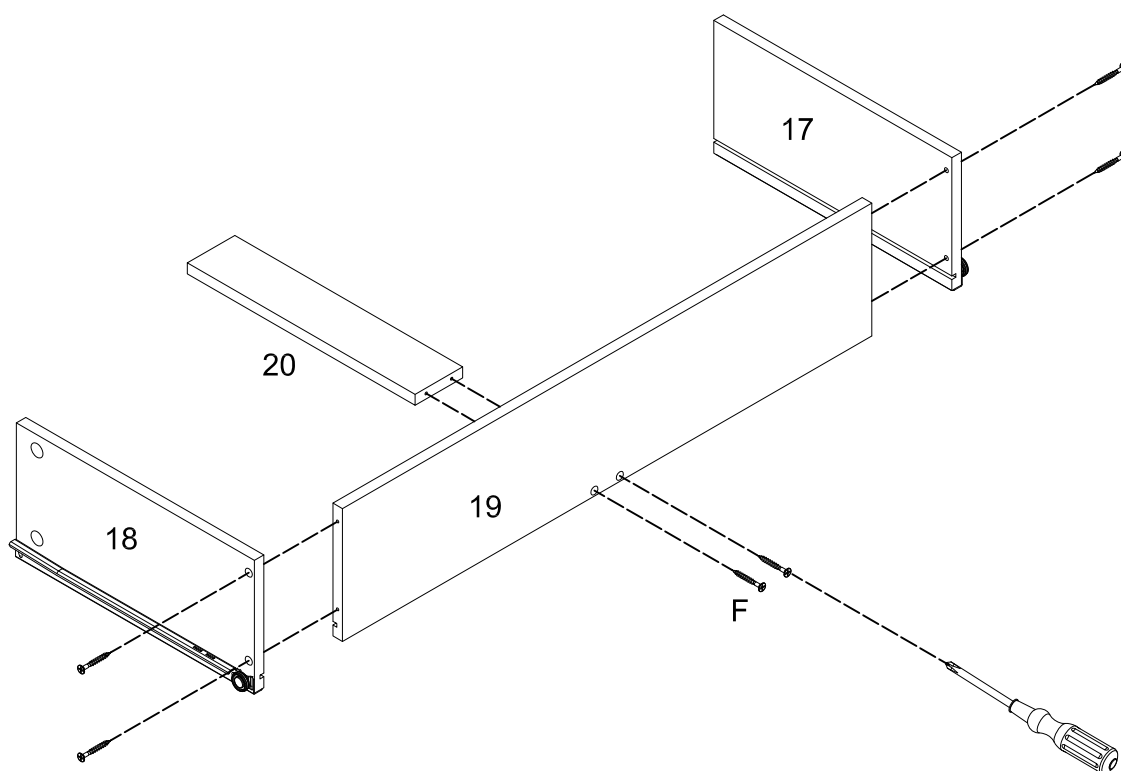


x6

Step 17

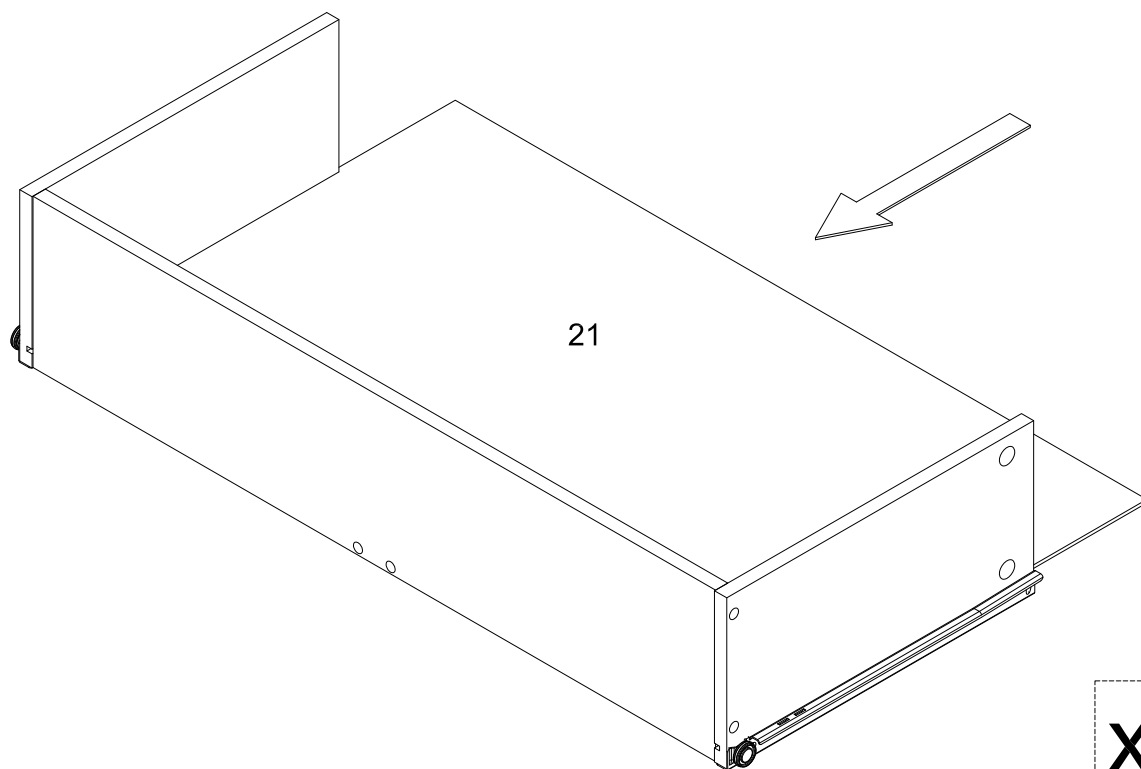


x6

Step 18

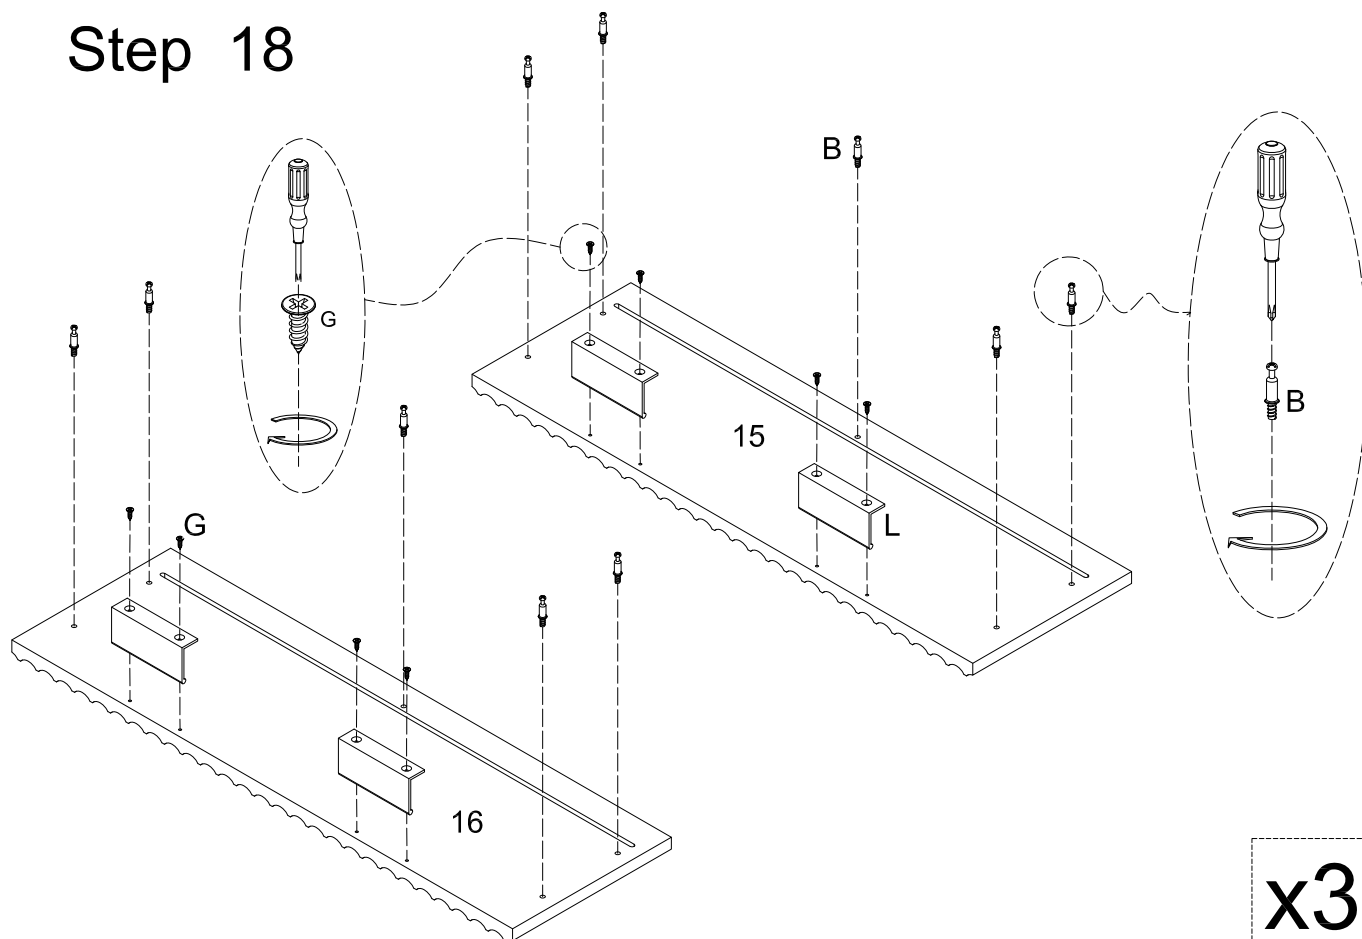


x3

Step 19

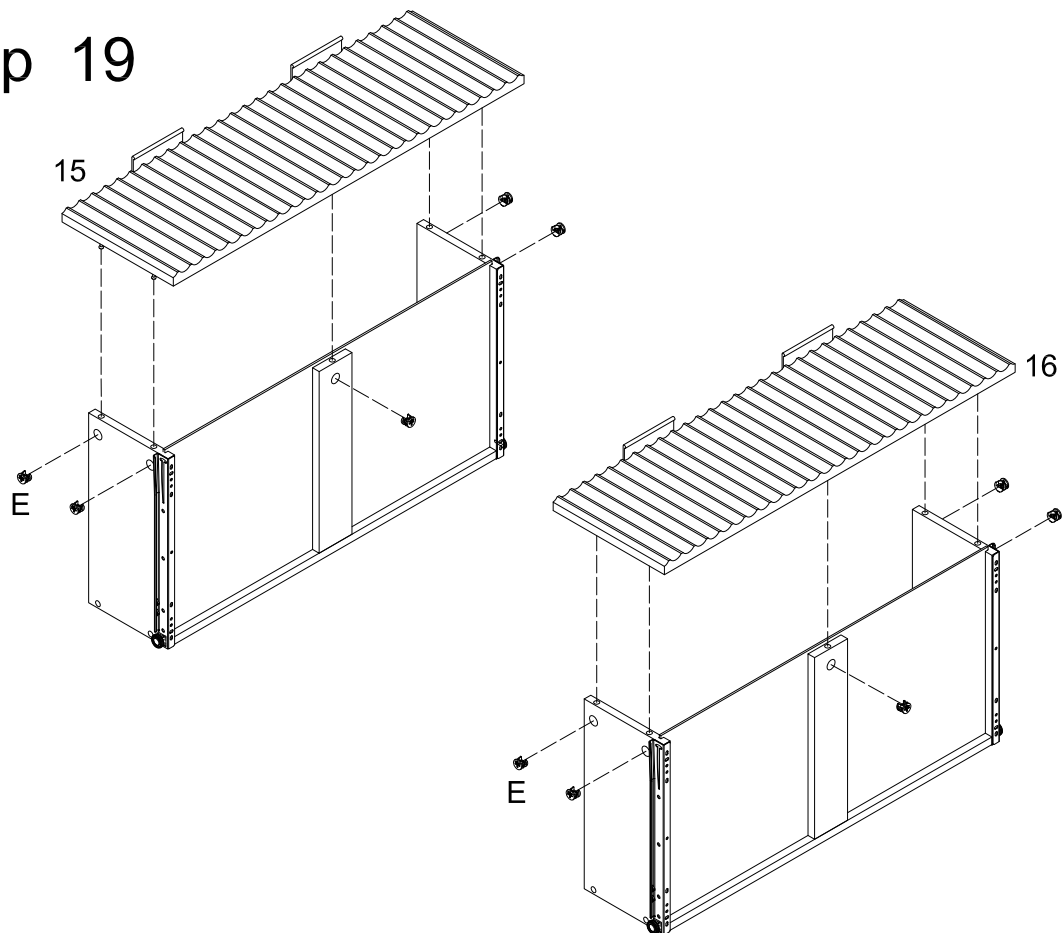


x3

Step 20

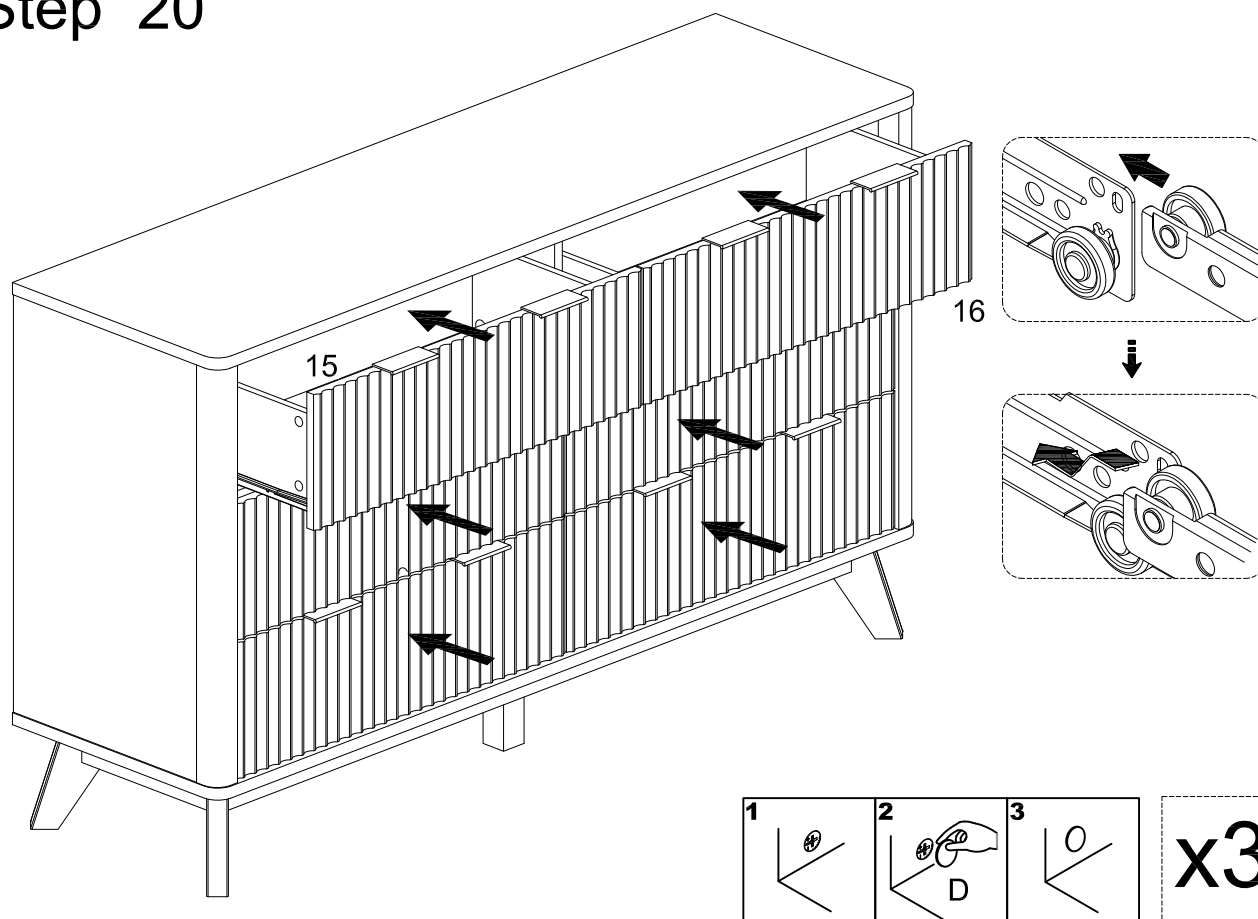


x3


Step 21

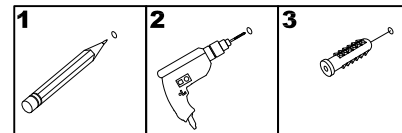

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall. Wall anchor and hardware are included with this product. Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

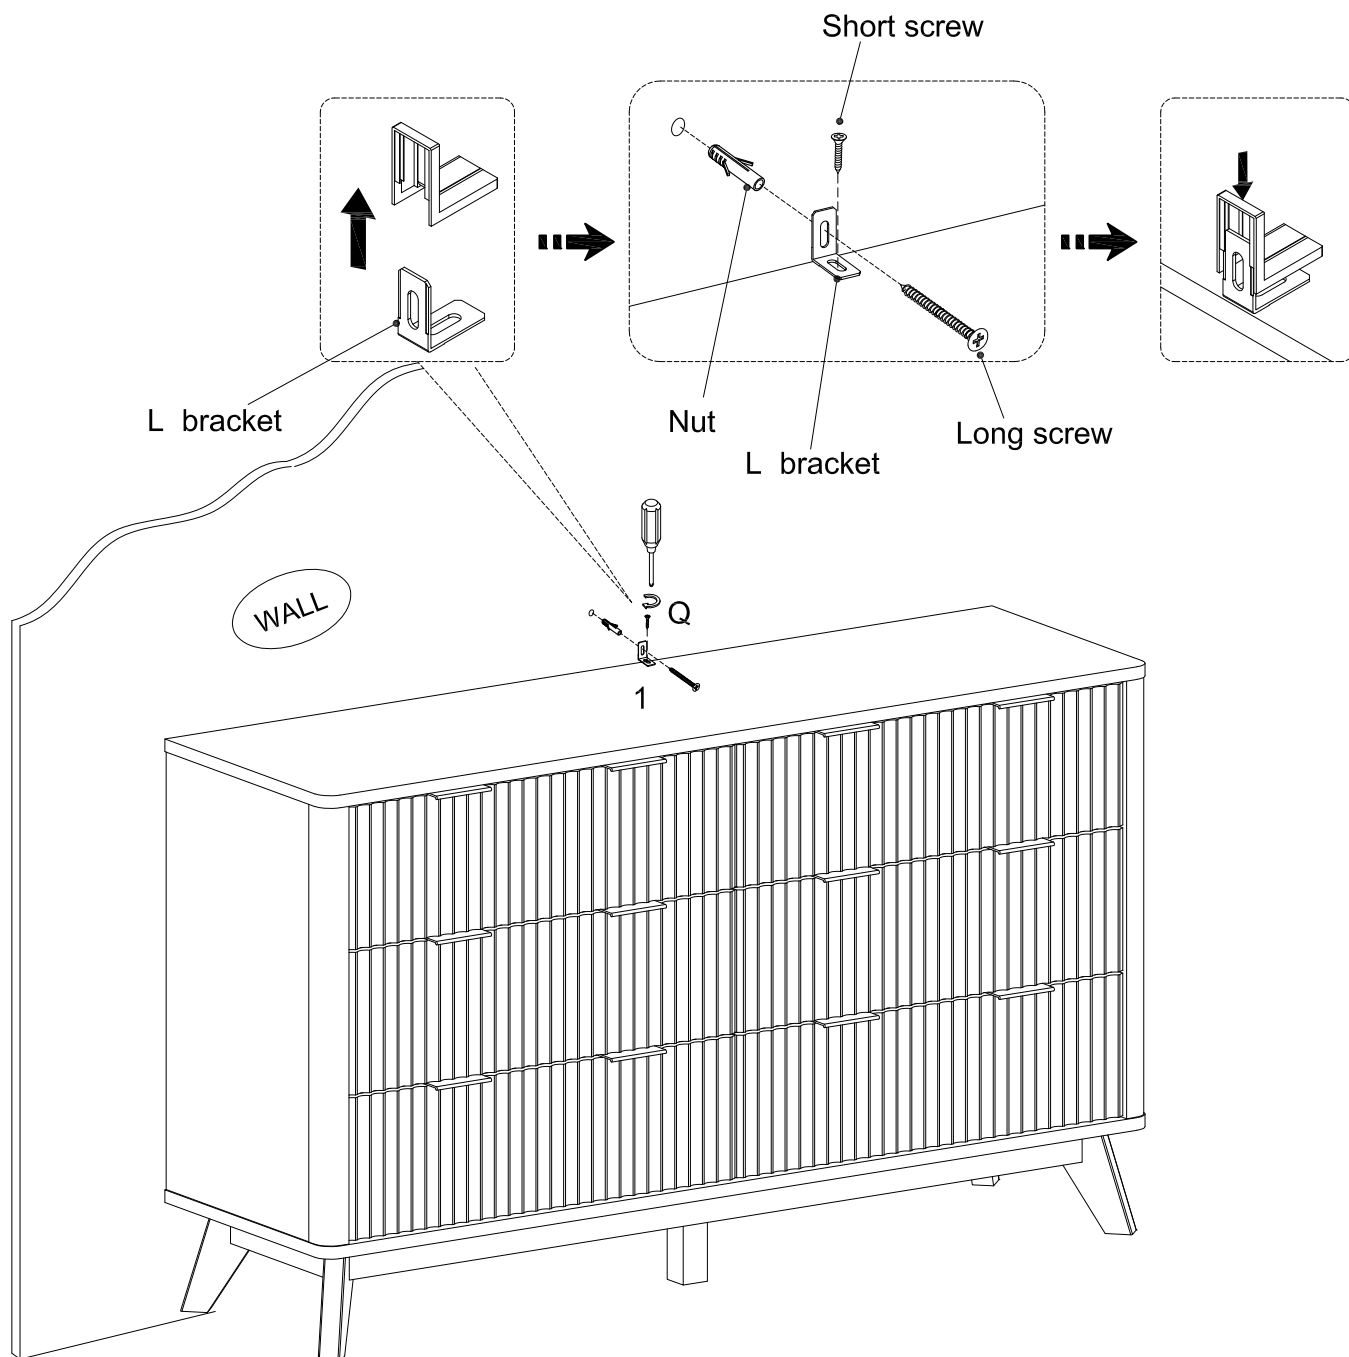

Step 22

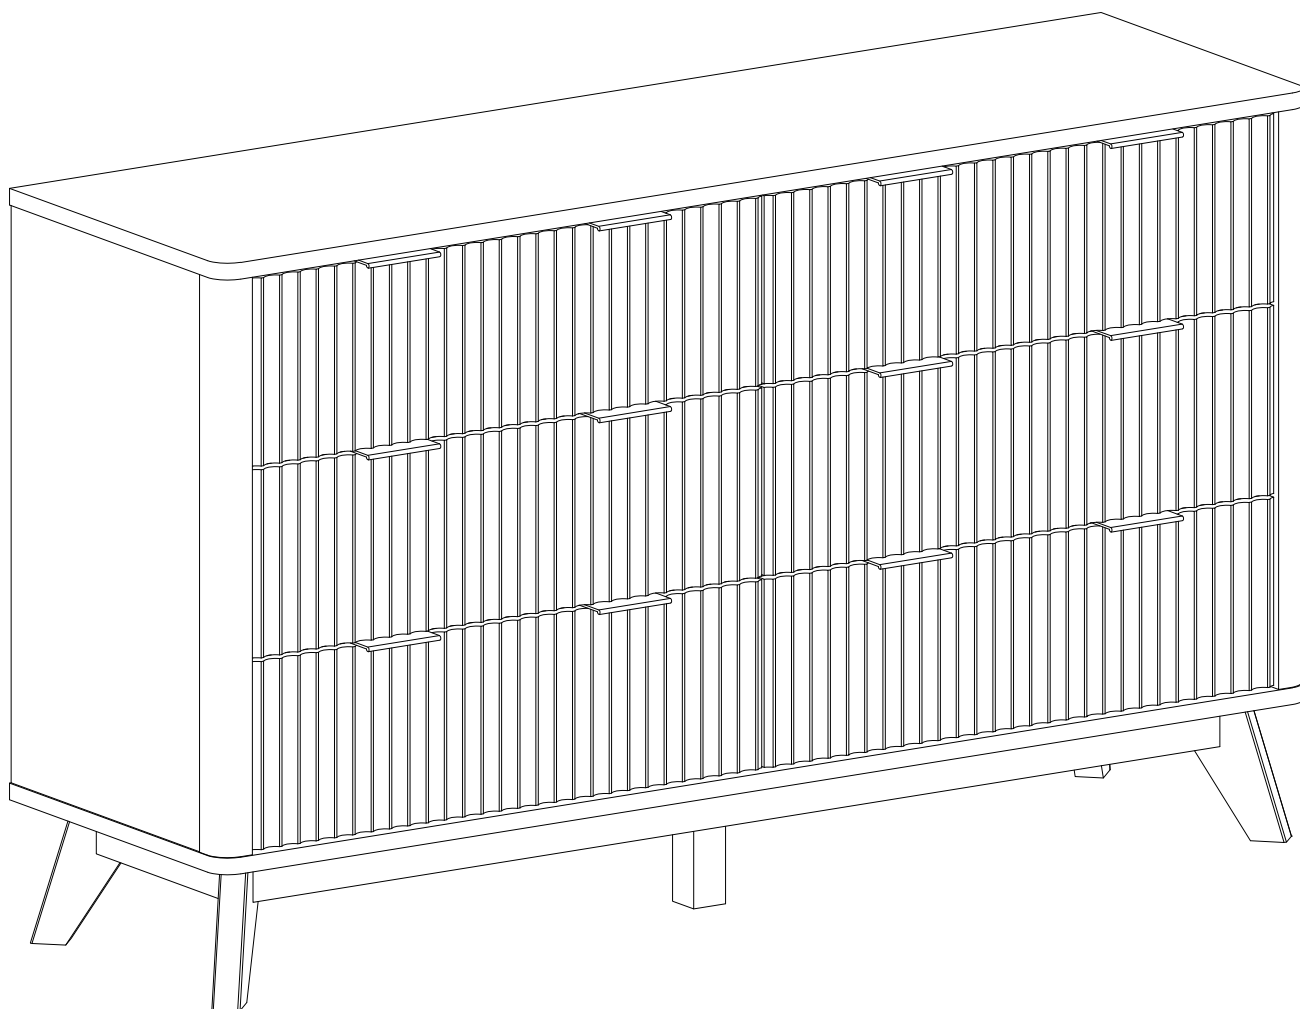

Final Assembly